

# **Panel PC 800 with GM45 CPU Board**

## **User's Manual**

Version: **1.10 (August 2013)**  
Model no.: **MAPPC800A-ENG**

All information contained in this manual is current as of its creation/publication. B&R reserves the right to change the contents of this manual without notice. The information contained herein is believed to be accurate as of the date of publication; however, Bernecker + Rainer Industrie-Elektronik Ges.m.b.H. makes no warranty, expressed or implied, with regard to the products or documentation contained within this manual. In addition, Bernecker + Rainer Industrie-Elektronik Ges.m.b.H. shall not be liable for any incidental or consequential damages in connection with or arising from the furnishing, performance or use of the product(s) in this documentation. Software names, hardware names and trademarks are registered by their respective companies.



## **Chapter 1: General information**

## **Chapter 2: Technical data**

## **Chapter 3: Installation**

## **Chapter 4: Software**

## **Chapter 5: Standards and certifications**

## **Chapter 6: Accessories**

## **Chapter 7: Maintenance and service**

## **Appendix A**

<b>Chapter 1 General information.....</b>	<b>13</b>
1 Manual history.....	13
2 Safety guidelines.....	14
2.1 Intended use.....	14
2.2 Protection against electrostatic discharge.....	14
2.2.1 Packaging.....	14
2.2.2 Guidelines for proper ESD handling.....	14
2.3 Policies and procedures.....	14
2.4 Transport and storage.....	15
2.5 Installation.....	15
2.6 Operation.....	15
2.6.1 Protection against touching electrical parts.....	15
2.6.2 Environmental conditions - Dust, humidity, aggressive gases.....	15
2.6.3 Viruses and dangerous programs.....	15
2.7 Environmentally friendly disposal.....	16
2.7.1 Separation of materials.....	16
3 Organization of safety notices.....	17
4 Guidelines.....	17
5 Overview.....	18
<b>Chapter 2 Technical data.....</b>	<b>22</b>
1 Introduction.....	22
1.1 Features.....	23
1.2 System components / Configuration.....	24
1.2.1 Configuration - Base system.....	24
1.2.2 Configuration - Optional components.....	25
2 Complete system.....	26
2.1 Temperature specifications.....	26
2.1.1 Maximum ambient temperature.....	27
2.1.2 Minimum ambient temperatures.....	28
2.1.3 Temperature monitoring.....	28
2.1.4 Temperature sensor locations.....	29
2.2 Humidity specifications.....	30
2.3 Power management.....	31
2.3.1 Supply voltage block diagram.....	31
2.3.2 Power calculation with 5PC820.1505-00.....	32
2.3.3 Power calculation with 5PC820.1906-00.....	33
2.4 Block diagrams.....	34
2.4.1 Bus unit 5AC803.BX01-00.....	34
2.4.2 Bus unit 5AC803.BX01-01.....	35
2.4.3 Bus unit 5AC803.BX02-00.....	36
2.4.4 Bus unit 5AC803.BX02-01.....	37
2.5 Serial number sticker.....	38
2.6 Device interfaces.....	39
2.6.1 +24 VDC supply voltage.....	39
2.6.2 Monitor/Panel interface - SDL (Smart Display Link / DVI).....	40
2.6.3 COM1 serial interface.....	42
2.6.4 Ethernet 1 (ETH1).....	43
2.6.5 Ethernet 2 (ETH2).....	44
2.6.6 USB interfaces (USB1, 2, 3, 4, 5).....	45
2.6.7 CompactFlash slot 1.....	46
2.6.8 CompactFlash Slot 2.....	46
2.6.9 MIC, Line IN, Line OUT.....	47
2.6.10 Add-on UPS slot.....	47
2.6.11 Power button.....	48
2.6.12 Reset button.....	48
2.6.13 LED status indicators.....	49

2.6.14 CMOS profile switch.....	49
2.6.15 Battery.....	50
2.6.16 Slide-in compact slot.....	51
2.6.17 PCIe slot (Card slot).....	51
3 Individual components.....	52
3.1 System units.....	52
3.1.1 5PC820.1505-00.....	52
3.1.2 5PC820.1906-00.....	58
3.2 GM45 CPU boards.....	64
3.2.1 General information.....	64
3.2.2 Order data.....	64
3.2.3 Technical data.....	64
3.3 Heat sinks.....	66
3.3.1 5AC803.HS00-01.....	66
3.4 Main memory.....	67
3.4.1 5MMDDR.xxxx-02.....	67
3.5 Expansions.....	68
3.5.1 General information.....	68
3.5.2 Order data.....	68
3.5.3 Inserts.....	68
3.5.4 Technical data.....	68
3.5.5 5AC803.SX01-00 - Dimensions.....	69
3.5.6 5AC803.SX02-00 - Dimensions.....	70
3.5.7 Slot for bus units.....	70
3.5.8 Slide-in slot 1.....	72
3.6 Bus units.....	73
3.6.1 General information.....	73
3.6.2 Order data.....	73
3.6.3 Technical data.....	74
3.7 Adapters.....	75
3.7.1 5AC803.BC01-00.....	75
3.7.2 5AC803.BC02-00.....	75
3.8 PCIe plug-in cards.....	76
3.8.1 General information.....	76
3.8.2 Dimensions.....	76
3.8.3 5ACPCC.ETH0-00.....	77
3.8.4 5ACPCC.MPL0-00.....	79
3.9 Drives.....	83
3.9.1 5AC801.HDDI-00.....	83
3.9.2 5AC801.HDDI-02.....	85
3.9.3 5AC801.HDDI-03.....	87
3.9.4 5AC801.HDDI-04.....	89
3.9.5 5AC801.SSDI-00.....	91
3.9.6 5AC801.SSDI-01.....	94
3.9.7 5AC801.SSDI-02.....	96
3.9.8 5AC801.SSDI-03.....	98
3.9.9 5AC801.SSDI-04.....	100
3.9.10 5MMSSD.0060-00.....	102
3.9.11 5MMSSD.0060-01.....	104
3.9.12 5MMSSD.0128-01.....	106
3.9.13 5MMSSD.0180-00.....	108
3.9.14 5AC801.ADAS-00.....	110
3.9.15 5AC801.HDDS-00.....	111
3.9.16 5AC801.DVDS-00.....	113
3.9.17 5AC801.DVRS-00.....	115
3.9.18 5ACPCI.RAIC-03.....	118
3.9.19 5ACPCI.RAIC-04.....	121



3.9.20 5ACPCI.RAIC-05.....	123
3.9.21 5ACPCI.RAIC-06.....	126
3.9.22 5MMHDD.0250-00.....	129
3.9.23 5MMHDD.0500-00.....	131
3.10 Fan kit.....	133
3.10.1 5AC803.FA01-00.....	133
3.10.2 5AC803.FA02-00.....	134
3.10.3 5AC803.FA03-00.....	136
<b>Chapter 3 Installation.....</b>	<b>137</b>
1 Installation.....	137
1.1 Important installation information.....	137
1.2 Installation with clamping blocks.....	137
1.3 Mounting orientation.....	138
1.3.1 Mounting orientation 0° and +/- 45°.....	138
1.3.2 Mounting orientation with 5AC801.DVRS-00.....	139
1.3.3 Mounting orientation with 5AC801.DVDS-00.....	140
1.4 Spacing for air circulation.....	141
2 Cable connections.....	142
3 Grounding concept.....	143
4 General instructions for performing temperature testing.....	144
4.1 Procedure.....	144
4.2 Evaluating temperatures in Windows operating systems.....	144
4.2.1 Evaluating with the B&R Control Center.....	144
4.2.2 Evaluating with the BurnInTest tool from Passmark.....	145
4.3 Evaluating temperatures in operating systems other than Windows.....	147
4.4 Evaluating the measurement results.....	147
5 Connection examples.....	148
5.1 Selecting display units.....	148
5.2 One Automation Panel 900 system via onboard DVI.....	149
5.2.1 Base system requirements.....	149
5.2.2 Link modules.....	149
5.2.3 Cables.....	149
5.2.4 Possible Automation Panel devices, resolutions and segment lengths.....	150
5.3 One Automation Panel 900 system via onboard SDL.....	151
5.3.1 Base system requirements.....	151
5.3.2 Link modules.....	151
5.3.3 Cables.....	151
5.3.4 Settings in BIOS.....	152
5.4 One Automation Panel 800 system via onboard SDL.....	153
5.4.1 Base system requirements.....	153
5.4.2 Cables.....	153
5.4.3 Settings in BIOS.....	154
5.5 One AP900 and one AP800 via onboard SDL.....	155
5.5.1 Base system requirements.....	155
5.5.2 Link modules.....	155
5.5.3 Cables.....	155
5.5.4 Settings in BIOS.....	155
5.6 Four Automation Panel 900 systems via onboard SDL.....	156
5.6.1 Base system requirements.....	156
5.6.2 Link modules.....	156
5.6.3 Cables.....	156
5.6.4 Settings in BIOS.....	157
6 Touch screen calibration.....	158
6.1 Windows XP Professional.....	158
6.2 Windows XP Embedded.....	158
6.3 Windows Embedded Standard 2009.....	158

6.4 Windows 7.....	158
6.5 Windows Embedded Standard 7.....	158
6.6 Windows CE.....	158
6.7 Automation Runtime / Visual Components.....	158
7 Connecting peripheral USB devices.....	159
7.1 Locally on the PPC800.....	159
7.2 Remote connection to Automation Panel 900 via DVI.....	160
7.3 Remote connection to Automation Panel 800 / 900 via SDL.....	161
8 Configuring a SATA RAID set.....	162
8.1 Create RAID set.....	163
8.2 Create RAID set - Striped.....	163
8.3 Create RAID set - Mirrored.....	164
8.4 Delete RAID set.....	164
8.5 Rebuild mirrored set.....	165
8.6 Resolve conflicts.....	165
8.7 Low level format.....	166
9 Tips for extending the service life of the display.....	167
9.1 Backlight.....	167
9.1.1 How can the service life of the backlight be extended?.....	167
9.2 Screen burn-in.....	167
9.2.1 What causes screen burn-in?.....	167
9.2.2 How can screen burn-in be avoided?.....	167
10 Pixel errors.....	167
11 Known problems/issues.....	168

## **Chapter 4 Software..... 169**

1 BIOS options.....	169
1.1 General information.....	169
1.2 BIOS Setup and boot procedure.....	169
1.2.1 BIOS Setup keys.....	171
1.3 Main.....	172
1.4 Advanced.....	173
1.4.1 ACPI configuration.....	174
1.4.2 PCI configuration.....	175
1.4.3 PCI Express configuration.....	178
1.4.4 Graphics configuration.....	180
1.4.5 CPU configuration.....	182
1.4.6 Chipset settings.....	183
1.4.7 I/O interface configuration.....	184
1.4.8 Clock configuration.....	185
1.4.9 IDE configuration.....	185
1.4.10 USB configuration.....	191
1.4.11 Keyboard/Mouse configuration.....	192
1.4.12 CPU board monitor.....	193
1.4.13 Baseboard/Panel features.....	194
1.5 Boot.....	198
1.6 Security.....	199
1.6.1 Hard disk security user password.....	200
1.6.2 Hard disk security master password.....	201
1.7 Power.....	201
1.8 Exit.....	203
1.9 BIOS default settings.....	204
1.9.1 Main.....	204
1.9.2 Advanced.....	204
1.9.3 Boot.....	208
1.9.4 Security.....	208
1.9.5 Power.....	208

1.10 BIOS error signals (beep codes).....	210
1.11 Allocation of resources.....	211
1.11.1 RAM address assignment.....	211
1.11.2 I/O address assignments.....	211
1.11.3 Interrupt assignments in PIC mode.....	212
1.11.4 Interrupt assignments in APIC mode.....	213
2 Upgrade information.....	214
2.1 BIOS upgrade.....	214
2.1.1 Important information.....	214
2.1.2 Procedure with MS-DOS.....	214
2.2 Firmware upgrade.....	216
2.2.1 Procedure.....	216
2.2.2 Possible upgrade problems and software dependencies (for V1.02).....	217
2.3 Creating an MS-DOS boot diskette in Windows XP.....	218
2.4 Creating a bootable USB flash drive for B&R upgrade files.....	220
2.4.1 Requirements.....	220
2.4.2 Procedure.....	220
2.4.3 How to access MS-DOS.....	220
2.5 Creating a bootable CompactFlash card for B&R upgrade files.....	221
2.5.1 Requirements.....	221
2.5.2 Procedure.....	221
2.5.3 How to access MS-DOS.....	221
3 Microsoft DOS.....	222
3.1 Order data.....	222
3.2 Known problems.....	222
4 Windows XP Professional.....	223
4.1 Order data.....	223
4.2 Overview.....	223
4.3 Installation.....	223
4.3.1 Installation on a PCI SATA RAID controller - 5ACPCI.RAIC-03, 5ACPCI.RAIC-05, 5ACPCI.RAIC-06.....	224
4.4 Drivers.....	224
5 Windows 7.....	225
5.1 General information.....	225
5.2 Order data.....	225
5.3 Overview.....	225
5.4 Installation.....	226
5.4.1 Installation on a PCI SATA RAID controller - 5ACPCI.RAIC-03, 5ACPCI.RAIC-05, 5ACPCI.RAIC-06.....	227
5.5 Special considerations, limitations.....	227
5.6 Drivers.....	227
6 Windows Embedded Standard 2009.....	228
6.1 General information.....	228
6.2 Order data.....	228
6.3 Overview.....	228
6.4 Features with WES2009 (Windows Embedded Standard 2009).....	228
6.5 Installation.....	229
6.6 Drivers.....	229
6.6.1 Touch screen driver.....	229
7 Windows Embedded Standard 7.....	230
7.1 General information.....	230
7.2 Order data.....	230
7.3 Overview.....	231
7.4 Features with WES7 (Windows Embedded Standard 7).....	231
7.5 Installation.....	231
7.6 Drivers.....	232
7.6.1 Touch screen driver.....	232
8 Automation Runtime.....	233

8.1 General information.....	233
8.2 Order data.....	233
8.3 Automation Runtime Windows (ARwin).....	233
8.4 Automation Runtime Embedded (ARemb).....	233
9 B&R Automation Device Interface (ADI) - Control Center.....	234
9.1 Functions.....	234
9.2 Installation.....	235
9.3 SDL Equalizer settings.....	236
9.4 UPS configuration.....	237
9.4.1 Installing the UPS service for the B&R add-on UPS.....	237
9.4.2 Displaying UPS default values.....	237
9.4.3 Changing UPS battery settings.....	238
9.4.4 Updating UPS battery settings.....	239
9.4.5 Saving UPS battery settings.....	240
9.4.6 Configuring UPS system settings.....	240
9.4.7 Changing additional UPS settings.....	241
9.4.8 Procedure following power failure.....	243
10 B&R Automation Device Interface (ADI) Development Kit.....	244
11 B&R Automation Device Interface (ADI) .NET SDK.....	246
12 B&R Key Editor.....	248
<b>Chapter 5 Standards and certifications.....</b>	<b>250</b>
1 Standards and guidelines.....	250
1.1 CE mark.....	250
1.2 EMC directive.....	250
1.3 Low voltage directive.....	250
2 Certifications.....	251
2.1 UL certification.....	251
<b>Chapter 6 Accessories.....</b>	<b>252</b>
1 Replacement CMOS batteries.....	252
1.1 0AC201.91 / 4A0006.00-000.....	252
1.1.1 General information.....	252
1.1.2 Order data.....	252
1.1.3 Technical data.....	252
2 Power connectors.....	254
2.1 0TB103.9x.....	254
2.1.1 General information.....	254
2.1.2 Order data.....	254
2.1.3 Technical data.....	254
3 DVI/Monitor adapter.....	255
3.1 5AC900.1000-00.....	255
3.2 General information.....	255
3.3 Order data.....	255
4 USB interface cover.....	256
4.1 5AC900.1201-00.....	256
4.1.1 General information.....	256
4.1.2 Order data.....	256
4.2 5AC900.1201-01.....	256
4.2.1 General information.....	256
4.2.2 Order data.....	256
5 Clamping blocks.....	257
5.1 5AC900.BLOC-00.....	257
5.1.1 General information.....	257
5.1.2 Order data.....	257
6 Uninterruptible power supply.....	258
6.1 Features.....	258

6.2 Requirements.....	258
6.3 5AC600.UPSI-00.....	259
6.3.1 General information.....	259
6.3.2 Order data.....	259
6.3.3 Technical data.....	259
6.3.4 Installation.....	259
6.4 5AC600.UPSB-00.....	261
6.4.1 General information.....	261
6.4.2 Order data.....	261
6.4.3 Technical data.....	261
6.4.4 Temperature/Service life diagram up to 20% battery capacity.....	262
6.4.5 Deep discharge cycles.....	262
6.4.6 Dimensions.....	263
6.4.7 Drilling template.....	263
6.4.8 Installation instructions.....	263
6.5 5CAUPS.00xx-00.....	264
6.5.1 General information.....	264
6.5.2 Order data.....	264
6.5.3 Technical data.....	264
6.6 5AC600.UPSF-00.....	265
6.6.1 General information.....	265
6.6.2 Order data.....	265
6.7 5AC600.UPSF-01.....	265
6.7.1 General information.....	265
6.7.2 Order data.....	265
7 External UPS.....	266
7.1 General information.....	266
7.2 Order data.....	266
8 PCI plug-in cards.....	268
8.1 5ACPCI.ETH1-01.....	268
8.1.1 General information.....	268
8.1.2 Order data.....	268
8.1.3 Technical data.....	268
8.1.4 Driver support.....	269
8.1.5 Dimensions.....	270
8.2 5ACPCI.ETH3-01.....	271
8.2.1 General information.....	271
8.2.2 Order data.....	271
8.2.3 Technical data.....	271
8.2.4 Driver support.....	272
8.2.5 Dimensions.....	273
9 CompactFlash cards.....	274
9.1 General information.....	274
9.2 General information.....	274
9.2.1 Flash technology.....	274
9.2.2 Wear leveling.....	274
9.2.3 ECC error correction.....	274
9.2.4 S.M.A.R.T. support.....	274
9.2.5 Maximum reliability.....	275
9.3 5CFCRD.xxxx-06.....	276
9.3.1 General information.....	276
9.3.2 Order data.....	276
9.3.3 Technical data.....	276
9.3.4 Temperature humidity diagram.....	278
9.3.5 Dimensions.....	278
9.3.6 Benchmark.....	279
9.4 5CFCRD.xxxx-04.....	280

9.4.1 General information.....	280
9.4.2 Order data.....	280
9.4.3 Technical data.....	280
9.4.4 Temperature humidity diagram.....	282
9.4.5 Dimensions.....	282
9.4.6 Benchmark.....	283
9.5 5CFCRD.xxxx-03.....	284
9.5.1 General information.....	284
9.5.2 Order data.....	284
9.5.3 Technical data.....	284
9.5.4 Temperature humidity diagram.....	286
9.5.5 Dimensions.....	286
9.6 Known problems/issues.....	287
10 USB flash drives.....	288
10.1 5MMUSB.2048-00.....	288
10.1.1 General information.....	288
10.1.2 Order data.....	288
10.1.3 Technical data.....	288
10.1.4 Temperature humidity diagram.....	289
10.2 5MMUSB.xxxx-01.....	290
10.2.1 General information.....	290
10.2.2 Order data.....	290
10.2.3 Technical data.....	290
10.2.4 Temperature humidity diagram.....	291
11 USB media drive.....	292
11.1 5MD900.USB2-02.....	292
11.1.1 General information.....	292
11.1.2 Order data.....	292
11.1.3 Interfaces.....	292
11.1.4 Technical data.....	292
11.1.5 Dimensions.....	294
11.1.6 Dimensions with front cover.....	294
11.1.7 Cutout installation.....	295
11.1.8 Contents of delivery.....	295
11.1.9 Installation.....	295
11.2 5A5003.03.....	296
11.2.1 General information.....	296
11.2.2 Order data.....	296
11.2.3 Technical data.....	296
11.2.4 Dimensions.....	296
11.2.5 Contents of delivery.....	296
11.2.6 Installation.....	297
12 HMI Drivers & Utilities DVD.....	298
12.1 5SWHMI.0000-00.....	298
12.1.1 General information.....	298
12.1.2 Order data.....	298
12.1.3 Contents (V2.10).....	298
13 Cables.....	301
13.1 DVI cables.....	301
13.1.1 5CADVI.0xxx-00.....	301
13.2 SDL cables.....	304
13.2.1 5CASDL.0xxx-00.....	304
13.3 SDL cables with 45° male connector.....	307
13.3.1 5CASDL.0xxx-01.....	307
13.4 SDL flex cables.....	310
13.4.1 5CASDL.0xxx-03.....	310
13.5 SDL flex cables with extender.....	313

13.5.1 5CASDL.0xx0-13.....	313
13.6 USB cables.....	317
13.6.1 5CAUSB.00xx-00.....	317
13.7 RS232 cables.....	318
13.7.1 9A0014.xx.....	318
13.8 Internal supply cable.....	320
13.8.1 5CAMSC.0001-00.....	320
<b>Chapter 7 Maintenance and service.....</b>	<b>321</b>
1 Changing the battery.....	321
1.1 Evaluating the battery status.....	321
1.2 Procedure.....	321
2 Cleaning.....	323
3 Replacing a CompactFlash card.....	324
4 Installing and replacing slide-in compact drives.....	325
4.1 Procedure.....	325
5 Installing and replacing slide-in drives.....	326
5.1 Procedure.....	326
6 Installing the slide-in compact adapter.....	327
6.1 Procedure.....	327
7 Installing and replacing fan kits.....	329
7.1 Procedure.....	329
8 Installing the UPS module.....	331
8.1 Installation guidelines.....	331
9 Installing the UPS fuse kit on the battery unit.....	333
9.1 Procedure.....	333
10 Installing and replacing bus units.....	335
10.1 Procedure.....	335
11 Installing and replacing adapters.....	336
11.1 Procedure for the 5AC803.BC01-00 adapter.....	336
11.2 Procedure for the 5AC803.BC02-00 adapter.....	337
12 Installing and replacing PCIe plug-in cards.....	338
12.1 Procedure.....	338
13 Installing the side cover.....	339
13.1 PPC800 without expansion.....	339
13.2 PPC800 with an expansion.....	339
14 Replacing a PCI SATA RAID hard disk in a RAID 1 set.....	340
14.1 Procedure.....	340
<b>Appendix A .....</b>	<b>342</b>
1 Maintenance Controller Extended (MTCX).....	342
1.1 Temperature monitoring - Fan control.....	342
2 Connecting an external device to the mainboard.....	344
3 5-wire AMT touch screen.....	345
3.1 Technical data.....	345
3.2 Temperature humidity diagram.....	345
3.3 Cleaning.....	345
4 Panel overlay.....	347
5 Viewing angles.....	348
6 Mounting compatibility.....	349
6.1 Compatibility overview.....	349
6.2 Compatibility details.....	350
6.2.1 Example.....	350
6.2.2 5.7" devices.....	350
6.2.3 10.4" devices.....	352
6.2.4 12.1" devices.....	353
6.2.5 15" devices.....	354

Table of contents

6.2.6 17" devices.....355

6.2.7 19" devices.....355

6.2.8 21.3" devices.....356

7 Glossary..... 357



# Chapter 1 • General information

## 1 Manual history

Version	Date	Change
1.00	24-Apr-12	<ul style="list-style-type: none"> <li>First version</li> </ul>
1.01	02-Jul-12	<ul style="list-style-type: none"> <li>Updated section "Cable lengths and resolutions for SDL transmission" on page 40.</li> <li>"Option" renamed to "Adapter".</li> <li>BIOS version updated (1.15 -&gt; 1.17).</li> </ul>
1.05	01-Mar-12	<ul style="list-style-type: none"> <li>Modified "Organization of safety notices" on page 17. Updated descriptions for cautions and warnings.</li> <li>Updated section "General instructions for performing temperature testing" on page 144.</li> <li>Updated Windows 7 Service Pack 1 (see "Windows 7" on page 225).</li> <li>Updated Windows Embedded Standard 7 Service Pack 1 (see "Windows Embedded Standard 7" on page 230).</li> <li>Updated the following drives: "5AC801.SSDI-01" on page 94, "5AC801.SSDI-02" on page 96, "5AC801.HDDI-04" on page 89, "5ACPCI.RAIC-06" on page 126, "5MMHDD.0500-00" on page 131.</li> <li>Updated "B&amp;R Automation Device Interface (ADI) - Control Center" on page 234.</li> <li>Updated "B&amp;R Automation Device Interface (ADI) Development Kit" on page 244 to version 3.40.</li> <li>Updated "B&amp;R Automation Device Interface (ADI) .NET SDK" on page 246 to version 1.80.</li> <li>Updated "B&amp;R Key Editor" on page 248 to version 3.30.</li> <li>Modified "Configuration - Optional components" on page 25.</li> <li>Updated technical data for CPU boards, see "GM45 CPU boards" on page 64.</li> <li>CompactFlash card 5CFCRD.032G-06 updated, see "5CFCRD.xxxx-06" on page 276.</li> <li>Updated USB media drive, see "5MD900.USB2-02" on page 292.</li> </ul>
01.06	12-Mar-13	<ul style="list-style-type: none"> <li>Revised general information for products "5ACPCI.RAIC-05" on page 123 and "5MMHDD.0250-00" on page 129.</li> <li>Modified "Configuration - Optional components" on page 25.</li> <li>Updated overview "Known problems/issues" on page 168 in chapter 3.</li> </ul>
1.07	18-Mar-13	<ul style="list-style-type: none"> <li>Revised section "Windows Embedded Standard 7" on page 230.</li> <li>Added new CompactFlash cards (8 GB) in 6 "Accessories".</li> </ul>
1.08	15-May-13	<ul style="list-style-type: none"> <li>Updated all technical data.</li> <li>5 "Standards and certifications" revised.</li> <li>Updated section "Serial number sticker" on page 38.</li> <li>Updated add-on fuse kit "5AC600.UPSF-00" on page 265 and replacement fuses "5AC600.UPSF-01" on page 265 for the UPS battery unit.</li> <li>Added drive "5AC801.SSDI-03" on page 98.</li> <li>Updated replacement SSDs "5MMSSD.0060-00" on page 102, "5MMSSD.0060-01" on page 104 and "5MMSSD.0180-00" on page 108.</li> <li>Updated technical data for HDD "5AC801.HDDI-04" on page 89.</li> </ul>
1.10	20-Aug-13	<ul style="list-style-type: none"> <li>Updated B&amp;R USB flash drive 5MMUSB.4096-01, see "USB flash drives" on page 288.</li> <li>Updated slide-in compact drive "5AC801.SSDI-04" on page 100.</li> <li>Updated replacement SSD "5MMSSD.0128-01" on page 106.</li> <li>Updated tightening torque of locating screws in section "Cables" on page 301.</li> <li>Updated sections "B&amp;R Automation Device Interface (ADI) Development Kit" on page 244 and "B&amp;R Automation Device Interface (ADI) .NET SDK" on page 246.</li> </ul>

Table 1: Manual history

## 2 Safety guidelines

### 2.1 Intended use

Programmable logic controllers (PLCs), operating/monitoring devices (industrial PCs, Power Panels, Mobile Panels, etc.), and B&R uninterruptible power supplies have been designed, developed and manufactured for conventional use in industrial environments. They were not designed, developed and manufactured for any use involving serious risks or hazards that could lead to death, injury, serious physical damage or loss of any kind without the implementation of exceptionally stringent safety precautions. In particular, such risks and hazards include the use of these devices to monitor nuclear reactions in nuclear power plants, their use in flight control or flight safety systems as well as in the control of mass transportation systems, medical life support systems or weapons systems.

### 2.2 Protection against electrostatic discharge

Electrical components that can be damaged by electrostatic discharge (ESD) must be handled accordingly.

#### 2.2.1 Packaging

- **Electrical components with a housing**  
...Do not require special ESD packaging but must be handled properly (see "Electrical components with a housing").
- **Electrical components without a housing**  
...Must be protected by ESD-suitable packaging.

#### 2.2.2 Guidelines for proper ESD handling

##### Electrical components with a housing

- Do not touch the connector contacts on connected cables.
- Do not touch the contact tips on circuit boards.

##### Electrical components without a housing

The following applies in addition to the points listed under "Electrical components with a housing":

- Any persons handling electrical components or devices with installed electrical components must be grounded.
- Components may only be touched on their narrow sides or front plate.
- Components should always be stored in a suitable medium (ESD packaging, conductive foam, etc.). Metallic surfaces are not suitable storage surfaces!
- Components should not be subjected to electrostatic discharge (e.g. through the use of charged plastics).
- Ensure a minimum distance of 10 cm from monitors and TV sets.
- Measurement devices and equipment must be grounded.
- Measurement probes on potential-free measurement devices must be discharged on sufficiently grounded surfaces before taking measurements.

##### Individual components

- ESD protective measures for individual components are thoroughly integrated at B&R (conductive floors, footwear, arm bands, etc.).
- These increased ESD protective measures for individual components are not necessary for customers handling B&R products.

### 2.3 Policies and procedures

Electronic devices are never completely failsafe. If the programmable control system, operating/monitoring device or uninterruptible power supply fails, the user is responsible for ensuring that other connected devices, e.g. motors, are brought to a secure state.

When using programmable logic controllers or operating/monitoring devices as control systems together with a Soft PLC (e.g. B&R Automation Runtime or comparable product) or Slot PLC (e.g. B&R LS251 or comparable product), safety precautions relevant to industrial control systems (e.g. the provision of safety devices such as emergency stop circuits, etc.) must be observed in accordance with applicable national and international regulations. The same applies for all other devices connected to the system, such as drives.

All tasks such as the installation, commissioning and servicing of devices are only permitted to be carried out by qualified personnel. Qualified personnel are those familiar with the transport, mounting, installation, commissioning and operation of devices who also have the appropriate qualifications (e.g. IEC 60364). National accident prevention regulations must be observed.

The safety notices, connection descriptions (type plate and documentation) and limit values listed in the technical data are to be read carefully before installation and commissioning and must be observed.

## 2.4 Transport and storage

During transport and storage, devices must be protected against undue stress (mechanical loads, temperature, humidity, aggressive atmospheres, etc.).

## 2.5 Installation

- Installation must be performed according to this documentation using suitable equipment and tools.
- Devices may only be installed by qualified personnel without voltage applied. Before installation, voltage to the control cabinet must be switched off and prevented from being switched on again.
- General safety guidelines and national accident prevention regulations must be observed.
- Electrical installation must be carried out according to applicable guidelines (e.g. line cross sections, fuses, protective ground connections).

## 2.6 Operation

### 2.6.1 Protection against touching electrical parts

To operate programmable logic controllers, operating/monitoring devices or uninterruptible power supplies, it is necessary for certain parts to carry dangerous voltage levels over 42 VDC. Touching one of these parts can result in a life-threatening electric shock. This could lead to death, severe injury or damage to equipment.

Before turning on the programmable logic controller, operating/monitoring devices or the uninterruptible power supply, the housing must be properly grounded (PE rail). Ground connections must be established even when testing or operating operating/monitoring devices or the uninterruptible power supply for a short time!

Before turning the device on, all parts that carry voltage must be securely covered. During operation, all covers must remain closed.

### 2.6.2 Environmental conditions - Dust, humidity, aggressive gases

The use of operating/monitoring devices (e.g. industrial PCs, Power Panels, Mobile Panels, etc.) and uninterruptible power supplies in very dusty environments should be avoided. Dust collection on the devices can affect functionality and may prevent sufficient cooling, especially in systems with active cooling systems (fans).

The presence of aggressive gases can also lead to malfunctions. When combined with high temperature and humidity, aggressive gases – e.g. with sulfur, nitrogen and chlorine components – can induce chemical reactions that can damage electronic components very quickly. Signs of the presence of aggressive gases are blackened copper surfaces and cable ends on existing equipment.

For operation in dusty or humid conditions, correctly installed (e.g. cutout installations) operating/monitoring devices like the Automation Panel or Power Panel are protected on the front. The back of all devices must be protected from dust and humidity and cleaned at suitable intervals.

### 2.6.3 Viruses and dangerous programs

This system is subject to potential risk each time data is exchanged or software is installed from a data medium (e.g. diskette, CD-ROM, USB flash drive, etc.), a network connection or the Internet. The user is responsible for assessing these dangers, implementing preventive measures such as virus protection programs, firewalls, etc. and making sure that software is only obtained from trusted sources.

## 2.7 Environmentally friendly disposal

All B&R programmable controllers, operating/monitoring devices and uninterruptible power supplies are designed to inflict as little harm as possible on the environment.

### 2.7.1 Separation of materials

It is necessary to separate different materials so the device can undergo an environmentally friendly recycling process.

Component	Disposal
Programmable logic controllers Operating/monitoring devices Uninterruptible power supply Batteries and rechargeable batteries Cables	Electronics recycling
Cardboard box / paper packaging	Paper / cardboard recycling
Plastic packaging	Plastic recycling

Table 2: Environmentally friendly separation of materials

Disposal must comply with applicable legal regulations.


### 3 Organization of safety notices

Safety notices in this manual are organized as follows:

Safety notice	Description
<b>Danger!</b>	Disregarding these safety guidelines and notices can be life-threatening.
<b>Warning!</b>	Disregarding these safety guidelines and notices can result in severe injury or substantial damage to equipment.
<b>Caution!</b>	Disregarding these safety guidelines and notices can result in injury or damage to equipment.
<b>Information:</b>	This information is important for preventing errors.

Table 3: Description of the safety notices used in this documentation
 
### 4 Guidelines

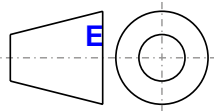

European dimension standards apply to all dimension diagrams in this document.

All dimensions are specified in mm.

Range of nominal sizes	General tolerance according to DIN ISO 2768 (medium)
Up to 6 mm	$\pm 0.1$ mm
For 6 to 30 mm	$\pm 0.2$ mm
For 30 to 120 mm	$\pm 0.3$ mm
For 120 to 400 mm	$\pm 0.5$ mm
For 400 to 1000 mm	$\pm 0.8$ mm

Table 4: Range of nominal sizes

## 5 Overview

Product ID	Short description	on page
<b>24 VDC UPS modules</b>		
9A0100.11	UPS 24 VDC, 24 VDC input, 24 VDC output, serial interface	266
<b>Accessories</b>		
5AC900.1201-00	USB interface cover M20 IP65 flat	256
5AC900.1201-01	USB interface cover M20 IP65 curved	256
5AC900.BLOC-00	Terminal block with brackets, 10 pcs.; replacement part	257
5ACPCI.ETH1-01	PCI Ethernet card 1x 10/100	268
5ACPCI.ETH3-01	PCI Ethernet card 3x 10/100	271
5CAMSC.0001-00	Internal supply cable	320
9A0003.02U	USB port button holder DS9490B	233
<b>Adapter</b>		
5AC803.BC01-00	1 compact PCI Express PPC800 adapter	75
5AC803.BC02-00	1 compact slide-in PPC800 adapter	75
<b>Automation Runtime</b>		
1A4600.10	B&R Automation Runtime ARwin, incl. license sticker and copy protection	233
1A4600.10-2	B&R Automation Runtime ARwin, ARNC0	233
1A4600.10-3	B&R Automation Runtime ARwin+PVIControls incl. license sticker and copy protection	233
1A4600.10-4	B&R Automation Runtime ARwin+ARNC0+PVIControls	233
<b>Batteries</b>		
0AC201.91	Lithium batteries 4 pcs., 3 V / 950 mAh button cell We hereby state that the lithium cells contained in this shipment qualify as "partly regulated". Handle with care. If the package is damaged, inspect the cells, repack intact cells and protect the cells against short circuit. For emergency information, call RENATA SA at +41 61 319 28 27.	252
4A0006.00-000	Lithium battery, 3 V / 950 mAh, button cell	252
<b>Battery units</b>		
9A0100.12	UPS battery unit type A, 24 V, 7 Ah, incl. battery cage	266
9A0100.14	UPS battery unit type B, 24 V, 2.2 Ah, incl. battery cage	266
9A0100.16	UPS battery unit type C, 24 V, 4.5 Ah, incl. battery cage	266
<b>Bus units</b>		
5AC803.BX01-00	PPC800 bus; 1 PCI, 1 slide-in slot	73
5AC803.BX01-01	PPC800 bus; 1 PCI Express, 1 slide-in slot	73
5AC803.BX02-00	PPC800 bus; 2 PCI, 1 slide-in slot	73
5AC803.BX02-01	PPC800 bus; 1 PCI, 1 PCI Express, 1 slide-in slot	73
<b>CPU boards</b>		
5PC800.BM45-00	Intel Core2 Duo T9400 CPU board, 2.53 GHz, dual core, 1066 MHz FSB, 6 MB L2 cache; GM45 chipset; 2 slots for SO-DIMM DDR3 modules	64
5PC800.BM45-01	Intel Core2 Duo P8400 CPU board, 2.26 GHz, dual core, 1066 MHz FSB, 3 MB L2 cache; GM45 chipset; 2 slots for SO-DIMM DDR3 modules	64
<b>CompactFlash</b>		
5CFCRD.0064-03	CompactFlash 64 MB Western Digital (SLC)	284
5CFCRD.0128-03	CompactFlash 128 MB Western Digital (SLC)	284
5CFCRD.016G-04	CompactFlash 16 GB B&R (SLC)	280
5CFCRD.016G-06	CompactFlash 16 GB B&R (SLC)	276
5CFCRD.0256-03	CompactFlash 256 MB Western Digital (SLC)	284
5CFCRD.032G-06	CompactFlash 32 GB B&R (SLC)	276
5CFCRD.0512-03	CompactFlash 512 MB Western Digital (SLC)	284
5CFCRD.0512-04	CompactFlash 512 MB B&R (SLC)	280
5CFCRD.0512-06	CompactFlash 512 MB B&R (SLC)	276
5CFCRD.1024-03	CompactFlash 1 GB Western Digital (SLC)	284
5CFCRD.1024-04	CompactFlash 1 GB B&R (SLC)	280
5CFCRD.1024-06	CompactFlash 1 GB B&R (SLC)	276
5CFCRD.2048-03	CompactFlash 2 GB Western Digital (SLC)	284
5CFCRD.2048-04	CompactFlash 2 GB B&R (SLC)	280
5CFCRD.2048-06	CompactFlash 2 GB B&R (SLC)	276
5CFCRD.4096-03	CompactFlash 4 GB Western Digital (SLC)	284
5CFCRD.4096-04	CompactFlash 4 GB B&R (SLC)	280
5CFCRD.4096-06	CompactFlash 4 GB B&R (SLC)	276
5CFCRD.8192-03	CompactFlash 8 GB Western Digital (SLC)	284
5CFCRD.8192-04	CompactFlash 8 GB B&R (SLC)	280
5CFCRD.8192-06	CompactFlash 8 GB B&R (SLC)	276
<b>DVI cable</b>		
5CADVI.0018-00	DVI-D cable, 1.8 m	301
5CADVI.0050-00	DVI-D cable, 5 m	301
5CADVI.0100-00	DVI-D cable, 10 m	301
<b>Drives</b>		
5AC801.ADAS-00	SATA hard disk adapter for operating a slide-in compact hard disk in a slide-in slot	110
5AC801.DVDS-00	DVD-ROM SATA slide-in drive	113
5AC801.DVRS-00	DVD-R/RW DVD+R/RW SATA slide-in drive	115
5AC801.HDDI-00	40 GB SATA slide-in compact hard disk; 24/7 operation with extended temperature range. Note: please see the manual for information about using this hard disk	83
5AC801.HDDI-02	160 GB SATA hard disk, slide-in compact, 24/7 operation with extended temperature range. Note: please see the manual for information about using this hard disk	85
5AC801.HDDI-03	250 GB slide-in compact SATA hard disk, 24/7 operation. Note: please see the manual for information about using this hard disk	87

Product ID	Short description	on page
5AC801.HDDI-04	500 GB SATA hard disk, slide-in compact, 24/7 operation Note: please see the manual for information about using this hard disk	89
5AC801.HDDS-00	40 GB SATA slide-in hard disk; 24/7 operation with extended temperature range. Note: please see the manual for information about using this hard disk	111
5AC801.SSDI-00	32 GB SATA SSD (SLC), slide-in compact	91
5AC801.SSDI-01	60 GB SATA slide-in compact SSD (MLC)	94
5AC801.SSDI-02	180 GB SATA slide-in compact SSD (MLC)	96
5AC801.SSDI-03	60 GB SATA slide-in compact SSD (MLC)	98
5AC801.SSDI-04	128 GB SATA SSD (MLC), slide-in compact	100
5ACPCI.RAIC-03	PCI RAID system SATA 2x 160 GB; note: Please see the manual for information about using this hard disk.	118
5ACPCI.RAIC-04	160 GB SATA hard disk, replacement part for 5ACPCI.RAIC-03; note: Please see the manual for information about using this hard disk.	121
5ACPCI.RAIC-05	PCI RAID system SATA 2x 250 GB; note: please see the manual for information about using this hard disk	123
5ACPCI.RAIC-06	PCI RAID system SATA 2x 500 GB; note: please see the manual for information about using this hard disk	126
5MMHDD.0250-00	250 GB SATA hard disk; replacement for 5AC801.HDDI-03 and 5ACPCI.RAIC-05; note: please see the manual for information about using this hard disk	129
5MMHDD.0500-00	500 GB SATA hard disk; replacement for 5AC801.HDDI-04, 5AC901.CHDD-01 and 5ACPCI.RAIC-06; note: please see the manual for information about using this hard disk	131
5MMSSD.0060-00	60 GB SATA SSD (MLC); replacement for 5AC801.SSDI-01 and 5AC901.CSSD-01; SSD for 5PP5IO.GMAC-00; note: please see the manual for information about using this SSD	102
5MMSSD.0060-01	60 GB SATA SSD (MLC); replacement for 5AC801.SSDI-03 and 5AC901.CSSD-03; SSD for 5PP5IO.GMAC-00; note: please see the manual for information about using this SSD	104
5MMSSD.0128-01	128 GB SATA SSD (MLC); replacement for 5AC801.SSDI-04 and 5AC901.CSSD-04; SSD for 5PP5IO.GMAC-00; note: please see the manual for information about using this SSD	106
5MMSSD.0180-00	180 GB SATA SSD (MLC); replacement part for 5AC801.SSDI-02 and 5AC901.CSSD-02; SSD for 5PP5IO.GMAC-00; note: please see the manual for information about using this SSD	108
<b>Expansions</b>		
5AC803.SX01-00	PPC800 expansion; 1 PCI/PCI Express and 1 slide-in slot (bus 5AC803.BX01-00 or 5AC803.BX01-01 required)	68
5AC803.SX02-00	PPC800 expansion; 2 PCI/PCI Express and 1 slide-in slot (bus 5AC803.BX02-00 or 5AC803.BX02-01 required)	68
<b>Fan kits</b>		
5AC803.FA01-00	PPC800 fan kit for system units without an expansion	133
5AC803.FA02-00	PPC800 fan kit for system units with expansion 5AC803.SX01-00	134
5AC803.FA03-00	PPC800 fan kit for system units with expansion 5AC803.SX02-00	136
<b>Heat sinks</b>		
5AC803.HS00-01	PPC800 heat sink for CPU boards with a T7400, T9400 or P8400 dual-core processor	66
<b>Interface cards</b>		
5ACPCC.ETH0-00	Compact PCIe Ethernet card 1x 10/100/1000	77
5ACPCC.MPL0-00	PCIe POWERLINK card, 2 POWERLINK interfaces, 512 kB SRAM	79
<b>MS-DOS</b>		
9S0000.01-010	OEM Microsoft MS-DOS 6.22, German floppy disks, only supplied together with a new PC	222
9S0000.01-020	OEM Microsoft MS-DOS 6.22, English floppy disks, only supplied together with a new PC	222
<b>Main memory for GM45 CPU boards</b>		
5MMDDR.2048-02	SO-DIMM DDR3 RAM 2048 MB PC3-8500	67
5MMDDR.4096-02	SO-DIMM DDR3 RAM 4096 MB PC3-8500	67
<b>Miscellaneous</b>		
5AC900.1000-00	DVI (male connector) to CRT (female connector) adapter. For connecting a standard monitor to a DVI-I interface.	255
<b>Other</b>		
5SWHMI.0000-00	HMI Drivers & Utilities DVD	298
<b>RS232 cable</b>		
9A0014.02	RS232 extension cable for remote operation of a display unit with touch screen, 1.8 m	318
9A0014.05	RS232 extension cable for remote operation of a display unit with touch screen, 5 m	318
9A0014.10	RS232 extension cable for remote operation of a display unit with touch screen, 10 m	318
<b>Replacement batteries</b>		
9A0100.13	UPS batteries type A (replacement part), 2x 12 V, 7 Ah, for battery unit 9A0100.12	266
9A0100.15	UPS batteries type B (replacement part), 2x 12 V, 2.2 Ah, for battery unit 9A0100.14	266
9A0100.17	UPS batteries type C (replacement part), 2x 12 V, 4.5 Ah, for battery unit 9A0100.16	266
<b>SDL cable - 45° connector</b>		
5CASDL.0018-01	SDL cable with 45° male connector, 1.8 m	307
5CASDL.0050-01	SDL cable with 45° male connector, 5 m	307
5CASDL.0100-01	SDL cable with 45° male connector, 10 m	307
5CASDL.0150-01	SDL cable with 45° male connector, 15 m	307
<b>SDL cables</b>		
5CASDL.0018-00	SDL cable, 1.8 m	304
5CASDL.0050-00	SDL cable, 5 m	304
5CASDL.0100-00	SDL cable, 10 m	304
5CASDL.0150-00	SDL cable, 15 m	304
5CASDL.0200-00	SDL cable, 20 m	304
5CASDL.0250-00	SDL cable, 25 m	304
5CASDL.0300-00	SDL cable, 30 m	304
<b>SDL flex cable</b>		
5CASDL.0018-03	SDL flex cable, 1.8 m	310
5CASDL.0050-03	SDL flex cable, 5 m	310
5CASDL.0100-03	SDL flex cable, 10 m	310
5CASDL.0150-03	SDL flex cable, 15 m	310
5CASDL.0200-03	SDL flex cable, 20 m	310
5CASDL.0250-03	SDL flex cable, 25 m	310

Product ID	Short description	on page
5CASDL.0300-03	SDL flex cable, 30 m	310
5CASDL.0300-13	SDL flex cable with extender, 30 m	313
5CASDL.0400-13	SDL flex cable with extender, 40 m	313
5CASDL.0430-13	SDL flex cable with extender, 43 m	313
<b>System units</b>		
5PC820.1505-00	Panel PC 820 15" XGA TFT display with touch screen (resistive); connections for 1x RS232, 5x USB 2.0, Smart Display Link/DVI/Monitor, 2x Ethernet 10/100/1000, HDA sound, add-on UPS slot, expandable with 1 or 2 PCI / PCI Express slots, optional CompactPCI Express and slide-in compact slot; IP65 protection (front); order 24 VDC connector for supply voltage separately (screw clamp: 0TB103.9; cage clamp: 0TB103.91)	52
5PC820.1906-00	Panel PC 820 19" SXGA color TFT display with touch screen (resistive); connections for 1x RS232, 5x USB 2.0, Smart Display Link/DVI/Monitor, 2x Ethernet 10/100/1000, HDA sound, add-on UPS slot, expandable with 1 or 2 PCI / PCI Express slots, optional CompactPCI Express and slide-in compact slot; IP65 protection (front); order 24 VDC connector for supply voltage separately (screw clamp: 0TB103.9; cage clamp: 0TB103.91)	58
<b>Terminal blocks</b>		
0TB103.9	Connector, 24 VDC, 3-pin female, 3.31 mm <sup>2</sup> screw clamp, protected against vibration by the screw flange	254
0TB103.91	Connector, 24 VDC, 3-pin female, 3.31 mm <sup>2</sup> cage clamp, protected against vibration by the screw flange	254
<b>USB accessories</b>		
5A5003.03	Front cover, for remote CD-ROM drive 5A5003.02 and USB 2.0 drive combination 5MD900.USB2-00, 5MD900.USB2-01 and 5MD900.USB2-02	296
5MD900.USB2-02	USB 2.0 drive combination, consists of DVD-R/RW DVD+R/RW, CompactFlash slot (Type II), USB connection (Type A on the front, Type B on the back); 24V DC (order screw clamp terminal 0TB103.9 or cage clamp terminal 0TB103.91 separately)	292
5MMUSB.2048-00	USB 2.0 flash drive, 2048 MB	288
5MMUSB.2048-01	USB 2.0 flash drive, 2048 MB, B&R	290
5MMUSB.4096-01	USB 2.0 flash drive, 4096 MB, B&R	290
<b>USB cable</b>		
5CAUSB.0018-00	USB 2.0 connection cable type A - type B, 1.8 m	317
5CAUSB.0050-00	USB 2.0 connection cable type A - type B, 5 m	317
<b>Uninterruptible power supplies</b>		
5AC600.UPSB-00	Battery unit 5 Ah; for APC620, APC810 or PPC800 UPS	261
5AC600.UPSF-00	UPS fuse kit for battery unit 5AC600.UPSB-00 up to revision D0.	265
5AC600.UPSF-01	UPS fuse, 5 pcs.	265
5AC600.UPSI-00	UPS module for APC620, APC810, PPC800; for system units 5PC600.SX01-00 (beginning with rev. H0), 5PC600.SX02-00 (beginning with rev. G0), 5PC600.SX02-01 (beginning with rev. H0), 5PC600.SX05-00 (beginning with rev. F0), 5PC600.SX05-01 (beginning with rev. F0), 5PC600.SF03-00 (beginning with rev. A0), 5PC810.SX*. 5PC820.1505-00, 5PC820.1906-00. Order cable (5CAUPS.0005-00 or 5CAUPS.0030-00) and battery unit (5AC600.UPSB-00) separately.	259
5CAUPS.0005-00	UPS cable 0.5 m; for UPS 5AC600.UPSI-00	264
5CAUPS.0030-00	UPS cable 3 m; for UPS 5AC600.UPSI-00	264
<b>Windows 7 Professional/Ultimate</b>		
5SWWI7.0100-ENG	Microsoft OEM Windows 7 Professional 32-bit, DVD, English. Only available with a new device.	225
5SWWI7.0100-GER	Microsoft OEM Windows 7 Professional 32-bit, DVD, German. Only available with a new device.	225
5SWWI7.0200-ENG	Microsoft OEM Windows 7 Professional 64-bit, DVD, English. Only available with a new device.	225
5SWWI7.0200-GER	Microsoft OEM Windows 7 Professional 64-bit, DVD, German. Only available with a new device.	225
5SWWI7.0300-MUL	Microsoft OEM Windows 7 Ultimate 32-bit, DVD, multilingual. Only available with a new device.	225
5SWWI7.0400-MUL	Microsoft OEM Windows 7 Ultimate 64-bit, DVD, multilingual. Only available with a new device.	225
5SWWI7.1100-ENG	Microsoft OEM Windows 7 Professional 32-bit, Service Pack 1, DVD, English. Only available with a new device.	225
5SWWI7.1100-GER	Microsoft OEM Windows 7 Professional 32-bit, Service Pack 1, DVD, German. Only available with a new device.	225
5SWWI7.1200-ENG	Microsoft OEM Windows 7 Professional 64-bit, Service Pack 1, DVD, English. Only available with a new device.	225
5SWWI7.1200-GER	Microsoft OEM Windows 7 Professional 64-bit, Service Pack 1, DVD, German. Only available with a new device.	225
5SWWI7.1300-MUL	Microsoft OEM Windows 7 Ultimate 32-bit, Service Pack 1, DVD, multilingual. Only available with a new device.	225
5SWWI7.1400-MUL	Microsoft OEM Windows 7 Ultimate 64-bit, Service Pack 1, DVD, multilingual. Only available with a new device.	225
<b>Windows Embedded Standard 2009</b>		
5SWWXP.0734-ENG	Microsoft OEM Windows Embedded Standard 2009, English; for PPC800 with GM45 chipset; order CompactFlash separately (at least 1 GB)	228
<b>Windows Embedded Standard 7</b>		
5SWWI7.0534-ENG	Microsoft OEM Windows Embedded Standard 7 32-bit, English; for PPC800 with GM45 chipset; order CompactFlash separately (at least 8 GB)	230
5SWWI7.0634-ENG	Microsoft OEM Windows Embedded Standard 7 64-bit, English; for PPC800 with GM45 chipset; order CompactFlash separately (at least 16 GB)	230
5SWWI7.0734-MUL	Microsoft OEM Windows Embedded Standard 7 Premium 32-bit, multilingual; for PPC800 with GM45 chipset; order CompactFlash separately (at least 8 GB)	230
5SWWI7.0834-MUL	Microsoft OEM Windows Embedded Standard 7 Premium 64-bit, multilingual; for PPC800 with GM45 chipset; order CompactFlash separately (at least 16 GB)	230
5SWWI7.1534-ENG	Microsoft OEM Windows Embedded Standard 7 32-bit, Service Pack 1, English; for PPC800 with GM45 chipset; order CompactFlash separately (at least 16 GB)	230
5SWWI7.1634-ENG	Microsoft OEM Windows Embedded Standard 7 64-bit, Service Pack 1, English; for PPC800 with GM45 chipset; order CompactFlash separately (at least 16 GB)	230
5SWWI7.1734-MUL	Microsoft OEM Windows Embedded Standard 7 Premium 32-bit, Service Pack 1, multilingual; for PPC800 with GM45 chipset; order CompactFlash separately (at least 16 GB)	230
5SWWI7.1834-MUL	Microsoft OEM Windows Embedded Standard 7 Premium 64-bit, Service Pack 1, multilingual; for PPC800 with GM45 chipset; order CompactFlash separately (at least 16 GB)	230
<b>Windows XP Professional</b>		
5SWWXP.0500-ENG	Microsoft OEM Windows XP Professional Service Pack 2c, CD, English. Only available with a new device.	223
5SWWXP.0500-GER	Microsoft OEM Windows XP Professional Service Pack 2c, CD, German. Only available with a new device.	223
5SWWXP.0500-MUL	Microsoft OEM Windows XP Professional Service Pack 2c, CD, multilingual. Only available with a new device.	223
5SWWXP.0600-ENG	Microsoft OEM Windows XP Professional Service Pack 3, CD, English. Only available with a new device.	223
5SWWXP.0600-GER	Microsoft OEM Windows XP Professional Service Pack 3, CD, German. Only available with a new device.	223



Product ID	Short description	on page
5SWWXP.0600-MUL	Microsoft OEM Windows XP Professional Service Pack 3, CD, multilingual. Only available with a new device.	223

## Chapter 2 • Technical data

---

### 1 Introduction

The Panel PC 800 covers an extremely wide performance range – relying on efficient Intel Atom N270 processors and Core2 Duo processors for applications with exceptionally high performance requirements. Brilliant 15" XGA and 19" SXGA touch screen displays provide a simple and intuitive user interface. Flexibility was raised to a completely new level when designing the PPC800. This makes it possible to add several different options to the cost-effective base device. This includes up to two PCI and PCI Express slots, modular drives, additional interfaces and an integrated UPS. The chipset, processor and other components are connected directly to the heat sink using heat conductive materials. This makes it possible to operate not only Atom processors, but also certain dual-core processors without a fan at all.



## 1.1 Features

- 15" and 19" diagonals
- Latest processor technology - Core 2 Duo
- Up to 8 GB main memory (dual-channel memory support)
- 1 CompactFlash slot (type I)
- Upgrade expansions with 1 or 2 slots for PCI / PCI Express (PCIe) cards and a slide-in drive slot
- 1 optional PCIec (PCI Express compact) card slot (can be upgraded with an adapter)
- 1 optional slide-in compact slot (can be upgraded with an adapter)
- 5x USB 2.0
- 2x Ethernet 10/100/1000 Mbit interfaces
- 1x RS232 interface, modem-compatible
- 24 VDC supply voltage
- BIOS (AMI)
- Real-time clock (RTC, battery-backed)
- Easy slide-in drive replacement (SATA hot plugging)
- HDA sound
- Add-on UPS slot

## 1.2 System components / Configuration

The PPC800 system can be assembled to meet individual requirements and operating conditions.

The following components are absolutely essential for operation:

- System unit
- CPU board
- Heat sink (depends on the CPU board)
- Main memory
- Fan kit
- Drive (mass storage device such as CompactFlash card or hard disk) for the operating system
- Software

### 1.2.1 Configuration - Base system












Configuration - Base system			
System unit	Select 1		
	 5PC820.1505-00	 5PC820.1906-00	
Fan kit	Select 1		
	5AC803.FA01-00	5AC803.FA02-00	5AC803.FA03-00
CPU board / Heat sink / Main memory			
CPU board	Select 1		
	5PC800.BM45-00 5PC800.BM45-01		
Heat sinks	Select 1		
	5AC803.HS00-01		
Main memory	Select one or two		
	5MMDDR.2048-02 5MMDDR.4096-02		

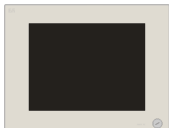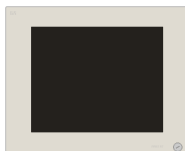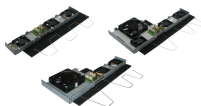Figure 1: Configuration - Base system

## 1.2.2 Configuration - Optional components

Configuration - Optional components			
Configuration of a system unit with adapter			
Adapters <sup>1)</sup>	Select 1 or both		
	5AC803.BC01-00 ↓	5AC803.BC02-00 ↓	
	PClec plug-in card, select 1	Slide-in compact drives, select 1	
	5ACPCC.ETH0-00 (PClec Ethernet card 10/100/1000) 5ACPCC.MPL0-00 (PClec POWERLINK MN 2-port)	5AC801.HDDI-00 (40 GB) 5AC801.HDDI-04 (500 GB) 5AC801.SSDI-03 (60 GB) 5AC801.SSDI-04 (128 GB)	
Configuration of a system unit with expansion			
Expansion	No expansion	1 PCI/PCIe + 1 slide-in slot	2 PCI/PCIe + 1 slide-in slot
		5AC803.SX01-00	5AC803.SX02-00
Bus units		Select 1	Select 1
		5AC803.BX01-00 5AC803.BX01-01	5AC803.BX02-00 5AC803.BX02-01
Slide-in drives		Select 1	
		5AC801.HDDS-00 (40 GB) 5AC801.DVDS-00 (DVD drive) 5AC801.DVRS-00 (DVD writer) 5AC801.ADAS-00 (adapter)	
RAID system		Select 1	
		5ACPCI-RAIC-06 (2x 500 GB, uses 1 PCI slot) 5MMHDD.0500-00 (replacement 500 GB SATA HDD)	
CompactFlash	Select 1		
	5CFCRD.0512-06, 5CFCRD.1024-06, 5CFCRD.2048-06, 5CFCRD.4096-06, 5CFCRD.8192-06, 5CFCRD.016G-06, 5CFCRD.032G-06, 5CFCRD.0064-03, 5CFCRD.0128-03, 5CFCRD.0256-03, 5CFCRD.0512-03, 5CFCRD.1024-03, 5CFCRD.2048-03, 5CFCRD.4096-03, 5CFCRD.8192-03		
UPS battery	Select 1		
	5AC600.UPSI-00 (add-on UPS module), 5AC600.UPSB-00 (UPS battery unit) Connection cable: 5CAUPS.0005-00 (0.5 meters) or 5CAUPS.003-00 (3 meters)		
Power connectors	Select 1		
	0TB103.9 (screw clamp) 0TB103.91 (cage clamp)		
Software	Select 1		
 Windows XP	<b>Windows XP</b> 5SWWXP.0500-ENG 5SWWXP.0500-GER 5SWWXP.0500-MUL 5SWWXP.0600-ENG 5SWWXP.0600-GER 5SWWXP.0600-MUL	<b>Windows Embedded Standard 2009</b> 5SWWXP.0734-ENG <b>Windows Embedded Standard 7</b> 5SWWI7.1534-ENG 5SWWI7.1634-ENG 5SWWI7.1734-MUL 5SWWI7.1834-MUL	<b>Microsoft DOS</b> 9S0000.01-010 9S0000.01-020
 Windows Embedded Standard 2009			
 Windows Embedded Standard 7			<b>Automation Runtime</b> 1A4601.06 1A4601.06-2 1A4600.10 1A4600.10-2 1A4600.10-3 1A4600.10-4
 Windows 7	<b>Windows 7</b> 5SWWI7.1100-ENG 5SWWI7.1100-GER 5SWWI7.1200-ENG	5SWWI7.1200-GER 5SWWI7.1300-MUL 5SWWI7.1400-MUL	

1) If both adapters are used, then one PCle plug-in card and one slide-in compact drive can be operated in one device.

Figure 2: Configuration - Optional components

## 2 Complete system

### 2.1 Temperature specifications

CPU boards can be combined with various other components such as drives, main memory, additional plug-in cards, etc. depending on the system unit and fan kit. The many different configurations possible result in varying maximum ambient temperatures, which can be seen in the following tables in this section.

#### Information:

**The maximum specified ambient temperatures for operation with a fan kit have been determined under worst-case conditions. Experience has shown that higher ambient temperatures can be reached in typical applications, e.g. those in Microsoft Windows. Testing and evaluation must be performed on-site by the user (temperatures can be read in BIOS or with the B&R Control Center).**

#### Information regarding worst-case conditions

- Thermal Analysis Tool (TAT V3.8) from Intel for simulating a 100% processor load
- BurnInTest tool (BurnInTest V4.0 Pro from Passmark Software) for simulating a 100% load on the interface via loop back adapters (serial interfaces, slide-in drives, USB ports, audio outputs)
- Maximum system expansion and power consumption

## 2.1.1 Maximum ambient temperature

### Information:

Only specified mounting orientations are permitted. See chapter "Installation", section "Mounting orientation" on page 138.

		Operation with Fan kit		Temperature limits	Location of sensor(s)
		T9400	P8400		
All temperature values in degrees Celsius (°C) at 500 m above sea level.					
The maximum ambient temperature is typically derated by 1°C per 1000 meters (starting at 500 meters above sea level).					
<b>Maximum ambient temperature</b>		<b>45</b>	<b>50</b>		
What else can also be operated at the max. ambient temperature, or are there any limits?					
Slide-in compact drives	Onboard CompactFlash <sup>1)</sup>	✓	✓	80	Board power
	5AC801.HDDI-00	✓	✓	80	
	5AC801.HDDI-02	✓	✓	80	
	5AC801.HDDI-03	✓	✓	60	
	5AC801.HDDI-04	✓	✓	60	
	5AC801.SSDI-00	✓	✓	70	
	5AC801.SSDI-01	✓	✓	70	
	5AC801.SSDI-02	✓	✓	70	
	5AC801.SSDI-03	✓	✓	70	
Slide-in drives	5AC801.HDDS-00	✓	✓	80	Slide-in drive 1
	5AC801.DVDS-00	✓	✓	50	
	5AC801.DVRS-00	✓	✓	50	
Main memory	5MMDDR.2048-02	✓	✓	-	-
	5MMDDR.4096-02	✓	✓	-	
System units	5PC820.1505-00	✓	✓	80	Power supply
	5PC820.1906-00	✓	✓	80	
Additional plug-in cards PCIec cards	5ACPCC.ETH0-00	✓	✓	-	-
	5ACPCC.MPL0-00	✓	✓	-	
	5ACPCI.RAIC-03 (24 hours / standard)	✓	✓	-	
	5ACPCI.RAIC-04 (24 hours / standard)	✓	✓	-	
	5ACPCI.RAIC-05 (24 hours / standard)	✓	✓	-	
	5ACPCI.RAIC-06 (24 hours / standard)	✓	✓	-	

1) Only possible with a CompactFlash card from B&R that is compatible with the device.

Table 5: Ambient temperature with a fan kit

### 2.1.1.1 How is the maximum ambient temperature determined?

1. The CPU board is selected (i.e. operation with or without a fan kit).
2. The "Maximum ambient temperature" row shows the maximum ambient temperature for the complete system, including the respective CPU board.

### Information:

Maximum temperature data is for operation at 500 meters. The maximum ambient temperature is typically derated by 1°C per 1000 meters (starting at 500 meters above sea level).

3. Incorporating additional drives (slide-in), main memory, additional plug-in cards, etc. can change the temperature limits of a PPC800 system.

If there is a "✓" next to the component, it can be used at the maximum ambient temperature of the complete system without problems.

If there is a specific temperature, for example "50", next to the component, then the ambient temperature of the complete PPC800 system cannot exceed this temperature.

### 2.1.2 Minimum ambient temperatures

For systems containing one of the following components, the minimum ambient temperature is +5°C: 5AC801.DVDS-00, 5AC801.DVRS-00. If none of these components are used, then the minimum ambient temperature is 0°C.

### 2.1.3 Temperature monitoring

Sensors monitor temperature values at various places in the PPC800 (board I/O, board ETH2, board power, power supply, slide-in drive 1, IF slot). The location of these temperature sensors is illustrated in "Temperature sensor locations" on page 29. The value listed in the table represents the defined maximum temperature for this measurement point. An alarm is not triggered if this temperature is exceeded. The temperatures<sup>1)</sup> can be read in BIOS (Advanced - Baseboard/Panel features - Baseboard monitor) or in approved Microsoft Windows operating systems using the B&R Control Center.

In addition, the hard disks for PPC800 systems available from B&R are equipped with S.M.A.R.T, or Self-Monitoring, Analysis, and Reporting Technology. This makes it possible to read various parameters, e.g. temperature, using software (such as HDD Thermometer, a freeware program) on approved Microsoft operating systems (except Windows CE).

<sup>1)</sup> The temperature measured approximates the immediate ambient temperature but may also be influenced by neighboring components.



### 2.1.4 Temperature sensor locations

Sensors monitor temperature values at many different locations in the PPC800. The temperatures can be read in BIOS (Advanced - Baseboard/Panel features - Baseboard monitor) or in approved Microsoft operating systems using the B&R Control Center<sup>2)</sup>.

For applications that don't use Windows, the temperatures can be evaluated using the B&R implementation guide. In addition to the implementation guide, there are also programs available in MS-DOS.

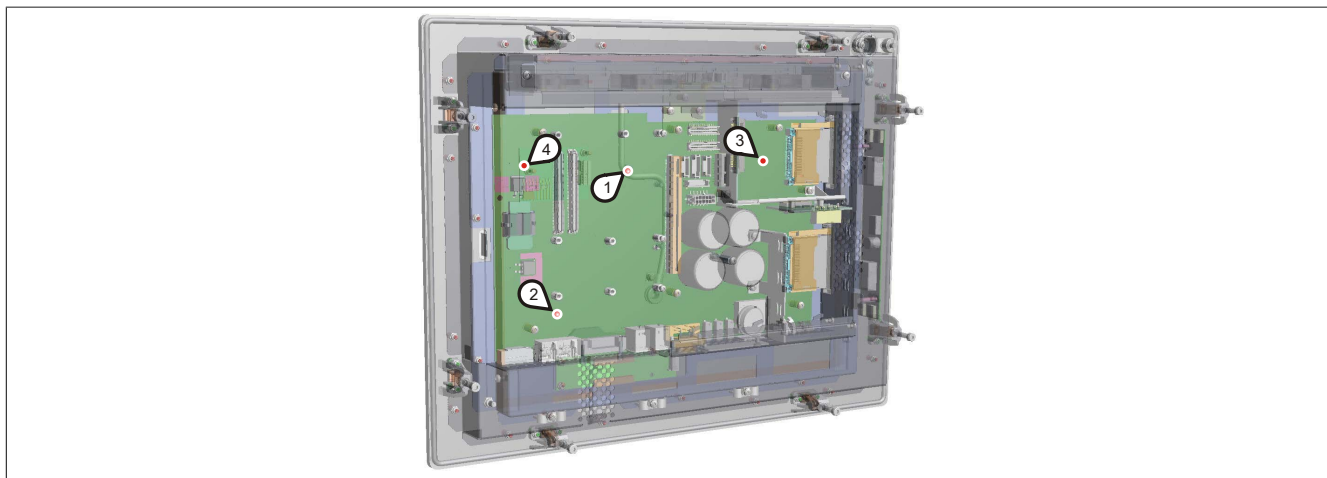


Figure 3: Temperature sensor locations

Position	Measurement point for	Measurement	Max. specified
1	Board I/O	Board temperature in the I/O area (sensor on the mainboard)	80°C
2	Board ETH2	Baseboard temperature near the ETH2 controller (sensor on the mainboard)	80°C
3	Board power	Board power supply temperature (sensor on the mainboard)	80°C
4	Power supply	Power supply temperature	80°C
-	Slide-in drive 1	Slide-in drive temperature (sensor integrated in the slide-in slot).	Depends on the slide-in drive being used
-	IF slot	PClec slot temperature; the sensor is located directly on the plug-in card.	Depends on the plug-in card being used

Table 6: Temperature sensor locations

<sup>2)</sup> The ADI driver containing the B&R Control Center is available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

## 2.2 Humidity specifications

The following table lists the minimum and maximum relative humidity values for the individual components that are relevant for the humidity limitations of a complete system. The lowest and highest common values are always used when establishing these limits.

Component		Operation	Storage / Transport
GM45 COM Express CPU boards		10 to 90%	5 to 95%
Main memory for CPU boards		10 to 90%	5 to 95%
Slide-in compact drives	5AC801.HDDI-00	5 to 90%	5 to 95%
	5AC801.HDDI-02	8 to 80%	5 to 95%
	5AC801.HDDI-03	5 to 95%	5 to 95%
	5AC801.HDDI-04	5 to 95%	5 to 95%
	5AC801.SSDI-00	5 to 95%	5 to 95%
	5AC801.SSDI-01	5 to 95%	5 to 95%
	5AC801.SSDI-02	5 to 95%	5 to 95%
	5AC801.SSDI-03	8 to 95%	8 to 95%
Slide-in drives	5AC801.SSDI-04	8 to 95%	8 to 95%
	5AC801.HDDS-00	5 to 90%	5 to 90%
	5AC801.DVDS-00	8 to 90%	5 to 95%
Additional plug-in cards	5AC801.DVRS-00	8 to 90%	5 to 95%
	5ACPCI.RAIC-03 (24 hours / standard)	8 to 90%	5 to 95%
	5ACPCI.RAIC-04 (24 hours / standard)	8 to 90%	5 to 95%
	5ACPCI.RAIC-05 (24 hours / standard)	5 to 95%	5 to 95%
	5ACPCI.RAIC-06 (24 hours / standard)	5 to 95%	5 to 95%
	5MMHDD.0250-00 (24 hours / standard)	5 to 95%	5 to 95%
Accessories	5MMHDD.0500-00 (24 hours / standard)	5 to 95%	5 to 95%
	5CFCRD.xxxx-06 CompactFlash cards	85%	85%
	5CFCRD.xxxx-04 CompactFlash cards	85%	85%
	5CFCRD.xxxx-03 CompactFlash cards	8 to 95%	8 to 95%
	5MMUSB.2048-00 flash drive	10 to 90%	5 to 90%
	5MMUSB.xxxx-01 flash drive	85%	85%
	5MD900.USB2-01 USB media drive	20 to 80%	5 to 90% / 5 to 95%
	5MD900.USB2-02 USB media drive	20 to 80%	5 to 90% / 5 to 95%

Table 7: Overview of humidity specifications for individual components

The specifications listed correspond to the relative humidity at an ambient temperature of 30°C. More detailed information about specific temperature-dependent humidity values can be found in the technical data for the individual components.

## 2.3 Power management

### 2.3.1 Supply voltage block diagram

The following block diagram illustrates the simplified structure of the PPC800 supply voltage.

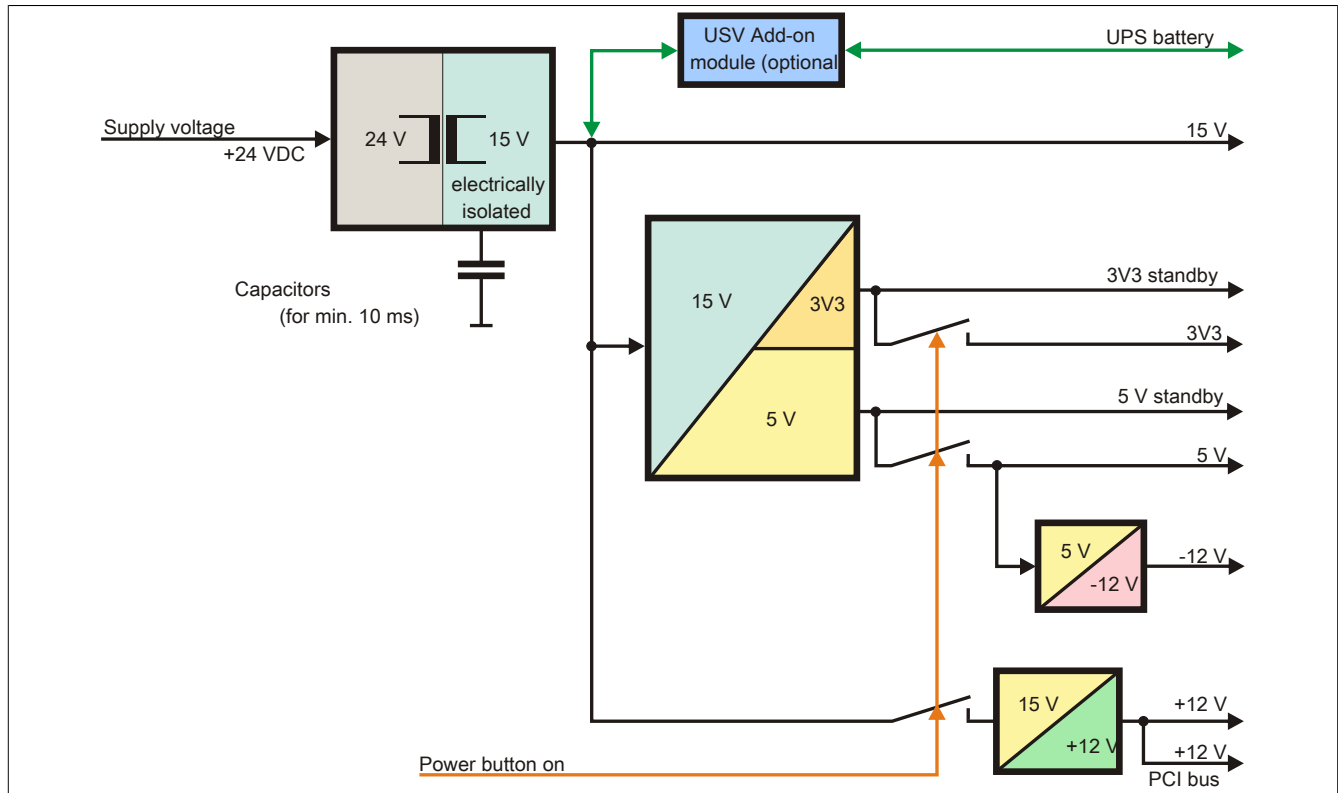


Figure 4: Supply voltage block diagram

#### Description

15 V is generated from the supply voltage using a DC-to-DC converter. This electrically isolated 15 V supplies additional DC-to-DC converters that generate the remaining voltage.

After the system is turned on (e.g. using the power button), the 3V3 and 5 V voltages are applied to the bus. At the 5 V output, another DC-to-DC converter generates -12 V and applies this to the bus. An additional DC-to-DC converter generates +12 V.

The optional add-on UPS (with battery unit) is supplied with 15 V and provides an uninterrupted power supply of the 15 V bus during a power failure.

### 2.3.2 Power calculation with 5PC820.1505-00

Information:		CPU board		Current system	
		5PC800.BM45-00	5PC800.BM45-01	Enter values in this column	
All values in <b>watts</b> The values for the <b>suppliers</b> are maximum values. The values for the <b>consumers</b> are average maximum values, but not peak values.					
		Total power supply power (maximum)		130	
Total power supply	Add-on UPS module, optional		7.5	7.5	
	Backlight display 15"		14	14	
			Maximum possible at +12V		75
	+12 V	CPU board, permanent consumers		43	36
		2048 MB RAM, max. 2 with 3 W each			
		4096 MB RAM, max. 2 with 4 W each			
		Fan kit, optional		2.4	2.4
		Power consumption of the PCIe card, optional, max. 4 W <sup>2)</sup>			
		PCI card limit, optional (max. 3 W without fan kit, max. 6 W with fan kit) <sup>1)</sup>			
		PCIe x1 card limit, optional (max. 3 W without fan kit, max. 20 W with fan kit) <sup>1)</sup>			
				Consumers +12 V ∑	
			Maximum possible at +5V		65
	+5 V	System unit, permanent consumers		4	4
		Hard disk (slide-in compact)		4	4
		Slide-in drive (hard disk, DVD-ROM, etc.)		4	4
		USB peripherals USB1 and USB3 with 2.5 W each			
		USB peripherals USB2, USB4 and USB5 with 5 W each			
		Power consumption of the PCIe card, optional, max. 4 W <sup>2)</sup>			
		PCI card limit, optional (max. 3 W without fan kit, max. 20 W with fan kit) <sup>1)</sup>			
				Maximum possible at -12V	
	-12 V	PCI card limit, optional (max. 1.2 W with or without fan kit) <sup>1)</sup>			
				Consumers -12 V ∑	
			Consumers +5 V ∑		
			Maximum possible at 3V3		40
	3V3	System unit, permanent consumers		9	9
		CompactFlash, 1 W each			
		Power consumption of the PCIe card, optional, max. 4 W <sup>2)</sup>			
		PCI card limit, optional (max. 3 W without fan kit, max. 15 W with fan kit) <sup>1)</sup>			
PCIe x1 card limit, optional (max. 3 W without fan kit, max. 10 W with fan kit) <sup>1)</sup>					
		Consumers 3V3 ∑			
		Consumers ∑			

1) The total performance of one PCI/PCIe card per PCI slot (= sum of the power consumption for each voltage range) may not exceed the limits stated for operation with or without a fan kit.

2) The total performance of one PClec card per PClec slot (= sum of the power consumption for each voltage area) may not exceed the limits stated for operation with or without a fan kit.

Table 8: Power calculation for 15" PPC800

#### Information:

**The PClec card must not consume more than a total of 4 W (12 V / 5 V / 3V3)!**

## 2.3.3 Power calculation with 5PC820.1906-00

Information:				CPU board		Current system
All values in <b>watts</b> The values for the <b>suppliers</b> are maximum values. The values for the <b>consumers</b> are average maximum values, but not peak values.				5PC800.BM45-00	5PC800.BM45-01	Enter values in this column
<b>Total power supply power (maximum)</b>						<b>130</b>
Total power supply	+12 V	Add-on UPS module, optional		7.5	7.5	
		Backlight display 19"		32	32	
		<b>Maximum possible at +12V</b>				<b>75</b>
		CPU board, permanent consumers		43	36	
		2048 MB RAM, max. 2 with 3 W each				
		4096 MB RAM, max. 2 with 4 W each				
		Fan kit, optional		2.4	2.4	
		Power consumption of the PClec card, optional, max. 4 W <sup>2)</sup>				
		PCI card limit, optional (max. 3 W without fan kit, max. 6 W with fan kit) <sup>1)</sup>				
		PCIe x1 card limit, optional (max. 3 W without fan kit, max. 20 W with fan kit) <sup>1)</sup>				
		<b>Consumers +12 V <math>\Sigma</math></b>				
	+5 V	<b>Maximum possible at +5V</b>				<b>65</b>
		System unit, permanent consumers		12	12	
		Hard disk (slide-in compact)		4	4	
		Slide-in drive (hard disk, DVD-ROM, etc.)		4	4	
		USB peripherals USB1 and USB3 with 2.5 W each				
		USB peripherals USB2, USB4 and USB5 with 5 W each				
		Power consumption of the PClec card, optional, max. 4 W <sup>2)</sup>				
		PCI card limit, optional (max. 3 W without fan kit, max. 20 W with fan kit) <sup>1)</sup>				
		<b>Maximum possible at -12V</b>				<b>1.2</b>
		PCI card limit, optional (max. 1.2 W with or without fan kit) <sup>1)</sup>				
		<b>Consumers -12 V <math>\Sigma</math></b>				
	-12 V	<b>Consumers +5 V <math>\Sigma</math></b>				
		<b>Maximum possible at 3V3</b>				<b>40</b>
		System unit, permanent consumers		9	9	
		CompactFlash, 1 W each				
		Power consumption of the PClec card, optional, max. 4 W <sup>2)</sup>				
		PCI card limit, optional (max. 3 W without fan kit, max. 15 W with fan kit) <sup>1)</sup>				
		PCIe x1 card limit, optional (max. 3 W without fan kit, max. 10 W with fan kit) <sup>1)</sup>				
		<b>Consumers 3V3 <math>\Sigma</math></b>				
		<b>Consumers <math>\Sigma</math></b>				

1) The total performance of one PCI/PCIe card per PCI slot (= sum of the power consumption for each voltage range) may not exceed the limits stated for operation with or without a fan kit.

2) The total performance of one PClec card per PClec slot (= sum of the power consumption for each voltage area) may not exceed the limits stated for operation with or without a fan kit.

Table 9: Power calculation for 19" PPC800

**Information:**

**The PClec card must not consume more than a total of 4 W (12 V / 5 V / 3V3)!**

## 2.4 Block diagrams

The following block diagrams illustrate the simplified structure of the system units with a GM45 CPU board (5PC820.1505 / 5PC820.1906-00) in relation to the various bus units.

### 2.4.1 Bus unit 5AC803.BX01-00

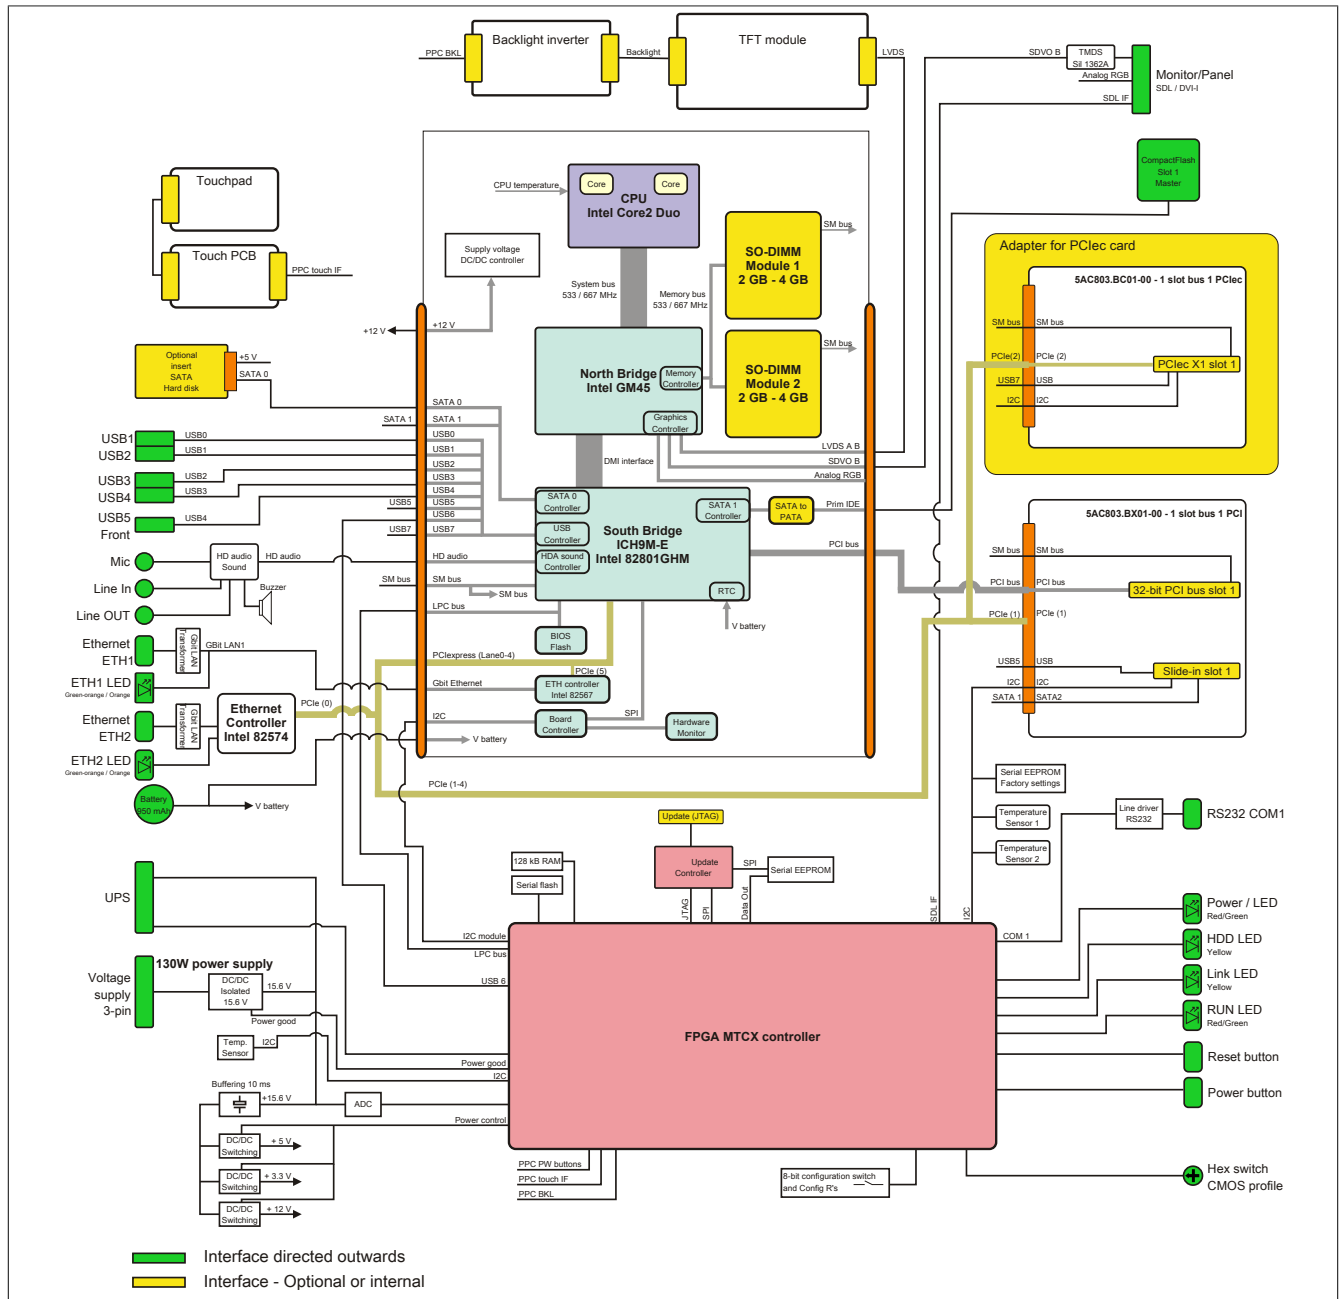


Figure 5: Block diagram with bus unit 5AC803.BX01-00

## 2.4.2 Bus unit 5AC803.BX01-01

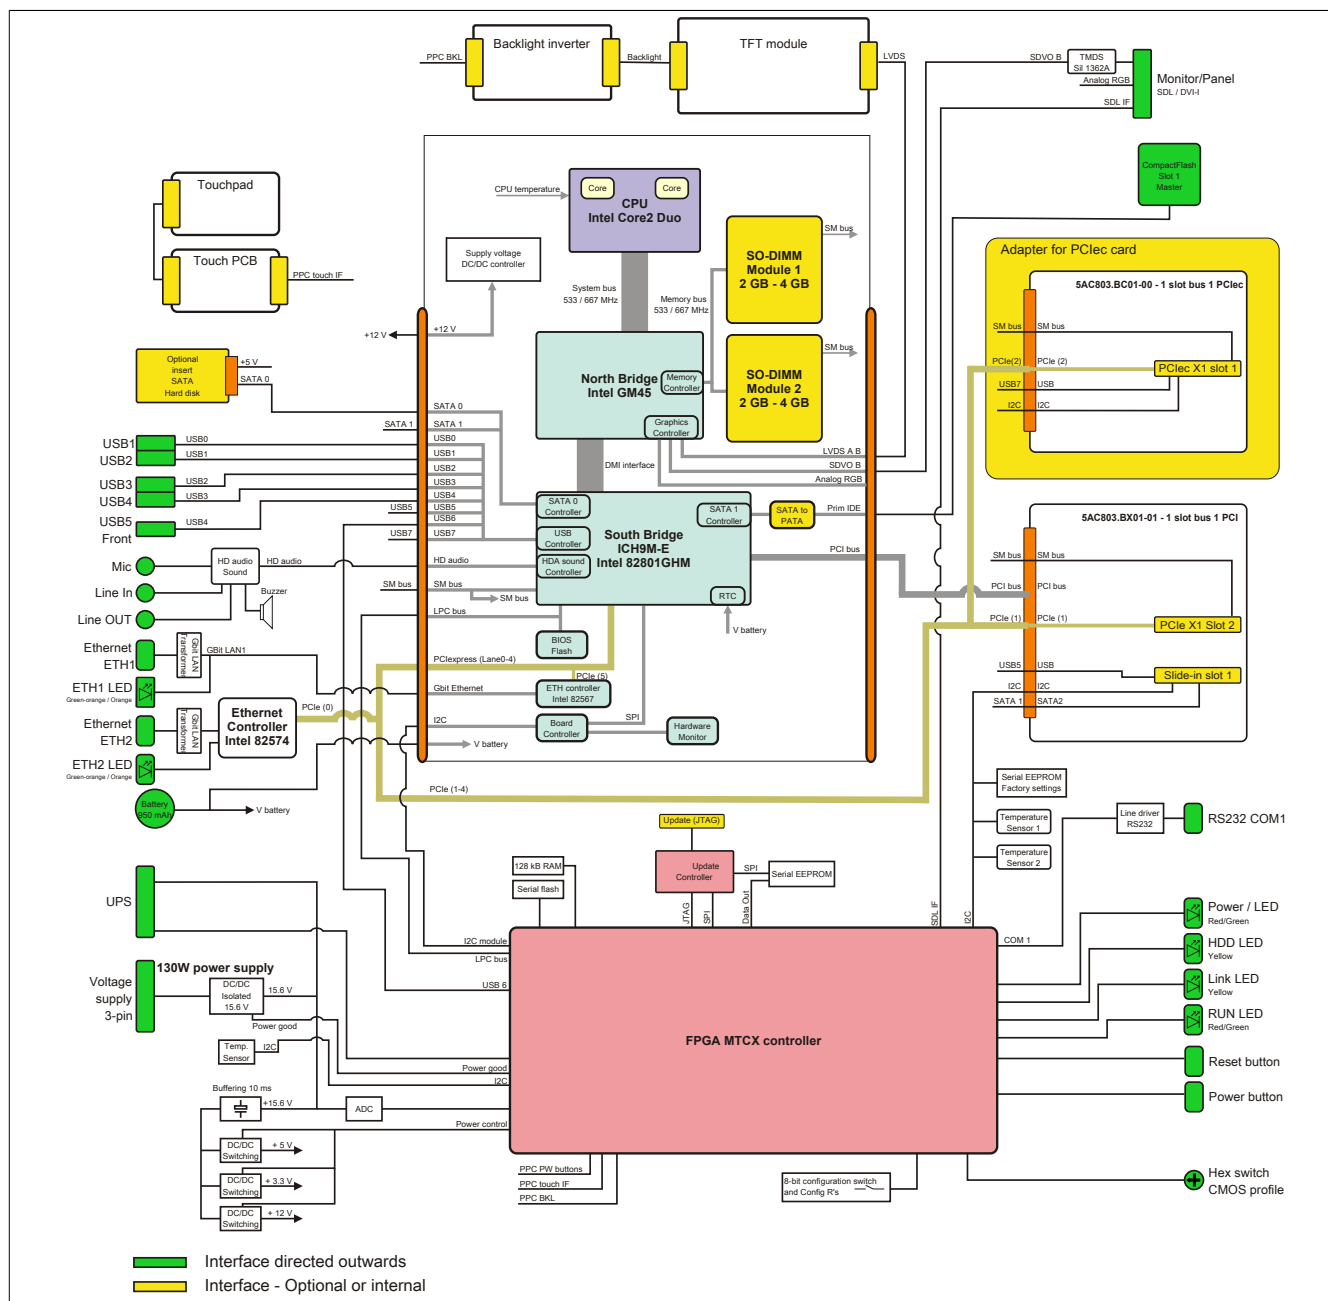


Figure 6: Block diagram with bus unit 5AC803.BX01-01

### 2.4.3 Bus unit 5AC803.BX02-00

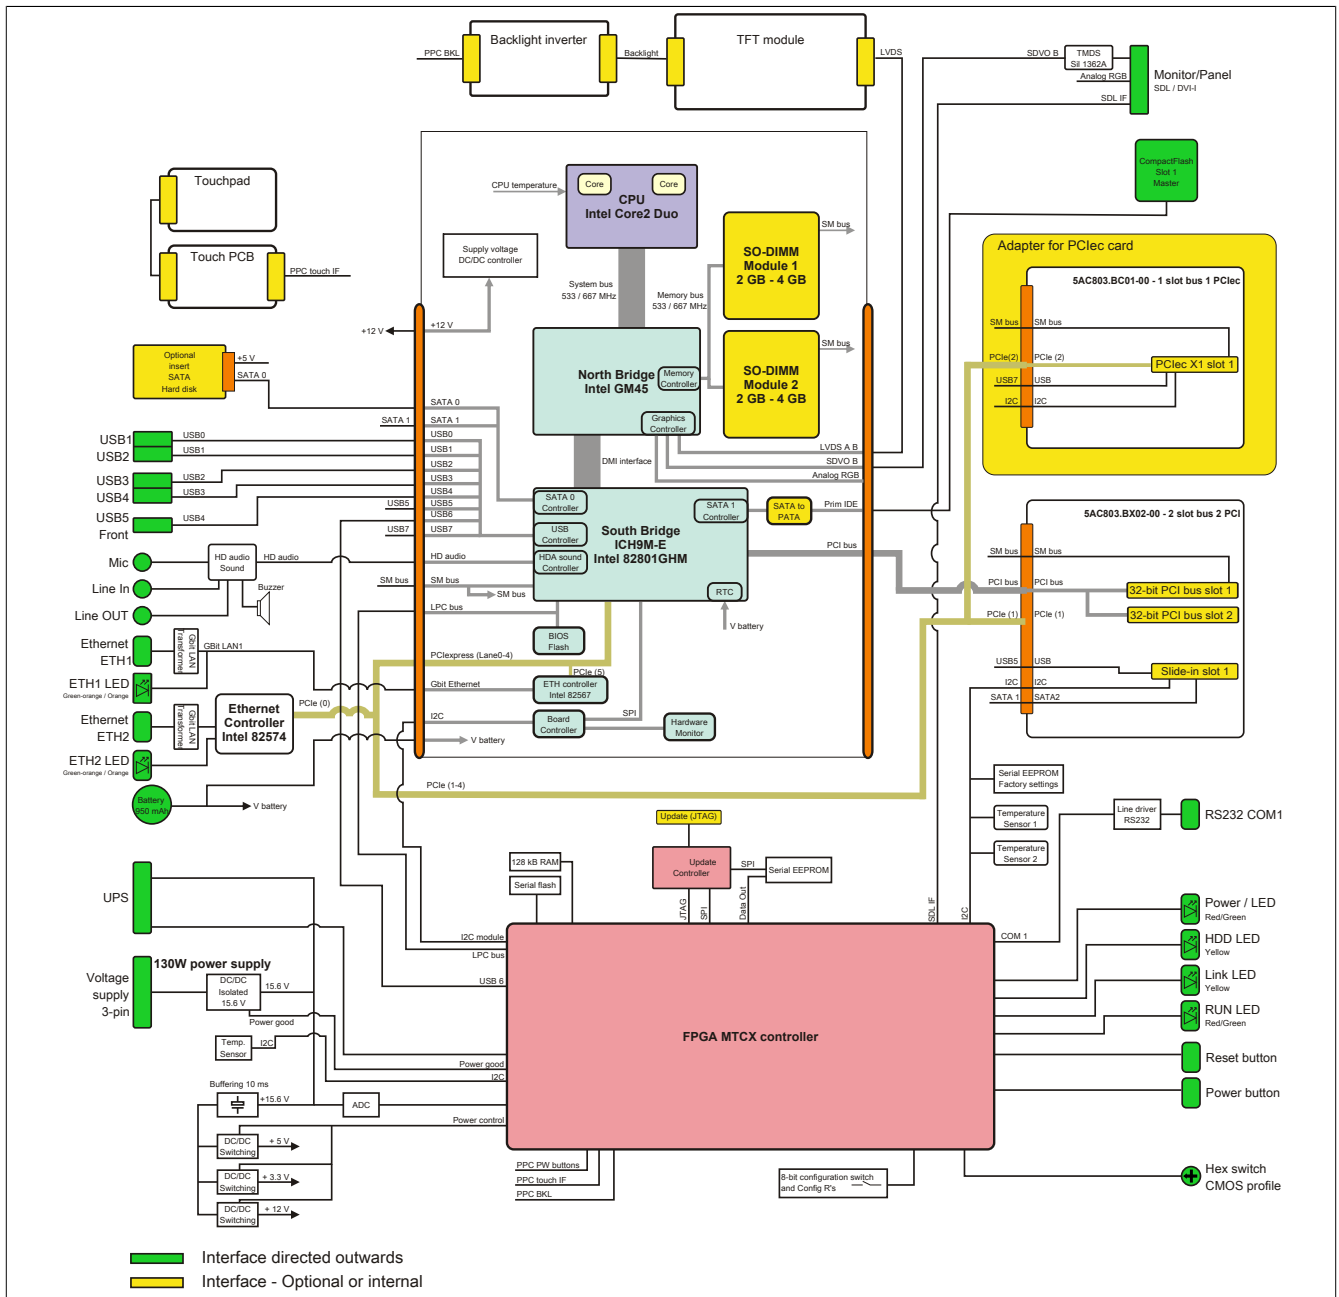


Figure 7: Block diagram with bus unit 5AC803.BX02-00



## 2.4.4 Bus unit 5AC803.BX02-01

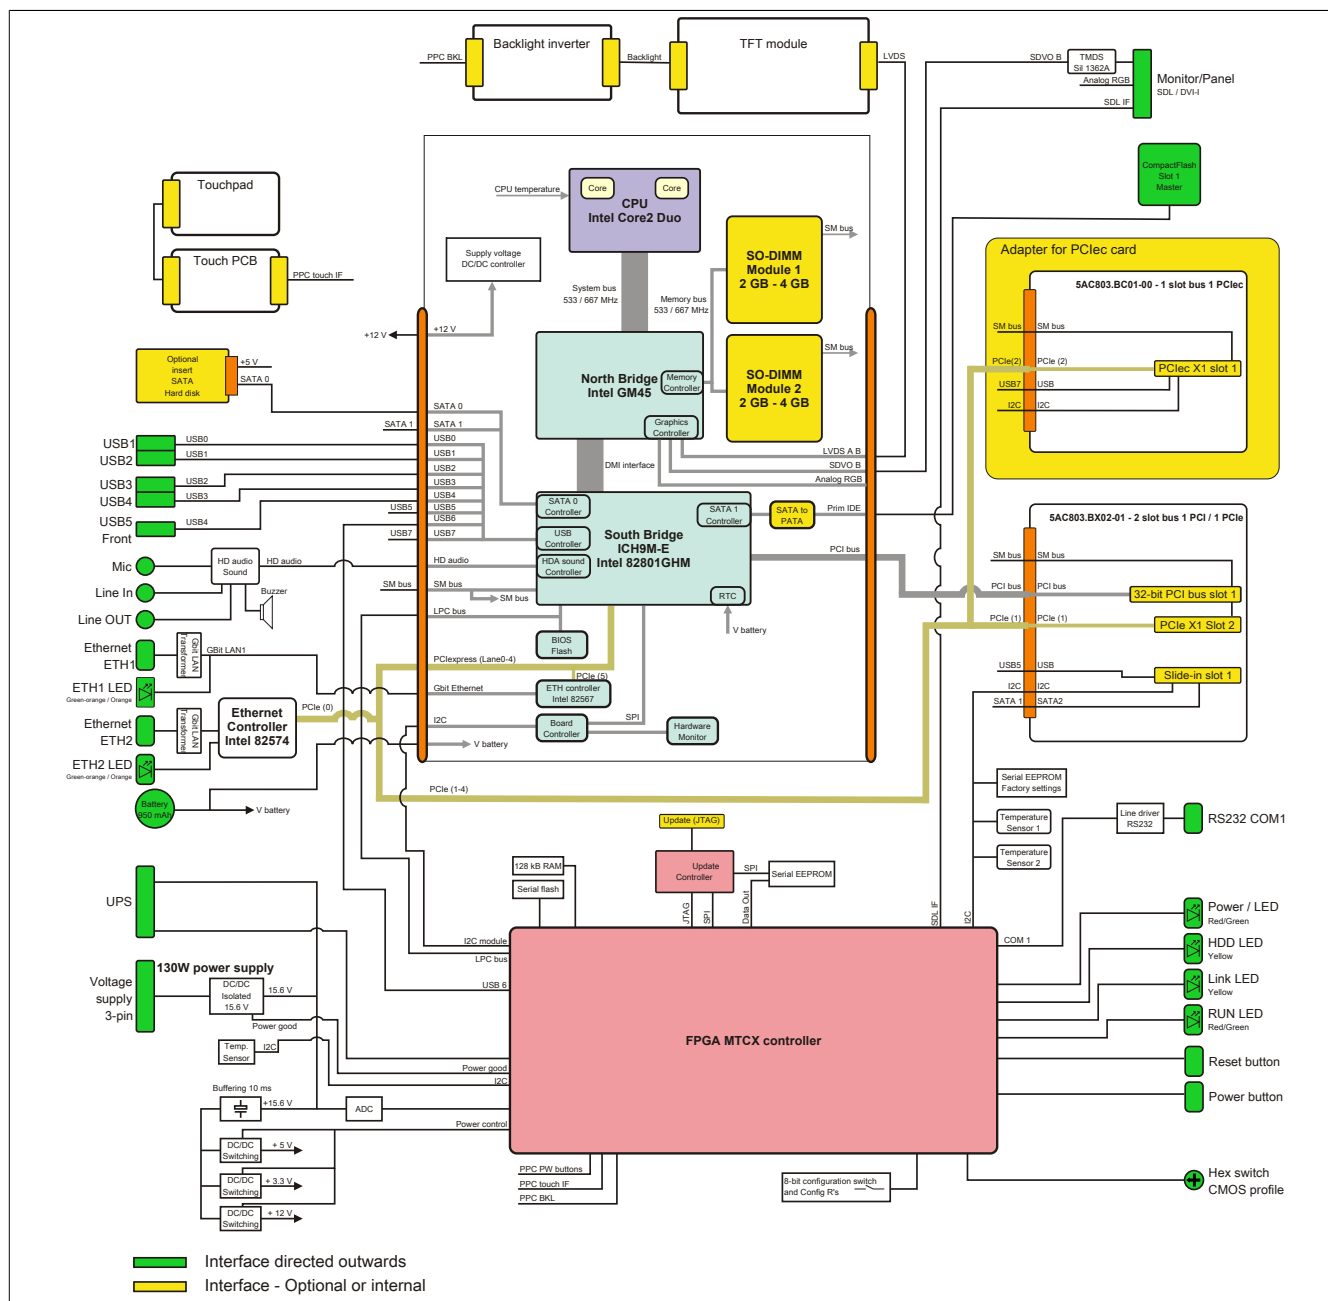


Figure 8: Block diagram with bus unit 5AC803.BX02-01

## 2.5 Serial number sticker

A unique serial number sticker with a barcode (Code 128) is affixed to each B&R device for identification purposes. This serial number represents all of the individual components built into the system (model number, name, revision, serial number, delivery date and duration of warranty).



Figure 9: Serial number sticker (back)

This information can also be found on the B&R website by entering the serial number of the complete system in the search field tab (after selecting the "Serial number" option) at the top of the website [www.br-automation.com](http://www.br-automation.com). The search provides a detailed list of installed components.

The image shows a screenshot of the B&R website's search interface. The search bar at the top contains the serial number 'AF210168454'. Below the search bar, there are tabs for 'Website', 'Materialnummer', and 'Serialnummer'. The 'Serialnummer' tab is selected. The search results show a list of installed components for the serial number 'AF210168454'. The list includes the following components:

SERIAL	MATERIAL	REVISION	LIEFERUNG	GEWÄHRLEISTUNGSENDE
B15B0168428	5PC8.220198.001-00	C0	*NV	*N/A
AF210168454	5PC820.1505-00	A2	*NV	*N/A
A3CA0169483	5PC800.B945-00	C0	*NV	*N/A
A3E50168807	5MMDR.0512-01	B0	*NV	*N/A
AF270168430	5AC803.SX01-00	A0	*NV	*N/A
AF290168515	5AC803.BX01-00	A5	*NV	*N/A
AF2E0168475	5AC803.BC02-00	A5	*NV	*N/A
AF2D0168456	5AC803.BC01-00	A5	*NV	*N/A
AF300168465	5AC803.FA02-00	A0	*NV	*N/A
AF230168467	5AC803.HS00-00	A5	*NV	*N/A

Figure 10: Example of serial number search

## 2.6 Device interfaces

### 2.6.1 +24 VDC supply voltage

The 3-pin male connector required for the supply voltage connection is not included in delivery. It can be ordered from B&R using model number 0TB103.9 (screw clamp) or 0TB103.91 (cage clamp).

The pinout is listed in the following table and printed on the PPC800 housing. The supply voltage is protected internally by a soldered fuse (15 A, fast-acting) to prevent damage to the device in the event of an overload (fuse replacement necessary) or if the voltage supply is connected incorrectly (reverse polarity protection - fuse replacement not necessary). The device must be returned to B&R for repairs if the fuse is blown in the event of an error.

Supply voltage	
Protected against reverse polarity	
Pin	Description
1	+
2	Functional ground
3	-
Model number	Short description
	Terminal blocks
0TB103.9	Connector 24 V 5.08 3-pin screw clamp
0TB103.91	Connector 24 V 5.08 3-pin cage clamp

3-pin, male

+ 24 VDC supply voltage




Table 10: 24 VDC supply voltage connection

#### 2.6.1.1 Grounding

### Caution!

The functional ground (pin 2) must be connected to ground (e.g. control cabinet) using the shortest possible path. Using the largest possible conductor cross section on the supply connector is recommended.

The ground connection is located at the top right on the back of the PPC800 system.

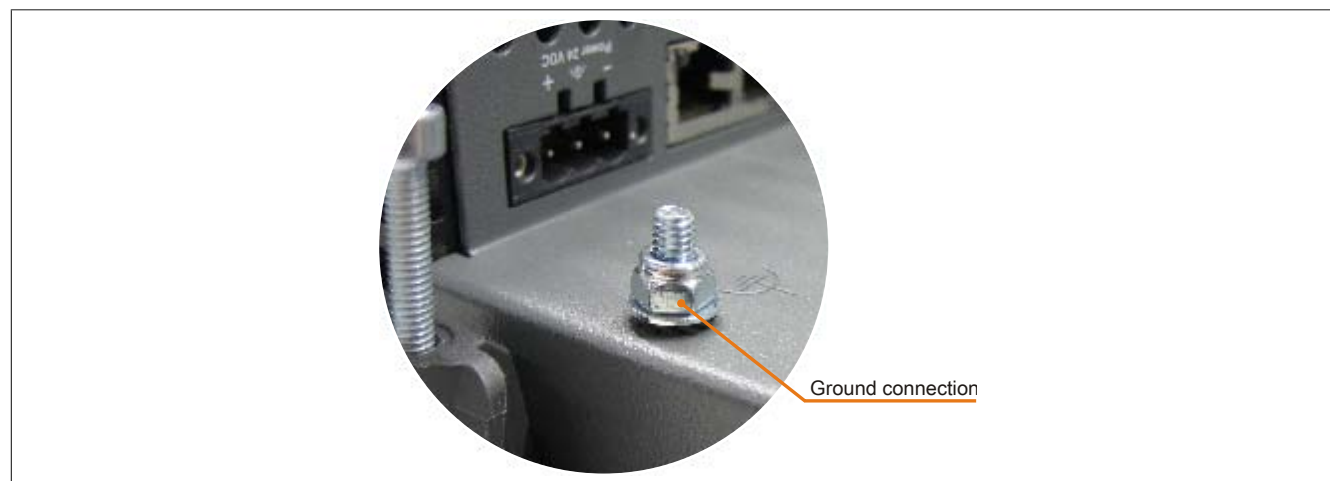


Figure 11: Ground connection

The M4 self-locking nut can be used, for example, to fasten a copper strip to a central grounding point in the control cabinet or system where the PPC800 is installed. The largest possible conductor cross section should be used (at least 2.5 mm<sup>2</sup>).

## 2.6.2 Monitor/Panel interface - SDL (Smart Display Link / DVI)

Monitor/Panel interface - SDL (Smart Display Link) / DVI		
The following is an overview of the video signals available on the monitor/panel output. For details, see the technical data for the CPU board being used.		
CPU board	Video signals with all system unit variants	
5PC800.BM45-00	RGB, DVI, SDL	
5PC800.BM45-01	RGB, DVI, SDL	



Table 11: Monitor/Panel interface - RGB, DVI, SDL

### 2.6.2.1 Pinout

Pin	Assignment	Description	Pin	Assignment	Description
1	TMDS data 2-	DVI lane 2 (negative)	16	HPD	Hot plug detect
2	TMDS data 2+	DVI lane 2 (positive)	17	TMDS data 0-	DVI lane 0 (negative)
3	TMDS data 2/4 SHIELD	Shield for data pair 2 and 4	18	TMDS data 0+	DVI lane 0 (positive)
4	SDL-	SDL lane (negative)	19	TMDS Data 0/ XUSB1 SHIELD	Shield for data pair 0 and USB1
5	SDL+	SDL lane (positive)	20	XUSB1-	USB lane 1 (negative)
6	DDC clock	DDC-based control signal (clock)	21	XUSB1+	USB lane 1 (positive)
7	DDC data	DDC-based control signal (data)	22	TMDS clock shield	Shield for clock pair
8	NC	Not connected	23	TMDS clock+	DVI clock (positive)
9	TMDS data 1-	DVI lane 1 (negative)	24	TMDS clock -	DVI clock (negative)
10	TMDS DATA 1+	DVI lane 1 (negative) HDMI clock (positive)	C1	ANALOG RED	Analog red
11	TMDS DATA 1/ XUSB0 SHIELD	Shield for data pair 1 and USB0	C2	ANALOG GREEN	Analog green
12	XUSB0-	USB lane 0 (negative)	C3	ANALOG BLUE	Analog blue
13	XUSB0+	USB lane 0 (positive)	C4	ANALOG HORZ SYNC	Analog horizontal synchronization
14	+5 V power <sup>1)</sup>	+5 V power supply	C5	ANALOG GND	Analog ground (return for R, G and B signals)
15	Ground (return for +5 V, HSync and VSync)	Ground			

DVI 24-pin, female

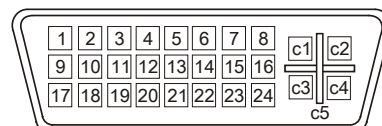


Table 12: DVI interface - Pinout

1) Protected internally by a multifuse.

### 2.6.2.2 Cable lengths and resolutions for SDL transmission

The following table lists the relationship between segment lengths and maximum resolution depending on the SDL cable being used:

SDL cables Segment length [m]	Resolution					
	VGA 640 x 480	SVGA 800 x 600	XGA 1024 x 768	SXGA 1280 x 1024	UXGA 1600 x 1200	FHD 1920 x 1080
1.8	5CASDL.0018-00 5CASDL.0018-01 5CASDL.0018-03	5CASDL.0018-00 5CASDL.0018-01 5CASDL.0018-03	5CASDL.0018-00 5CASDL.0018-01 5CASDL.0018-03	5CASDL.0018-00 5CASDL.0018-01 5CASDL.0018-03	5CASDL.0018-00 5CASDL.0018-01 5CASDL.0018-03	5CASDL.0018-00 5CASDL.0018-01 5CASDL.0018-03
5	5CASDL.0050-00 5CASDL.0050-01 5CASDL.0050-03	5CASDL.0050-00 5CASDL.0050-01 5CASDL.0050-03	5CASDL.0050-00 5CASDL.0050-01 5CASDL.0050-03	5CASDL.0050-00 5CASDL.0050-01 5CASDL.0050-03	5CASDL.0050-00 5CASDL.0050-01 5CASDL.0050-03	5CASDL.0050-00 5CASDL.0050-01 5CASDL.0050-03
10	5CASDL.0100-00 5CASDL.0100-01 5CASDL.0100-03	5CASDL.0100-00 5CASDL.0100-01 5CASDL.0100-03	5CASDL.0100-00 5CASDL.0100-01 5CASDL.0100-03	5CASDL.0100-00 5CASDL.0100-01 5CASDL.0100-03	5CASDL.0100-00 5CASDL.0100-01 5CASDL.0100-03	5CASDL.0100-00 5CASDL.0100-01 5CASDL.0100-03
15	5CASDL.0150-00 5CASDL.0150-01 5CASDL.0150-03	5CASDL.0150-00 5CASDL.0150-01 5CASDL.0150-03	5CASDL.0150-00 5CASDL.0150-01 5CASDL.0150-03	5CASDL.0150-00 5CASDL.0150-01 5CASDL.0150-03	- - -	- - 5CASDL.0150-03
20	5CASDL.0200-00 5CASDL.0200-03	5CASDL.0200-00 5CASDL.0200-03	5CASDL.0200-00 5CASDL.0200-03	5CASDL.0200-00 5CASDL.0200-03	- -	- 5CASDL.0200-03
25	5CASDL.0250-00 5CASDL.0250-03	5CASDL.0250-00 5CASDL.0250-03	5CASDL.0250-00 5CASDL.0250-03	- -	- -	- -
30	5CASDL.0300-00 5CASDL.0300-03	5CASDL.0300-00 5CASDL.0300-03	- 5CASDL.0300-13	- 5CASDL.0300-13	- -	- 5CASDL.0300-13
40	5CASDL.0400-13	5CASDL.0400-13	5CASDL.0400-13	5CASDL.0400-13	-	5CASDL.0400-13

Table 13: Cable lengths and resolutions for SDL transmission

### 2.6.2.3 Cable lengths and resolutions for DVI transmission

The following table lists the relationship between segment lengths and maximum resolution depending on the DVI cable being used:

DVI cables Segment length [m]	Resolution					
	VGA 640 x 480	SVGA 800 x 600	XGA 1024 x 768	SXGA 1280 x 1024	UXGA 1600 x 1200	FHD 1920 x 1080
1.8	5CADVI.0018-00	5CADVI.0018-00	5CADVI.0018-00	5CADVI.0018-00	5CADVI.0018-00	5CADVI.0018-00
5	5CADVI.0050-00	5CADVI.0050-00	5CADVI.0050-00	5CADVI.0050-00	5CADVI.0050-00	5CADVI.0050-00

Table 14: Cable lengths and resolutions for DVI transmission

### 2.6.3 COM1 serial interface

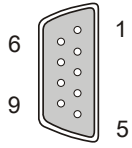
COM1 serial interface <sup>1)</sup>		
	RS232	<p>9-pin male DSUB connector</p> 
Type	RS232, modem-capable, not electrically isolated	
UART	16550-compatible, 16-byte FIFO	
Transfer rate	Max. 115 kbaud	
Cable length	Max. 15 meters	
Pin	Assignment	
1	DCD	
2	RXD	
3	TXD	
4	DTR	
5	GND	
6	DSR	
7	RTS	
8	CTS	
9	RI	

Table 15: COM1 - Pinout


- 1) The interfaces, etc. available on the device or module have been numbered as such for easy identification. This numbering may differ from that used by the particular operating system.

## 2.6.4 Ethernet 1 (ETH1)

This Ethernet controller is integrated in the CPU board and connected to external devices via the system unit.

Ethernet 1 interface (ETH1) <sup>1)</sup>		
Controller	Intel 82567	
Cabling	S/STP (Cat 5e)	
Transfer rate	10/100/1000 Mbit/s <sup>2)</sup>	
Cable length	Max. 100 m (min. Cat 5e)	
<b>Speed LED</b>	<b>On</b>	<b>Off</b>
Green	100 Mbit/s	10 Mbit/s <sup>3)</sup>
Orange	1000 Mbit/s	-
<b>Link LED</b>	<b>On</b>	<b>Off</b>
Orange	Link (Ethernet network connection available)	Activity (blinking) (Data transfer in progress)

RJ45 twisted pair (10BaseT/100BaseT), female

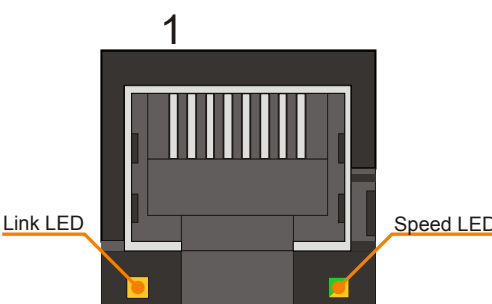

The diagram shows a top-down view of the Ethernet 1 interface. A large number '1' is positioned above the RJ45 port. The port is a standard female RJ45 connector. Below the port, there are two LEDs. The left LED is labeled 'Link LED' with an orange line pointing to it. The right LED is labeled 'Speed LED' with an orange line pointing to it. The Link LED is shown as a small orange square, and the Speed LED is shown as a small green square.

Table 16: Ethernet interface (ETH1)

- 1) The interfaces, etc. available on the device or module have been numbered as such for easy identification. This numbering may differ from that used by the particular operating system.
- 2) Switching takes place automatically.
- 3) The 10 Mbit/s transfer speed / connection only exists if the Link LED is also lit at the same time.

### Driver support

A special driver is required in order to operate the Intel 82567 Ethernet controller. Drivers for approved operating systems are available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

### Information:


Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

## 2.6.5 Ethernet 2 (ETH2)

This Ethernet controller is integrated in the mainboard and connected to external devices via the system unit.

Ethernet 2 interface (ETH2 <sup>1)</sup> )		
Controller	Intel 82574	
Cabling	S/STP (Cat 5e)	
Transfer rate	10/100/1000 Mbit/s <sup>2)</sup>	
Cable length	Max. 100 m (min. Cat 5e)	
<b>Speed LED</b>	<b>On</b>	<b>Off</b>
Green	100 Mbit/s	10 Mbit/s <sup>3)</sup>
Orange	1000 Mbit/s	-
<b>Link LED</b>	<b>On</b>	<b>Off</b>
Orange	Link (Ethernet network connection available)	Activity (blinking) (Data transfer in progress)

RJ45 twisted pair (10BaseT/100BaseT), female

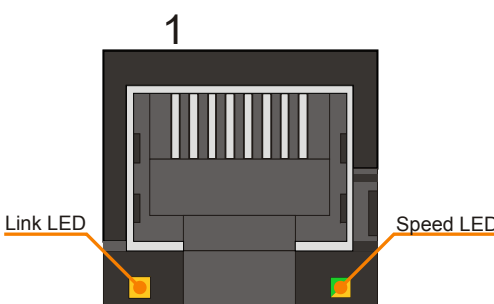

The diagram shows a top-down view of an RJ45 port. Above the port is the number '1'. The port itself is a rectangular socket with eight vertical pins. Below the pins are two LEDs: a yellow one on the left and a green one on the right. An orange line points from the text 'Link LED' to the yellow LED, and another orange line points from the text 'Speed LED' to the green LED.

Table 17: Ethernet interface (ETH2)

- 1) The interfaces, etc. available on the device or module have been numbered as such for easy identification. This numbering may differ from that used by the particular operating system.
- 2) Switching takes place automatically.
- 3) The 10 Mbit/s transfer speed / connection only exists if the Link LED is also lit at the same time.

### Driver support

A special driver is required in order to operate the Intel 82574 Ethernet controller. Drivers for approved operating systems are available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

### Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.



## 2.6.6 USB interfaces (USB1, 2, 3, 4, 5)

The PPC800 features a USB 2.0 (Universal Serial Bus) host controller with multiple USB ports, 5 of which are accessible externally for the user.

### Warning!

Peripheral USB devices can be connected to the USB ports on this device. Due to the vast number of USB devices available on the market, B&R cannot guarantee their performance. B&R does ensure the performance of all USB devices that they provide.

### Caution!

Because this interface is designed according to general PC specifications, extreme care should be exercised with regard to EMC, cable routing, etc.

### USB1,2,3,4

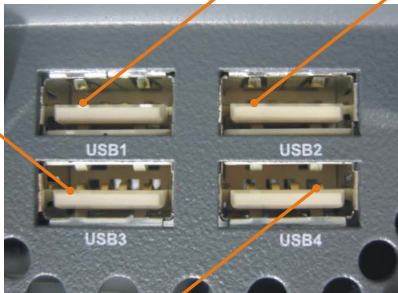
Universal Serial Bus (USB1, USB2, USB3, USB4 <sup>1)</sup> )		4x USB type A, female
Type	USB 2.0	
Design	Type A	
Transfer rate	Low speed (1.5 Mbit/s), full speed (12 Mbit/s), high speed (480 Mbit/s)	
Current load <sup>2)</sup> USB1, USB3 USB2, USB4	Max. 1 A Max. 500 mA	
Cable length	Max. 5 m (without hub)	

Table 18: USB1, USB2, USB3 and USB4 interfaces

- 1) The interfaces, etc. available on the device or module have been numbered as such for easy identification. This numbering may differ from that used by the particular operating system.
- 2) Each USB port is protected by a maintenance-free "USB current-limiting circuit breaker" (max. 500 mA or 1 A).

### USB5

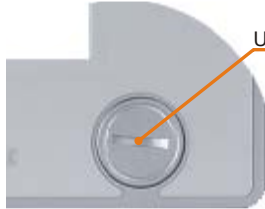
Universal Serial Bus (USB5 <sup>1)</sup> )		1x USB type A, female
Type	USB 2.0	
Design	Type A	
Transfer rate	Low speed (1.5 Mbit/s), full speed (12 Mbit/s), high speed (480 Mbit/s)	
Current load <sup>2)</sup> USB5	Max. 1 A	
Cable length	Max. 5 m (without hub)	

Table 19: USB5 interface

- 1) The interfaces, etc. available on the device or module have been numbered as such for easy identification. This numbering may differ from that used by the particular operating system.
- 2) Each USB port is protected by a maintenance-free "USB current-limiting circuit breaker" (max. 1 A).

2.6.7 CompactFlash slot 1

This CompactFlash slot is a standard component on an PPC800 system and internally connected with the chipset via SATA to PATA bridge. Type I CompactFlash cards are supported.

CompactFlash slot (CF1)	
Connection	SATA to PATA
CompactFlash Type	Type I
Model number	Short description
CompactFlash	
5CFCRD.0512-06	CompactFlash 512 MB B&R
5CFCRD.1024-06	CompactFlash 1024 MB B&R
5CFCRD.2048-06	CompactFlash 2048 MB B&R
5CFCRD.4096-06	CompactFlash 4096 MB B&R
5CFCRD.8192-06	CompactFlash 8192 MB B&R
5CFCRD.016G-06	CompactFlash 16 GB B&R
5CFCRD.032G-06	CompactFlash 32 GB B&R




Table 20: CompactFlash slot (CF1)

Warning!

Power must be turned off before inserting or removing CompactFlash cards.

2.6.8 CompactFlash Slot 2

Since the Intel GM45 chipset used on 5PC800.BM45-0x systems no longer supports an IDE (PATA) channel, the CF2 slot is not supported.

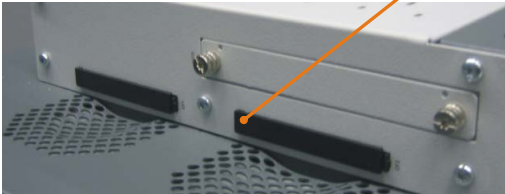
CompactFlash slot (CF2)
<div></div>

Table 21: CompactFlash slot (CF2)

Warning!

Power must be turned off before inserting or removing CompactFlash cards.

## 2.6.9 MIC, Line IN, Line OUT

All PPC800 systems include an HDA-compatible sound chip with access to the MIC, Line IN and Line OUT channels from the outside.


MIC, Line IN, Line OUT		
Controller	Realtek ALC 662	3.5 mm jack, female 
MIC	Connection of a mono microphone with a 3.5 mm jack	
Line IN	Stereo Line IN signal supplied via a 3.5 mm jack	
Line OUT	Connection of a stereo playback device (e.g. amplifier) via a 3.5 mm jack	

Table 22: MIC, Line IN, Line OUT

## Driver support

A special driver is required in order to operate the audio controller. Drivers for approved operating systems are available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

### Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

## 2.6.10 Add-on UPS slot

An optional Automation PC add-on UPS module can be installed in this slot.


Add-on UPS slot		
<b>Pinout with installed add-on UPS module</b>		
1	+	
2	+	
3	-	
4	-	
5	NTC (for battery temperature measurement)	
6	NTC (for battery temperature measurement)	
<b>Model number</b>	<b>Short description</b>	
	<b>Uninterruptible power supply</b>	
5AC600.UPSI-00	Add-on UPS module	
5AC600.UPSB-00	Battery unit 5 Ah	
5CAUPS.0005-00	UPS cable 0.5 m	
5CAUPS.0030-00	UPS cable 3 m	

Table 23: Add-on UPS slot

For additional information about the UPS module, see "Accessories" on page 252.

2.6.11 Power button

The power button provides a wide range of ATX power supply functions.

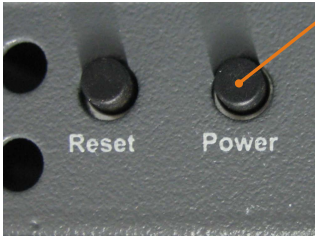
Power button	
<p>The power button acts like the on/off switch on a normal desktop PC with an ATX power supply:</p> <p><b>Press and release</b> ... Switches on the PPC800 or shuts down the operating system and switches off the PPC800</p> <p><b>Press and hold</b> ... Switches off the ATX power supply without shutting down the PPC800 (<b>data could be lost!</b>)</p> <p>Pressing the power button does not reset the MTCX processor.</p>	

Table 24: Power button

2.6.12 Reset button


Reset button	
<p>Pushing the reset button triggers a hardware and PCI reset. The PPC800 is restarted (cold restart).</p> <p>Pressing the reset button does not reset the MTCX processor.</p>	

Table 25: Reset button

**Warning!**

**A system reset can result in lost data!**

## 2.6.13 LED status indicators

LED status indicators are located on the back of the system unit.

LED status indicators			
LED	Color	Status	Description
Power	Green	On	Supply voltage OK
	Red	On	System in standby mode (S5: Soft-off mode, S4: Hibernate mode - suspend-to-disk or S3: Suspend-to-RAM)
	Orange <sup>1)</sup>	On	Supply voltage not OK, system operating on battery power
	Red / green	Blinking	Service function for MTCX upgrade: A red/green blinking power LED indicates a faulty or incomplete MTCX upgrade. The MTCX runs using the firmware version installed when delivered. This could be caused by a power failure during an MTCX upgrade. An MTCX upgrade must be performed again.
HDD	Yellow	On	Indicates IDE drive access (CF, HDD, CD, etc.)
Link	Yellow	On	Indicates an active SDL connection on the monitor/panel interface
		Blinking	Indicates that an active SDL connection has been interrupted by a loss of power to the display unit
Run	Green	On	Application running
		Off	Application not running

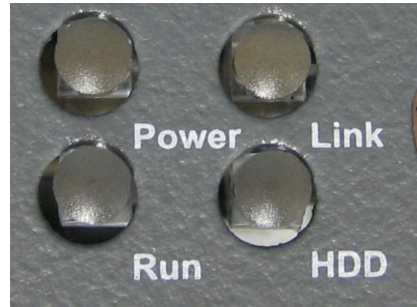


Table 26: LED status indicators

1) Only lit when an add-on UPS module is installed.

## 2.6.14 CMOS profile switch

CMOS profile switch	
Different BIOS default value profiles can be specified using the 16-position CMOS profile switch.	
Switch position	Description
0	Profile 0: Reserved for default profile
1	Profile 1: Optimized for system units 5PC810.SX01-00, 5PC810.SX02-00 and 5PC810.SX03-00
2	Profile 2: Optimized for 5PC810.SX05-00 system unit
3	Profile 3: Optimized for system units 5PC820.SX01-00 and 5PC820.SX01-01
4	Profile 4: Reserved
5	<b>Profile 5: Optimized for system units 5PC820.1505-00 and 5PC820.1906-00</b>



Table 27: CMOS profile switch

### Information:

The factory default switch position represents the optimal BIOS default values for this system and should therefore not be changed.

The position of the CMOS profile switch is displayed in BIOS Setup and in the B&R ADI Control Center (among other places).

## 2.6.15 Battery

The lithium battery (3 V, 950 mAh) buffers the internal real-time clock (RTC) and individually stored BIOS settings. It is located behind the black cover on the front of the device. The battery's buffer lifespan is at least 2½ years (at 50°C, 8.5 µA for the components being supplied and a self-discharge of 40%). The battery has a limited service life and should be replaced regularly (after the specified service life at the latest).

Battery	
Battery Type	Renata 950 mAh
Removable	Yes, accessible from the outside
Service life	2½ years <sup>1)</sup>
Model number	Short description
Batteries	
0AC201.91	Lithium batteries, 4 pcs., 3 V / 950 mAh, button cell
4A0006.00-000	Lithium battery, 1 pc., 3 V / 950 mAh, button cell

Battery




Table 28: Battery

1) At 50°C, 8.5 µA of the supplied components and a self-discharge of 40%.

### Evaluating the battery status

The status of the battery is determined immediately after the device is started and subsequently checked by the system every 24 hours. During this measurement, the battery is subjected to a brief load (approximately 1 second) and then evaluated. Once determined, the battery status is displayed in BIOS (Advanced - OEM features - System board features - Voltage values) and in the B&R Control Center (ADI driver); it can also be read in a customer application using the ADI library.

Battery status	Description
N/A	The hardware or firmware being used is too old and does not support reading the battery status.
GOOD	Data buffering is intact.
BAD	From the point when battery capacity is recognized as insufficient (BAD), data buffering is intact for approximately another 500 hours.

Table 29: Battery status

From the point when battery capacity is recognized as insufficient, data buffering is intact for approximately another 500 hours. When replacing the battery, data is buffered for approximately 10 minutes by a gold leaf capacitor.

## 2.6.16 Slide-in compact slot

The internal connection between the slide-in compact slot and the chipset is made via SATA I.

Slide-in compact slot	
Connection	SATA I
Model number	Short description
Adapters	
5AC803.BC02-00	PPC800 1 slide-in compact adapter
Drives	
5AC801.HDDI-00	40 GB slide-in compact SATA hard disk, 24/7 operation with extended temperature range. Note: Please see the manual for information about using this hard disk.
5AC801.HDDI-02	160 GB SATA hard disk, slide-in compact, 24/7 operation with extended temperature range. Note: Please see the manual for information about using this hard disk.
5AC801.HDDI-03	250 GB slide-in compact SATA hard disk; 24/7 operation. Note: Please see the manual for information about using this hard disk.
5AC801.HDDI-04	500 GB slide-in compact SATA hard disk; 24/7 operation. Note: Please see the manual for information about using this hard disk.
5AC801.SSDI-00	32 GB SATA SSD (SLC), slide-in compact
5AC801.SSDI-01	60 GB SATA SSD (MLC), slide-in compact
5AC801.SSDI-02	180 GB SATA SSD (MLC), slide-in compact
5AC801.SSDI-03	60 GB SATA SSD (MLC), slide-in compact
5AC801.SSDI-04	128 GB SATA SSD (MLC), slide-in compact



Table 30: Slide-in compact slot

### Information:

The adapter 5AC803.BC02-00 is required for the use of slide-in compact drives.

### Information:

The SATA I interface allows disks to be replaced during operation (hot plugging). In order to take advantage of this capability, this feature must be supported by the operating system.

## 2.6.17 PClec slot (Card slot)

PClec slot	
Model number	Short description
Adapters	
5AC803.BC01-00	PPC800 1 PCI Express compact adapter
Plug-in cards	
5ACPCC.ETH0-00	Compact PCIe Ethernet card 1x 10/100/1000
5ACPCC.MPL0-00	PClec POWERLINK card, 2 POWERLINK interfaces, 512 kB SRAM

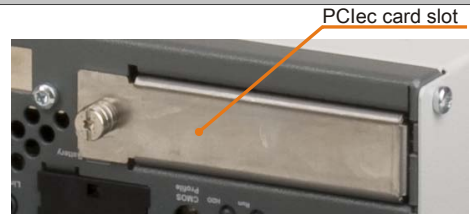


Table 31: PClec slot

### Information:

The adapter 5AC803.BC01-00 is required to use PClec plug-in cards.

### Information:

Only B&R PClec cards that have been specially designed for the Automation PC 820 and Panel PC 800 can be used.

For more information, see "PClec plug-in cards" on page 76.



### 3 Individual components

#### 3.1 System units

##### 3.1.1 5PC820.1505-00

###### 3.1.1.1 General information

- 15" TFT XGA color display
- Analog resistive touch screen
- Robust design
- Compact installation depth
- Fanless operation
- 1 optional PCI Express compact slot
- 1 optional slide-in compact slot
- Optional PCI and PCIe slots and optional slide-in drives, optional expansions available

###### 3.1.1.2 Order data

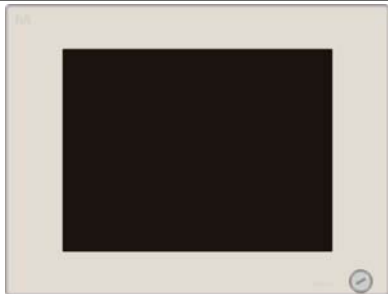
Model number	Short description	Figure
	<b>System units</b>	
5PC820.1505-00	Panel PC 820 15" XGA TFT display with touch screen (resistive); connections for 1x RS232, 5x USB 2.0, Smart Display Link/DVI/Monitor, 2x Ethernet 10/100/1000, HDA sound, add-on UPS slot, expandable with 1 or 2 PCI / PCI Express slots, optional CompactPCI Express and slide-in compact slot; IP65 protection (front); order 24 VDC connector for supply voltage separately (screw clamp: 0TB103.9; cage clamp: 0TB103.91)	
	<b>Required accessories</b>	
	<b>CPU boards</b>	
5PC800.BM45-00	Intel Core2 Duo T9400 CPU board, 2.53 GHz, dual core, 1066 MHz FSB, 6 MB L2 cache; GM45 chipset; 2 slots for SO-DIMM DDR3 modules	
5PC800.BM45-01	Intel Core2 Duo P8400 CPU board, 2.26 GHz, dual core, 1066 MHz FSB, 3 MB L2 cache; GM45 chipset; 2 slots for SO-DIMM DDR3 modules	
	<b>Terminal blocks</b>	
0TB103.9	Connector, 24 VDC, 3-pin female, 3.31 mm <sup>2</sup> screw clamp, protected against vibration by the screw flange	
0TB103.91	Connector, 24 VDC, 3-pin female, 3.31 mm <sup>2</sup> cage clamp, protected against vibration by the screw flange	
	<b>Main memory for GM45 CPU boards</b>	
5MMDDR.2048-02	SO-DIMM DDR3 RAM 2048 MB PC3-8500	
5MMDDR.4096-02	SO-DIMM DDR3 RAM 4096 MB PC3-8500	
	<b>Heat sinks</b>	
5AC803.HS00-01	PPC800 heat sink for CPU boards with T7400, T9400 or P8400 dual-core processor	
	<b>Fan kit</b>	
5AC803.FA01-00	PPC800 fan kit for system units without an expansion	
	<b>Optional accessories</b>	
	<b>Adapters</b>	
5AC803.BC01-00	1 compact PCI Express PPC800 adapter	
5AC803.BC02-00	1 compact slide-in PPC800 adapter	
	<b>Bus units</b>	
5AC803.BX01-00	PPC800 bus; 1 PCI, 1 slide-in slot	
5AC803.BX01-01	PPC800 bus; 1 PCI Express, 1 slide-in slot	
5AC803.BX02-00	PPC800 bus; 2 PCI, 1 slide-in slot	
5AC803.BX02-01	PPC800 bus; 1 PCI, 1 PCI Express, 1 slide-in slot	
	<b>Plug-in cards</b>	
5ACPCC.ETH0-00	Compact PCIe Ethernet card 1x 10/100/1000	
5ACPCC.MPL0-00	PCleC POWERLINK card, 2 POWERLINK interfaces, 512 kB SRAM	
	<b>Expansions</b>	
5AC803.SX01-00	PPC800 expansion; 1 PCI/PCI Express and 1 slide-in slot (bus 5AC803.BX01-00 or 5AC803.BX01-01 required)	
5AC803.SX02-00	PPC800 expansion; 2 PCI/PCI Express and 1 slide-in slot (bus 5AC803.BX02-00 or 5AC803.BX02-01 required)	
	<b>Drives</b>	
5AC801.ADAS-00	SATA hard disk adapter for operating a slide-in compact hard disk in a slide-in slot	

Table 32: 5PC820.1505-00 - Order data



Model number	Short description	Figure
5AC801.DVDS-00	DVD-ROM SATA slide-in drive	
5AC801.DVRS-00	DVD-R/RW DVD+R/RW SATA drive, slide-in	
5AC801.HDDI-00	40 GB slide-in compact SATA hard disk, 24/7 operation with extended temperature range. Note: Please see the manual for information about using this hard disk.	
5AC801.HDDI-04	500 GB slide-in compact SATA hard disk; 24/7 operation. Note: Please see the manual for information about using this hard disk.	
5AC801.HDDS-00	40 GB slide-in SATA hard disk; 24/7 operation with extended temperature range. Note: Please see the manual for information about using this hard disk.	
5AC801.SSDI-00	32 GB SATA SSD (SLC), slide-in compact	
5AC801.SSDI-03	60 GB SATA SSD (MLC), slide-in compact	
5AC801.SSDI-04	128 GB SATA SSD (MLC), slide-in compact	
	<b>Fan kit</b>	
5AC803.FA02-00	PPC800 fan kit for system units with expansion 5AC803.SX01-00	
5AC803.FA03-00	PPC800 fan kit for system units with expansion 5AC803.SX02-00	
	<b>Uninterruptible power supply</b>	
5AC600.UPSI-00	UPS module for APC620, APC810, PPC800; for system units 5PC600.SX01-00 (starting with Rev. H0), 5PC600.SX02-00 (starting with Rev. G0), 5PC600.SX02-01 (starting with Rev. H0), 5PC600.SX05-00 (starting with Rev. F0), 5PC600.SX05-01 (starting with Rev. F0), 5PC600.SF03-00 (starting with Rev. A0), 5PC810.SX*. 5PC820.1505-00, 5PC820.1906-00. Order cable (5CAUPS.0005-00 or 5CAUPS.0030-00) and battery unit (5AC600.UPSB-00) separately	

Table 32: 5PC820.1505-00 - Order data

### 3.1.1.3 Interfaces

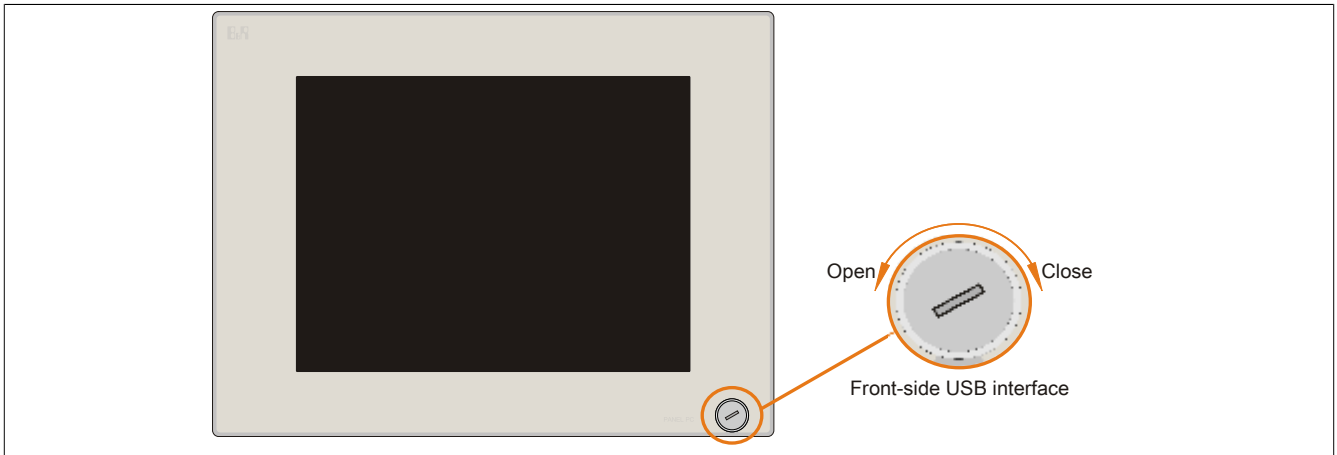


Figure 12: 5PC820.1505-00 - Front view

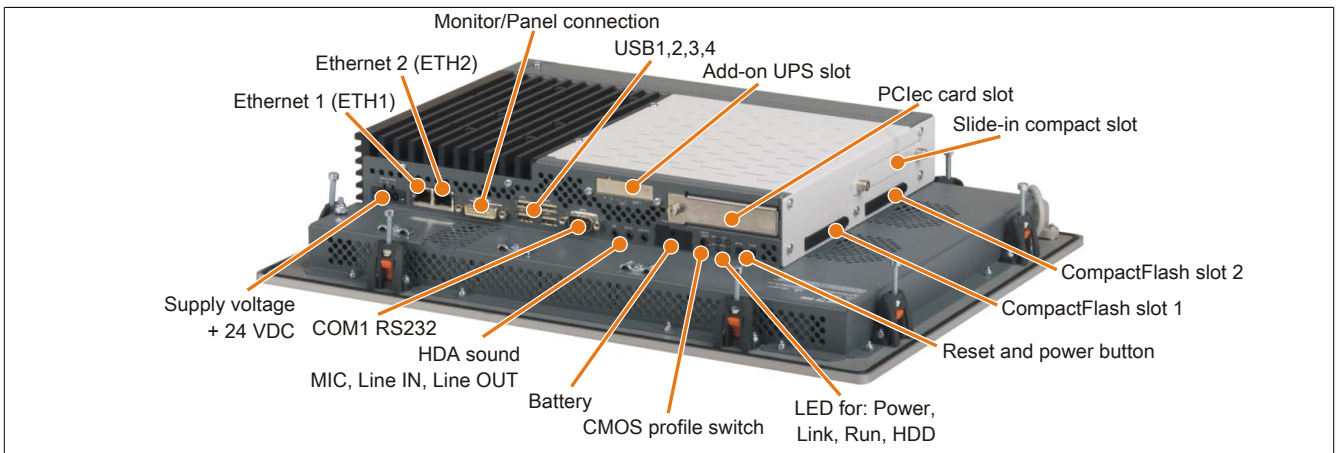


Figure 13: 5PC820.1505-00 - Rear view

## Warning!

Do not remove the fastening screws from the heat sink since this component is connected to the processor and chipset via a thermal coupling. If this connection is interrupted, the B&R Industrial PC must be sent back to the factory for repair. Removing the fastening screws (protected by a seal) voids all warranty.

During operation, surface temperatures of the heat sink may reach 70°C ("hot surface" warning).

### 3.1.1.4 Technical data

Product ID	5PC820.1505-00
<b>General information</b>	
LEDs	Power, HDD, Link, Run
B&R ID code	\$AF21
Battery	
Type	Renata 950 mAh
Service life	2½ years
Removable	Yes, accessible from the outside
Design	Lithium ion
Power button	Yes
Reset button	Yes
Buzzer	Yes
Certification	
CE	Yes
cULus	Yes
<b>Controller</b>	
Boot loader	BIOS
Power failure logic	
Controller	MTCX <sup>1)</sup>
Buffer time	10 ms

Table 33: 5PC820.1505-00 - Technical data

Product ID	5PC820.1505-00
Graphics Controller	Depends on the CPU board being used
Memory Type Size	Depends on the CPU board being used Depends on the CPU board being used
<b>Interfaces</b>	
COM1 Type Design UART Max. baud rate	RS232, modem-capable, not electrically isolated 9-pin male DSUB connector 16550-compatible, 16-byte FIFO 115 kbit/s
CompactFlash slot 1 Type	Type I
CompactFlash slot 2 Type	Type I
USB Quantity Type Design Transfer rate Current load	5 USB 2.0 Type A Low speed (1.5 Mbit/s), full speed (12 Mbit/s), high speed (480 Mbit/s) Max. 500 mA or 1 A per connection
Ethernet Quantity Design Transfer rate	2 Shielded RJ45 port 10/100/1000 Mbit/s
Audio Type Inputs Outputs	HDA sound Microphone, Line IN Line OUT
<b>Display</b>	
Type	Color TFT
Diagonal	15" (381 mm)
Colors	16 million
Resolution	XGA, 1024 x 768 pixels
Contrast	550:1
Viewing angles Horizontal Vertical	Direction R / Direction L = 60° Direction U = 45° / Direction D = 55°
Backlight Brightness Half-brightness time <sup>2)</sup>	250 cd/m <sup>2</sup> 50,000 h
Touch screen <sup>3)</sup> Type Technologies Controller Transmittance	AccuTouch Analog, resistive Elo, serial, 12-bit 81% ±3%
<b>Inserts</b>	
PCI slots Quantity	1 or 2 (optional) <sup>4)</sup>
PCIe slots Quantity	1 <sup>5)</sup>
PCIec slots Quantity	Optional <sup>6)</sup>
Slide-in drives	Depends on the component (on the expansion and bus unit being used)
Slide-in compact drives	Optional <sup>7)</sup>
Add-on UPS slot	Yes
Insert for fan kit	Yes
<b>Electrical characteristics</b>	
Nominal voltage	24 VDC ±25%
Nominal current	6 A
Starting current	Typ. 10 A, max. 50 A for <300 µs
Power consumption	Depends on the component
Electrical isolation	Yes
<b>Operating conditions</b>	
Height of drop	1 m on industrial surfaces (in original packaging)
Protection in accordance with EN 60529	Back: IP20 Front: IP65, dust and sprayed water protection
<b>Environmental conditions</b>	
Temperature Operation Storage Transport	Depends on the component -20 to 60°C -20 to 60°C

Table 33: 5PC820.1505-00 - Technical data

Product ID	5PC820.1505-00
Relative humidity	
Operation	10 to 85%, non-condensing
Storage	T ≤ 40°C: 5 to 90%, non-condensing T > 40°C: <90%, non-condensing
Transport	T ≤ 40°C: 5 to 90%, non-condensing T > 40°C: <90%, non-condensing
Vibration	
Operation (continuous)	2 to 9 Hz: 1.75 mm amplitude / 9 to 150 Hz: 0.5 g
Operation (occasional)	2 to 9 Hz: 3.5 mm amplitude / 9 to 150 Hz: 1 g
Storage	2 to 8 Hz: 7.5 mm amplitude / 8 to 200 Hz: 2 g / 200 to 500 Hz: 4 g
Transport	2 to 8 Hz: 7.5 mm amplitude / 8 to 200 Hz: 2 g / 200 to 500 Hz: 4 g
Shock	
Operation	15 g, 11 ms
Storage	30 g, 15 ms
Transport	30 g, 15 ms
<b>Mechanical characteristics</b>	
Housing	
Material	Metal
Front	
Frame	Naturally anodized aluminum
Design	Gray
Panel membrane	
Material	Polyester
Light background	Similar to Pantone 427CV
Gasket	Flat gasket around display front
Dimensions	
Width	435 mm
Height	330 mm
Depth	Depends on the component
Weight	5500 g (depends on the component)

Table 33: 5PC820.1505-00 - Technical data

- 1) Maintenance Controller Extended.
- 2) At an ambient temperature of 25°C. Reducing the brightness by 50% can result in an approximately 50% increase in the half-brightness time.
- 3) Touch screen drivers for approved operating systems are available in the Downloads section of the B&R website.
- 4) The PCI slots available depend on the expansion and bus unit being used.
- 5) The PCIe slots available depend on the expansion and bus unit being used.
- 6) Optional with PCIe adapter 5AC803.BC01-00.
- 7) Optional with slide-in compact adapter 5AC803.BC02-00.

3.1.1.5 Dimensions

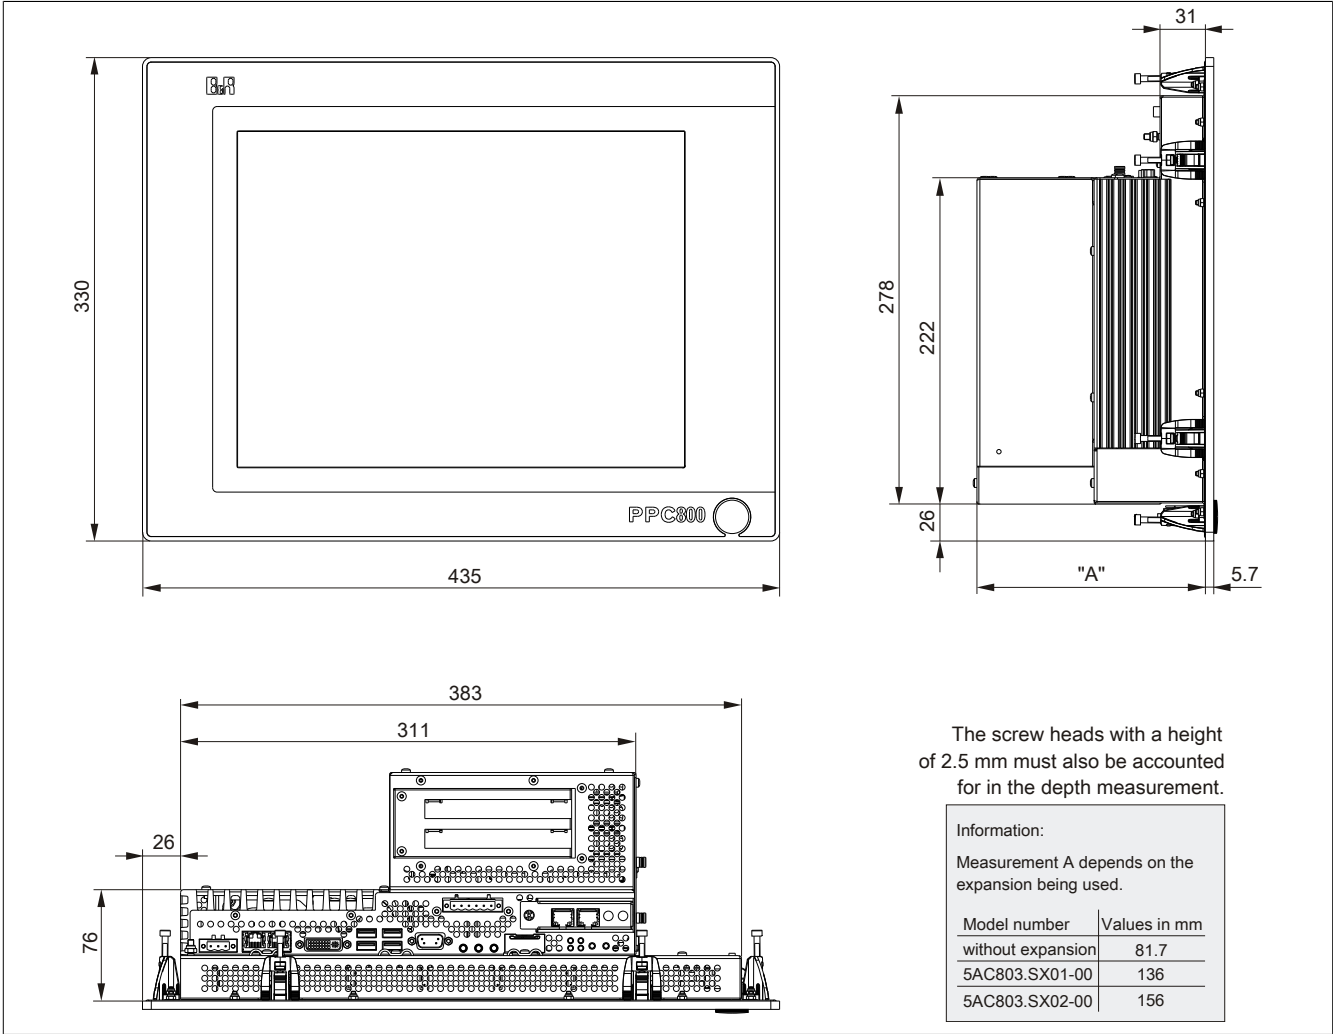


Figure 14: 5PC820.1505 - Dimensions

3.1.1.6 Cutout

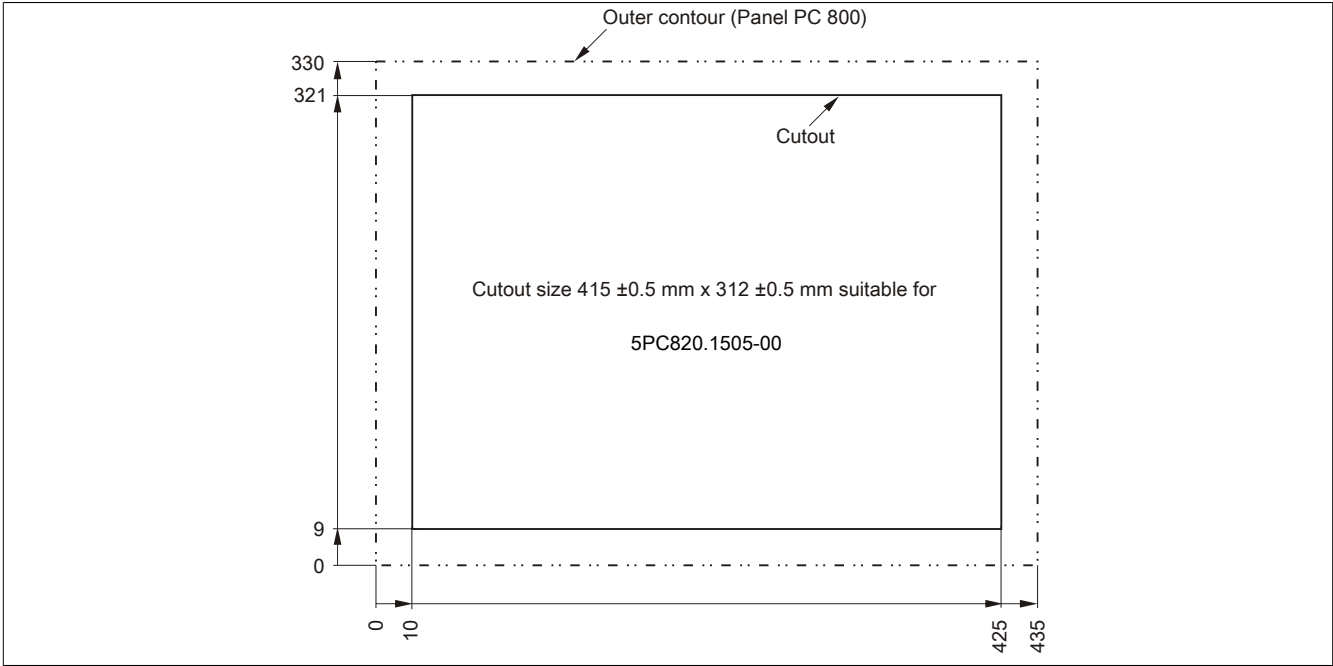


Figure 15: 5PC820.1505-00 - Cutout installation

### 3.1.2 5PC820.1906-00

#### 3.1.2.1 General information

- 19" TFT SXGA color display
- Analog resistive touch screen
- Robust design
- Compact installation depth
- Fanless operation
- 1 optional PCI Express compact slot
- 1 optional slide-in compact slot
- Optional PCI and PCIe slots and optional slide-in drives, optional expansions available

#### 3.1.2.2 Order data


Model number	Short description	Figure
	<b>System units</b>	
5PC820.1906-00	Panel PC 820 19" SXGA color TFT display with touch screen (resistive); connections for 1x RS232, 5x USB 2.0, Smart Display Link/DVI/Monitor, 2x Ethernet 10/100/1000, HDA sound, add-on UPS slot, expandable with 1 or 2 PCI / PCI Express slots, optional CompactPCI Express and slide-in compact slot; IP65 protection (front); order 24 VDC connector for supply voltage separately (screw clamp: 0TB103.9; cage clamp: 0TB103.91)	
	<b>Required accessories</b>	
	<b>CPU boards</b>	
5PC800.BM45-00	Intel Core2 Duo T9400 CPU board, 2.53 GHz, dual core, 1066 MHz FSB, 6 MB L2 cache; GM45 chipset; 2 slots for SO-DIMM DDR3 modules	
5PC800.BM45-01	Intel Core2 Duo P8400 CPU board, 2.26 GHz, dual core, 1066 MHz FSB, 3 MB L2 cache; GM45 chipset; 2 slots for SO-DIMM DDR3 modules	
	<b>Terminal blocks</b>	
0TB103.9	Connector, 24 VDC, 3-pin female, 3.31 mm² screw clamp, protected against vibration by the screw flange	
0TB103.91	Connector, 24 VDC, 3-pin female, 3.31 mm² cage clamp, protected against vibration by the screw flange	
	<b>Main memory for GM45 CPU boards</b>	
5MMDDR.2048-02	SO-DIMM DDR3 RAM 2048 MB PC3-8500	
5MMDDR.4096-02	SO-DIMM DDR3 RAM 4096 MB PC3-8500	
	<b>Heat sinks</b>	
5AC803.HS00-01	PPC800 heat sink for CPU boards with T7400, T9400 or P8400 dual-core processor	
	<b>Fan kit</b>	
5AC803.FA01-00	PPC800 fan kit for system units without an expansion	
	<b>Optional accessories</b>	
	<b>Adapters</b>	
5AC803.BC01-00	1 compact PCI Express PPC800 adapter	
5AC803.BC02-00	1 compact slide-in PPC800 adapter	
	<b>Bus units</b>	
5AC803.BX01-00	PPC800 bus; 1 PCI, 1 slide-in slot	
5AC803.BX01-01	PPC800 bus; 1 PCI Express, 1 slide-in slot	
5AC803.BX02-00	PPC800 bus; 2 PCI, 1 slide-in slot	
5AC803.BX02-01	PPC800 bus: 1 PCI, 1 PCI Express, 1 slide-in slot	
	<b>Plug-in cards</b>	
5ACPCC.ETH0-00	Compact PCIe Ethernet card 1x 10/100/1000	
5ACPCC.MPL0-00	PCleC POWERLINK card, 2 POWERLINK interfaces, 512 kB SRAM	
	<b>Expansions</b>	
5AC803.SX01-00	PPC800 expansion; 1 PCI/PCI Express and 1 slide-in slot (bus 5AC803.BX01-00 or 5AC803.BX01-01 required)	
5AC803.SX02-00	PPC800 expansion; 2 PCI/PCI Express and 1 slide-in slot (bus 5AC803.BX02-00 or 5AC803.BX02-01 required)	
	<b>Drives</b>	
5AC801.ADAS-00	SATA hard disk adapter for operating a slide-in compact hard disk in a slide-in slot	
5AC801.DVDS-00	DVD-ROM SATA slide-in drive	
5AC801.DVRS-00	DVD-R/RW DVD+R/RW SATA drive, slide-in	
5AC801.HDDI-00	40 GB slide-in compact SATA hard disk, 24/7 operation with extended temperature range. Note: Please see the manual for information about using this hard disk.	

Table 34: 5PC820.1906-00 - Order data

Model number	Short description	Figure
5AC801.HDDI-04	500 GB slide-in compact SATA hard disk; 24/7 operation. Note: Please see the manual for information about using this hard disk.	
5AC801.HDDS-00	40 GB slide-in SATA hard disk; 24/7 operation with extended temperature range. Note: Please see the manual for information about using this hard disk.	
5AC801.SSDI-00	32 GB SATA SSD (SLC), slide-in compact	
5AC801.SSDI-03	60 GB SATA SSD (MLC), slide-in compact	
5AC801.SSDI-04	128 GB SATA SSD (MLC), slide-in compact	
	<b>Fan kit</b>	
5AC803.FA02-00	PPC800 fan kit for system units with expansion 5AC803.SX01-00	
5AC803.FA03-00	PPC800 fan kit for system units with expansion 5AC803.SX02-00	
	<b>Uninterruptible power supply</b>	
5AC600.UPSI-00	UPS module for APC620, APC810, PPC800; for system units 5PC600.SX01-00 (starting with Rev. H0), 5PC600.SX02-00 (starting with Rev. G0), 5PC600.SX02-01 (starting with Rev. H0), 5PC600.SX05-00 (starting with Rev. F0), 5PC600.SX05-01 (starting with Rev. F0), 5PC600.SF03-00 (starting with Rev. A0), 5PC810.SX*, 5PC820.1505-00, 5PC820.1906-00. Order cable (5CAUPS.0005-00 or 5CAUPS.0030-00) and battery unit (5AC600.UPSB-00) separately	

Table 34: 5PC820.1906-00 - Order data

### 3.1.2.3 Interfaces

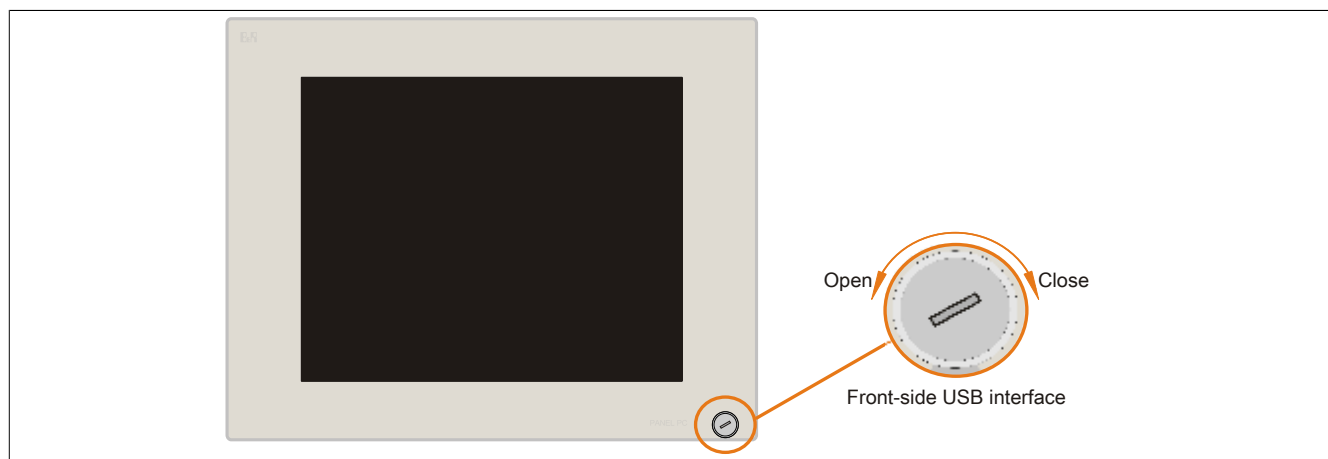


Figure 16: 5PC820.1906-00 - Front view

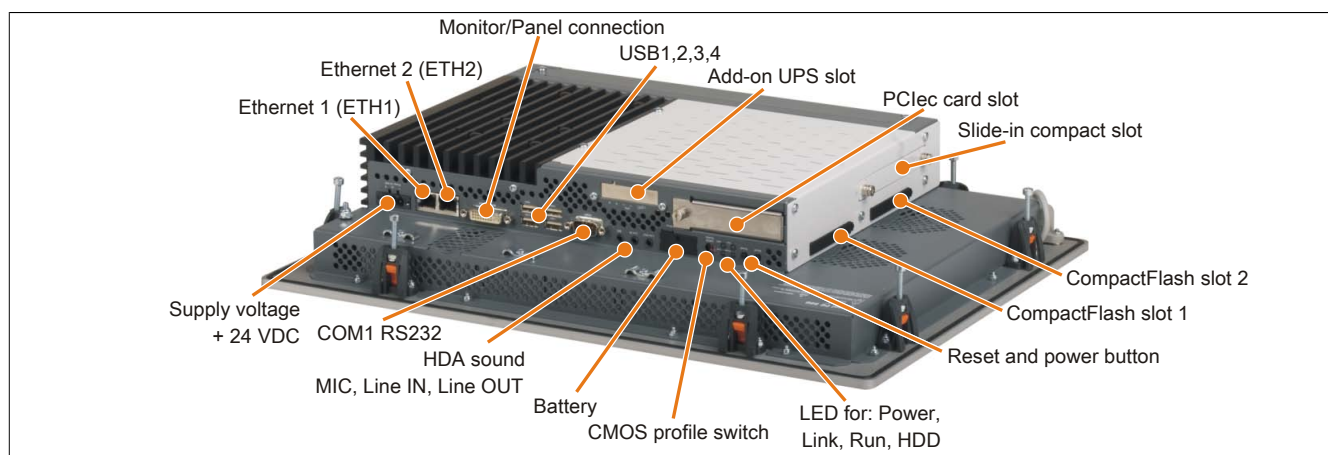


Figure 17: 5PC820.1906-00 - Rear view

## Warning!

Do not remove the fastening screws from the heat sink since this component is connected to the processor and chipset via a thermal coupling. If this connection is interrupted, the B&R Industrial PC must be sent back to the factory for repair. Removing the fastening screws (protected by a seal) voids all warranty.

During operation, surface temperatures of the heat sink may reach 70°C ("hot surface" warning).

### 3.1.2.4 Technical data

Product ID	5PC820.1906-00
General information	
LEDs	Power, HDD, Link, Run
B&R ID code	\$AF22
Battery	
Type	Renata 950 mAh
Service life	2½ years
Removable	Yes, accessible from the outside
Design	Lithium ion
Power button	Yes
Reset button	Yes
Buzzer	Yes
Certification	
CE	Yes
cULus	Yes
Controller	
Boot loader	BIOS
Power failure logic	
Controller	MTCX <sup>1)</sup>
Buffer time	10 ms

Table 35: 5PC820.1906-00 - Technical data



Product ID	5PC820.1906-00
Graphics Controller	Depends on the CPU board being used
Memory Type Size	Depends on the CPU board being used Depends on the CPU board being used
<b>Interfaces</b>	
COM1 Type Design UART Max. baud rate	RS232, modem-capable, not electrically isolated 9-pin male DSUB connector 16550-compatible, 16-byte FIFO 115 kbit/s
CompactFlash slot 1 Type	Type I
CompactFlash slot 2 Type	Type I
USB Quantity Type Design Transfer rate Current load	5 USB 2.0 Type A Low speed (1.5 Mbit/s), full speed (12 Mbit/s), high speed (480 Mbit/s) Max. 500 mA or 1 A per connection
Ethernet Quantity Design Transfer rate	2 Shielded RJ45 port 10/100/1000 Mbit/s
Audio Type Inputs Outputs	HDA sound Microphone, Line IN Line OUT
<b>Display</b>	
Type	Color TFT
Diagonal	19" (480 mm)
Colors	16 million
Resolution	SXGA, 1280 x 1024 pixels
Contrast	900:1
Viewing angles Horizontal Vertical	Direction R / Direction L = 85° Direction U / Direction D = 85°
Backlight Brightness Half-brightness time <sup>2)</sup>	300 cd/m <sup>2</sup> 50,000 h
Touch screen <sup>3)</sup> Type Technologies Controller Transmittance	AccuTouch Analog, resistive Elo, serial, 12-bit 81% ±3%
<b>Inserts</b>	
PCI slots Quantity	1 or 2 (optional) <sup>4)</sup>
PCIe slots Quantity	1 <sup>5)</sup>
PCIe slots Quantity	Optional <sup>6)</sup>
Slide-in drives	Depends on the component (on the expansion and bus unit being used)
Slide-in compact drives	Optional <sup>7)</sup>
Add-on UPS slot	Yes
Insert for fan kit	Yes
<b>Electrical characteristics</b>	
Nominal voltage	24 VDC ±25%
Nominal current	6 A
Starting current	Typ. 10 A, max. 50 A for <300 µs
Power consumption	Depends on the component
Electrical isolation	Yes
<b>Operating conditions</b>	
Height of drop	1 m on industrial surfaces (in original packaging)
Protection in accordance with EN 60529	Back: IP20 Front: IP65, dust and sprayed water protection
<b>Environmental conditions</b>	
Temperature Operation Storage Transport	Depends on the component -20 to 60°C -20 to 60°C

Table 35: 5PC820.1906-00 - Technical data

Product ID	5PC820.1906-00
Relative humidity	
Operation	10 to 85%, non-condensing
Storage	T ≤ 40°C: 5 to 90%, non-condensing T > 40°C: <90%, non-condensing
Transport	T ≤ 40°C: 5 to 90%, non-condensing T > 40°C: <90%, non-condensing
Vibration	
Operation (continuous)	2 to 9 Hz: 1.75 mm amplitude / 9 to 150 Hz: 0.5 g
Operation (occasional)	2 to 9 Hz: 3.5 mm amplitude / 9 to 150 Hz: 1 g
Storage	2 to 8 Hz: 7.5 mm amplitude / 8 to 200 Hz: 2 g / 200 to 500 Hz: 4 g
Transport	2 to 8 Hz: 7.5 mm amplitude / 8 to 200 Hz: 2 g / 200 to 500 Hz: 4 g
Shock	
Operation	15 g, 11 ms
Storage	30 g, 15 ms
Transport	30 g, 15 ms
Mechanical characteristics	
Housing	
Material	Metal
Front	
Frame	Naturally anodized aluminum
Design	Gray
Panel membrane	
Material	Polyester
Light background	Similar to Pantone 427CV
Gasket	Flat gasket around display front
Dimensions	
Width	527 mm
Height	421 mm
Depth	Depends on the component
Weight	10000 g (depends on the component)

Table 35: 5PC820.1906-00 - Technical data

- 1) Maintenance Controller Extended.
- 2) At an ambient temperature of 25°C. Reducing the brightness by 50% can result in an approximately 50% increase in the half-brightness time.
- 3) Touch screen drivers for approved operating systems are available in the Downloads section of the B&R website.
- 4) The PCI slots available depend on the expansion and bus unit being used.
- 5) The PCIe slots available depend on the expansion and bus unit being used.
- 6) Optional with PCIe adapter 5AC803.BC01-00.
- 7) Optional with slide-in compact adapter 5AC803.BC02-00.

3.1.2.5 Dimensions

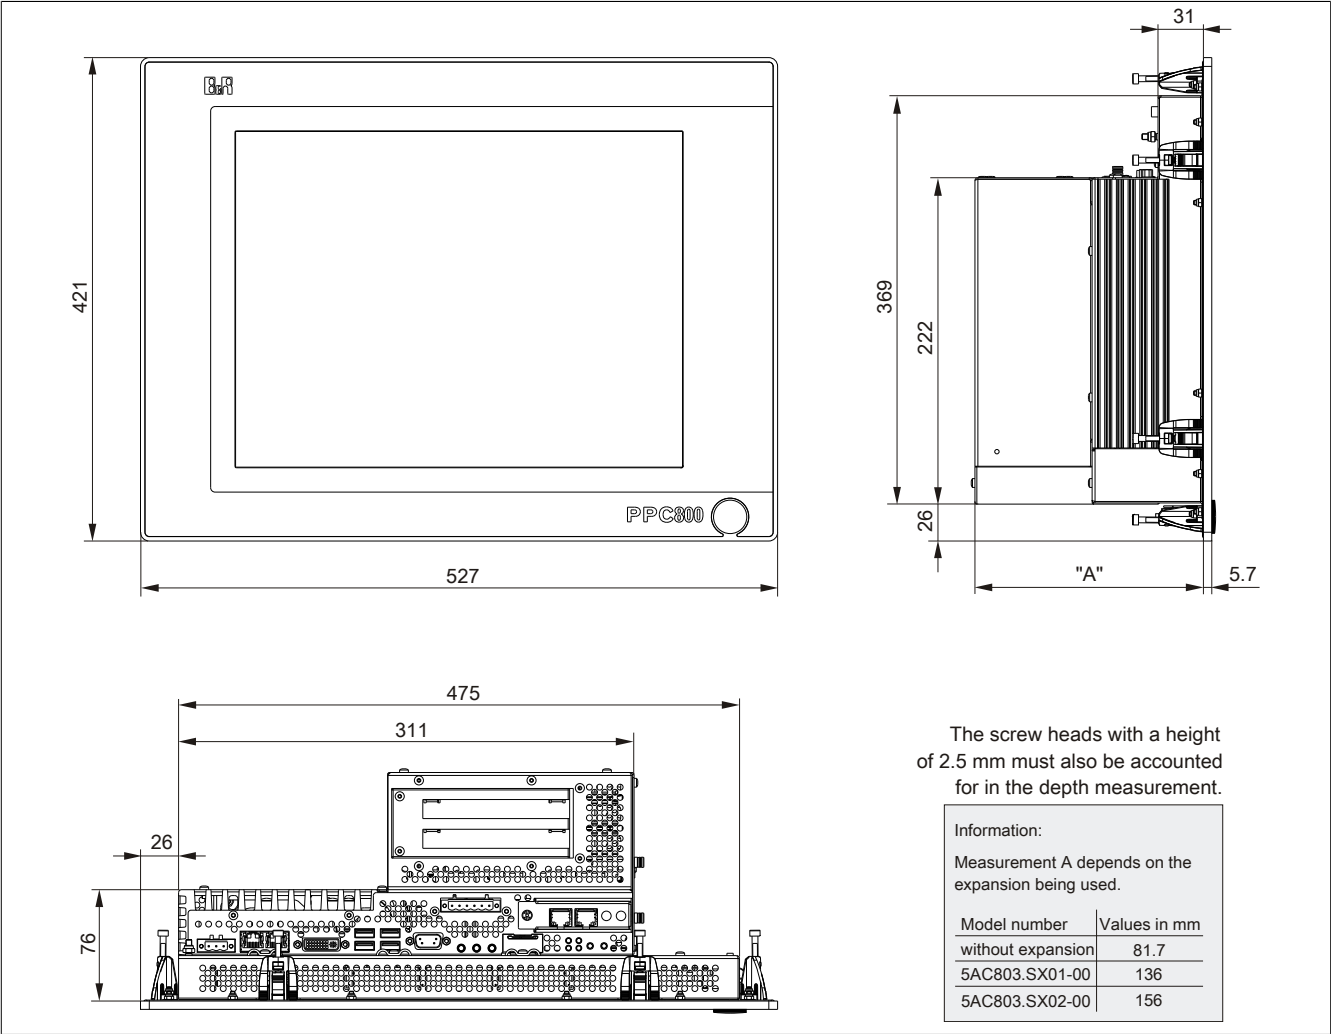


Figure 18: 5PC820.1906-00 - Dimensions

3.1.2.6 Cutout

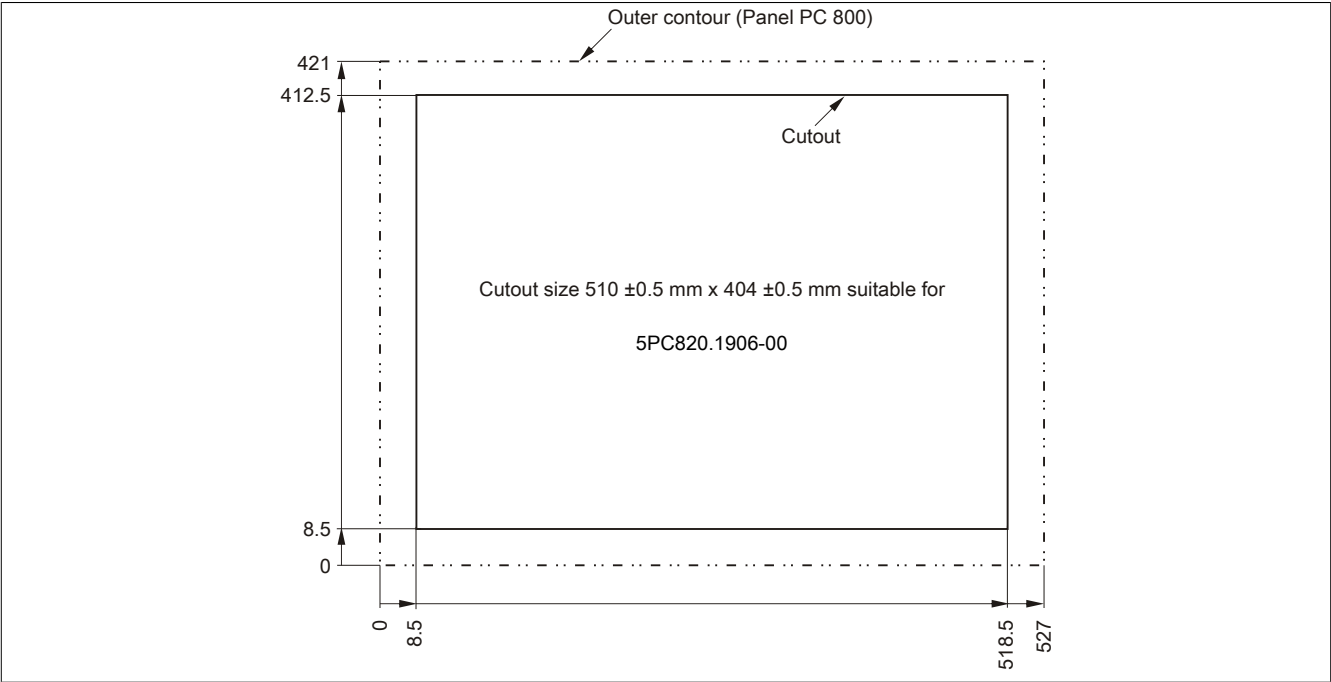


Figure 19: 5PC820.1906-00 - Cutout installation

## 3.2 GM45 CPU boards

### 3.2.1 General information

The GM45 CPU boards contain two DDR3 memory sockets for a maximum of 8 GB and support dual channel memory technology. Additionally, the Intel® GMA 4500MDH is integrated with 384 MB memory and a maximum resolution of 2048 x 1537 pixels (QXGA).

- AMI BIOS
- Intel® GM45 chipset
- 2x DDR3 memory slot
- Dual-channel memory
- Intel® GMA 4500MDH
- Gigabit Ethernet
- Intel® Core™ 2 Duo T9400, 2.53GHz

### 3.2.2 Order data

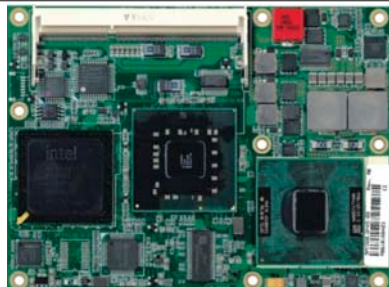
Model number	Short description	Figure
	<b>CPU boards</b>	
5PC800.BM45-00	Intel Core2 Duo T9400 CPU board, 2.53 GHz, dual core, 1066 MHz FSB, 6 MB L2 cache; GM45 chipset; 2 slots for SO-DIMM DDR3 modules	
5PC800.BM45-01	Intel Core2 Duo P8400 CPU board, 2.26 GHz, dual core, 1066 MHz FSB, 3 MB L2 cache; GM45 chipset; 2 slots for SO-DIMM DDR3 modules	
	<b>Required accessories</b>	
	<b>Main memory for GM45 CPU boards</b>	
5MMDDR.2048-02	SO-DIMM DDR3 RAM 2048 MB PC3-8500	
5MMDDR.4096-02	SO-DIMM DDR3 RAM 4096 MB PC3-8500	

Table 36: 5PC800.BM45-00, 5PC800.BM45-01 - Order data

### 3.2.3 Technical data

Product ID	5PC800.BM45-00	5PC800.BM45-01
<b>General information</b>		
Certification		
CE		Yes
cULus		Yes
cULus HazLoc Class 1 Division 2	-	Yes
ATEX Zone 22	-	Yes
<b>Controller</b>		
Boot loader	Embedded AMI BIOS	
Processor		
Type	Intel® Core™2 Duo T9400	Intel® Core™2 Duo P8400
Clock frequency	2530 MHz	2260 MHz
Number of cores		2
Architectures		45 nm
L1 cache		32 kB
L2 cache	6 MB	3 MB
External bus		1066 MHz
Intel® 64 Architecture		Yes
Intel® Virtualization Technology (VT-x)		Yes
Enhanced Intel SpeedStep® Technology		Yes
Expanded command set	G4 architecture, SSE, SSE2, SSE3	
Chipset	Intel® GM45 Intel® 82801 (ICH9M-E)	
Real-time clock		
Accuracy	At 25°C: typ. 12 ppm (1 seconds) per day <sup>1)</sup>	
Battery-buffered	Yes	
Memory socket		
Type	DDR3	
Size	Max. 8 GB	

Table 37: 5PC800.BM45-00, 5PC800.BM45-01 - Technical data

Product ID	5PC800.BM45-00	5PC800.BM45-01
Graphics	Intel® Graphics Media Accelerator 4500MDH Up to 384 MB <sup>2)</sup> Max. 32-bit  2x Intel-compliant SDVO ports 300 MHz RAMDAC, resolution up to 2048 x 1536 @ 70 Hz (QXGA)	
Controller		
Memory		
Color depth		
Resolution		
DVI	4x SATA	
RGB		
Mass memory management	ACPI 3.0 with battery support	
Power management		

Table 37: 5PC800.BM45-00, 5PC800.BM45-01 - Technical data

- 1) At max. specified ambient temperature: typically 58 ppm (5 seconds) - worst-case 220 ppm (19 seconds).
- 2) Allocated in main memory.

### 3.3 Heat sinks

#### 3.3.1 5AC803.HS00-01

##### 3.3.1.1 Order data


Model number	Short description	Figure
5AC803.HS00-01	PPC800 heat sink for CPU boards with a T7400, T9400 or P8400 dual-core processor	
	<b>Required accessories</b>	
	<b>CPU boards</b>	
5PC800.B945-04	Intel Core2 Duo T7400 CPU board, 2.16 GHz, dual core, 667 MHz FSB, 2 MB L2 cache; 945GME chipset; 4 slots for SO-DIMM DDR2 modules (max. total of 3 GB), Realtek RTL8111B Ethernet controller	
5PC800.B945-14	Intel Core2 Duo T7400 CPU board, 2.16 GHz, dual core, 667 MHz FSB, 4 MB L2 cache; 945GME chipset; 2 slots for SO-DIMM DDR2 modules (max. total of 3 GB), Realtek RTL8111C Ethernet controller	
5PC800.BM45-00	Intel Core2 Duo T9400 CPU board, 2.53 GHz, dual core, 1066 MHz FSB, 6 MB L2 cache; GM45 chipset; 2 slots for SO-DIMM DDR3 modules	
5PC800.BM45-01	Intel Core2 Duo P8400 CPU board, 2.26 GHz, dual core, 1066 MHz FSB, 3 MB L2 cache; GM45 chipset; 2 slots for SO-DIMM DDR3 modules	

Table 38: 5AC803.HS00-01 - Order data

##### 3.3.1.2 Technical data

Product ID	5AC803.HS00-01
<b>General information</b>	
Suitable for CPU boards	5PC800.B945-04 5PC800.B945-14 5PC800.BM45-00 5PC800.BM45-01
Suitable for the following system units	5PC820.1505-00 5PC820.1906-00
Certification CE	Yes
<b>Mechanical characteristics</b>	
Material	Aluminum, black-coated with copper heat pipes
Dimensions	
Width	143 mm
Height	183.5 mm
Depth	60 mm
Weight	1200 g

Table 39: 5AC803.HS00-01 - Technical data

### 3.4 Main memory

#### 3.4.1 5MMDDR.xxxx-02

##### 3.4.1.1 General information

These 204-pin DDR3 main memory modules operate at 1066 MHz and range in size from 2 GB to 4 GB.

If two RAM modules with the same size (e.g. 2 GB) are inserted into the CPU board, then dual-channel memory technology is supported. This technology is not supported if two RAM modules of different sizes (e.g. 2 GB and 4 GB) are inserted.

If two 2 GB modules or one 4 GB module is installed on a 32-bit operating system, only 3 GB of main memory can be used. On a 64-bit operating system, up to 8 GB of main memory can be used.

##### 3.4.1.2 Order data


Model number	Short description	Figure
	<b>Main memory for GM45 CPU boards</b>	
5MMDDR.2048-02	SO-DIMM DDR3 RAM 2048 MB PC3-8500	
5MMDDR.4096-02	SO-DIMM DDR3 RAM 4096 MB PC3-8500	

Table 40: 5MMDDR.2048-02, 5MMDDR.4096-02 - Order data

##### 3.4.1.3 Technical data

Product ID	5MMDDR.2048-02	5MMDDR.4096-02
<b>General information</b>		
Type	SO-DIMM DDR3 SDRAM	
Memory size	2 GB	4 GB
Construction	204-pin	
Organization	256M x 64-bit	512M x 64-bit
Velocity	DDR3-1066 (PC3-8500)	
Certification		
CE		Yes
cULus		Yes
cULus HazLoc Class 1 Division 2	-	Yes
ATEX Zone 22	-	Yes

Table 41: 5MMDDR.2048-02, 5MMDDR.4096-02 - Technical data

### Information:

A main memory module can only be replaced at B&R.

### 3.5 Expansions

#### 3.5.1 General information

This is an optional expansion for the PPC800 and has inserts for up to 2 PCI/PCIe slots (only in connection with a bus unit) and a slide-in drive.

#### 3.5.2 Order data


Model number	Short description	Figure
	<b>Expansions</b>	
5AC803.SX01-00	PPC800 expansion; 1 PCI/PCI Express and 1 slide-in slot (bus 5AC803.BX01-00 or 5AC803.BX01-01 required)	
5AC803.SX02-00	PPC800 expansion; 2 PCI/PCI Express and 1 slide-in slot (bus 5AC803.BX02-00 or 5AC803.BX02-01 required)	
	<b>Required accessories</b>	
	<b>Bus units</b>	
5AC803.BX01-00	PPC800 bus; 1 PCI, 1 slide-in slot	
5AC803.BX01-01	PPC800 bus; 1 PCI Express, 1 slide-in slot	
5AC803.BX02-00	PPC800 bus; 2 PCI, 1 slide-in slot	
5AC803.BX02-01	PPC800 bus; 1 PCI, 1 PCI Express, 1 slide-in slot	
	<b>Fan kits</b>	
5AC803.FA02-00	PPC800 fan kit for system units with expansion 5AC803.SX01-00	
5AC803.FA03-00	PPC800 fan kit for system units with expansion 5AC803.SX02-00	
	<b>Optional accessories</b>	
	<b>Drives</b>	
5AC801.ADAS-00	SATA hard disk adapter for operating a slide-in compact hard disk in a slide-in slot	
5AC801.DVDS-00	DVD-ROM SATA slide-in drive	
5AC801.DVRS-00	DVD-R/RW DVD+R/RW SATA slide-in drive	
5AC801.HDDS-00	40 GB SATA slide-in hard disk; 24/7 operation with extended temperature range. Note: please see the manual for information about using this hard disk	
5ACPCI.RAIC-05	PCI RAID system SATA 2x 250 GB; note: please see the manual for information about using this hard disk	
5ACPCI.RAIC-06	PCI RAID system SATA 2x 500 GB; note: please see the manual for information about using this hard disk	

Table 42: 5AC803.SX01-00, 5AC803.SX02-00 - Order data

#### 3.5.3 Inserts

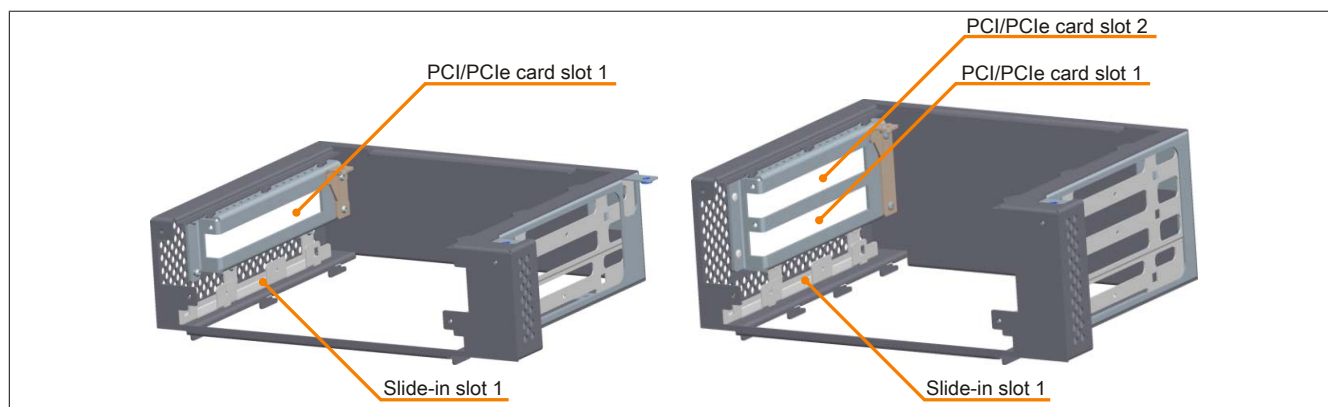


Figure 20: 5AC803.SX01-00, 5AC803.SX02-00 - Slots

#### 3.5.4 Technical data

Product ID	5AC803.SX01-00	5AC803.SX02-00
General information		
Certification CE	Yes	
Inserts		
PCI / PCIe slots		
Quantity	1	2
Slide-in drives	1	

Table 43: 5AC803.SX01-00, 5AC803.SX02-00 - Technical data



Product ID	5AC803.SX01-00	5AC803.SX02-00
<b>Mechanical characteristics</b>		
Dimensions		
Width		167 mm
Height		222 mm
Depth	60 mm	80 mm
Weight	Approx. 1000 g	

Table 43: 5AC803.SX01-00, 5AC803.SX02-00 - Technical data

### 3.5.5 5AC803.SX01-00 - Dimensions

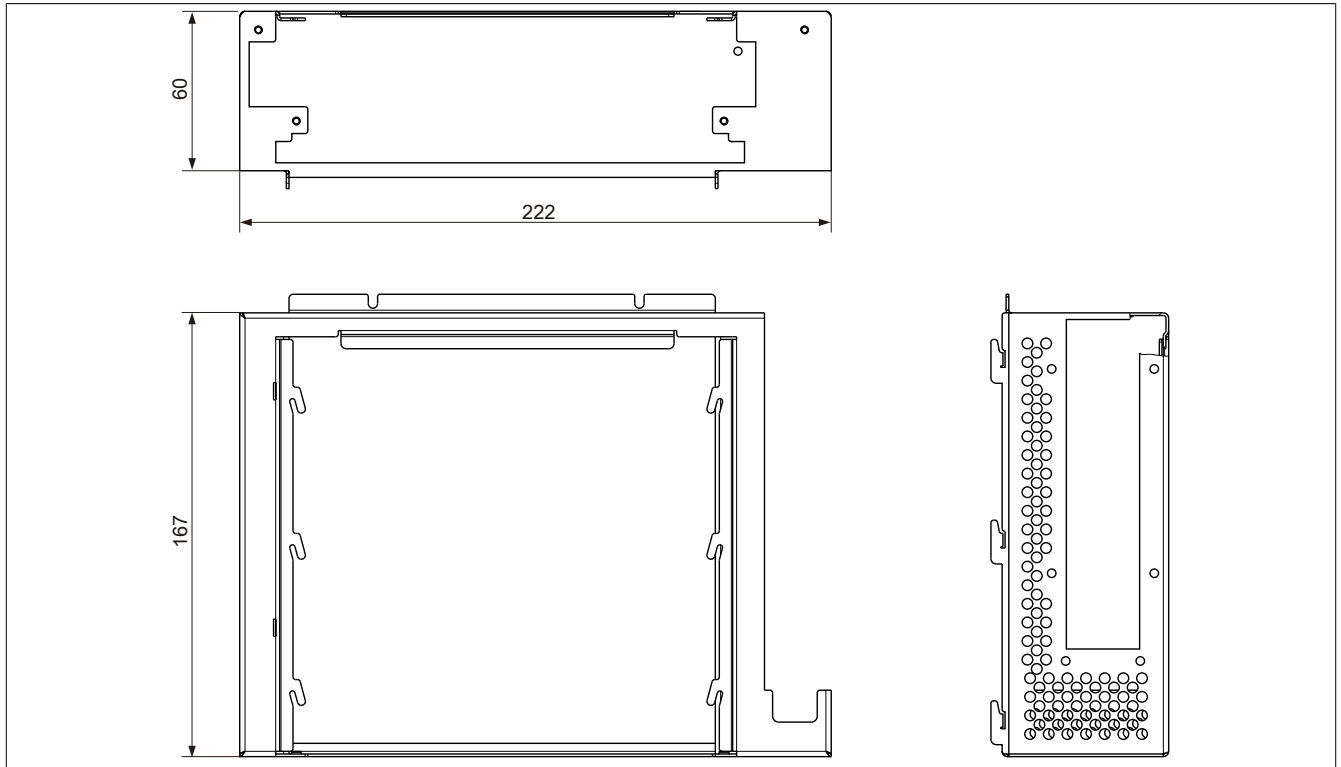


Figure 21: 5AC803.SX01-00 - Dimensions

### 3.5.6 5AC803.SX02-00 - Dimensions

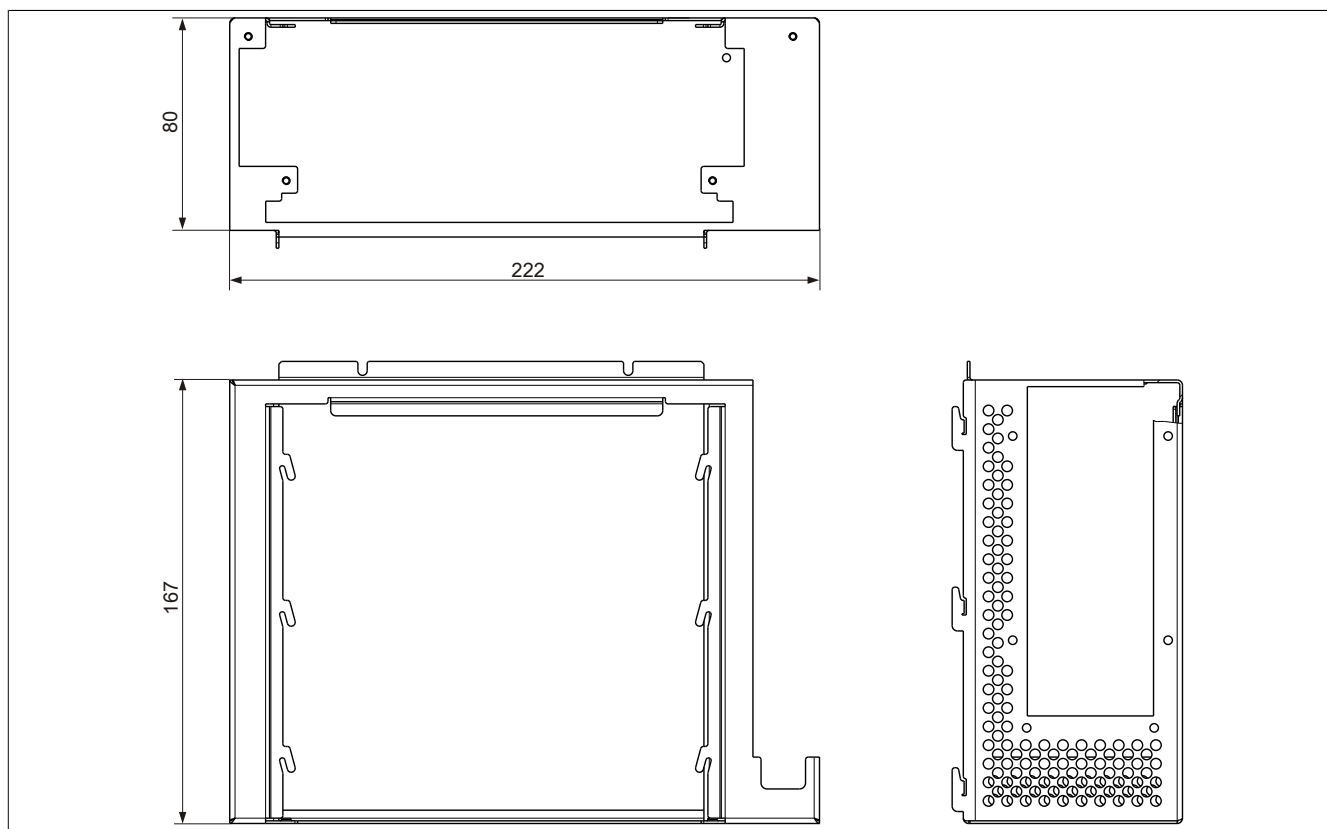


Figure 22: 5AC803.SX02-00 - Dimensions

### 3.5.7 Slot for bus units

#### 3.5.7.1 Card slot (PCI / PCIe)

Standard PCI 2.2 half-size cards or PCI Express (PCIe) half-size cards can be installed depending on the type of bus unit. They cannot exceed the following dimensions.

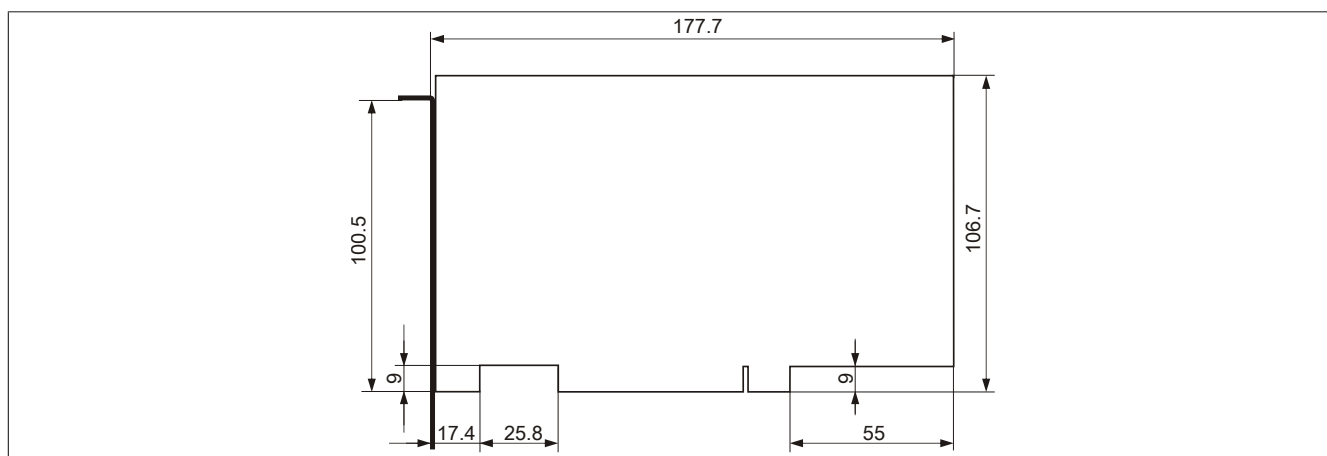


Figure 23: Standard half-size PCI card - Dimensions

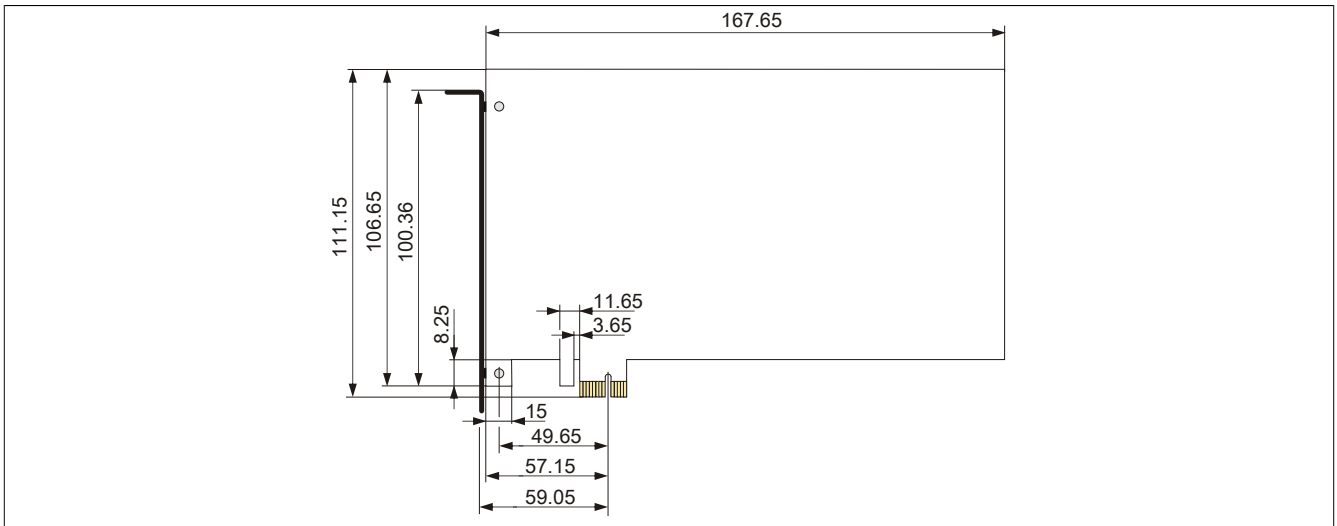


Figure 24: Standard half-size PCIe card - Dimensions

### 3.5.8 Slide-in slot 1

The internal connection between slide-in slot 1 and the chipset is made via SATA I and USB.

Slide-in slot 1	
Connection	SATA I and USB
Model number	Short description
Drives	
5AC801.ADAS-00	APC810 and PPC800 slide-in compact adapter
5AC801.HDDS-00	APC810 and PPC800 slide-in HDD EE25
5AC801.DVRS-00	APC810 and PPC800 slide-in DVD-R/RW
5AC801.DVDS-00	APC810 and PPC800 slide-in DVD-ROM


The image shows the rear of a grey industrial Panel PC 800. On the right side, there is a vertical slot for a drive. An orange arrow points to this slot, with the text 'Slide-in slot 1' next to it. The device has a black handle on the left side and a perforated metal grille on the right side. A small label with a barcode is visible on the top left of the rear panel.

Table 44: Slide-in slot 1

#### Information:

The SATA I interface allows disks to be replaced during operation (hot plugging). In order to take advantage of this capability, this feature must be supported by the operating system.

### 3.6 Bus units

#### 3.6.1 General information

Bus units are compatible with expansions with 1 or 2 card slots and provide support for PCI and/or PCI Express.

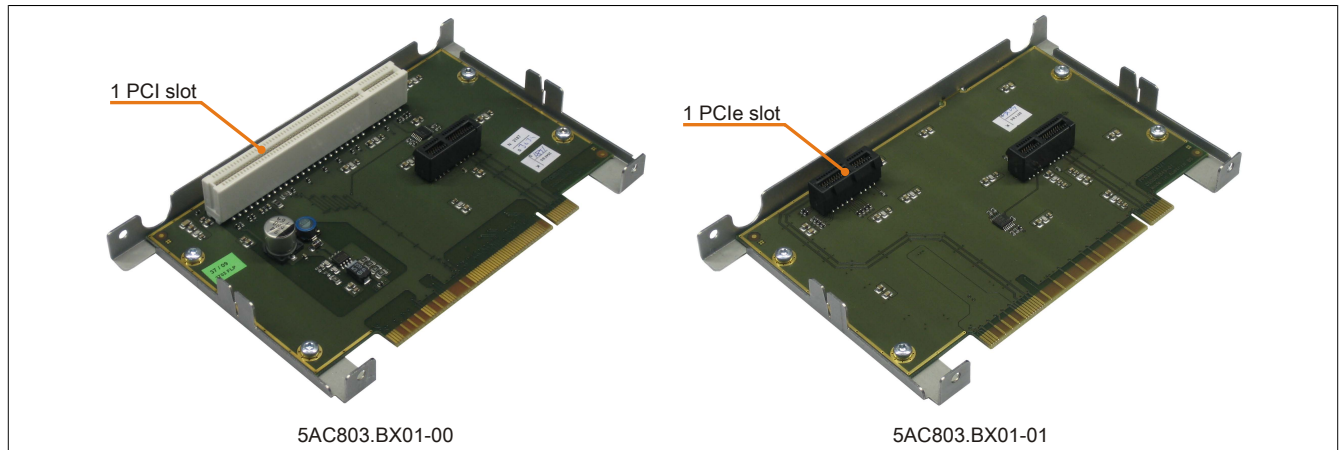


Figure 25: 1-slot bus units

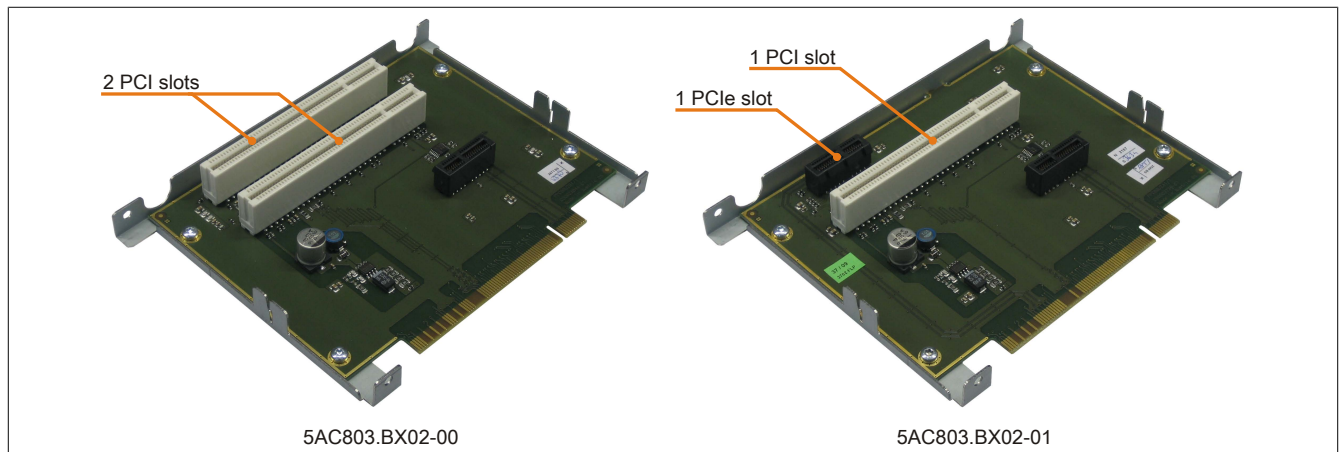


Figure 26: 2-slot bus units

#### 3.6.2 Order data

Model number	Short description	Figure
	<b>Bus units</b>	
5AC803.BX01-00	PPC800 bus; 1 PCI, 1 slide-in slot	
5AC803.BX01-01	PPC800 bus; 1 PCI Express, 1 slide-in slot	
5AC803.BX02-00	PPC800 bus; 2 PCI, 1 slide-in slot	
5AC803.BX02-01	PPC800 bus; 1 PCI, 1 PCI Express, 1 slide-in slot	

Table 45: 5AC803.BX01-00, 5AC803.BX01-01, 5AC803.BX02-00, 5AC803.BX02-01 - Order data

## 3.6.3 Technical data

Product ID	5AC803.BX01-00	5AC803.BX01-01	5AC803.BX02-00	5AC803.BX02-01
General information				
Certification CE	Yes			
Inserts				
PCI slots				
Quantity	1	-	2	1
Type	32-bit	-	32-bit	32-bit
Design	PCI half-size	-	PCI half-size	PCI half-size
Standard	2.2	-	2.2	2.2
Bus speed	33 MHz	-	33 MHz	33 MHz
PCIe slots				
Quantity	-	1	-	1
Design	-	PCIe half-size	-	PCIe half-size
Standard	-	1.0 a	-	1.0 a
Bus speed	-	x1 (250 MB/s)	-	x1 (250 MB/s)

Table 46: 5AC803.BX01-00, 5AC803.BX01-01, 5AC803.BX02-00, 5AC803.BX02-01 - Technical data

## 3.7 Adapters

### 3.7.1 5AC803.BC01-00

#### 3.7.1.1 General information

This adapter can be used to operate a PCI Express compact plug-in card in PPC800 system units.

#### 3.7.1.2 Order data


Model number	Short description	Figure
	<b>Adapter</b>	
5AC803.BC01-00	1 compact PCI Express PPC800 adapter	
	<b>Required accessories</b>	
	<b>Interface cards</b>	
5ACPCC.ETH0-00	Compact PCIe Ethernet card 1x 10/100/1000	
5ACPCC.MPL0-00	PClec POWERLINK card, 2 POWERLINK interfaces, 512 kB SRAM	

Table 47: 5AC803.BC01-00 - Order data

### 3.7.2 5AC803.BC02-00

#### 3.7.2.1 General information

This adapter can be used to operate a slide-in compact drive in PPC800 system units.

#### 3.7.2.2 Order data


Model number	Short description	Figure
	<b>Adapter</b>	
5AC803.BC02-00	1 compact slide-in PPC800 adapter	
	<b>Required accessories</b>	
	<b>Drives</b>	
5AC801.HDDI-00	40 GB SATA slide-in compact hard disk; 24/7 operation with extended temperature range. Note: please see the manual for information about using this hard disk	
5AC801.HDDI-04	500 GB SATA hard disk, slide-in compact, 24/7 operation Note: please see the manual for information about using this hard disk	
5AC801.SSDI-00	32 GB SATA SSD (SLC), slide-in compact	
5AC801.SSDI-03	60 GB SATA slide-in compact SSD (MLC)	
5AC801.SSDI-04	128 GB SATA SSD (MLC), slide-in compact	

Table 48: 5AC803.BC02-00 - Order data

### 3.8 PClec plug-in cards

#### 3.8.1 General information

PClec plug-in cards are equipped with a sensor that monitors the card's temperature. This is read out in BIOS and in the ADI.

#### 3.8.2 Dimensions

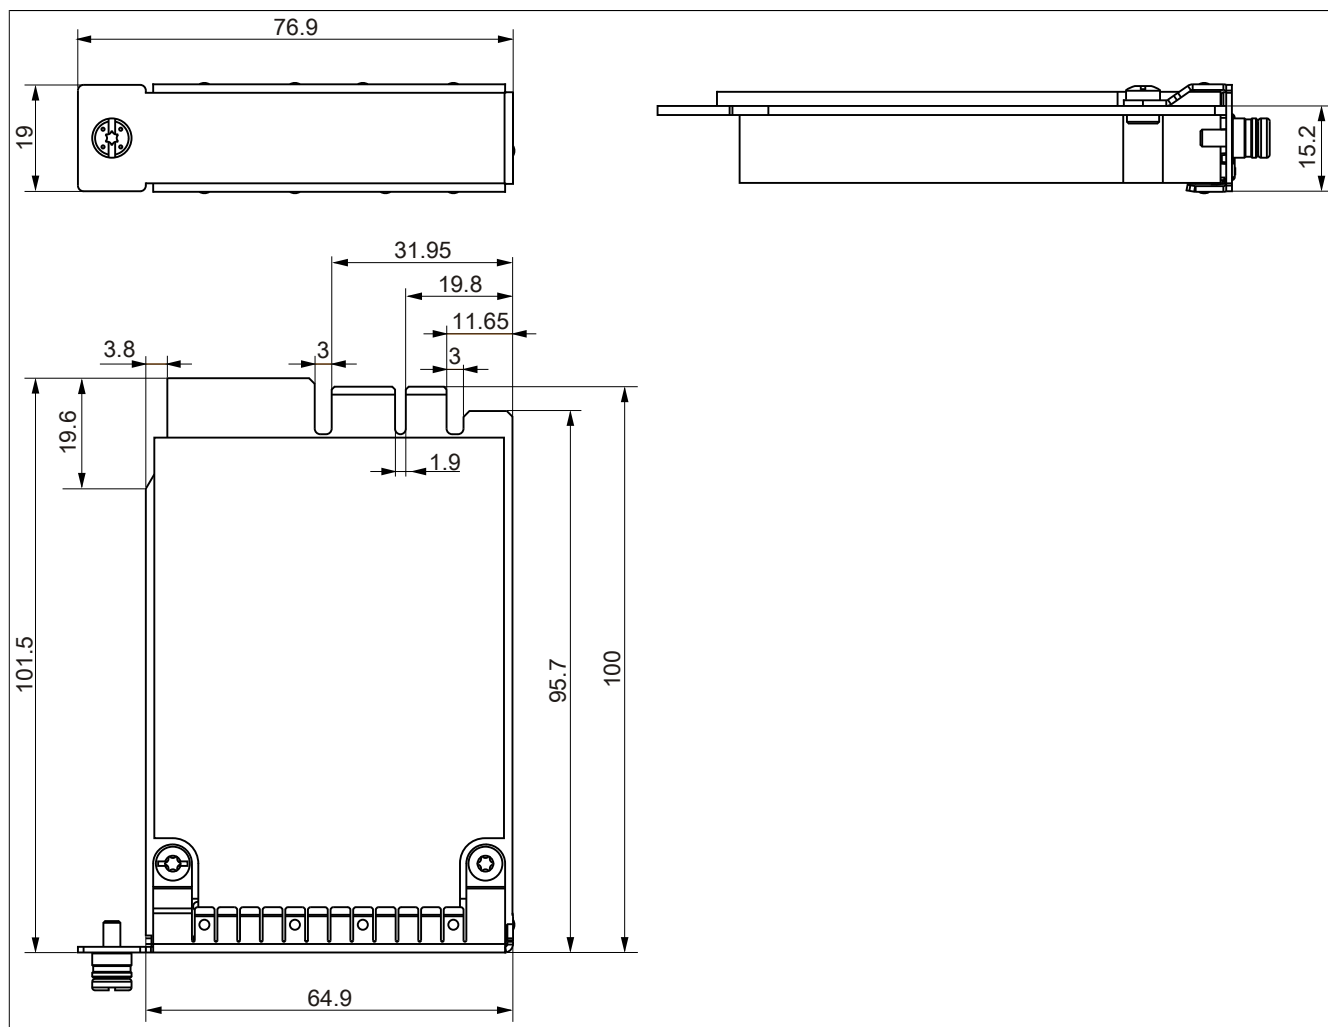


Figure 27: PCI Express compact plug-in cards - Dimensions

#### Information:

Only B&R PClec cards that have been specially designed for the Automation PC 820 and Panel PC 800 can be used.



### 3.8.3 5ACPCC.ETH0-00

#### 3.8.3.1 General information

This PCI Express compact Ethernet card has a 10/100/1000 Mbit/s network connection and can be used as an additional network interface in a PCI Express compact slot.

- PClec Ethernet card
- 1 network connection (10/100/1000 Mbit/s)

#### When used in a PPC800

##### Information:

The adapter 5AC803.BC01-00 is required to use PClec plug-in cards.

#### 3.8.3.2 Order data


Model number	Short description	Figure
	<b>Interface cards</b>	
5ACPCC.ETH0-00	Compact PCIe Ethernet card 1x 10/100/1000	

Table 49: 5ACPCC.ETH0-00 - Order data

#### 3.8.3.3 Technical data

Product ID	5ACPCC.ETH0-00
<b>General information</b>	
B&R ID code	\$AB25
Diagnostics Data transfer	Yes, using status LED
Certification CE	Yes
<b>Interfaces</b>	
Ethernet	
Quantity	1
Controller	Intel 82574
Design	Shielded RJ45 port
Transfer rate	10/100/1000 Mbit/s
Cable length	Max. 100 m between two stations (segment length)
<b>Mechanical characteristics</b>	
Slot	PClec module

Table 50: 5ACPCC.ETH0-00 - Technical data

##### 3.8.3.3.1 Ethernet interface

##### Information:

The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the complete system. For the complete system in which this individual component is used, refer to the data given specifically for that device.

Ethernet card 1 connection		
Controller	Intel 82574	
Cabling	S/STP (Cat 5e)	
Transfer rate	10/100/1000 Mbit/s <sup>1)</sup>	
Cable length	Max. 100 m (min. Cat 5e)	
<b>Speed LED</b>	<b>On</b>	<b>Off</b>
Green	100 Mbit/s	10 Mbit/s <sup>2)</sup>
Orange	1000 Mbit/s	-
<b>Link LED</b>	<b>On</b>	<b>Off</b>
Orange	Link (Ethernet network connection available)	Activity (blinking - data transfer in progress)

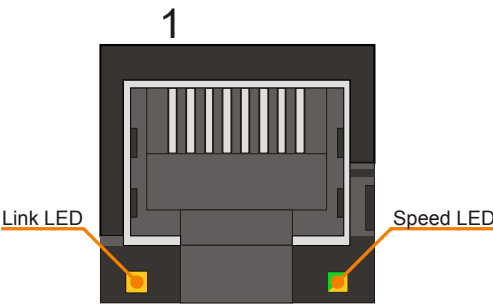


Table 51: 5ACPCC.ETH0-00 - Ethernet interface

- 1) Switching takes place automatically.  
2) The 10 Mbit/s transfer speed / connection is only present if the IF slot Link LED is also lit at the same time.

## Driver support

A special driver is required in order to operate the Intel 82574 Ethernet controller. Drivers for approved operating systems are available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

## Information:

**Required drivers can only be downloaded from the B&R website, not from manufacturer websites.**

### 3.8.4 5ACPCC.MPL0-00

#### 3.8.4.1 General information

This PCI Express compact POWERLINK card is equipped with two POWERLINK interfaces, two station number switches and a card number switch for differentiating between modules. This PCI Express compact POWERLINK card can be used as an additional POWERLINK interface in a PCI Express compact slot.

- PClec POWERLINK card
- 2 POWERLINK interfaces
- 2 station number switches
- Card number switch

#### When used in a PPC800

##### Information:

The adapter 5AC803.BC01-00 is required to use PClec plug-in cards.

#### 3.8.4.2 Order data


Model number	Short description	Figure
<b>Interface cards</b>		
5ACPCC.MPL0-00	PClec POWERLINK card, 2 POWERLINK interfaces, 512 kB SRAM	

Table 52: 5ACPCC.MPL0-00 - Order data

#### 3.8.4.3 Technical data

Product ID	5ACPCC.MPL0-00
<b>General information</b>	
B&R ID code	\$AB27
Diagnostics Data transfer	Yes, using status LED
Certification CE	Yes
<b>Controller</b>	
SRAM Size	512 kB
Remanent variables in power failure mode	128 kB (e.g. for Automation Runtime, see AS help documentation)
<b>Interfaces</b>	
POWERLINK Quantity	2
Transmission Design	100 Base-T (ANSI/IEEE 802.3) Internal 2x hub, 2x shielded RJ45 port
Transfer rate	100 Mbit/s
Node switch	2
Cable length	Max. 100 m between two stations (segment length)
<b>Mechanical characteristics</b>	
Slot	PClec module

Table 53: 5ACPCC.MPL0-00 - Technical data

#### 3.8.4.3.1 POWERLINK interface

##### Information:

The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the complete system. For the complete system in which this individual component is used, refer to the data given specifically for that device.

POWERLINK card 2 connections		
Cabling	S/STP (Cat 5e)	
Cable length	Max. 100 m (min. Cat 5e)	
<b>Speed LED</b>	<b>On</b>	<b>Off</b>
Green / red	see Status / Error LED	
<b>Link LED</b>	<b>On</b>	<b>Off</b>
Yellow	Link (POWERLINK network connection available)	Activity (blinking - data transfer in progress)

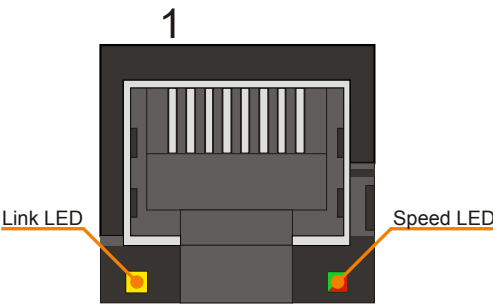


Table 54: 5ACPCC.MPL0-00 - POWERLINK interface

### 3.8.4.3.2 LED status indicators

The Status/Error LED is a green and red dual LED. The LED status can have different meanings depending on the operating mode.

#### Ethernet TCP/IP mode

The interface can be operated purely as an Ethernet TCP/IP interface.

Green - Status	Description
On	POWERLINK interface operating purely as an Ethernet TCP/IP interface

Table 55: Status/Error LED - Ethernet TCP/IP operating mode

#### POWERLINK V1

Status LED		Status of the POWERLINK station
Green	Red	
On	Off	The POWERLINK station is running with no errors.
Off	On	A fatal system error has occurred. The error type can be read using the PLC logbook. An irreparable problem has occurred. The system cannot properly carry out its tasks. This status can only be changed by resetting the module.
Blinking alternately		The POWERLINK managing node has failed. This error code can only occur when operated as a controlled node.
Off	Blinking	System failure. The red blinking LED signals a certain type of error using a blink code (see section "System failure error codes" on page 81).

Table 56: Status/Error LED - POWERLINK V1 operating mode

#### POWERLINK V2

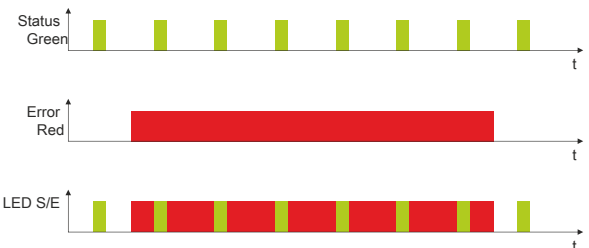
Red - Error	Description
On	<p>The POWERLINK interface has encountered an error (failed Ethernet frames, increased number of collisions on the network, etc.).</p> <p>If an error occurs in the following states, then the green LED blinks over the red LED:</p> <ul style="list-style-type: none"> <li>BASIC_ETHERNET</li> <li>PRE_OPERATIONAL_1</li> <li>PRE_OPERATIONAL_2</li> <li>READY_TO_OPERATE</li> </ul> 

Table 57: Status/Error LED as Error LED - POWERLINK V2 operating mode

Green - status	Description
Off NOT_ACTIVE	<p><b>Managing node (MN)</b> The bus is monitored for POWERLINK frames. If a frame is not received within the configured time window (timeout), the interface goes directly into the PRE_OPERATIONAL_1 status (single flash). If POWERLINK communication is detected before this time passes, however, the interface goes directly into the BASIC_ETHERNET status (flickering).</p> <p><b>Controlled node (CN)</b> The bus is monitored for POWERLINK frames. If a frame is not received within the configured time window (timeout), the interface goes directly into the BASIC_ETHERNET status (flickering). If POWERLINK communication is detected before this time passes, however, the interface goes directly into the PRE_OPERATIONAL_1 status (single flash).</p>
Green flickering (approx. 10 Hz) BASIC_ETHERNET	<p>The interface is in the BASIC_ETHERNET status and being operated purely as an Ethernet TCP/IP interface.</p> <p><b>Managing node (MN)</b> This status can only be changed by resetting the interface.</p> <p><b>Controlled node (CN)</b> If POWERLINK communication is detected while in this status, the interface goes into the PRE_OPERATIONAL_1 status (single flash).</p>
Single flash (approx. 1 Hz) PRE_OPERATIONAL_1	<p>The interface status is PRE_OPERATIONAL_1.</p> <p><b>Managing node (MN)</b> The MN starts "reduced cycle" operation. Collisions are allowed on the bus. Cyclic communication is not yet taking place.</p> <p><b>Controlled node (CN)</b> The CN waits until it receives an SoC frame and then goes into the PRE_OPERATIONAL_2 status (double flash).</p>
Double flash (approx. 1 Hz) PRE_OPERATIONAL_2	<p>The interface status is PRE_OPERATIONAL_2.</p> <p><b>Managing node (MN)</b> The MN begins cyclic communication (cyclic input data is not yet evaluated). The CNs are configured in this status.</p> <p><b>Controlled node (CN)</b> In this status, the interface is normally being configured by the manager. Once complete, a command changes the status to PRE_OPERATIONAL_3 (triple flash).</p>
Triple flash (approx. 1 Hz) READY_TO_OPERATE	<p>The interface status is READY_TO_OPERATE.</p> <p><b>Managing node (MN)</b> Normal cyclic and asynchronous communication. Received PDO data is ignored.</p> <p><b>Controlled node (CN)</b> The configuration of the interface is complete. Normal cyclic and asynchronous communication. The PDO data sent corresponds to the PDO mapping. Cyclic data is not yet evaluated, however.</p>
On OPERATIONAL	<p>The interface status is OPERATIONAL.</p>
Blinking (approx. 2.5 Hz) STOPPED	<p>The interface status is STOPPED.</p> <p><b>Managing node (MN)</b> This status is not possible for the MN.</p> <p><b>Controlled node (CN)</b> No output data is produced, and no input data is received. Only the appropriate command from the manager can enter or leave this state.</p>

Table 58: Status/Error LED as Status LED - POWERLINK operating mode

## System failure error codes

Incorrect configuration or defective hardware can cause a system failure error.

The error code is indicated by the red Error LED using four switch-on phases. The switch-on phases have a duration of either 150 ms or 600 ms. Error code output is repeated cyclically after 2 seconds.

Key:

- ... 150 ms
- ... 600 ms
- Delay ... 2 sec. delay

Error description	Error code indicated by red status LED									
RAM error	•	•	•	-	Pause	•	•	•	-	Pause
Hardware error	-	•	•	-	Pause	-	•	•	-	Pause

Table 59: Status/Error LED as Error LED - System failure error codes

### 3.8.4.3.3 POWERLINK station number

POWERLINK station number (x1, x16)		
Both of these hex switches (x16, x1) are used to configure the POWERLINK station number. Station numbers between #00 and #FD are permitted.		
Switch position		
x1	x16	Description
0	0	Operation as managing node
1 ... D	0 ... F	station number Operation as controlled node
E	F	Reserved
F	F	Reserved

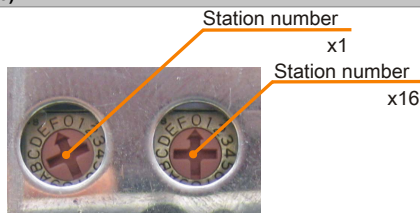


Table 60: POWERLINK station number (x1, x16)

### 3.8.4.3.4 Card number switch

The one-digit card number (\$1 – \$F) is configured using the card number switch. This number is used to identify the module.

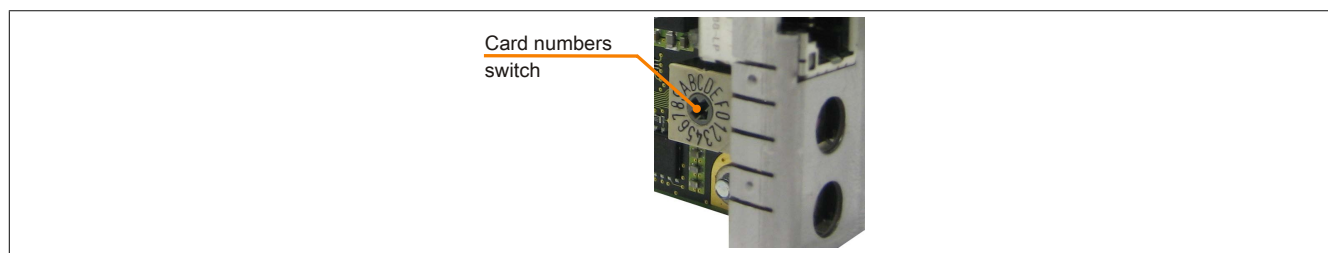


Figure 28: POWERLINK card - 2-port node number switch

If the card is operated with Automation Runtime, then the card number switch must match the slot number in Automation Studio.



Figure 29: Integrating the POWERLINK plug-in card in Automation Studio

### 3.8.4.3.5 SRAM

The 2-port 5ACPCC.MPL0-00 POWERLINK card has 512 kB SRAM.

## 3.9 Drives

### 3.9.1 5AC801.HDDI-00

#### 3.9.1.1 General information

This 40 GB slide-in compact hard disk is specified for 24-hour operation, features an extended temperature range and can be used in APC810 and PPC800 system units.

#### When used in a PPC800

##### Information:

The adapter 5AC803.BC02-00 is required for the use of slide-in compact drives.

When inserted in the slide-in compact slot, the slide-in compact drive is accessed internally via SATA.

#### 3.9.1.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5AC801.HDDI-00	40 GB SATA slide-in compact hard disk; 24/7 operation with extended temperature range. Note: please see the manual for information about using this hard disk	

Table 61: 5AC801.HDDI-00 - Order data

#### 3.9.1.3 Technical data

##### Information:

The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the complete system. For the complete system in which this individual component is used, refer to the data given specifically for that device.

Product ID	5AC801.HDDI-00
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
GL	Yes
<b>Hard disk drive</b>	
Capacity	40 GB
Number of heads	1
Number of sectors	78,140,160
Bytes per sector	512
Cache	8 MB
Speed	5400 rpm $\pm 1\%$
Startup time	Typ. 3 s (from 0 rpm to read access)
MTBF	750,000 POH <sup>1)</sup>
S.M.A.R.T. support	Yes
Interface	SATA
Access time	5.6 ms
Data transfer rate	
Internal	Max. 450 Mbit/s
To/From host	Max. 150 MB/s (Ultra DMA mode 5)

Table 62: 5AC801.HDDI-00 - Technical data

Product ID	5AC801.HDDI-00
Positioning time	
Minimum (track to track)	1 ms
Nominal (read only)	12.5 ms
Maximum (read only)	23 ms
Environmental conditions	
Temperature <sup>2)</sup>	
Operation <sup>3)</sup>	-30 to 85°C
24-hour operation <sup>4)</sup>	-30 to 85°C
Storage	-40 to 95°C
Transport	-40 to 95°C
Relative humidity <sup>5)</sup>	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration	
Operation	5 to 500 Hz: 2 g; no unrecoverable errors
Storage	5 to 500 Hz: 5 g; no unrecoverable errors
Transport	5 to 500 Hz: 5 g; no unrecoverable errors
Shock	
Operation	300 g and 2 ms duration; no unrecoverable errors 150 g and 11 ms duration; no unrecoverable errors
Storage	800 g and 2 ms duration; no unrecoverable errors 400 g and 0.5 ms duration; no unrecoverable errors
Transport	800 g and 2 ms duration; no unrecoverable errors 400 g and 0.5 ms duration; no unrecoverable errors
Altitude	
Operation	-300 to 5000 m
Storage	-300 to 12192 m
Mechanical characteristics	
Installation	Fixed <sup>6)</sup>
Dimensions	
Width	13 mm
Height	98 mm
Depth	105 mm
Weight	134 g
Manufacturer information	
Manufacturer	Seagate
Manufacturer product ID	ST940817SM

Table 62: 5AC801.HDDI-00 - Technical data

- 1) With 8760 POH (power-on hours) per year and 70°C surface temperature.
- 2) Temperature values at an elevation of 305 meters. The temperature specification must be reduced linearly by 1°C every 305 meters. The temperature increase and decrease can be a maximum of 20°C per hour.
- 3) Standard operation refers to 333 POH (power-on hours) per month.
- 4) 24-hour operation refers to 732 POH (power-on hours) per month.
- 5) Humidity gradient: Maximum 15% per hour.
- 6) Slide-in compact installation.

### 3.9.1.4 Temperature humidity diagram

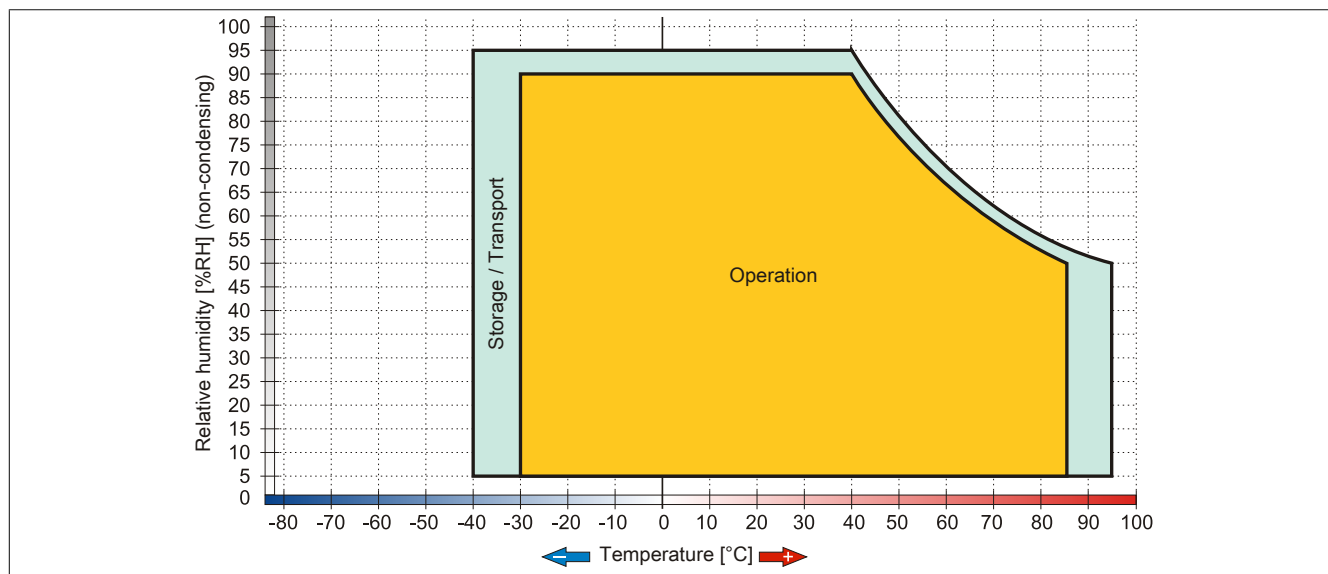


Figure 30: 5AC801.HDDI-00 - Temperature humidity diagram



### 3.9.2 5AC801.HDDI-02

#### 3.9.2.1 General information

This 160 GB slide-in compact hard disk is specified for 24-hour operation, features an extended temperature range and can be used in APC810 and PPC800 system units.

#### When used in a PPC800

##### Information:

The adapter 5AC803.BC02-00 is required for the use of slide-in compact drives.

When inserted in the slide-in compact slot, the slide-in compact drive is accessed internally via SATA.

#### 3.9.2.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5AC801.HDDI-02	160 GB SATA hard disk, slide-in compact, 24/7 operation with extended temperature range. Note: please see the manual for information about using this hard disk	

Table 63: 5AC801.HDDI-02 - Order data

#### 3.9.2.3 Technical data

##### Information:

The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the complete system. For the complete system in which this individual component is used, refer to the data given specifically for that device.

Product ID	5AC801.HDDI-02
<b>General information</b>	
Certification	
CE	Yes
GL	Yes
<b>Hard disk drive</b>	
Capacity	160 GB
Number of heads	3
Number of sectors	312,581,808
Bytes per sector	512
Cache	8 MB
Speed	5400 rpm $\pm$ 1%
Startup time	Typ. 4 s (from 0 rpm to read access)
MTBF	300,000 POH <sup>1)</sup>
S.M.A.R.T. support	Yes
Interface	SATA
Access time	12 ms
Data transfer rate	
Internal	Max. 84.6 Mbit/s
To/From host	Max. 150 MB/s (Ultra DMA mode 5)
Positioning time	
Minimum (track to track)	1.5 ms
Nominal (read only)	12 ms
Maximum (read only)	22 ms

Table 64: 5AC801.HDDI-02 - Technical data

Product ID	5AC801.HDDI-02
Environmental conditions	
Temperature <sup>2)</sup>	
Operation	-15 to 80°C
24-hour operation <sup>3)</sup>	-15 to 80°C
Storage	-40 to 95°C
Transport	-40 to 95°C
Relative humidity <sup>4)</sup>	
Operation	8 to 90%, non-condensing <sup>5)</sup>
Storage	5 to 95%, non-condensing <sup>6)</sup>
Transport	5 to 95%, non-condensing <sup>6)</sup>
Vibration	
Operation	5 to 500 Hz: 1 g; no unrecoverable errors
Storage	5 to 500 Hz: 5 g, no damage
Transport	5 to 500 Hz: 5 g, no damage
Shock	
Operation	325 g and 2 ms duration; no unrecoverable errors
Storage	900 g, 1 ms; no damage
	120 g, 11 ms; no damage
Transport	900 g, 1 ms; no damage
	120 g, 11 ms; no damage
Altitude	
Operation	-300 to 3000 m
Storage	-300 to 12192 m
Mechanical characteristics	
Installation	Fixed <sup>7)</sup>
Dimensions	
Width	13 mm
Height	98 mm
Depth	105 mm
Weight	135 g
Manufacturer information	
Manufacturer	Fujitsu
Manufacturer product ID	MHY2160BH-ESW

Table 64: 5AC801.HDDI-02 - Technical data

- 1) With 8760 POH (power-on hours) per year and 70°C surface temperature.
- 2) Standard operation refers to 333 POH (power-on hours) per month.
- 3) 24-hour operation refers to 732 POH (power-on hours) per month.
- 4) Humidity gradient: Maximum 15% per hour.
- 5) Maximum humidity at 29°C.
- 6) Maximum humidity at 40°C.
- 7) Slide-in compact installation.

### 3.9.2.4 Temperature humidity diagram

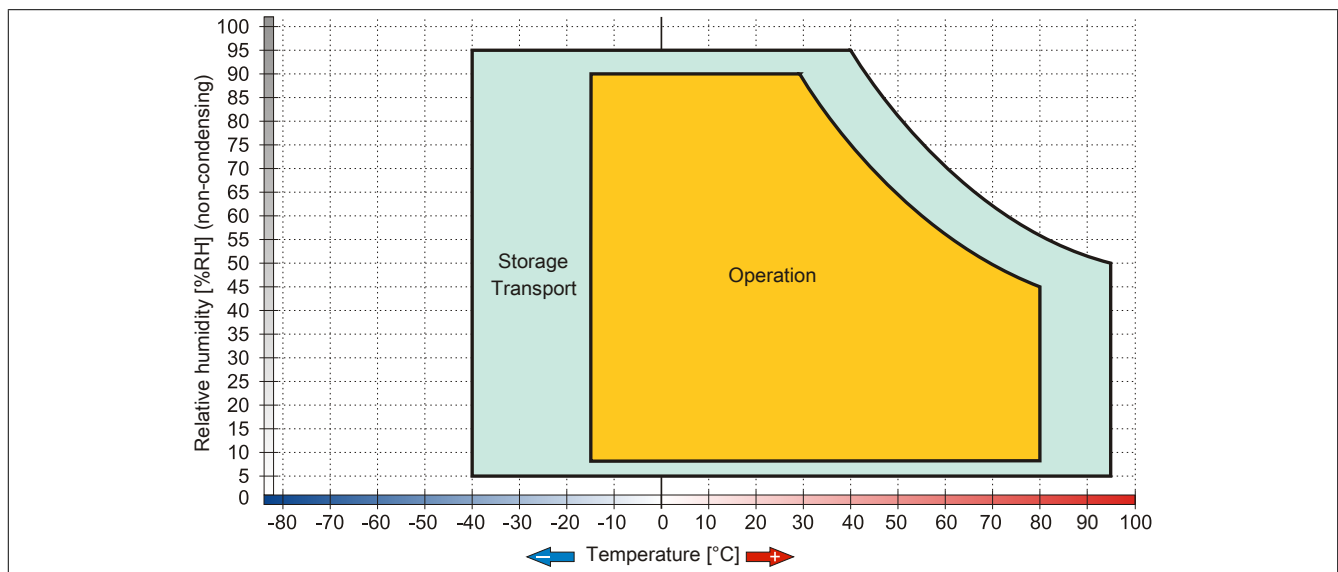


Figure 31: 5AC801.HDDI-02 - Temperature humidity diagram

### 3.9.3 5AC801.HDDI-03

#### 3.9.3.1 General information

This 250 GB slide-in compact hard disk is specified for 24-hour operation and can be used in APC810 and PPC800 system units.

#### When used in a PPC800

##### Information:

The adapter 5AC803.BC02-00 is required for the use of slide-in compact drives.

When inserted in the slide-in compact slot, the slide-in compact drive is accessed internally via SATA.

#### 3.9.3.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5AC801.HDDI-03	250 GB slide-in compact SATA hard disk, 24/7 operation. Note: please see the manual for information about using this hard disk	
	<b>Optional accessories</b>	
	<b>Drives</b>	
5MMHDD.0250-00	250 GB SATA hard disk; replacement for 5AC801.HDDI-03 and 5ACPCI.RAIC-05; note: please see the manual for information about using this hard disk	

Table 65: 5AC801.HDDI-03 - Order data

#### 3.9.3.3 Technical data

##### Information:

The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the complete system. For the complete system in which this individual component is used, refer to the data given specifically for that device.

Product ID	5AC801.HDDI-03
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
cULus HazLoc Class 1 Division 2	Yes
ATEX Zone 22	Yes
GL	Yes
<b>Hard disk drive</b>	
Capacity	250 GB
Number of heads	1
Number of sectors	488,397,168
Bytes per sector	512
Cache	8 MB
Speed	5400 rpm $\pm 0.2\%$
Startup time	Typ. 3.6 s (from 0 rpm to read access)
MTBF	550,000 POH <sup>1)</sup>
S.M.A.R.T. support	Yes
Interface	SATA
Access time	5.56 ms
Supported transfer modes	SATA 1.0, Serial ATA Revision 2.6 PIO mode 0-4, multiword DMA mode 0-2, UDMA mode 0-6
Data transfer rate	
Internal	Max. 1175 Mbit/s
To/From host	Max. 150 MB/s (SATA I), max. 300 MB/s (SATA II)

Table 66: 5AC801.HDDI-03 - Technical data

Product ID	5AC801.HDDI-03
Positioning time	
Minimum (track to track)	1 ms
Nominal (read only)	14 ms
Maximum (read only)	30 ms
Environmental conditions	
Temperature <sup>2)</sup>	
Operation <sup>3)</sup>	0 to 60°C
24-hour operation <sup>4)</sup>	0 to 60°C
Storage	-40 to 70°C
Transport	-40 to 70°C
Relative humidity <sup>5)</sup>	
Operation	5 to 95%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration	
Operation	5 to 500 Hz: 0.5 g; no unrecoverable errors
Storage	5 to 500 Hz: 5 g; no unrecoverable errors
Transport	5 to 500 Hz: 5 g; no unrecoverable errors
Shock	
Operation	350 g and 2 ms duration; no unrecoverable errors
Storage	800 g and 2 ms duration; no unrecoverable errors
Transport	1000 g and 1 ms duration; no unrecoverable errors
Transport	600 g and 0.5 ms duration; no unrecoverable errors
Transport	800 g and 2 ms duration; no unrecoverable errors
Transport	1000 g and 1 ms duration; no unrecoverable errors
Transport	600 g and 0.5 ms duration; no unrecoverable errors
Altitude	
Operation	-300 to 3048 m
Storage	-300 to 12192 m
Mechanical characteristics	
Installation	Fixed <sup>6)</sup>
Dimensions	
Width	13 mm
Height	98 mm
Depth	105 mm
Weight	134 g
Manufacturer information	
Manufacturer	Seagate
Manufacturer product ID	ST9250315AS

Table 66: 5AC801.HDDI-03 - Technical data

- 1) With 8760 POH (power-on hours) per year and 25°C surface temperature.
- 2) Temperature values at an elevation of 305 meters. The temperature specification must be reduced linearly by 1°C every 305 meters. The temperature increase and decrease can be a maximum of 20°C per hour.
- 3) Standard operation refers to 333 POH (power-on hours) per month.
- 4) 24-hour operation refers to 732 POH (power-on hours) per month.
- 5) Humidity gradient: Maximum 30% per hour.
- 6) Slide-in compact installation.

### 3.9.3.4 Temperature humidity diagram

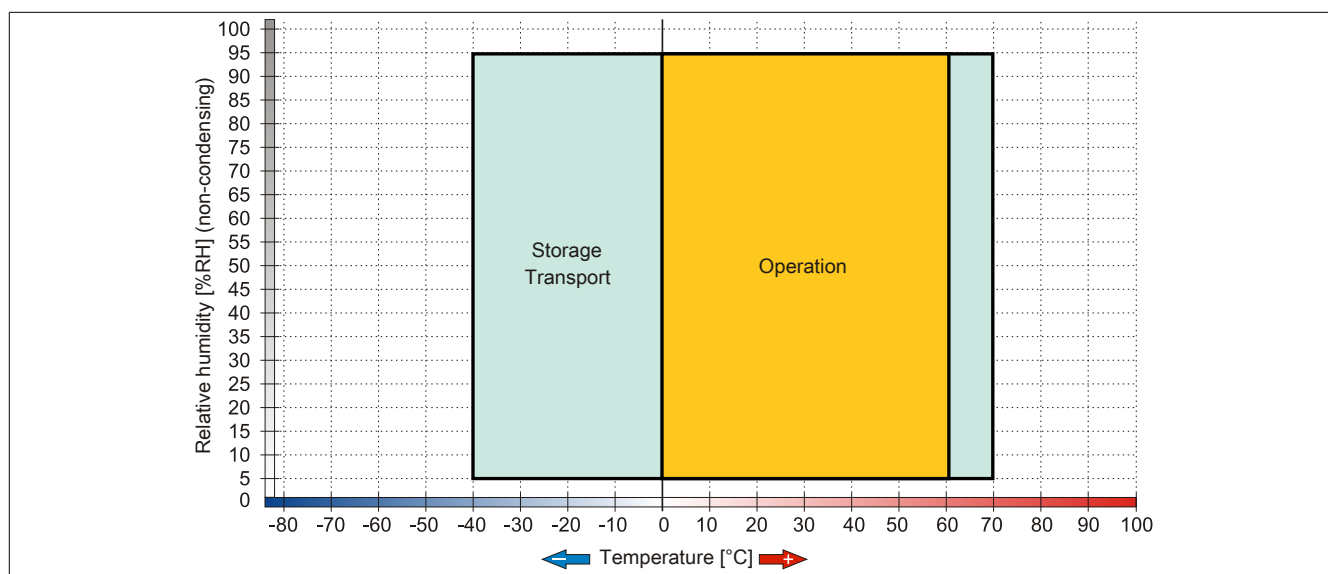


Figure 32: 5AC801.HDDI-03 - Temperature humidity diagram

### 3.9.4 5AC801.HDDI-04

#### 3.9.4.1 General information

This 500 GB slide-in compact hard disk is specified for 24-hour operation and can be used in APC810 and PPC800 system units.

- 500 GB hard disk
- Slide-in compact
- Specified for 24-hour operation
- S.M.A.R.T. support

#### When used in a PPC800

##### Information:

The adapter 5AC803.BC02-00 is required for the use of slide-in compact drives.

When inserted in the slide-in compact slot, the slide-in compact drive is accessed internally via SATA.

#### 3.9.4.2 Order data


Model number	Short description	Figure
5AC801.HDDI-04	<b>Drives</b> 500 GB SATA hard disk, slide-in compact, 24/7 operation Note: please see the manual for information about using this hard disk	
	<b>Optional accessories</b>	
	<b>Drives</b>	
5MMHDD.0500-00	500 GB SATA hard disk; replacement for 5AC801.HDDI-04, 5AC901.CHDD-01 and 5ACPCI.RAIC-06; note: please see the manual for information about using this hard disk	

Table 67: 5AC801.HDDI-04 - Order data

#### 3.9.4.3 Technical data

##### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5AC801.HDDI-04
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
GL	Yes
<b>Hard disk drive</b>	
Capacity	500 GB
Number of heads	2
Number of sectors	976,773,168
Bytes per sector	512 (logical) / 4096 (physical)
Cache	16 MB
Speed	5400 rpm $\pm 0.2\%$
Startup time	Typ. 3.5 s (from 0 rpm to read access)
Service life	5 years
MTBF	1,000,000 POH <sup>1)</sup>
S.M.A.R.T. support	Yes
Interface	SATA
Access time	5.5 ms
Supported transfer modes	SATA II
Data transfer rate	
Internal	Max. 147 MB/s
To/From host	Max. 150 MB/s (SATA I), max. 300 MB/s (SATA II)
Positioning time	
Nominal (read only)	11 ms
Maximum (read only)	21 ms

Table 68: 5AC801.HDDI-04 - Technical data

Product ID	5AC801.HDDI-04
Environmental conditions	
Temperature <sup>2)</sup>	
Operation <sup>3)</sup>	0 to 60°C
24-hour operation <sup>4)</sup>	0 to 60°C
Storage	-40 to 70°C
Transport	-40 to 70°C
Relative humidity <sup>5)</sup>	
Operation	5 to 95%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration	
Operation (continuous)	5 to 500 Hz: 0.25 g; no unrecoverable errors
Operation (occasional)	5 to 500 Hz: 0.5 g; no unrecoverable errors
Storage	10 to 500 Hz: 5 g; no unrecoverable errors
Transport	10 to 500 Hz: 5 g; no unrecoverable errors
Shock	
Operation	400 g and 2 ms duration; no unrecoverable errors
Storage	1000 g and 2 ms duration; no unrecoverable errors
Transport	1000 g and 2 ms duration; no unrecoverable errors
Altitude	
Operation	-305 to 3048 m
Storage	-305 to 12192 m
Mechanical characteristics	
Installation	Fixed <sup>6)</sup>
Dimensions	
Width	13 mm
Height	98 mm
Depth	105 mm
Weight	134 g
Manufacturer information	
Manufacturer	Western Digital
Manufacturer product ID	WD5000LUCT

Table 68: 5AC801.HDDI-04 - Technical data

- 1) With 8760 POH (power-on hours) per year and 25°C surface temperature.
- 2) Temperature values at an elevation of 305 meters. The temperature specification must be reduced linearly by 1°C every 305 meters. The temperature increase and decrease can be a maximum of 20°C per hour.
- 3) Standard operation refers to 333 POH (power-on hours) per month.
- 4) 24-hour operation refers to 732 POH (power-on hours) per month.
- 5) Humidity gradient: Maximum 20% per hour.
- 6) Slide-in compact installation.

### 3.9.4.4 Temperature humidity diagram

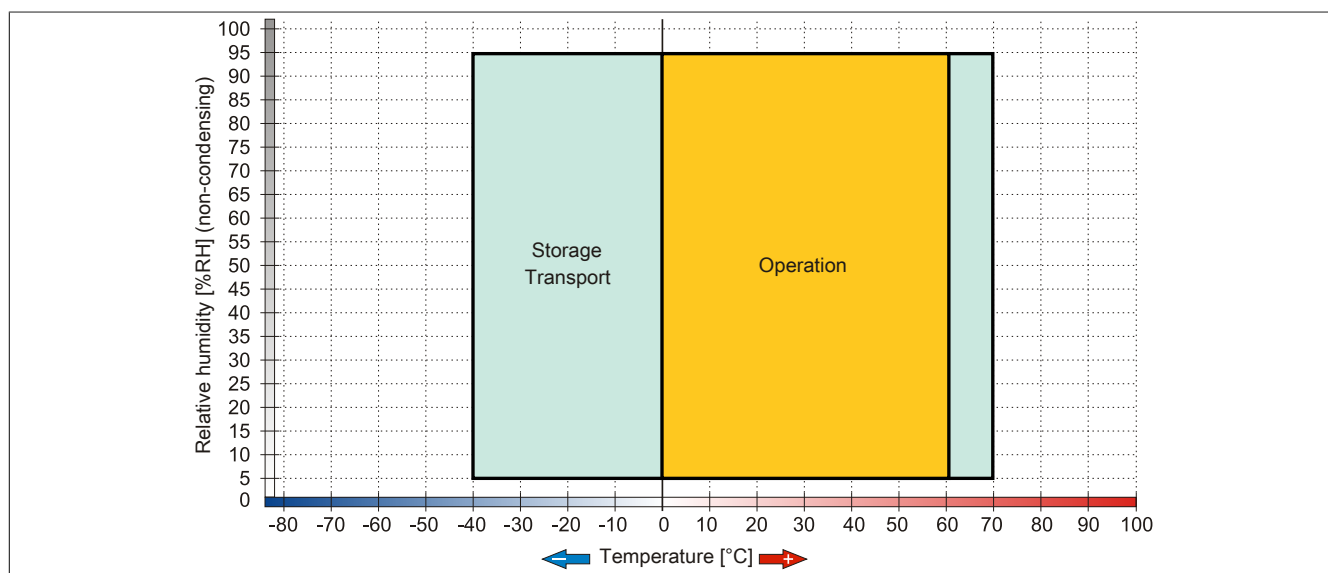


Figure 33: 5AC801.HDDI-04 - Temperature humidity diagram

### 3.9.5 5AC801.SSDI-00

#### 3.9.5.1 General information

This 32 GB slide-in compact SSD (solid-state drive) is based on single-level cell (SLC) technology and can be used in APC810 and PPC800 system units.

#### When used in a PPC800

##### Information:

The adapter 5AC803.BC02-00 is required for the use of slide-in compact drives.

When inserted in the slide-in compact slot, the slide-in compact drive is accessed internally via SATA.

#### 3.9.5.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5AC801.SSDI-00	32 GB SATA SSD (SLC), slide-in compact	

Table 69: 5AC801.SSDI-00 - Order data

#### 3.9.5.3 Technical data

##### Caution!

A sudden loss of power may result in data loss! In very rare cases, the mass storage device may also become damaged.

To prevent damage and loss of data, the use of a UPS device is recommended.

##### Information:

The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the complete system. For the complete system in which this individual component is used, refer to the data given specifically for that device.

Product ID	5AC801.SSDI-00
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
GL	Yes
<b>Solid state drive</b>	
Capacity	32 GB
Data reliability	<1 unrecoverable error in 10 <sup>15</sup> bit read accesses
MTBF	2,000,000 hours
Power on/off cycles	50,000
S.M.A.R.T. support	Yes
Interface	SATA
Maintenance	None
Continuous reading	Max. 250 MB/s
Continuous writing	Max. 170 MB/s
IOPS <sup>1)</sup>	
4k read	35,000
4k write	3,300

Table 70: 5AC801.SSDI-00 - Technical data

Product ID	5AC801.SSDI-00
Endurance	
Guaranteed data volume	
Guaranteed	700 TB
Results for 5 years	350 GB/day
SLC flash	Yes
Wear leveling	Static
Error correction coding (ECC)	Yes
Compatibility	SATA revision 2.6 compliant, compatible with SATA 1.5 Gbit/s and 3 Gbit/s interface rates ATA/ATAPI-7 SSD Enhanced SMART ATA feature set Native Command Queuing (NCQ)
Environmental conditions	
Temperature	
Operation	0 to 70°C
Storage	-55 to 95°C
Transport	-55 to 95°C
Relative humidity	
Operation	5 to 95%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration	
Operation	7 to 800 Hz: 2.17 g
Storage	10 to 500 Hz: 3.13 g
Transport	10 to 500 Hz: 3.13 g
Shock	
Operation	1000 g, 0.5 ms
Storage	1000 g, 0.5 ms
Transport	1000 g, 0.5 ms
Altitude	
Operation	-300 to 12192 m
Storage	-300 to 12192 m
Transport	-300 to 12192 m
Mechanical characteristics	
Installation	Fixed <sup>2)</sup>
Dimensions	
Width	13 mm
Height	98 mm
Depth	105 mm
Weight	118 g
Manufacturer information	
Manufacturer	Intel
Manufacturer product ID	SSDSA2SH032G1

Table 70: 5AC801.SSDI-00 - Technical data

- 1) IOPS: Random read and write input/output operations per second.
- 2) Slide-in compact installation.

### 3.9.5.4 Temperature humidity diagram

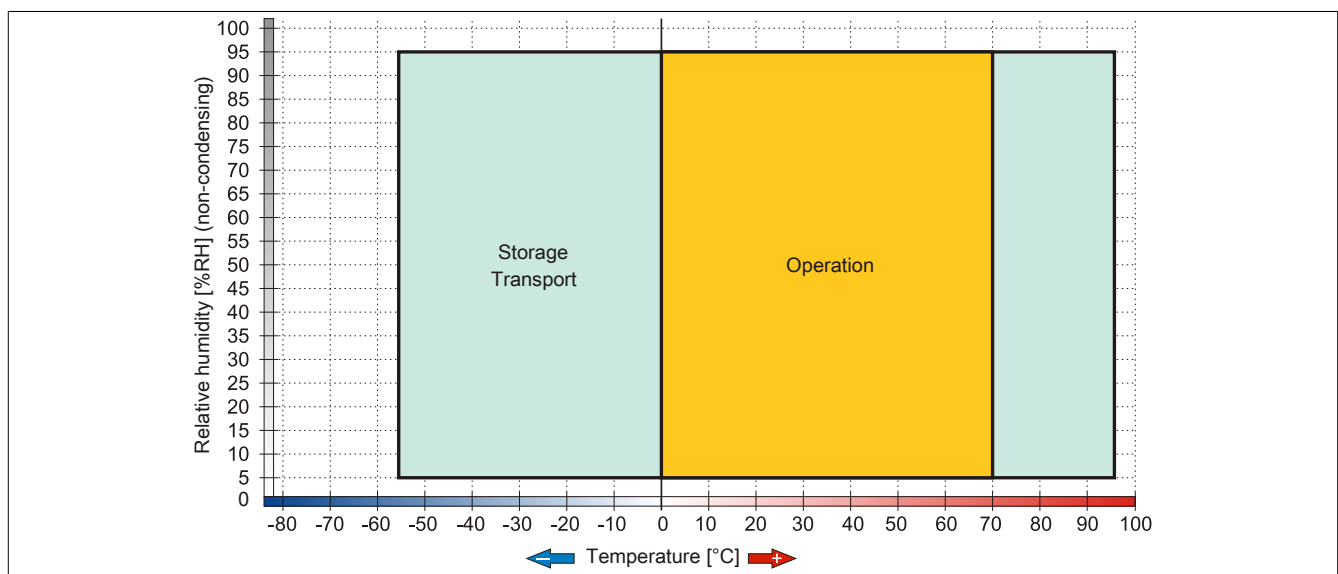


Figure 34: 5AC801.SSDI-00 - Temperature humidity diagram



### 3.9.5.5 Benchmark

The following two benchmarks show a comparison of the Intel solid-state drive (5AC801.SSDI-00) and the Seagate hard disk (5AC801.HDDI-00) for cyclic reading and writing.

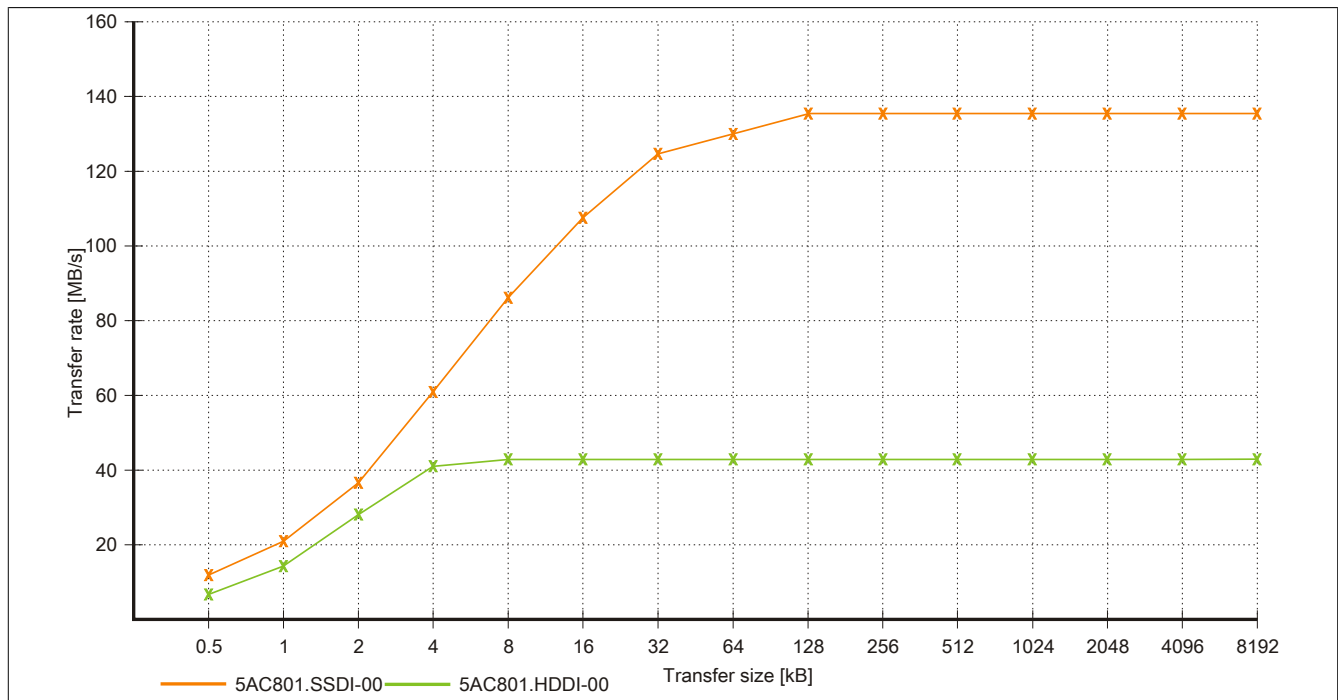


Figure 35: 5AC801.SSDI-00 - ATTO disk benchmark v2.34 - Cyclic read

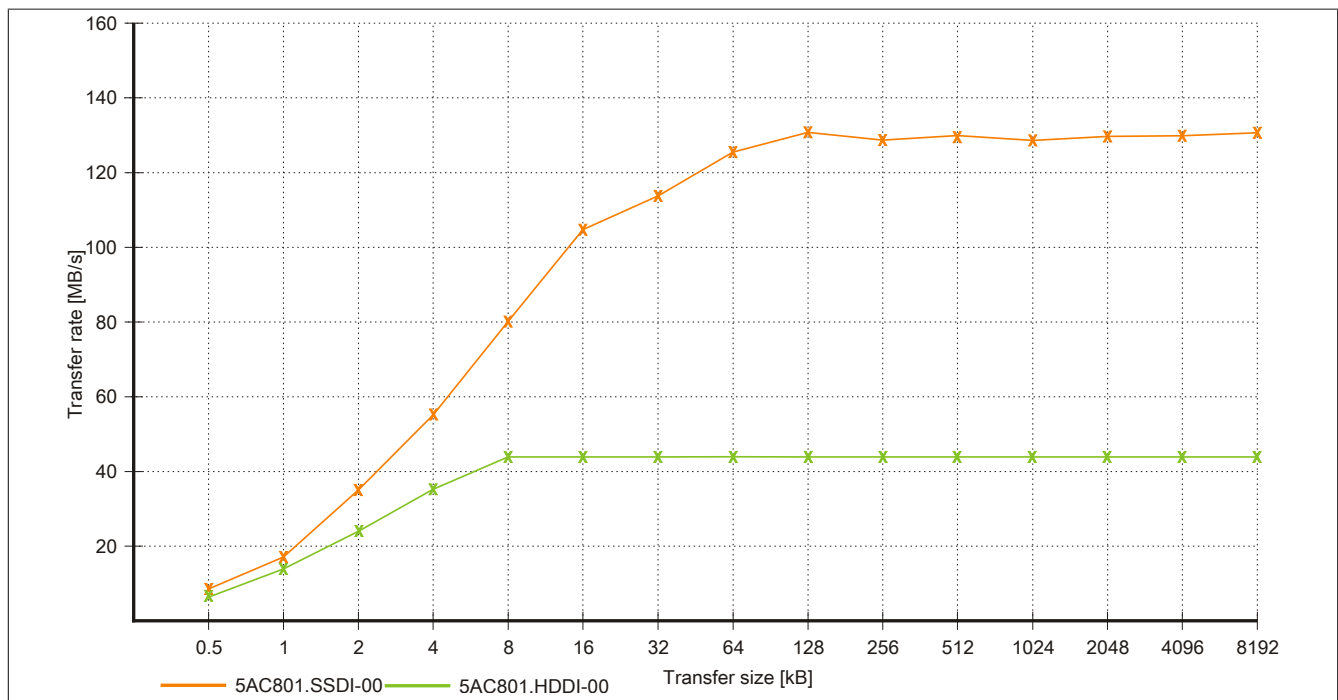


Figure 36: 5AC801.SSDI-00 - ATTO disk benchmark v2.34 - Cyclic write

### 3.9.6 5AC801.SSDI-01

#### 3.9.6.1 General information

This 60 GB slide-in compact SSD (solid-state drive) is based on multi-level cell (MLC) technology and can be used in APC810 and PPC800 system units.

#### When used in a PPC800

##### Information:

The adapter 5AC803.BC02-00 is required for the use of slide-in compact drives.

When inserted in the slide-in compact slot, the slide-in compact drive is accessed internally via SATA.

#### 3.9.6.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5AC801.SSDI-01	60 GB SATA slide-in compact SSD (MLC)	
	<b>Optional accessories</b>	
	<b>Drives</b>	
5MMSSD.0060-00	60 GB SATA SSD (MLC); replacement for 5AC801.SSDI-01 and 5AC901.CSSD-01; SSD for 5PP5IO.GMAC-00; note: please see the manual for information about using this SSD	

Table 71: 5AC801.SSDI-01 - Order data

#### 3.9.6.3 Technical data

##### Caution!

A sudden loss of power may result in data loss! In very rare cases, the mass storage device may also become damaged.

To prevent damage and loss of data, the use of a UPS device is recommended.

##### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5AC801.SSDI-01
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
GL	Yes
<b>Solid state drive</b>	
Capacity	60 GB
Data reliability	<1 unrecoverable error in 10 <sup>16</sup> bit read accesses
MTBF	1,200,000 hours
S.M.A.R.T. support	Yes
Interface	SATA
Maintenance	None
Continuous reading	Max. 550 MB/s with SATA 6 Gbit/s Max. 280 MB/s with SATA 3 Gbit/s
Continuous writing	Max. 475 MB/s with SATA 6 Gbit/s Max. 245 MB/s with SATA 3 Gbit/s

Table 72: 5AC801.SSDI-01 - Technical data

Product ID	5AC801.SSDI-01
IOPS <sup>1)</sup>	
4k read	15,000
4k write	
Typical	23,000
Maximum	80,000
Endurance	
MLC flash	Yes
Compatibility	SATA 3.0 compliant ACS-2 SSD Enhanced SMART ATA feature set Native Command Queuing (NCQ)
Environmental conditions	
Temperature	
Operation	0 to 70°C
Storage	-55 to 95°C
Transport	-55 to 95°C
Relative humidity	
Operation	5 to 95%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration	
Operation	5 to 700 Hz: 2.17 g
Storage	5 to 800 Hz: 3.13 g
Transport	5 to 800 Hz: 3.13 g
Shock	
Operation	1500 g, 0.5 ms
Storage	1500 g, 0.5 ms
Transport	1500 g, 0.5 ms
Altitude	
Operation	-300 to 12192 m
Storage	-300 to 12192 m
Transport	-300 to 12192 m
Mechanical characteristics	
Installation	Fixed <sup>2)</sup>
Dimensions	
Width	13 mm
Height	98 mm
Depth	105 mm
Weight	118 g
Manufacturer information	
Manufacturer	Intel
Manufacturer product ID	SSDSC2CW060A3

Table 72: 5AC801.SSDI-01 - Technical data

1) IOPS: Random read and write input/output operations per second.

2) Slide-in compact installation.

### 3.9.6.4 Temperature humidity diagram

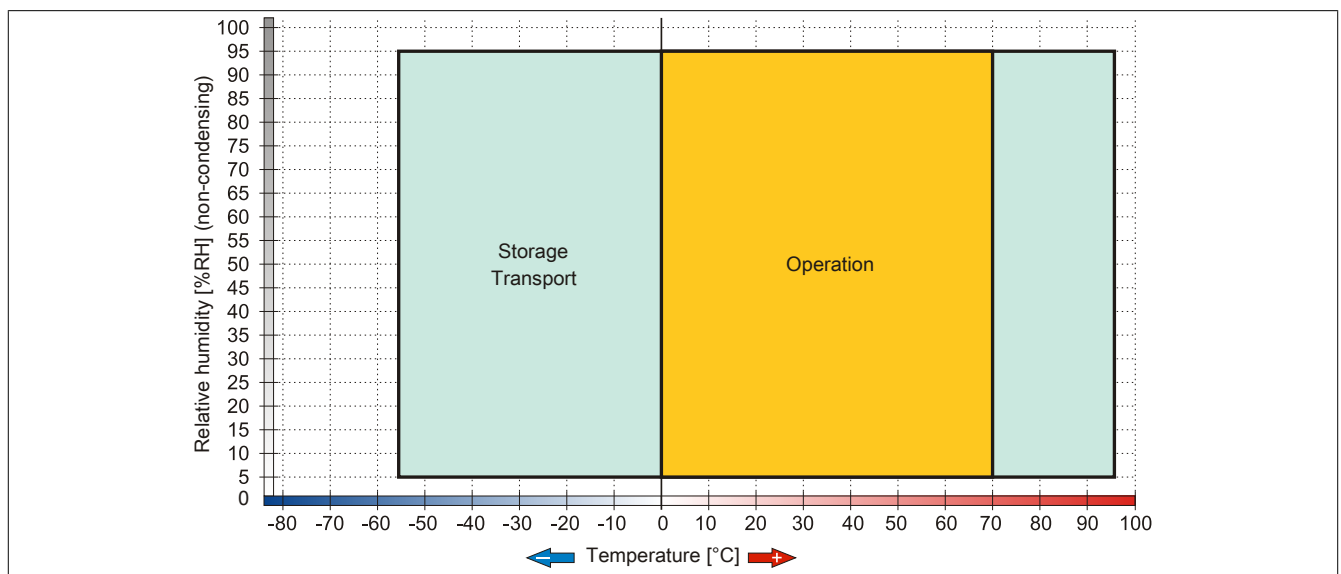


Figure 37: 5AC801.SSDI-01 - Temperature humidity diagram

### 3.9.7 5AC801.SSDI-02

#### 3.9.7.1 General information

This 180 GB slide-in compact SSD (solid-state drive) is based on multi-level cell (MLC) technology and can be used in APC810 and PPC800 system units.

#### When used in a PPC800

##### Information:

The adapter 5AC803.BC02-00 is required for the use of slide-in compact drives.

When inserted in the slide-in compact slot, the slide-in compact drive is accessed internally via SATA.

#### 3.9.7.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5AC801.SSDI-02	180 GB SATA slide-in compact SSD (MLC)	
	<b>Optional accessories</b>	
	<b>Drives</b>	
5MMSSD.0180-00	180 GB SATA SSD (MLC); replacement part for 5AC801.SSDI-02 and 5AC901.CSSD-02; SSD for 5PP5IO.GMAC-00; note: please see the manual for information about using this SSD	

Table 73: 5AC801.SSDI-02 - Order data

#### 3.9.7.3 Technical data

##### Caution!

A sudden loss of power may result in data loss! In very rare cases, the mass storage device may also become damaged.

To prevent damage and loss of data, the use of a UPS device is recommended.

##### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5AC801.SSDI-02
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
GL	Yes
<b>Solid state drive</b>	
Capacity	180 GB
Data reliability	<1 unrecoverable error in 10 <sup>16</sup> bit read accesses
MTBF	1,200,000 hours
S.M.A.R.T. support	Yes
Interface	SATA
Maintenance	None
Continuous reading	Max. 550 MB/s with SATA 6 Gbit/s Max. 280 MB/s with SATA 3 Gbit/s
Continuous writing	Max. 520 MB/s with SATA 6 Gbit/s Max. 260 MB/s with SATA 3 Gbit/s

Table 74: 5AC801.SSDI-02 - Technical data

Product ID	5AC801.SSDI-02
IOPS <sup>1)</sup>	
4k read	50,000
4k write	
Typical	60,000
Maximum	80,000
Endurance	
MLC flash	Yes
Compatibility	SATA 3.0 compliant ACS-2 SSD Enhanced SMART ATA feature set Native Command Queuing (NCQ)
Environmental conditions	
Temperature	
Operation	0 to 70°C
Storage	-55 to 95°C
Transport	-55 to 95°C
Relative humidity	
Operation	5 to 95%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration	
Operation	5 to 700 Hz: 2.17 g
Storage	5 to 800 Hz: 3.13 g
Transport	5 to 800 Hz: 3.13 g
Shock	
Operation	1500 g, 0.5 ms
Storage	1500 g, 0.5 ms
Transport	1500 g, 0.5 ms
Altitude	
Operation	-300 to 12192 m
Storage	-300 to 12192 m
Transport	-300 to 12192 m
Mechanical characteristics	
Installation	Fixed <sup>2)</sup>
Dimensions	
Width	13 mm
Height	98 mm
Depth	105 mm
Weight	118 g
Manufacturer information	
Manufacturer	Intel
Manufacturer product ID	SSDSC2CW180A3

Table 74: 5AC801.SSDI-02 - Technical data

- 1) IOPS: Random read and write input/output operations per second.  
2) Slide-in compact installation.

### 3.9.7.4 Temperature humidity diagram

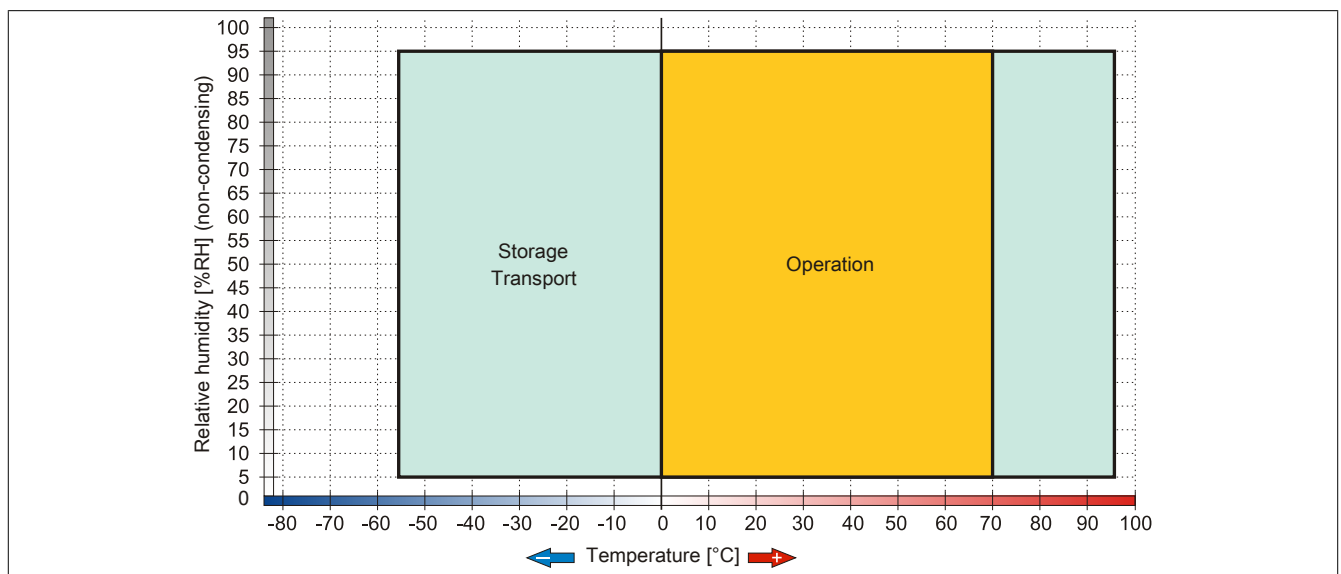


Figure 38: 5AC801.SSDI-02 - Temperature humidity diagram

### 3.9.8 5AC801.SSDI-03

#### 3.9.8.1 General information

This 60 GB slide-in compact SSD (solid-state drive) is based on multi-level cell (MLC) technology and can be used in APC810 and PPC800 system units.

#### When used in a PPC800

##### Information:

The adapter 5AC803.BC02-00 is required for the use of slide-in compact drives.

When inserted in the slide-in compact slot, the slide-in compact drive is accessed internally via SATA.

#### 3.9.8.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5AC801.SSDI-03	60 GB SATA slide-in compact SSD (MLC)	
	<b>Optional accessories</b>	
	<b>Drives</b>	
5MMSSD.0060-01	60 GB SATA SSD (MLC); replacement for 5AC801.SSDI-03 and 5AC901.CSSD-03; SSD for 5PP5IO.GMAC-00; note: please see the manual for information about using this SSD	

Table 75: 5AC801.SSDI-03 - Order data

#### 3.9.8.3 Technical data

##### Caution!

A sudden loss of power may result in data loss! In very rare cases, the mass storage device may also become damaged.

To prevent damage and loss of data, the use of a UPS device is recommended.

##### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5AC801.SSDI-03
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
GL	Yes
<b>Solid state drive</b>	
Capacity	60 GB
Data reliability	<1 unrecoverable error in 10 <sup>15</sup> bit read accesses
MTBF	1,500,000 hours
S.M.A.R.T. support	Yes
Interface	SATA
Maintenance	None
Continuous reading	Max. 510 MB/s
Continuous writing	Max. 430 MB/s
IOPS <sup>1)</sup>	
4k read	Max. 60,000 (random)
4k write	Max. 25,000 (random)
<b>Endurance</b>	
MLC flash	Yes
Compatibility	SATA 3.0 compliant ACS-2 SSD Enhanced SMART ATA feature set Native Command Queuing (NCQ)

Table 76: 5AC801.SSDI-03 - Technical data

Product ID	5AC801.SSDI-03
Environmental conditions	
Temperature	
Operation	0 to 70°C
Storage	-40 to 95°C
Transport	-40 to 95°C
Relative humidity	
Operation	8 to 95%, non-condensing
Storage	8 to 95%, non-condensing
Transport	8 to 95%, non-condensing
Vibration	
Operation	10 to 2000 Hz: 20 g
Storage	10 to 2000 Hz: 20 g
Transport	10 to 2000 Hz: 20 g
Shock	
Operation	1500 g, 0.5 ms
Storage	1500 g, 0.5 ms
Transport	1500 g, 0.5 ms
Altitude	
Operation	-300 to 12192 m
Storage	-300 to 12192 m
Transport	-300 to 12192 m
Mechanical characteristics	
Installation	Fixed <sup>2)</sup>
Dimensions	
Width	13 mm
Height	98 mm
Depth	105 mm
Weight	118 g
Manufacturer information	
Manufacturer	Toshiba
Manufacturer product ID	THNSNH060GBST

Table 76: 5AC801.SSDI-03 - Technical data

- 1) IOPS: Random read and write input/output operations per second.
- 2) Slide-in compact installation.

### 3.9.8.4 Temperature humidity diagram

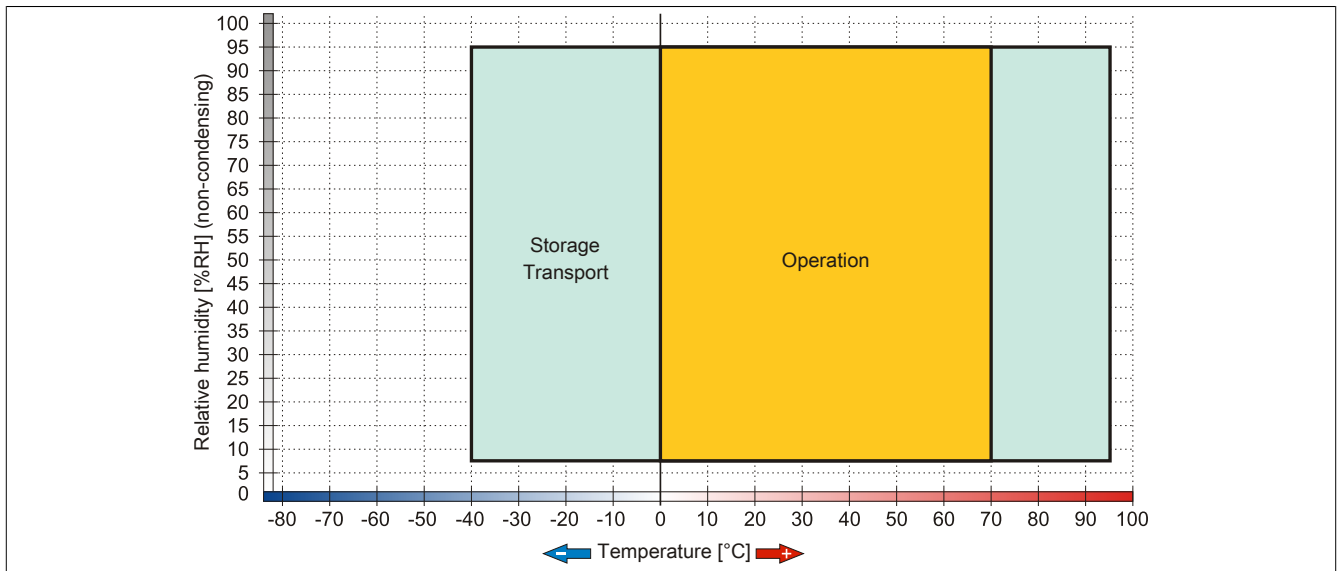


Figure 39: 5AC801.SSDI-03 - Temperature humidity diagram

### 3.9.9 5AC801.SSDI-04

#### 3.9.9.1 General information

This 128 GB slide-in compact SSD (solid-state drive) is based on multi-level cell (MLC) technology and can be used in APC810 and PPC800 system units.

#### When used in a PPC800

##### Information:

The adapter 5AC803.BC02-00 is required for the use of slide-in compact drives.

When inserted in the slide-in compact slot, the slide-in compact drive is accessed internally via SATA.

#### 3.9.9.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5AC801.SSDI-04	128 GB SATA SSD (MLC), slide-in compact	
	<b>Optional accessories</b>	
	<b>Drives</b>	
5MMSSD.0128-01	128 GB SATA SSD (MLC); replacement for 5AC801.SSDI-04 and 5AC901.CSSD-04; SSD for 5PP5IO.GMAC-00; note: please see the manual for information about using this SSD	

Table 77: 5AC801.SSDI-04 - Order data

#### 3.9.9.3 Technical data

##### Caution!

A sudden loss of power may result in data loss! In very rare cases, the mass storage device may also become damaged.

To prevent damage and loss of data, the use of a UPS device is recommended.

##### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5AC801.SSDI-04
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
GL	Yes
<b>Solid state drive</b>	
Capacity	128 GB
Data reliability	<1 unrecoverable error in 10 <sup>15</sup> bit read accesses
MTBF	1,500,000 hours
S.M.A.R.T. support	Yes
Interface	SATA
Maintenance	None
Continuous reading	Max. 510 MB/s
Continuous writing	Max. 450 MB/s
IOPS <sup>1)</sup>	
4k read	Max. 80,000 (random)
4k write	Max. 35,000 (random)

Table 78: 5AC801.SSDI-04 - Technical data



<b>Product ID</b>	<b>5AC801.SSDI-04</b>
<b>Endurance</b>	
MLC flash	Yes
Compatibility	SATA 3.0 compliant ACS-2 SSD Enhanced SMART ATA feature set Native Command Queuing (NCQ)
<b>Environmental conditions</b>	
Temperature	
Operation	0 to 70°C
Storage	-40 to 95°C
Transport	-40 to 95°C
Relative humidity	
Operation	8 to 95%, non-condensing
Storage	8 to 95%, non-condensing
Transport	8 to 95%, non-condensing
Vibration	
Operation	10 to 2000 Hz: 20 g
Storage	10 to 2000 Hz: 20 g
Transport	10 to 2000 Hz: 20 g
Shock	
Operation	1500 g, 0.5 ms
Storage	1500 g, 0.5 ms
Transport	1500 g, 0.5 ms
Altitude	
Operation	-300 to 12192 m
Storage	-300 to 12192 m
Transport	-300 to 12192 m
<b>Mechanical characteristics</b>	
Installation	Fixed <sup>2)</sup>
Dimensions	
Width	13 mm
Height	98 mm
Depth	105 mm
Weight	118 g
<b>Manufacturer information</b>	
Manufacturer	Toshiba
Manufacturer product ID	THNSNH128GBST

Table 78: 5AC801.SSDI-04 - Technical data

- 1) IOPS: Random read and write input/output operations per second.  
2) Slide-in compact installation.

### 3.9.9.4 Temperature humidity diagram

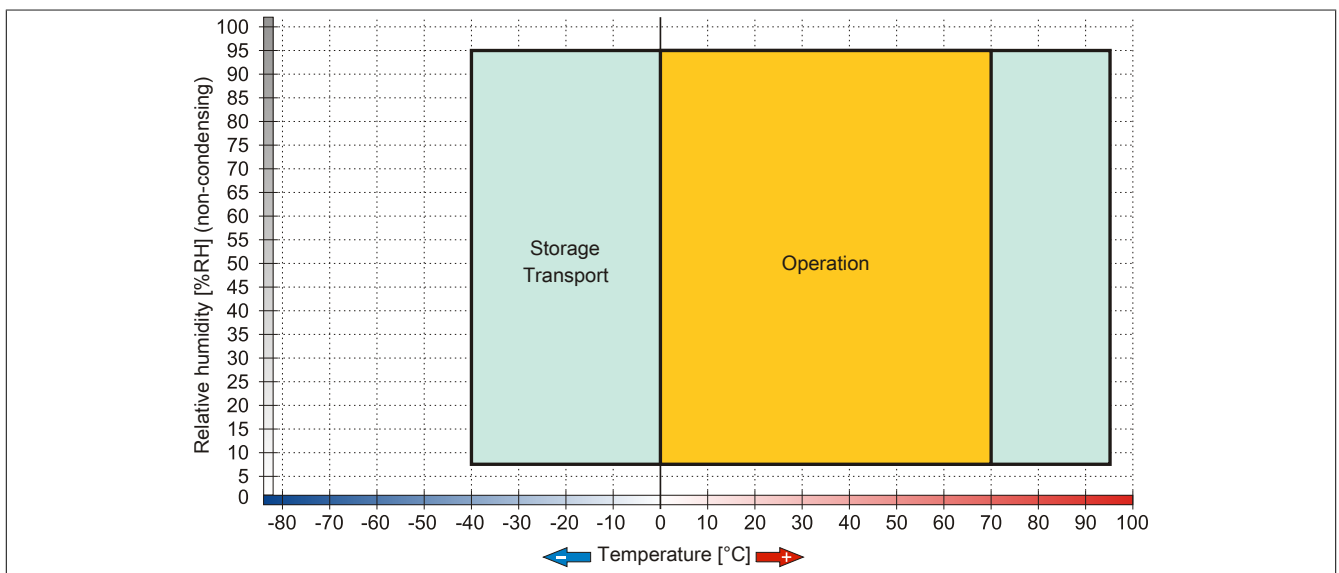


Figure 40: 5AC801.SSDI-04 - Temperature humidity diagram

### 3.9.10 5MMSSD.0060-00

#### 3.9.10.1 General information

This 60 GB slide-in compact SSD (solid-state drive) is based on multi-level cell (MLC) technology and can be used as a replacement or accessory part.

- Replacement for 5AC801.SSDI-01 or 5AC901.CSSD-01 SSD drives
- Accessory for the APC510 (optional SSD for I/O board)

#### 3.9.10.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5MMSSD.0060-00	60 GB SATA SSD (MLC); replacement for 5AC801.SSDI-01 and 5AC901.CSSD-01; SSD for 5PP510.GMAC-00; note: please see the manual for information about using this SSD	

Table 79: 5MMSSD.0060-00 - Order data

#### 3.9.10.3 Technical data

##### Caution!

A sudden loss of power may result in data loss! In very rare cases, the mass storage device may also become damaged.

To prevent damage and loss of data, the use of a UPS device is recommended.

##### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5MMSSD.0060-00
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
<b>Solid state drive</b>	
Capacity	60 GB
Data reliability	<1 unrecoverable error in 10 <sup>16</sup> bit read accesses
MTBF	1,200,000 hours
S.M.A.R.T. support	Yes
Interface	SATA
Maintenance	None
Continuous reading	Max. 550 MB/s with SATA 6 Gbit/s Max. 280 MB/s with SATA 3 Gbit/s
Continuous writing	Max. 475 MB/s with SATA 6 Gbit/s Max. 245 MB/s with SATA 3 Gbit/s
IOPS <sup>1)</sup>	
4k read	15,000
4k write	
Typical	23,000
Maximum	80,000
<b>Endurance</b>	
MLC flash	Yes
Compatibility	SATA 3.0 compliant ACS-2 SSD Enhanced SMART ATA feature set Native Command Queuing (NCQ)

Table 80: 5MMSSD.0060-00 - Technical data

Product ID	5MMSSD.0060-00
Environmental conditions	
Temperature	
Operation	0 to 70°C
Storage	-55 to 95°C
Transport	-55 to 95°C
Relative humidity	
Operation	5 to 95%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration	
Operation	5 to 700 Hz: 2.17 g
Storage	5 to 800 Hz: 3.13 g
Transport	5 to 800 Hz: 3.13 g
Shock	
Operation	1500 g, 0.5 ms
Storage	1500 g, 0.5 ms
Transport	1500 g, 0.5 ms
Altitude	
Operation	-300 to 12192 m
Storage	-300 to 12192 m
Transport	-300 to 12192 m
Mechanical characteristics	
Dimensions	
Width	9.5 mm
Height	69 mm
Depth	100 mm
Weight	78 g
Manufacturer information	
Manufacturer	Intel
Manufacturer product ID	SSDSC2CW060A3

Table 80: 5MMSSD.0060-00 - Technical data

1) IOPS: Random read and write input/output operations per second.

### 3.9.10.4 Temperature humidity diagram

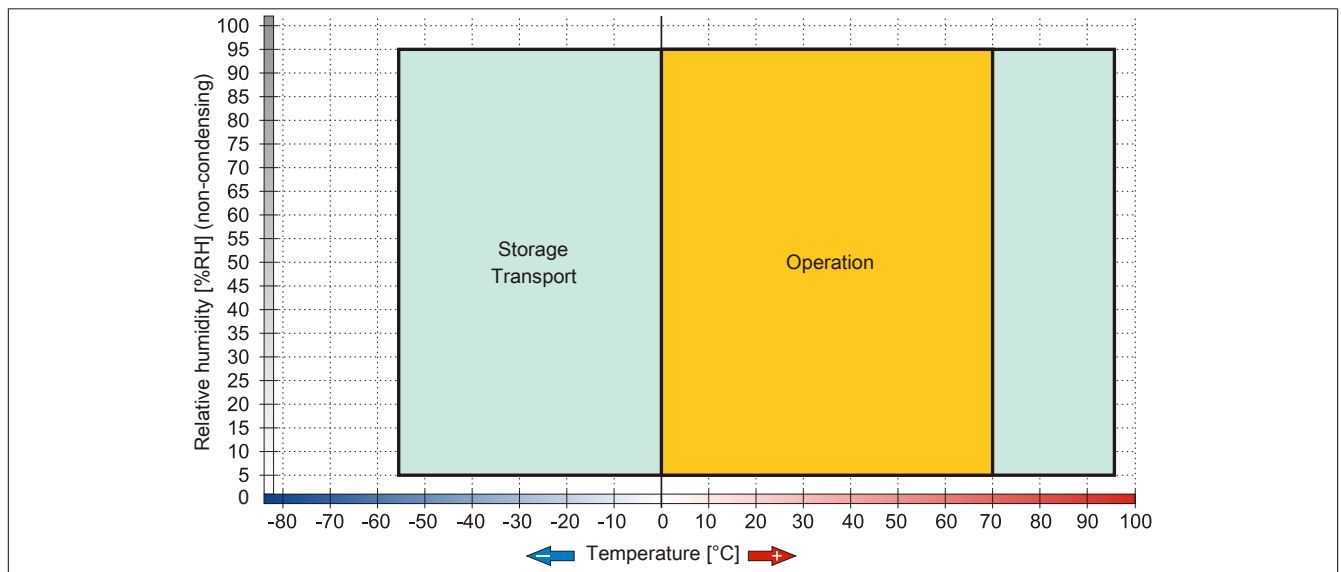


Figure 41: 5MMSSD.0060-00 - Temperature humidity diagram

### 3.9.11 5MMSSD.0060-01

#### 3.9.11.1 General information

This 60 GB slide-in compact SSD (solid-state drive) is based on multi-level cell (MLC) technology and can be used as a replacement or accessory part.

- Replacement for 5AC801.SSDI-03 or 5AC901.CSSD-03 SSD drives
- Accessory for the APC510 (optional SSD for I/O board)

#### 3.9.11.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5MMSSD.0060-01	60 GB SATA SSD (MLC); replacement for 5AC801.SSDI-03 and 5AC901.CSSD-03; SSD for 5PP510.GMAC-00; note: please see the manual for information about using this SSD	

Table 81: 5MMSSD.0060-01 - Order data

#### 3.9.11.3 Technical data

##### Caution!

A sudden loss of power may result in data loss! In very rare cases, the mass storage device may also become damaged.

To prevent damage and loss of data, the use of a UPS device is recommended.

##### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5MMSSD.0060-01
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
<b>Solid state drive</b>	
Capacity	60 GB
Data reliability	<1 unrecoverable error in 10 <sup>15</sup> bit read accesses
MTBF	1,500,000 hours
S.M.A.R.T. support	Yes
Interface	SATA
Maintenance	None
Continuous reading	Max. 510 MB/s
Continuous writing	Max. 430 MB/s
IOPS <sup>1)</sup>	
4k read	Max. 60,000 (random)
4k write	Max. 25,000 (random)
<b>Endurance</b>	
MLC flash	Yes
Compatibility	SATA 3.0 compliant ACS-2 SSD Enhanced SMART ATA feature set Native Command Queuing (NCQ)
<b>Environmental conditions</b>	
Temperature	
Operation	0 to 70°C
Storage	-40 to 95°C
Transport	-40 to 95°C
Relative humidity	
Operation	8 to 95%, non-condensing
Storage	8 to 95%, non-condensing
Transport	8 to 95%, non-condensing

Table 82: 5MMSSD.0060-01 - Technical data

Product ID	5MMSSD.0060-01
Vibration	
Operation	10 to 2000 Hz: 20 g
Storage	10 to 2000 Hz: 20 g
Transport	10 to 2000 Hz: 20 g
Shock	
Operation	1500 g, 0.5 ms
Storage	1500 g, 0.5 ms
Transport	1500 g, 0.5 ms
Altitude	
Operation	-300 to 12192 m
Storage	-300 to 12192 m
Transport	-300 to 12192 m
Mechanical characteristics	
Dimensions	
Width	9.5 mm
Height	69 mm
Depth	100 mm
Weight	78 g
Manufacturer information	
Manufacturer	Toshiba
Manufacturer product ID	THNSNH060GBST

Table 82: 5MMSSD.0060-01 - Technical data

- 1) IOPS: Random read and write input/output operations per second.

### 3.9.11.4 Temperature humidity diagram

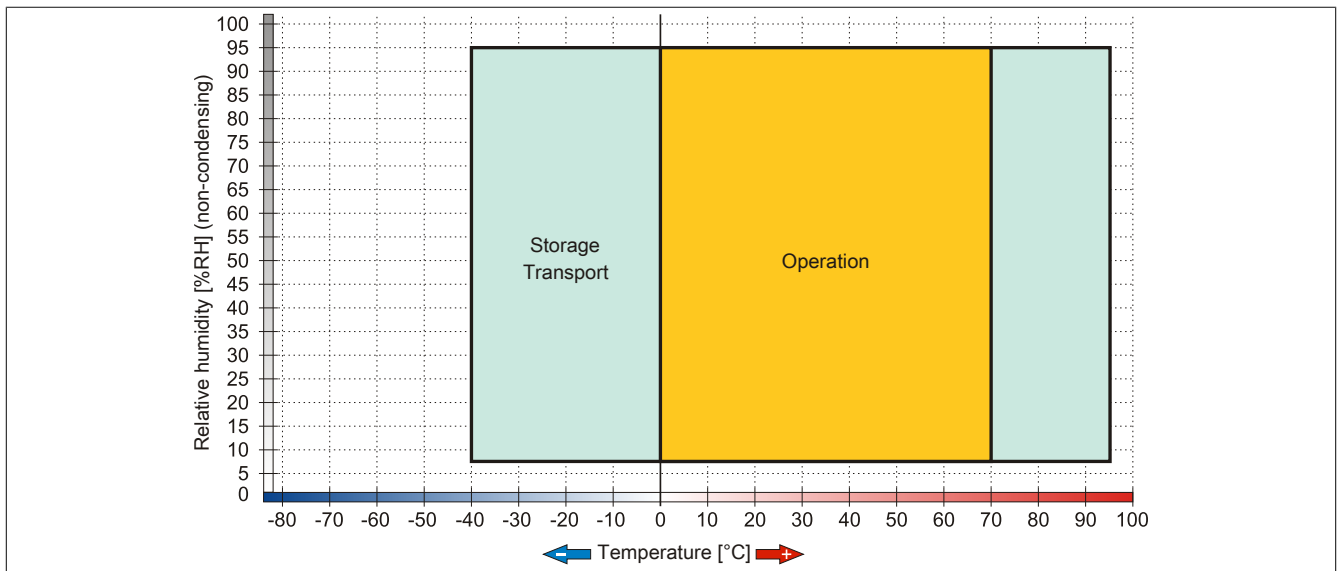


Figure 42: 5MMSSD.0060-01 - Temperature humidity diagram

### 3.9.12 5MMSSD.0128-01

#### 3.9.12.1 General information

This 128 GB slide-in compact SSD (solid-state drive) is based on multi-level cell (MLC) technology and can be used as a replacement or accessory part.

- Replacement for 5AC801.SSDI-04 or 5AC901.CSSD-04 SSD drives
- Accessory for the APC510 (optional SSD for I/O board)

#### 3.9.12.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5MMSSD.0128-01	128 GB SATA SSD (MLC); replacement for 5AC801.SSDI-04 and 5AC901.CSSD-04; SSD for 5PP5IO.GMAC-00; note: please see the manual for information about using this SSD	

Table 83: 5MMSSD.0128-01 - Order data

#### 3.9.12.3 Technical data

##### Caution!

A sudden loss of power may result in data loss! In very rare cases, the mass storage device may also become damaged.

To prevent damage and loss of data, the use of a UPS device is recommended.

##### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5MMSSD.0128-01
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
<b>Solid state drive</b>	
Capacity	128 GB
Data reliability	<1 unrecoverable error in 10 <sup>15</sup> bit read accesses
MTBF	1,500,000 hours
S.M.A.R.T. support	Yes
Interface	SATA
Maintenance	None
Continuous reading	Max. 510 MB/s
Continuous writing	Max. 450 MB/s
IOPS <sup>1)</sup>	
4k read	Max. 80,000 (random)
4k write	Max. 35,000 (random)
<b>Endurance</b>	
MLC flash	Yes
Compatibility	SATA 3.0 compliant ACS-2 SSD Enhanced SMART ATA feature set Native Command Queuing (NCQ)
<b>Environmental conditions</b>	
Temperature	
Operation	0 to 70°C
Storage	-40 to 95°C
Transport	-40 to 95°C

Table 84: 5MMSSD.0128-01 - Technical data

Product ID	5MMSSD.0128-01
Relative humidity	
Operation	8 to 95%, non-condensing
Storage	8 to 95%, non-condensing
Transport	8 to 95%, non-condensing
Vibration	
Operation	10 to 2000 Hz: 20 g
Storage	10 to 2000 Hz: 20 g
Transport	10 to 2000 Hz: 20 g
Shock	
Operation	1500 g, 0.5 ms
Storage	1500 g, 0.5 ms
Transport	1500 g, 0.5 ms
Altitude	
Operation	-300 to 12192 m
Storage	-300 to 12192 m
Transport	-300 to 12192 m
Mechanical characteristics	
Dimensions	
Width	9.5 mm
Height	69 mm
Depth	100 mm
Weight	78 g
Manufacturer information	
Manufacturer	Toshiba
Manufacturer product ID	THNSNH128GBST

Table 84: 5MMSSD.0128-01 - Technical data

1) IOPS: Random read and write input/output operations per second.

### 3.9.12.4 Temperature humidity diagram

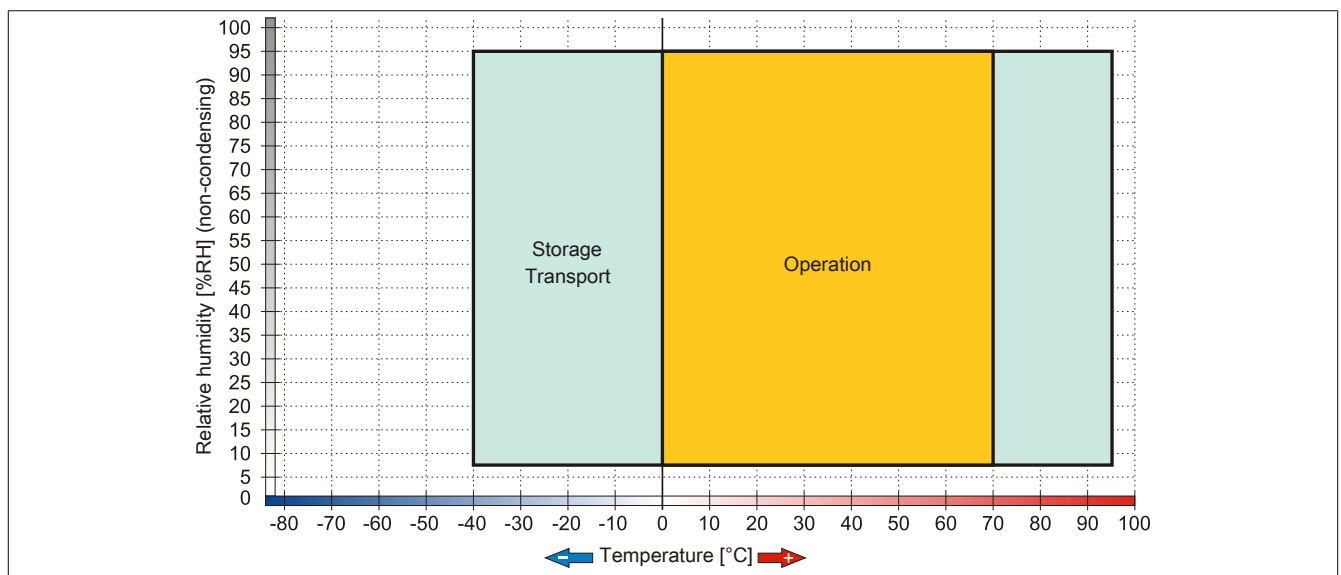


Figure 43: 5MMSSD.0128-01 - Temperature humidity diagram

### 3.9.13 5MMSSD.0180-00

#### 3.9.13.1 General information

This 180 GB slide-in compact SSD (solid-state drive) is based on multi-level cell (MLC) technology and can be used as a replacement or accessory part.

- Replacement for 5AC801.SSDI-02 or 5AC901.CSSD-02 SSD drives
- Accessory for the APC510 (optional SSD for I/O board)

#### 3.9.13.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5MMSSD.0180-00	180 GB SATA SSD (MLC); replacement part for 5AC801.SSDI-02 and 5AC901.CSSD-02; SSD for 5PP5IO.GMAC-00; note: please see the manual for information about using this SSD	

Table 85: 5MMSSD.0180-00 - Order data

#### 3.9.13.3 Technical data

##### Caution!

A sudden loss of power may result in data loss! In very rare cases, the mass storage device may also become damaged.

To prevent damage and loss of data, the use of a UPS device is recommended.

##### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5MMSSD.0180-00
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
<b>Solid state drive</b>	
Capacity	180 GB
Data reliability	<1 unrecoverable error in 10 <sup>16</sup> bit read accesses
MTBF	1,200,000 hours
S.M.A.R.T. support	Yes
Interface	SATA
Maintenance	None
Continuous reading	Max. 550 MB/s with SATA 6 Gbit/s Max. 280 MB/s with SATA 3 Gbit/s
Continuous writing	Max. 520 MB/s with SATA 6 Gbit/s Max. 260 MB/s with SATA 3 Gbit/s
IOPS <sup>1)</sup>	
4k read	50,000
4k write	
Typical	60,000
Maximum	80,000
<b>Endurance</b>	
MLC flash	Yes
Compatibility	SATA 3.0 compliant ACS-2 SSD Enhanced SMART ATA feature set Native Command Queuing (NCQ)

Table 86: 5MMSSD.0180-00 - Technical data



Product ID	5MMSSD.0180-00
Environmental conditions	
Temperature	
Operation	0 to 70°C
Storage	-55 to 95°C
Transport	-55 to 95°C
Relative humidity	
Operation	5 to 95%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration	
Operation	5 to 700 Hz: 2.17 g
Storage	5 to 800 Hz: 3.13 g
Transport	5 to 800 Hz: 3.13 g
Shock	
Operation	1500 g, 0.5 ms
Storage	1500 g, 0.5 ms
Transport	1500 g, 0.5 ms
Altitude	
Operation	-300 to 12192 m
Storage	-300 to 12192 m
Transport	-300 to 12192 m
Mechanical characteristics	
Dimensions	
Width	9.5 mm
Height	69 mm
Depth	100 mm
Weight	78 g
Manufacturer information	
Manufacturer	Intel
Manufacturer product ID	SSDSC2CW180A3

Table 86: 5MMSSD.0180-00 - Technical data

1) IOPS: Random read and write input/output operations per second.

### 3.9.13.4 Temperature humidity diagram

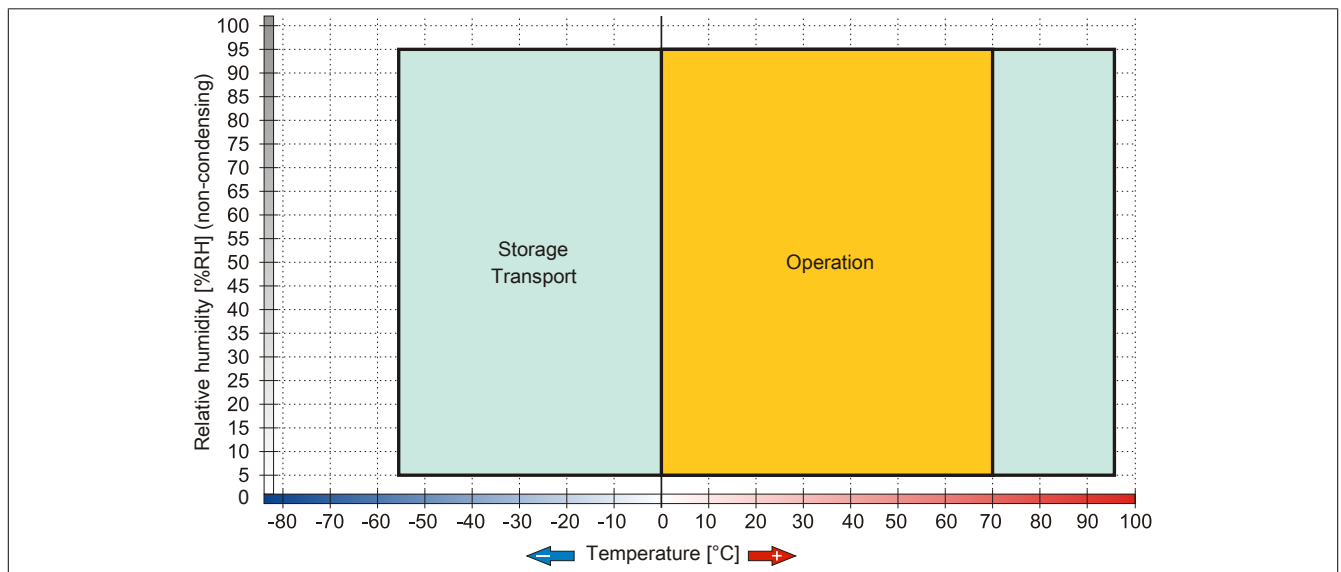


Figure 44: 5MMSSD.0180-00 - Temperature humidity diagram

### 3.9.14 5AC801.ADAS-00

#### 3.9.14.1 General information

The hard disk adapter is a slide-in adapter that allows slide-in compact drives to be installed and operated on a B&R Industrial PC. This adapter can be used in APC810 and PPC800 system units with a slide-in drive slot.

#### When used in a PPC800

##### Information:

The expansion 5AC803.SX01-00 or 5AC803.SX02-00 is required in order to use slide-in drives.

#### 3.9.14.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5AC801.ADAS-00	SATA hard disk adapter for operating a slide-in compact hard disk in a slide-in slot	

Table 87: 5AC801.ADAS-00 - Order data

#### 3.9.14.3 Technical data

Product ID	5AC801.ADAS-00
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
GL	Yes
<b>Mechanical characteristics</b>	
Dimensions	
Width	22 mm
Height	172.5 mm
Depth	150 mm
Weight	328 g

Table 88: 5AC801.ADAS-00 - Technical data

### 3.9.15 5AC801.HDDS-00

#### 3.9.15.1 General information

This 160 GB hard disk is specified for 24-hour operation, features an extended temperature range and can be used in APC810 and PPC800 system units with a slide-in drive slot.

#### Information:

A slide-in drive can be inserted or removed at any time.

#### When used in a PPC800

#### Information:

The expansion 5AC803.SX01-00 or 5AC803.SX02-00 is required in order to use slide-in drives.

When inserted in the slide-in slot, the slide-in drive is accessed internally via SATA and USB.

#### 3.9.15.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5AC801.HDDS-00	40 GB SATA slide-in hard disk; 24/7 operation with extended temperature range. Note: please see the manual for information about using this hard disk	

Table 89: 5AC801.HDDS-00 - Order data

#### 3.9.15.3 Technical data

#### Information:

The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the complete system. For the complete system in which this individual component is used, refer to the data given specifically for that device.

Product ID	5AC801.HDDS-00
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
GL	Yes
<b>Hard disk drive</b>	
Capacity	40 GB
Number of heads	1
Number of sectors	78,140,160
Bytes per sector	512
Cache	8 MB
Speed	5400 rpm $\pm$ 1%
Startup time	Typ. 3 s (from 0 rpm to read access)
MTBF	750,000 POH <sup>1)</sup>
S.M.A.R.T. support	Yes
Interface	SATA
Access time	5.6 ms
Data transfer rate	
Internal	Max. 450 Mbit/s
To/From host	Max. 150 MB/s (Ultra DMA mode 5)

Table 90: 5AC801.HDDS-00 - Technical data

Product ID	5AC801.HDDS-00
Positioning time	
Minimum (track to track)	1 ms
Nominal (read only)	12.5 ms
Maximum (read only)	23 ms
Environmental conditions	
Temperature <sup>2)</sup>	
Operation <sup>3)</sup>	-30 to 85°C
24-hour operation <sup>4)</sup>	-30 to 85°C
Storage	-40 to 95°C
Transport	-40 to 95°C
Relative humidity <sup>5)</sup>	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration	
Operation	5 to 500 Hz: 2 g; no unrecoverable errors
Storage	5 to 500 Hz: 5 g; no unrecoverable errors
Transport	5 to 500 Hz: 5 g; no unrecoverable errors
Shock	
Operation	300 g and 2 ms duration; no unrecoverable errors
Storage	150 g and 11 ms duration; no unrecoverable errors
Transport	800 g and 2 ms duration; no unrecoverable errors
Storage	400 g and 0.5 ms duration; no unrecoverable errors
Transport	800 g and 2 ms duration; no unrecoverable errors
Storage	400 g and 0.5 ms duration; no unrecoverable errors
Altitude	
Operation	-300 to 5000 m
Storage	-300 to 12192 m
Mechanical characteristics	
Installation	Fixed <sup>6)</sup>
Dimensions	
Width	22 mm
Height	172.5 mm
Depth	150 mm
Weight	387 g
Manufacturer information	
Manufacturer	Seagate
Manufacturer product ID	ST940817SM

Table 90: 5AC801.HDDS-00 - Technical data

- 1) With 8760 POH (power-on hours) per year and 70°C surface temperature.
- 2) Temperature values at an elevation of 305 meters. The temperature specification must be reduced linearly by 1°C every 305 meters. The temperature increase and decrease can be a maximum of 20°C per hour.
- 3) Standard operation refers to 333 POH (power-on hours) per month.
- 4) 24-hour operation refers to 732 POH (power-on hours) per month.
- 5) Humidity gradient: Maximum 15% per hour.
- 6) Slide-in compact installation.

### 3.9.15.4 Temperature humidity diagram

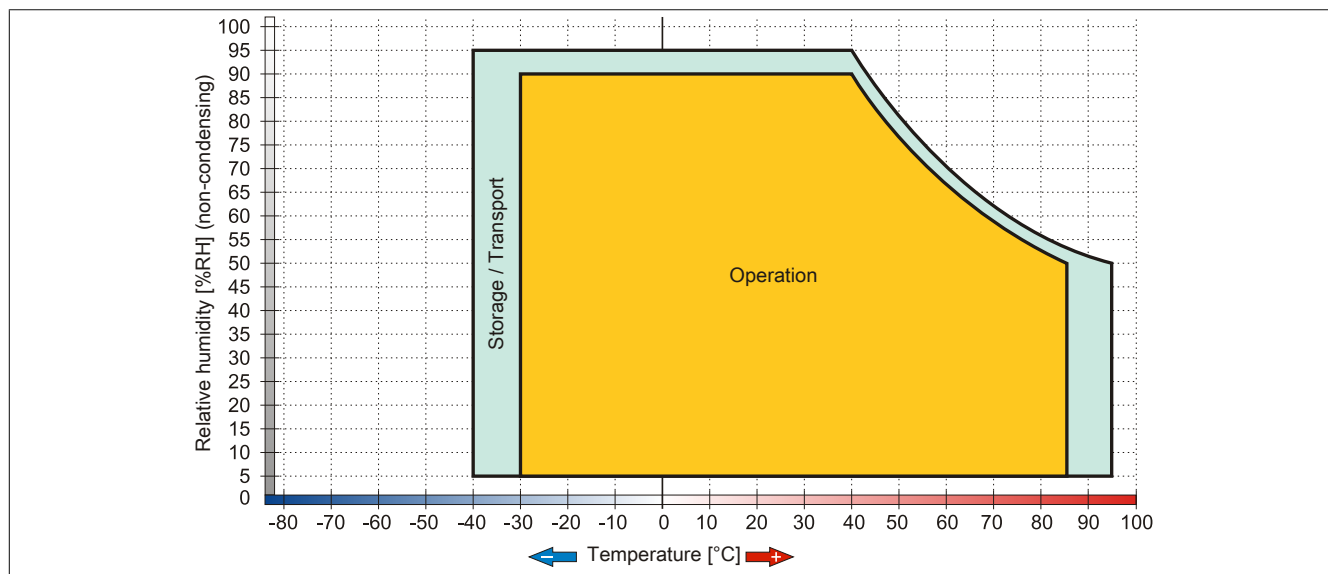


Figure 45: 5AC801.HDDS-00 - Temperature humidity diagram

### 3.9.16 5AC801.DVDS-00

#### 3.9.16.1 General information

The DVD-ROM slide-in drive can be used in APC810 and PPC800 system units with a slide-in drive slot.

#### Information:

A slide-in drive can be inserted or removed at any time.

When used in a PPC800

#### Information:

The expansion 5AC803.SX01-00 or 5AC803.SX02-00 is required in order to use slide-in drives.

When inserted in the slide-in slot, the slide-in drive is accessed internally via SATA and USB.

#### 3.9.16.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5AC801.DVDS-00	DVD-ROM SATA slide-in drive	

Table 91: 5AC801.DVDS-00 - Order data

#### 3.9.16.3 Technical data

#### Information:

The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the complete system. For the complete system in which this individual component is used, refer to the data given specifically for that device.

Product ID	5AC801.DVDS-00
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
GL	Yes
<b>CD / DVD drive</b>	
Data transfer rate	Max. 1.5 Gbit/s
Speed	Max. 5090 rpm $\pm 1\%$
Noise level	Approx. 45 dBA in a distance of 50 cm (full read access)
Compatible formats	CD-DA, CD-ROM mode 1/mode 2 CD-ROM XA mode 2 (form 1, form 2) Photo CD (single/multi-session) Enhanced CD, CD text DVD-ROM, DVD-Video (dual layer), DVD-R (single/multi-border), DVD-R DL (single/multi-border), DVD-RW (single/multi-border), DVD+R (single/multi-session), DVD+R DL (single/multi-session), DVD+RW (single/multi-session), DVD-RAM (4.7 GB, 2.6 GB)
Laser class	Class 1 laser
Service life	60000 POH (power-on hours)
Interface	SATA
Startup time	
CD	Max. 19 seconds (from 0 rpm to read access)
DVD	Max. 19 seconds (from 0 rpm to read access)

Table 92: 5AC801.DVDS-00 - Technical data

Product ID	5AC801.DVDS-00
Access time CD DVD	Average of 130 ms Average of 140 ms
Readable media CD DVD	CD-ROM (12 cm, 8 cm), CD-A CD-R, CD-RW DVD-ROM, DVD-R, DVD-R DL, DVD-RW, DVD+R DVD+R DL, DVD+RW, DVD-RAM
Read speed CD DVD	24x 8x
Environmental conditions	
Temperature <sup>1)</sup> Operation Storage Transport	5 to 55°C <sup>2)</sup> -20 to 60°C -40 to 65°C
Relative humidity Operation Storage Transport	8 to 80%, non-condensing 5 to 95%, non-condensing 5 to 95%, non-condensing
Vibration Operation Storage Transport	5 to 500 Hz: 0.2 g 5 to 500 Hz: 2 g 5 to 500 Hz: 2 g
Shock Operation Storage Transport	5 g and 11 ms duration 60 g and 11 ms duration 200 g and 2 ms duration 60 g and 11 ms duration 200 g and 2 ms duration
Mechanical characteristics	
Dimensions Width Height Depth	22 mm 172.5 mm 150 mm
Weight	455 g

Table 92: 5AC801.DVDS-00 - Technical data

- 1) Temperature data is for operation at 500 meters. The maximum ambient temperature is typically derated by 1°C per 1000 meters (starting at 500 meters above sea level).
- 2) Drive surface temperature.

### 3.9.16.4 Temperature humidity diagram

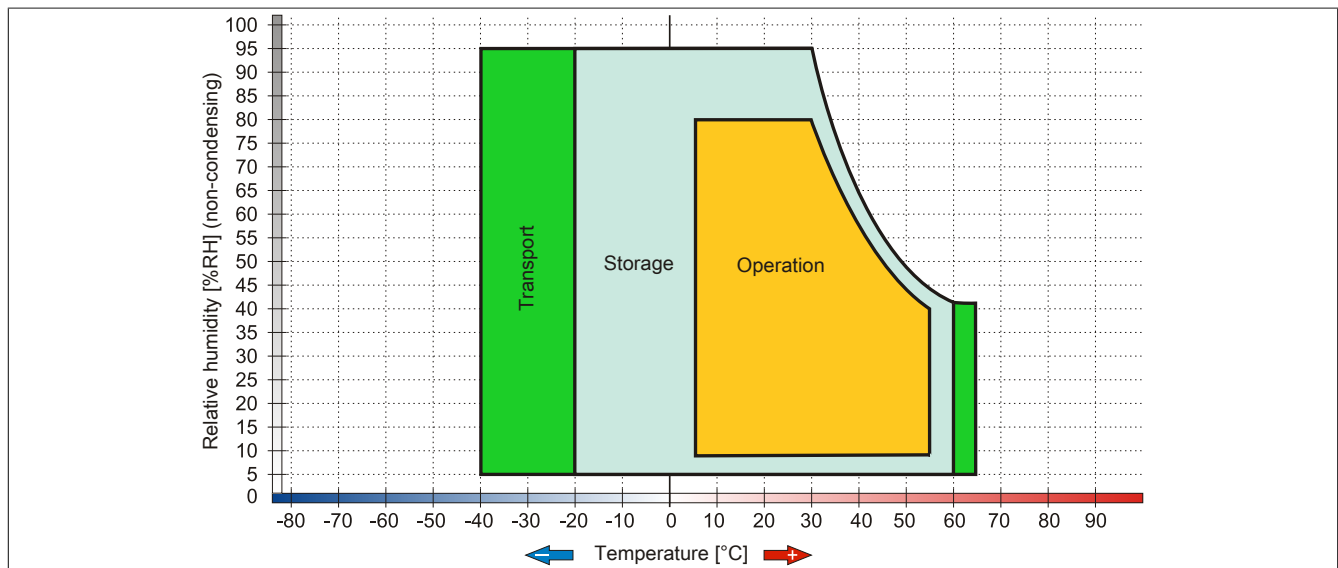


Figure 46: 5AC801.DVDS-00 - Temperature humidity diagram

### 3.9.16.5 Hot plugging

Hardware revision B0 of the 5AC801.DVDS-00 slide-in DVD-ROM does not offer SATA hot plugging functionality. Hot plugging is possible for other hardware revisions.

### 3.9.17 5AC801.DVRS-00

#### 3.9.17.1 General information

The DVD-R/RW slide-in drive can be used in APC810 and PPC800 system units with a slide-in drive slot.

#### Information:

A slide-in drive can be inserted or removed at any time.

When used in a PPC800

#### Information:

The expansion 5AC803.SX01-00 or 5AC803.SX02-00 is required in order to use slide-in drives.

When inserted in the slide-in slot, the slide-in drive is accessed internally via SATA and USB.

#### 3.9.17.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5AC801.DVRS-00	DVD-R/RW DVD+R/RW SATA slide-in drive	
	<b>Optional accessories</b>	
	<b>Other</b>	
5SWUT1.0000-00	OEM Nero CD-RW Software, only available with a CD writer.	

Table 93: 5AC801.DVRS-00 - Order data

#### 3.9.17.3 Technical data

#### Information:

The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the complete system. For the complete system in which this individual component is used, refer to the data given specifically for that device.

Product ID	5AC801.DVRS-00
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
GL	Yes
<b>CD / DVD drive</b>	
Data buffer capacity	2 MB
Data transfer rate	Max. 33.3 MB/s
Speed	Max. 5160 rpm $\pm 1\%$
Noise level	Approx. 45 dBA in a distance of 50 cm (full read access)
Compatible formats	CD-DA, CD-ROM mode 1/mode 2 CD-ROM XA mode 2 (form 1, form 2) Photo CD (single-/multi-session), Enhanced CD, CD text DVD-ROM, DVD-R, DVD-R (dual layer), DVD-RW, DVD-Video DVD-RAM (4.7GB, 2.6GB) DVD+R, DVD+R (dual layer), DVD+RW
Laser class	Class 1 laser
Service life	60000 POH (power-on hours)
Interface	SATA
Startup time	
CD	Max. 14 seconds (from 0 rpm to read access)
DVD	Max. 15 seconds (from 0 rpm to read access)

Table 94: 5AC801.DVRS-00 - Technical data

Product ID	5AC801.DVRS-00
Access time CD DVD	On average 140 ms (24x) On average 150 ms (8x)
Readable media CD DVD	CD/CD-ROM (12 cm, 8 cm), CD-R, CD-RW DVD-ROM, DVD-R, DVD-R (dual layer), DVD-RW, DVD-RAM, DVD+R, DVD+R (dual layer), DVD+RW, DVD-RAM
Writable media CD DVD	CD-R, CD-RW DVD-R/RW, DVD-R (dual layer), DVD-RAM (4.7 GB), DVD+R/RW, DVD+R (dual layer)
Read speed CD DVD	24x 8x
Write speed CD-R CD-RW DVD+R DVD+R (dual layer) DVD+RW DVD-R DVD-R (dual layer) DVD-RAM <sup>1)</sup> DVD-RW	24x, 16x, 10x and 4x 24x, 16x, 10x and 4x 8x, 4x and 2.4x 6x, 4x and 2.4x 4x and 2x 8x, 4x and 2x 6x, 4x and 2x 5x, 3x and 2x 6x, 4x and 2x
Write methods CD DVD	Disk at once, session at once, packet write, track at once Disk at once, incremental, overwrite, sequential, multi-session
<b>Environmental conditions</b>	
Temperature <sup>2)</sup> Operation Storage Transport	5 to 55°C <sup>3)</sup> -20 to 60°C -40 to 65°C
Relative humidity Operation Storage Transport	8 to 80%, non-condensing 5 to 95%, non-condensing 5 to 95%, non-condensing
Vibration Operation Storage Transport	5 to 500 Hz: 0.2 g 5 to 500 Hz: 2 g 5 to 500 Hz: 2 g
Shock Operation Storage Transport	At max. 5 g and 11 ms duration At max. 60 g and 11 ms duration At max. 200 g and 2 ms duration At max. 60 g and 11 ms duration At max. 200 g and 2 ms duration
<b>Mechanical characteristics</b>	
Dimensions Width Height Depth	22 mm 172.5 mm 150 mm
Weight	400 g

Table 94: 5AC801.DVRS-00 - Technical data

- 1) RAM drivers are not provided by the manufacturer. Support of RAM function by "Nero" burning software (model number 5SWUT1.0000-00) or other burning software packages or drivers from third-party providers.
- 2) Temperature specifications refer to operation at 500 meters. The maximum ambient temperature is typically derated by 1°C per 1000 meters (starting at 500 meters above sea level).
- 3) Drive surface temperature.



### 3.9.17.4 Temperature humidity diagram

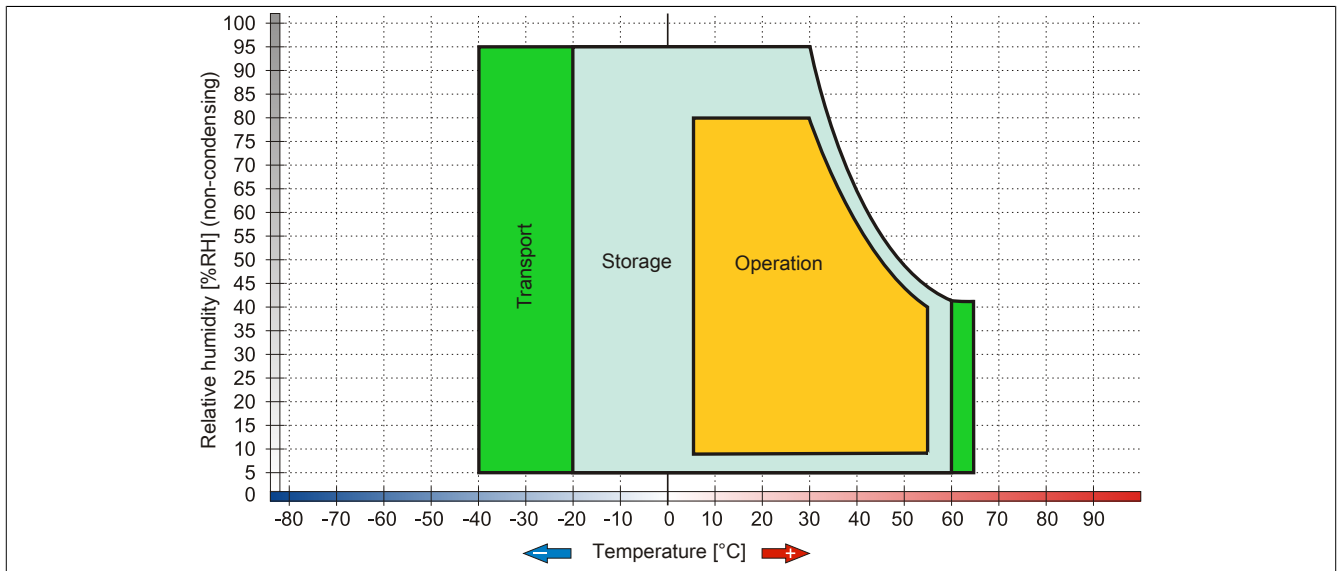


Figure 47: 5AC801.DVRS-00 - Temperature humidity diagram

3.9.18 5ACPCI.RAIC-03

3.9.18.1 General information

This SATA RAID controller supports RAID level 0 and 1 and can be inserted in a PCI slot. The hard disks being used are specified for 24-hour operation and also feature an extended temperature range.

- SATA RAID controller
- RAID level 0 (striped) and 1 (mirrored)
- 2 SATA hard disk drives (suitable for 24-hour operation)
- Only requires 1 PCI slot
- Transfer rates up to 150 MB/s

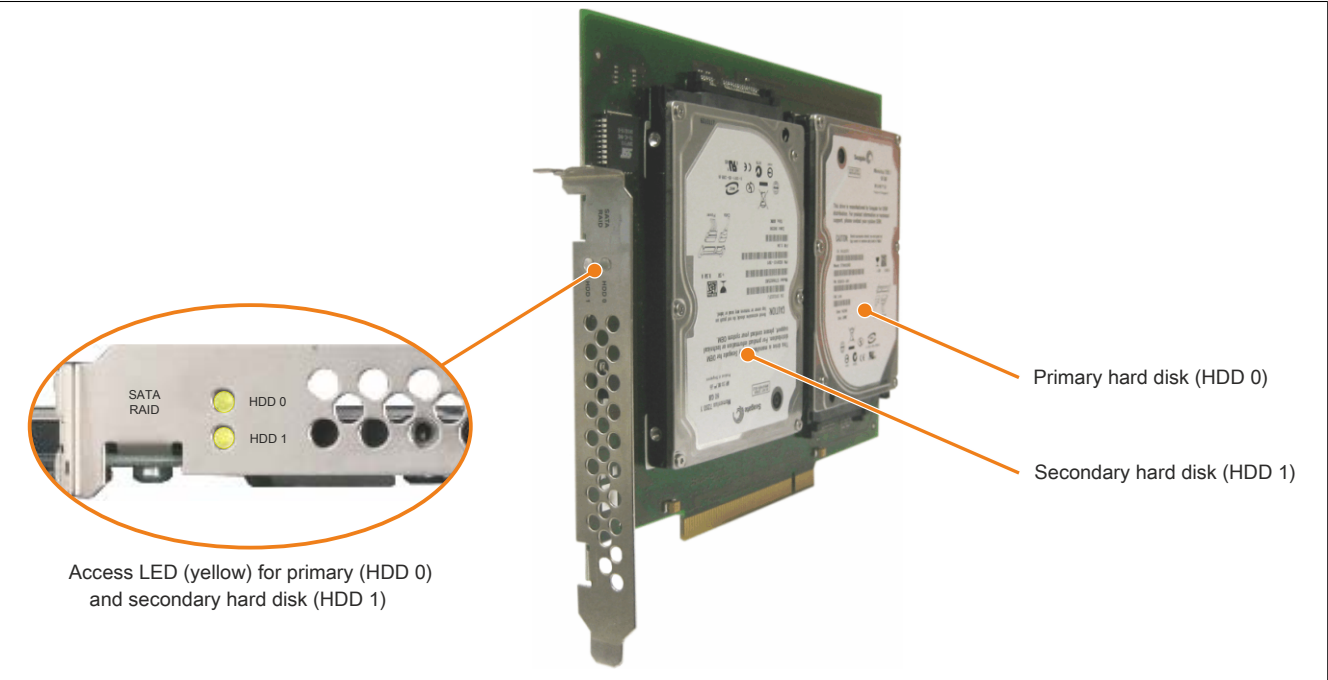


Figure 48: PCI SATA RAID controller

**Information:**

The PCI SATA RAID controller cannot be used in place of a universal power supply (UPS). If the operating system is not shut down properly, then this will be detected as an error state (with RAID 1 sets) at the next system startup and a complete rebuild is performed. If 160 GB of memory are used, this generally takes approximately 160 minutes (configurable) to complete.

3.9.18.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5ACPCI.RAIC-03	PCI RAID system SATA 2x 160 GB; note: Please see the manual for information about using this hard disk.	
	<b>Optional accessories</b>	
	<b>Drives</b>	
5ACPCI.RAIC-04	160 GB SATA hard disk, replacement part for 5ACPCI.RAIC-03; note: Please see the manual for information about using this hard disk.	

Table 95: 5ACPCI.RAIC-03 - Order data

## 3.9.18.3 Technical data

**Information:**

The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the complete system. For the complete system in which this individual component is used, refer to the data given specifically for that device.

<b>Product ID</b>	<b>5ACPCI.RAIC-03</b>
<b>General information</b>	
Number of hard disks	2
Certification CE	Yes
<b>Controller</b>	
Type	Sil 3512 SATA link
Specification	Serial ATA 1.0
Data transfer rate	Max. 1.5 Gbit/s (150 MB/s)
RAID level	Supports RAID 0, 1
BIOS extension ROM requirements	Approx. 32 kB
<b>Hard disk drive</b>	
Capacity	160 GB
Number of heads	3
Number of sectors	312,581,808
Bytes per sector	512
Cache	8 MB
Speed	5400 rpm $\pm$ 1%
Startup time	Typ. 4 s (from 0 rpm to read access)
Service life	5 years
S.M.A.R.T. support	Yes
Access time	5.56 ms
Supported transfer modes	SATA 1.0, PIO mode 0-4, multiword DMA mode 0-2, UDMA 0-5
Data transfer rate	
Internal	Max. 84.6 Mbit/s
To/From host	Max. 150 MB/s
Positioning time	
Minimum (track to track)	1.5 ms
Nominal (read only)	12 ms
Maximum (read only)	22 ms
<b>Electrical characteristics</b>	
Power consumption	0.3A at 3.3V (PCI bus) 1A at 5V (PCI bus)
<b>Environmental conditions</b>	
Temperature <sup>1)</sup>	
Operation <sup>2)</sup>	-15 to 80°C
24-hour operation <sup>3)</sup>	-15 to 80°C
Storage	-40 to 95°C
Transport	-40 to 95°C
Relative humidity	
Operation	8 to 90%, non-condensing <sup>4)</sup>
Storage	5 to 95%, non-condensing <sup>5)</sup>
Transport	5 to 95%, non-condensing <sup>5)</sup>
Vibration <sup>6)</sup>	
Operation (continuous)	5 to 500 Hz: max. 0.125 g; duration 1 octave per minute; no unrecoverable errors
Operation (occasional)	5 to 500 Hz: max. 0.25 g; duration 1 octave per minute; no unrecoverable errors
Storage	5 to 500 Hz: max. 5 g; duration 0.5 octaves per minute; no damage
Transport	5 to 500 Hz: max. 5 g; duration 0.5 octaves per minute; no damage
Shock	
Operation	Max. 125 g, 2 ms; no unrecoverable errors
Storage	Max. 400 g, 2 ms; no damage Max. 450 g, 1 ms; no damage Max. 200 g, 0.5 ms; no damage
Transport	Max. 400 g, 2 ms; no damage Max. 450 g, 1 ms; no damage Max. 200 g, 0.5 ms; no damage
Altitude	
Operation	-300 to 3048 m
Storage	-300 to 12192 m
<b>Mechanical characteristics</b>	
Installation <sup>7)</sup>	Fixed
Dimensions	
Width	70 mm
Length	100 mm
Height	9.5 mm

Table 96: 5ACPCI.RAIC-03 - Technical data

Product ID	5ACPCI.RAIC-03
Weight	350 g
Manufacturer information	
Manufacturer	Fujitsu
Manufacturer product ID	M120-ESW MHY2160BH-ESW

Table 96: 5ACPCI.RAIC-03 - Technical data

- 1) Temperature values at an elevation of 305 meters. The temperature specification must be reduced linearly by 1°C every 305 meters. The temperature increase and decrease can be a maximum of 3°C per minute.
- 2) Standard operation refers to 333 POH (power-on hours) per month.
- 3) 24-hour operation refers to 732 POH (power-on hours) per month.
- 4) Maximum humidity at 29°C.
- 5) Maximum humidity at 40°C.
- 6) Operation in areas prone to vibration and shock can affect performance negatively (reduction of transfer rate).
- 7) PCI slot installation.

### 3.9.18.4 Temperature humidity diagram

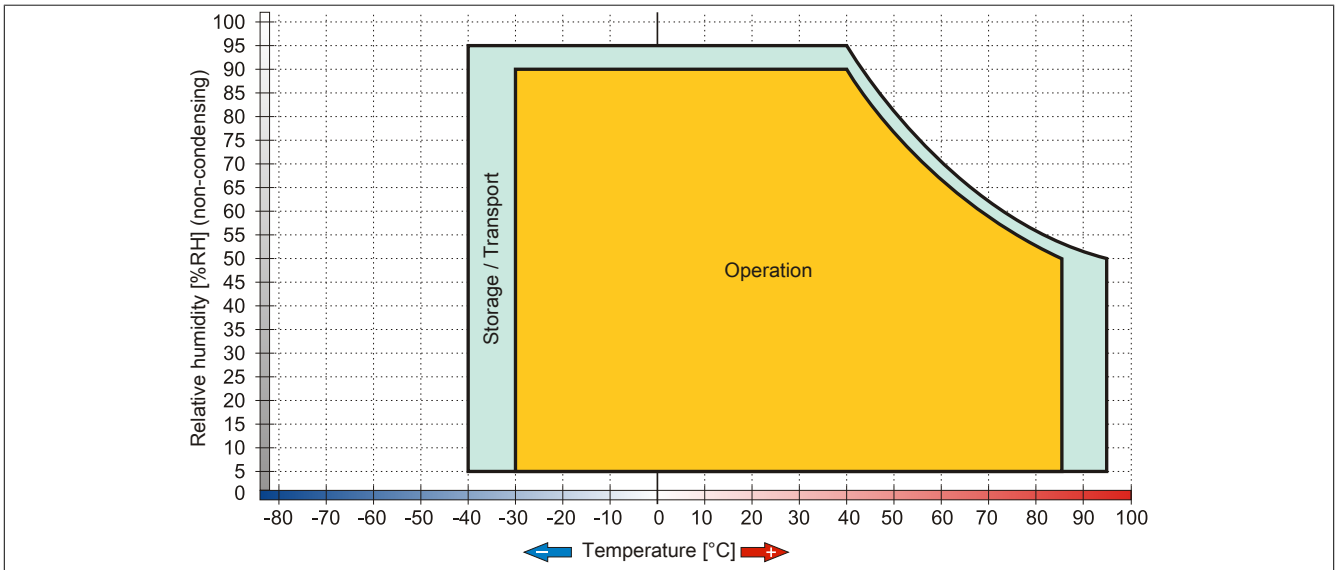


Figure 49: 5ACPCI.RAIC-03 - Temperature humidity diagram

### 3.9.18.5 Driver support

Special drivers are necessary for operating the PCI SATA RAID controller. Drivers for supported and approved operating systems are available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

.NET-based SATA Raid™ serial ATA RAID management software can also be found on the B&R website.

#### Information:

**Required drivers can only be downloaded from the B&R website, not from manufacturer websites.**

### 3.9.18.6 Configuration

For information about configuring a SATA RAID set, see 3 "Installation", section 8 "Configuring a SATA RAID set" on page 162.

### 3.9.18.7 Replacing a HDD

A hard drive can be easily replaced in the event of an error when using the RAID1 (mirroring) configuration without having to reinstall the system. The 160 GB 5ACPCI.RAIC-04 SATA HDD is available as a replacement hard disk.

For instructions on replacing the drive, see 7 "Maintenance and service", section 14 "Replacing a PCI SATA RAID hard disk in a RAID 1 set" on page 340.

### 3.9.19 5ACPCI.RAIC-04

#### 3.9.19.1 General information

This hard disk can be used as a replacement for a HDD used with the 5ACPCI.RAIC-03 PCI SATA RAID controller.

#### 3.9.19.2 Order data


Model number	Short description	Figure
5ACPCI.RAIC-04	<b>Drives</b> 160 GB SATA hard disk, replacement part for 5ACPCI.RAIC-03; note: Please see the manual for information about using this hard disk.	

Table 97: 5ACPCI.RAIC-04 - Order data

#### 3.9.19.3 Technical data

##### Information:

The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the complete system. For the complete system in which this individual component is used, refer to the data given specifically for that device.

Product ID	5ACPCI.RAIC-04
<b>General information</b>	
Certification CE	Yes
<b>Hard disk drive</b>	
Capacity	160 GB
Number of heads	3
Number of sectors	312,581,808
Bytes per sector	512
Cache	8 MB
Speed	5400 rpm $\pm 1\%$
Startup time	Typ. 4 s (from 0 rpm to read access)
Service life	5 years
S.M.A.R.T. support	Yes
Access time	5.56 ms
Supported transfer modes	SATA 1.0, PIO mode 0-4, multiword DMA mode 0-2, UDMA 0-5
Data transfer rate	
Internal	Max. 84.6 Mbit/s
To/From host	Max. 150 MB/s
Positioning time	
Minimum (track to track)	1.5 ms
Nominal (read only)	12 ms
Maximum (read only)	22 ms
<b>Electrical characteristics</b>	
Power consumption	0.3A at 3.3V (PCI bus) 1A at 5V (PCI bus)
<b>Environmental conditions</b>	
Temperature <sup>1)</sup>	
Operation <sup>2)</sup>	-15 to 80°C
24-hour operation <sup>3)</sup>	-15 to 80°C
Storage	-40 to 95°C
Transport	-40 to 95°C
Relative humidity	
Operation	8 to 90%, non-condensing <sup>4)</sup>
Storage	5 to 95%, non-condensing <sup>5)</sup>
Transport	5 to 95%, non-condensing <sup>5)</sup>
Vibration <sup>6)</sup>	
Operation (continuous)	5 to 500 Hz: max. 0.125 g; duration 1 octave per minute; no unrecoverable errors
Operation (occasional)	5 to 500 Hz: max. 0.25 g; duration 1 octave per minute; no unrecoverable errors
Storage	5 to 500 Hz: max. 5 g; duration 0.5 octaves per minute; no damage
Transport	5 to 500 Hz: max. 5 g; duration 0.5 octaves per minute; no damage

Table 98: 5ACPCI.RAIC-04 - Technical data

Product ID	5ACPCI.RAIC-04
Shock	
Operation	Max. 125 g, 2 ms; no unrecoverable errors
Storage	Max. 400 g, 2 ms; no damage Max. 450 g, 1 ms; no damage
Transport	Max. 200 g, 0.5 ms; no damage Max. 400 g, 2 ms; no damage Max. 450 g, 1 ms; no damage Max. 200 g, 0.5 ms; no damage
Altitude	
Operation	-300 to 3048 m
Storage	-300 to 12192 m
Mechanical characteristics	
Dimensions	
Width	70 mm
Length	100 mm
Height	9.5 mm
Weight	350 g
Manufacturer information	
Manufacturer	Fujitsu
Manufacturer product ID	M120-ESW MHY2160BH-ESW

Table 98: 5ACPCI.RAIC-04 - Technical data

- 1) Temperature values at an elevation of 305 meters. The temperature specification must be reduced linearly by 1°C every 305 meters. The temperature increase and decrease can be a maximum of 3°C per minute.
- 2) Standard operation refers to 333 POH (power-on hours) per month.
- 3) 24-hour operation refers to 732 POH (power-on hours) per month.
- 4) Maximum humidity at 29°C.
- 5) Maximum humidity at 40°C.
- 6) Operation in areas prone to vibration and shock can affect performance negatively (reduction of transfer rate).

### 3.9.19.4 Temperature humidity diagram

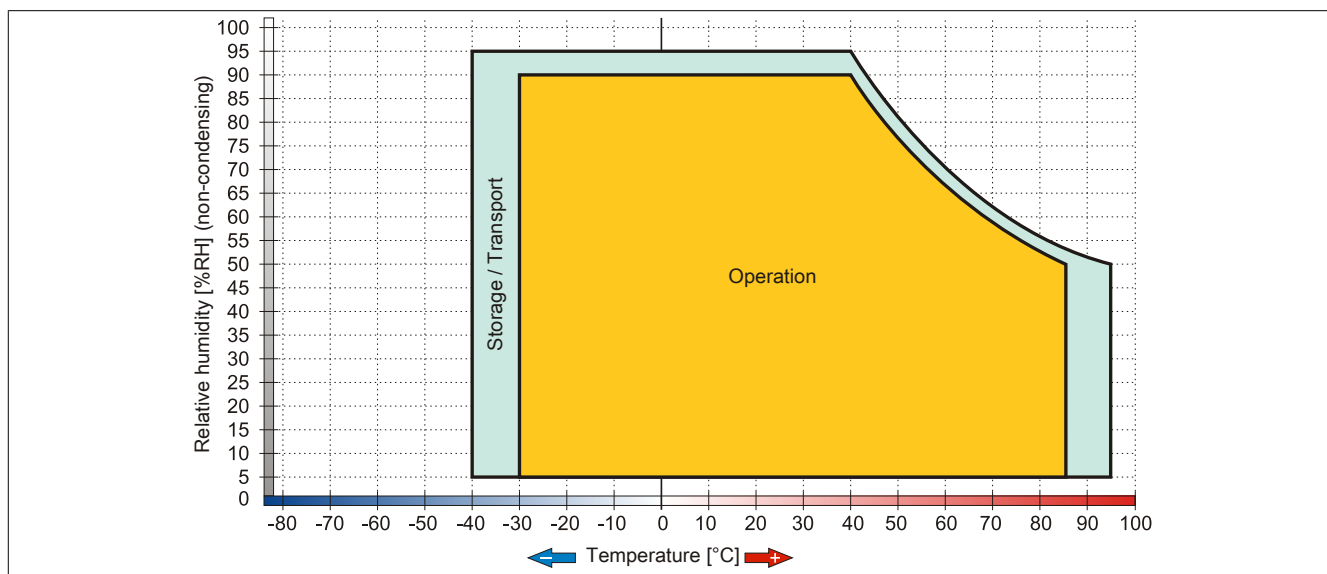


Figure 50: 5ACPCI.RAIC-04 - Temperature humidity diagram

### 3.9.20 5ACPCI.RAIC-05

#### 3.9.20.1 General information

This SATA RAID controller supports RAID level 0 and 1 and can be inserted in a PCI slot. The 250 GB hard disks that are used are specified for 24-hour operation (24x7).

- SATA RAID controller
- RAID level 0 (striped) and 1 (mirrored)
- 2 SATA hard disk drives (suitable for 24-hour operation)
- Only requires 1 PCI slot
- Transfer rates up to 150 MB/s

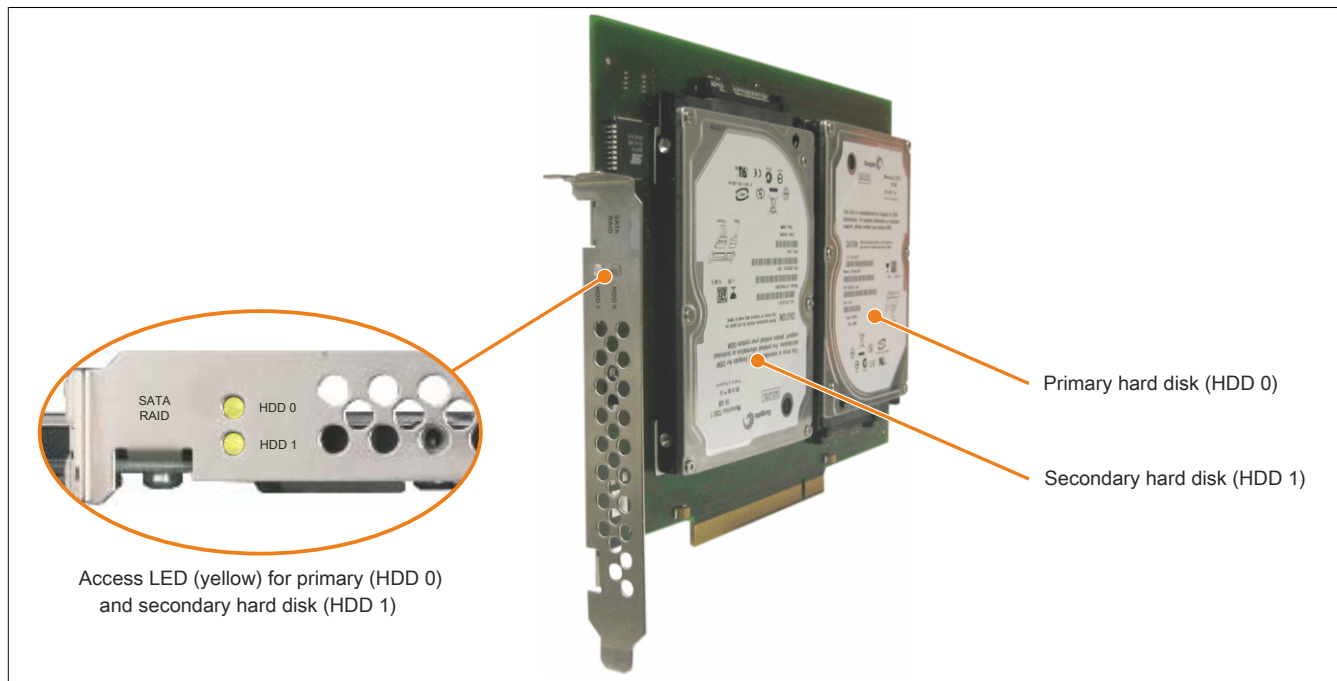


Figure 51: PCI SATA RAID controller

#### Information:

The PCI SATA RAID controller cannot be used in place of a universal power supply (UPS). If the operating system is not shut down properly, then this will be detected as an error state (with RAID 1 sets) at the next system startup and a complete rebuild is performed. If 250 GB of memory are used, this generally takes approximately 250 minutes (configurable) to complete.

#### 3.9.20.2 Order data

Model number	Short description	Figure
5ACPCI.RAIC-05	<b>Drives</b>	
	PCI RAID system SATA 2x 250 GB; note: please see the manual for information about using this hard disk	
	<b>Optional accessories</b>	
5MMHDD.0250-00	<b>Drives</b>	
	250 GB SATA hard disk; replacement for 5AC801.HDDI-03 and 5ACPCI.RAIC-05; note: please see the manual for information about using this hard disk	

Table 99: 5ACPCI.RAIC-05 - Order data

## 3.9.20.3 Technical data

Product ID	5ACPCI.RAIC-05
General information	
Number of hard disks	2
Certification	
CE	Yes
cULus	Yes
Controller	
Type	Sil 3512 SATA link
Specification	Serial ATA 1.0
Data transfer rate	Max. 1.5 Gbit/s (150 MB/s)
RAID level	Supports RAID 0, 1
BIOS extension ROM requirements	Approx. 32 kB
Hard disk drive	
Capacity	250 GB
Number of heads	1
Number of sectors	488,397,168
Bytes per sector	512
Cache	8 MB
Speed	5400 rpm $\pm 0.2\%$
Startup time	Typ. 3.6 s (from 0 rpm to read access)
S.M.A.R.T. support	Yes
Access time	5.56 ms
Supported transfer modes	SATA 1.0, Serial ATA Revision 2.6 PIO mode 0-4, multiword DMA mode 0-2, UDMA mode 0-6
Data transfer rate	
Internal	Max. 1175 Mbit/s
To/From host	Max. 150 MB/s
Positioning time	
Minimum (track to track)	1 ms
Nominal (read only)	14 ms
Maximum (read only)	30 ms
Electrical characteristics	
Power consumption	0.3A at 3.3V (PCI bus) 1A at 5V (PCI bus)
Environmental conditions	
Temperature <sup>1)</sup>	
Operation <sup>2)</sup>	0 to 60°C
24-hour operation <sup>3)</sup>	0 to 60°C
Storage	-40 to 70°C
Transport	-40 to 70°C
Relative humidity <sup>4)</sup>	
Operation	5 to 95%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration <sup>5)</sup>	
Operation (continuous)	5 to 500 Hz: max. 0.125 g; duration 1 octave per minute; no unrecoverable errors
Operation (occasional)	5 to 500 Hz: max. 0.25 g; duration 1 octave per minute; no unrecoverable errors
Storage	5 to 500 Hz: 5 g; duration 0.5 octaves per minute; no damage
Transport	5 to 500 Hz: 5 g; duration 0.5 octaves per minute; no damage
Shock <sup>5)</sup>	
Operation	Max. 125 g, 2 ms; no unrecoverable errors
Storage	Max. 400 g, 2 ms; no damage Max. 500 g, 1 ms; no damage Max. 300 g, 0.5 ms; no damage
Transport	Max. 400 g, 2 ms; no damage Max. 500 g, 1 ms; no damage Max. 300 g, 0.5 ms; no damage
Altitude	
Operation	- 300 to 3048 m
Storage	- 300 to 12192 m
Mechanical characteristics	
Installation	Fixed <sup>6)</sup>
Weight	350 g
Manufacturer information	
Manufacturer	Seagate
Manufacturer product ID	ST9250315AS

Table 100: 5ACPCI.RAIC-05 - Technical data

- 1) Temperature values at an elevation of 305 meters. The temperature specification must be reduced linearly by 1°C every 305 meters. The temperature increase and decrease can be a maximum of 20°C per hour.
- 2) Standard operation refers to 333 POH (power-on hours) per month.
- 3) 24-hour operation refers to 732 POH (power-on hours) per month.
- 4) Humidity gradient: Maximum 30% per hour.
- 5) Operation in areas prone to vibration and shock can affect performance negatively (reduction of transfer rate).
- 6) PCI slot installation.



### 3.9.20.4 Temperature humidity diagram

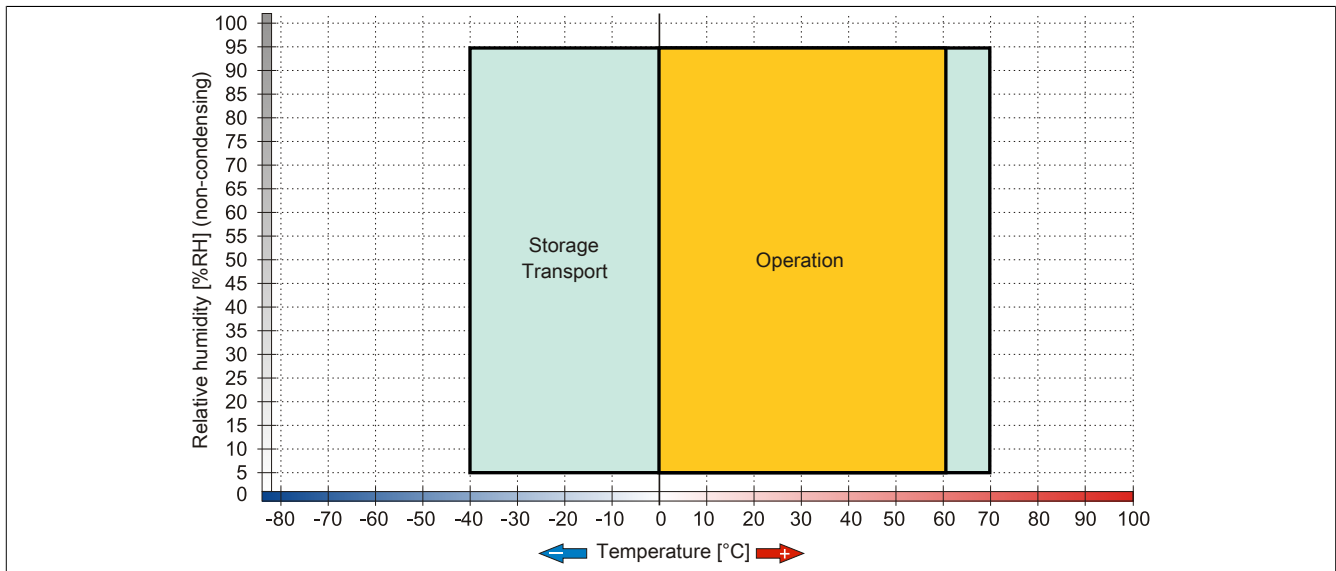


Figure 52: 5ACPCI.RAIC-05 - Temperature humidity diagram

### 3.9.20.5 Driver support

Special drivers are necessary for operating the PCI SATA RAID controller. Drivers for supported and approved operating systems are available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

.NET-based SATA Raid™ serial ATA RAID management software can also be found on the B&R website.

#### Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

### 3.9.20.6 Configuration

For information about configuring a SATA RAID set, see 3 "Installation", section 8 "Configuring a SATA RAID set" on page 162.

### 3.9.20.7 Replacing a HDD

A hard drive can be easily replaced in the event of an error when using the RAID1 (mirroring) configuration without having to reinstall the system. The 250 GB 5MMHDD.0250-00 SATA HDD is available as a replacement hard disk.

For information about performing a replacement, see "Replacing a PCI SATA RAID hard disk in a RAID 1 set" on page 340.

3.9.21 5ACPCI.RAIC-06

3.9.21.1 General information

This SATA RAID controller supports RAID level 0 and 1 and can be inserted in a PCI slot. The 500 GB hard disks that are used are specified for 24-hour operation (24x7).

- SATA RAID controller
- RAID level 0 (striped) and 1 (mirrored)
- 2x 500 GB SATA hard disks (suitable for 24-hour operation)
- Only requires 1 PCI slot
- Transfer rates up to 150 MB/s

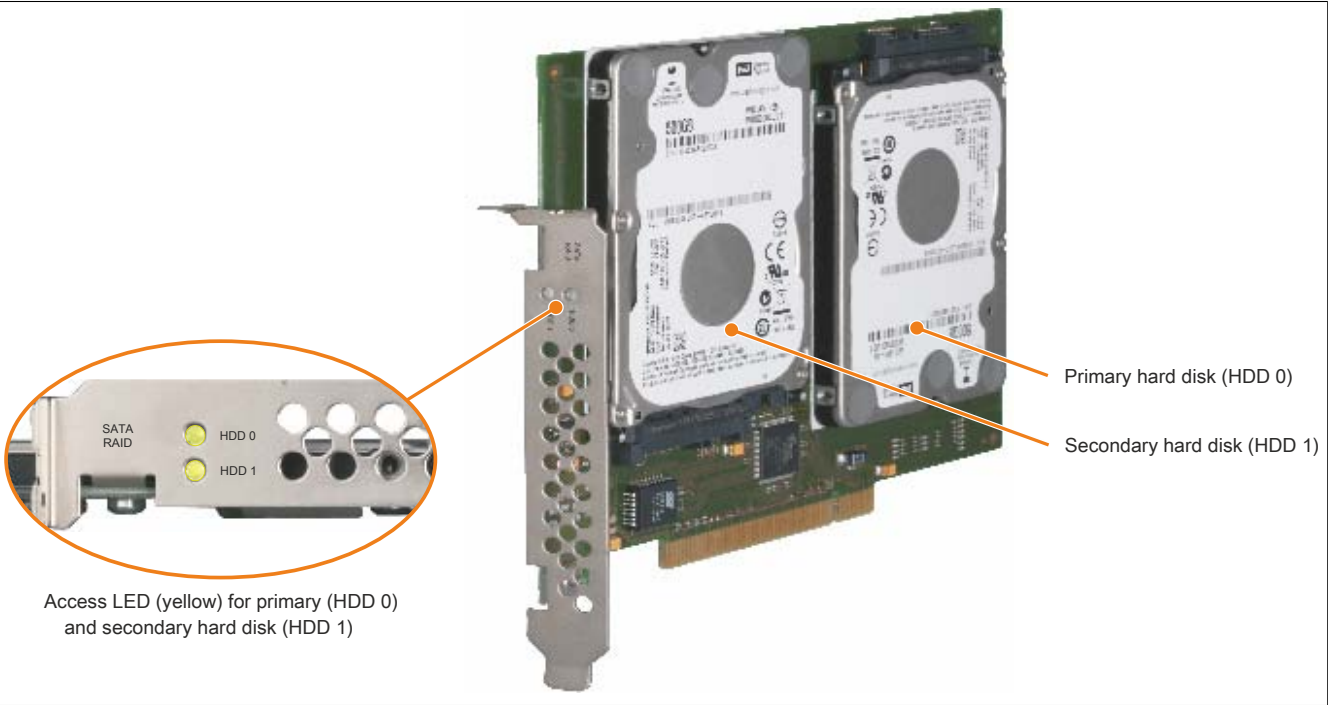


Figure 53: PCI SATA RAID controller

**Information:**

The PCI SATA RAID controller cannot be used in place of a universal power supply (UPS). If the operating system is not shut down properly, then this will be detected as an error state (with RAID 1 sets) at the next system startup and a complete rebuild is performed. If 500 GB of memory are used, this generally takes approximately 500 minutes (configurable) to complete.

3.9.21.2 Order data

Model number	Short description	Figure
	<b>Drives</b>	
5ACPCI.RAIC-06	PCI RAID system SATA 2x 500 GB; note: please see the manual for information about using this hard disk	
	<b>Optional accessories</b>	
	<b>Drives</b>	
5MMHDD.0500-00	500 GB SATA hard disk; replacement for 5AC801.HDDI-04, 5AC901.CHDD-01 and 5ACPCI.RAIC-06; note: please see the manual for information about using this hard disk	

Table 101: 5ACPCI.RAIC-06 - Order data

## 3.9.21.3 Technical data

**Information:**

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

<b>Product ID</b>	<b>5ACPCI.RAIC-06</b>
<b>General information</b>	
Capacity	2x 500 GB
Number of hard disks	2
Certification	
CE	Yes
cULus	Yes
<b>Controller</b>	
Type	Sil 3512 SATA link
Specification	Serial ATA 1.0
Data transfer rate	Max. 1.5 Gbit/s (150 MB/s)
RAID level	Supports RAID 0, 1
BIOS extension ROM requirements	Approx. 32 kB
<b>Hard disk drive <sup>1)</sup></b>	
Capacity	500 GB
Number of heads	2
Number of sectors	976,773,168
Bytes per sector	512 (logical) / 4096 (physical)
Cache	16 MB
Speed	5400 rpm ±0.2%
Startup time	Typ. 3.5 s (from 0 rpm to read access)
Service life	5 years
MTBF	1,000,000 POH <sup>2)</sup>
S.M.A.R.T. support	Yes
Interface	SATA
Access time	5.5 ms
Supported transfer modes	SATA II
Data transfer rate	
Internal	Max. 147 MB/s
To/From host	Max. 150 MB/s (SATA I), max. 300 MB/s (SATA II)
Positioning time	
Nominal (read only)	11 ms
Maximum (read only)	21 ms
<b>Environmental conditions</b>	
Temperature <sup>3)</sup>	
Operation <sup>4)</sup>	0 to 60°C
24-hour operation <sup>5)</sup>	0 to 60°C
Storage	-40 to 70°C
Transport	-40 to 70°C
Relative humidity <sup>6)</sup>	
Operation	5 to 95%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration <sup>7)</sup>	
Operation (continuous)	5 to 500 Hz: 0.125 g; no unrecoverable errors
Operation (occasional)	5 to 500 Hz: 0.25 g; no unrecoverable errors
Storage	10 to 500 Hz: 5 g; no unrecoverable errors
Transport	10 to 500 Hz: 5 g; no unrecoverable errors
Shock	
Operation	200 g and 2 ms duration; no unrecoverable errors
Storage	1000 g and 2 ms duration; no unrecoverable errors
Transport	1000 g and 2 ms duration; no unrecoverable errors
Altitude	
Operation	-305 to 3048 m
Storage	-305 to 12192 m
<b>Mechanical characteristics</b>	
Installation	Fixed <sup>8)</sup>
Weight	350 g
<b>Manufacturer information</b>	
Manufacturer	Western Digital
Manufacturer product ID	WD5000LUCT

Table 102: 5ACPCI.RAIC-06 - Technical data

1) Technical data for a hard disk.

2) With 8760 POH (power-on hours) per year and 25°C surface temperature.

3) Temperature values at an elevation of 305 meters. The temperature specification must be reduced linearly by 1°C every 305 meters. The temperature increase and decrease can be a maximum of 20°C per hour.

- 4) Standard operation refers to 333 POH (power-on hours) per month.
- 5) 24-hour operation refers to 732 POH (power-on hours) per month.
- 6) Humidity gradient: Maximum 20% per hour.
- 7) Operation in areas prone to vibration and shock can affect performance negatively (reduction of transfer rate).
- 8) PCI slot installation.

### 3.9.21.4 Temperature humidity diagram

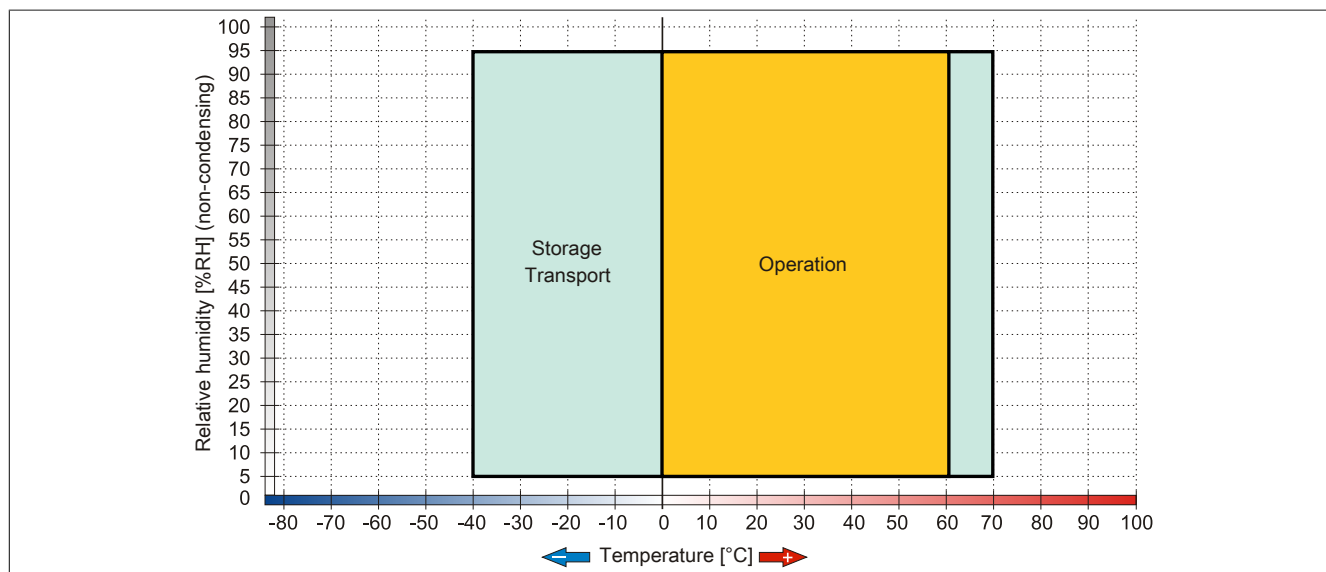


Figure 54: 5ACPCI.RAIC-06 - Temperature humidity diagram

### 3.9.21.5 Driver support

Special drivers are necessary for operating the PCI SATA RAID controller. Drivers for supported and approved operating systems are available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

.NET-based SATA Raid™ serial ATA RAID management software can also be found on the B&R website.

#### Information:

**Required drivers can only be downloaded from the B&R website, not from manufacturer websites.**

### 3.9.21.6 Configuration

For information about configuring a SATA RAID set, see 3 "Installation", section 8 "Configuring a SATA RAID set" on page 162.

### 3.9.21.7 Replacing a HDD

A hard drive can be easily replaced in the event of an error when using the RAID1 (mirroring) configuration without having to reinstall the system. The 500 GB 5MMHDD.0500-00 SATA HDD is available as a replacement hard disk.

For information about performing a replacement, see "Replacing a PCI SATA RAID hard disk in a RAID 1 set" on page 340.

### 3.9.22 5MMHDD.0250-00

#### 3.9.22.1 General information

This 250 GB hard disk can be used as a replacement part or accessory.

- 250 GB hard disk
- Replacement hard disk for a 5AC801.HDDI-03 hard disk or a 5ACPCI.RAIC-05 RAID controller
- APC510 accessory (optional hard disk for the I/O board)
- Specified for 24-hour operation
- S.M.A.R.T. support

#### 3.9.22.2 Order data


Model number	Short description	Figure
	<b>Drives</b>	
5MMHDD.0250-00	250 GB SATA hard disk; replacement for 5AC801.HDDI-03 and 5ACPCI.RAIC-05; note: please see the manual for information about using this hard disk	

Table 103: 5MMHDD.0250-00 - Order data

#### 3.9.22.3 Technical data

##### Information:

The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the complete system. For the complete system in which this individual component is used, refer to the data given specifically for that device.

Product ID	5MMHDD.0250-00
General information	
Certification	
CE	Yes
cULus	Yes
Hard disk drive	
Capacity	250 GB
Number of heads	1
Number of sectors	488,397,168
Bytes per sector	512
Cache	8 MB
Speed	5400 rpm $\pm 0.2\%$
Startup time	Typ. 3.6 s (from 0 rpm to read access)
MTBF	550,000 POH <sup>1)</sup>
S.M.A.R.T. support	Yes
Interface	SATA
Access time	5.56 ms
Supported transfer modes	SATA 1.0, Serial ATA Revision 2.6 PIO mode 0-4, multiword DMA mode 0-2, UDMA mode 0-6
Data transfer rate	
Internal	Max. 1175 Mbit/s
To/From host	Max. 150 MB/s (SATA I), max. 300 MB/s (SATA II)
Positioning time	
Minimum (track to track)	1 ms
Nominal (read only)	14 ms
Maximum (read only)	30 ms
Environmental conditions	
Temperature <sup>2)</sup>	
Operation <sup>3)</sup>	0 to 60°C
24-hour operation <sup>4)</sup>	0 to 60°C
Storage	-40 to 70°C
Transport	-40 to 70°C

Table 104: 5MMHDD.0250-00 - Technical data

Product ID	5MMHDD.0250-00
Relative humidity <sup>5)</sup>	
Operation	5 to 95%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration	
Operation	5 to 500 Hz: 0.5 g; no unrecoverable errors
Storage	5 to 500 Hz: 5 g; no unrecoverable errors
Transport	5 to 500 Hz: 5 g; no unrecoverable errors
Shock	
Operation	350 g and 2 ms duration; no unrecoverable errors
Storage	800 g and 2 ms duration; no unrecoverable errors
	1000 g and 1 ms duration; no unrecoverable errors
	600 g and 0.5 ms duration; no unrecoverable errors
Transport	800 g and 2 ms duration; no unrecoverable errors
	1000 g and 1 ms duration; no unrecoverable errors
	600 g and 0.5 ms duration; no unrecoverable errors
Altitude	
Operation	-300 to 3048 m
Storage	-300 to 12192 m
<b>Mechanical characteristics</b>	
Dimensions	
Width	9.5 mm
Height	69 mm
Depth	100 mm
Weight	100 g
<b>Manufacturer information</b>	
Manufacturer	Seagate
Manufacturer product ID	ST9250315AS

Table 104: 5MMHDD.0250-00 - Technical data

- 1) With 8760 POH (power-on hours) per year and 25°C surface temperature.
- 2) Temperature values at an elevation of 305 meters. The temperature specification must be reduced linearly by 1°C every 305 meters. The temperature increase and decrease can be a maximum of 20°C per hour.
- 3) Standard operation refers to 333 POH (power-on hours) per month.
- 4) 24-hour operation refers to 732 POH (power-on hours) per month.
- 5) Humidity gradient: Maximum 30% per hour.

### 3.9.22.4 Temperature humidity diagram

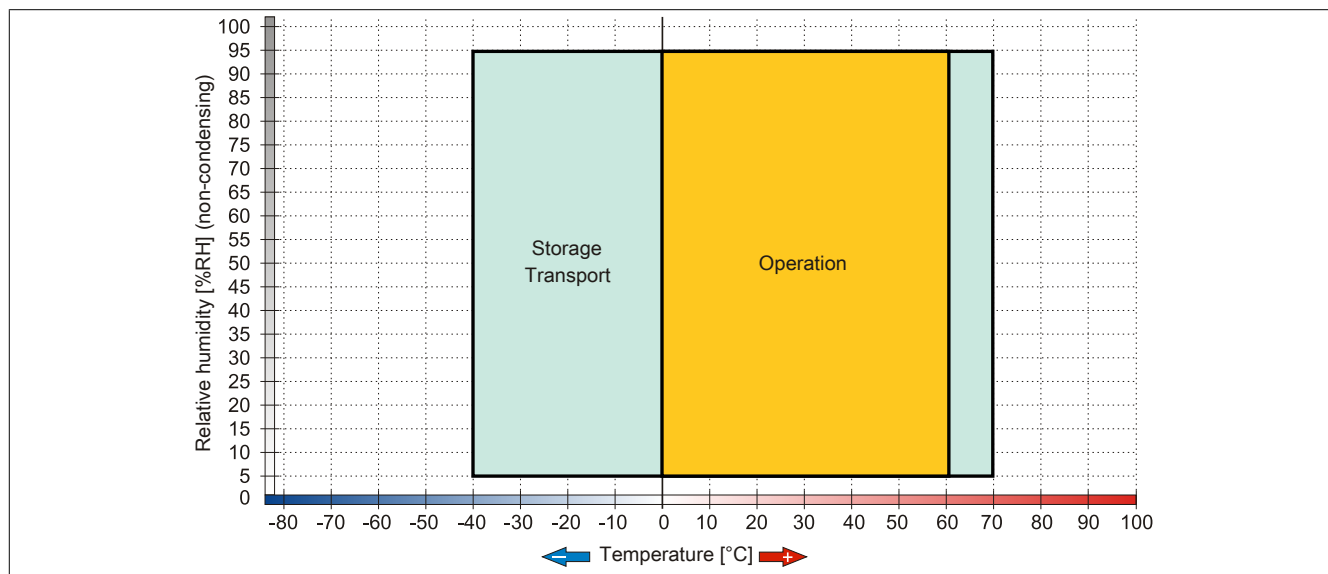


Figure 55: 5MMHDD.0250-00 - Temperature humidity diagram

### 3.9.23 5MMHDD.0500-00

#### 3.9.23.1 General information

This 500 GB hard disk can be used as a replacement part or accessory.

- 500 GB hard disk
- Replacement hard disk for a 5AC801.HDDI-04 / 5AC901.CHDD-01 hard disk or a 5ACPCI.RAIC-05 RAID controller
- APC510 accessory (optional hard disk for the I/O board)
- Specified for 24-hour operation
- S.M.A.R.T. support

#### 3.9.23.2 Order data


Model number	Short description	Figure
5MMHDD.0500-00	<b>Drives</b> 500 GB SATA hard disk; replacement for 5AC801.HDDI-04, 5AC901.CHDD-01 and 5ACPCI.RAIC-06; note: please see the manual for information about using this hard disk	

Table 105: 5MMHDD.0500-00 - Order data

#### 3.9.23.3 Technical data

##### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5MMHDD.0500-00
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
<b>Hard disk drive</b>	
Capacity	500 GB
Number of heads	2
Number of sectors	976,773,168
Bytes per sector	512 (logical) / 4096 (physical)
Cache	16 MB
Speed	5400 rpm $\pm 0.2\%$
Startup time	Typ. 3.5 s (from 0 rpm to read access)
Service life	5 years
MTBF	1,000,000 POH <sup>1)</sup>
S.M.A.R.T. support	Yes
Interface	SATA
Access time	5.5 ms
Supported transfer modes	SATA II
Data transfer rate	
Internal	Max. 147 MB/s
To/From host	Max. 150 MB/s (SATA I), max. 300 MB/s (SATA II)
Positioning time	
Nominal (read only)	11 ms
Maximum (read only)	21 ms

Table 106: 5MMHDD.0500-00 - Technical data

Product ID	5MMHDD.0500-00
Environmental conditions	
Temperature <sup>2)</sup>	
Operation <sup>3)</sup>	0 to 60°C
24-hour operation <sup>4)</sup>	0 to 60°C
Storage	-40 to 70°C
Transport	-40 to 70°C
Relative humidity <sup>5)</sup>	
Operation	5 to 95%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration	
Operation (continuous)	5 to 500 Hz: 0.25 g; no unrecoverable errors
Operation (occasional)	5 to 500 Hz: 0.5 g; no unrecoverable errors
Storage	10 to 500 Hz: 5 g; no unrecoverable errors
Transport	10 to 500 Hz: 5 g; no unrecoverable errors
Shock	
Operation	400 g and 2 ms duration; no unrecoverable errors
Storage	1000 g and 2 ms duration; no unrecoverable errors
Transport	1000 g and 2 ms duration; no unrecoverable errors
Altitude	
Operation	-305 to 3048 m
Storage	-305 to 12192 m
Mechanical characteristics	
Dimensions	
Width	7 mm
Height	69 mm
Depth	100 mm
Weight	100 g
Manufacturer information	
Manufacturer	Western Digital
Manufacturer product ID	WD5000LUCT

Table 106: 5MMHDD.0500-00 - Technical data

- 1) With 8760 POH (power-on hours) per year and 25°C surface temperature.
- 2) Temperature values at an elevation of 305 meters. The temperature specification must be reduced linearly by 1°C every 305 meters. The temperature increase and decrease can be a maximum of 20°C per hour.
- 3) Standard operation refers to 333 POH (power-on hours) per month.
- 4) 24-hour operation refers to 732 POH (power-on hours) per month.
- 5) Humidity gradient: Maximum 20% per hour.

### 3.9.23.4 Temperature humidity diagram

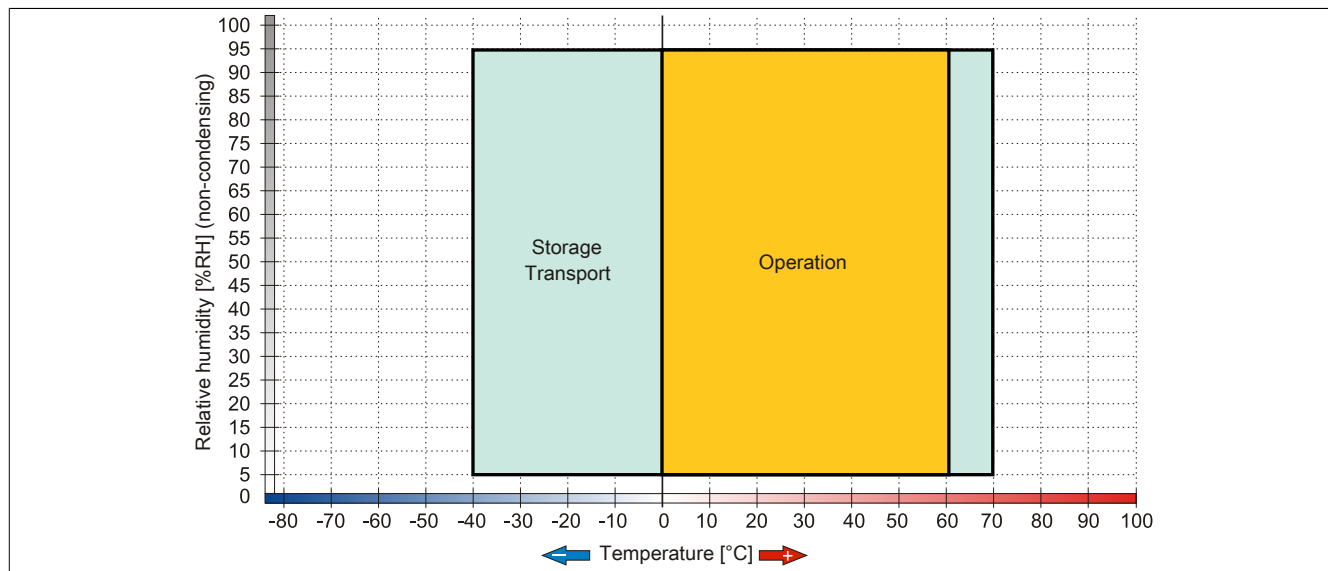


Figure 56: 5MMHDD.0500-00 - Temperature humidity diagram



### 3.10 Fan kit

#### Information:

Fans are necessary when using components that must work within certain temperature limits, e.g. DVD combos and PCI cards.

Fan and dust filters are subject to wear and must be checked with appropriate frequency and cleaned or replaced when not functioning properly (e.g. due to dirt and grime).

#### 3.10.1 5AC803.FA01-00

##### 3.10.1.1 General information

This fan kit is an optional addition for PPC800 system units without an expansion.

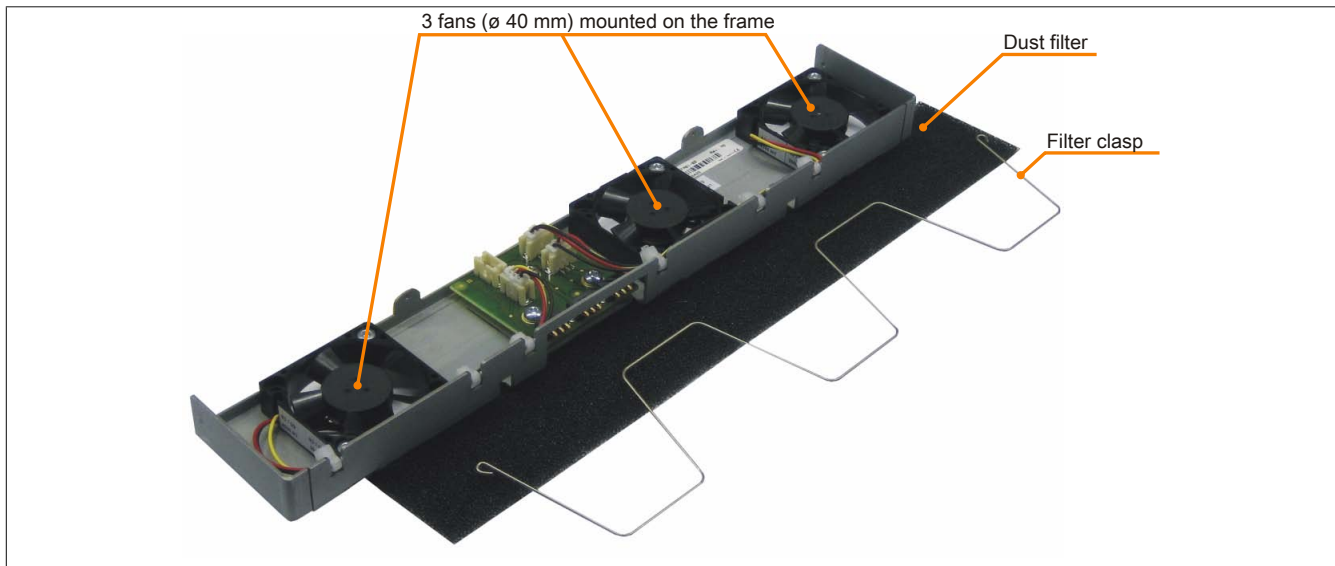


Figure 57: 5AC803.FA01-00 - Fan kit

##### 3.10.1.2 Order data


Model number	Short description	Figure
	<b>Fan kits</b>	
5AC803.FA01-00	PPC800 fan kit for system units without an expansion	

Table 107: 5AC803.FA01-00 - Order data

##### 3.10.1.3 Technical data

Product ID	5AC803.FA01-00
<b>General information</b>	
Number of fans	3
Speed	Max. 6100 rpm
Noise level	21 dB
Service life	29,000 hours at 70°C 95,000 hours at 20°C
Type	Double ball bearings
Certification CE	Yes

Table 108: 5AC803.FA01-00 - Technical data

Product ID	5AC803.FA01-00
Mechanical characteristics	
Dimensions	
Fan	
Width	40 mm
Height	40 mm
Depth	10 mm

Table 108: 5AC803.FA01-00 - Technical data

### 3.10.2 5AC803.FA02-00

#### 3.10.2.1 General information

This fan kit can be installed as an option on PPC800 system units with the 1-slot expansion.

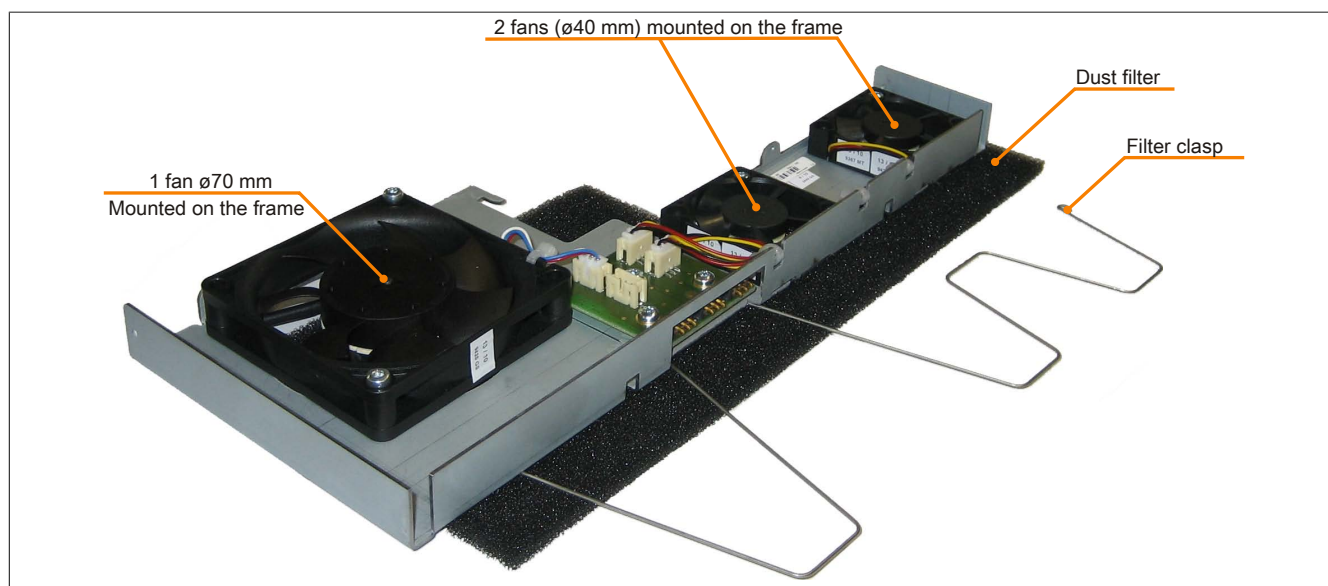


Figure 58: 5AC803.FA02-00 - Fan kit

#### 3.10.2.2 Order data

Model number	Short description	Figure
5AC803.FA02-00	<b>Fan kits</b> PPC800 fan kit for system units with expansion 5AC803.SX01-00	

Table 109: 5AC803.FA02-00 - Order data

#### 3.10.2.3 Technical data

Product ID	5AC803.FA02-00
General information	
Number of fans	3
Speed	Fans 1, 2: max. 6100 rpm Fan 3: 4300 rpm $\pm$ 10%
Noise level	Fans 1, 2: 21 dB Fan 3: 5 dB
Service life	Fans 1, 2: 29,000 hours at 70°C, 95,000 hours at 20°C Fan 3: 60,000 hours (at 40°C)
Type	Double ball bearings
Certification	
CE	Yes

Table 110: 5AC803.FA02-00 - Technical data

Product ID	5AC803.FA02-00
Mechanical characteristics	
Dimensions	
Fan	
Width	Fans 1, 2: 40 mm Fan 3: 70 mm
Height	Fans 1, 2: 40 mm Fan 3: 70 mm
Depth	Fans 1, 2: 10 mm Fan 3: 15 mm

Table 110: 5AC803.FA02-00 - Technical data

### 3.10.3 5AC803.FA03-00

#### 3.10.3.1 General information

This fan kit can be installed as an option on PPC800 system units with the 2-slot expansion.

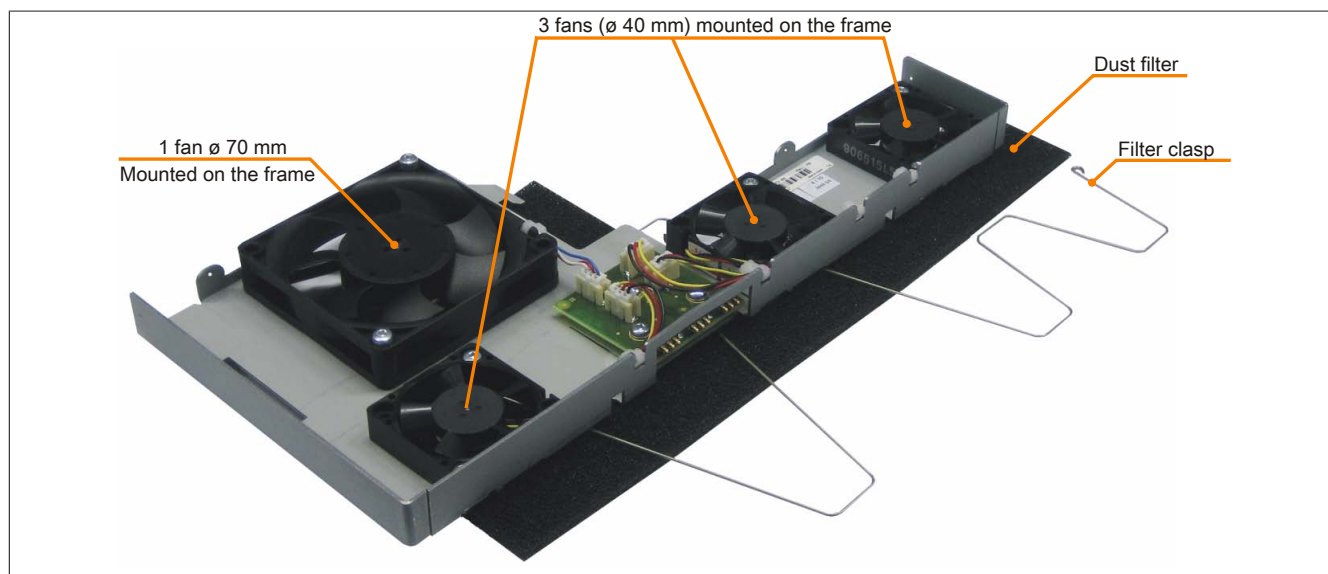


Figure 59: 5AC803.FA03-00 - Fan kit

#### 3.10.3.2 Order data

Model number	Short description	Figure
5AC803.FA03-00	<b>Fan kits</b> PPC800 fan kit for system units with expansion 5AC803.SX02-00	

Table 111: 5AC803.FA03-00 - Order data

#### 3.10.3.3 Technical data

Product ID	5AC803.FA03-00
<b>General information</b>	
Number of fans	4
Speed	Fans 1, 2, 3: max. 6100 rpm Fan 4: 4300 rpm $\pm$ 10%
Noise level	Fan 1, 2, 3: 21 dB Fan 4: 5 dB
Service life	Fan 1, 2, 3: 29,000 hours at 70°C, 95,000 hours at 20°C Fan 4: $\pm$ 60,000 at 40°C
Type	Double ball bearings
Certification CE	Yes
<b>Mechanical characteristics</b>	
Dimensions	
Fan	
Width	Fan 1, 2, 3: 40 mm Fan 4: 70 mm
Height	Fan 1, 2, 3: 40 mm Fan 4: 70 mm
Depth	Fan 1, 2, 3: 10 mm Fan 4: 15 mm

Table 112: 5AC803.FA03-00 - Technical data

# Chapter 3 • Installation

## 1 Installation

B&R Industrial PCs are best mounted in a wall cutout using the retaining clips or clamping blocks found on the housing (designs may vary).

### 1.1 Important installation information

- Environmental conditions must be taken into consideration.
- This device must be mounted to a flat surface.
- This device is only certified for operation in closed rooms.
- This device must not be subjected to direct sunlight.
- Ventilation holes must not be covered.
- This device must be mounted in one of the approved orientations.
- The wall or control cabinet must be able to withstand four times the total weight of the device.
- The flex radius of connected cables (DVI, SDL, USB, etc.) must not be exceeded.
- This device should be mounted in a position that minimizes glare on the screen.
- This device should be mounted in a position and orientation that make viewing as easy as possible for the operator.

### 1.2 Installation with clamping blocks

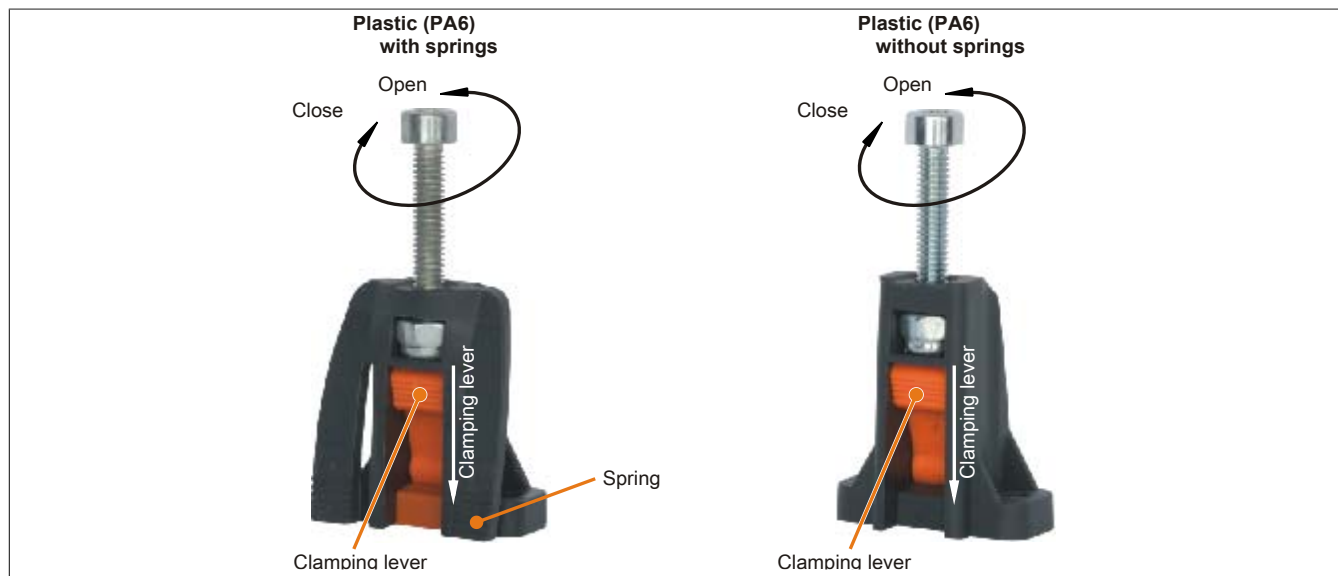


Figure 60: Clamping blocks

Clamping blocks are designed to clamp a maximum thickness of 10 mm and minimum thickness of 2 mm.

A hex key (3 mm) is needed to tighten and loosen the screws. The maximum torque when tightening the clamp is 0.5 Nm.

Devices must be installed on flat surface; uneven areas can cause damage to the display when the screws are tightened.

### 1.3 Mounting orientation

The PPC800 must be mounted as described in the following sections.

#### 1.3.1 Mounting orientation 0° and +/- 45°

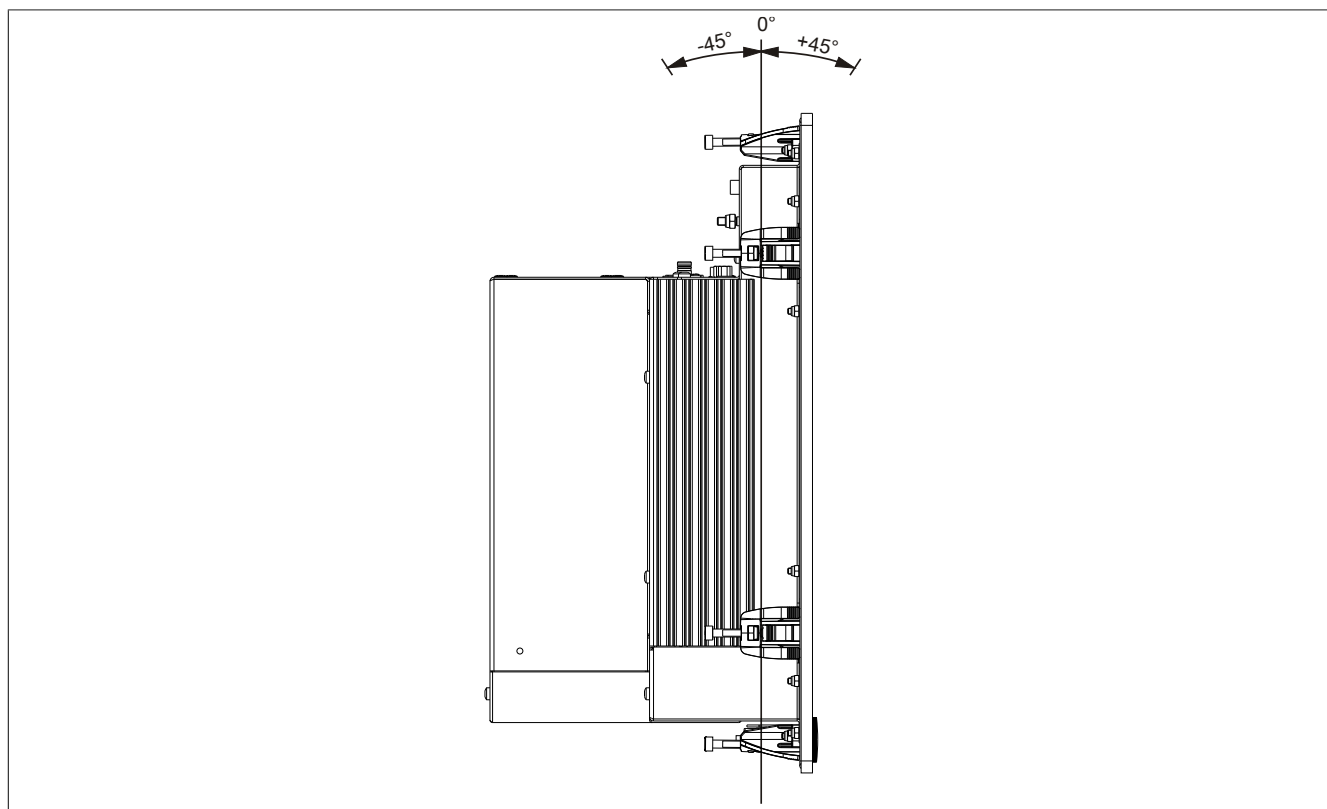


Figure 61: Mounting orientation 0° and +/- 45°

In order to facilitate natural air circulation, devices must be mounted according to the spacing indicated in the section "Spacing for air circulation" on page 141.

### 1.3.2 Mounting orientation with 5AC801.DVRS-00

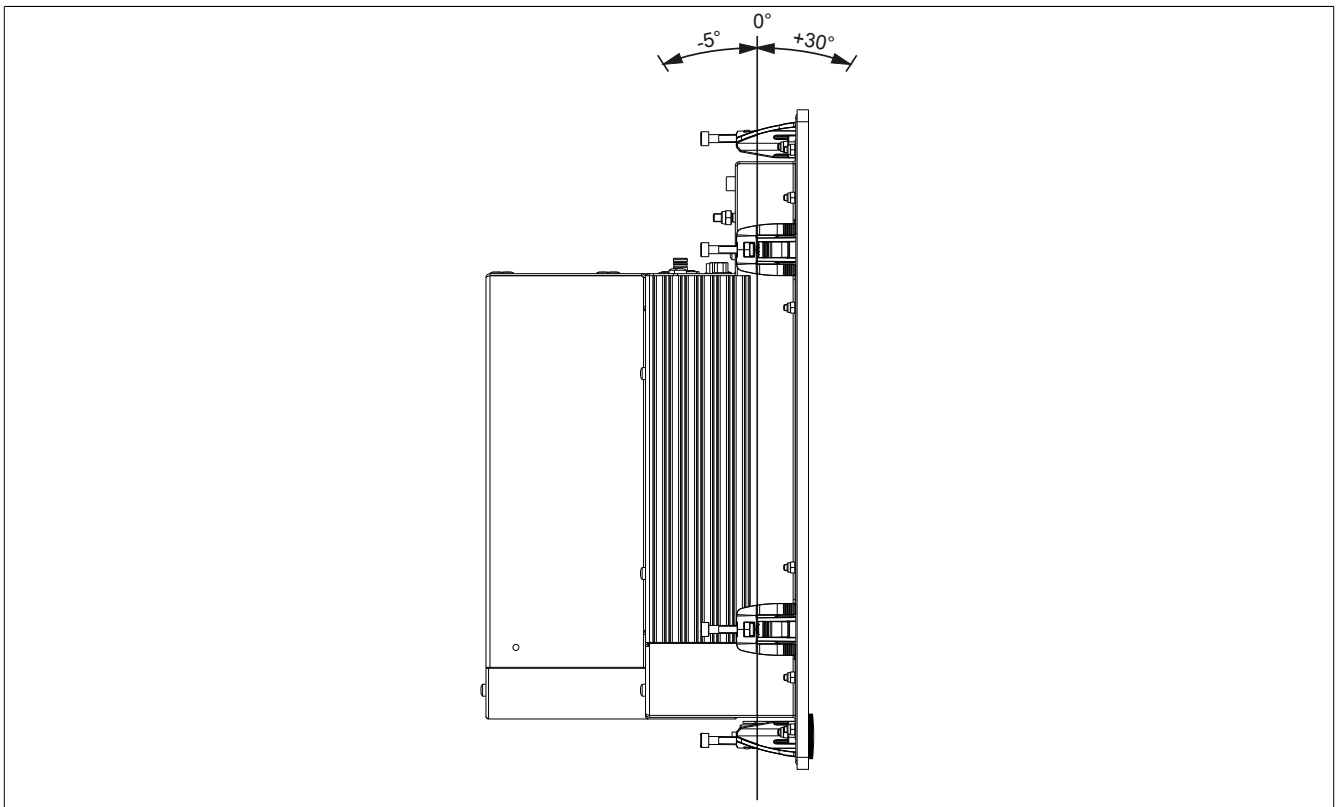


Figure 62: Mounting orientation with 5AC801.DVRS-00

In order to facilitate natural air circulation, devices must be mounted according to the spacing indicated in the section "Spacing for air circulation" on page 141.

### 1.3.3 Mounting orientation with 5AC801.DVDS-00

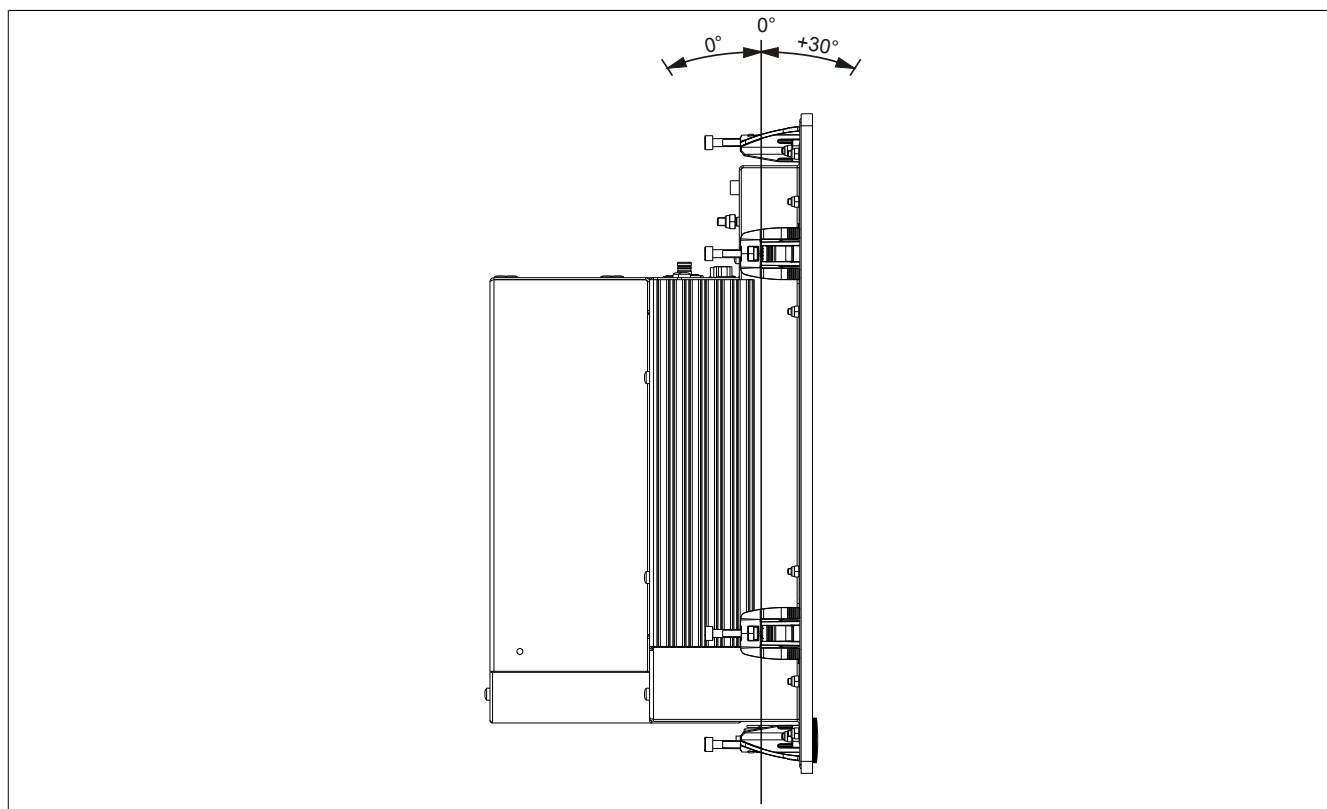


Figure 63: Mounting orientation with 5AC801.DVDS-00

In order to facilitate natural air circulation, devices must be mounted according to the spacing indicated in the section "Spacing for air circulation" on page 141.



## 1.4 Spacing for air circulation

In order to guarantee sufficient air circulation, allow the specified amount of space above, below, to the side and behind the Panel PC 800 devices. The minimum specified spacing is indicated in the following diagram. This applies to all Panel PC 800 variants.

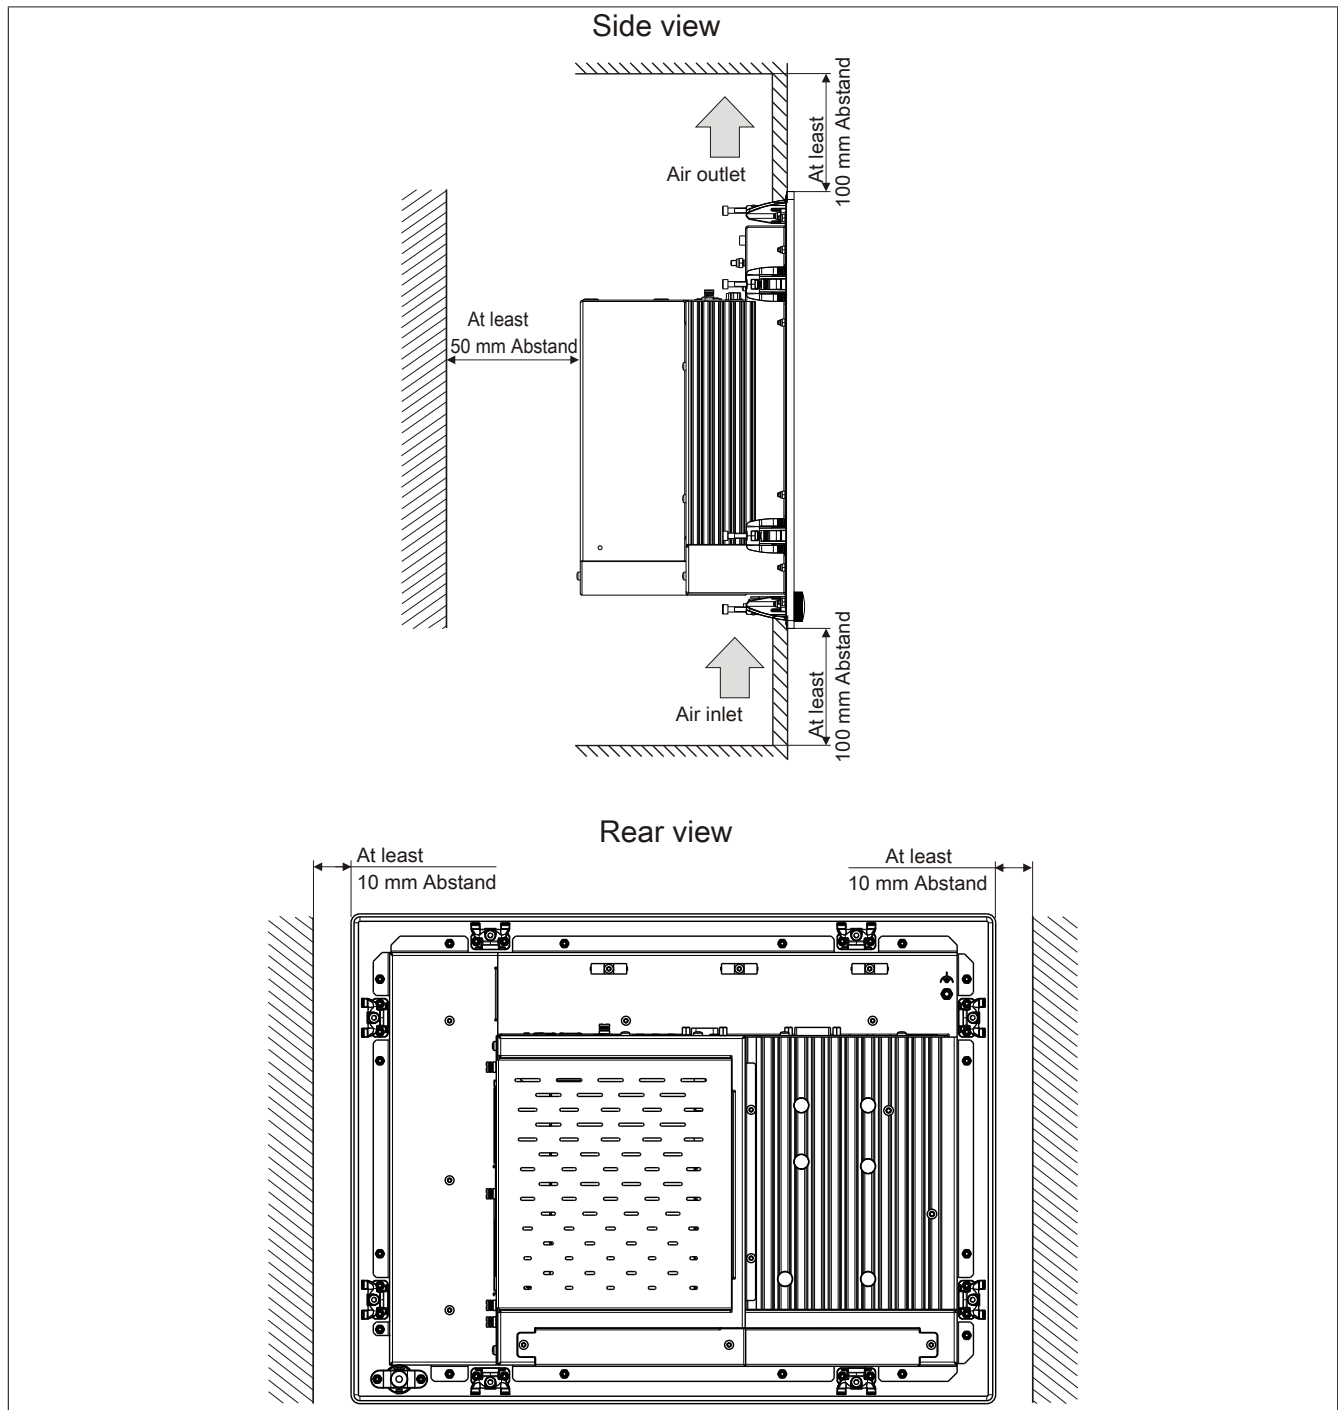


Figure 64: Spacing for air circulation

### Information:

The spacing specifications for air circulation are based on the worst-case scenario for operation at the maximum specified ambient temperature (see "Temperaturangaben" in the chapter "Technical data").

If the spacing specifications for air circulation cannot be adhered to, then the maximum specified temperatures for the temperature sensors (see "Temperatursensorpositionen" in the chapter "Technical data") must be monitored by the user and appropriate measures taken if they are exceeded.

## 2 Cable connections

Flex radius specifications must be taken into account when installing or connecting cables.

### Information:

The maximum torque for the locating screws is 0.5 Nm.

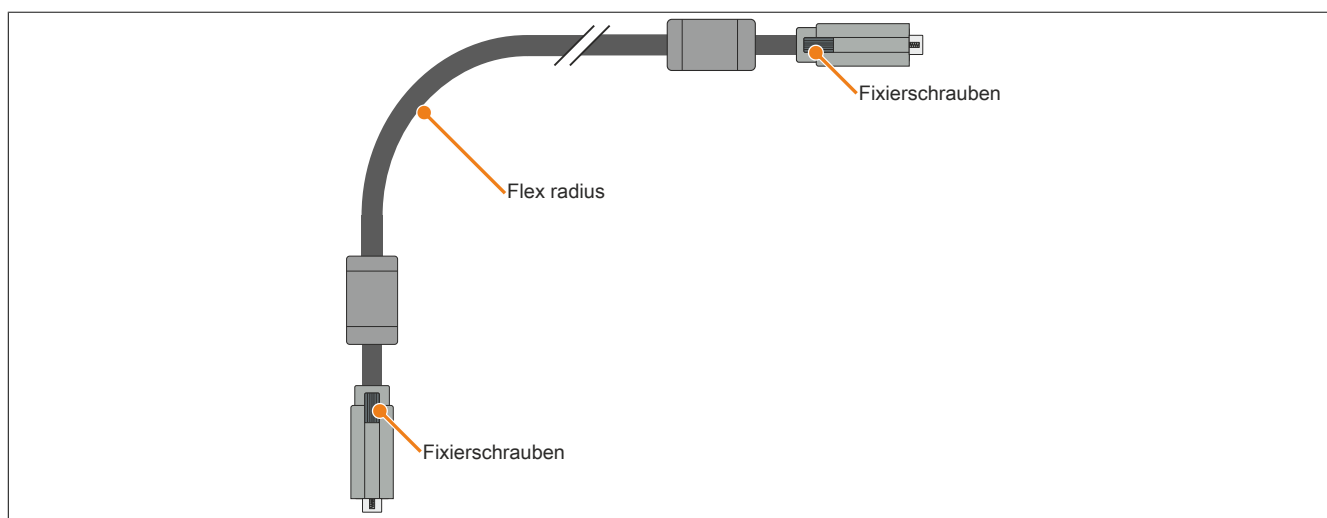


Figure 65: Flex radius - Cable connection

### Information:

The specified flex radius can be found in the Automation Panel 800 or Automation Panel 900 user's manual, which can be downloaded as a PDF file from the B&R website at [www.br-automation.com](http://www.br-automation.com).

### 3 Grounding concept

Functional ground is a current path of low impedance between electrical circuits and ground. It is used, for example, to improve immunity to disturbances and not necessarily as a protective measure. It therefore serves only to deflect disturbances, not to provide any kind of protection against electric shock.

The functional ground on the device has 2 connections:

- Supply voltage
- Ground connection

To guarantee safe conductance of electric disturbances, the following points should be observed:

- The device should be connected to the central grounding point in the control cabinet using the shortest route possible.
- A cable with a minimum cross section of  $2.5 \text{ mm}^2$  per connection should be used. If a cable with wire end sleeves is connected to the 0TB103.9 or 0TB103.91 terminal block, then a cable with maximum  $1.5 \text{ mm}^2$  per connection is possible.
- Note the line shielding concept; all connected data cables are used as shielded lines.

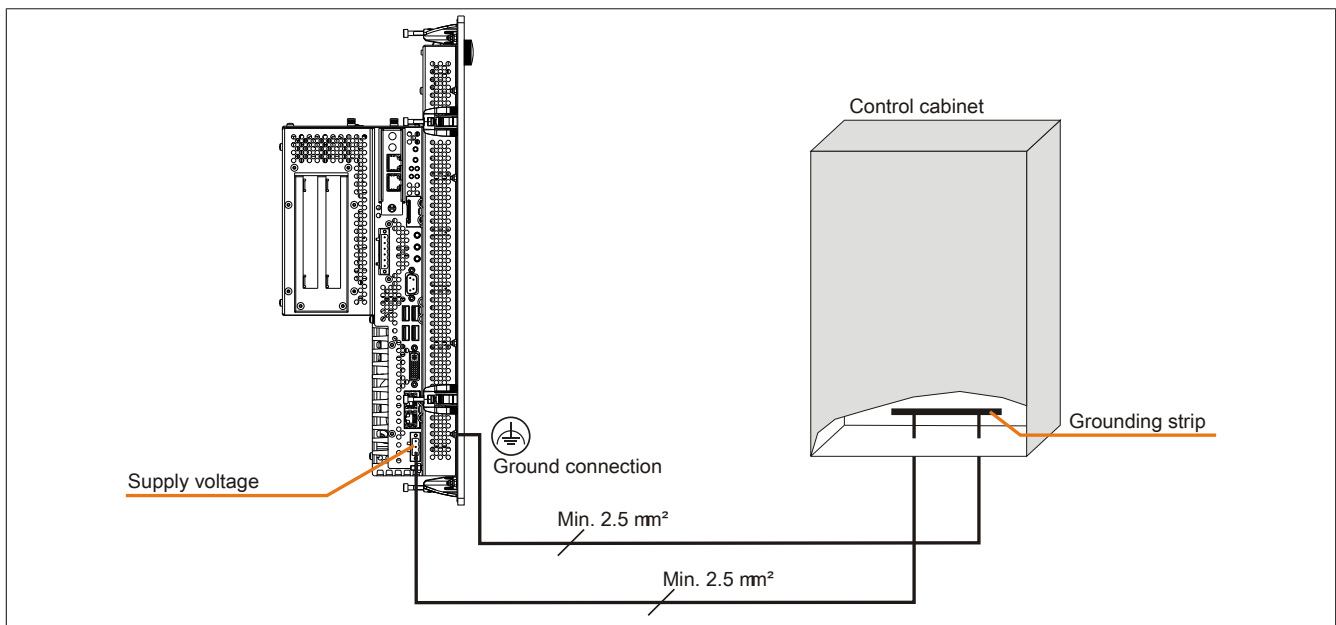


Figure 66: Grounding concept

## 4 General instructions for performing temperature testing

The purpose of these instructions is to explain general procedures for performing application-specific temperature testing on B&R Industrial PCs and Power Panels. Nevertheless, these instructions are meant to serve only as a guideline.

### 4.1 Procedure

In order to obtain accurate results, the testing conditions should match the conditions in the field. This means that for the duration of the temperature tests, the target application should be running, the PC should be installed in the control cabinet that will be used, etc.

In addition, a temperature sensor should be installed for the device being tested to provide live monitoring of the ambient temperature. In order to obtain accurate measurements, this sensor should be installed at a distance of 5 to 10 cm from the B&R Industrial PC near the air intake (not near the exhaust).

All B&R Industrial PCs and Power Panels are equipped with internal temperature sensors. These are installed in different locations for each series. The number of sensors and the temperature limits also vary from series to series.


For information about the locations of temperature sensors and the maximum specified values, please see section "Temperatursensorpositionen" in chapter 2 "Technical data".

To ensure that the thermal situation is evaluated reliably, a minimum of 8 hours is recommended for testing.

### 4.2 Evaluating temperatures in Windows operating systems

#### 4.2.1 Evaluating with the B&R Control Center

The B&R Control Center can be used to evaluate the temperatures. Temperatures can be viewed on the "Temperatures" property page. The B&R Control Center is available at no cost in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)). The B&R Control Center uses the B&R Automation Device Interface (ADI).

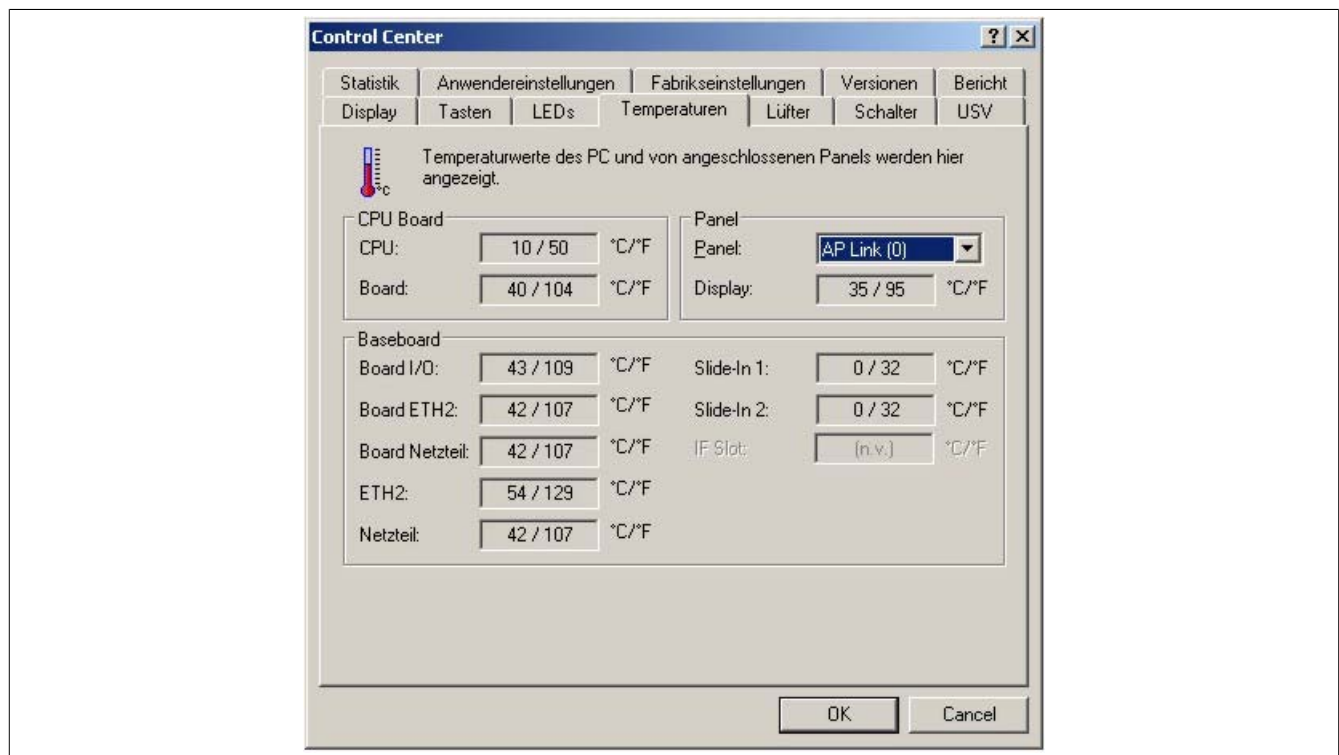

A separate application can be developed if it is necessary to collect historical data.

### Information:

Software development kits such as the ADI .NET SDK are available on the B&R website ([www.br-automation.com](http://www.br-automation.com)).

#### 4.2.2 Evaluating with the BurnInTest tool from Passmark

If a separate application is not created or used to evaluate the temperature, then B&R recommends using the BurnInTest software tool from Passmark.

Standard and Professional versions of BurnInTest are available. In addition to the software package, there are also various loopback plugs (serial, parallel, USB, etc.) and test CDs/DVDs available. The exact software and loopback plugs used will determine the corresponding load that can be generated on the system and peripheral devices.

#### Information:

Loopback plugs are also available from Passmark. More information is available at [www.passmark.com](http://www.passmark.com).

The following screenshots are based on Passmark BurnInTest Pro V4 and a 2-slot APC810 with DVD.

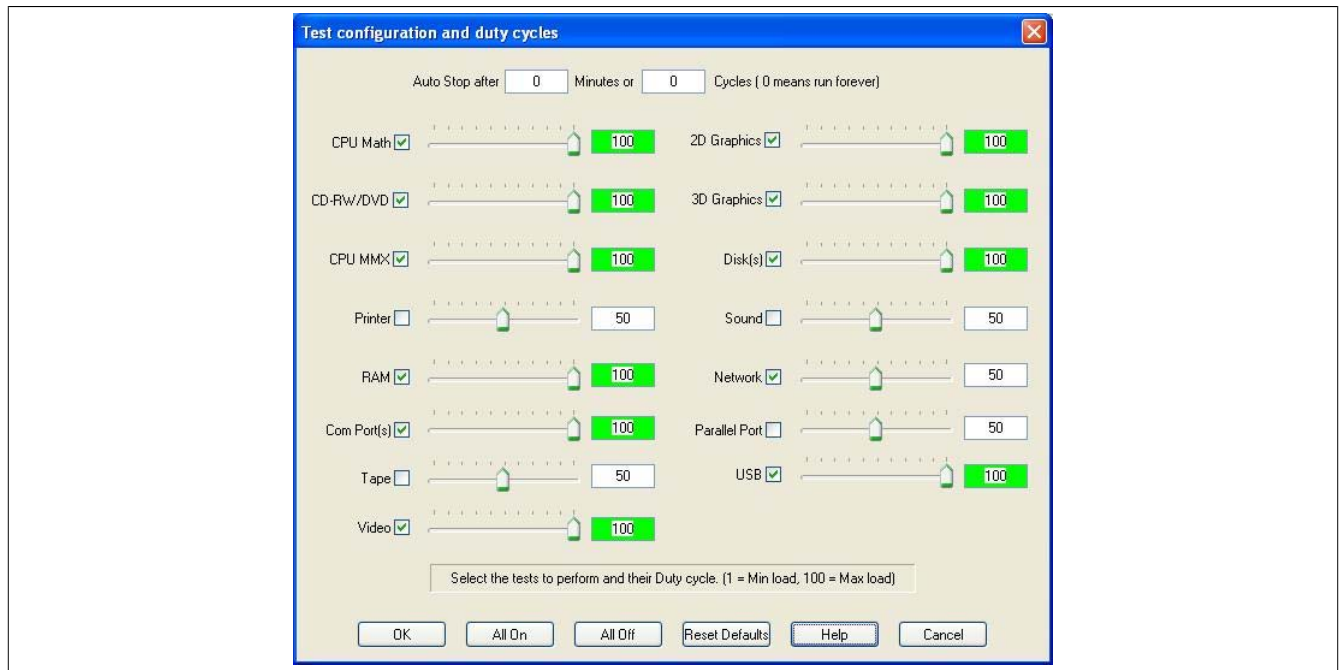


Figure 67: Settings for Passmark BurnInTest Pro V4 and a 2-slot APC810 with DVD

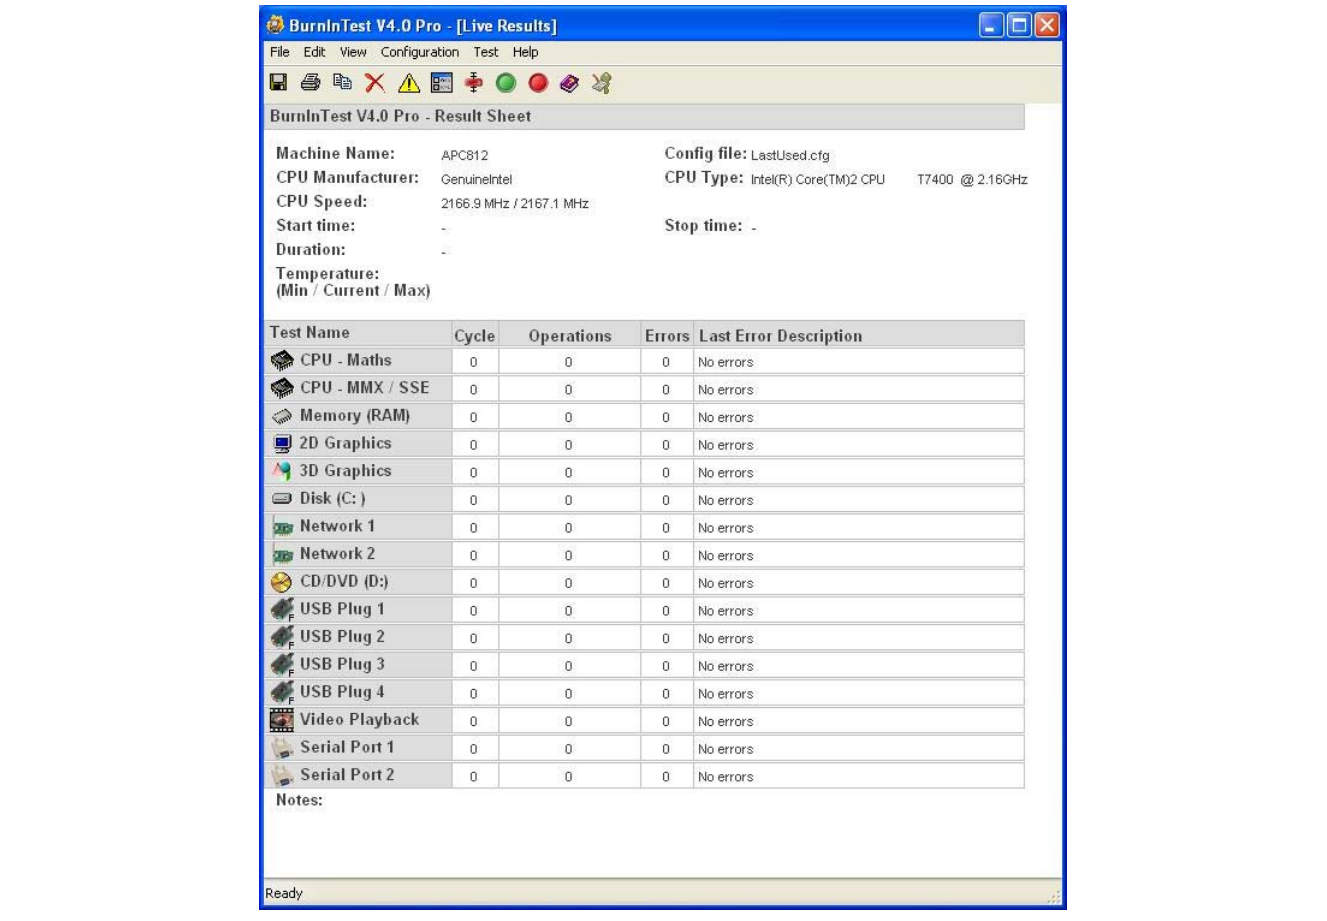


Figure 68: Test overview of a 2-slot APC810 with DVD

The respective test properties may need to be fine-tuned depending on the availability of a loopback plug and DVDs.


**Information:**

USB flash drives can also be used if a USB loopback plug is not available. The USB flash drives must be detected as formatted drives in Windows. The test USB must then be deselected, and the USB flash drives must be configured as the testing device in the disk properties.



**Information:**

Serial loopback plugs are relatively easy to create. Simply connect several pins on the serial interface with wires.

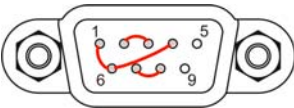

### 4.3 Evaluating temperatures in operating systems other than Windows

For applications that don't use Windows, temperatures can be evaluated with the help of the B&R implementation guide. In addition to the implementation guide, there are also programs available in MS-DOS.

The implementation guide only describes device-specific functions and not the main functions of the example programs.

If code from the example programs is used, it is important to observe the notes in the implementation guide regarding TODO statements, I/O access functions, etc.

#### Information:

Example programs and implementation guides for all B&R Industrial PCs and Power Panels are available at no cost from the B&R website ([www.br-automation.com](http://www.br-automation.com)).

### 4.4 Evaluating the measurement results

The maximum temperature value recorded by each sensor must not exceed the temperature limits specified in the user's manuals.

If the temperature tests cannot be performed in a climate-controlled chamber, they can still be performed in an office environment. In this case, however, it is necessary to measure the ambient temperature. Experience at B&R has shown that values measured on passive systems (systems without a fan kit) can be projected linearly based on the ambient temperature. In order to be able to project the temperature values for systems with a fan kit, the fans must be running. It is also important to take values such as speed into consideration.

If the temperature tests are performed in a climate-controlled chamber with fans, the fans will cool the devices and skew the results. Measurement results for passive devices would therefore be unusable in this case. In order to obtain accurate results in climate-controlled chambers with fans, the fans must be turned off and the device must be allowed to run for a sufficient amount of time (several hours) before beginning the test.

#### Example using a 2-slot APC810

The following example is only valid if the instructions for installation and mounting orientation provided in the user's manual are observed.

Temperature sensor	Measured temperature	Projected temperature	
Ambient temperature	20°C	35°C	45°C
CPU	48°C	63°C	73°C
CPU board	51°C	66°C	76°C
Board I/O	51°C	66°C	76°C
Board ETH2	52°C	67°C	77°C
Board power supply	51°C	66°C	76°C
ETH2	65°C	80°C	90°C
Power supply	51°C	66°C	76°C

Table 113: Evaluation example using a 2-slot APC810

## 5 Connection examples

The following examples provide an overview of the configuration options for connecting Automation Panel 800 and Automation Panel 900 and/or Automation Panel 800 devices with the PPC800. The following questions will be answered:

- How are Automation Panel 900 devices connected to the monitor/panel output of the PPC800? What needs to be considered?
- How are Automation Panel 800 devices connected to the monitor/panel output of the PPC800? What needs to be considered?
- What are the "display clone" and "extended desktop" modes?
- How many Automation Panel 900 devices can be connected per line?
- How many Automation Panel 900 devices can be connected to an Automation Panel 800 device per line?
- How are the connected devices numbered internally?
- Are there limitations to the segment length? If so, what are they?
- What cables and link modules are needed?
- Do BIOS settings have to be changed for a specific configuration?

### 5.1 Selecting display units

In order to connect an Automation Panel 800 and an Automation Panel 900 on the same line, the devices must have the same display type. The following table lists the AP900 devices that can be connected on the same line with an AP800 device.

Automation Panel 800	Automation Panel 900
5AP820.1505-00	5AP920.1505-01 5AP951.1505-01 5AP980.1505-01 5AP981.1505-01
5AP880.1505-00	5AP920.1505-01 5AP951.1505-01 5AP980.1505-01 5AP981.1505-01

Table 114: Selecting display units



## 5.2 One Automation Panel 900 system via onboard DVI

An Automation Panel 900 with max. SXGA resolution is connected to the integrated DVI interface (onboard). As an alternative, an office TFT with a DVI interface or analog monitor (using adapter 5AC900.1000-00) can also be used. A separate cable is used for both the touch screen and USB data. If USB devices are to be operated on the Automation Panel 900, the maximum distance is 5 meters. USB devices can only be connected directly to the Automation Panel (i.e. without a hub).

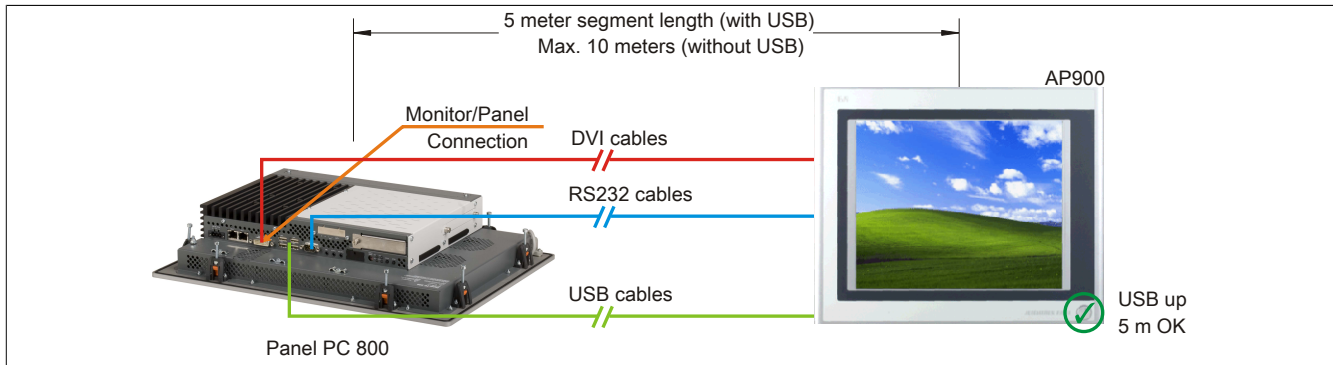


Figure 69: One Automation Panel 900 via DVI

### 5.2.1 Base system requirements

The following table lists the possible PPC800 system unit and CPU board combinations necessary to implement the configuration shown in the figure above. If a combination results in a limitation of the maximum resolution, this is also indicated (e.g. when connecting a non-B&R Automation Panel 900 device).

CPU board	With system unit		Limitation Resolution
	5PC820.1505-00	5PC820.1906-00	
5PC800.BM45-00	✓	✓	Max. SXGA
5PC800.BM45-01	✓	✓	Max. SXGA

Table 115: Possible system unit and CPU board combinations

### 5.2.2 Link modules

#### Information:

A corresponding Link module must be selected for each device used.

Model number	Description	Note
5DL DVI.1000-01	<b>Automation Panel Link DVI receiver</b> Connections for DVI-D, RS232 and USB 2.0 (Type B); 24 VDC (order screw clamp 0TB103.9 or cage clamp 0TB103.91 separately)	For Automation Panel 900

Table 116: Link modules

### 5.2.3 Cables

Select one Automation Panel 900 cable each from the 3 required types.

Model number	Description	Length
5CADVI.0018-00	DVI-D cable, 1.8 m	1.8 m ±50 mm
5CADVI.0050-00	DVI-D cable, 5 m	5 m ±80 mm
5CADVI.0100-00	DVI-D cable, 10 m	10 m ±100 mm
9A0014.02	RS232 extension cable for remote operation of a display unit with touch screen, 1.8 m	1.8 m ±50 mm
9A0014.05	RS232 extension cable for remote operation of a display unit with touch screen, 5 m	5 m ±80 mm
9A0014.10	RS232 extension cable for remote operation of a display unit with touch screen, 10 m	10 m ±100 mm
5CAUSB.0018-00	USB 2.0 connection cable Type A - Type B, 1.8 m	1.8 m ±30 mm
5CAUSB.0050-00	USB 2.0 connection cable Type A - Type B, 5 m	5 m ±50 mm

Table 117: Cables for DVI configurations

#### Information:

Detailed technical data about cables can be found in the Automation Panel 900 user's manual. This can be downloaded as a PDF file from the B&R website at [www.br-automation.com](http://www.br-automation.com).

### 5.2.4 Possible Automation Panel devices, resolutions and segment lengths

The following Automation Panel 900 devices can be used. In rare cases, segment length is limited by the resolution.

Model number	Diagonal	Resolution	Touch screen	Keys	Max. segment length
5AP920.1043-01	10.4"	VGA	✓	-	5 m / 10 m <sup>1)</sup>
5AP920.1214-01	12.1"	SVGA	✓	-	5 m / 10 m <sup>1)</sup>
5AP920.1505-01	15.0"	XGA	✓	-	5 m / 10 m <sup>1)</sup>
5AP920.1706-01	17.0"	SXGA	✓	-	5 m / 10 m <sup>1)</sup>
5AP920.1906-01	19.0"	SXGA	✓	-	5 m / 10 m <sup>1)</sup>

Table 118: Possible Automation Panel devices, resolutions and segment lengths

- 1) USB support is not possible on the Automation Panel 900 in these cases since USB is limited to 5 m.

#### Information:

**When transferring data via DVI, it is not possible to read statistical values from Automation Panel 900 devices.**

### 5.3 One Automation Panel 900 system via onboard SDL

An Automation Panel 900 is connected to the integrated SDL interface (onboard) via an SDL cable. USB devices can only be connected directly to the Automation Panel (i.e. without a hub).

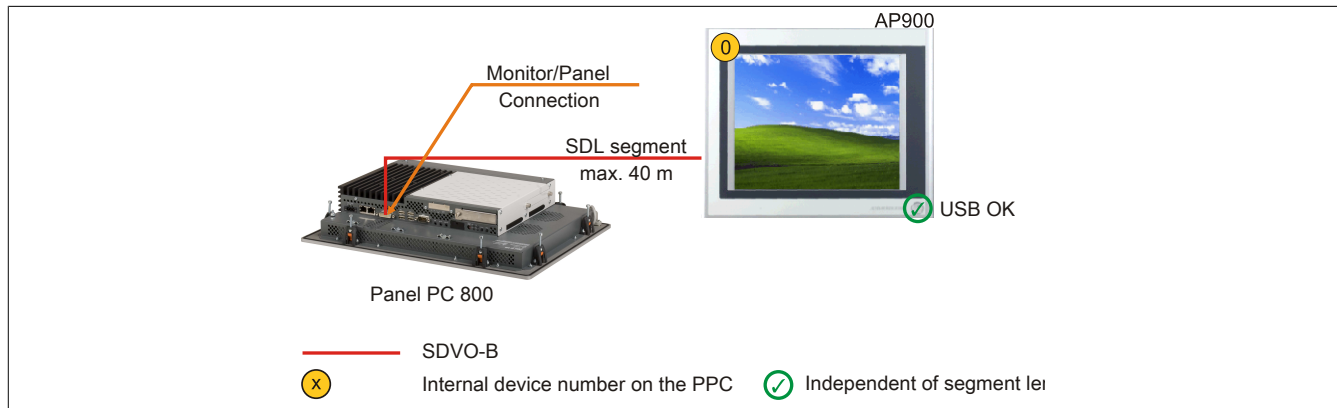


Figure 70: One Automation Panel 900 system via onboard SDL

#### 5.3.1 Base system requirements

The following table lists the possible PPC800 system unit and CPU board combinations necessary to implement the configuration shown in the figure above. If a combination results in a limitation of the maximum resolution, this is also indicated (e.g. when connecting a non-B&R Automation Panel 800 / 900 device).

CPU board	With system unit		Limitation Resolution
	5PC820.1505-00	5PC820.1906-00	
5PC800.BM45-00	✓	✓	Max. UXGA
5PC800.BM45-01	✓	✓	Max. UXGA

Table 119: Possible system unit and CPU board combinations

#### 5.3.2 Link modules

##### Information:

A corresponding Link module must be selected for each device used.

Model number	Description	Note
5DLSL.1000-00	<b>Automation Panel Link SDL receiver</b> Connection for SDL In; transmission of display, touch screen, USB 1.1, matrix key and service data; 24 VDC (order screw clamp 0TB103.9 or cage clamp 0TB103.91 separately)	For Automation Panel 900

Table 120: Link modules

#### 5.3.3 Cables

Select an Automation Panel 900 cable from the following table.

Model number	Description	Length
5CASDL.0018-00	SDL cable, 1.8 m	1.8 m ±30 mm
5CASDL.0050-00	SDL cable, 5 m	5 m ±30 mm
5CASDL.0100-00	SDL cable, 10 m	10 m ±50 mm
5CASDL.0150-00	SDL cable, 15 m	15 m ±100 mm
5CASDL.0200-00	SDL cable, 20 m	20 m ±100 mm
5CASDL.0250-00	SDL cable, 25 m	25 m ±100 mm
5CASDL.0300-00	SDL cable, 30 m	30 m ±100 mm
5CASDL.0018-03	SDL flex cable, 1.8 m	1.8 m ±20 mm
5CASDL.0050-03	SDL flex cable, 5 m	5 m ±45 mm
5CASDL.0100-03	SDL flex cable, 10 m	10 m ±90 mm
5CASDL.0150-03	SDL flex cable, 15 m	15 m ±135 mm
5CASDL.0200-03	SDL flex cable, 20 m	20 m ±180 mm
5CASDL.0250-03	SDL flex cable, 25 m	25 m ±225 mm
5CASDL.0300-03	SDL flex cable, 30 m	30 m ±270 mm
5CASDL.0300-13	SDL flex cable with extender, 30 m	30 m ±280 mm
5CASDL.0400-13	SDL flex cable with extender, 40 m	40 m ±380 mm
5CASDL.0430-13	SDL flex cable with extender, 43 m	43 m ±410 mm

Table 121: Cables for SDL configurations

Model number	Description	Length
5CASDL.0018-01	SDL cable with 45° male connector, 1.8 m	1.8 m ±30 mm
5CASDL.0050-01	SDL cable with 45° male connector, 5 m	5 m ±50 mm
5CASDL.0100-01	SDL cable with 45° male connector, 10 m	10 m ±100 mm
5CASDL.0150-01	SDL cable with 45° male connector, 15 m	15 m ±100 mm

Table 121: Cables for SDL configurations

## Information:

Detailed technical data about cables can be found in the Automation Panel 900 user's manual. This can be downloaded as a PDF file from the B&R website at [www.br-automation.com](http://www.br-automation.com).

### 5.3.3.1 Cable lengths and resolutions for SDL transmission

The following table lists the relationship between segment lengths and maximum resolution depending on the SDL cable being used:

Cables Segment length [m]	Resolution				
	VGA 640 x 480	SVGA 800 x 600	XGA 1024 x 768	SXGA 1280 x 1024	UXGA 1600 x 1200
1.8	5CASDL.0018-00	5CASDL.0018-00	5CASDL.0018-00	5CASDL.0018-00	5CASDL.0018-00
	5CASDL.0018-01	5CASDL.0018-01	5CASDL.0018-01	5CASDL.0018-01	5CASDL.0018-01
	5CASDL.0018-03	5CASDL.0018-03	5CASDL.0018-03	5CASDL.0018-03	5CASDL.0018-03
5	5CASDL.0050-00	5CASDL.0050-00	5CASDL.0050-00	5CASDL.0050-00	5CASDL.0050-00
	5CASDL.0050-01	5CASDL.0050-01	5CASDL.0050-01	5CASDL.0050-01	5CASDL.0050-01
	5CASDL.0050-03	5CASDL.0050-03	5CASDL.0050-03	5CASDL.0050-03	5CASDL.0050-03
10	5CASDL.0100-00	5CASDL.0100-00	5CASDL.0100-00	5CASDL.0100-00	5CASDL.0100-00
	5CASDL.0100-01	5CASDL.0100-01	5CASDL.0100-01	5CASDL.0100-01	5CASDL.0100-01
	5CASDL.0100-03	5CASDL.0100-03	5CASDL.0100-03	5CASDL.0100-03	5CASDL.0100-03
15	5CASDL.0150-00	5CASDL.0150-00	5CASDL.0150-00	5CASDL.0150-00	-
	5CASDL.0150-01	5CASDL.0150-01	5CASDL.0150-01	5CASDL.0150-01	-
	5CASDL.0150-03	5CASDL.0150-03	5CASDL.0150-03	5CASDL.0150-03	-
20	5CASDL.0200-00	5CASDL.0200-00	5CASDL.0200-00	5CASDL.0200-00	-
	5CASDL.0200-03	5CASDL.0200-03	5CASDL.0200-03	5CASDL.0200-03	-
25	5CASDL.0250-00	5CASDL.0250-00	5CASDL.0250-00	-	-
	5CASDL.0250-03	5CASDL.0250-03	5CASDL.0250-03	-	-
30	5CASDL.0300-00	5CASDL.0300-00	-	-	-
	5CASDL.0300-03	5CASDL.0300-03	5CASDL.0300-13	5CASDL.0300-13	-
40	5CASDL.0400-13	5CASDL.0400-13	5CASDL.0400-13	5CASDL.0400-13	-

Table 122: Cable lengths and resolutions for SDL transmission

### 5.3.4 Settings in BIOS

No special BIOS settings are necessary for operation.

For detailed information, see the user's manual for the B&R Industrial PC being used.

### Touch screen functionality

COM C must be enabled in BIOS in order to operate the panel touch screen connected to the monitor/panel interface ("Advanced - Baseboard/Panel features - Legacy devices").

## 5.4 One Automation Panel 800 system via onboard SDL

An Automation Panel 800 is connected to the integrated SDL interface (onboard) via an SDL cable. USB devices can only be connected directly to the extension keyboard (without a hub).

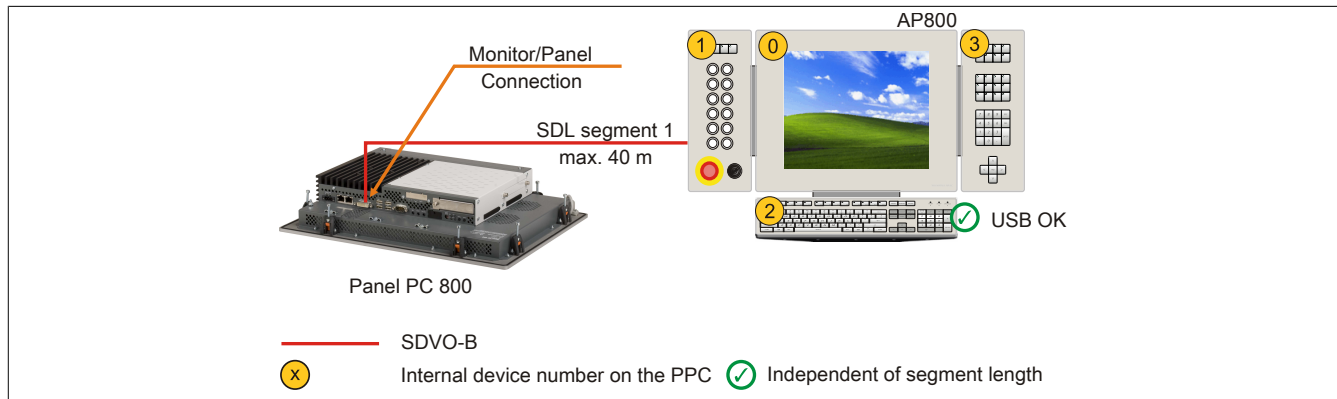


Figure 71: One Automation Panel 800 system via onboard SDL

### 5.4.1 Base system requirements

The following table lists the possible PPC800 system unit and CPU board combinations necessary to implement the configuration shown in the figure above. If a combination results in a limitation of the maximum resolution, this is also indicated (e.g. when connecting a non-B&R Automation Panel 800 / 900 device).

CPU board	With system unit		Limitation Resolution
	5PC820.1505-00	5PC820.1906-00	
5PC800.BM45-00	✓	✓	Max. UXGA
5PC800.BM45-01	✓	✓	Max. UXGA

Table 123: Possible system unit and CPU board combinations

### 5.4.2 Cables

Select an Automation Panel 800 SDL cable from the following table.

Model number	Description	Length
5CASDL.0018-20	SDL flex cable for the Automation Panel 800, 1.8 m	1.8 m ±20 mm
5CASDL.0050-20	SDL flex cable for the Automation Panel 800, 5 m	5 m ±45 mm
5CASDL.0100-20	SDL flex cable for the Automation Panel 800, 10 m	10 m ±90 mm
5CASDL.0150-20	SDL flex cable for the Automation Panel 800, 15 m	15 m ±135 mm
5CASDL.0200-20	SDL flex cable for the Automation Panel 800, 20 m	20 m ±180 mm
5CASDL.0250-20	SDL flex cable for the Automation Panel 800, 25 m	25 m ±230 mm
5CASDL.0300-30	SDL flex cable with extender for the Automation Panel 800, 30 m	30 m ±280 mm
5CASDL.0400-30	SDL flex cable with extender for the Automation Panel 800, 40 m	40 m ±380 mm

Table 124: Cables for SDL configurations

#### Information:

Detailed technical data about cables can be found in the Automation Panel 800 user's manual. This can be downloaded as a PDF file from the B&R website at [www.br-automation.com](http://www.br-automation.com).

#### 5.4.2.1 Cable lengths and resolutions for SDL transmission

The following table lists the relationship between segment lengths and maximum resolution depending on the SDL cable being used:

Cables Segment length [m]	Resolution
	XGA 1024 x 768
1.8	5CASDL.0018-20
5	5CASDL.0050-20
10	5CASDL.0100-20
15	5CASDL.0150-20

Table 125: Cable lengths and resolutions for SDL transmission

Cables Segment length [m]	Resolution
	XGA 1024 x 768
20	5CASDL.0200-20
25	5CASDL.0250-20
30	5CASDL.0300-30
40	5CASDL.0400-30

Table 125: Cable lengths and resolutions for SDL transmission

### 5.4.3 Settings in BIOS

No special BIOS settings are necessary for operation.

For detailed information, see the user's manual for the B&R Industrial PC being used.

### Touch screen functionality

COM C must be enabled in BIOS in order to operate the panel touch screen connected to the monitor/panel interface ("Advanced - Baseboard/Panel features - Legacy devices").

## 5.5 One AP900 and one AP800 via onboard SDL

An Automation Panel 900 and an Automation Panel 800 are connected to the integrated SDL interface (onboard) via SDL.

USB is supported up to a maximum distance (segment 1 + segment 2) of 30 m on the two displays. Past a distance of 30 m, USB is only available on the first display (front and back) up to 40 m. USB devices can only be connected directly to the Automation Panel 900 or extension keyboard (without a hub).

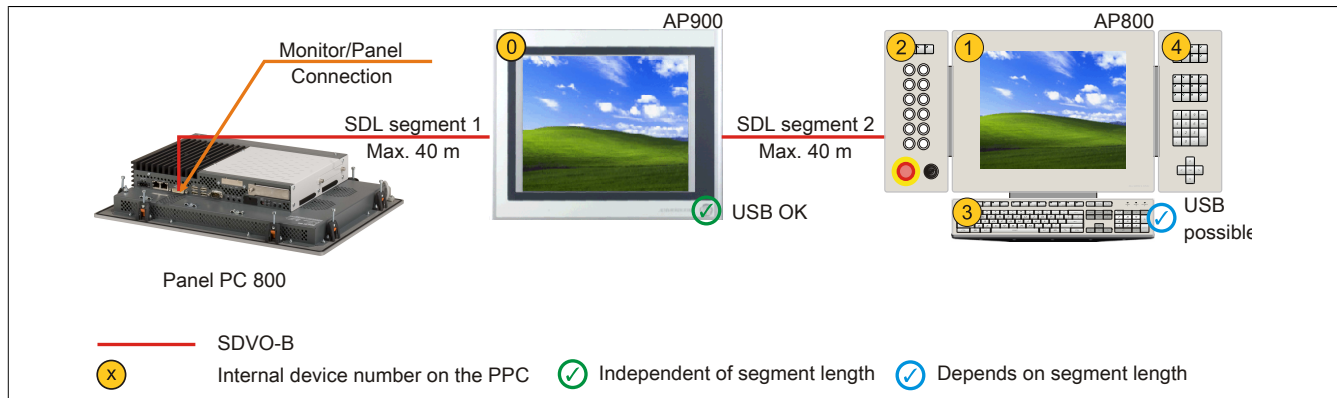


Figure 72: One AP900 and one AP800 via onboard SDL

### 5.5.1 Base system requirements

The following table lists the possible PPC800 system unit and CPU board combinations necessary to implement the configuration shown in the figure above. If a combination results in a limitation of the maximum resolution, this is also indicated (e.g. when connecting a non-B&R Automation Panel 800 / 900 device).

CPU board	With system unit		Limitation Resolution
	5PC820.1505-00	5PC820.1906-00	
5PC800.BM45-00	✓	✓	Max. UXGA
5PC800.BM45-01	✓	✓	Max. UXGA

Table 126: Possible system unit and CPU board combinations

### 5.5.2 Link modules

#### Information:

A corresponding Link module must be selected for each device used.

Model number	Description	Note
5DLSL.1000-01	<b>Automation Panel Link SDL transceiver</b> Connections for SDL In and SDL Out; transmission of display, touch screen, USB 1.1, matrix key and service data; 24 VDC (order screw clamp 0TB103.9 or cage clamp 0TB103.91 separately)	For Automation Panel 900

Table 127: Link modules

### 5.5.3 Cables

For a selection of SDL cables for connecting the AP900 display to an AP900 display, see "Cables" on page 151.

For a selection of SDL cables for connecting the AP800 display to an AP900 display, see "Cables" on page 153.

#### Information:

For detailed information regarding cables, see the chapter "Accessories".

### 5.5.4 Settings in BIOS

No special BIOS settings are necessary for operation.

For detailed information, see the user's manual for the B&R Industrial PC being used.

#### Touch screen functionality

COM C must be enabled in BIOS in order to operate the panel touch screen connected to the monitor/panel interface ("Advanced - Baseboard/Panel features - Legacy devices").

## 5.6 Four Automation Panel 900 systems via onboard SDL

An Automation Panel 900 is connected to the integrated SDL interface (onboard) via an SDL cable. Up to three other Automation Panels of the same type are connected to this Automation Panel and operated via SDL. All four of the panels show the same content (display clone).

USB is supported up to a maximum distance (SDL segment 1 + SDL segment 2) of 30 m on the first two panels (front and back). Past a distance of 30 m, USB is only available for the first panel (front and back). USB devices can only be connected directly to the Automation Panel (i.e. without a hub).

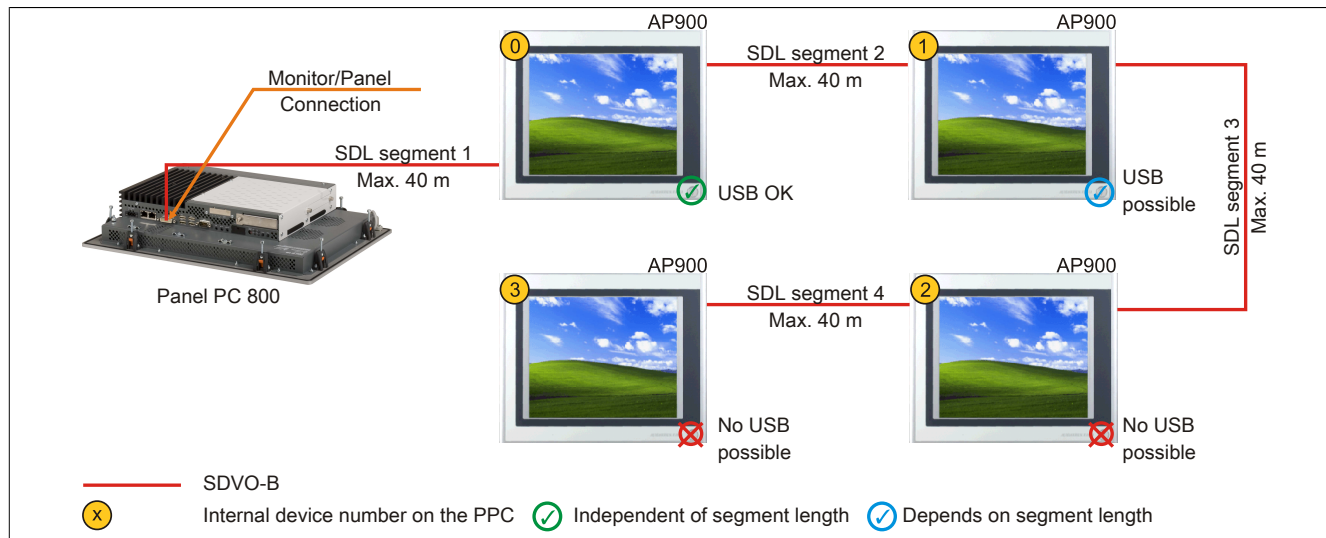


Figure 73: Four Automation Panel 900 systems via onboard SDL

### 5.6.1 Base system requirements

The following table lists the possible PPC800 system unit and CPU board combinations necessary to implement the configuration shown in the figure above. If a combination results in a limitation of the maximum resolution, this is also indicated (e.g. when connecting a non-B&R Automation Panel 800 / 900 device).

CPU board	With system unit		Limitation Resolution
	5PC820.1505-00	5PC820.1906-00	
5PC800.BM45-00	✓	✓	Max. UXGA
5PC800.BM45-01	✓	✓	Max. UXGA

Table 128: Possible system unit and CPU board combinations

### 5.6.2 Link modules

#### Information:

A corresponding Link module must be selected for each device used.

Model number	Description	Note
5DLSDL.1000-00	<b>Automation Panel Link SDL receiver</b> Connection for SDL In; transmission of display, touch screen, USB 1.1, matrix key and service data; 24 VDC (order screw clamp 0TB103.9 or cage clamp 0TB103.91 separately)	For Automation Panel 900
5DLSDL.1000-01	<b>Automation Panel Link SDL transceiver</b> Connections for SDL In and SDL Out; transmission of display, touch screen, USB 1.1, matrix key and service data; 24 VDC (order screw clamp 0TB103.9 or cage clamp 0TB103.91 separately)	For Automation Panel 900

Table 129: Link modules

### 5.6.3 Cables

Select an Automation Panel 900 cable from the following table.

Model number	Description	Length
5CASDL.0018-00	SDL cable, 1.8 m	1.8 m ±30 mm
5CASDL.0050-00	SDL cable, 5 m	5 m ±30 mm
5CASDL.0100-00	SDL cable, 10 m	10 m ±50 mm
5CASDL.0150-00	SDL cable, 15 m	15 m ±100 mm
5CASDL.0200-00	SDL cable, 20 m	20 m ±100 mm

Table 130: Cables for SDL configurations



Model number	Description	Length
5CASDL.0250-00	SDL cable, 25 m	25 m ±100 mm
5CASDL.0300-00	SDL cable, 30 m	30 m ±100 mm
5CASDL.0018-03	SDL flex cable, 1.8 m	1.8 m ±20 mm
5CASDL.0050-03	SDL flex cable, 5 m	5 m ±45 mm
5CASDL.0100-03	SDL flex cable, 10 m	10 m ±90 mm
5CASDL.0150-03	SDL flex cable, 15 m	15 m ±135 mm
5CASDL.0200-03	SDL flex cable, 20 m	20 m ±180 mm
5CASDL.0250-03	SDL flex cable, 25 m	25 m ±225 mm
5CASDL.0300-03	SDL flex cable, 30 m	30 m ±270 mm
5CASDL.0300-13	SDL flex cable with extender, 30 m	30 m ±280 mm
5CASDL.0400-13	SDL flex cable with extender, 40 m	40 m ±380 mm
5CASDL.0430-13	SDL flex cable with extender, 43 m	43 m ±410 mm
5CASDL.0018-01	SDL cable with 45° male connector, 1.8 m	1.8 m ±30 mm
5CASDL.0050-01	SDL cable with 45° male connector, 5 m	5 m ±50 mm
5CASDL.0100-01	SDL cable with 45° male connector, 10 m	10 m ±100 mm
5CASDL.0150-01	SDL cable with 45° male connector, 15 m	15 m ±100 mm

Table 130: Cables for SDL configurations

## Information:

Detailed technical data about cables can be found in the Automation Panel 900 user's manual. This can be downloaded as a PDF file from the B&R website at [www.br-automation.com](http://www.br-automation.com).

### 5.6.3.1 Cable lengths and resolutions for SDL transmission

The following table lists the relationship between segment lengths and maximum resolution depending on the SDL cable being used:

Cables Segment length [m]	Resolution				
	VGA 640 x 480	SVGA 800 x 600	XGA 1024 x 768	SXGA 1280 x 1024	UXGA 1600 x 1200
1.8	5CASDL.0018-00 5CASDL.0018-01 5CASDL.0018-03	5CASDL.0018-00 5CASDL.0018-01 5CASDL.0018-03	5CASDL.0018-00 5CASDL.0018-01 5CASDL.0018-03	5CASDL.0018-00 5CASDL.0018-01 5CASDL.0018-03	5CASDL.0018-00 5CASDL.0018-01 5CASDL.0018-03
5	5CASDL.0050-00 5CASDL.0050-01 5CASDL.0050-03	5CASDL.0050-00 5CASDL.0050-01 5CASDL.0050-03	5CASDL.0050-00 5CASDL.0050-01 5CASDL.0050-03	5CASDL.0050-00 5CASDL.0050-01 5CASDL.0050-03	5CASDL.0050-00 5CASDL.0050-01 5CASDL.0050-03
10	5CASDL.0100-00 5CASDL.0100-01 5CASDL.0100-03	5CASDL.0100-00 5CASDL.0100-01 5CASDL.0100-03	5CASDL.0100-00 5CASDL.0100-01 5CASDL.0100-03	5CASDL.0100-00 5CASDL.0100-01 5CASDL.0100-03	5CASDL.0100-00 5CASDL.0100-01 5CASDL.0100-03
15	5CASDL.0150-00 5CASDL.0150-01 5CASDL.0150-03	5CASDL.0150-00 5CASDL.0150-01 5CASDL.0150-03	5CASDL.0150-00 5CASDL.0150-01 5CASDL.0150-03	5CASDL.0150-00 5CASDL.0150-01 5CASDL.0150-03	- - -
20	5CASDL.0200-00 5CASDL.0200-03	5CASDL.0200-00 5CASDL.0200-03	5CASDL.0200-00 5CASDL.0200-03	5CASDL.0200-00 5CASDL.0200-03	- -
25	5CASDL.0250-00 5CASDL.0250-03	5CASDL.0250-00 5CASDL.0250-03	5CASDL.0250-00 5CASDL.0250-03	- -	- -
30	5CASDL.0300-00 5CASDL.0300-03	5CASDL.0300-00 5CASDL.0300-03	- 5CASDL.0300-13	- 5CASDL.0300-13	- -
40	5CASDL.0400-13	5CASDL.0400-13	5CASDL.0400-13	5CASDL.0400-13	-

Table 131: Cable lengths and resolutions for SDL transmission

### 5.6.4 Settings in BIOS

No special BIOS settings are necessary for operation.

For detailed information, see the user's manual for the B&R Industrial PC being used.

### Touch screen functionality

COM C must be enabled in BIOS in order to operate the panel touch screen connected to the monitor/panel interface ("Advanced - Baseboard/Panel features - Legacy devices").

## 6 Touch screen calibration

B&R touch screen devices are equipped with a touch controller that supports hardware calibration. As a result, devices are pre-calibrated when delivered. This is an advantageous feature when replacing devices of the same model or type since it avoids having to recalibrate the new device. Nevertheless, calibrating the device is still recommended in order to achieve the best results and to better adapt the touch screen to the user's preferences.

Regardless of this, the touch screen will have to be calibrated once during or following the installation of the touch screen driver.

### 6.1 Windows XP Professional

After installing Windows XP Professional on the device, the touch screen driver must be installed in order to operate the touch screen. The necessary driver is available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

### 6.2 Windows XP Embedded

After starting Windows XP Embedded on the device for the first time (first boot agent), the touch screen driver must be installed in order to operate the touch screen. The necessary driver is available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

### 6.3 Windows Embedded Standard 2009

After starting Windows Embedded Standard 2009 on the device for the first time (first boot agent), the touch screen driver must be installed in order to operate the touch screen. The necessary driver is available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

### 6.4 Windows 7

After installing Windows 7 on the device, the touch screen driver must be installed in order to operate the touch screen. The necessary driver is available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

### 6.5 Windows Embedded Standard 7

A touch screen driver will be installed automatically if a touch controller is detected during the Windows Embedded Standard 7 installation.

If a touch controller is not detected during Windows Embedded Standard 7 installation, or if an Automation Panel 800 / 900 is connected at a later time, then the touch screen driver will need to be installed manually. The necessary driver is available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

### 6.6 Windows CE

Windows CE starts the touch screen calibration sequence during its first boot in its default configuration (i.e. delivered state).

### 6.7 Automation Runtime / Visual Components

The touch screen must be calibrated once for the customer application when commissioning the device and project.

## 7 Connecting peripheral USB devices

### Warning!

Peripheral USB devices can be connected to the USB ports on this device. Due to the vast number of USB devices available on the market, B&R cannot guarantee their performance. B&R does ensure the performance of all USB devices that they provide.

### 7.1 Locally on the PPC800

Many different peripheral USB devices can be connected to the 5 USB ports on the Panel PC 800. These can each handle a load of up to 1 A. The maximum transfer rate is USB 2.0.

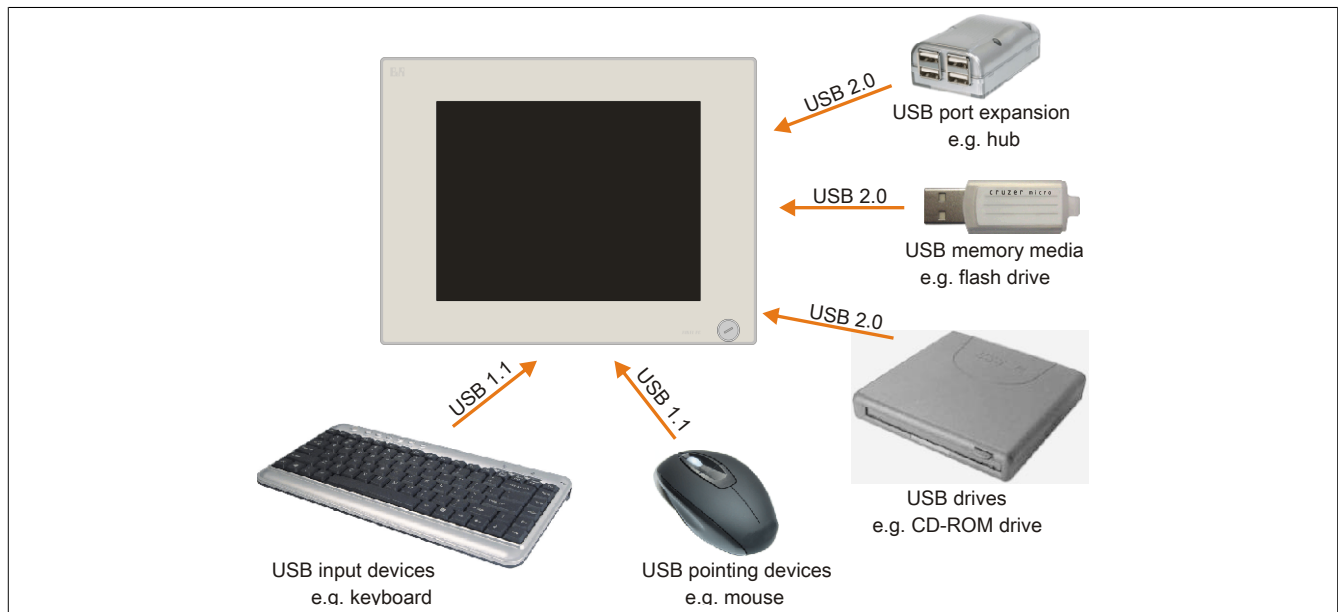


Figure 74: Local connection of USB peripheral devices on the PPC800

## 7.2 Remote connection to Automation Panel 900 via DVI

Many different peripheral USB devices can be connected to the 2 or 3 USB ports on the Automation Panel 900. These can each handle a load of 500 mA. The maximum transfer rate is USB 2.0.

### Information:

Only end devices (not hubs) can be connected to the Automation Panel 900.

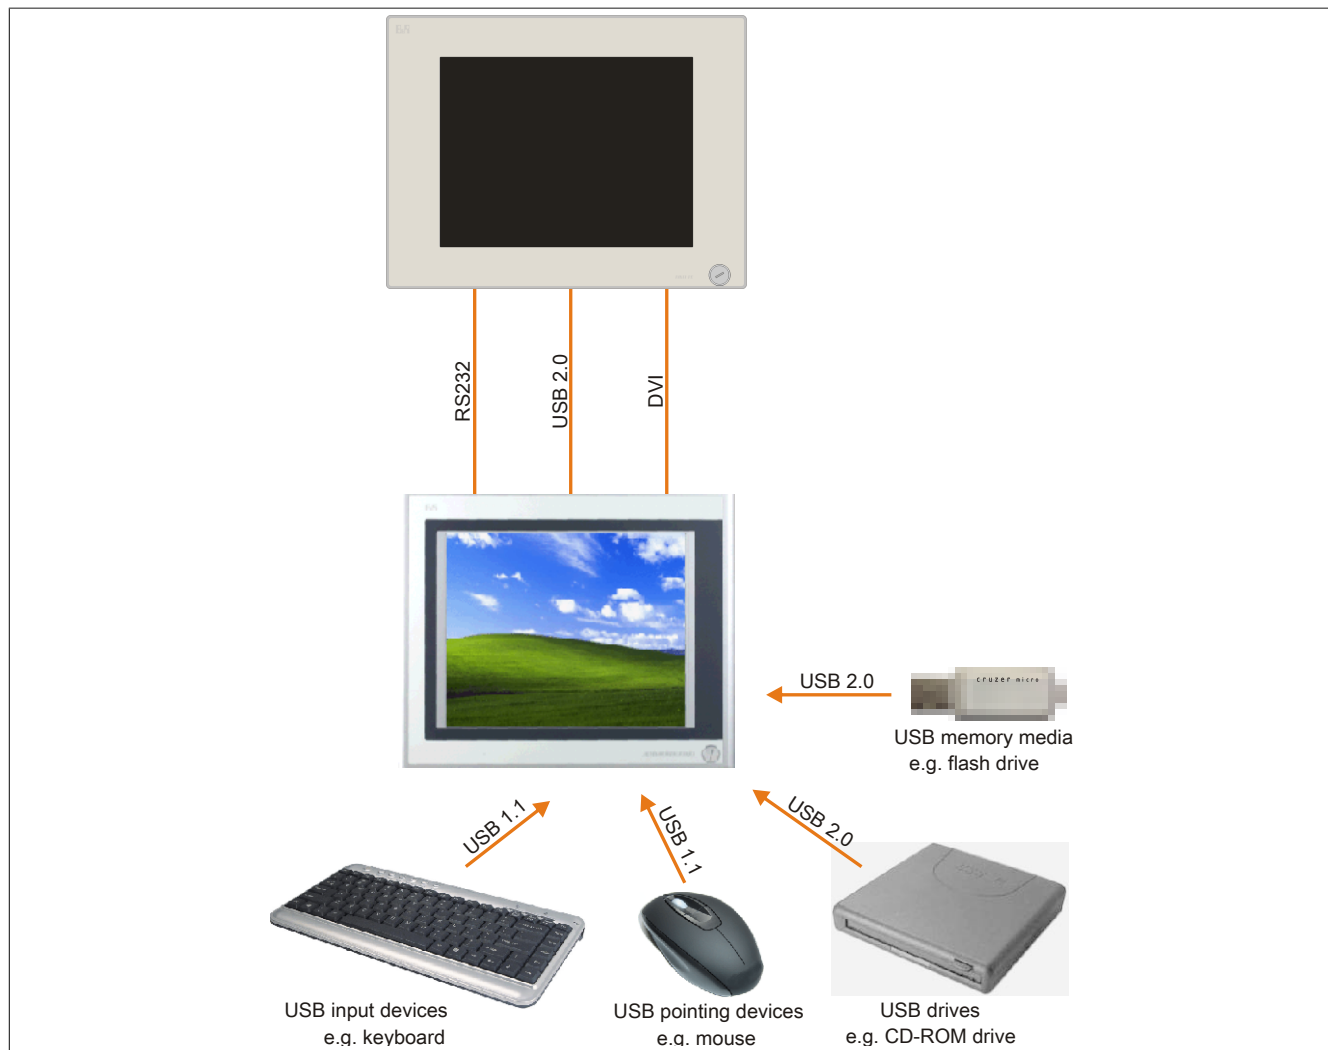


Figure 75: Remote connection of USB peripheral devices on the APC900 via DVI

### 7.3 Remote connection to Automation Panel 800 / 900 via SDL

Many different peripheral USB devices can be connected to the 2 or 3 USB ports on Automation Panel 900 or the USB interfaces on Automation Panel 800 devices. These can each handle a load of 500 mA. The maximum transfer rate is USB 1.1.

#### Information:

Only end devices (no hubs) can be connected to the Automation Panel 800 / 900.

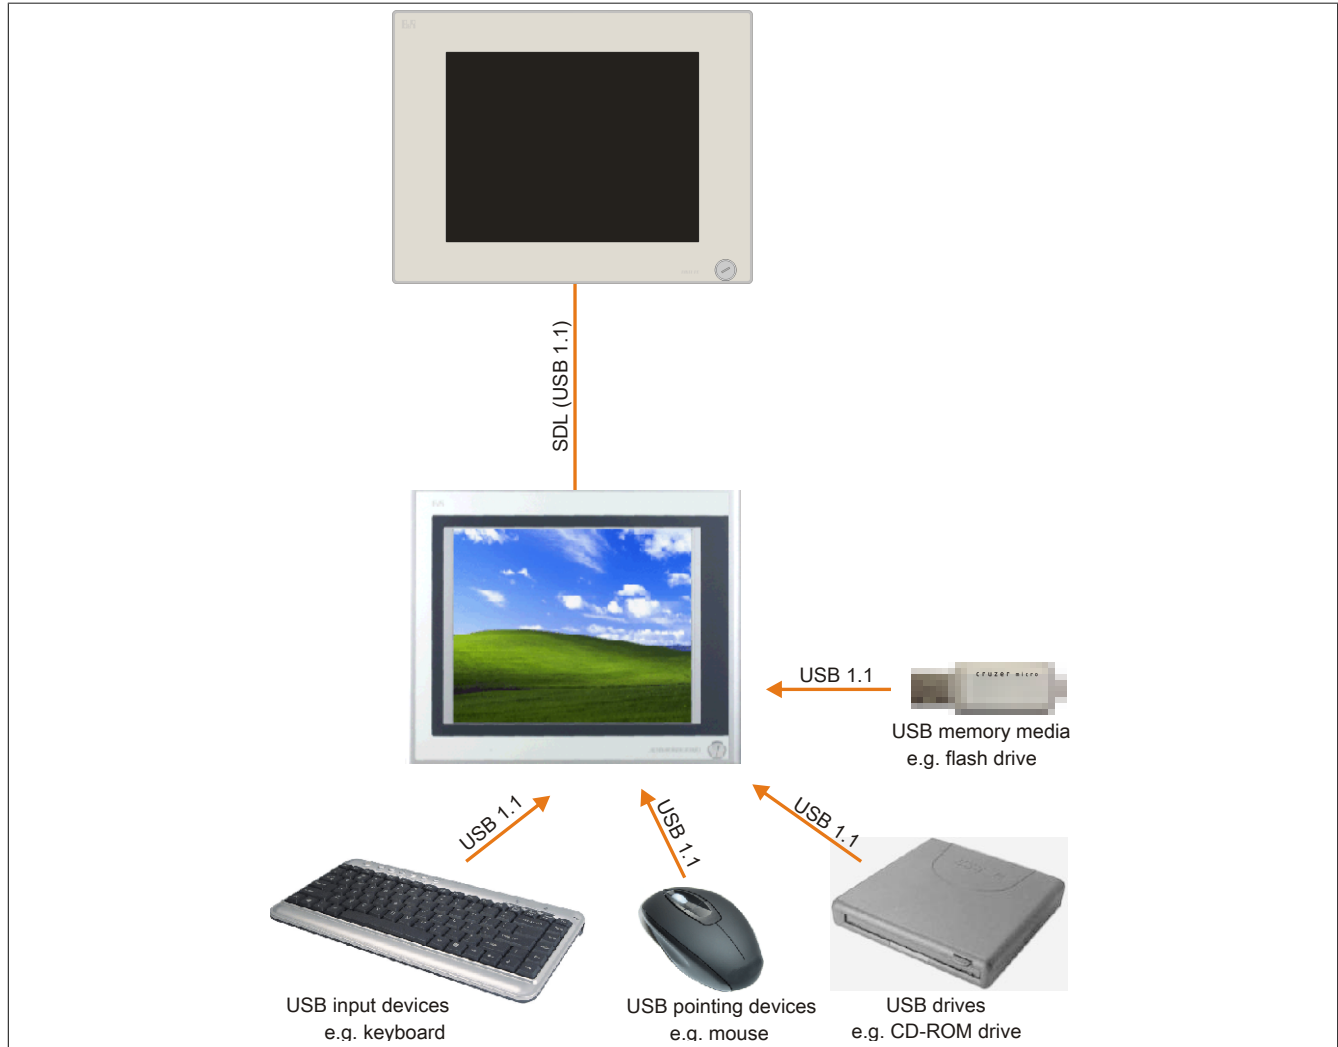


Figure 76: Remote connection of USB peripheral devices on the APC800/900 via SDL

## 8 Configuring a SATA RAID set

### Information:

The following software description is valid for PCI SATA controllers 5ACPCI.RAIC-01, 5ACPCI.RAIC-03, 5ACPCI.RAIC-05 and 5ACPCI.RAIC-06.

The "RAID Configuration Utility" in BIOS must be started in order to make the necessary settings. After POST, pressing <Ctrl+S> or <F4> opens the RAID BIOS.

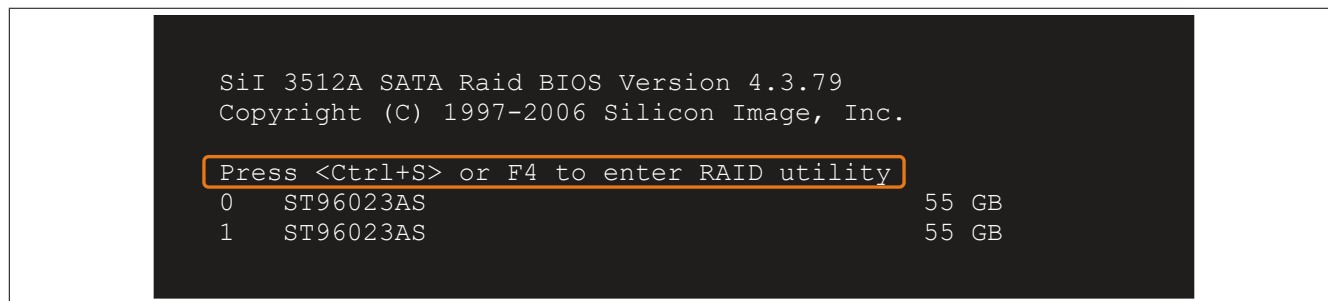


Figure 77: Open the RAID Configuration Utility

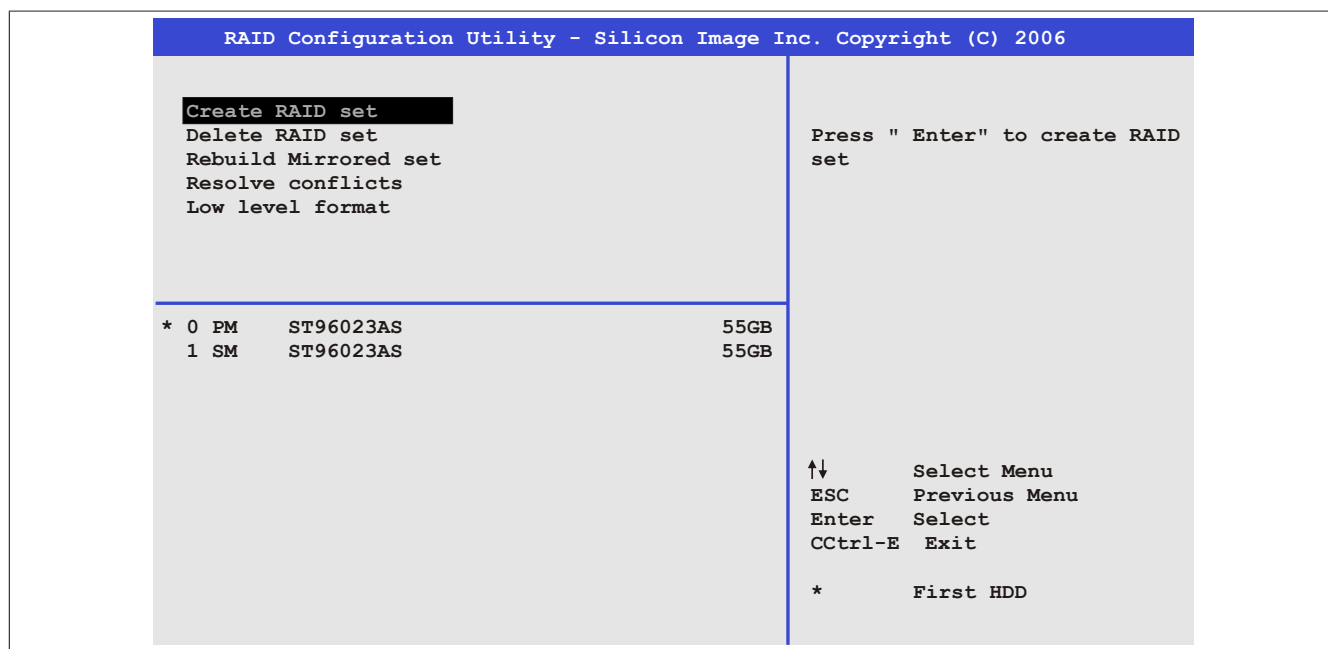


Figure 78: RAID Configuration Utility - Menu

The following keys can be used once inside BIOS Setup:

Key	Function
Cursor ↑	Moves to the previous item
Cursor ↓	Moves to the next item
Enter	Selects an item or opens a submenu
ESC	Returns to the previous menu
Ctrl+E	Saves any changed settings and exits setup

Table 132: BIOS-relevant keys in the RAID Configuration Utility

## 8.1 Create RAID set

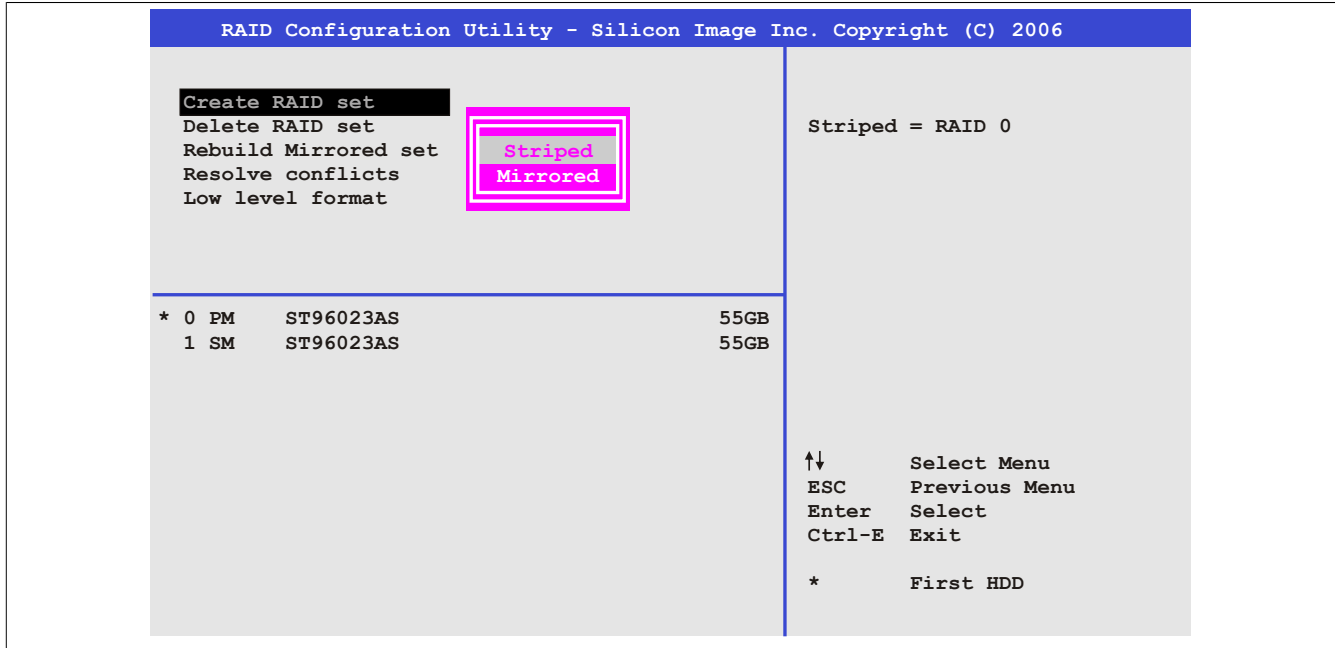


Figure 79: RAID Configuration Utility - Menu

The RAID system can be set up as "Striped" = RAID0 or "Mirrored" = RAID1 using the "Create RAID set" menu option.

## 8.2 Create RAID set - Striped

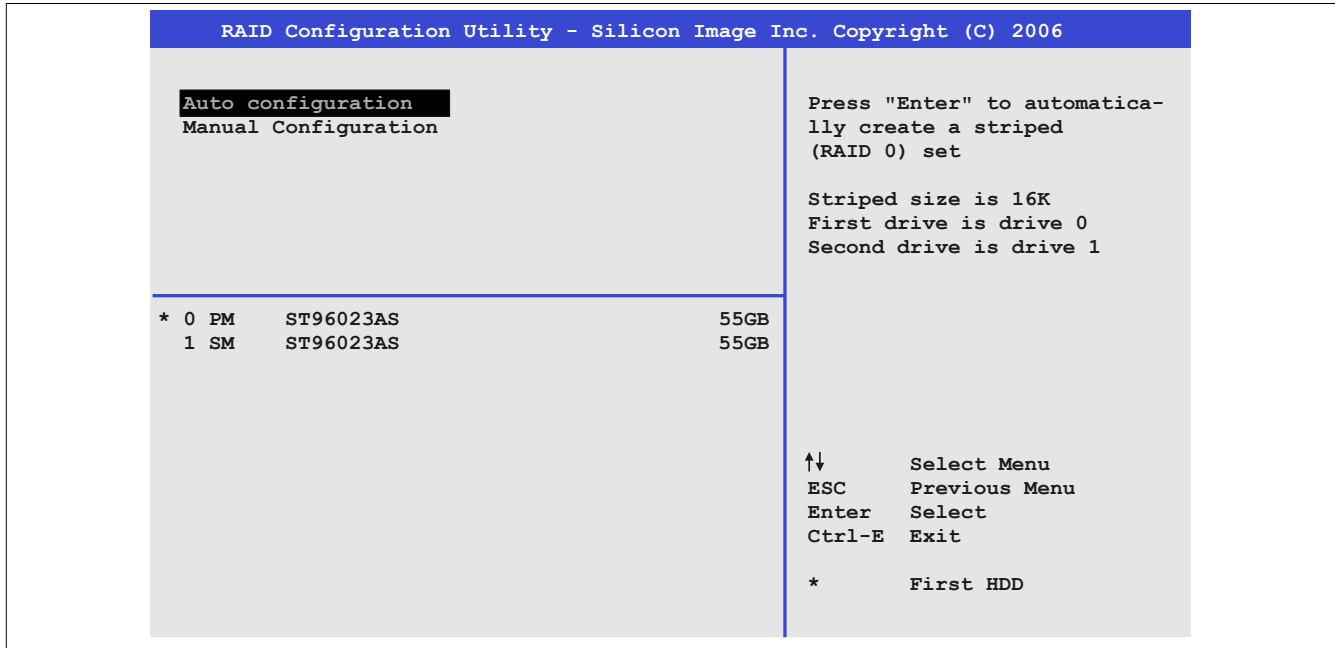


Figure 80: RAID Configuration Utility - Create RAID set - Striped

### "Auto configuration"

Auto configuration optimizes all settings.

### "Manual configuration"

Allows the first and second HDD to be specified as well as the "Chunk size" (= block size, application-dependent).

8.3 Create RAID set - Mirrored

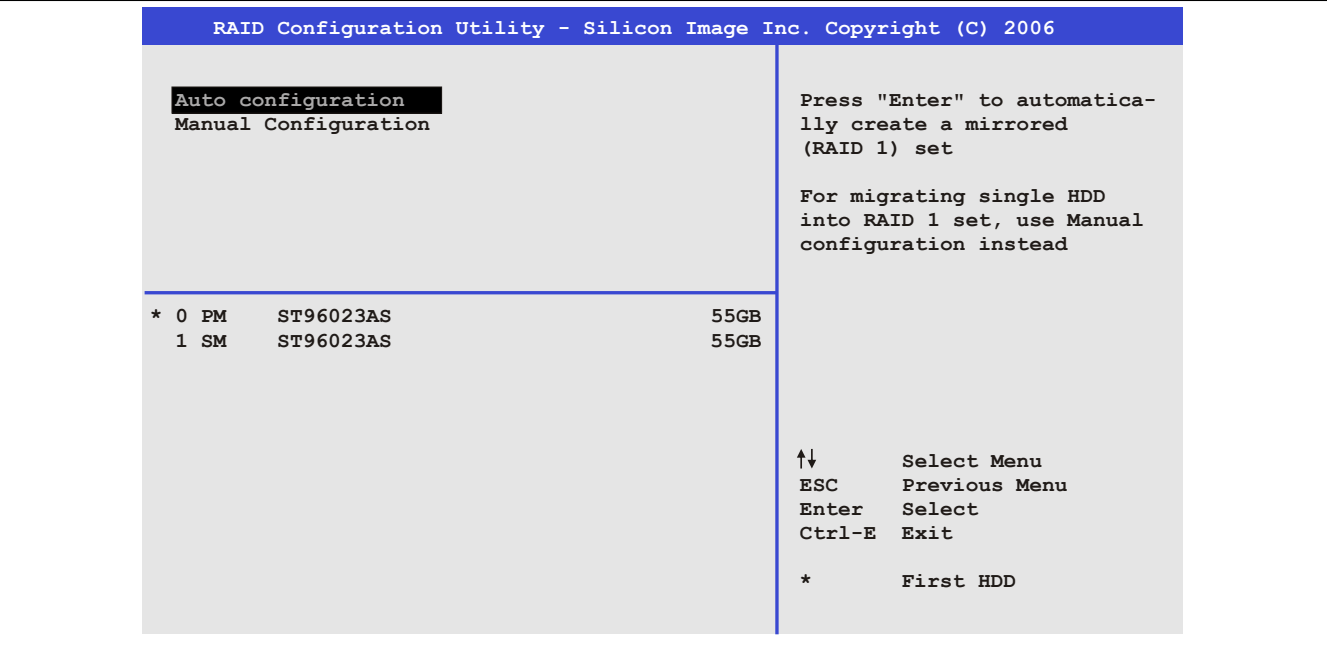


Figure 81: RAID Configuration Utility - Create RAID set - Mirrored

"Auto configuration"

Auto configuration optimizes all settings.

"Manual configuration"

Allows the "Source" and "Target" HDD to be specified as well as whether a rebuild (mirror) should be performed immediately (takes approx. 50 minutes).

8.4 Delete RAID set

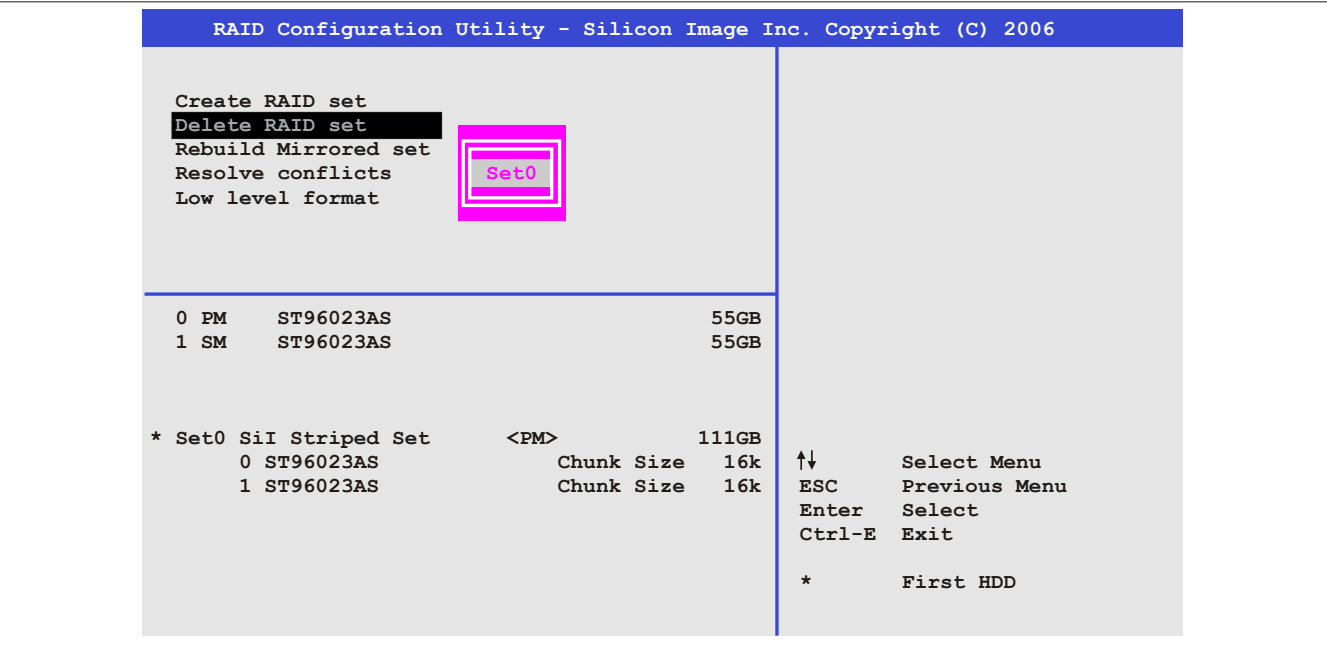


Figure 82: RAID Configuration Utility - Delete RAID set

An existing RAID set can be deleted using the "Delete RAID set" menu option.



## 8.5 Rebuild mirrored set

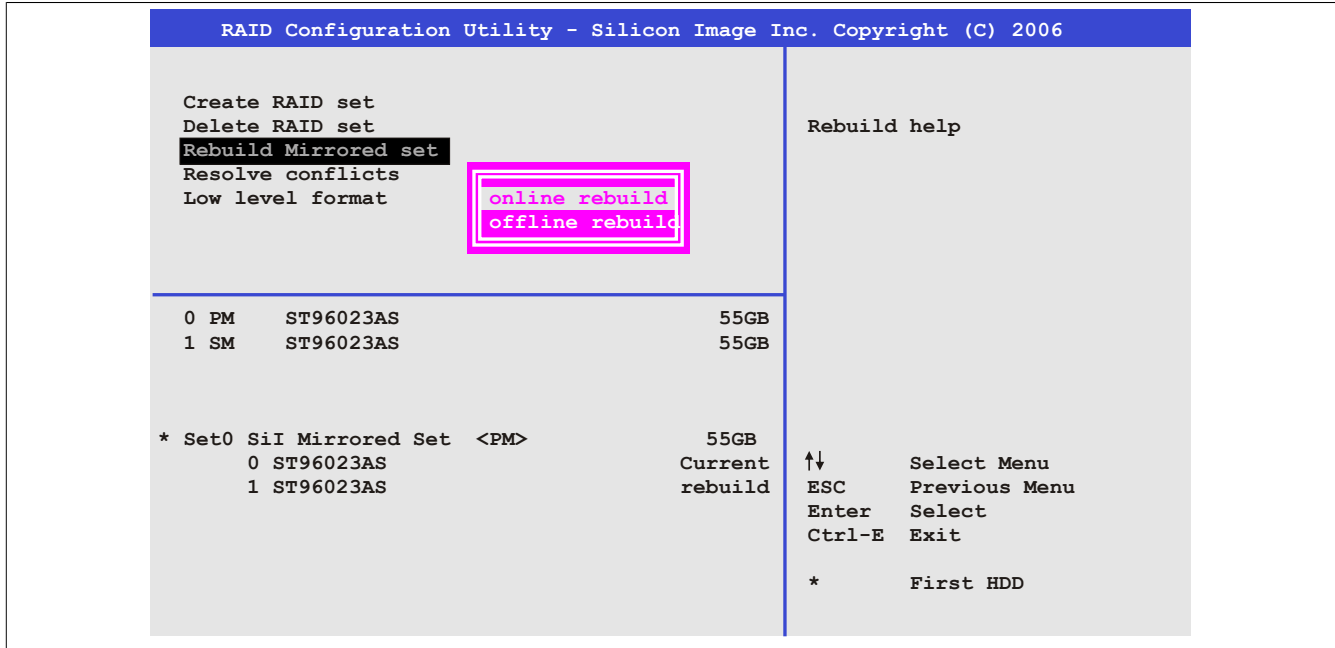


Figure 83: RAID Configuration Utility - Rebuild mirrored set

The "Rebuild mirrored set" menu option can be used to restart a rebuild procedure in a RAID 1 set if an error occurs, if a rebuild procedure was interrupted or if a hard disk was replaced.

If "Online rebuild" is selected, then the rebuild is executed during operation after the system is booted. The installed SATA RAID configuration program may display an event pop-up message: `SATA Raid detected a new event` before restarting the rebuild. The entire rebuild takes approximately 50 minutes.

If "Offline rebuild" is selected, then a rebuild is performed immediately before the operating system is started (duration depends on the respective memory size).

## 8.6 Resolve conflicts

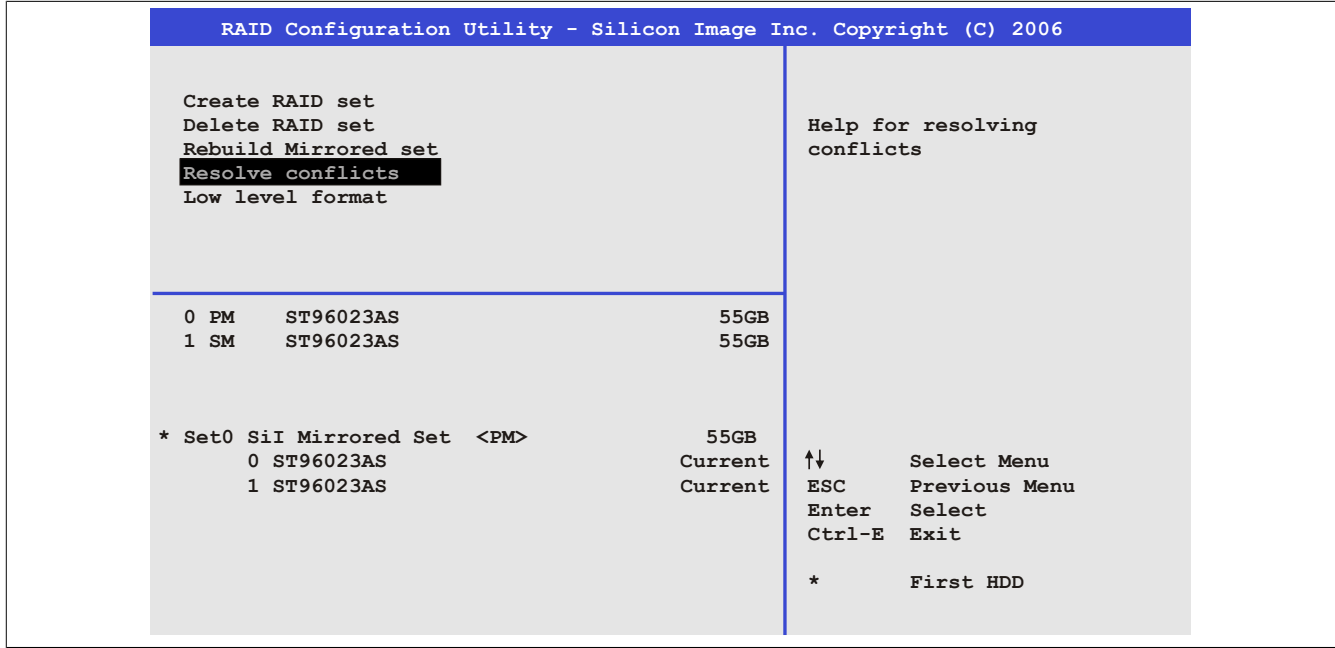


Figure 84: RAID Configuration Utility - Resolve conflicts

Conflicts in a RAID set can be resolved using the "Resolve conflicts" menu option. This function is only available if the status of the hard disk is "Conflict".

8.7 Low level format

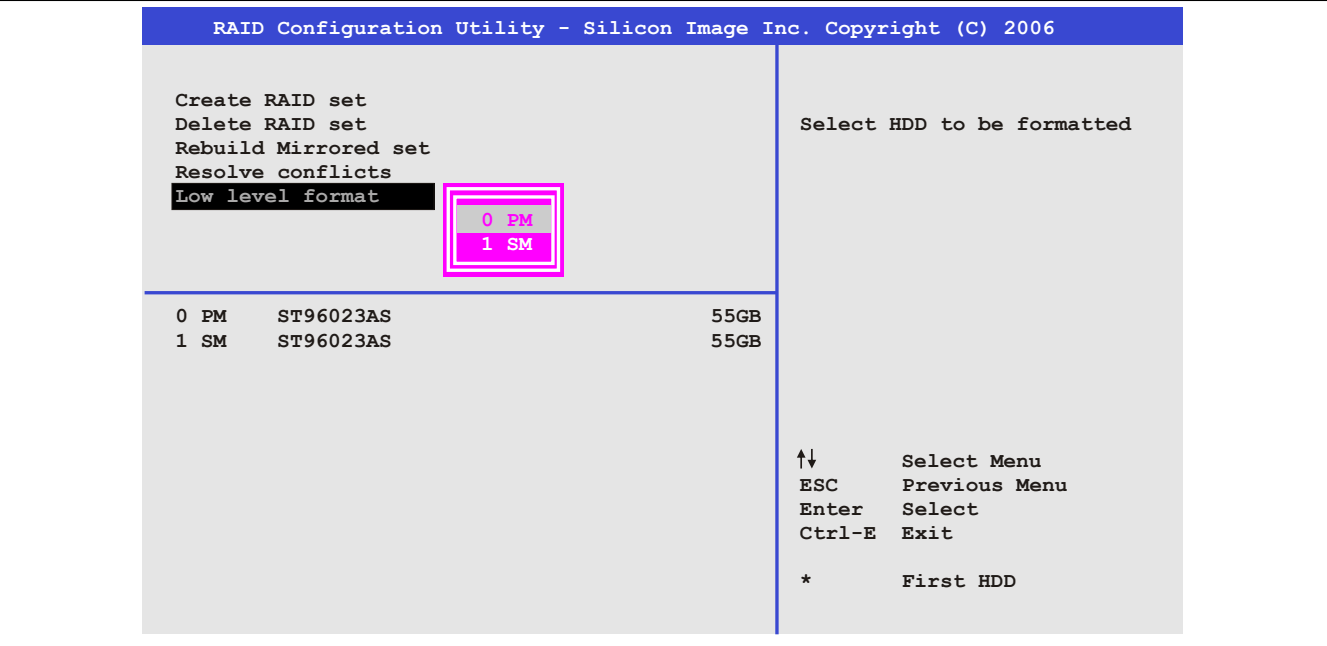


Figure 85: RAID Configuration Utility - Low level format

Individual hard disks can be configured using the "Low level format" menu option. This can only be done if a RAID set is not configured. A low level format of a hard disk takes approx. 40 minutes.

## 9 Tips for extending the service life of the display

### 9.1 Backlight

The service life of the backlight is specified by its "half-brightness time". For example, a specified operating time of 50,000 hours means that the display would still retain 50% of its brightness after this time.

#### 9.1.1 How can the service life of the backlight be extended?

- By setting the display brightness to the lowest value that is still comfortable for the eyes
- By using dark images
- By reducing the brightness by 50%, which can result in an approximately 50% increase in the half-brightness time

### 9.2 Screen burn-in

Screen burn-in refers to the "burning in" of a static image on a display after being displayed for a prolonged period of time. Nevertheless, static images are not the only cause of screen burn-in. Screen burn-in is also referred to as burn-in effect, image retention, memory effect, memory sticking or ghost image.

There are basically two types:

- Area type: This type of screen burn-in is indicated by a dark gray image. The effect will disappear if the display is switched off for a long period of time.
- Line type: This type of screen burn-in can cause lasting damage.

#### 9.2.1 What causes screen burn-in?

- Static images
- No screensaver
- Sharp transitions in contrast (e.g. black/white)
- High ambient temperatures
- Operation outside of specifications

#### 9.2.2 How can screen burn-in be avoided?

- By constantly changing between static and dynamic images
- By avoiding excessive brightness differences between foreground and background elements
- By using colors with similar brightness
- By using complementary colors in follow-up images
- By using a screensaver

## 10 Pixel errors

### Information:

Displays may contain defective pixels (dead/stuck pixels) that result from the manufacturing process. These flaws are not grounds for claiming reclamation or warranty.

## 11 Known problems/issues

- Using two different types of CompactFlash cards can cause problems with Automation PCs and Panel PCs. For example, it is possible that one of the two cards is not detected during system startup. This is caused by different startup speeds. CompactFlash cards with older technology require significantly more time during system startup than CompactFlash cards with newer technology. This behavior occurs near the end of the time frame provided for startup. The problem described can occur because the startup time for the CompactFlash cards fluctuates due to the different components being used. Depending on the CompactFlash cards being used, this error may occur never, sometimes or always.
- During daisy chain operation of multiple AP800/AP900 devices via SDL, it is possible that the touch controller status shows a red "X" in the Control Center applet for the touch screen driver when the touch controller is detected. The functionality of the touch system is not affected by this. This can be avoided by setting a panel locking time of 50 ms. The panel locking time can be configured with the B&R Key Editor.
- The Intel GM45 chipset no longer supports AC'97 sound.
- The CompactFlash Slot 2 is not supported due to the Intel GM45 chipset.

# Chapter 4 • Software

## 1 BIOS options

### Information:

The following diagrams, BIOS menu items and their descriptions refer to BIOS version 1.17. It is therefore possible that these diagrams and BIOS descriptions will not correspond with the BIOS version actually installed.

### 1.1 General information

BIOS is an acronym for "Basic Input/Output System". It is the most basic standardized interface between the user and the system (hardware). The BIOS system used in this B&R Industrial PC was developed by American Megatrends Inc.

The BIOS Setup utility can be used to modify basic system configuration settings. These settings are stored in CMOS and EEPROM memory (as a backup).

CMOS data is buffered by a battery (if present) and continues to remain stored on the B&R Industrial PC even when the power is turned off (no 24 VDC supply).


### 1.2 BIOS Setup and boot procedure

BIOS is immediately activated when switching on the power supply or pressing the power button on the B&R Industrial PC. The system checks if the setup data from EEPROM memory is "OK". If the data is "OK", then it is transferred to CMOS. If the data is "Not OK", then the CMOS data is checked to see whether it is valid. An error message is output if the CMOS data contains errors, and the boot procedure can be continued by pressing <F1>. To prevent an error message from appearing at each restart, the BIOS Setup utility can be opened by pressing <Del>. The settings can then be re-saved.

BIOS reads the system configuration information, checks and configures the system with the Power-On Self-Test (POST).

When these "preliminaries" are finished, BIOS looks for an operating system on the available data storage devices (hard drive, floppy drive, etc.). BIOS then launches the operating system and hands over to it the control of system operations.

To enter BIOS Setup, the <Del> key must be pressed after the USB controller has been initialized as soon as the following message appears on the screen (during POST): "Press DEL to run SETUP".

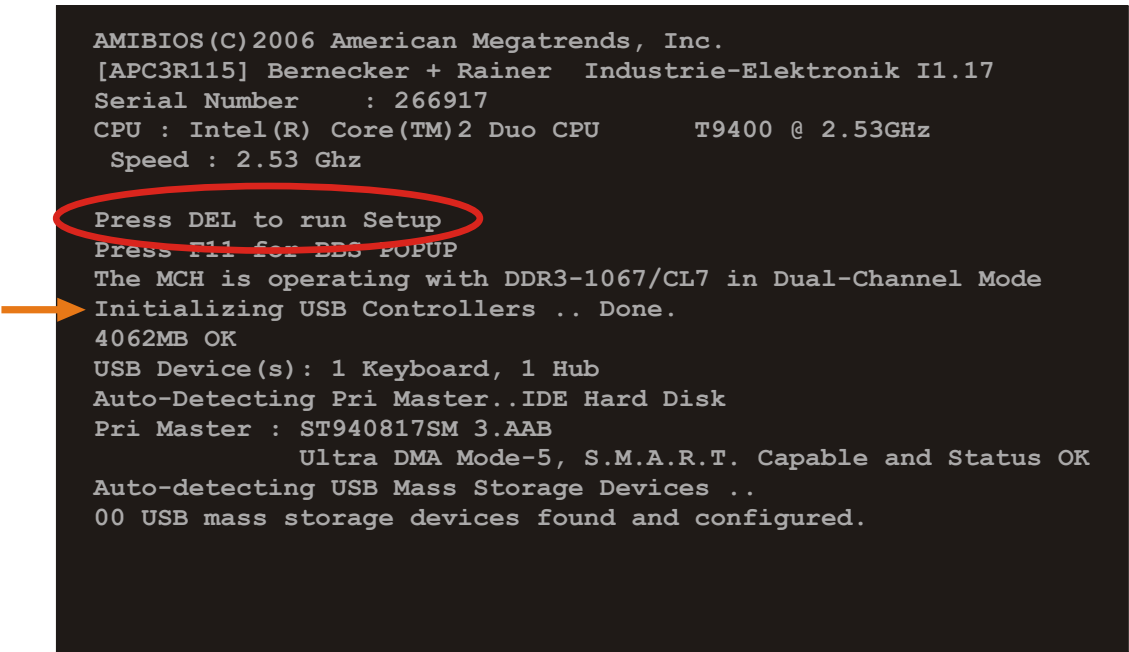The image shows a BIOS boot screen with white text on a black background. A red oval highlights the line "Press DEL to run Setup". An orange arrow points to the line "Initializing USB Controllers .. Done.". The text on the screen includes system information and hardware detection status.

```
AMIBIOS(C)2006 American Megatrends, Inc.  
[APC3R115] Bernecker + Rainer Industrie-Elektronik I1.17  
Serial Number      : 266917  
CPU : Intel(R) Core(TM)2 Duo CPU          T9400 @ 2.53GHz  
Speed : 2.53 Ghz  
  
Press DEL to run Setup  
Press F11 for DDS POPUP  
The MCH is operating with DDR3-1067/CL7 in Dual-Channel Mode  
→ Initializing USB Controllers .. Done.  
4062MB OK  
USB Device(s): 1 Keyboard, 1 Hub  
Auto-Detecting Pri Master..IDE Hard Disk  
Pri Master : ST940817SM 3.AAB  
                Ultra DMA Mode-5, S.M.A.R.T. Capable and Status OK  
Auto-detecting USB Mass Storage Devices ..  
00 USB mass storage devices found and configured.
```

Figure 86: Boot screen

## 1.2.1 BIOS Setup keys

The following keys are enabled during POST:

### Information:

**Key signals from USB keyboards will only be registered after the USB controller has been initialized.**

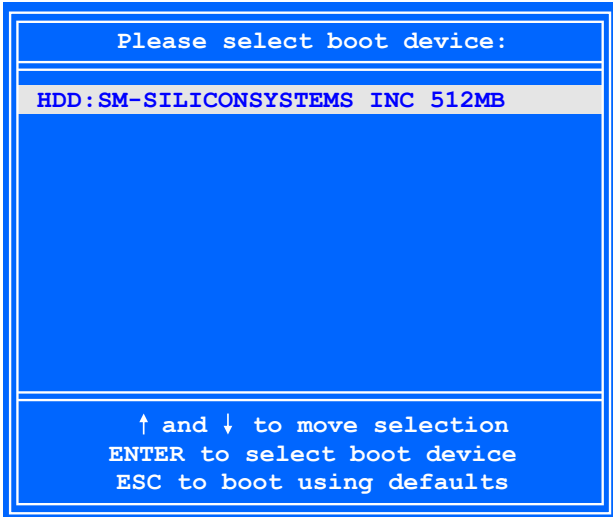
Keys	Function
Del	Opens the main BIOS Setup screen
F12	Network boot
F11	Opens the boot menu. This lists all bootable devices that are connected to the system. Selecting a device with cursor ↑, cursor ↓ and the pressing <ENTER> will boot from that device.
	
<Pause>	Pauses POST. Pressing any other key resumes POST.

Table 133: BIOS-relevant keys for POST

The following keys can be used once inside BIOS Setup:

Key	Function
F1	Opens general help information
Cursor ↑	Moves to the previous item
Cursor ↓	Moves to the next item
Cursor ←	Moves to the previous item
Cursor →	Moves to the next item
+/-	Changes the setting for the selected function
Enter	Changes to the selected screen
Page ↑	Changes to the previous page
Page ↓	Changes to the next page
Pos 1	Jumps to the first BIOS menu item or object
End	Jumps to the last BIOS menu item or object
F2 / F3	Changes the colors of BIOS Setup
F7	Resets any changes
F9	Loads and configures CMOS default values for all BIOS settings
F10	Saves and exits
ESC	Exits a submenu

Table 134: BIOS-relevant keys

### 1.3 Main

The main BIOS Setup screen appears immediately after the <Del> button is pressed during startup.

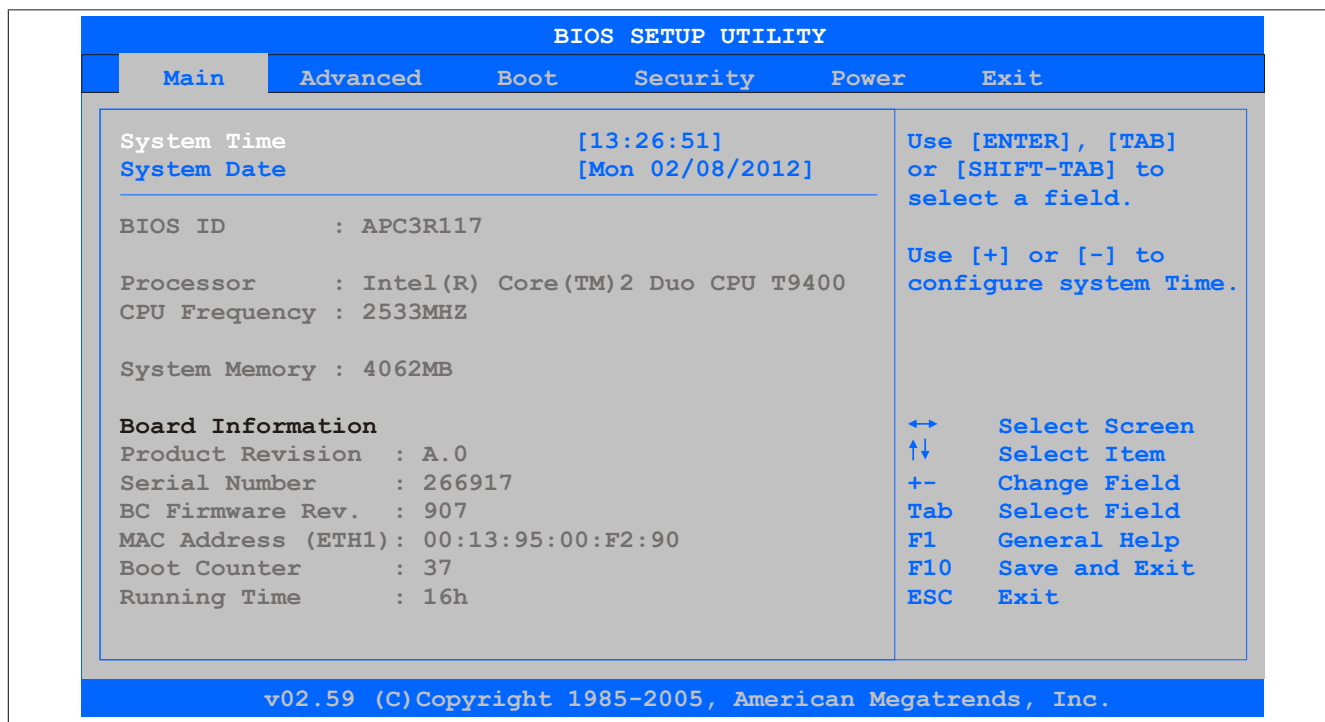


Figure 87: GM45 Main menu

BIOS setting	Function	Configuration options	Effect
System time	The currently configured system time setting. This is buffered by the CMOS battery when the system is switched off.	Changes the system time	Sets the system time in the format Hour:Minute:Second (hh:mm:ss)
System date	The currently configured system date. This is buffered by the CMOS battery when the system is switched off.	Changes the system date	Sets the system date in the format Month:Day:Year (mm:dd:yyyy)
BIOS ID	Displays the BIOS version	None	-
Processor	Displays the processor type	None	-
CPU frequency	Displays the processor frequency	None	-
System memory	Displays the system memory size	None	-
Product revision	Displays the hardware revision of the CPU board	None	-
Serial number	Displays the serial number of the CPU board	None	-
BC firmware rev.	Displays the firmware revision of the CPU board controller	None	-
MAC address (ETH1)	Displays the assigned MAC address for the ETH1 interface	None	-
Boot counter	Displays the boot counter; each restart increases the counter by one (max. 16777215)	None	-
Running time	Displays the runtime in hours (max. 65535)	None	-

Table 135: GM45 Main menu - Configuration options



## 1.4 Advanced



Figure 88: GM45 Advanced menu

BIOS setting	Function	Configuration options	Effect
ACPI configuration	Configures ACPI devices	Enter	Opens the submenu see "ACPI configuration" on page 174
PCI configuration	Configures PCI devices	Enter	Opens the submenu see "PCI configuration" on page 175
PCI Express configuration	Configures PCI Express settings	Enter	Opens the submenu see "PCI Express configuration" on page 178
Graphics configuration	Configures graphics settings	Enter	Opens the submenu see "Graphics configuration" on page 180
CPU configuration	Configures CPU settings	Enter	Opens the submenu see "CPU configuration" on page 182
Chipset configuration	Configures chipset functions	Enter	Opens the submenu see "Chipset settings" on page 183
I/O interface configuration	Configures I/O devices	Enter	Opens the submenu see "I/O interface configuration" on page 184
Clock configuration	Configures clock settings	Enter	Opens the submenu see "Clock configuration" on page 185
IDE configuration	Configures IDE functions	Enter	Opens the submenu see "IDE configuration" on page 185
USB configuration	Configures USB settings	Enter	Opens the submenu see "USB configuration" on page 191
Keyboard/Mouse configuration	Configures keyboard/mouse options	Enter	Opens the submenu see "Keyboard/Mouse configuration" on page 192
CPU board monitor	Displays the current voltages and temperature of the processor in use	Enter	Opens the submenu see "CPU board monitor" on page 193
Baseboard/Panel features	Displays and configures device-specific settings	Enter	Opens the submenu see "Baseboard/Panel features" on page 194

Table 136: GM45 Advanced menu

## 1.4.1 ACPI configuration

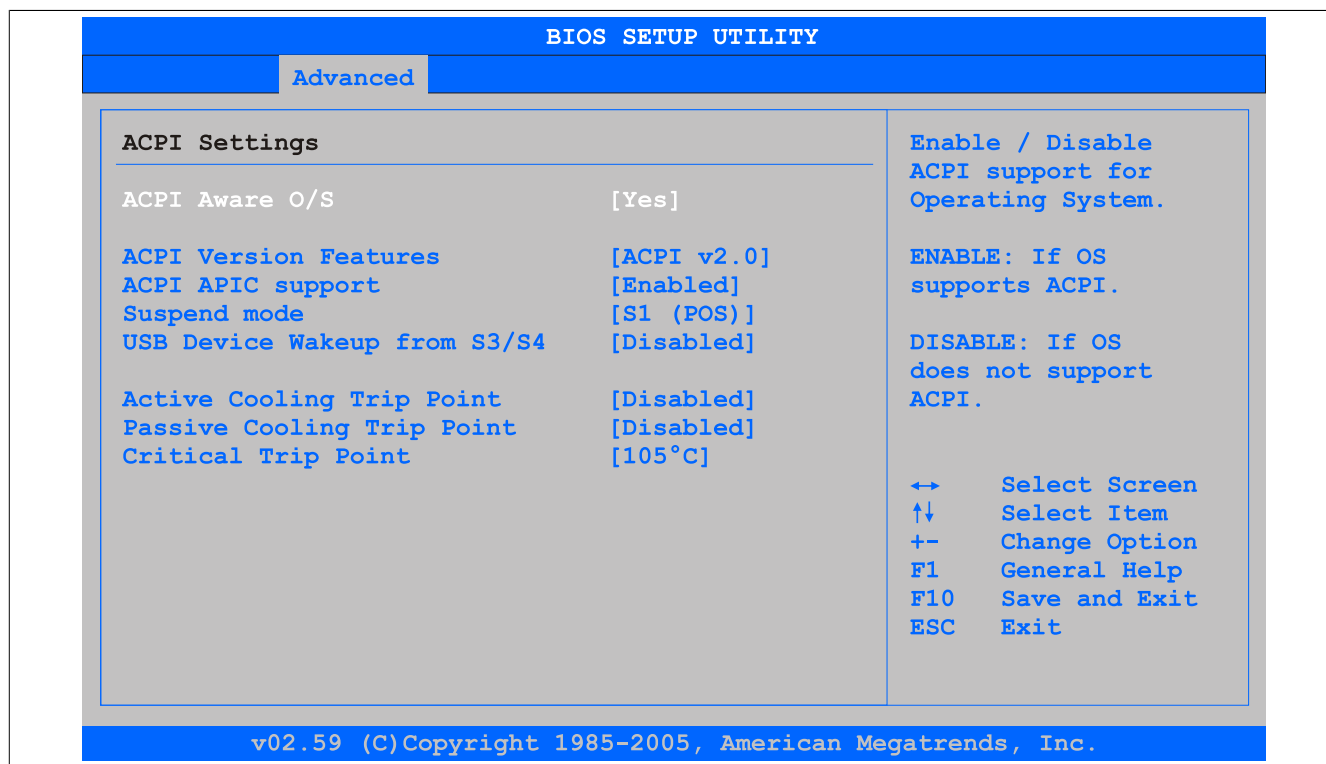


Figure 89: GM45 Advanced - ACPI configuration

BIOS setting	Function	Configuration options	Effect
ACPI aware O/S	This function determines if the operating system supports the ACPI function (Advanced Configuration and Power Interface).	Yes	The operating system supports ACPI.
		No	The operating system does not support ACPI.
ACPI version features	Option for setting the power option specifications to be supported. The ACPI functions must be supported by the drivers and operating systems being used.	ACPI v1.0	Uses ACPI functions in accordance with v1.0
		ACPI v2.0	Uses ACPI functions in accordance with v2.0
		ACPI v3.0	Uses ACPI functions in accordance with v3.0
ACPI APIC support	This option controls the support of the advanced programmable interrupt controller in the processor.	Enabled	Enables this function
		Disabled	Disables the function
Suspend mode	Selects the ACPI status to be used when Suspend mode is enabled	S1 (POS)	Sets S1 as Suspend mode. Only a few functions are disabled and are available again at the touch of a button
		S3 (STR)	Sets S3 as Suspend mode. The current state of the operating system is written to RAM, which is then the only component to receive power.
USB device wakeup from S3/S4	This option makes it possible for activity on a connected USB device to wake the system up from S3/S4 standby mode.	Enabled	Enables this function
		Disabled	Disables this function
Active cooling trip point	This function can be used to switch on an optional CPU fan via the operating system when the CPU reaches the set temperature.	Disabled	Disables this function
		50°C, 60°C, 70°C, 80°C, 90°C	Temperature setting for the active cooling trip point. Configurable in increments of 10 degrees.
Passive cooling trip point	Option for configuring a CPU temperature at which the operating system throttles the CPU speed	Disabled	Disables this function
		50°C, 60°C, 70°C, 80°C, 90°C	Temperature setting for the passive cooling trip point. Configurable in increments of 10 degrees.
Critical trip point	Option for configuring a CPU temperature at which the operating system throttles the system	80°C, 85°C, 90°C, 95°C, 100°C, 105°C, 110°C	Temperature setting for the critical trip point. Configurable in increments of 5 degrees.

Table 137: GM45 Advanced - ACPI configuration - Configuration options

## 1.4.2 PCI configuration

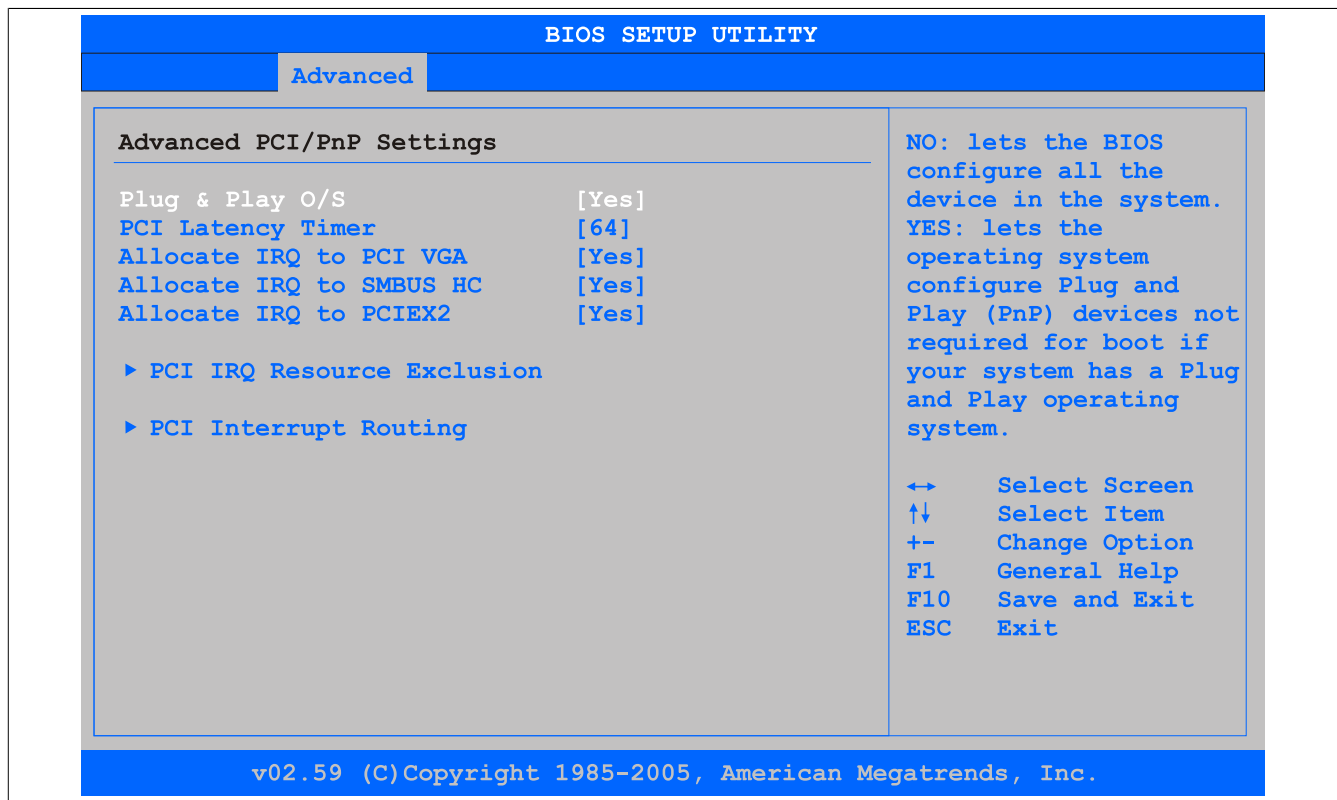


Figure 90: GM45 Advanced - PCI configuration

BIOS setting	Function	Configuration options	Effect
Plug & Play O/S	Informs BIOS if the operating system is capable of handling plug and play	Yes	Resource allocation handled by the operating system
		No	Resource allocation handled by BIOS
PCI latency timer	Option for controlling how long (in PCI ticks) one PCI bus card can continue to use the master after another PCI card has requested access	32, 64, 96, 128, 160, 192, 224, 248	Manually sets the value in PCI ticks
Allocate IRQ to PCI VGA	This function is used to determine if an interrupt is assigned to the PCI VGA.	Yes	Interrupt assigned automatically
		No	Interrupt not assigned
Allocate IRQ to SMBUS HC	This function is used to set whether the SM (system management) bus controller is assigned a PCI interrupt.	Yes	PCI interrupt assigned automatically
		No	Interrupt not assigned
Allocate IRQ to PCIEX2	This function is used to specify whether the PCIEX2 is assigned a PCI interrupt.	Yes	PCI interrupt assigned automatically
		No	Interrupt not assigned
<b>PCI IRQ resource exclusion</b>	Configures the PCI IRQ resource settings for ISA Legacy devices	Enter	Opens the submenu see "PCI IRQ resource exclusion" on page 176
<b>PCI interrupt routing</b>	Configures PCI interrupt routing	Enter	Opens the submenu see "PCI interrupt routing" on page 177

Table 138: GM45 Advanced - PCI configuration - Configuration options

1.4.2.1 PCI IRQ resource exclusion

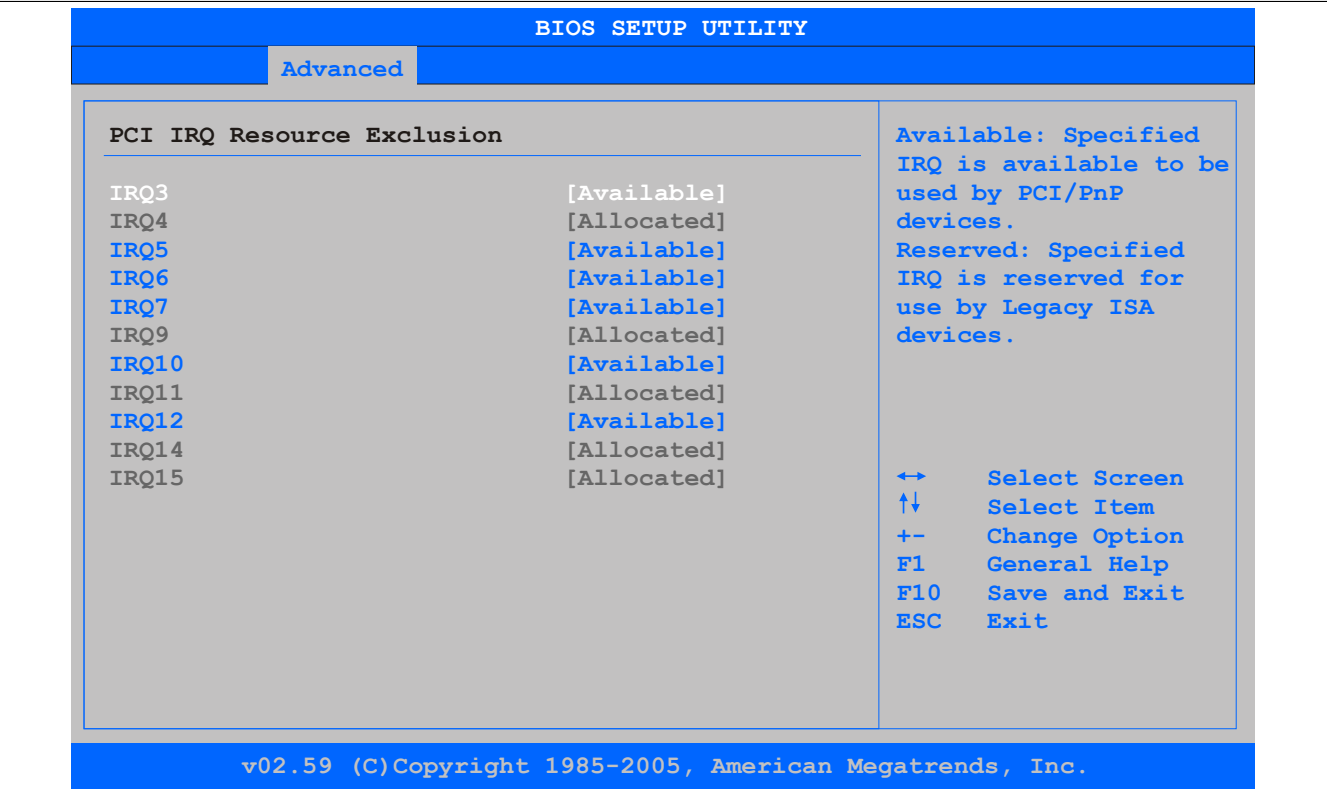


Figure 91: GM45 Advanced - PCI IRQ resource exclusion

BIOS setting	Function	Configuration options	Effect
IRQx	IRQ interrupt routing for Legacy ISA devices	Allocated	Allocated by the system - cannot be used
		Available	Available - can be used
		Reserved	Reserved - cannot be used

Table 139: GM45 Advanced - PCI IRQ resource exclusion - Configuration options

## 1.4.2.2 PCI interrupt routing

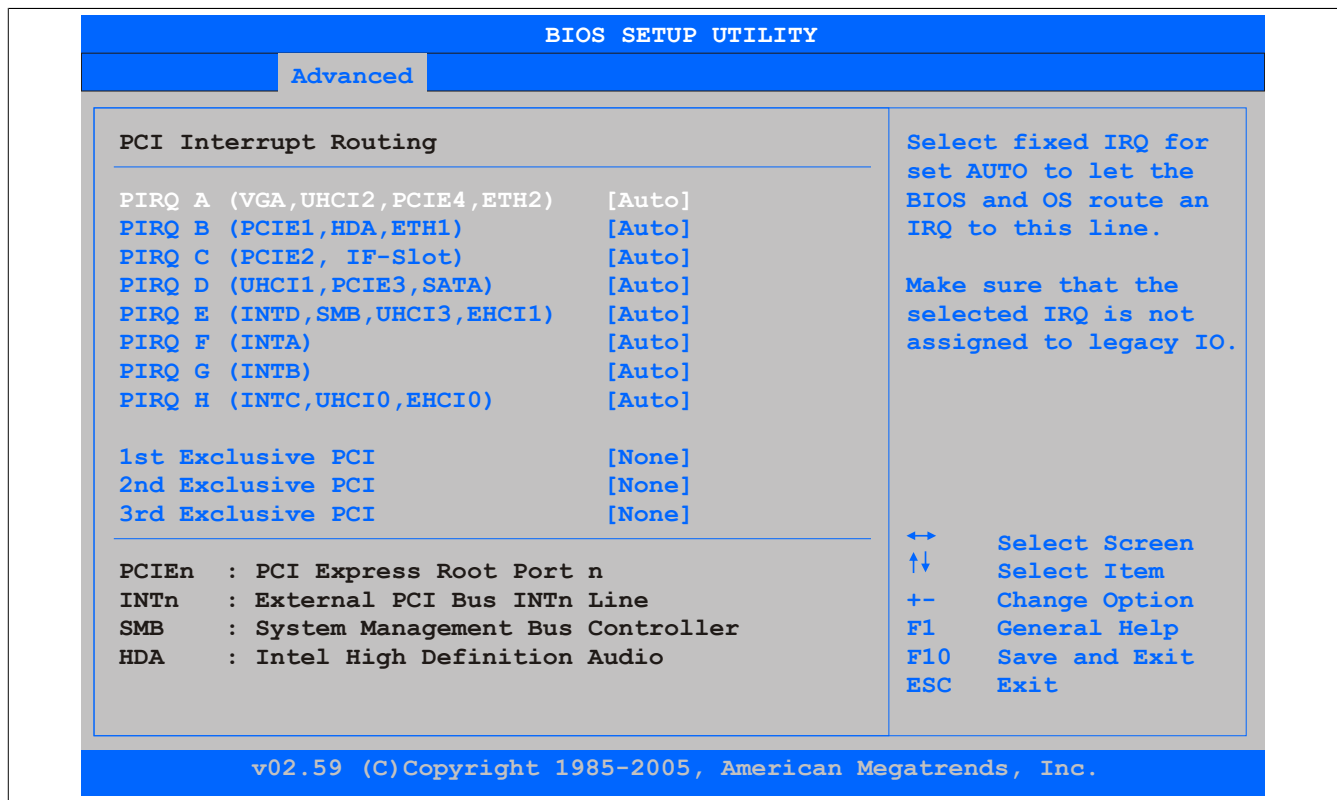


Figure 92: GM45 Advanced - PCI interrupt routing

BIOS setting	Function	Configuration options	Effect
PIRQ A (VGA,UHCI2,PCIE4,ETH2)	Option for configuring PIRQ A	Auto	Automatic assignment by BIOS and the operating system
		5,6,7,9,10,11,12	Manual assignment
PIRQ B (PCIE1,HDA,ETH1)	Option for configuring PIRQ B	Auto	Automatic assignment by BIOS and the operating system
		5,6,7,9,10,11,12	Manual assignment
PIRQ C (PCIE2, IF slot)	Option for configuring PIRQ C	Auto	Automatic assignment by BIOS and the operating system
		5,6,7,9,10,11,12	Manual assignment
PIRQ D (UHCI1,PCIE3, SATA)	Option for configuring PIRQ D	Auto	Automatic assignment by BIOS and the operating system
		5,6,7,9,10,11,12	Manual assignment
PIRQ E (INTD, SMB,UHCI3,EHCI1)	Option for configuring PIRQ E	Auto	Automatic assignment by BIOS and the operating system
		5,6,7,9,10,11,12	Manual assignment
PIRQ F (INTA)	Option for configuring PIRQ F	Auto	Automatic assignment by BIOS and the operating system
		5,6,7,9,10,11,12	Manual assignment
PIRQ G (INTB)	Option for configuring PIRQ G	Auto	Automatic assignment by BIOS and the operating system
		5,6,7,9,10,11,12	Manual assignment
PIRQ H (INTC,UHCI0, EHCI0)	Option for configuring PIRQ H	Auto	Automatic assignment by BIOS and the operating system
		5,6,7,9,10,11,12	Manual assignment
1st exclusive PCI	This option is used to determine if the IRQ listed under PIRQ x is handled exclusively (no IRQ sharing).	None	No interrupt assigned
		x	Assigns the PIRQ as the 1st exclusive PCI IRQ

**Information:**

This is only displayed if a PIRQ is configured manually (e.g. 5).

Table 140: GM45 Advanced - PCI interrupt routing - Configuration options

BIOS setting	Function	Configuration options	Effect
2nd exclusive PCI	This option is used to determine if the IRQ listed under PIRQ x is handled exclusively (no IRQ sharing).  <b>Information:</b>  This is only displayed if two PIRQs are configured manually.	None	No interrupt assigned
		x	Assigns the PIRQ as the 2nd exclusive PCI IRQ
3rd exclusive PCI	This option is used to determine if the IRQ listed under PIRQ x is handled exclusively (no IRQ sharing).  <b>Information:</b>  Only displayed on PPC800 devices with three PIRQs configured manually.	None	No interrupt assigned
		x	Assigns the PIRQ as the 3rd exclusive PCI IRQ

Table 140: GM45 Advanced - PCI interrupt routing - Configuration options

### 1.4.3 PCI Express configuration

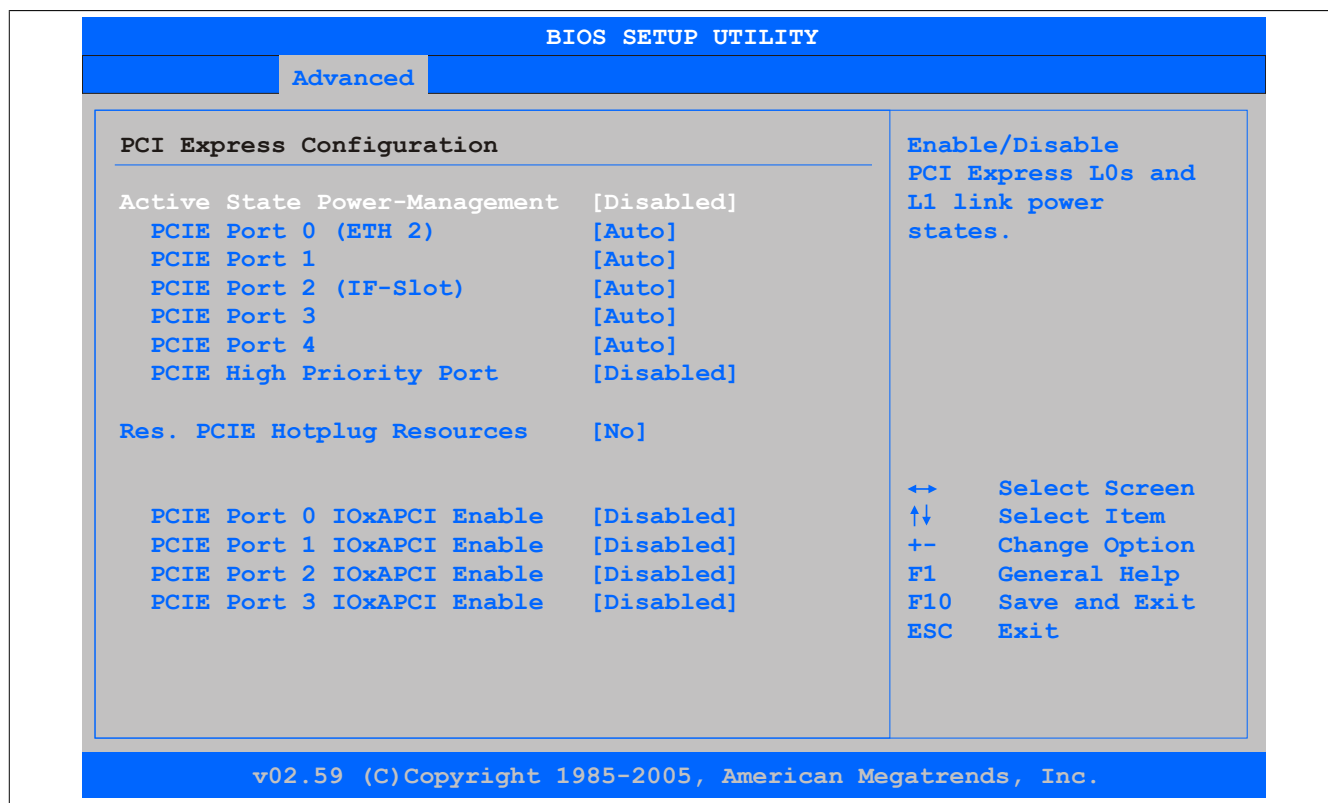


Figure 93: GM45 Advanced - PCI Express configuration

BIOS setting	Function	Configuration options	Effect
Active state power management	Option for configuring a power saving function (L0s/L1) for PCIe slots if they do not require full power	Enabled	Enables this function
		Disabled	Disables this function
PCIe port 0 (ETH2)	This option enables or disables the PCI Express interface function.  <b>Information:</b>  This option should be disabled if no PCI Express devices are being used.	Auto	Automatic assignment by BIOS and the operating system
		Enabled	Enables this function
		Disabled	Disables this function
PCIe port 1	This option enables or disables the PCI Express interface function.  <b>Information:</b>  This option should be disabled if no PCI Express devices are being used.	Auto	Automatic assignment by BIOS and the operating system
		Enabled	Enables this function
		Disabled	Disables this function
PCIe port 2 (IF slot)	This option enables or disables the PCI Express interface function.	Auto	Automatic assignment by BIOS and the operating system

Table 141: GM45 Advanced - PCI Express configuration - Configuration options

BIOS setting	Function	Configuration options	Effect
	<b>Information:</b>  This option should be disabled if no PCI Express devices are being used.	Enabled	Enables this function
		Disabled	Disables this function
PCIe port 3	This option enables or disables the PCI Express interface function.  <b>Information:</b>  This option should be disabled if no PCI Express devices are being used.	Auto	Automatic assignment by BIOS and the operating system
		Enabled	Enables this function
		Disabled	Disables this function
PCIe port 4	This option enables or disables the PCI Express interface function.  <b>Information:</b>  This option should be disabled if no PCI Express devices are being used.	Auto	Automatic assignment by BIOS and the operating system
		Enabled	Enables this function
		Disabled	Disables this function
PCIe high priority port	This option enables or disables the priority port for PCIe.	Disabled	Disables this function
		Port 0	Enables port 0 as the priority port
		Port 1	Enables port 1 as the priority port
		Port 2	Enables port 2 as the priority port
		Port 3	Enables port 3 as the priority port
		ETH2	Enables ETH2 as the priority port
Res. PCIe hot plugging resource	This option is used to reserve an I/O and memory resource for an unused PCIe port. A PCIe port must be set to "Enabled" and resources must be reserved in order for ExpressCard hot-plugging to be supported on the respective port.	Yes	Resource reserved
		No	Resource not reserved
PCIe port 0 IOxAPIC enable	This option enables or disables the APIC (Advanced Programmable Interrupt Controller) on PCIe port 0. The IRQ resources available to the system are expanded when APIC mode is enabled.	Enabled	Enables this function
		Disabled	Disables this function
PCIe port 1 IOxAPIC enable	This option enables or disables the APIC (Advanced Programmable Interrupt Controller) on PCIe port 1. The IRQ resources available to the system are expanded when APIC mode is enabled.	Enabled	Enables this function
		Disabled	Disables this function
PCIe port 2 IOxAPIC enable	This option enables or disables the APIC (Advanced Programmable Interrupt Controller) on PCIe port 2. The IRQ resources available to the system are expanded when APIC mode is enabled.	Enabled	Enables this function
		Disabled	Disables this function
PCIe port 3 IOxAPIC enable	This option enables or disables the APIC (Advanced Programmable Interrupt Controller) on PCIe port 3. The IRQ resources available to the system are expanded when APIC mode is enabled.	Enabled	Enables this function
		Disabled	Disables this function

Table 141: GM45 Advanced - PCI Express configuration - Configuration options

## 1.4.4 Graphics configuration

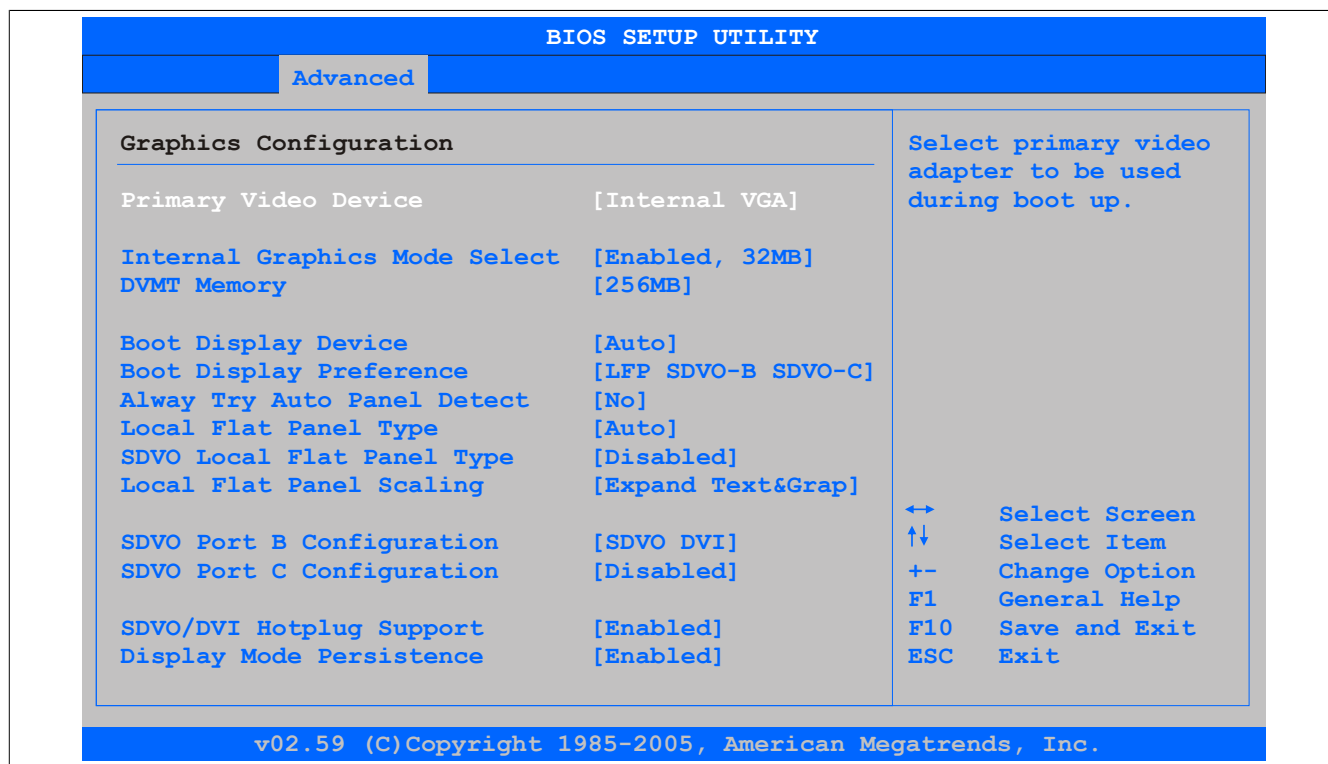


Figure 94: GM45 Advanced - Graphics configuration

BIOS setting	Function	Configuration options	Effect
Primary video device	Option for selecting the primary display device	Internal VGA	Uses the internal graphics chip on the CPU board as the video device (monitor/panel interface)
		PCI / Int. VGA	Uses the graphics chip of a connected graphics card as the display device
Internal graphics mode select	Option for setting the amount of memory used for the internal graphics controller	Disabled	Nothing reserved, disables the graphics controller
		Enabled, 32MB	Provides 32 MB main memory
		Enabled, 64MB	Provides 64 MB main memory
		Enabled, 128MB	Provides 128 MB main memory
DVMT memory	Option for setting the amount of memory used for DVMT mode	128 MB	Allows 128 MB of main memory to be used
		256 MB	Allows 256 MB of main memory to be used
		Maximum DVMT	Allows the remaining available main memory to be used
Boot display device	Determines which video channel should be enabled for a display device during booting	Auto	Automatic selection
		CRT only	Uses only the CRT (Cathode Ray Tube) channel
		SDVO only	Uses only the SDVO (Serial Digital Video Out) channel
		CRT + SDVO	Uses the CRT and SDVO channel
		LFP only	Uses only the LFP (Local Flat Panel) channel
Boot display preference	This option determines the order in which the devices on the connected LFP and SDVO channels should be checked and booted.	CRT + LFP	Uses the CRT and LFP channel
		LFP SDVO-B SDVO-C	Local Flat Panel - Serial Digital Video B output - Serial Video C output
		LFP SDVO-C SDVO-B	Local Flat Panel - Serial Digital Video C output - Serial Video B output
		SDVO-B SDVO-C LFP	Serial Digital Video B output - Serial Digital Video C output - Local Flat Panel
Always try auto panel detect	This option first searches for EDID data in an external EEPROM to configure the LFP. If no EDID data is found, then the data selected under "Local flat panel type" is used.	SDVO-C SDVO-B LFP	Serial Digital Video C output - Serial Digital Video B output - Local Flat Panel
		No	Disables this function
Local flat panel type	This option can be used to set a predefined profile for the LVDS channel.	Yes	Enables this function
		Auto	Automatic detection and configuration using the EDID data
		VGA 1x18 (002h)	640 x 480
		VGA 1x18 (013h)	640 x 480
		SVGA 1x18 (01Ah)	800 x 600

Table 142: GM45 Advanced - Graphics configuration - Configuration options



BIOS setting	Function	Configuration options	Effect
		XGA 1x18 (006h)	1024 x 768
		XGA 2x18 (007h)	1024 x 768
		XGA 1x24 (008h)	1024 x 768
		XGA 2x24 (012h)	1024 x 768
		SXGA 2x24 (00Ah)	1280 x 1024
		SXGA 2x24 (018h)	1280 x 1024
		UXGA 2x24 (00Ch)	1600 x 1200
		Customized EDID 1	User-defined profile
		Customized EDID 2	User-defined profile
		Customized EDID 3	User-defined profile
SDVO local flat panel type	<p>This option can be used to set a pre-defined profile for the SDVO LVDS channel.</p> <div> <b>Information:</b>            An SDVO LVDS transmitter must be connected to one of the SDVO ports, and the corresponding SDVO port device must be set to LVDS.         </div>	Disabled	Disables this function
		Auto	Automatic detection and configuration using the EDID data
		VGA 1x18 (002h)	640 x 480
		VGA 1x18 (013h)	640 x 480
		SVGA 1x18 (01Ah)	800 x 600
		XGA 1x18 (006h)	1024 x 768
		XGA 2x18 (007h)	1024 x 768
		XGA 1x24 (008h)	1024 x 768
		XGA 2x24 (012h)	1024 x 768
		SXGA 2x24 (00Ah)	1280 x 1024
		SXGA 2x24 (018h)	1280 x 1024
		UXGA 2x24 (00Ch)	1600 x 1200
		Customized EDID 1	User-defined profile
		Customized EDID 1	User-defined profile
		Customized EDID 1	User-defined profile
Local flat panel scaling	Determines the screen content should be output depending on the configured local flat panel type	Centering	Centers the screen contents on the display
		Expand text	Expands text across the entire display
		Expand graphics	Expands graphics across the entire display
		Expand text & graphics	Expands text and graphics across the entire display
SDVO port B device	Option for selecting the video device that is connected to SDVO port B or to define the port as an HDMI or display port	Disabled	No display device connected
		HDMI port	Configures the port as an HDMI port
		Display port	Configures the port as a display port
		SDVO DVI	Optimizes video signal output for an SDVO DVI-compatible display device
		SDVO TV	Optimizes video signal output for an SDVO TV-compatible display device
		SDVO CRT	Optimizes video signal output for a SDVO CRT-compatible display device
		SDVO LVDS	Optimizes video signal output for an SDVO LVDS-compatible display device
		SDVO DVI-Analog	Optimizes video signal output for an analog SDVO DVI-compatible display device
SDVO port C device	Option for selecting the video device that is connected to SDVO port C or to define the port as an HDMI or display port	Disabled	No display device connected
		HDMI port	Configures the port as an HDMI port
		Display port	Configures the port as a display port
		SDVO DVI	Optimizes video signal output for an SDVO DVI-compatible display device
		SDVO TV	Optimizes video signal output for an SDVO TV-compatible display device
		SDVO CRT	Optimizes video signal output for a SDVO CRT-compatible display device
		SDVO LVDS	Optimizes video signal output for an SDVO LVDS-compatible display device
		SDVO DVI-Analog	Optimizes video signal output for an analog SDVO DVI-compatible display device
SDVO/DVI hot plugging support	If this option is set to enabled, the Windows XP graphics driver supports "hot plugging" and "configuration mode persistence" for DVI monitors connected to a DVI SDVO transmitter. "Hot plugging" support means that when a DVI monitor is connected while the operating system is running, it is detected automatically and activated. "Configuration mode persistence" means that a dual DVI configuration, for example, is automatically restored when both DVI monitors are reconnected, even if only one of them was connected and enabled during a previous boot.	Enabled	Enables "Hot plugging" and "Configuration mode persistence" mode
		Disabled	Disables "Hot plugging" and "Configuration mode persistence" mode
Display mode persistence	"Display mode persistence" means that the operating system can remember and restore past display configurations. For example, a dual DVI configuration is automatically restored when both DVI monitors are reconnected, even if only one of them was connected and enabled during a previous boot.	Enabled	Enables this function
		Disabled	Disables this function

Table 142: GM45 Advanced - Graphics configuration - Configuration options

## 1.4.5 CPU configuration

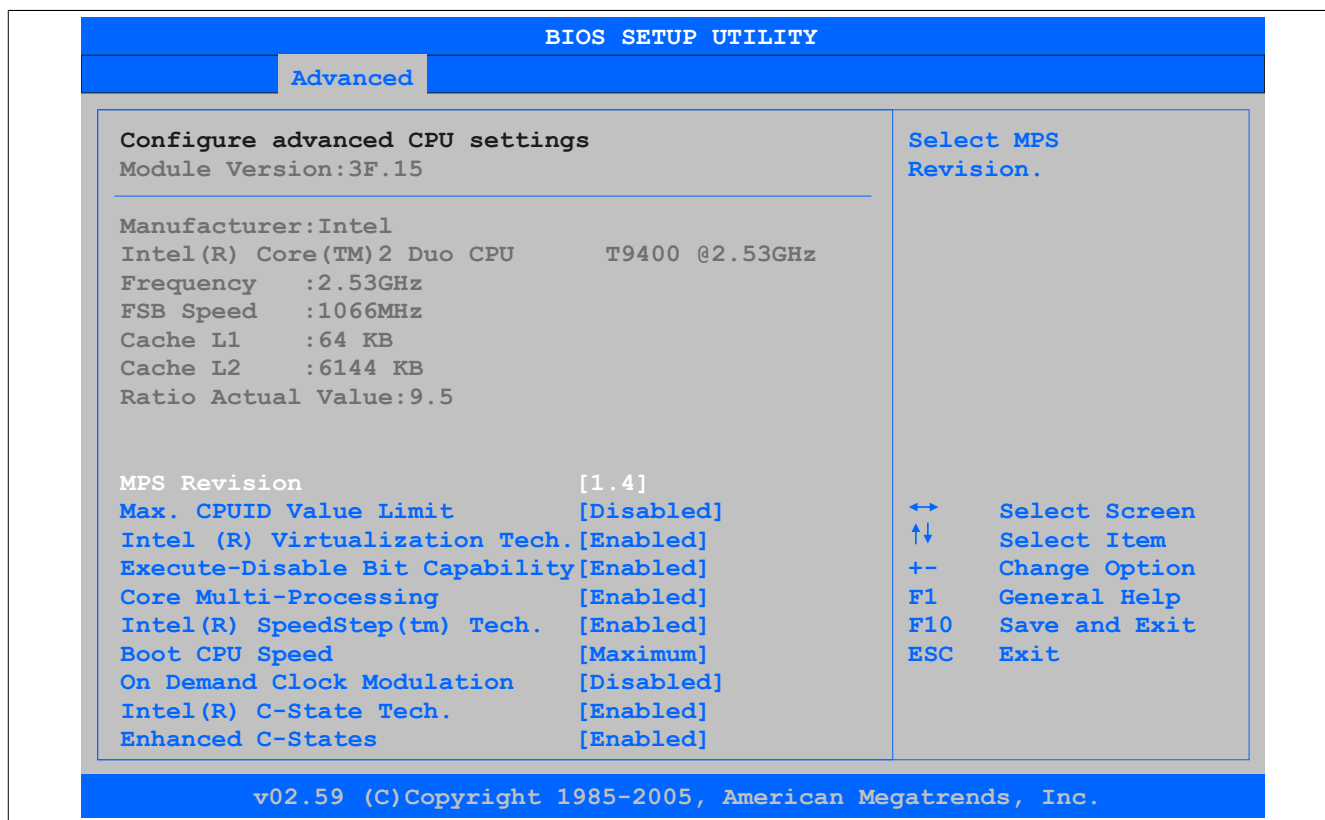


Figure 95: GM45 Advanced - CPU configuration

BIOS setting	Function	Configuration options	Effect
MPS revision	This option supports the use of multiple CPUs (MPS=multiprocessor system).	1.1	Sets MPS support to Revision 1.1
		1.4	Sets MPS support to Revision 1.4
Max CPUID value limit	Option for limiting the CPUID input value. This may be necessary for older operating systems.	Enabled	The processor limits the maximum CPUID input value to 03h if necessary if the processor supports a higher value.
		Disabled	The processor returns the current maximum value when the CPUID input value is requested.
Intel(R) Virtualization Tech.	Option for enabling/disabling a virtual machine	Disabled	Disables this function
	<b>Information:</b> A restart is required in order to apply changes made to this setting.	Enabled	Allows a virtual machine to use the additional hardware capacity
Execute disable bit	Option for enabling/disabling hardware support for prevention of data execution	Enabled	Enables this function
		Disabled	Disables this function
Core multi-processing	This option can be used to disable a core when using a dual-core processor.	Enabled	Uses both cores in a dual-core processor
		Disabled	Uses only one core in a dual-core processor
Intel(R) Speedster(tm) tech.	Option for controlling the Intel(R) SpeedStep(TM) technology. The processor clock speed is increased or decreased according to the number of calculations that must be made. As a result, the power consumption depends largely on the processor load.	Enabled	The processor speed is regulated by the operating system.
		Disabled	Disables SpeedStep technology
Boot CPU speed	Option for setting the CPU speed	Maximum	Maximum CPU speed
	<b>Information:</b> This setting can be changed in ACPI operating systems by activating Intel SpeedStep technology.	Minimum	Chokes the CPU speed LFM = Low Frequency Mode = 1.6 GHz
On demand clock modulation	Option for configuring CPU performance using "On demand clock modulation"	Disabled	Disables this function
		12.5%, 25%, 37.5%, 50%, 62.5%, 75%, 87.5%	Example: 75% results in a performance reduction of 25%.

Table 143: GM45 Advanced - CPU configuration - Configuration options

BIOS setting	Function	Configuration options	Effect
Intel(R) C-State Tech.	This setting allows the operating system to set the processor clock speed on its own, thereby saving energy.	Disabled	Disables this function. Both processors are operated at the same frequency.
		Enabled	Enables this function. The processors are operated at different frequencies to save energy.
Enhanced CStates <sup>1)</sup>	This setting allows the operating system to set the processor clock speed on its own, thereby saving energy.	Disabled	Disables this function
		Enabled	Enables this function

Table 143: GM45 Advanced - CPU configuration - Configuration options

1) This setting is only shown if *Intel(R) C-State tech.* is set to *Enabled*.

## 1.4.6 Chipset settings

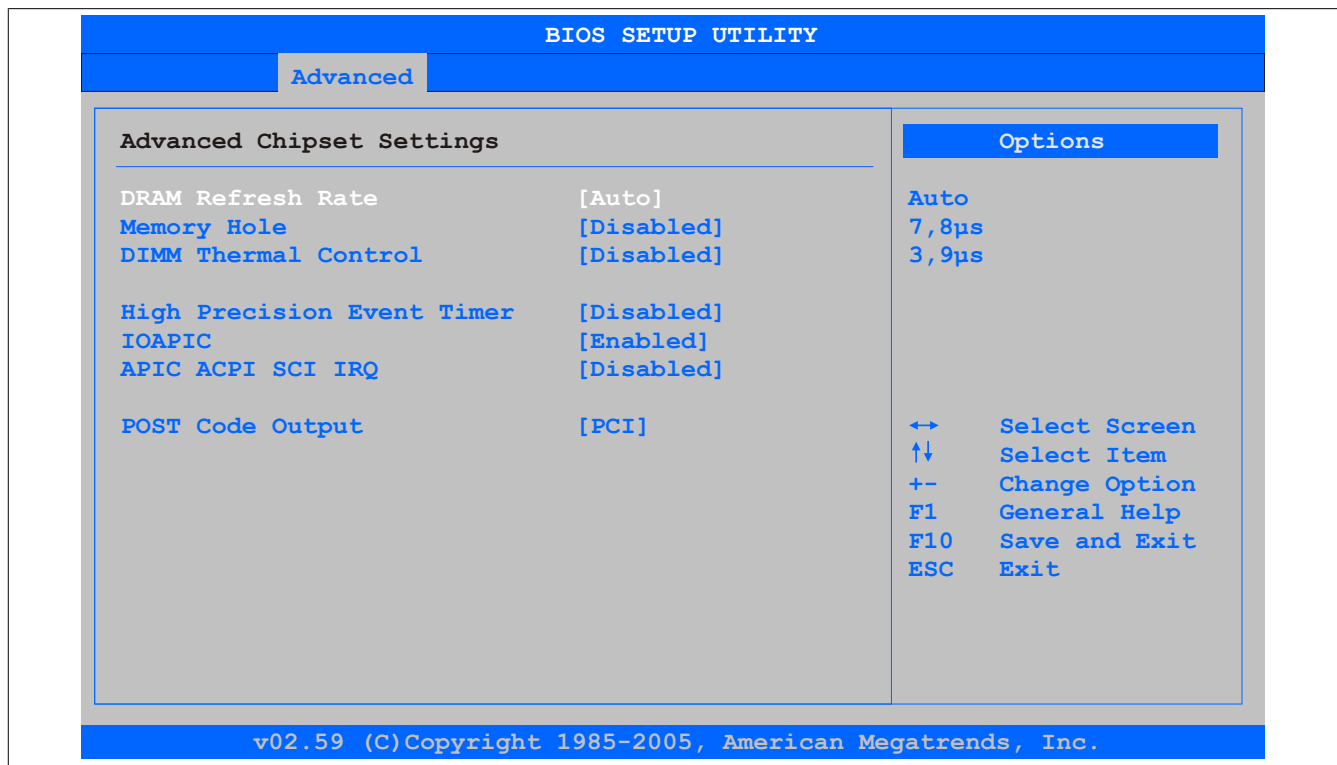


Figure 96: GM45 Advanced - Chipset settings

BIOS setting	Function	Configuration options	Effect
DRAM refresh rate	Option for configuring the DRAM refresh rate	Auto	Reads the DRAM refresh rate from the SPD data of the DRAM module
		7.8 $\mu$ s	The DRAM refresh rate is set manually.
		3.9 $\mu$ s	The DRAM refresh rate is set manually.
Memory hole	Option for ISA cards with a frame buffer. This does not apply to the PPC800.	Disabled	Disables this function
		15MB-16MB	Reserves the address range
DIMM thermal control	Option for setting the maximum surface temperature of the DIMM module. The module is cooled by limiting the memory bandwidth if the defined surface temperature is reached.	Disabled	Surface temperature not limited
		40°C, 50°C, 60°C, 70°C, 80°C, 85°C, 90°C	Temperature limit value for the limitation
High precision event timer	The HPET is a timer inside the PC. It is able to trigger an interrupt with a high degree of accuracy, which allows other programs to better synchronize a variety of applications.	Enabled	Enables this function. This function is recommended for multimedia applications.
		Disabled	Disables this function
IOAPIC	This option is used to enable or disable the APIC (Advanced Programmable Interrupt Controller).	Enabled	The IRQ resources available to the system are expanded when APIC mode is enabled.
		Disabled	Disables this function
APIC ACPI SCI IRQ	This option is used to modify the SCI IRQ when in APIC (Advanced Programmable Interrupt Controller) mode.	Enabled	Uses IRQ20 for SCI
		Disabled	Uses IRQ9 for SCI.
POST code output	This option is used when the port 80h/84h BIOS POST code output should be routed to the PCI bus or the LPC bus.	PCI	Routes port 80h/84h to the PCI bus
		LPC	Routes port 80h/84h to the LPC bus

Table 144: GM45 Advanced - Chipset settings - Configuration options

1.4.7 I/O interface configuration

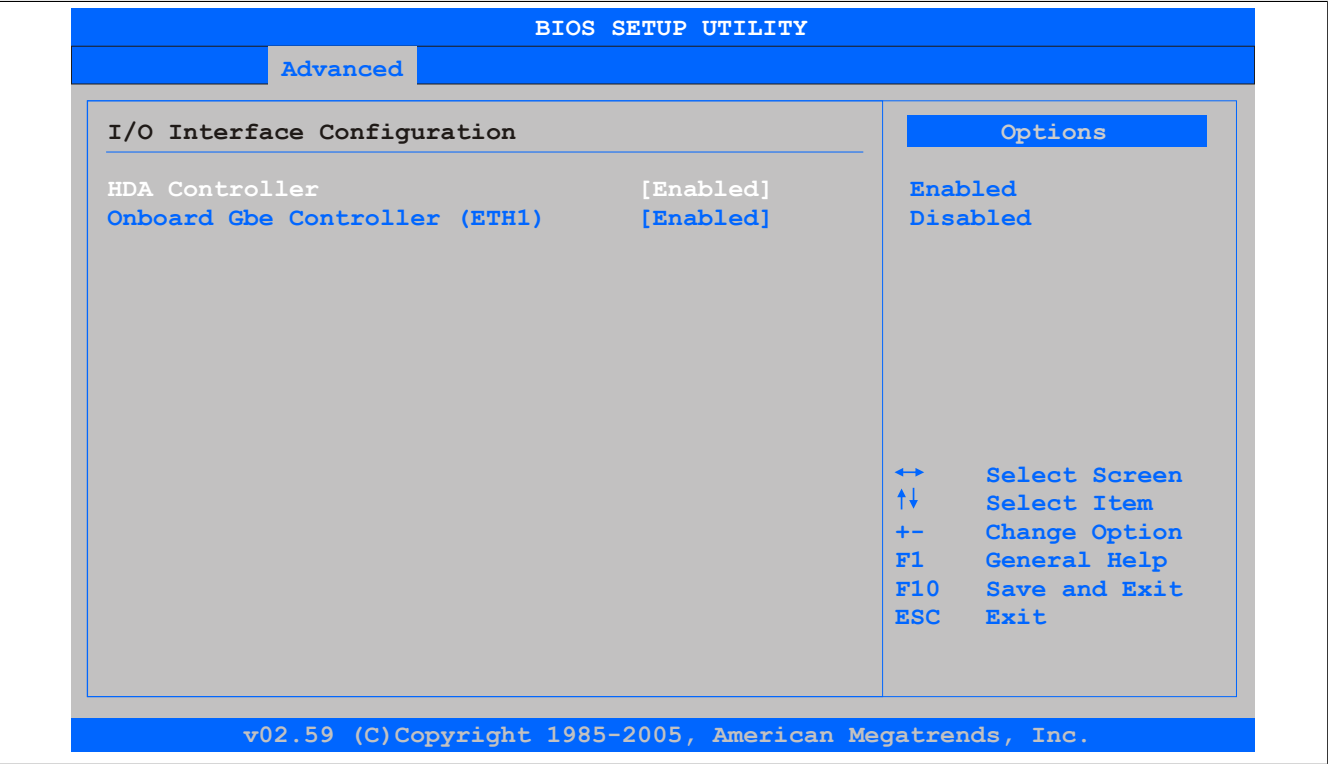


Figure 97: GM45 Advanced - I/O interface configuration

BIOS setting	Function	Configuration options	Effect
HDA controller	This option is used to turn the HDA controller on or off.  <b>Information:</b>  The GM45 CPU board does not have a sound controller.	Enabled	Enables the HDA controller
		Disabled	Disables the HDA controller
Onboard Gbe controller (ETH1)	This option is used to turn the onboard Ethernet controller on or off.	Disabled	Disables the onboard Ethernet controller
		Enabled	Enables the onboard Ethernet controller

Table 145: GM45 Advanced - I/O interface configuration - Configuration options

## 1.4.8 Clock configuration

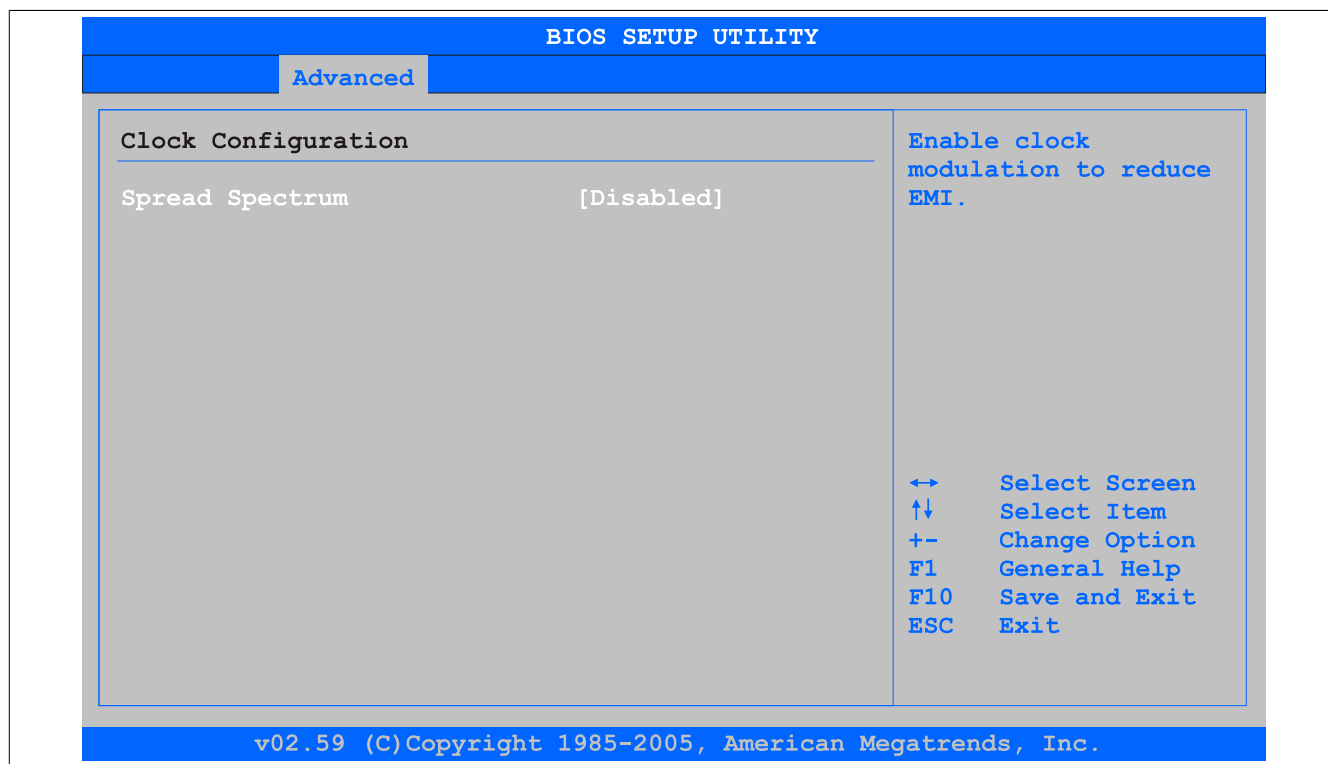


Figure 98: GM45 Advanced - Clock configuration

BIOS settings	Function	Configuration options	Effect
Spread spectrum	This option is used to modulate the cycle frequency to slightly reduce electromagnetic interference.	Enabled	Enables this function
		Disabled	Disables this function

Table 146: GM45 Advanced - Clock configuration - Configuration options

## 1.4.9 IDE configuration

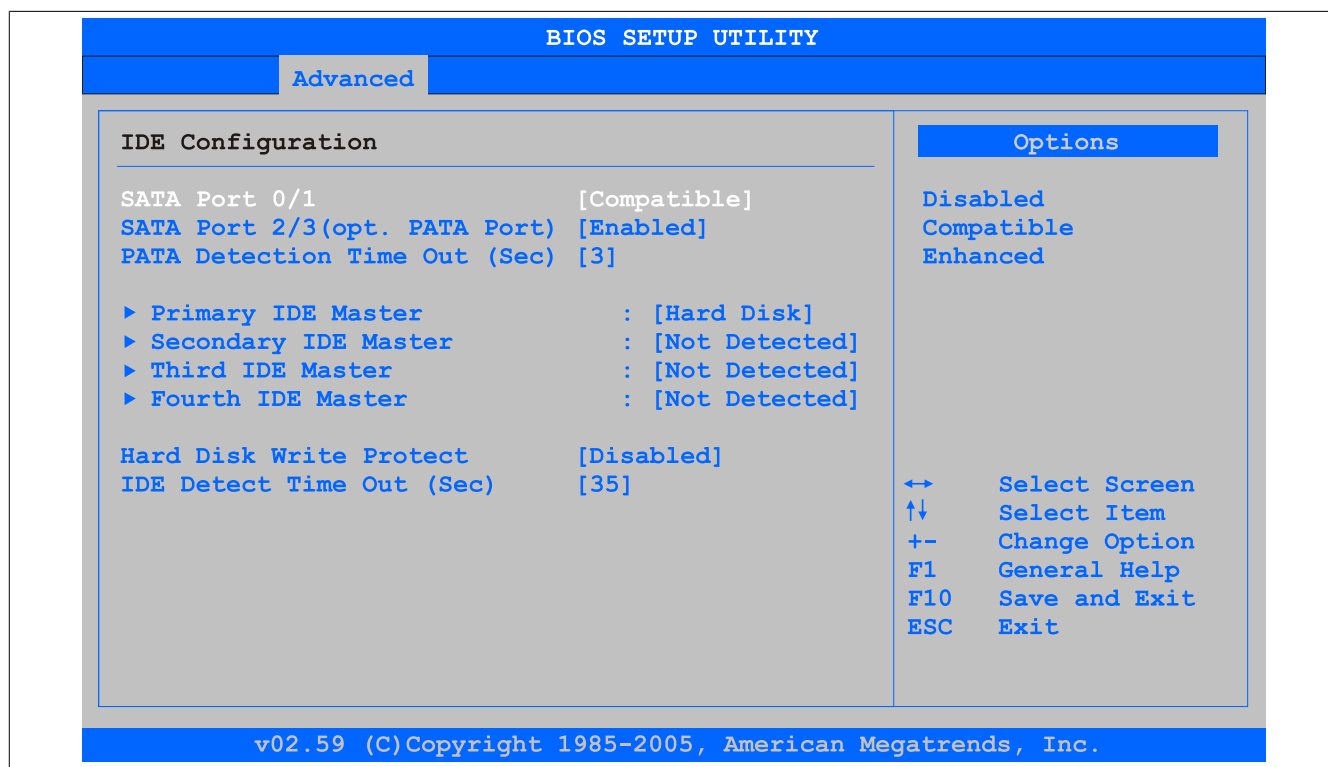


Figure 99: GM45 Advanced - IDE configuration

BIOS settings	Function	Configuration options	Effect
SATA port 0/1	Option for configuring the integrated SATA controller	Compatible	The controller runs in Legacy or Compatible mode.
		Disabled	Disables the controller and both ports
		Enhanced	The controller runs in Enhanced or Native mode.
Configure SATA port 0/1 as <sup>1)</sup>	Allows the serial ATA connections 0/1 supported by the southbridge to be defined	IDE	Uses the serial ATA hard drive as a parallel ATA physical drive
		RAID	RAID 0, 1, 5, 10 or Intel® Matrix Storage technology can be configured here with the serial ATA hard drive.
		AHCI	The AHCI setting enables the internal memory driver for SATA functions, which increases the storage performance for random read-write access by allowing the drive itself to determine the sequence of commands.
Hot plug <sup>2)</sup>	Option for turning SATA hot plugging support on or off	Disabled	Disables this function
		Enabled	Enables this function
SATA port 2/3 (opt. PATA port)	Option for turning integrated SATA controllers 2 and 3 on or off	Disabled	Disables this function
		Enabled	Enables this function
PATA detection time out (sec) <sup>3)</sup>	Configures the time overrun limit for ATA/ATAPI device detection. This option only applies for PATA channels.	0, 1, 2, 3, 5, 10, 15, 30	Time setting in seconds
Primary IDE master	Option for configuring the drive in the system that is connected to the primary IDE master port	Enter	Opens the submenu see "Primary IDE master" on page 187
Secondary IDE master	Option for configuring the drive in the system that is connected to the secondary IDE master port	Enter	Opens the submenu see "Secondary IDE master" on page 188
Third IDE master	Option for configuring the drive in the system that is connected to the third IDE master port  <b>Information:</b>  The third IDE master is not occupied on PPC800 devices. These settings therefore do not apply.	Enter	Opens the submenu see "Third IDE master" on page 189
Fourth IDE master	Option for configuring the drive in the system that is connected to the fourth IDE master port	Enter	Opens the submenu see "Fourth IDE master" on page 190
Hard disk write protect	Option for enabling/disabling write protection for the hard drive	Enabled	Enables this function
		Disabled	Disables this function
IDE detect time out (sec)	Configures the time overrun limit for ATA/ATAPI device detection. This option applies for SATA and PATA channels.	0, 5, 10, 15, 20, 25, 30, 35	Time setting in seconds

Table 147: GM45 Advanced - IDE configuration - Configuration options

- 1) These settings are only possible if *SATA port 0/1* is set to *Enhanced*.  
2) These settings are only possible if *Configure SATA port 0/1* is set to *RAID* or *AHCI*.  
3) These settings are only possible if *SATA port 2/3 (opt. PATA port)* is set to *Enhanced*.

## 1.4.9.1 Primary IDE master

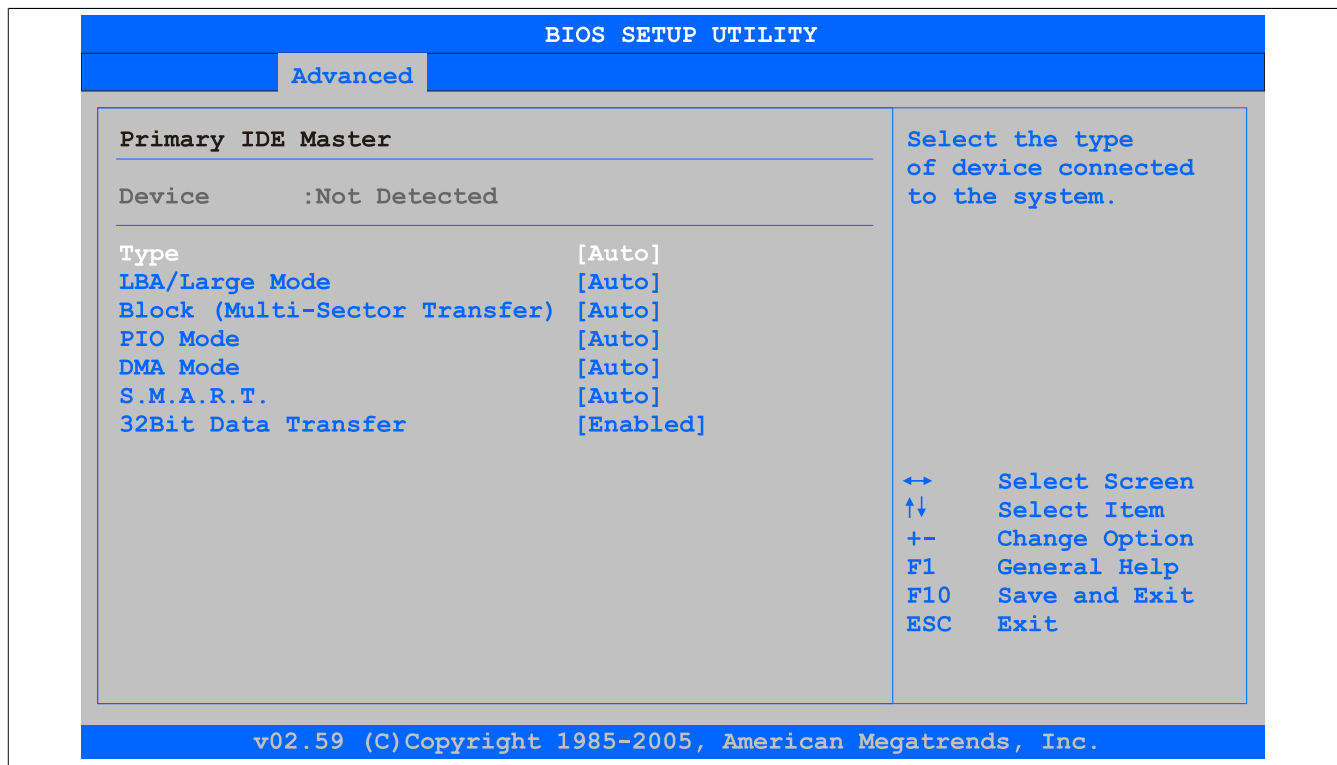


Figure 100: GM45 Advanced - Primary IDE master

BIOS settings	Function	Configuration options	Effect
Type	Configures the type of drive connected to the primary master	Not installed	No drive installed
		Auto	Automatically detects the drive and configures the necessary values
		CD/DVD	CD/DVD drive
		ARMD	ARMD drive (zip drive)
LBA/Large mode	This option enables IDE logical block addressing / large mode.	Disabled	Disables this function
		Auto	Automatically enables this function if supported by the system
Block (multi-sector transfer)	This option enables block mode for IDE hard drives. If this option is enabled, the number of blocks per request is read from the configuration sector of the hard drive.	Disabled	Disables this function
		Auto	Automatically enables this function if supported by the system
PIO mode	PIO mode determines the data rate of the hard drive.  <b>Information:</b>  This option is not available on the PPC800. This setting therefore does not apply.	Auto	Configures PIO mode automatically
		0, 1, 2, 3, 4	Configures PIO mode manually
DMA mode	Defines the data transfer rate to and from the primary master drive. DMA mode must be enabled activated in the Windows Device Manager in order to guarantee maximum performance. This is only possible when manually setting up the drive.	Auto	Defines the transfer rate automatically
		Disabled	Defines the transfer rate manually
S.M.A.R.T.	Monitoring function for hard drives (Self-Monitoring, Analysis and Reporting Technology)	Auto	Detected and enabled automatically
		Enabled	Enables this function
		Disabled	Disables this function
32 bit data transfer	Enables 32-bit data transfer	Enabled	Enables this function
		Disabled	Disables this function

Table 148: GM45 Advanced - Primary IDE master - Configuration options

## 1.4.9.2 Secondary IDE master

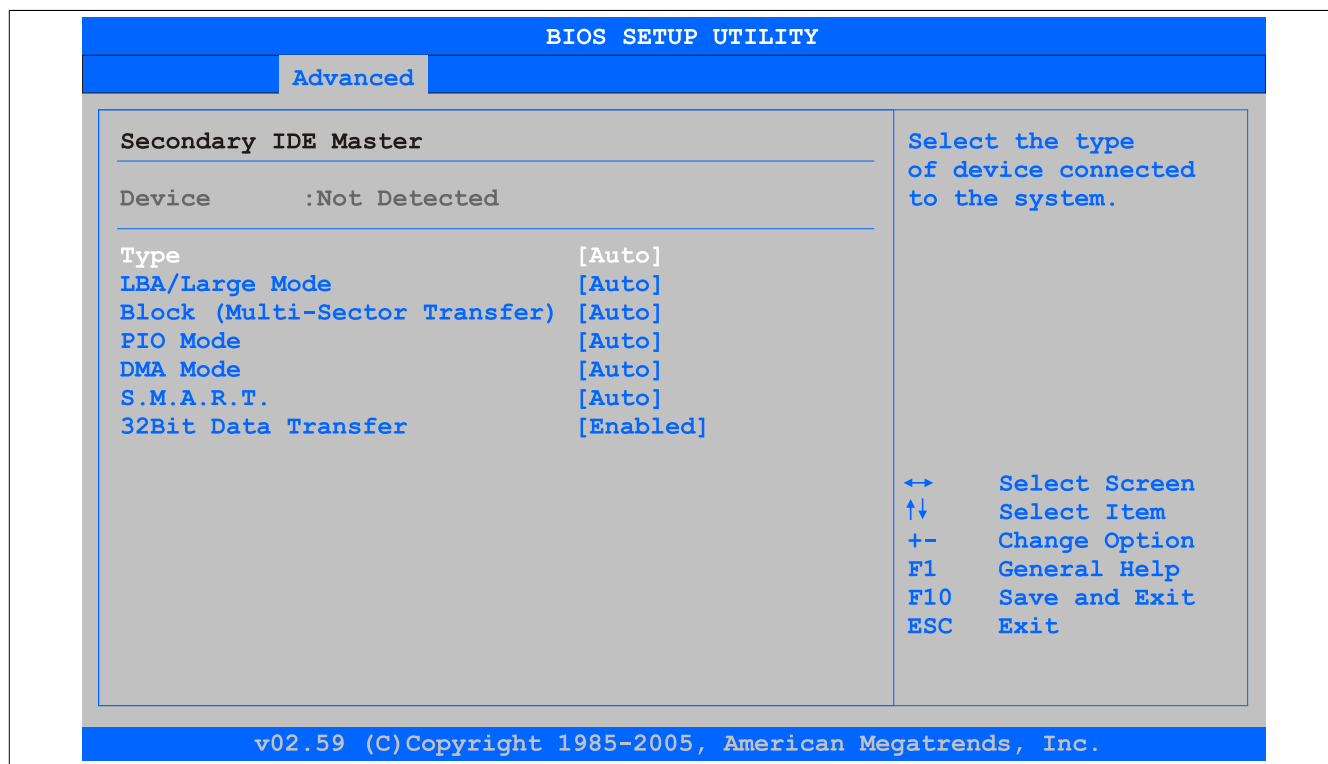


Figure 101: GM45 Advanced - Secondary IDE master

BIOS settings	Function	Configuration options	Effect
Type	Configures the type of drive connected to the secondary master	Not installed	No drive installed
		Auto	Automatically detects the drive and configures the necessary values
		CD/DVD	CD/DVD drive
		ARMD	ARMD drive (zip drive)
LBA/Large mode	This option enables IDE logical block addressing / large mode.	Disabled	Disables this function
		Auto	Automatically enables this function if supported by the system
Block (multi-sector transfer)	This option enables block mode for IDE hard drives. If this option is enabled, the number of blocks per request is read from the configuration sector of the hard drive.	Disabled	Disables this function
		Auto	Automatically enables this function if supported by the system
PIO mode	PIO mode determines the data rate of the hard drive.  <b>Information:</b>  This option is not available on the PPC800. This setting therefore does not apply.	Auto	Configures PIO mode automatically
		0, 1, 2, 3, 4	Configures PIO mode manually
DMA mode	The data transfer rate to and from the secondary master drive is defined here. DMA mode must be enabled activated in the Windows Device Manager in order to guarantee maximum performance. This is only possible when manually setting up the drive.	Auto	Defines the transfer rate automatically
		Disabled	Defines the transfer rate manually
S.M.A.R.T.	Monitoring function for hard drives (Self-Monitoring, Analysis and Reporting Technology)	Auto	Detected and enabled automatically
		Enabled	Enables this function
		Disabled	Disables this function
32 bit data transfer	Enables 32-bit data transfer	Enabled	Enables this function
		Disabled	Disables this function

Table 149: GM45 Advanced - Secondary IDE master - Configuration options



## 1.4.9.3 Third IDE master

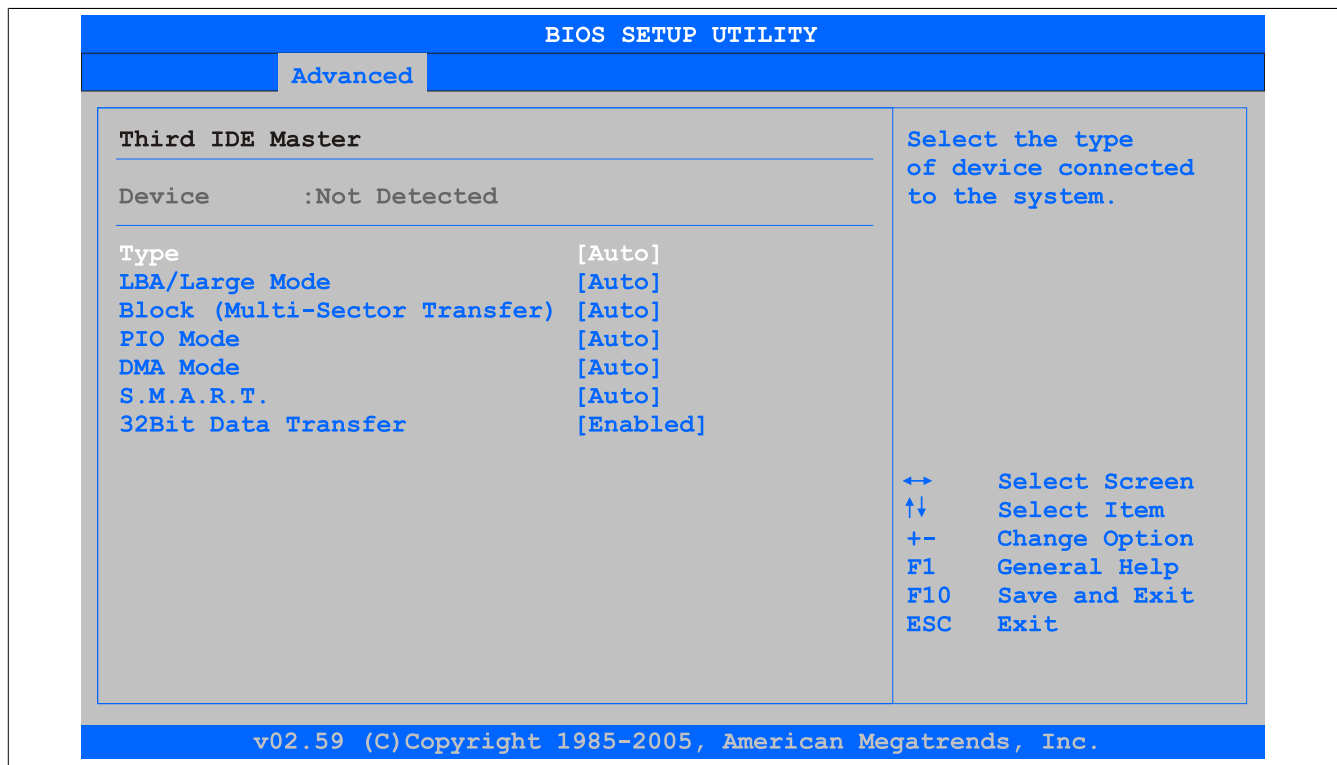


Figure 102: GM45 Advanced - Third IDE master

BIOS settings	Function	Configuration options	Effect
Type	Configures the type of drive connected to the third master	Not installed	No drive installed
		Auto	Automatically detects the drive and configures the necessary values
		CD/DVD	CD/DVD drive
		ARMD	ARMD drive (zip drive)
LBA/Large mode	This option enables IDE logical block addressing / large mode.	Disabled	Disables this function
		Auto	Automatically enables this function if supported by the system
Block (multi-sector transfer)	This option enables block mode for IDE hard drives. If this option is enabled, the number of blocks per request is read from the configuration sector of the hard drive.	Disabled	Disables this function
		Auto	Automatically enables this function if supported by the system
PIO mode	PIO mode determines the data rate of the hard drive.  <b>Information:</b>  This option is not available on the PPC800. This setting therefore does not apply.	Auto	Configures PIO mode automatically
		0, 1, 2, 3, 4	Configures PIO mode manually
DMA mode	The data transfer rate to and from the third master drive is defined here. DMA mode must be enabled activated in the Windows Device Manager in order to guarantee maximum performance. This is only possible when manually setting up the drive.	Auto	Defines the transfer rate automatically
		Disabled	Defines the transfer rate manually
S.M.A.R.T.	Monitoring function for hard drives (Self-Monitoring, Analysis and Reporting Technology)	Auto	Detected and enabled automatically
		Enabled	Enables this function
		Disabled	Disables this function
32 bit data transfer	Enables 32-bit data transfer	Enabled	Enables this function
		Disabled	Disables this function

Table 150: GM45 Advanced - Third IDE master - Configuration options

## 1.4.9.4 Fourth IDE master

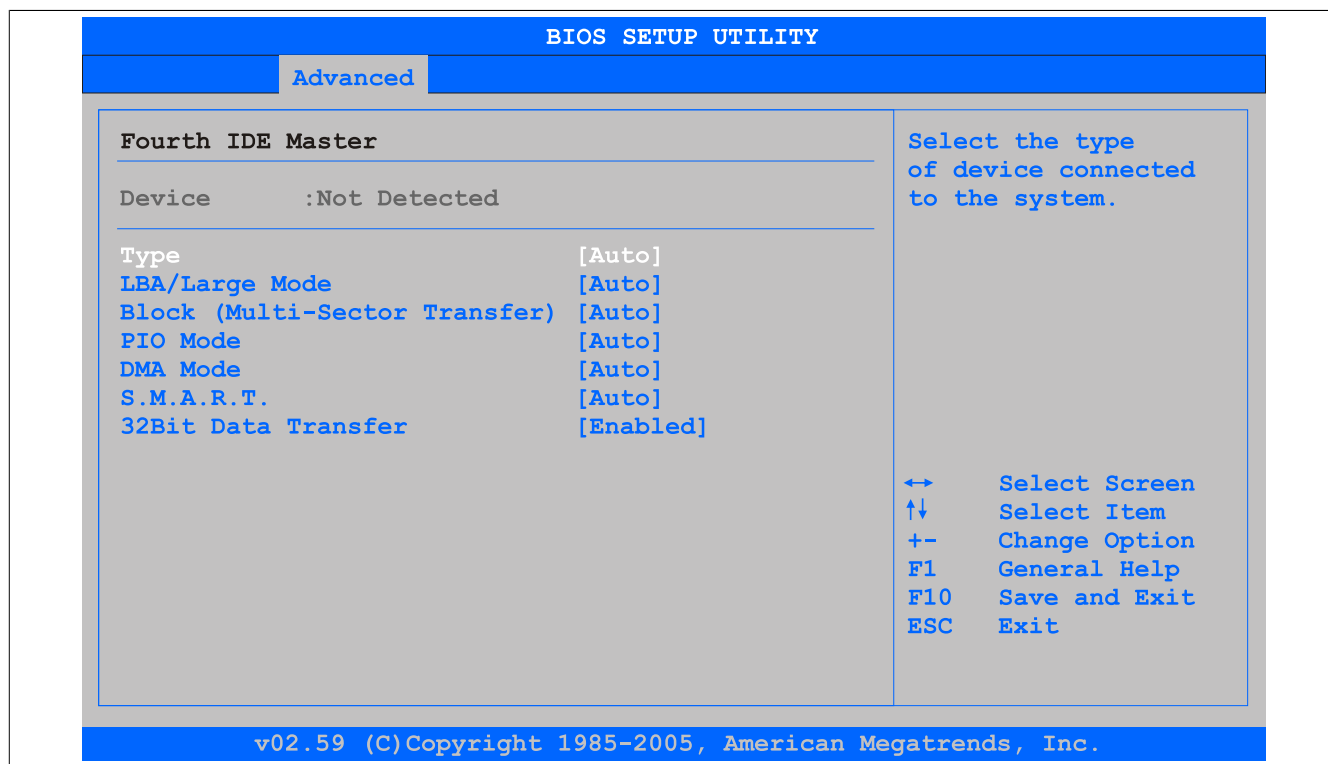


Figure 103: GM45 Advanced - Fourth IDE master

BIOS settings	Function	Configuration options	Effect
Type	Configures the type of drive connected to the fourth master	Not installed	No drive installed
		Auto	Automatically detects the drive and configures the necessary values
		CD/DVD	CD/DVD drive
		ARMD	ARMD drive (zip drive)
LBA/Large mode	This option enables IDE logical block addressing / large mode.	Disabled	Disables this function
		Auto	Automatically enables this function if supported by the system
Block (multi-sector transfer)	This option enables block mode for IDE hard drives. If this option is enabled, the number of blocks per request is read from the configuration sector of the hard drive.	Disabled	Disables this function
		Auto	Automatically enables this function if supported by the system
PIO mode	PIO mode determines the data rate of the hard drive.  <b>Information:</b>  This option is not available on the PPC800. This setting therefore does not apply.	Auto	Configures PIO mode automatically
		0, 1, 2, 3, 4	Configures PIO mode manually
DMA mode	The data transfer rate to and from the fourth master drive is defined here. DMA mode must be enabled activated in the Windows Device Manager in order to guarantee maximum performance. This is only possible when manually setting up the drive.	Auto	Defines the transfer rate automatically
		Disabled	Defines the transfer rate manually
S.M.A.R.T.	Monitoring function for hard drives (Self-Monitoring, Analysis and Reporting Technology)	Auto	Detected and enabled automatically
		Enabled	Enables this function
		Disabled	Disables this function
32 bit data transfer	Enables 32-bit data transfer	Enabled	Enables this function
		Disabled	Disables this function

Table 151: GM45 Advanced - Fourth IDE master - Configuration options

## 1.4.10 USB configuration

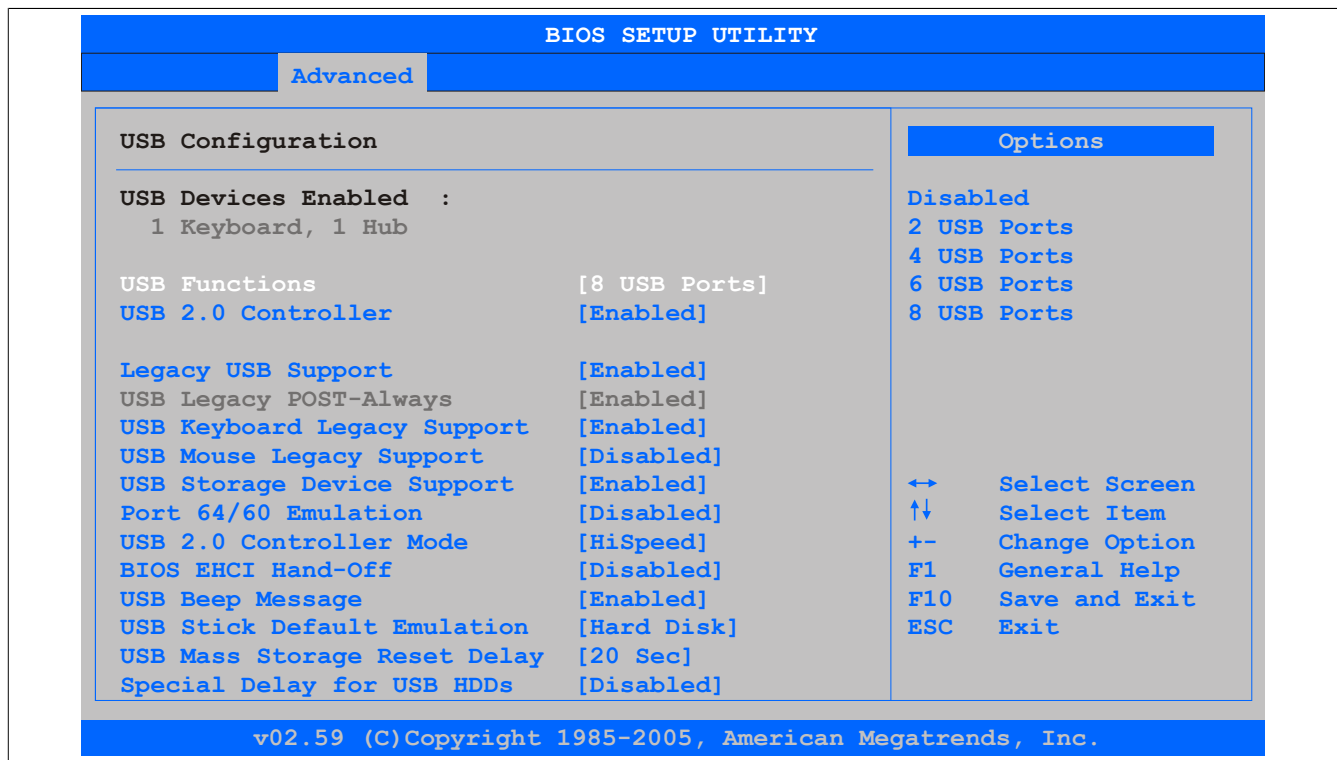


Figure 104: GM45 Advanced - USB configuration

BIOS setting	Function	Configuration options	Effect
USB functions	Enables/Disables USB ports USB numbers (USB1, USB3, etc.) are printed on the PPC800 housing.	Disabled	Disables the USB port
		2 USB ports	Enables USB1 and USB3
		4 USB ports	Enables USB1, USB2, USB3 and USB4
		6 USB ports	Enables USB1, USB2, USB3, USB4 and USB5
		8 USB ports	Enables USB1, USB2, USB3, USB4, USB5 and USB on an AP via SDL
USB 2.0 controller	Option for enabling or disabling USB 2.0 mode	Enabled	Uses USB 2.0 for all USB ports
		Disabled	Uses USB 1.1 for all USB ports
Legacy USB support	Enables/Disables Legacy USB support USB ports do not function during startup. USB support is available again after the operating system has started. A USB keyboard is still recognized during POST.	Enabled	Enables this function
		Disabled	Disables this function
		Auto	Automatic enabling
USB Legacy POST-always	Legacy USB support is enabled during the POST (Power On Self Test) regardless of the Legacy USB support setting.	None (automatically enabled)	Allows BIOS Setup to be opened during POST using a USB keyboard
USB keyboard Legacy support	Enables/Disables USB keyboard support	Enabled	Enables this function
		Disabled	Disables this function
USB mouse Legacy support	Enables/Disables USB mouse support	Enabled	Enables this function
		Disabled	Disables this function
USB storage device support	Enables/Disables USB mass storage device support	Enabled	Enables this function
		Disabled	Disables this function
Port 64/60 emulation	Enables/Disables port 64/60 emulation	Enabled	Allows USB keyboard functionality in Windows NT
		Disabled	Allows USB keyboard functionality on all systems except Windows NT
USB 2.0 controller mode	Configures the USB controller	Full speed	12 MBps
		Hi speed	480 MBps
BIOS EHCI hand-off	Allows support for operating systems to be set up without the fully automatic EHCI function	Enabled	Enables this function
		Disabled	Disables this function
USB beep message	Option for emitting a tone each time a USB device is detected by BIOS during POST	Enabled	Enables this function
		Disabled	Disables this function
USB stick default emulation	Configures how a USB device is to be used	Auto	USB devices with less than 530 MB of memory are simulated as floppy disk drives. Devices with larger memory capacity are simulated as hard drives.
		Hard disk drive	An HDD-formatted drive can be used as an FDD (e.g. zip drive) to start the system.

Table 152: GM45 Advanced - USB configuration - Configuration options

BIOS setting	Function	Configuration options	Effect
USB mass storage reset delay	Option for configuring the time that POST waits for USB memory storage devices after the device start command is issued  <b>Information:</b>  The message "No USB mass storage device detected" is displayed if a USB memory device has not been installed.	10 sec, 20 sec, 30 sec, 40 sec	Sets the value manually
Special delay for USB HDDs	Option for setting a boot delay prior to counting the number of USB 2.0 devices in order to allow more time for USB devices that generally take longer to boot (e.g. USB hard disks)  <b>Information:</b>  This option should only be used if absolutely necessary; otherwise, it would unnecessarily extend the boot procedure by the configured time.	Disabled	Disables this function. Doesn't add a boot delay.
		1 sec, 2 sec, 3 sec, 4 sec, 5 sec, 7 sec, 10 sec	Adds a boot delay of 1, 2, 3, 4, 5, 7 or 10 seconds

Table 152: GM45 Advanced - USB configuration - Configuration options

### 1.4.11 Keyboard/Mouse configuration

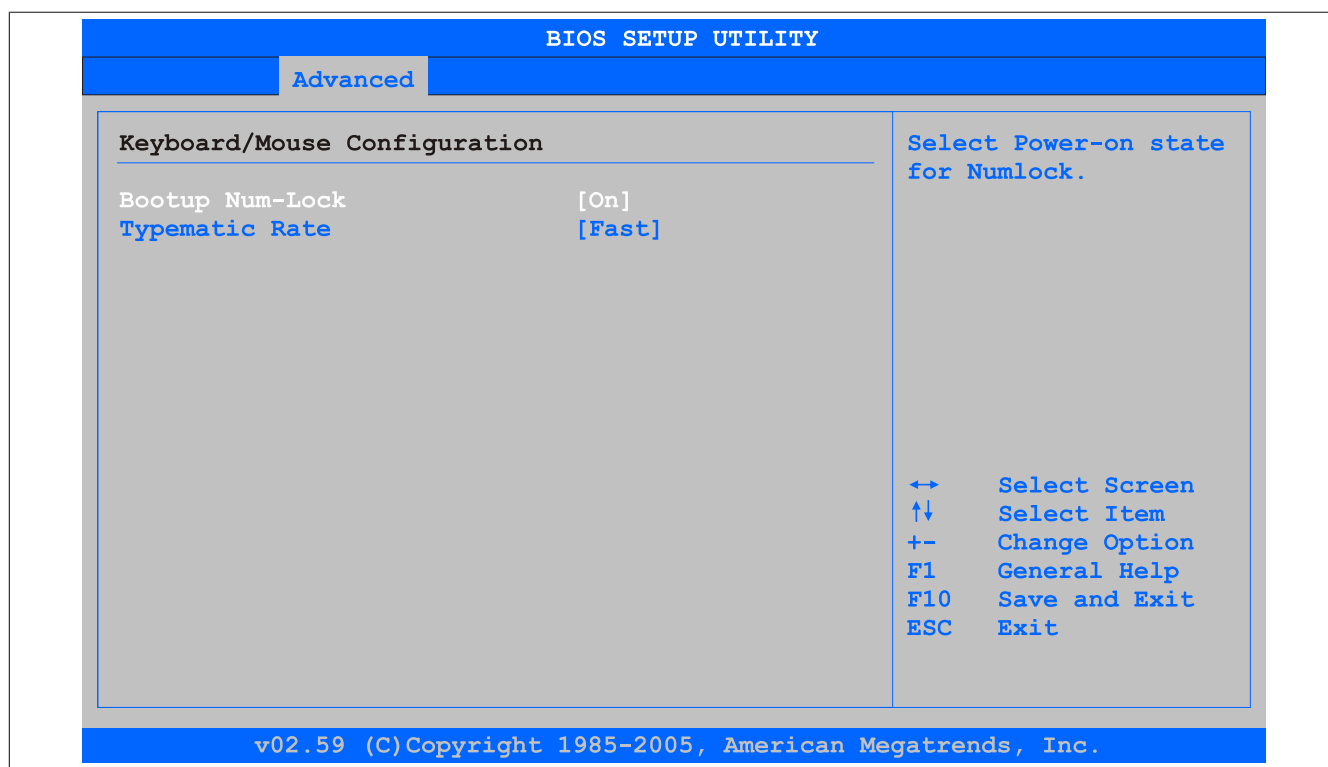


Figure 105: GM45 Advanced - Keyboard/Mouse configuration

BIOS setting	Function	Configuration options	Effect
Bootup Num-lock	Defines the state of the NumLock key on the numeric keypad when booting	Off	Only enables the cursor (movement) functions of the numeric keypad
		On	Enables the numeric keypad
Typematic rate	Configures the key repeat function	Slow	Slow key repeat
		Fast	Fast key repeat

Table 153: GM45 Advanced - Keyboard/Mouse configuration - Configuration options

## 1.4.12 CPU board monitor

**Information:**

The voltage values (e.g. core voltage, battery voltage) displayed on this BIOS Setup screen represent uncalibrated values for informational purposes. They cannot be used to draw any conclusions about hardware alarms or error conditions. The hardware components used have automatic diagnostic functions that can be applied in the event of error.

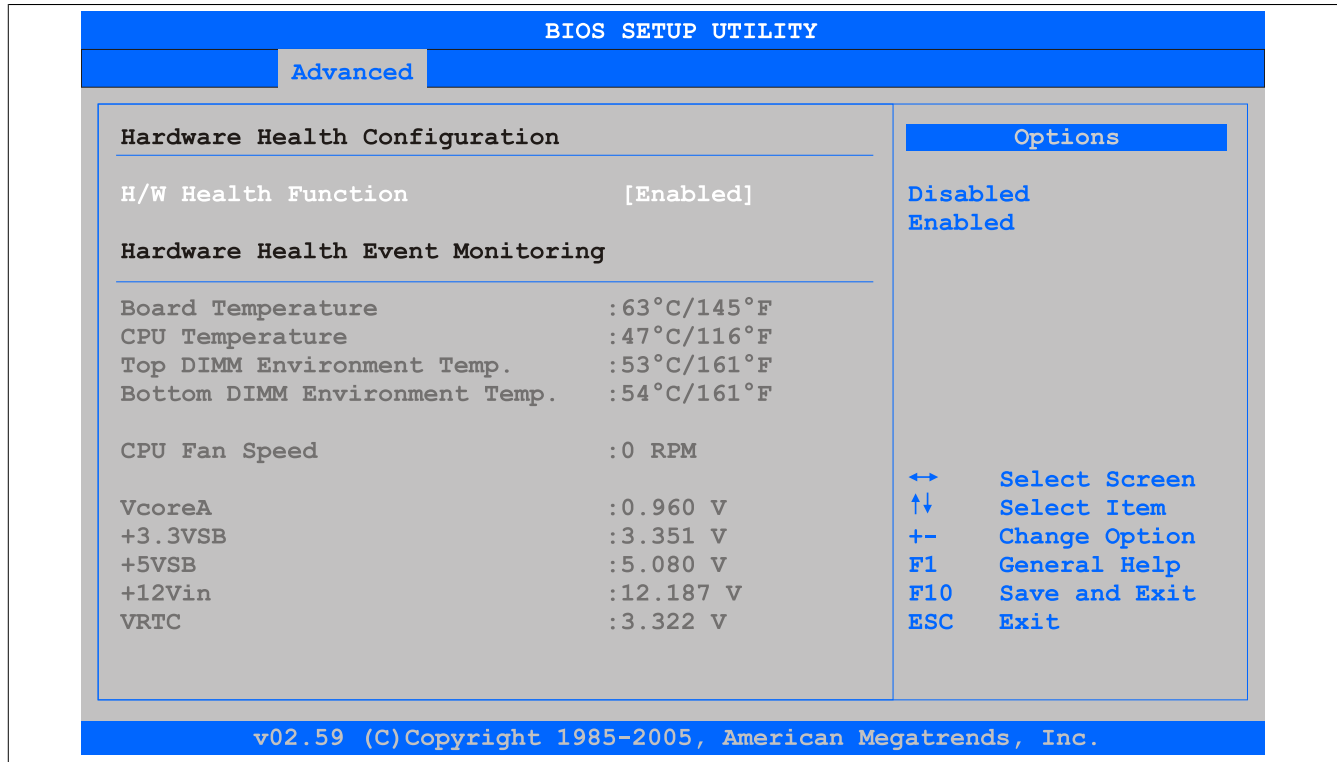


Figure 106: GM45 Advanced - CPU board monitor

BIOS setting	Function	Configuration options	Effect
H/W health function	Option for displaying all values on this screen	Enabled	Displays all values
		Disabled	Displays no value on this screen
Board temperature	Displays the board temperature in degrees Celsius and Fahrenheit	None	-
CPU temperature	Displays the processor's temperature (in degrees Celsius and Fahrenheit)	None	-
Top DIMM environment temp.	Displays the temperature of the first DRAM module	None	-
Bottom DIMM environment temp.	Displays the temperature of the second DRAM module	None	-
CPU fan speed	Displays the speed of the processor fan	None	-
VcoreA	Displays the processor core voltage A in volts	None	-
+3.3VSB	Displays the current voltage of the 3.3 volt supply	None	-
+5VSB	Displays the current voltage of the 5 volt supply	None	-
+12Vin	Displays the current voltage of the 12 volt supply	None	-
VRTC	Displays the battery voltage in volts	None	-

Table 154: GM45 Advanced - CPU board monitor - Configuration options

## 1.4.13 Baseboard/Panel features

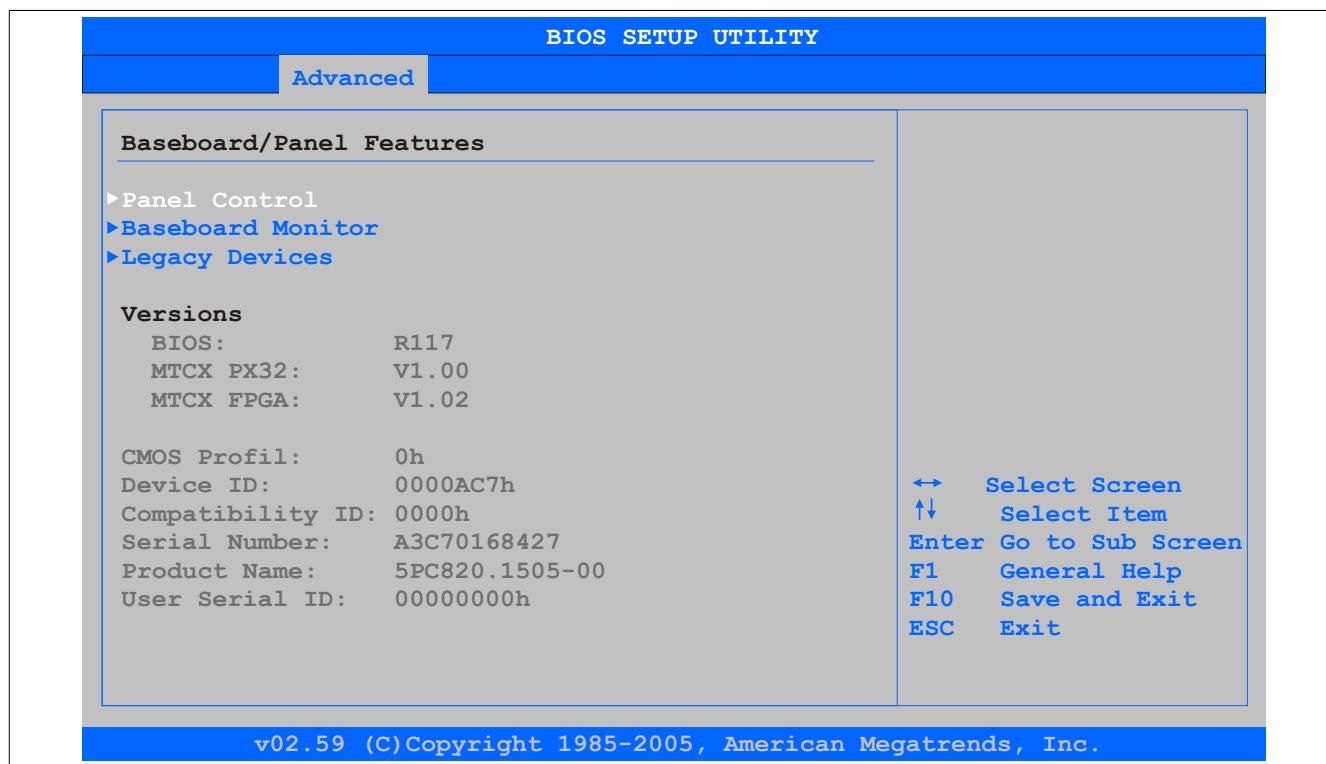


Figure 107: GM45 Advanced - Baseboard/Panel features

BIOS setting	Function	Configuration options	Effect
<b>Panel control</b>	Configures special settings for connected panels (display units)	Enter	Opens the submenu see "Panel control" on page 195
<b>Baseboard monitor</b>	Displays various temperatures and fan speeds	Enter	Opens the submenu see "Baseboard monitor" on page 196
<b>Legacy devices</b>	Configures special settings for interfaces	Enter	Opens the submenu see "Legacy devices" on page 197
BIOS	Displays the BIOS version	None	-
MTCX PX32	Displays the MTCX PX32 firmware version	None	-
MTCX FPGA	Displays the MTCX FPGA firmware version	None	-
CMOS profile	Displays the CMOS profile number	None	-
Device ID	Displays the hexadecimal value of the hardware device ID	None	-
Compatibility ID	Displays the version of the device within the same B&R device ID. This ID is needed for Automation Runtime.	None	-
Serial number	Displays the B&R serial number	None	-
Product name	Displays the B&R model number	None	-
User serial ID	Displays the user serial ID. This 8-digit hexadecimal value can be freely specified by the user (e.g. to give the device a unique ID) and can only be changed using the "B&R Control Center" included with the ADI driver.	None	-

Table 155: GM45 Advanced - Baseboard/Panel features - Configuration options

## 1.4.13.1 Panel control

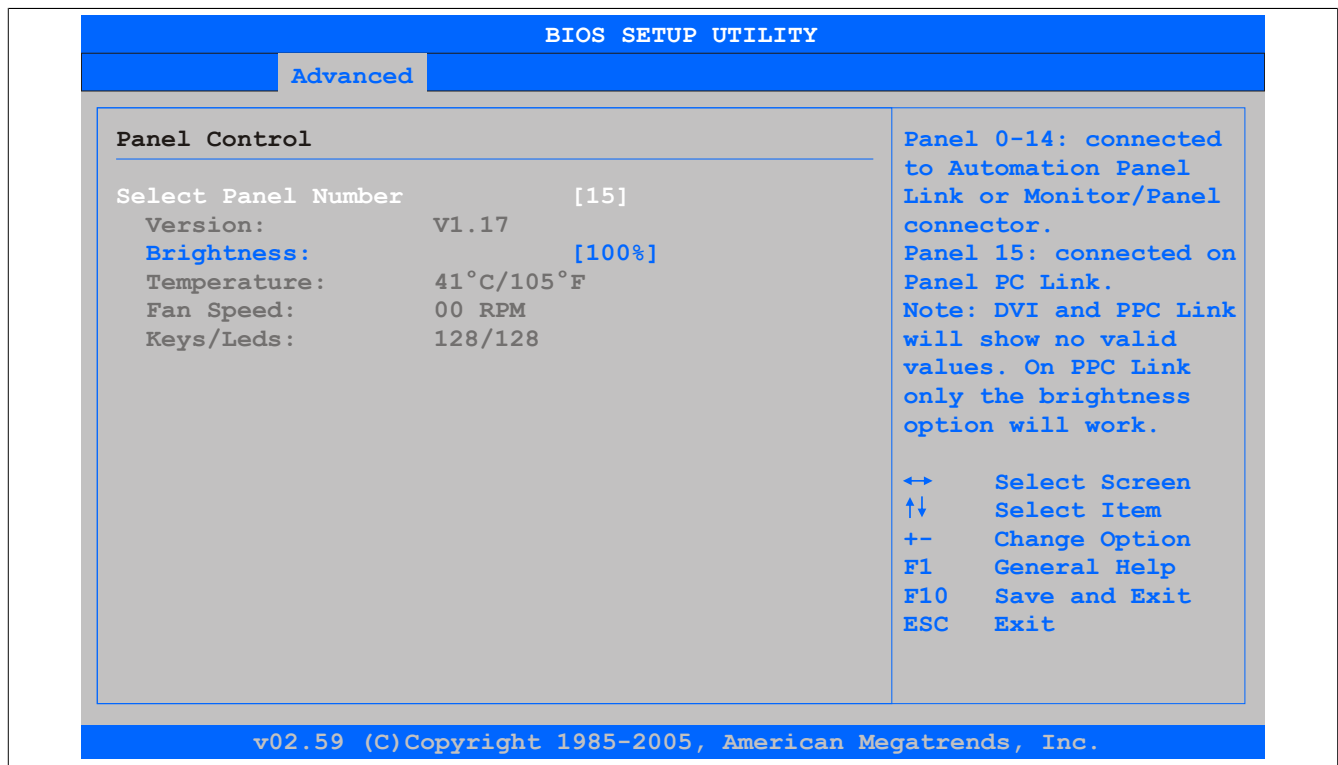


Figure 108: GM45 Advanced - Panel control

BIOS setting	Function	Configuration options	Effect
Select panel number	Selects the panel number for which the values should be displayed and/or changed	0...15	Selects panel 0-15 Panel 15 is specifically intended for Panel PC 800 systems.
Version	Displays the firmware version of the SDLR controller	None	-
Brightness	Sets the brightness of the selected panel	0%, 10%, 20%, 30%, 40%, 50%, 60%, 70%, 80%, 90%, 100%	Sets the brightness (in %) of the selected panel. Changes take effect after saving and restarting the system (e.g. by pressing <F10>).
Temperature	Displays the selected panel's temperature in degrees Celsius and Fahrenheit	None	-
Fan speed	Displays the fan speed for the selected panel	None	-
Keys/LEDs	Displays the available keys and LEDs on the selected panel	None	-

Table 156: GM45 Advanced - Panel control - Configuration options

## 1.4.13.2 Baseboard monitor

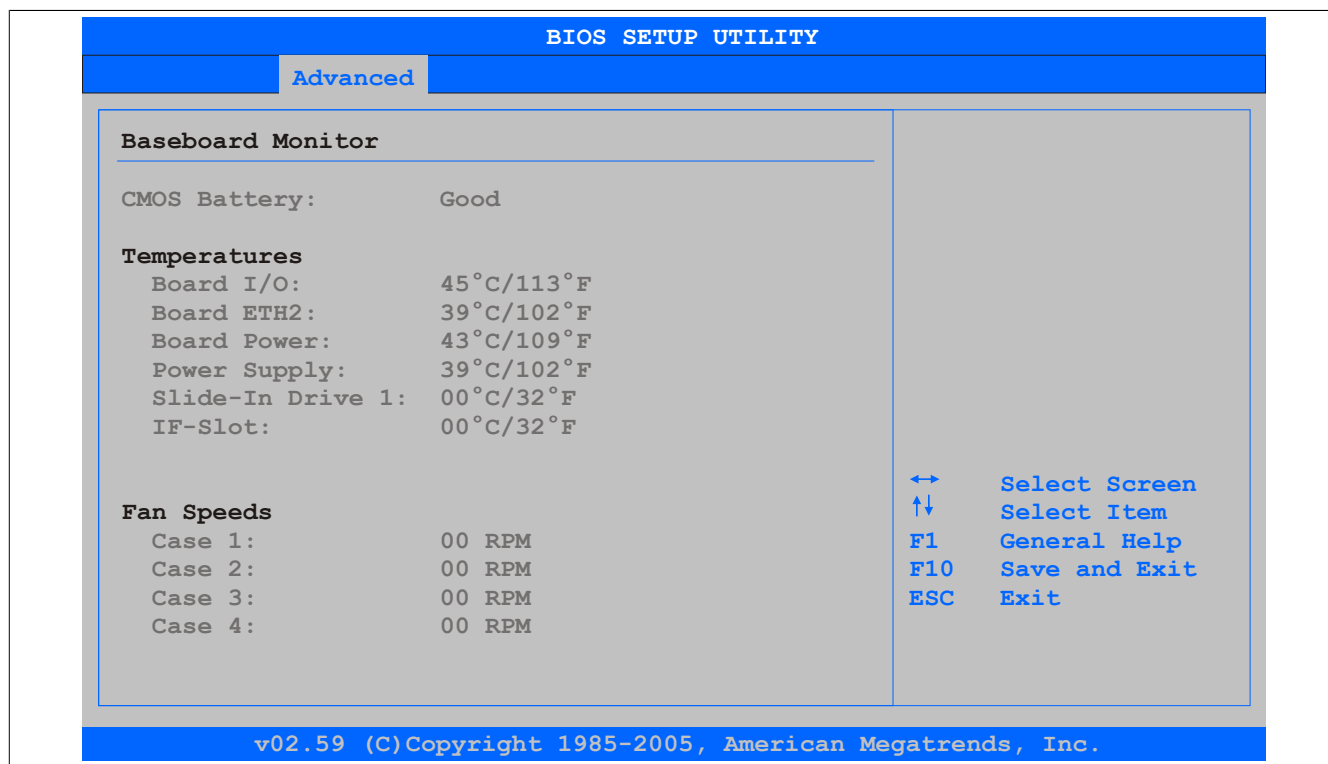


Figure 109: GM45 Advanced - Baseboard monitor

BIOS setting	Function	Configuration options	Effect
CMOS battery	Displays the battery status <b>n.a.</b> - Not available <b>Good</b> - Battery OK <b>Bad</b> - Battery not OK	None	-
Board I/O	Displays the temperature in the I/O area in degrees Celsius and Fahrenheit	None	-
Board ETH2	Displays the temperature in the ETH2 controller chip area in degrees Celsius and Fahrenheit	None	-
Board power	Displays the power supply temperature in degrees Celsius and Fahrenheit	None	-
Power supply	Displays the temperature in the power supply in degrees Celsius and Fahrenheit	None	-
Slide-in drive 1	Displays the temperature of slide-in drive 1 in degrees Celsius and Fahrenheit	None	-
IF slot	Displays the temperature of the IF slot in degrees Celsius and Fahrenheit	None	-
Case 1	Displays the speed of housing fan 1	None	-
Case 2	Displays the speed of housing fan 2	None	-
Case 3	Displays the speed of housing fan 3	None	-
Case 4	Displays the speed of housing fan 4	None	-

Table 157: GM45 Advanced - Baseboard monitor - Configuration options



## 1.4.13.3 Legacy devices

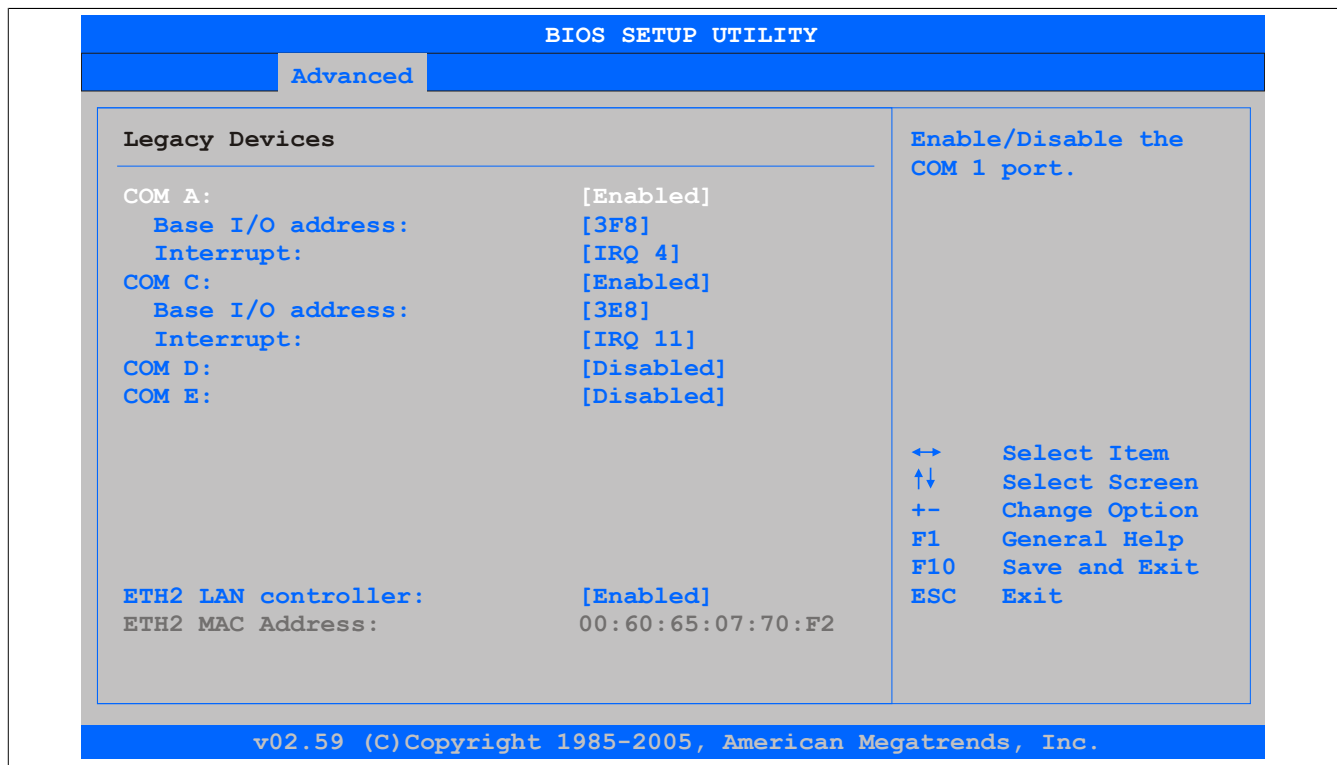


Figure 110: GM45 Advanced - Legacy devices

BIOS setting	Function	Configuration options	Effect
COM A	Settings for the <b>COM1</b> serial interface	Enabled	Enables the interface
		Disabled	Disables the interface
Base I/O address	Selects the base I/O address of the COM port	238, 2E8, 2F8, 328, 338, 3E8, 3F8	Assigns the selected base I/O address
Interrupt	Selects the interrupt for the COM port	IRQ 3, IRQ 4, IRQ 5, IRQ 6, IRQ 7, IRQ 10, IRQ 11, IRQ 12	Assigns the selected interrupt
COM C	Sets the COM port for the <b>touch screen connected to the monitor/panel</b> interface	Enabled	Enables the interface
		Disabled	Disables the interface
Base I/O address	Selects the base I/O address of the COM port	238, 2E8, 2F8, 328, 338, 3E8, 3F8	Assigns the selected base I/O address
Interrupt	Selects the interrupt for the COM port	IRQ 3, IRQ 4, IRQ 5, IRQ 6, IRQ 7, IRQ 10, IRQ 11, IRQ 12	Assigns the selected interrupt
COM D	Sets the COM port for the <b>touch screen connected to the AP Link</b> interface	Enabled	Enables the interface
		Disabled	Disables the interface
Base I/O address	Selects the base I/O address of the COM port	238, 2E8, 2F8, 328, 338, 3E8, 3F8	Assigns the selected base I/O address
Interrupt	Selects the interrupt for the COM port	IRQ 3, IRQ 4, IRQ 5, IRQ 6, IRQ 7, IRQ 10, IRQ 11, IRQ 12	Assigns the selected interrupt
COM E	Sets the COM port of the 5AC600.4851-00 <b>B&amp;R add-on interface</b>	Enabled	Enables the interface
		Disabled	Disables the interface
Base I/O address	Selects the base I/O address of the COM port	238, 2E8, 2F8, 328, 338, 3E8, 3F8	Assigns the selected base I/O address
Interrupt	Selects the interrupt for the COM port	IRQ 3, IRQ 4, IRQ 5, IRQ 6, IRQ 7, IRQ 10, IRQ 11, IRQ 12	Assigns the selected interrupt
ETH2 LAN controller	Option for turning the onboard LAN controller (ETH2) on and off	Enabled	Enables the controller
		Disabled	Disables the controller
ETH2 MAC address	Displays the MAC address of the Ethernet 2 controller	None	-

Table 158: GM45 Advanced - Legacy devices - Configuration options

## 1.5 Boot

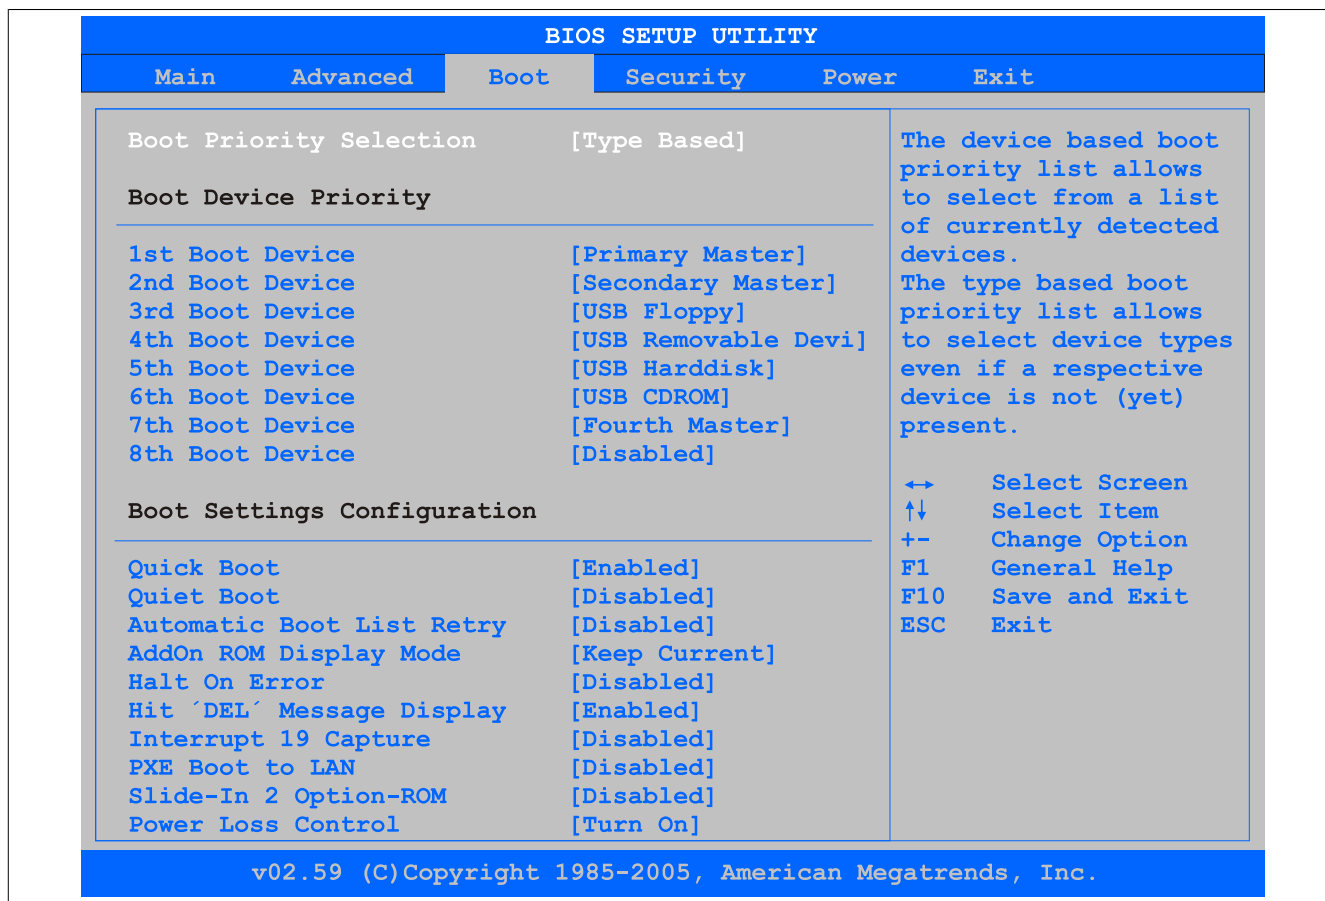


Figure 111: GM45 Boot menu

BIOS setting	Function	Configuration options	Effect
Boot priority selection	Option for determining the method for how drives should be booted	Device based	Only lists devices that are recognized by the system. The order of devices in this list can be changed.  <b>Information:</b> It is only possible to use either "Device based" or "Type based". Using both together is not permitted.
		Type based	The boot sequence of a device type list can be changed. It is also possible to add device types that are not connected to this list.  <b>Information:</b> It is only possible to use either "Device based" or "Type based". Using both together is not permitted.
1st boot device	Option for selecting drives to be used for booting	Disabled, Primary master, Primary slave, Secondary master, Secondary slave, Legacy floppy, USB floppy, USB hard disk, USB CDROM, USB removable device, Onboard LAN, External LAN, PCI mass storage, PCI SCSI card, Any PCI BEV device, Third master, Third slave, PCI RAID, Local BEV ROM, Fourth master, Fourth slave	Specifies the desired boot sequence
2nd boot device			
3rd boot device			
4th boot device			
5th boot device			
6th boot device			
7th boot device			
8th boot device			
Quick boot	This function reduces the boot time by skipping some POST procedures.	Enabled	Enables this function
		Disabled	Disables this function
Quiet boot	Determines whether the POST message or the OEM logo (default = black background) is displayed	Enabled	Displays the OEM logo instead of the POST message
		Disabled	Displays the POST message

Table 159: GM45 Boot menu - Configuration options

BIOS setting	Function	Configuration options	Effect
Automatic boot list retry	This option can be used to attempt to restart the operating system automatically if it fails to start the first time.	Enabled	Enables this function
		Disabled	Disables this function
Add-on ROM display mode	Sets the display mode for the ROM (during the booting procedure)	Force BIOS	Displays an additional part of BIOS
		Keep current	Displays BIOS information
Halt on error	This option determines the system should resume after a startup error during POST.	Enabled	Pauses the system. The system pauses each time an error occurs.
		Disabled	Does not pause the system. All errors are ignored.
Hit 'DEL' message display	Configures settings for the "Hit 'DEL'" message	Enabled	Displays the message
		Disabled	Does not display the message
Interrupt 19 capture	This function can be used to include BIOS interruptions.	Enabled	Enables this function
		Disabled	Disables this function
PXE boot to LAN	Enables/disables the function to boot from LAN (ETH1)	Enabled	Enables this function
		Disabled	Disables this function
Slide-in 2 optional ROM	Enables/Disables optional ROM for a slide-in 2 drive	Enabled	Enables this function
		Disabled	Disables this function
Power loss control	Specifies whether the system should be on/off following power loss	Remain off	System remains off
		Turn on	System powered on
		Last state	Enables the previous state

Table 159: GM45 Boot menu - Configuration options

## 1.6 Security

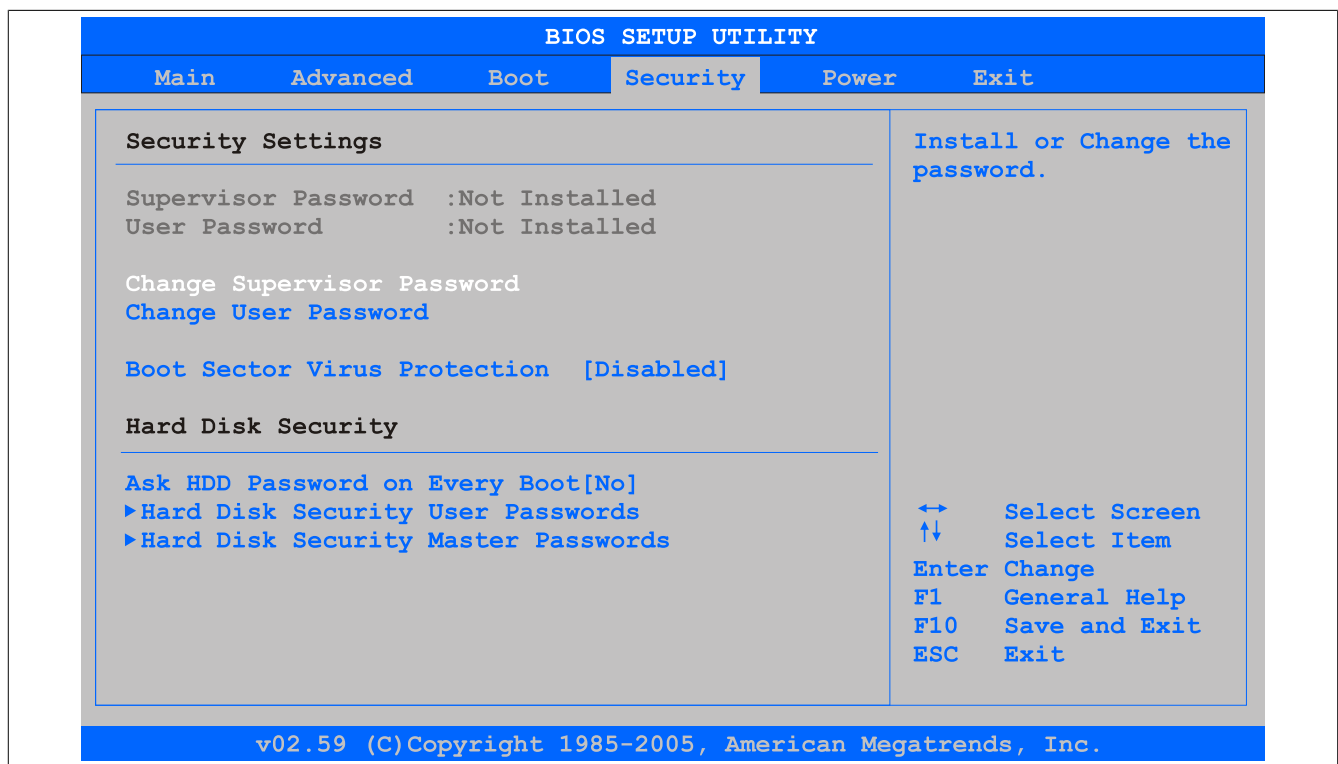


Figure 112: GM45 Security menu

BIOS setting	Function	Configuration options	Effect
Supervisor password	Displays whether a supervisor password has been set	None	-
User password	Displays whether a user password has been set	None	-
Change supervisor password	Function for entering/changing a supervisor password. A supervisor password is necessary to edit all BIOS settings.	Enter	Password entry
Change user password	Function for entering/changing a user password. The user password allows the user to edit only certain BIOS settings.	Enter	Password entry

Table 160: GM45 Security menu - Configuration options

BIOS setting	Function	Configuration options	Effect
Boot sector virus protection	This option is used to issue a warning when the boot sector is accessed by a program or virus.  <b>Information:</b>  This option only protects the boot sector, not the entire hard drive.	Enabled	Enables this function
		Disabled	Disables this function
Ask HDD Password on Every Boot	This option can be used to select whether the hard disk password must be entered each time the system boots.  <b>Information:</b>  This option only makes sense if a hard disk user security password is set.	Yes	The hard disk password must be entered when booting.
		No	The hard disk password doesn't have to be entered when booting.
Hard disk security user passwords	Creates the hard disk security user password	Enter	Opens the submenu see "Hard disk security user password" on page 200
Hard disk security master passwords	Creates the hard disk security master password	Enter	Opens the submenu see "Hard disk security master password" on page 201

Table 160: GM45 Security menu - Configuration options

### 1.6.1 Hard disk security user password

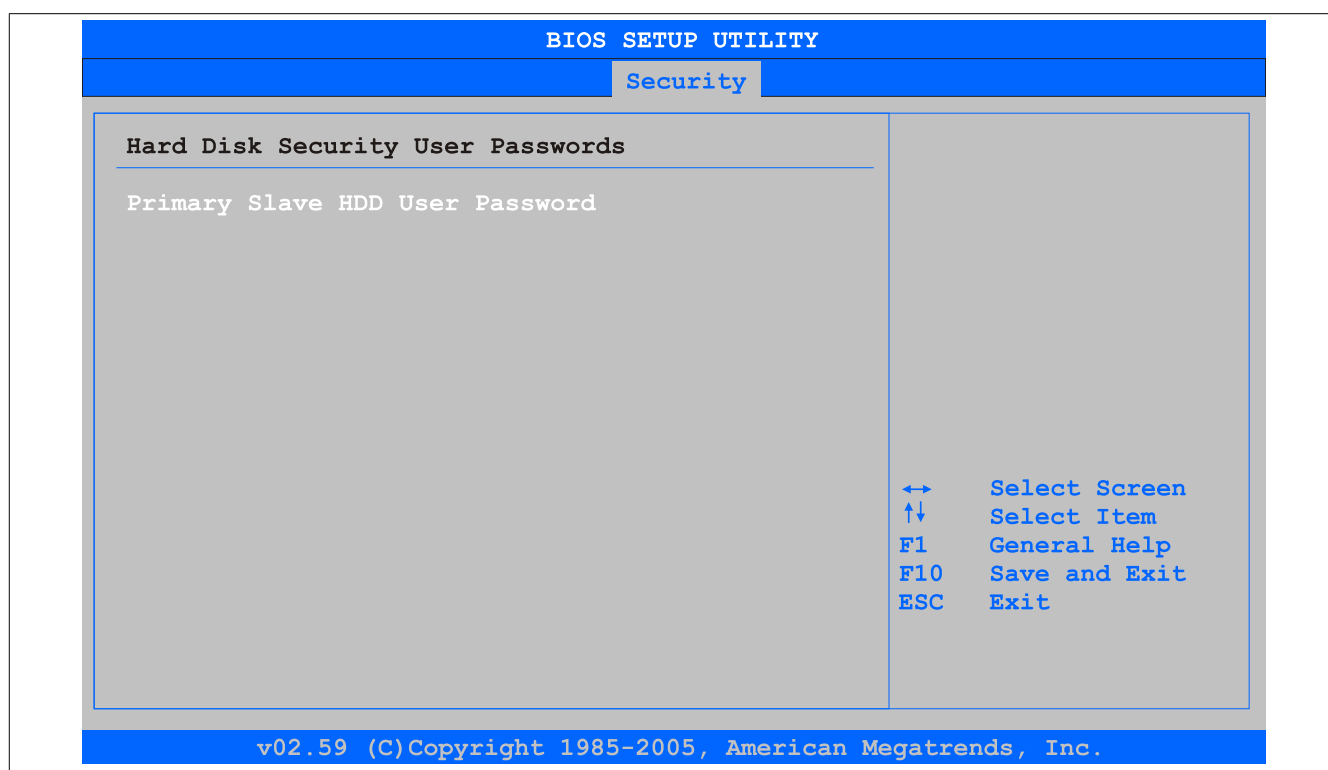


Figure 113: GM45 Security - Hard disk security user password

BIOS setting	Function	Configuration options	Effect
Primary slave HDD user password	This function makes it possible to configure or change the user password for each hard drive without having to reboot the device. The user password allows the user to edit only certain BIOS settings.	Enter	Password entry

Table 161: GM45 Security - Hard disk security user password

## 1.6.2 Hard disk security master password

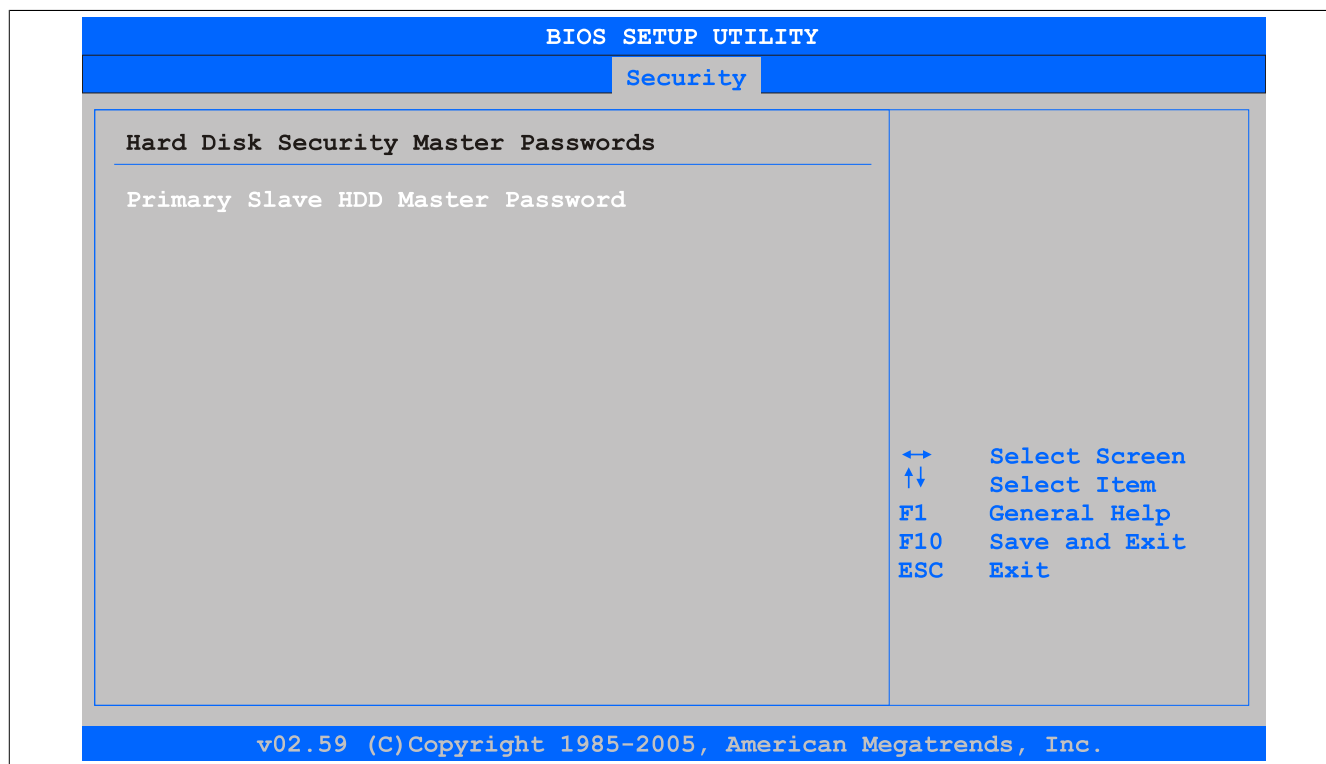


Figure 114: GM45 Security - Hard disk security master password

BIOS setting	Function	Configuration options	Effect
Primary slave HDD master password	This function makes it possible to configure or change the master password for each hard drive without having to reboot the device.	Enter	Password entry

Table 162: GM45 Security - Hard disk security master password

## 1.7 Power

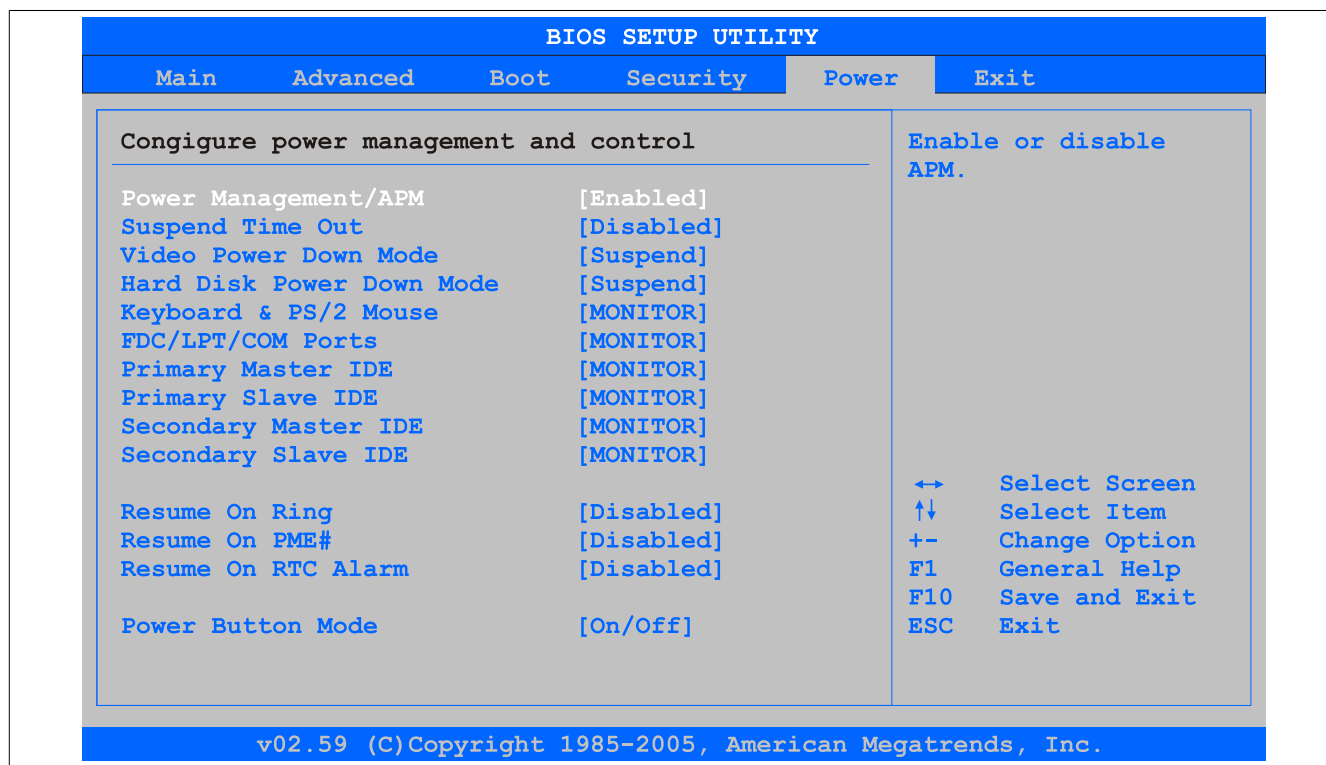


Figure 115: GM45 Power menu

BIOS setting	Function	Configuration options	Effect
Power Management / APM	This option enables or disables APM functionality. This is advanced plug and play and power management functionality.	Enabled	Enables this function
		Disabled	Disables this function
Suspend time out	This option can be used to configure how long the system must be inactive before entering suspend mode (all components except the CPU are shut down as far as possible).	1 min, 2 min, 4 min, 8 min, 10 min, 20 min, 30 min, 40 min, 50 min, 60 min	Sets the value manually
		Disabled	Disables this function
Video power down mode	This option can be used to set the energy saving mode for the monitor.	Disabled	Does not switch off the monitor
		Standby	Switches the monitor to standby mode
		Suspend	Switches the monitor to suspend mode
Hard disk power down mode	This option is used to set the energy saving mode for the hard drive.	Disabled	Does not switch off the monitor
		Standby	Switches the monitor to standby mode
		Suspend	Switches the monitor to suspend mode
Keyboard & PS/2 mouse	Configures the monitoring of activity during energy saving mode	MONITOR	Returns the system to its normal state from the respective energy saving mode when activity is detected on the keyboard or PS/2 mouse
		IGNORE	Ignores activity
FDC/LPT/COM ports	Configures the monitoring of activity during energy saving mode	MONITOR	Returns the system to its normal state from the respective energy saving mode when activity is detected on the parallel port, serial port 1&2 or the floppy drive port.
		IGNORE	Ignores activity
Primary master IDE	Configures the monitoring of activity during energy saving mode	MONITOR	Returns the system to its normal state from the respective energy saving mode when activity is detected on the IRQ of the respective interface or device
		IGNORE	Ignores activity
Primary slave IDE	Configures the monitoring of activity during energy saving mode	MONITOR	Returns the system to its normal state from the respective energy saving mode when activity is detected on the IRQ of the respective interface or device
		IGNORE	Ignores activity
Secondary master IDE	Configures the monitoring of activity during energy saving mode	MONITOR	Returns the system to its normal state from the respective energy saving mode when activity is detected on the IRQ of the respective interface or device
		IGNORE	Ignores activity
Secondary slave IDE	Configures the monitoring of activity during energy saving mode	MONITOR	Returns the system to its normal state from the respective energy saving mode when activity is detected on the IRQ of the respective interface or device
		IGNORE	Ignores activity
Resume on ring	Returns the PC from energy saving mode when the modem receives an incoming call	Enabled	Enables this function
		Disabled	Disables this function
Resume on PME#	Configures whether the PME wakeup function is enabled or disabled	Enabled	Enables this function
		Disabled	Disables this function
Resume on RTC alarm	This option can be used to enable the alarm and enter the date and time during system startup.	Enabled	Enables this function
		Disabled	Disables this function
Power button mode	This function determines what the power button does.	On/Off	Switches the system on/off
		Suspend	Suppresses this function

Table 163: GM45 Power menu - Configuration options

## 1.8 Exit

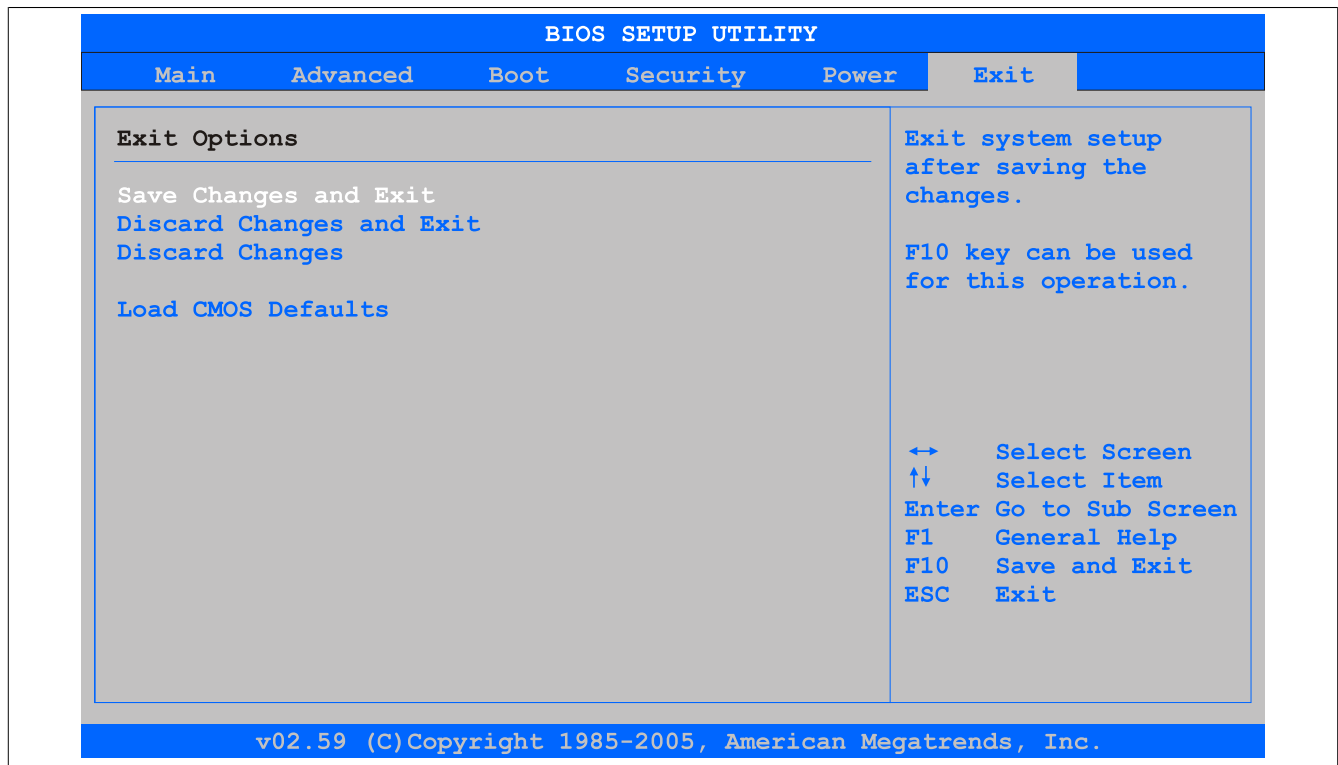


Figure 116: GM45 Exit menu

BIOS setting	Function	Configuration options	Effect
Save changes and exit	Selecting this option closes BIOS Setup. Any changes made are saved to CMOS after confirmation, and the system is rebooted.	OK / Cancel	
Discard changes and exit	Selecting this option closes BIOS Setup without saving any changes made. The system is then rebooted.	OK / Cancel	
Discard changes	This option can be used to reset any settings that may have been made but have been forgotten in the meantime (provided they have not yet been saved).	OK / Cancel	
Load CMOS defaults	This option loads the CMOS default values defined by the DIP switch settings. These values are loaded for all BIOS settings.	OK / Cancel	

Table 164: GM45 Exit menu - Configuration options

## 1.9 BIOS default settings

The various positions of the CMOS profile hex switch can be used to load predefined BIOS profile settings.

### Information:

**The factory default switch position represents the optimal BIOS default values for this system and should therefore not be changed.**

If the "Load setup defaults" function is selected in the main BIOS Setup screen, or if "Exit" is selected (or <F9> is pressed) in the individual setup screens, the following BIOS settings are the optimized values that will be used.

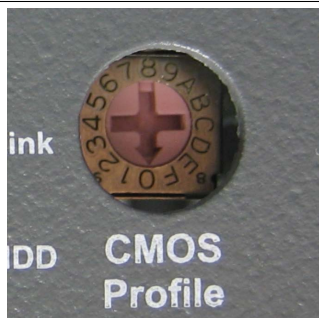


Figure 117: CMOS profile hex switch

Profile number	Optimized for	Switch position	Note
Profile 0	Reserved	0	
Profile 1	System unit 5PC810.SX01-00 / 5PC810.SX02-00 / 5PC810.SX03-00	1	The default settings for this profile can be found in the APC810 user's manual. This can be downloaded at no cost from the B&R website.
Profile 2	System unit 5PC810.SX05-00	2	
Profile 3	System unit 5PC820.SX01-00 / 5PC820.SX01-01	3	The default settings for this profile can be found in the APC820 user's manual. This can be downloaded at no cost from the B&R website.
Profile 4	Reserved	4	
Profile 5	System unit 5PC820.1505-00 / 5PC820.1906-00	5	The default settings for this profile can be found in the PPC800 user's manual. This can be downloaded at no cost from the B&R website.

Table 165: Profile overview

### 1.9.1 Main

Setting/Option	Profile 0	Profile 5	My setting
System time	-	-	
System date	-	-	
BIOS ID	-	-	
Processor	-	-	
CPU frequency	-	-	
System memory	-	-	
Product revision	-	-	
Serial number	-	-	
BC firmware rev.	-	-	
MAC address (ETH1)	-	-	
Boot counter	-	-	
Running time	-	-	

Table 166: GM45 Main - Overview of profile settings

### 1.9.2 Advanced

#### 1.9.2.1 ACPI configuration

Setting/Option	Profile 0	Profile 5	My setting
ACPI aware O/S	Yes	Yes	
ACPI version features	ACPI v2.0	ACPI v2.0	
ACPI APIC support	Enabled	Enabled	
Suspend mode	S1 (POS)	S1 (POS)	
USB device wakeup from S3/S4	Disabled	Disabled	
Active cooling trip point	Disabled	Disabled	
Passive cooling trip point	Disabled	Disabled	
Critical trip point	105°C	105°C	

Table 167: GM45 Advanced - ACPI configuration - Overview of profile settings



### 1.9.2.2 PCI configuration

Setting/Option	Profile 0	Profile 5	My setting
Plug & Play O/S	No	Yes	
PCI latency timer	64	64	
Allocate IRQ to PCI VGA	Yes	Yes	
Allocate IRQ to SMBUS HC	Yes	Yes	
<b>PCI IRQ resource exclusion</b>			
IRQ3	Allocated	Available	
IRQ4	Allocated	Allocated	
IRQ5	Available	Available	
IRQ6	Available	Available	
IRQ7	Available	Available	
IRQ9	Allocated	Allocated	
IRQ10	Available	Allocated	
IRQ11	Allocated	Allocated	
IRQ12	Available	Available	
IRQ14	Allocated	Allocated	
IRQ15	Allocated	Allocated	
<b>PCI interrupt routing</b>			
PIRQ A (VGA,UHCI2,PCIE4, ETH2)	Auto	Auto	
PIRQ B (PCIE1,HDA,ETH1)	Auto	Auto	
PIRQ C (PCIE2, IF slot)	Auto	Auto	
PIRQ D (UHCI1,PCIE3, SATA)	Auto	Auto	
PIRQ E (INTD,UHCI3,PATA)	Auto	Auto	
PIRQ F (INTA)	Auto	Auto	
PIRQ G (INTB)	Auto	Auto	
PIRQ H (INTC,UHCI0, EHCI0)	Auto	Auto	
1st exclusive PCI	-	-	
2nd exclusive PCI	-	-	
3rd exclusive PCI	-	-	

Table 168: GM45 Advanced - PCI configuration - Overview of profile settings

### 1.9.2.3 PCI Express configuration

Setting/Option	Profile 0	Profile 5	My setting
Active State Power-Management	Disabled	Disabled	
PCIe port 0 (ETH2)	Auto	Auto	
PCIe port 1	Auto	Auto	
PCIe port 2 (IF slot)	Auto	Auto	
PCIe port 3	Auto	Auto	
PCIe port 4	Auto	Auto	
PCIe high priority port	Disabled	Disabled	
Res. PCIe hot plugging resource	No	No	
PCIe port 0 IOxAPIC enable	Disabled	Disabled	
PCIe port 1 IOxAPIC enable	Disabled	Disabled	
PCIe port 2 IOxAPIC enable	Disabled	Disabled	
PCIe port 3 IOxAPIC enable	Disabled	Disabled	

Table 169: GM45 Advanced - PCI Express configuration - Overview of profile settings

### 1.9.2.4 Graphics configuration

Setting/Option	Profile 0	Profile 5	My setting
Primary video device	Internal VGA	Internal VGA	
Internal graphics mode select	Enabled, 32MB	Enabled, 32MB	
DVMT memory	256 MB	256 MB	
Boot display device	Auto	Auto	
Boot display preference	SDVO-B SDVO-C LFP	LFP SDVO-B SDVO-C	
Always try auto panel detect	No	No	
Local flat panel type	Auto	Auto	
SDVO local flat panel type	Disabled	Disabled	
Local flat panel scaling	Centering	Expand text & graphics	

Table 170: GM45 Advanced - Graphics configuration - Overview of profile settings

Setting/Option	Profile 0	Profile 5	My setting
SDVO port B configuration	SDVO DVI	SDVO DVI	
SDVO port C configuration	SDVO DVI	<b>Disabled</b>	
SDVO/DVI hot plugging support	Enabled	Enabled	
Display mode persistence	Enabled	Enabled	

Table 170: GM45 Advanced - Graphics configuration - Overview of profile settings

### 1.9.2.5 CPU configuration

Setting/Option	Profile 0	Profile 5	My setting
MPS revision	1.4	1.4	
Max CPUID value limit	Disabled	Disabled	
Intel(R) Virtualization Tech	Enabled	Enabled	
Execute-Disable bit capability	Enabled	Enabled	
Intel(R) SpeedStep(tm) tech.	Enabled	Enabled	
Intel(R) C-State Tech.	Disabled	Disabled	
Enhanced C-States	Disabled	Disabled	

Table 171: GM45 Advanced - CPU configuration - Overview of profile settings

### 1.9.2.6 Chipset configuration

Setting/Option	Profile 0	Profile 5	My setting
DRAM refresh rate	Auto	Auto	
Memory hole	Disabled	Disabled	
DIMM thermal control	Disabled	Disabled	
TMRC Mode	Disabled	Disabled	
TS on DIMM	Disabled	Disabled	
High precision event timer	Disabled	Disabled	
IOAPIC	Enabled	Enabled	
APIC ACPI SCI IRQ	Disabled	Disabled	
POST code output	PCI	PCI	

Table 172: GM45 Advanced - Chipset configuration - Overview of profile settings

### 1.9.2.7 I/O interface configuration

Setting/Option	Profile 0	Profile 5	My setting
HDA controller	Disabled	<b>Enabled</b>	
Onboard Gbe controller (ETH1)	Enabled	Enabled	

Table 173: GM45 Advanced - I/O interface configuration - Overview of profile settings

### 1.9.2.8 Clock configuration

Setting/Option	Profile 0	Profile 5	My setting
Spread spectrum	Disabled	Disabled	

Table 174: GM45 Advanced - Clock configuration - Overview of profile settings

### 1.9.2.9 IDE configuration

Setting/Option	Profile 0	Profile 5	My setting
SATA port 0/1	Compatible	Compatible	
SATA port 2/3 (opt. PATA port)	Enabled	Enabled	
PATA detection time out (sec)	3	3	
Hard disk write protect	Disabled	Disabled	
IDE detect timeout (sec)	35	35	
<b>Primary IDE master</b>			
Type	Auto	Auto	
LBA/Large mode	Auto	Auto	
Block (multi-sector transfer)	Auto	Auto	
PIO mode	Auto	Auto	
DMA mode	Auto	Auto	
S.M.A.R.T.	Auto	Auto	
32Bit data transfer	Enabled	Enabled	
<b>Secondary IDE master</b>			
Type	Auto	Auto	
LBA/Large mode	Auto	Auto	
Block (multi-sector transfer)	Auto	Auto	

Table 175: GM45 Advanced - IDE configuration - Overview of profile settings

Setting/Option	Profile 0	Profile 5	My setting
PIO mode	Auto	Auto	
DMA mode	Auto	Auto	
S.M.A.R.T.	Auto	Auto	
32Bit data transfer	Enabled	Enabled	
<b>Third IDE master</b>			
Type	Auto	Auto	
LBA/Large mode	Auto	Auto	
Block (multi-sector transfer)	Auto	Auto	
PIO mode	Auto	Auto	
DMA mode	Auto	Auto	
S.M.A.R.T.	Auto	Auto	
32Bit data transfer	Enabled	Enabled	
<b>Fourth IDE master</b>			
Type	Auto	Auto	
LBA/Large mode	Auto	Auto	
Block (multi-sector transfer)	Auto	Auto	
PIO mode	Auto	Auto	
DMA mode	Auto	Auto	
S.M.A.R.T.	Auto	Auto	
32Bit data transfer	Enabled	Enabled	

Table 175: GM45 Advanced - IDE configuration - Overview of profile settings

### 1.9.2.10 USB configuration

Setting/Option	Profile 0	Profile 5	My setting
USB function	8 USB ports	8 USB ports	
USB 2.0 controller	Enabled	Enabled	
Legacy USB support	Enabled	Enabled	
USB Legacy POST-always	-	-	
USB keyboard Legacy support	Enabled	Enabled	
USB mouse Legacy support	Disabled	Disabled	
USB storage device support	Enabled	Enabled	
Port 64/60 emulation	Disabled	Disabled	
USB 2.0 controller mode	HiSpeed	HiSpeed	
BIOS EHCI hand-off	Disabled	Disabled	
USB beep message	Enabled	Enabled	
USB stick default emulation	Hard disk drive	Hard disk drive	
USB mass storage reset delay	20 Sec	20 Sec	

Table 176: GM45 Advanced - USB configuration - Overview of profile settings

### 1.9.2.11 Keyboard/Mouse configuration

Setting/Option	Profile 0	Profile 5	My setting
Bootup Num-lock	On	On	
Typematic rate	Fast	Fast	

Table 177: GM45 Advanced - Keyboard/Mouse configuration - Overview of profile settings

### 1.9.2.12 Baseboard/Panel features

Setting/Option	Profile 0	Profile 5	My setting
<b>Panel control</b>			
Select panel number	-	-	
Version	-	-	
Brightness	100%	100%	
Temperature	-	-	
Fan speed	-	-	
Keys/LEDs	-	-	
<b>Baseboard monitor</b>			
CMOS battery	-	-	
Board I/O	-	-	
Board ETH2	-	-	
Board power	-	-	
Power supply	-	-	
Slide-in drive 1	-	-	
IF slot	-	-	
Case 1	-	-	
Case 2	-	-	
Case 3	-	-	

Table 178: GM45 Advanced - Baseboard/Panel features - Overview of profile settings

Setting/Option	Profile 0	Profile 5	My setting
Case 4	-	-	
<b>Legacy devices</b>			
COM A	Enabled	Enabled	
Base I/O address	3F8	3F8	
Interrupt	IRQ4	IRQ4	
COM C	Enabled	Enabled	
Base I/O address	3E8	3E8	
Interrupt	IRQ11	IRQ11	
COM D	Disabled	Disabled	
Base I/O address	-	-	
Interrupt	-	-	
COM E	Disabled	Disabled	
Base I/O address	-	-	
Interrupt	-	-	
ETH2 LAN Controller	Enabled	Enabled	
ETH2 MAC Address	-	-	

Table 178: GM45 Advanced - Baseboard/Panel features - Overview of profile settings

### 1.9.3 Boot

Setting/Option	Profile 0	Profile 5	My setting
Boot priority selection	Type based	Type based	
1st boot device	Onboard LAN	<b>Primary master</b>	
2nd boot device	Primary master	<b>Secondary master</b>	
3rd boot device	Primary Slave	<b>USB floppy</b>	
4th boot device	USB floppy	<b>USB removable device</b>	
5th boot device	USB removable device	<b>USB hard disk</b>	
6th boot device	USB CDROM	USB CDROM	
7th boot device	Fourth Master	Fourth Master	
8th boot device	Disabled	Disabled	
Quick boot	Enabled	Enabled	
Quiet boot	Disabled	Disabled	
Automatic boot list retry	Disabled	Disabled	
Add-on ROM display mode	Keep current	Keep current	
Halt on error	Disabled	Disabled	
Hit "DEL" message display	Enabled	Enabled	
Interrupt 19 capture	Disabled	Disabled	
PXE boot to LAN	Enabled	<b>Disabled</b>	
Slide-in 2 optional ROM	Enabled	<b>Disabled</b>	
Power loss control	Turn on	Turn on	

Table 179: GM45 Main - Overview of profile settings

### 1.9.4 Security

Setting/Option	Profile 0	Profile 5	My setting
Supervisor password	-	-	
User password	-	-	
Boot sector virus protection	Disabled	Disabled	
Ask HDD Password on Every Boot	No	No	
Hard disk security user password	-	-	
Hard disk security master password	-	-	

Table 180: GM45 Security - Overview of profile settings

### 1.9.5 Power

Setting/Option	Profile 0	Profile 5	My setting
Power management/APM	Enabled	Enabled	
Suspend time out	Disabled	Disabled	
Video power down mode	Suspend	Suspend	
Hard disk power down mode	Suspend	Suspend	
Keyboard & PS/2 mouse	MONITOR	MONITOR	
FDC/LPT/COM ports	MONITOR	MONITOR	
Primary master IDE	MONITOR	MONITOR	
Primary slave IDE	MONITOR	MONITOR	
Secondary master IDE	MONITOR	MONITOR	
Secondary slave IDE	MONITOR	MONITOR	

Table 181: GM45 Power - Overview of profile settings

Setting/Option	Profile 0	Profile 5	My setting
Resume on ring	Disabled	Disabled	
Resume on PME#	Disabled	Disabled	
Resume on RTC alarm	Disabled	Disabled	
Power button mode	On/Off	On/Off	

Table 181: GM45 Power - Overview of profile settings

## 1.10 BIOS error signals (beep codes)

While the B&R Industrial PC is booting, the following messages and errors can occur with BIOS. These errors are signaled by different beep codes.

Beep code	Description	Necessary user action
1x short	Memory refresh failed	Load BIOS defaults. If the error persists, send the industrial PC to B&R for testing.
2x short	Parity error: POST error (error in one of the hardware testing procedures)	Check that the card has been inserted properly. If the error persists, send the industrial PC to B&R for testing.
3x short	Base 64 kB memory failure: Basic memory error, RAM error within the initial 64 kB	Send the industrial PC to B&R for testing.
4x short	Timer not operational: System timer	Send the industrial PC to B&R for testing.
5x short	Processor error: Defective processor	Send the industrial PC to B&R for testing.
6x short	8042 gate A20 failure: Defective keyboard controller (block 8042/ gate A20). The processor cannot switch to protected mode.	Send the industrial PC to B&R for testing.
7x short	Processor exception interrupt error: Virtual mode exception error (CPU generated an interrupt error)	Send the industrial PC to B&R for testing.
8x short	Display memory read/write error: Video memory not accessible, defective graphic card or not installed (not a fatal error)	Check that the graphics card has been inserted correctly, replace if necessary. If the error persists, send the industrial PC to B&R for testing.
9x short	ROM checksum error: ROM BIOS checksum incorrect; defective EPROM, EEPROM or flash ROM component; defective BIOS or incorrectly updated	Send the industrial PC to B&R for testing.
10x short	CMOS shutdown register read/write error: Unable to read/write from/ to CMOS	Send the industrial PC to B&R for testing.
11x short	Cache error / external cache bad: Defective L2 cache on the main-board	Send the industrial PC to B&R for testing.

Table 182: GM45 BIOS - POST messages

## 1.11 Allocation of resources

### 1.11.1 RAM address assignment

RAM address	Address in hexadecimal	Resource
(TOM - 384 kB) – TOM <sup>1)</sup>	N.A.	ACPI reclaim, MPS and NVS area <sup>2)</sup>
(TOM - 8 MB - 192 kB) – (TOM - 192 kB)	N.A.	VGA frame buffer <sup>3)</sup>
1024 kB – (TOM - 8 MB - 192 kB)	100000h - N.A.	Extended memory
869 kB – 1024 kB	0E0000h - 0FFFFFFh	Runtime BIOS
832 kB – 869 kB	0D0000h - 0DFFFFh	Upper memory
640 kB – 832 kB	0A0000h - 0CFFFFh	Video memory and BIOS
639 kB – 640 kB	09FC00h - 09FFFFh	Extended BIOS data
0 – 639 kB	000000h - 09FC00h	Conventional memory

Table 183: RAM address assignment

- 1) TOM = Top of memory: max. installed DRAM.  
 2) Only if ACPI Aware OS is set to "YES" in the setup.  
 3) The VGA frame buffer can be reduced to 32 MB in the setup.

### 1.11.2 I/O address assignments

I/O address	Resource
0000h - 00FFh	Motherboard resources
0170h - 0177h	Secondary IDE channel
01F0h - 01F7h	Primary IDE channel
0238h - 023Fh	COM5
0278h - 027Fh	Hardware security key (LPT2)
02E8h - 02EFh	COM4
0376h - 0376h	Secondary IDE channel command port
0377h - 0377h	Secondary IDE channel status port
0378h - 037Fh	Hardware security key (LPT1)
0384h - 0385h	CAN controller
03B0h - 03DFh	Video system
03E8h - 03EFh	COM3
03F6h - 03F6h	Primary IDE channel command port
03F7h - 03F7h	Primary IDE channel status port
03F8h - 03FFh	COM1
04D0h - 04D1h	Motherboard resources
0500h - 053Fh	Motherboard resources
0800h - 087Fh	Motherboard resources
0A00h - 0A7Fh	Motherboard resources
0CF8h - 0CFBh	PCI config address register
0CFCh - 0CFFh	PCI config data register
0D00h - FFFFh	PCI / PCI Express bus <sup>1)</sup>
4100h - 417Fh	MTCX
FF00h - FF07h	IDE bus master register

Table 184: I/O address assignment

- 1) The BIOS assigns the PCI and PCI Express bus I/O resources from FFF0h downward. Devices that are not compatible with PnP/PCI/PCI Express cannot use the I/O resources in this range.

## 1.11.3 Interrupt assignments in PIC mode

IRQ	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	NMI	NONE
System timer	•																	
Keyboard		•																
IRQ cascade			•															
COM1 (serial port A)				○	•	○	○	○			○	○	○					
ACPI <sup>1)</sup>										•								
Real-time clock									•									
Coprocessor (FPU)														•				
Primary IDE channel <sup>2)</sup>															•			
Secondary IDE channel <sup>2)</sup>																•		
B&R	COM3 (COM C)			○	○	○	○	○			○	○	○					•
	COM5 (COM E)			○	○	○	○	○			○	○	○					•

Table 185: IRQ interrupt assignments in PIC mode

1) Advanced Configuration and Power Interface.

2) If the SATA configuration in BIOS is set to Enhanced mode for all SATA ports, IRQs 14 and 15 are enabled for the system and the SATA ports use other IRQs.

- ... Default setting
- ... Optional setting



### 1.11.4 Interrupt assignments in APIC mode

A total of 23 IRQs are available in APIC (**A**dvanced **P**rogrammable Interrupt **C**ontroller) mode. Enabling this option is only effective if done before the Windows operating system is installed.

IRQ	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	NMI	NONE
System timer	•																									
Keyboard		•																								
IRQ cascade			•																							
COM1 (serial port A)				•	•	•	•	•		•	•	•														
ACPI <sup>1)</sup>										•																
Real-time clock									•																	
Coprocessor (FPU)														•												
Primary IDE channel <sup>2)</sup>															•											
Secondary IDE channel <sup>2)</sup>																•										
B&R	COM3 (COM C)			•	•	•	•	•			•	•	•												•	
	COM5 (COM E)			•	•	•	•	•			•	•	•												•	
PIRQ A <sup>3)</sup>																	•									
PIRQ B <sup>4)</sup>																		•								
PIRQ C <sup>5)</sup>																			•							
PIRQ D <sup>6)</sup>																				•						
PIRQ E <sup>7)</sup>																					•					
PIRQ F <sup>8)</sup>																						•				
PIRQ G <sup>9)</sup>																							•			
PIRQ H <sup>10)</sup>																								•		

Table 186: IRQ interrupt assignments in APIC mode

- 1) **A**dvanced **C**onfiguration and **P**ower **I**nterface.
- 2) If the SATA configuration in BIOS is set to Enhanced mode for all SARA ports, IRQs 14 and 15 are enabled for the system and the SATA ports use other IRQs.
- 3) PIRQ A: for PCIe; UHCI Host Controller 2, VGA controller, PCI Express root port 4
- 4) PIRQ B: for PCIe; HD audio, PCI express root port 1, onboard gigabit LAN controller
- 5) PIRQ C: for PCIe; PCI express root port 2
- 6) PIRQ D: for PCIe; UHCI host controller 1, serial ATA controller 0 + 1 in enhanced/native mode, PCI express root port 3
- 7) PIRQ E: PCI bus INTD, UHCI host controller 3, EHCI host controller 1, SM bus controller
- 8) PIRQ F: PCI Bus INTA
- 9) PIRQ G: PCI Bus INTB
- 10) PIRQ H: PCI Bus INTC, UHCI Host Controller 0, EHCI Host Controller 0

- ... Default setting
- ... Optional setting

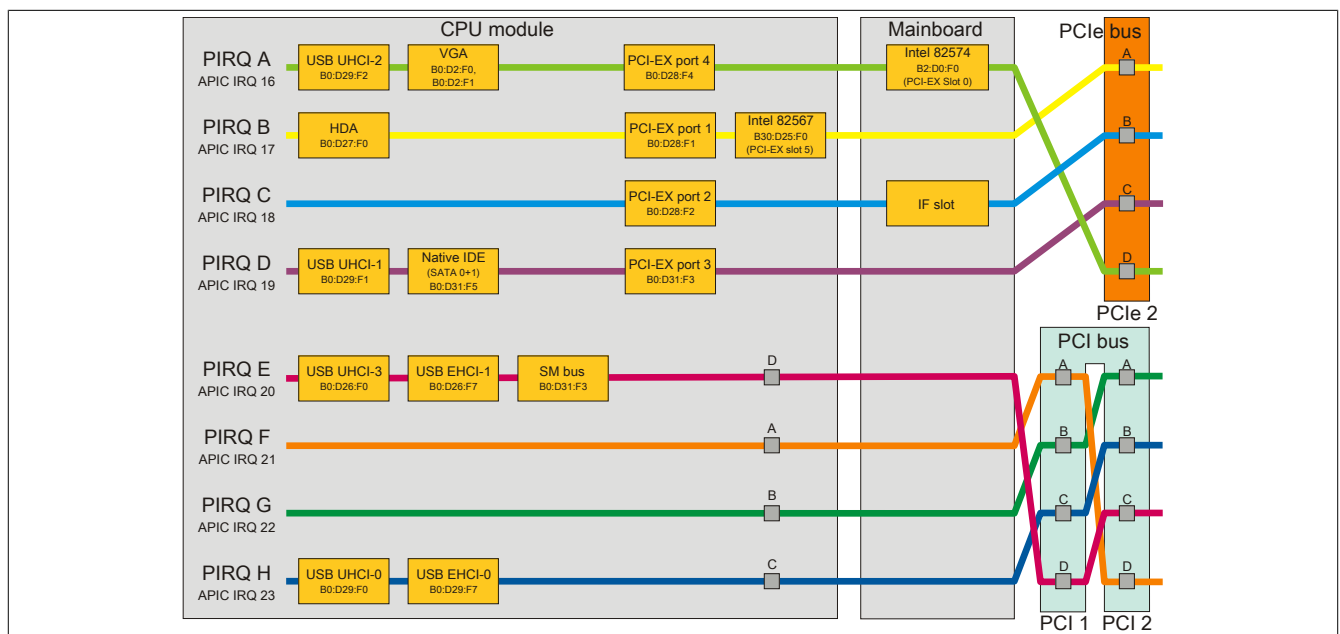


Figure 118: PCI and PCIe routing with enabled APIC for GM45 CPU boards

## 2 Upgrade information

### Warning!

The BIOS and firmware on B&R devices must be kept current. New versions can be downloaded from the B&R website ([www.br-automation.com](http://www.br-automation.com)).

### 2.1 BIOS upgrade

An upgrade may be necessary in order to accomplish the following:

- Updating implemented functions or adding newly implemented functions or components to BIOS Setup (information about changes can be found in the Readme file for the BIOS upgrade).

#### 2.1.1 Important information

### Information:

**Customized BIOS settings are deleted when upgrading BIOS.**

Before starting an upgrade, it helps to determine the various software versions.

##### 2.1.1.1 Which BIOS version and firmware are already installed on the PPC800?

This information can be found on the following BIOS Setup screen:

- After switching on the PPC800, BIOS Setup can be accessed by pressing <Del>.
- From the BIOS main menu "Advanced", select "Baseboard/Panel features".

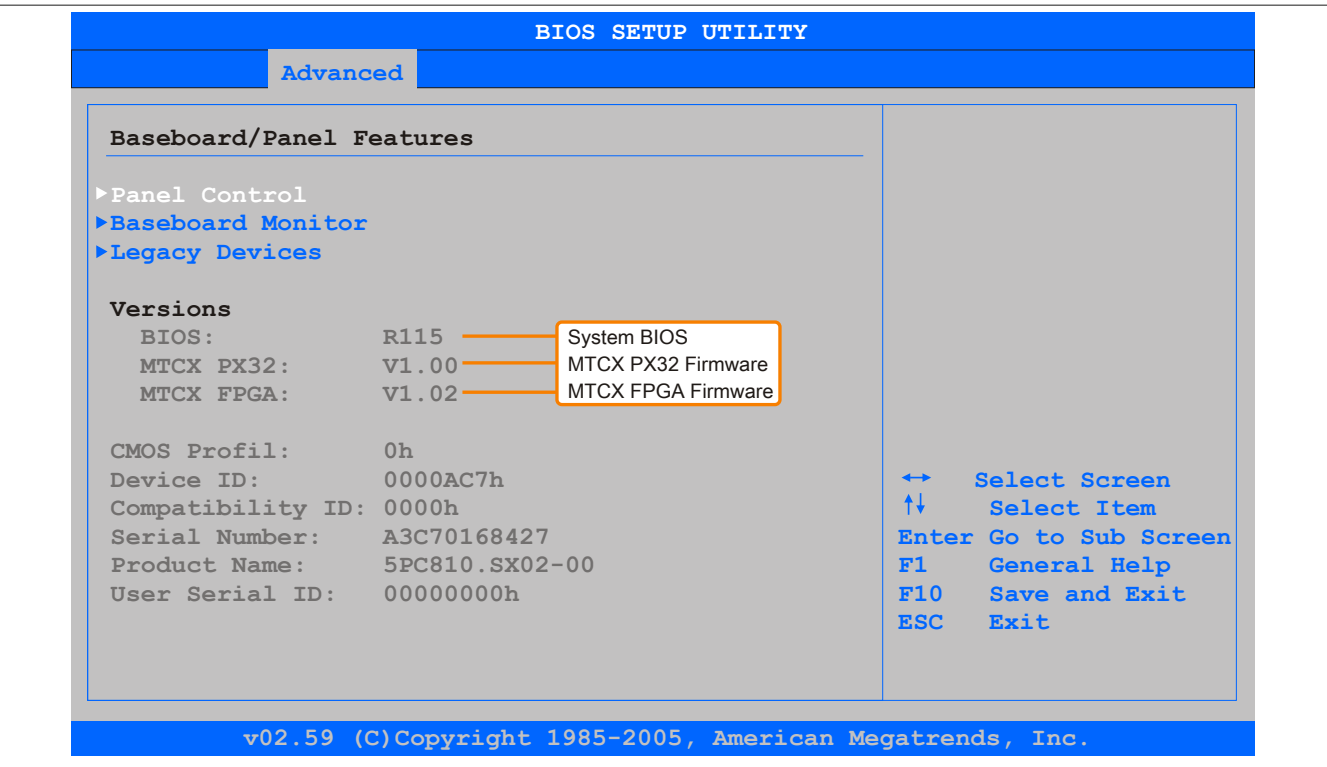


Figure 119: Software version

#### 2.1.2 Procedure with MS-DOS

1. Download the .zip file from the B&R website ([www.br-automation.com](http://www.br-automation.com)).
2. Create bootable media.

## Information:

In MS-DOS, Win95 and Win98, a blank HD disk can be made bootable by typing "sys a:" or "format a: /s" on the command line.

Information about creating a bootable diskette in Windows XP can be found on page 218.

Information on creating a USB flash drive for a B&R upgrade can be found on page 220.

Information on creating a CompactFlash card for a B&R upgrade can be found on page 221.

3. Copy the contents of the .zip file to the bootable media. If the B&R upgrade was already added when creating the bootable media with the B&R Embedded OS Installer, then this step is not necessary.
4. Connect the bootable media to the B&R device and reboot.
5. The following boot menu will be shown after startup:

```
1. Upgrade AMI BIOS for BM45 (5PC800.BM45-00, -01)
2. Exit
```

### Item 1:

BIOS is automatically upgraded (default after 5 seconds).

### Item 2:

Returns to the shell (MS-DOS)

## Information:

**If a button is not pressed within 5 seconds, then item 1 "Upgrade AMI BIOS for BM45" is automatically carried out and the industrial PC is updated automatically.**

6. The system must be rebooted after a successful upgrade.
7. Reboot and press <Del> to enter BIOS Setup and load the setup defaults, then select "Save changes and exit".

## 2.2 Firmware upgrade

The "Firmware upgrade (MTCX, SDLR, UPS)" software makes it possible to update the firmware for multiple controllers (MTCX, SDLR, UPS) depending on the PPC800 system variant.

The latest firmware upgrade is available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

### 2.2.1 Procedure

Proceed as follows to carry out a firmware upgrade:

1. Download the .zip file from the B&R website ([www.br-automation.com](http://www.br-automation.com)).
2. Create bootable media.

#### Information:

**In MS-DOS, Win95 and Win98, a blank HD disk can be made bootable by typing "sys a:" or "format a: /s" on the command line.**

**Information about creating a bootable diskette in Windows XP can be found on page 218.**

**Information on creating a USB flash drive for a B&R upgrade can be found on page 220.**

**Information on creating a CompactFlash card for a B&R upgrade can be found on page 221.**

3. Copy the contents of the .zip file to the bootable media. If the B&R upgrade was already added when creating the bootable media with the B&R Embedded OS Installer, then this step is not necessary.
4. Connect the bootable media to the B&R device and reboot.
5. The following boot menu will be shown after startup:

#### Information:

**The following boot menu options including descriptions are based on Version 1.02 of the PPC800 upgrade (MTCX, SDLR, SDLT, UPSI) disk. In some cases, these descriptions might not match the version you are currently using.**

```

1. Upgrade MTCX (PPC800) PX32 and FPGA
2. Upgrade SDLR (AP800/AP900) on monitor/panel
2.1. Upgrade SDLR on AP 0 (AP800/AP900)
2.2. Upgrade SDLR on AP 1 (AP800/AP900)
2.3. Upgrade SDLR on AP 2 (AP800/AP900)
2.4. Upgrade SDLR on AP 3 (AP800/AP900)
2.5. Upgrade all SDLR (AP800/AP900)
2.6. Return to main menu
3. Upgrade add-on UPS (firmware and battery settings)
3.1. Upgrade add-on UPS firmware (5AC600.UPSI-00)
3.2. Upgrade battery settings (5AC600.UPSB-00)
3.3. Return to main menu
4. Exit

```

#### Item 1:

Automatically upgrades the PX32 and FPGA of the MTCX (default after 5 seconds)

#### Item 2:

Opens Submenu 1 for upgrading the SDLR controller on the monitor/panel interface

#### 2.1 Upgrade SDLR on AP 0 (AP800/AP900)

Automatically updates the SDLR controller on the Automation Panel 0 interface

#### 2.2 Upgrade SDLR on AP 1 (AP800/AP900)

Automatically updates the SDLR controller on the Automation Panel 1 interface

#### 2.3 Upgrade SDLR on AP 2 (AP800/AP900)

Automatically updates the SDLR controller on the Automation Panel 2 interface

#### 2.4 Upgrade SDLR on AP 3 (AP800/AP900)

Automatically updates the SDLR controller on the Automation Panel 3 interface

#### 2.5 Upgrade all SDLR (AP800/AP900)

Automatically updates all SDLR controllers on all Automation Panels on the monitor/panel interface (default selection after 5 sec)

### 2.6 Return to main menu

Returns to the main menu

#### Item 3:

Opens Submenu 3 for upgrading the add-on UPS firmware and battery settings

#### 3.1 Upgrade add-on UPS firmware (5AC600.UPSI-00)

Updates the firmware for the add-on UPS

#### 3.2 Upgrade battery settings (5AC600.UPSB-00)

Automatically updates the battery settings for 5AC600.UPSB-00

#### 3.3 Return to main menu

Returns to the main menu

#### Item 4:

Returns to the shell (MS-DOS)

- The system must be rebooted after a successful upgrade.

### 2.2.2 Possible upgrade problems and software dependencies (for V1.02)

- The SDLR firmware can only be updated if an Automation Panel with Automation Panel Link transceiver (5DLSDL.1000-01) and Automation Panel Link receiver (5DLSDL.1000-00) is connected.
- Automation Panel Link transceivers (5DLSDL.1000-01) or Automation Panel Link receivers (5DLSDL.1000-00) with a firmware version less than or equal to V00.10 can no longer be combined with Automation Panel Link transceivers (5DLSDL.1000-01) or Automation Panel Link receivers (5DLSDL.1000-00) with a firmware version greater than or equal to V01.04. Daisy chain mode is not possible with this type of a combination.
- If a UPS (e.g. 5AC600.UPSI-00) + battery unit (e.g. 5AC600.UPSB-00) is connected to the system and ready to be operated, then either the battery must be disconnected or the Power button pushed after upgrading the MTCX or SDLT (to put the system in standby mode) before powering the system off and back on. If this is not done, the firmware upgrade will not work since the UPS is buffering the system.

## 2.3 Creating an MS-DOS boot diskette in Windows XP

1. Insert a blank 1.44 MB HD diskette into the disk drive.
2. Open Windows Explorer.
3. Right-click on the 3½ floppy diskette icon and select "Format".

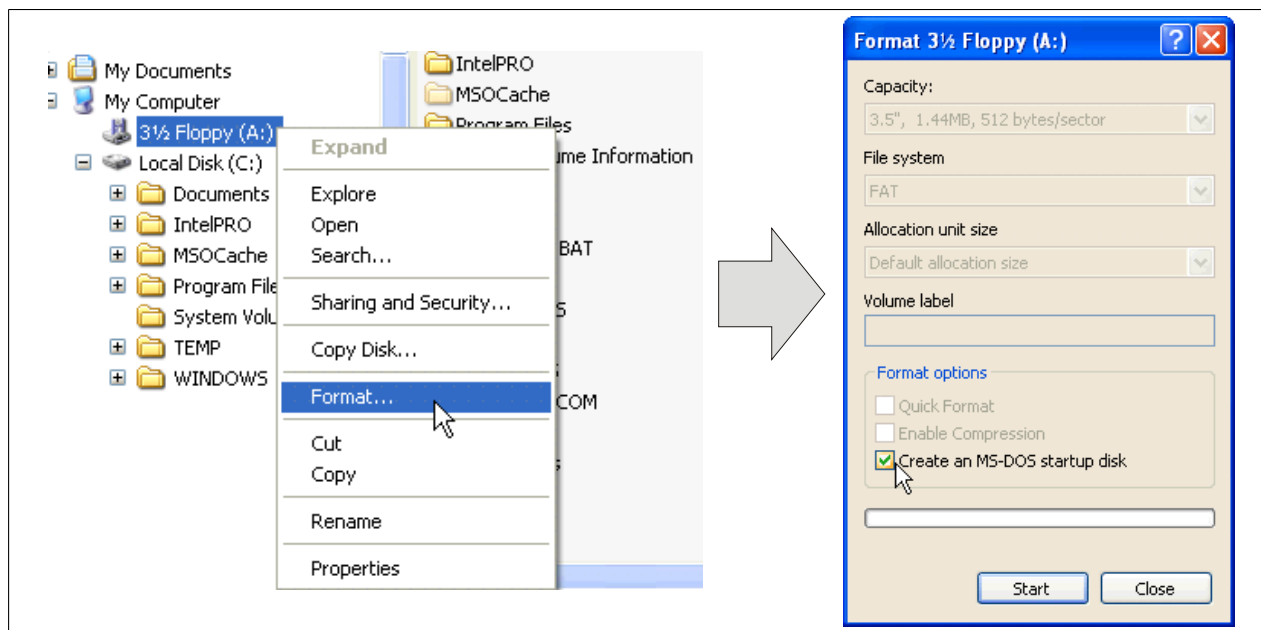


Figure 120: Creating a bootable diskette in Windows XP - Step 1

4. Select the **"Create an MS-DOS startup disk"** option, click on **"Start"** and acknowledge the warning message with "OK".

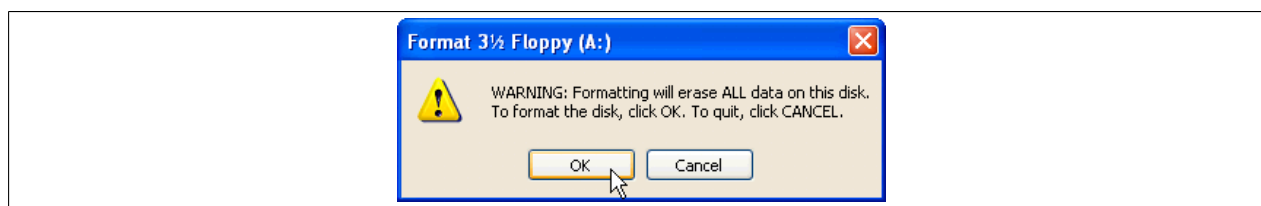


Figure 121: Creating a bootable diskette in Windows XP - Step 2

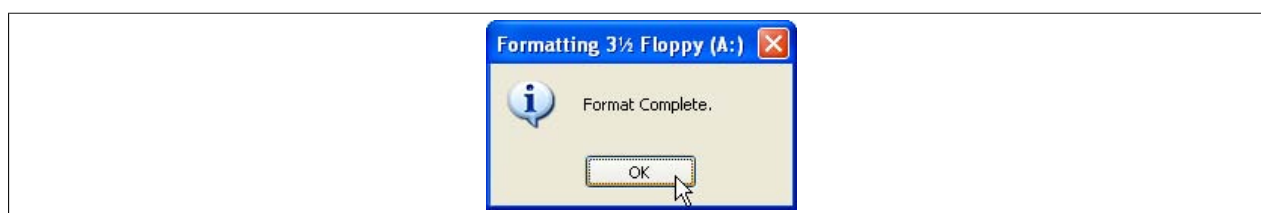


Figure 122: Creating a bootable diskette in Windows XP - Step 3

After creating the startup disk, some of the files must be deleted because of the size of the update.

To do this, all files (hidden system files, etc.) must be visible on the diskette.

In Windows Explorer, go to the "Tools" menu, select "Folder options" and open the "View" tab. Then deselect the option "Hide protected operating system files (Recommended)" (enabled by default) and enable the option "Show hidden files and folders".

before				after			
Name	Size	Type	Date Modified	Name	Size	Type	Date Modified
DISPLAY.SYS	17 KB	System file	6/8/2000 5:00 PM	AUTOEXEC.BAT	0 KB	MS-DOS Batch File	3/22/2006 10:08 AM
EGA2.CPI	58 KB	CPI File	6/8/2000 5:00 PM	COMMAND.COM	91 KB	MS-DOS Application	6/8/2000 5:00 PM
EGA3.CPI	58 KB	CPI File	6/8/2000 5:00 PM	CONFIG.SYS	0 KB	System file	3/22/2006 10:08 AM
EGA.CPI	58 KB	CPI File	6/8/2000 5:00 PM	DISPLAY.SYS	17 KB	System file	6/8/2000 5:00 PM
KEYB.COM	22 KB	MS-DOS Application	6/8/2000 5:00 PM	EGA2.CPI	58 KB	CPI File	6/8/2000 5:00 PM
KEYBOARD.SYS	34 KB	System file	6/8/2000 5:00 PM	EGA3.CPI	58 KB	CPI File	6/8/2000 5:00 PM
KEYBRD2.SYS	32 KB	System file	6/8/2000 5:00 PM	EGA.CPI	58 KB	CPI File	6/8/2000 5:00 PM
KEYBRD3.SYS	31 KB	System file	6/8/2000 5:00 PM	IO.SYS	114 KB	System file	5/15/2001 6:57 PM
KEYBRD4.SYS	13 KB	System file	6/8/2000 5:00 PM	KEYB.COM	22 KB	MS-DOS Application	6/8/2000 5:00 PM
MODE.COM	29 KB	MS-DOS Application	6/8/2000 5:00 PM	KEYBOARD.SYS	34 KB	System file	6/8/2000 5:00 PM
				KEYBRD2.SYS	32 KB	System file	6/8/2000 5:00 PM
				KEYBRD3.SYS	31 KB	System file	6/8/2000 5:00 PM
				KEYBRD4.SYS	13 KB	System file	6/8/2000 5:00 PM
				MODE.COM	29 KB	MS-DOS Application	6/8/2000 5:00 PM
				MSDOS.SYS	1 KB	System file	4/7/2001 1:40 PM

Figure 123: Creating a bootable diskette in Windows XP - Step 4

Name	Size	Type	Date Modified
AUTOEXEC.BAT	0 KB	MS-DOS Batch File	3/22/2006 10:08 AM
COMMAND.COM	91 KB	MS-DOS Application	6/8/2000 5:00 PM
CONFIG.SYS	0 KB	System file	3/22/2006 10:08 AM
DISPLAY.SYS	17 KB	System file	6/8/2000 5:00 PM
EGA2.CPI	58 KB	CPI File	6/8/2000 5:00 PM
EGA3.CPI	58 KB	CPI File	6/8/2000 5:00 PM
EGA.CPI	58 KB	CPI File	6/8/2000 5:00 PM
IO.SYS	114 KB	System file	5/15/2001 6:57 PM
KEYB.COM	22 KB	MS-DOS Application	6/8/2000 5:00 PM
KEYBOARD.SYS	34 KB	System file	6/8/2000 5:00 PM
KEYBRD2.SYS	32 KB	System file	6/8/2000 5:00 PM
KEYBRD3.SYS	31 KB	System file	6/8/2000 5:00 PM
KEYBRD4.SYS	13 KB	System file	6/8/2000 5:00 PM
MODE.COM	29 KB	MS-DOS Application	6/8/2000 5:00 PM
MSDOS.SYS	1 KB	System file	4/7/2001 1:40 PM

Figure 124: Creating a bootable diskette in Windows XP - Step 5

Now all files (selected) except Command.com, IO.sys and MSDOS.sys can be deleted.

## 2.4 Creating a bootable USB flash drive for B&R upgrade files

When used in connection with a B&R Industrial PC, it is possible to upgrade (e.g. upgrade BIOS) from one of the USB flash drives available from B&R. To do this, the USB flash drive must be prepared accordingly. This is done with the B&R Embedded OS Installer, which can be downloaded at no cost from the B&R website ([www.br-automation.com](http://www.br-automation.com)).

### 2.4.1 Requirements

The following is required to create a bootable USB flash drive:

- B&R USB flash drive
- B&R Industrial PC
- USB media drive
- B&R Embedded OS Installer (V3.00 or higher)

### 2.4.2 Procedure

1. Connect the USB flash drive to the PC.
2. If the drive list is not refreshed automatically, the list can be updated using the command **Drives > Refresh**.
3. Select the desired USB flash drive in the drive list.
4. Change to the **Action** tab and select **Install a B&R update to a USB flash drive** as the type of action.
5. Enter the path to the MS-DOS operating system files. If the files are part of a .zip archive, then click on the button **From .zip file**. If the files are stored in a directory on the hard drive, then click on the button **From folder**.
6. In the **B&R upgrade** text box, it is also possible to enter the path to the .zip file for the B&R upgrade disk and select the file.
7. Click on the **Start action** button in the toolbar.

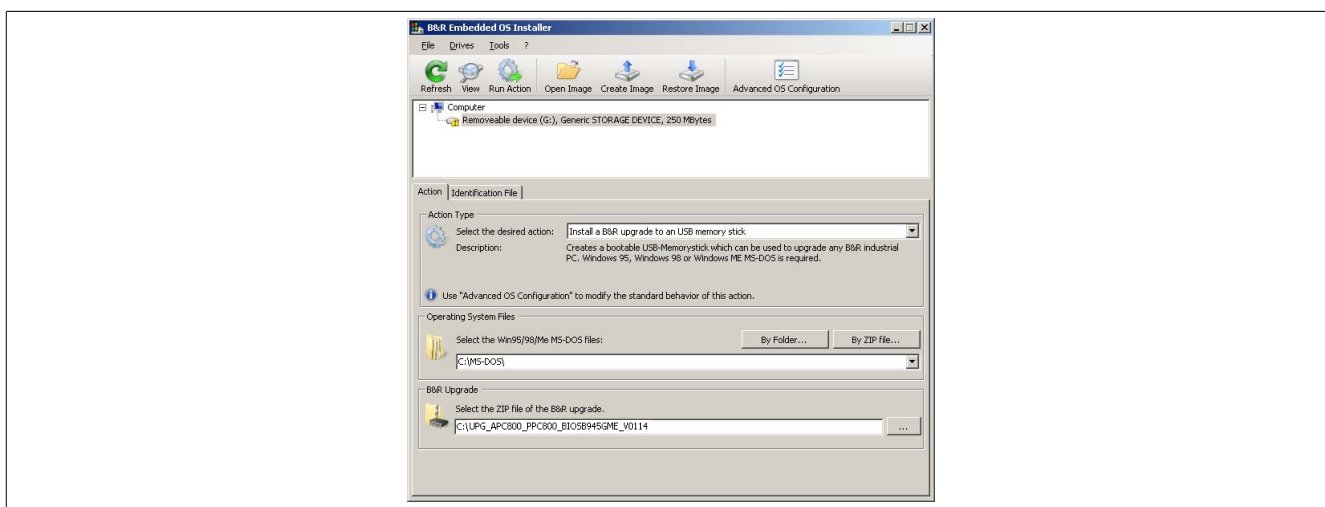


Figure 125: Creating a USB flash drive for B&R upgrade files

### 2.4.3 How to access MS-DOS

Information on creating an MS-DOS boot diskette can be found in section see "Creating an MS-DOS boot diskette in Windows XP" on page 218. The files from the diskette are then copied to the hard drive.



## 2.5 Creating a bootable CompactFlash card for B&R upgrade files

When used in connection with a B&R industrial PC, it is possible to upgrade (e.g. upgrade BIOS) from one of the CompactFlash cards available from B&R. To do this, the CompactFlash card must be prepared accordingly. This is done with the B&R Embedded OS Installer, which can be downloaded at no cost from the B&R website ([www.br-automation.com](http://www.br-automation.com)).

### 2.5.1 Requirements

The following peripherals are required for creating a bootable CompactFlash card:

- CompactFlash card
- B&R Industrial PC
- USB media drive
- B&R Embedded OS Installer (at least V3.10)

### 2.5.2 Procedure

1. Insert the CompactFlash card in the CF slot on the industrial PC.
2. If the drive list is not refreshed automatically, the list can be updated using the command **Drives > Refresh**.
3. Select the desired CompactFlash card from the drive list.
4. Change to the **Action** tab and select **Install a B&R Update to a CompactFlash card** as the type of action.
5. Enter the path to the MS-DOS operating system files. If the files are part of a .zip archive, then click on the button **From .zip file**. If the files are stored in a directory on the hard drive, then click on the button **From folder**.
6. In the **B&R upgrade** text box, it is also possible to enter the path to the .zip file for the B&R upgrade disk and select the file.
7. Click on the **Start action** button in the toolbar.

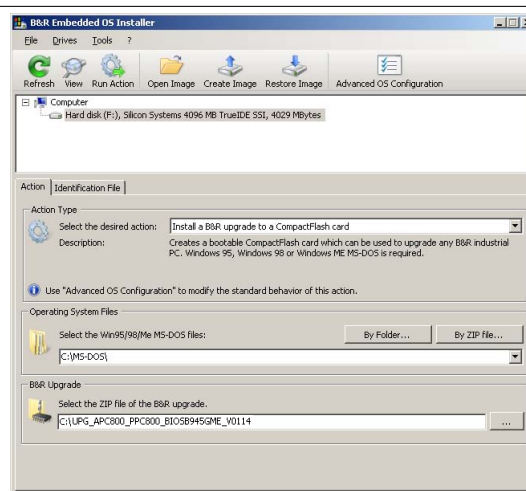


Figure 126: Creating a CompactFlash card for B&R upgrade files

### 2.5.3 How to access MS-DOS

Information on creating an MS-DOS boot diskette can be found in section see "Creating an MS-DOS boot diskette in Windows XP" on page 218. The files from the diskette are then copied to the hard drive.

### 3 Microsoft DOS

#### 3.1 Order data


Model number	Short description	Figure
9S0000.01-010	OEM Microsoft MS-DOS 6.22, German floppy disks, only supplied together with a new PC	 <b>DOS622 English</b> Disk 1- Setup  Recovery Disk  Only allowed to be used for backup or archiving purposes for B&R automation devices!  <a href="http://www.br-automation.com">www.br-automation.com</a> <small>©1983-2000 Microsoft Corporation. All rights reserved.</small>
9S0000.01-020	OEM Microsoft MS-DOS 6.22, English floppy disks, only supplied together with a new PC	

Table 187: 9S0000.01-010, 9S0000.01-020 - Order data

#### 3.2 Known problems

Either no drivers are available for the following hardware components or only with limitations:

- HDA sound is not supported.
- USB 2.0: only USB 1.1 rates can be achieved.
- "Graphics engine 2" (for e.g. extended desktop mode) cannot be used.
- Some "ACPI control" functions in BIOS cannot be used.

The following table shows the tested resolutions and color depths on the monitor/panel interface with 945GME CPU boards.

Resolutions for DVI	Color depth		
	8-bit	16-bit	24-bit
640 x 480	✓	✓	✓
800 x 600	✓	✓	✓
1024 x 768	✓	✓	✓
1280 x 1024	✓	✓	✓

Table 188: Tested resolutions and color depths for DVI signals

Resolutions for RGB	Color depth		
	8-bit	16-bit	24-bit
640 x 480	✓	✓	✓
800 x 600	✓	✓	✓
1024 x 768	✓	✓	✓
1280 x 1024	✓	✓	✓
1600 x 1200	✓	✓	✓
1920 x 1440	✓	✓	✓

Table 189: Tested resolutions and color depths for RGB signals

## 4 Windows XP Professional

### 4.1 Order data


Model number	Short description	Figure
	<b>Windows XP Professional</b>	
5SWWXP.0600-ENG	Microsoft OEM Windows XP Professional Service Pack 3, CD, English. Only available with a new device.	
5SWWXP.0600-GER	Microsoft OEM Windows XP Professional Service Pack 3, CD, German. Only available with a new device.	
5SWWXP.0600-MUL	Microsoft OEM Windows XP Professional Service Pack 3, CD, multilingual. Only available with a new device.	
5SWWXP.0500-ENG	Microsoft OEM Windows XP Professional Service Pack 2c, CD, English. Only available with a new device.	
5SWWXP.0500-GER	Microsoft OEM Windows XP Professional Service Pack 2c, CD, German. Only available with a new device.	
5SWWXP.0500-MUL	Microsoft OEM Windows XP Professional Service Pack 2c, CD, multilingual. Only available with a new device.	

Table 190: 5SWWXP.0600-ENG, 5SWWXP.0600-GER, 5SWWXP.0600-MUL, 5SWWXP.0500-ENG, 5SWWXP.0500-GER, 5SWWXP.0500-MUL - Order data

### 4.2 Overview

Model number	Edition	Target system	Chipset	Service Pack	Language	Preinstalled	Memory required on the disk	Minimum amount of RAM
5SWWXP.0600-ENG	Professional	APC510 APC511 APC620 APC810 APC820 APC910 PPC700 PPC725 PPC800 PP500	945GME GM45 QM77/HM76 NM10 US15W	SP3	English	Optional	≤ 2.1 GB	128 MB
5SWWXP.0600-GER	Professional	APC510 APC511 APC620 APC810 APC820 APC910 PPC700 PPC725 PPC800 PP500	945GME GM45 QM77/HM76 NM10 US15W	SP3	German	Optional	≤ 2.1 GB	128 MB
5SWWXP.0600-MUL	Professional	APC510 APC511 APC620 APC810 APC820 APC910 PPC700 PPC725 PPC800 PP500	945GME GM45 QM77/HM76 NM10 US15W	SP3	Multilingual	Optional	≤ 2.1 GB	128 MB
5SWWXP.0500-ENG	Professional	APC620 APC810 APC820 PPC700 PPC725 PPC800	945GME GM45	SP2c	English	Optional	≤ 2.1 GB	128 MB
5SWWXP.0500-GER	Professional	APC620 APC810 APC820 PPC700 PPC725 PPC800	945GME GM45	SP2c	German	Optional	≤ 2.1 GB	128 MB
5SWWXP.0500-MUL	Professional	APC620 APC810 APC820 PPC700 PPC725 PPC800	945GME GM45	SP2c	Multilingual	Optional	≤ 2.1 GB	128 MB

### 4.3 Installation

Upon request, B&R can preinstall the required Windows XP Professional version on the desired mass storage device (e.g. CompactFlash card, etc.). All of the drivers required for operation (graphics, network, etc.) are also installed in this process.

#### 4.3.1 Installation on a PCI SATA RAID controller - 5ACPCI.RAIC-03, 5ACPCI.RAIC-05, 5ACPCI.RAIC-06

The following steps are necessary to install Windows XP Professional on a PCI SATA RAID controller:

1. Download the RAID driver from the B&R website [www.br-automation.com](http://www.br-automation.com) and copy the files to a diskette.
2. Connect the media drive (5MD900.USB2-01) to the USB port.
3. Insert the diskette and Windows XP Professional CD in the media drive and boot from the CD.
4. Press the F6 key during installation to install a third-party SCSI or driver.
5. Press the "s" key when asked about installing an additional drive. Insert the diskette into the floppy drive. Press "Enter" and select the driver.
6. Follow the installation instructions.
7. The installer will copy the files to the Windows XP Professional folder and restart the Panel PC 800.

#### Information:

- Not all USB FDD drives are supported by the Windows XP installer (see Microsoft KB 916196).
- Depending on the system, the boot order may have to be changed in BIOS.

#### 4.4 Drivers

Current drivers for all approved operating systems are available in the Downloads section of the B&R website [www.br-automation.com](http://www.br-automation.com).

#### Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

## 5 Windows 7

### 5.1 General information

Windows® 7 offers a wealth of innovative features and performance improvements. The 64-bit variants can also exploit the full power of current PC architectures. Faster switching to power saving mode, quicker restores, less memory usage and high-speed detection of USB devices are just a few of the advantages provided by Windows® 7. Both English and German are available in Windows® 7 Professional, while Windows® 7 Ultimate supports up to 35 different languages (up to 36 languages in Service Pack 1). Product activation is not necessary on B&R PCs, which is a huge advantage for simple logistical procedures relating to machine automation.

All of the Windows® operating systems offered by B&R are from the Microsoft Embedded division. This guarantees much longer availability, especially compared to products offered on the consumer market.

### 5.2 Order data


Model number	Short description	Figure
	<b>Windows 7 Professional/Ultimate</b>	
5SWWI7.0100-ENG	Microsoft OEM Windows 7 Professional 32-bit, DVD, English. Only available with a new device.	
5SWWI7.1100-ENG	Microsoft OEM Windows 7 Professional 32-bit, Service Pack 1, DVD, English. Only available with a new device.	
5SWWI7.0100-GER	Microsoft OEM Windows 7 Professional 32-bit, DVD, German. Only available with a new device.	
5SWWI7.1100-GER	Microsoft OEM Windows 7 Professional 32-bit, Service Pack 1, DVD, German. Only available with a new device.	
5SWWI7.0300-MUL	Microsoft OEM Windows 7 Ultimate 32-bit, DVD, multilingual. Only available with a new device.	
5SWWI7.1300-MUL	Microsoft OEM Windows 7 Ultimate 32-bit, Service Pack 1, DVD, multilingual. Only available with a new device.	
5SWWI7.0200-ENG	Microsoft OEM Windows 7 Professional 64-bit, DVD, English. Only available with a new device.	
5SWWI7.1200-ENG	Microsoft OEM Windows 7 Professional 64-bit, Service Pack 1, DVD, English. Only available with a new device.	
5SWWI7.0200-GER	Microsoft OEM Windows 7 Professional 64-bit, DVD, German. Only available with a new device.	
5SWWI7.1200-GER	Microsoft OEM Windows 7 Professional 64-bit, Service Pack 1, DVD, German. Only available with a new device.	
5SWWI7.0400-MUL	Microsoft OEM Windows 7 Ultimate 64-bit, DVD, multilingual. Only available with a new device.	
5SWWI7.1400-MUL	Microsoft OEM Windows 7 Ultimate 64-bit, Service Pack 1, DVD, multilingual. Only available with a new device.	

Table 191: 5SWWI7.0100-ENG, 5SWWI7.1100-ENG, 5SWWI7.0100-GER, 5SWWI7.1100-GER, 5SWWI7.0300-MUL, 5SWWI7.1300-MUL, 5SWWI7.0200-ENG, 5SWWI7.1200-ENG, 5SWWI7.0200-GER, 5SWWI7.1200-GER, 5SWWI7.0400-MUL, 5SWWI7.1400-MUL - Order data

### 5.3 Overview

Model number	Edition	Target system	Chipset	Service Pack	Architecture	Language	Preinstalled	Minimum size of the disk	Minimum amount of RAM
5SWWI7.0100-ENG	Professional	APC510 APC511 APC810 APC910 PPC800 PP500	945GME GM45 QM77/HM76 US15W		32-bit	English	Optional	16 GB	1 GB
5SWWI7.1100-ENG	Professional	APC510 APC511 APC810 APC910 PPC800 PP500	945GME GM45 QM77/HM76 NM10 US15W	SP1	32-bit	English	Optional	16 GB	1 GB
5SWWI7.0100-GER	Professional	APC510 APC511 APC810 APC910 PPC800 PP500	945GME GM45 QM77/HM76 US15W		32-bit	German	Optional	16 GB	1 GB
5SWWI7.1100-GER	Professional	APC510 APC511 APC810 APC910 PPC800 PP500	945GME GM45 QM77/HM76 NM10 US15W	SP1	32-bit	German	Optional	16 GB	1 GB

Model number	Edition	Target system	Chipset	Service Pack	Architecture	Language	Preinstalled	Minimum size of the disk	Minimum amount of RAM
5SWWI7.0300-MUL	Ultimate	APC510 APC511 APC810 APC910 PPC800 PP500	945GME GM45 QM77/HM76 US15W		32-bit	Multilingual	Optional	16 GB <sup>1)</sup>	1 GB
5SWWI7.1300-MUL	Ultimate	APC510 APC511 APC810 APC910 PPC800 PP500	945GME GM45 QM77/HM76 NM10 US15W	SP1	32-bit	Multilingual	Optional	16 GB <sup>1)</sup>	1 GB
5SWWI7.0200-ENG	Professional	APC810 APC910 PPC800	945GME Intel® Core™2 Duo GM45 QM77/HM76		64-bit	English	Optional	20 GB	2 GB
5SWWI7.1200-ENG	Professional	APC810 APC910 PPC800	945GME Intel® Core™2 Duo GM45 QM77/HM76	SP1	64-bit	English	Optional	20 GB	2 GB
5SWWI7.0200-GER	Professional	APC810 APC910 PPC800	945GME Intel® Core™2 Duo GM45 QM77/HM76		64-bit	German	Optional	20 GB	2 GB
5SWWI7.1200-GER	Professional	APC810 APC910 PPC800	945GME Intel® Core™2 Duo GM45 QM77/HM76	SP1	64-bit	German	Optional	20 GB	2 GB
5SWWI7.0400-MUL	Ultimate	APC810 APC910 PPC800	945GME Intel® Core™2 Duo GM45 QM77/HM76		64-bit	Multilingual	Optional	20 GB <sup>1)</sup>	2 GB
5SWWI7.1400-MUL	Ultimate	APC810 APC910 PPC800	945GME Intel® Core™2 Duo GM45 QM77/HM76	SP1	64-bit	Multilingual	Optional	20 GB <sup>1)</sup>	2 GB

1) The memory used by additional language packs is not taken into account in the minimum size of the disk.

## 5.4 Installation

Upon request, B&R can preinstall the required Windows 7 version on the desired mass storage device (e.g. CompactFlash card, etc.). All of the drivers required for operation (graphics, network, etc.) are also installed in this process.

### 5.4.1 Installation on a PCI SATA RAID controller - 5ACPCI.RAIC-03, 5ACPCI.RAIC-05, 5ACPCI.RAIC-06

The following steps are necessary for installing Windows 7 on the PCI SATA RAID controller:

1. Download the RAID driver for Windows 7 from the B&R website at [www.br-automation.com](http://www.br-automation.com) and copy the data to a folder on a USB flash drive.
2. Boot using the Windows 7 DVD.
3. Follow the installation steps until a page appears asking "Where do you want to install Windows?".
4. Plug the USB flash drive with the RAID drivers into an available USB port.
5. Click on "Load driver" and navigate to the directory containing the RAID drivers. Then click Next to continue.
6. Remove the USB flash drive.
7. The Windows 7 installation can now be performed as usual.

#### Information:

Depending on the system, the boot order may have to be changed in BIOS.

### 5.5 Special considerations, limitations

- Windows 7 does not contain a Beep.sys file, which means that an audible signal is no longer sounded (e.g. when pressing a key).
- There is currently no support for the Windows 7 system rating (although this does not apply to PP500, APC510, APC511, APC910 or PPC800 devices with an NM10 chipset).

### 5.6 Drivers

Current drivers for all approved operating systems are available in the Downloads section of the B&R website [www.br-automation.com](http://www.br-automation.com).

#### Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

## 6 Windows Embedded Standard 2009

### 6.1 General information

Windows® Embedded Standard 2009 is the modular version of Windows® XP Professional. It is used if XP applications should be executed with a minimal operating system size. Together with CompactFlash memory, Windows® Embedded Standard 2009 makes it possible to use the Microsoft desktop operating system in harsh environmental conditions. In addition to the familiar features included in Windows® XP Professional, Windows® Embedded Standard 2009 has been improved with regard to dependability by adding a write filter for individual memory partitions. By protecting individual partitions such as the boot partition, the PC system can be started without problems even after an unexpected power failure. B&R offers complete images for industrial PCs, Power Panel and Mobile Panel devices to make the transition to Windows® Embedded Standard 2009 as easy as possible. In addition to Windows® Embedded Standard 2009, the standard Windows® XP Professional operating system is also available in English, German and a multilingual version.

Windows® Embedded Standard 2009 is based on the same binary files as Windows® XP Professional with Service Pack 3 and is optimally tailored to the hardware being used. In other words, only the functions and modules required by the respective device are included. Windows® Embedded Standard 2009 is also based on the same reliable code as Windows® XP Professional with SP3. It provides industry with leading reliability, security and performance improvements as well as the latest technology for web browsing and extensive device support.

### 6.2 Order data


Model number	Short description	Figure
	<b>Windows Embedded Standard 2009</b>	
5SWWXP.0734-ENG	Microsoft OEM Windows Embedded Standard 2009, English; for PPC800 with GM45 chipset; order CompactFlash separately (at least 1 GB)	
	<b>Required accessories</b>	
	<b>CompactFlash</b>	
5CFCRD.016G-06	CompactFlash 16 GB B&R (SLC)	
5CFCRD.032G-06	CompactFlash 32 GB B&R (SLC)	
5CFCRD.1024-06	CompactFlash 1 GB B&R (SLC)	
5CFCRD.2048-06	CompactFlash 2 GB B&R (SLC)	
5CFCRD.4096-06	CompactFlash 4 GB B&R (SLC)	
5CFCRD.8192-06	CompactFlash 8 GB B&R (SLC)	

Table 192: 5SWWXP.0734-ENG - Order data

### 6.3 Overview

Model number	Target system	Chipset	Language	Preinstalled	Minimum size of the disk	Minimum amount of RAM
5SWWXP.0734-ENG	PPC800	GM45	English	Yes	1 GB	256 MB

### 6.4 Features with WES2009 (Windows Embedded Standard 2009)

The following list of features shows the most important device functions included in Windows Embedded Standard 2009.

Function	Present
Enhanced Write Filter (EWF)	✓
File-Based Write Filter (FBWF)	✓
Page file	Configurable
Administrator accounts	✓
User accounts	Configurable
Explorer shell	✓
Registry filter	✓
Internet Explorer 7.0	✓
Internet information service (IIS)	-
Terminal service	✓
Windows Firewall	✓
MSN Explorer	-
Outlook Express	-
Administrative Tools	✓
Remote Desktop	✓
Remote Assistance	-
.NET Framework	-
ASP.NET	-

Table 193: Device functions in Windows Embedded Standard 2009



Function	Present
Local network bridge	✓
Codepages / User locales / Keyboards	✓
Disk Management Service	✓
Windows Installer Service	✓
Class Installer	✓
CoDevice Installer	✓
Media Player 6.4	✓
DirectX 9.0c	✓
Accessories	✓
Number of fonts	89

Table 193: Device functions in Windows Embedded Standard 2009

## 6.5 Installation

Upon request, Windows Embedded Standard 2009 can be preinstalled by B&R on a suitable CompactFlash card (min. 1 GB). The system is then automatically configured when it is switched on for the first time. This procedure takes approximately 10 minutes, with the device being rebooted a number of times.

## 6.6 Drivers

All drivers required for operation are preinstalled along with the operating system. If an older version of the driver is still being used, the latest version can be downloaded and installed from the B&R website ([www.br-automation.com](http://www.br-automation.com)). It is important that Enhanced Write Filter (EWF) is disabled for this.

### 6.6.1 Touch screen driver

In order to operate Automation Panel 800 or Automation Panel 900 touch screen devices, the touch screen driver must be installed manually or the touch screen interface updated in the device manager. The driver is available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)). It is important that Enhanced Write Filter (EWF) is enabled for this.

#### Information:

**Required drivers can only be downloaded from the B&R website, not from manufacturer websites.**

## 7 Windows Embedded Standard 7

### 7.1 General information

The successor to Windows® XP Embedded is Windows® Embedded Standard 7. As with previous versions, this embedded operating system offers full system support for B&R Industrial PCs. In addition to brand new features that are also included in Windows® 7 Professional, Windows® Embedded Standard 7 includes embedded components such as Enhanced Write Filter, File-Based Write Filter, Registry Filter and USB Boot. Windows® Embedded Standard 7 is available in two different versions. The main difference between them has to do with multilingual support. Windows® Embedded Standard 7 is only available in a single language, whereas Windows® Embedded Standard 7 Premium supports the installation of several languages simultaneously.

With Windows® Embedded Standard 7, Microsoft has made substantial improvements in the area of security. The AppLocker program, available in the premium version, can prevent the execution of unknown or potentially undesired applications that are being installed over a network or from drives that are directly connected. A tiered approach allows the differentiation between scripts (.ps1, .bat, .cmd, .vbs and .js), installation files (.msi, .msp) and libraries (.dll, .ocx). AppLocker can also be configured to record undesired activity and display it in the Event Viewer. Windows® Embedded Standard 7 is available in both a 32-bit and 64-bit version.<sup>3)</sup> This ensures that even the most demanding applications have the level of support they need.

### 7.2 Order data


Model number	Short description	Figure
	<b>Windows Embedded Standard 7</b>	
5SWWI7.0534-ENG	Microsoft OEM Windows Embedded Standard 7 32-bit, English; for PPC800 with GM45 chipset; order CompactFlash separately (at least 8 GB)	
5SWWI7.1534-ENG	Microsoft OEM Windows Embedded Standard 7 32-bit, Service Pack 1, English; for PPC800 with GM45 chipset; order CompactFlash separately (at least 16 GB)	
5SWWI7.0634-ENG	Microsoft OEM Windows Embedded Standard 7 64-bit, English; for PPC800 with GM45 chipset; order CompactFlash separately (at least 16 GB)	
5SWWI7.1634-ENG	Microsoft OEM Windows Embedded Standard 7 64-bit, Service Pack 1, English; for PPC800 with GM45 chipset; order CompactFlash separately (at least 16 GB)	
5SWWI7.0734-MUL	Microsoft OEM Windows Embedded Standard 7 Premium 32-bit, multilingual; for PPC800 with GM45 chipset; order CompactFlash separately (at least 8 GB)	
5SWWI7.1734-MUL	Microsoft OEM Windows Embedded Standard 7 Premium 32-bit, Service Pack 1, multilingual; for PPC800 with GM45 chipset; order CompactFlash separately (at least 16 GB)	
5SWWI7.0834-MUL	Microsoft OEM Windows Embedded Standard 7 Premium 64-bit, multilingual; for PPC800 with GM45 chipset; order CompactFlash separately (at least 16 GB)	
5SWWI7.1834-MUL	Microsoft OEM Windows Embedded Standard 7 Premium 64-bit, Service Pack 1, multilingual; for PPC800 with GM45 chipset; order CompactFlash separately (at least 16 GB)	
	<b>Required accessories</b>	
	<b>CompactFlash</b>	
5CFCRD.016G-06	CompactFlash 16 GB B&R (SLC)	
5CFCRD.032G-06	CompactFlash 32 GB B&R (SLC)	
5CFCRD.8192-06	CompactFlash 8 GB B&R (SLC)	
	<b>Optional accessories</b>	
	<b>Windows Embedded Standard 7</b>	
5SWWI7.0900-MUL	Microsoft OEM Windows Embedded Standard 7 32-bit, Language Pack DVD	
5SWWI7.1000-MUL	Microsoft OEM Windows Embedded Standard 7 64-bit, Language Pack DVD	
5SWWI7.1900-MUL	Microsoft OEM Windows Embedded Standard 7 32-bit, Service Pack 1, Language Pack DVD	
5SWWI7.2000-MUL	Microsoft OEM Windows Embedded Standard 7 64-bit, Service Pack 1, Language Pack DVD	

Table 194: 5SWWI7.0534-ENG, 5SWWI7.1534-ENG, 5SWWI7.0634-ENG, 5SWWI7.1634-ENG, 5SWWI7.0734-MUL, 5SWWI7.1734-MUL, 5SWWI7.0834-MUL, 5SWWI7.1834-MUL - Order data

<sup>3)</sup> 64-bit versions are not supported by all systems

## 7.3 Overview

Model number	Edition	Target system	Chipset	Service Pack	Architecture	Language	Preinstalled	Minimum size of the disk	Minimum amount of RAM
5SWWI7.0534-ENG	Embedded	PPC800	GM45		32-bit	English	Optional	8 GB	1 GB
5SWWI7.1534-ENG	Embedded	PPC800	GM45	SP1	32-bit	English	Optional	16 GB	1 GB
5SWWI7.0634-ENG	Embedded	PPC800	GM45		64-bit	English	Optional	16 GB	1 GB
5SWWI7.1634-ENG	Embedded	PPC800	GM45	SP1	64-bit	English	Optional	16 GB	2 GB
5SWWI7.0734-MUL	Premium	PPC800	GM45		32-bit	Multilingual	Optional	8 GB <sup>1)</sup>	1 GB
5SWWI7.1734-MUL	Premium	PPC800	GM45	SP1	32-bit	Multilingual	Optional	16 GB <sup>1)</sup>	1 GB
5SWWI7.0834-MUL	Premium	PPC800	GM45		64-bit	Multilingual	Optional	16 GB <sup>1)</sup>	1 GB
5SWWI7.1834-MUL	Premium	PPC800	GM45	SP1	64-bit	Multilingual	Optional	16 GB <sup>1)</sup>	2 GB

1) The memory used by additional language packs is not taken into account in the minimum size of the disk.

## 7.4 Features with WES7 (Windows Embedded Standard 7)

The following list of features shows the most important device functions included in Windows Embedded Standard 7.

Function	Windows Embedded Standard 7	Windows Embedded Standard 7 Premium
Enhanced Write Filter (EWF)	✓	✓
File-Based Write Filter (FBWF)	✓	✓
Administrator accounts	✓	✓
User accounts	Configurable	Configurable
Windows Explorer shell	✓	✓
Registry filter	✓	✓
Internet Explorer 8.0	✓	✓
Internet Information Service (IIS) 7.0	✓	✓
Anti-malware (Windows Defender)	-	✓
Add-ons (Snipping Tool, Sticky Notes)	-	✓
Windows Firewall	✓	✓
.NET Framework 3.5	✓	✓
32-bit and 64-bit	✓	✓
Remote Desktop Protocol 7.0	✓	✓
File Compression Utility	✓	✓
Windows Installer Service	✓	✓
Windows XP mode	-	-
Media Player 12	✓	✓
DirectX	✓	✓
Multilingual user interface packs in the same image	-	✓
International components and language services	✓	✓
Language pack setup	✓	✓
Windows Update	Configurable	Configurable
Windows PowerShell 2.0	✓	✓
BitLocker	-	✓
AppLocker	-	✓
Tablet PC support	-	✓
Windows Touch	-	✓
Boot from USB flash drive	✓	✓
Accessories	✓	✓
Page file	Configurable	Configurable
Number of fonts	134	134

Table 195: Device functions in Windows Embedded Standard 7

## 7.5 Installation

Upon request, B&R can preinstall Windows Embedded Standard 7 on a suitable CompactFlash card (32-bit: at least 8 GB necessary, 64-bit: at least 16 GB necessary). The system is then automatically configured when it is switched on for the first time. This procedure takes approximately 30 minutes, with the device being rebooted a number of times.

### Information:

If the EWF should be used, all mass storage devices should be disconnected from the system during installation oder SYSPREP (except for the boot drive). It is also possible to disable additional mass storage devices in BIOS.

## 7.6 Drivers

All drivers required for operation are preinstalled along with the operating system. If an older version of the driver is still being used, the latest version can be downloaded and installed from the B&R website ([www.br-automation.com](http://www.br-automation.com)). It is important that Enhanced Write Filter (EWF) is disabled for this.

### 7.6.1 Touch screen driver

A touch screen driver will be installed automatically if a touch controller is detected during the Windows Embedded Standard 7 installation. If a touch controller is not detected during Windows Embedded Standard 7 installation, or if an Automation Panel 800/900 is connected later on, then the touch screen driver needs to be installed manually or the additional touch screen interface must be selected in the touch screen settings in the Windows Control Panel. The driver is available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)). It is important that both the Enhanced Write Filter (EWF) and the File Based Write Filter (FBWF) are disabled for this.

#### **Information:**

**Required drivers can only be downloaded from the B&R website, not from manufacturer websites.**

## 8 Automation Runtime

### 8.1 General information

An integral component of Automation Studio is the real-time operating system, which makes up the software kernel that allows applications to run on a target system.

- Guaranteed highest possible performance for the hardware being used
- Runs on all B&R target systems
- Makes the application hardware-independent
- Easy portability of applications between B&R target systems
- Deterministic behavior guaranteed by cyclic runtime system
- Multitasking according to deterministic runtime rules
- Configuration of priorities, time classes and jitter tolerance
- Up to eight different time classes with any number of subroutines
- Guaranteed response to time and jitter tolerance violations
- Exception handling
- Configurable jitter tolerance in all task classes
- Support for all relevant programming languages, including IEC 61131-3 and ANSI C
- Extensive function library conforming to IEC 61131-3 as well as the expanded Automation library
- Access to all networks and bus systems via function calls or the Automation Studio configuration

B&R Automation Runtime is fully embedded in the corresponding target system (the hardware where Automation Runtime is installed). It allows application programs to access I/O systems (e.g. via fieldbus) and other devices (interfaces, networks, etc.).

### 8.2 Order data


Model number	Short description	Figure
	<b>Accessories</b>	
9A0003.02U	USB port button holder DS9490B	
1A4600.10	B&R Automation Runtime ARwin, incl. license sticker and copy protection	
1A4600.10-2	B&R Automation Runtime ARwin, ARNC0	
1A4600.10-3	B&R Automation Runtime ARwin+PVIControls incl. license sticker and copy protection	
1A4600.10-4	B&R Automation Runtime ARwin+ARNC0+PVIControls	

Table 196: 9A0003.02U, 1A4600.10, 1A4600.10-2, 1A4600.10-3, 1A4600.10-4 - Order data

### 8.3 Automation Runtime Windows (ARwin)

System support is provided by ARwin with an AS 3.0.90 / AR 3.06 upgrade.

An Automation Runtime dongle (USB port button holder with Automation Runtime ARwin dongle) must be connected to run ARwin on a Panel PC 800, see "Order data" on page 233.

#### Information:

**An Automation Runtime dongle is no longer required in AS 3.0.90 / AR 4.00.**

### 8.4 Automation Runtime Embedded (ARemb)

System support is provided by ARemb with an AS 3.0.90 / AR 4.00 upgrade. An Automation Runtime dongle is not required.

## 9 B&R Automation Device Interface (ADI) - Control Center

The ADI (Automation Device Interface) enables access to specific functions on B&R devices. Settings for devices can be read and configured using the B&R Control Center applet in the Control Panel.

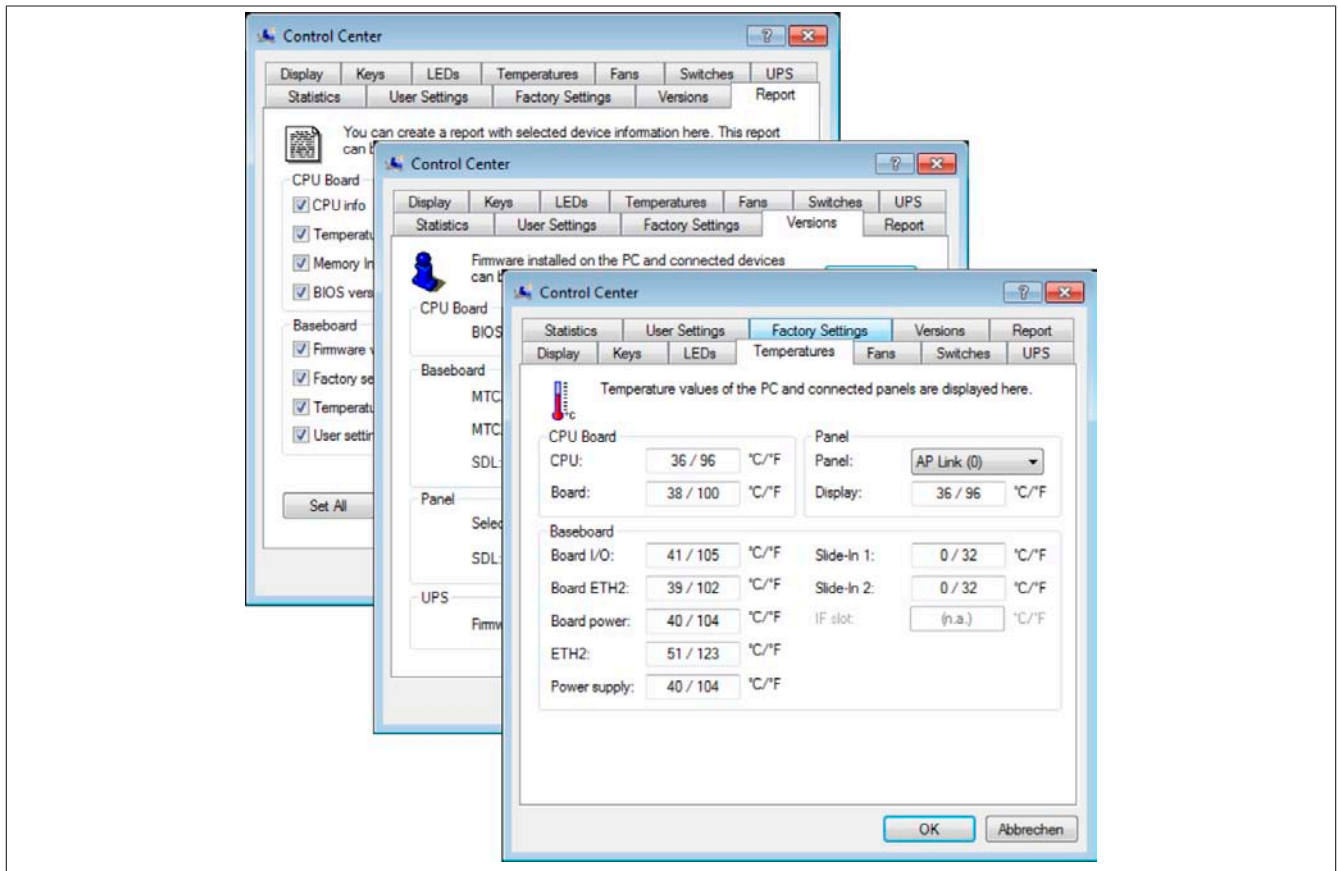


Figure 127: ADI Control Center screenshots - Examples

### Information:

The temperature and voltage values (e.g. CPU temperature, core voltage, battery voltage) shown in the corresponding ADI window represent uncalibrated values for informational purposes. They cannot be used to draw any conclusions about hardware alarms or error conditions. The hardware components used have automatic diagnostic functions that can be applied in the event of error.

### 9.1 Functions

### Information:

The functions provided by the Automation Device Interface (ADI) - Control Center vary according to the device series.

- Changing display-specific parameters
- Reading device-specific keys
- Updating the key configuration
- Enabling device-specific LEDs on a membrane keypad
- Reading and calibrating input devices (e.g. key switches, handwheels, joysticks, potentiometers)
- Reading temperatures, fan speeds, statistical data and switch settings
- Reading operating hours (power-on hours)
- Reading user and factory settings
- Reading software versions
- Updating and backing up BIOS and firmware
- Creating reports about the current system (support assistance)
- Setting the SDL equalizer value when adjusting SDL cables
- Changing the user serial ID

Supports the following systems:

- Automation PC 510
- Automation PC 511
- Automation PC 620
- Automation PC 810
- Automation PC 820
- Automation PC 910
- Panel PC 300
- Panel PC 700
- Panel PC 725
- Panel PC 800
- Power Panel 100/200
- Power Panel 300/400
- Power Panel 500
- Mobile Panel 40/50
- Mobile Panel 100/200
- Connected Automation Panel 800
- Connected Automation Panel 900

## 9.2 Installation

A detailed description of the Control Center can be found in the integrated online help documentation. The B&R Automation Device Interface (ADI) driver (also contains Control Center) is available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

1. Download and unzip the .zip archive.
2. Close all applications.
3. Run the Setup.exe file (e.g. double-click on it in Explorer).

### Information:

**The ADI driver is already included in B&R images of embedded operating systems.**

**If a more current ADI driver version exists (see the Downloads section of the B&R website), it can be installed later. It is important that Enhanced Write Filter (EWF) is disabled for this.**

### 9.3 SDL Equalizer settings

1. Open the **Control Center** in the **Control Panel**.
2. Select the **Display** tab.
3. Click on **Settings**. This opens the following window:

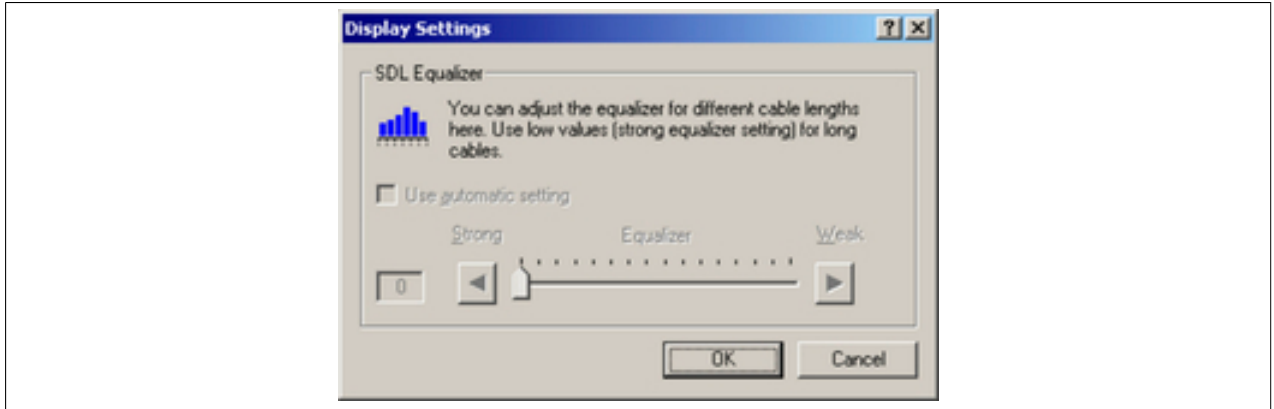


Figure 128: ADI Control Center - SDL Equalizer settings

The settings in this window can be used to configure the SDL Equalizer settings for the display. The equalizer is integrated into Automation Panel devices and adapts the DVI signal to different cable lengths. The equalizer value is automatically calculated based on the cable length. It is possible to set a different equalizer value in order to obtain the best possible display quality (e.g. in the event of low-quality cables or poor DVI signal quality).

The optimal value for the cable length is defined by selecting "Use automatic setting".

The equalizer value can only be changed if the function is supported by Automation Panel 900 (Panel firmware version 1.04 or higher).



## 9.4 UPS configuration

This window displays the status values for an optionally installed B&R add-on UPS and allows the battery settings for the UPS to be edited, updated and backed up. It is also possible to configure the system settings for the UPS.

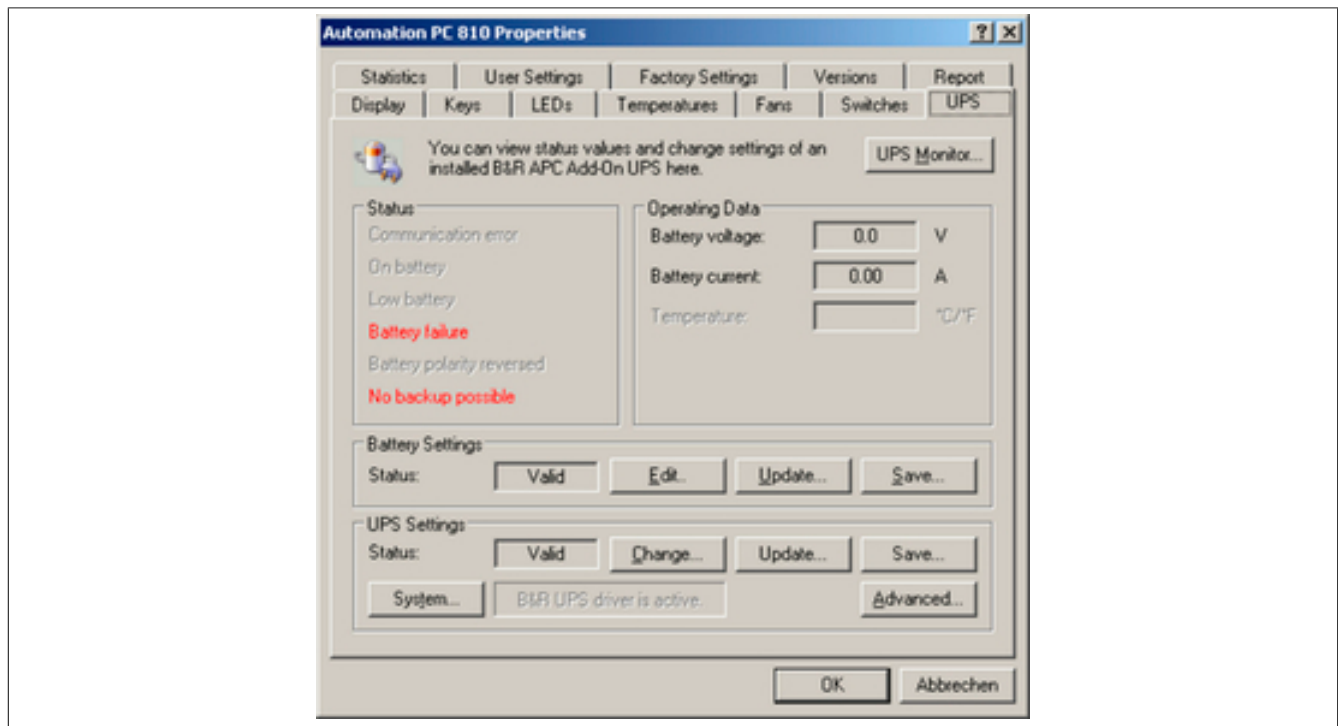


Figure 129: ADI Control Center - UPS settings

### Caution!

The installed UPS must be selected and configured in the Power Options section of the Control Panel in order for battery operation to be supported.

### Information:

The UPS service is supported in B&R Windows Embedded Version 2.10 and higher.

#### 9.4.1 Installing the UPS service for the B&R add-on UPS

1. Open the **Control Center** in the **Control Panel**.
2. Select the **UPS** tab.
3. Under **UPS settings**, click on **System**. This opens the **Power options** in the Control Panel (**Power options** can also be opened directly from the **Control Panel**).
4. Go to the **UPS** tab and click **Select**.
5. Select "Bernecker + Rainer" as the manufacturer and "APC add-on UPS" as the model and then click **Finish**. The value for the COM connection is only required for a serially connected UPS and is ignored by the APC add-on UPS driver.
6. Click on **Apply** to start the UPS service. The UPS status and details will be displayed after a few seconds.
7. Click **OK**.

The text field next to **System** (on the **UPS** tab in the **Control Center**) also indicates whether the B&R UPS driver is active.

### Information:

Administrator rights are required in order to change the energy options or display the UPS status.

#### 9.4.2 Displaying UPS default values

1. Open the **Control Center** in the **Control Panel**.
2. Select the **UPS** tab.

The displayed values are updated automatically.

### Information:

The status "Reversed battery polarity" is only displayed if using UPS firmware version 1.08 or higher. With UPS firmware versions 1.07 and older, switching between battery operation and normal operation can lead to a communication error.

3. Select "UPS monitor" to display UPS status changes since the last time the system or UPS driver was started.

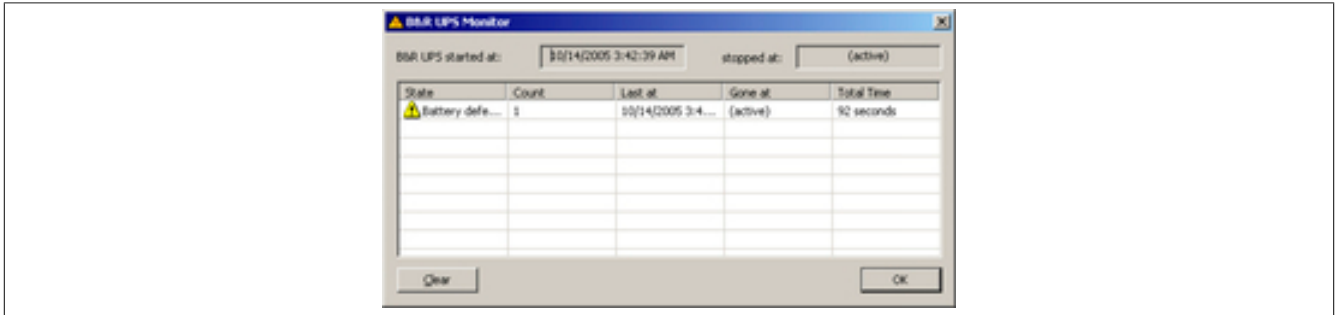


Figure 130: ADI Control Center - UPS monitor

The window is updated automatically when the status changes.

To remove a status from the list, click on **Clear**.

### Information:

The current status of the UPS is also displayed on the UPS page in the power options when the UPS service is started in the Windows Control Panel.

### Information:

In a German version of Windows XP Professional the battery status is shown as "Low" in the power options even if the battery is OK (Windows error). In an English version, three battery status levels are displayed: unknown, OK and replace. A low battery status is never displayed.

#### 9.4.3 Changing UPS battery settings

1. Open the **Control Center** in the **Control Panel**.
2. Select the **UPS** tab.
3. Under **Battery settings**, click on **Edit**. This opens the "Open" dialog box.
4. Select and **open** the file containing the battery settings.



Figure 131: ADI Control Center - UPS battery settings

This window can be used to change the settings for the UPS battery.

Click **OK** to write the changed settings to the file. The battery settings for the UPS can then be updated with this file.

### Information:

To make settings for non-B&R batteries, it is best to make a copy of a file that contains battery settings from B&R under a new name and then adjust the settings in this new file for the battery being used.

Current files with settings for batteries from B&R can be updated using B&R's "Upgrade PPC800 MTCX" software.

### Information:

- The current UPS firmware version 1.10 does not use charge end voltage, deep discharge voltage, service life and deep discharge cycles.
- Service life is only included in version 2 (and higher) of the UPS battery settings and only valid for B&R UPS batteries at 25°C ambient temperature.
- Deep discharge cycles are only included in version 3 (and higher) of the UPS battery settings and only valid for UPS batteries from B&R.

### Information:

To change the current battery settings on the UPS, they must first be saved to a file.

#### 9.4.4 Updating UPS battery settings

1. Open the **Control Center** in the **Control Panel**.
2. Select the **UPS** tab.
3. Under **Battery settings**, click on **Update**. Clicking on "Open" opens a dialog box.
4. Select and **open** the file containing the battery settings. The "Download" dialog box is opened.

The transfer can be canceled by clicking on **Cancel**. "Cancel" is disabled when writing to flash memory.

### Information:

- The UPS cannot be operated while the battery settings are being updated.
- If the transfer is interrupted, then the procedure must be repeated until the battery settings have been updated successfully. Otherwise, battery operation will no longer be possible.

Deleting the data in flash memory can take several seconds depending on the memory block being used. The progress indicator is not updated during this time.

### Information:

The UPS is automatically restarted after a successful download. This can cause a brief failure in UPS communication.

#### 9.4.5 Saving UPS battery settings

1. Open the **Control Center** in the **Control Panel**.
2. Select the **UPS** tab.
3. Under "Battery settings", click on **Save**. This opens the "Save as" window.
4. Enter a filename or select an existing file and click on **Save**.

### Information:

UPS settings can only be saved with UPS firmware version 1.10 and higher.

The transfer can be aborted by clicking on **Cancel** in the Download dialog box.

#### 9.4.6 Configuring UPS system settings

1. Open the **Control Center** in the **Control Panel**.
2. Select the **UPS** tab.
3. Under **UPS settings**, click on **Change**. This opens the following window:

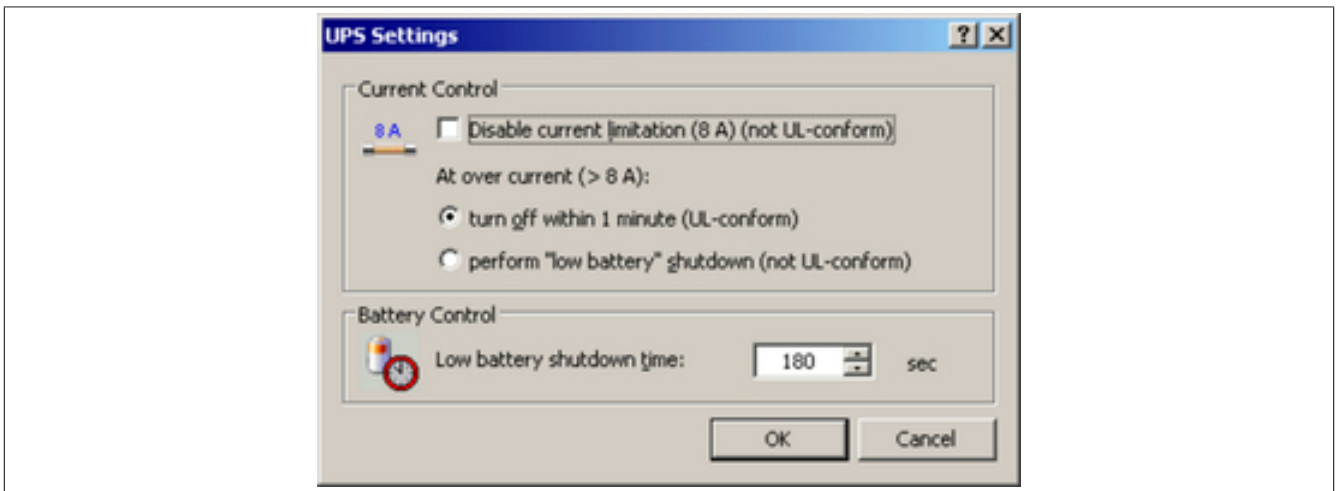


Figure 132: ADI Control Center - UPS settings

Additional information regarding UPS system settings can be found in the Windows help documentation.

### Information:

- UPS settings can only be changed with UPS firmware version 1.10 and higher. If there are no modified settings on the UPS, then the factory or default settings are used.
- The UPS is automatically restarted after the UPS settings have been changed. This can cause a brief disruption in communication with the UPS.
- Administrator rights are required in order to change the energy options or display the UPS status.

### 9.4.6.1 Disabling 8 A current limitation

#### Information:

It is not UL-compliant to switch off the 8 A current limitation on devices during battery operation!

"Low battery" shutdowns caused by overcurrent >8 A on devices running on the battery are not UL compliant!

Select the checkbox **Disable current limitation (8 A)**.

If current limitation is enabled (checkbox not selected), then the UPS uses battery operation to check whether the UPS battery is discharged with 8 A for longer than 16 seconds. If so, then an overcurrent alarm is sent to the PC.

#### Information:

**Current limitation is only supported with UPS firmware version 1.10 and higher.**

Enabling one of the two following options determines how the UPS should perform when an overcurrent alarm occurs:

If **Turn-off within 1 minute** is selected, then the UPS will be switched off within one minute when an overcurrent alarm occurs.

#### Warning!

**The operating system will not be properly shut down if an overcurrent alarm occurs!**

If **Perform "low battery" shutdown** is selected, then the UPS will also signal a "Low battery alarm" in addition to the overcurrent alarm and will be switched off after the defined **Low battery shutdown time**. This will allow the operating system to shut down properly when the UPS service is enabled.

### 9.4.6.2 Changing the shutdown time of the UPS when the battery is low

Enter the **Low battery shutdown time** in seconds. This is the amount of time that the UPS will wait before shutting off the power supply when the battery level is low.

This prevents the UPS battery from becoming too low if the Windows UPS service is not enabled to have the operating system turn off the UPS.

If the UPS service is enabled, then the UPS will be turned off by the operating system in accordance with the **Shutdown time** UPS service in Windows (see "Changing additional UPS settings" on page 241) when the battery level is low. The **Low battery shutdown time** will then be ignored.

#### Information:

- The low battery shutdown time must be set to at least 60 seconds so that the operating system has enough time to send the shutdown command to the UPS when the battery level is low (normally occurs after approximately 30 seconds).
- The low battery shutdown time can only be set with UPS firmware version 1.10 and higher. UPS firmware version 1.08 always uses a switch-off delay of 180 seconds. UPS firmware versions older than 1.08 do not shut down automatically when the battery level is low.

### 9.4.7 Changing additional UPS settings

1. Open the **Control Center** in the **Control Panel**.
2. Select the **UPS** tab.
3. Under **UPS settings**, click on **Advanced**. This opens the following window:

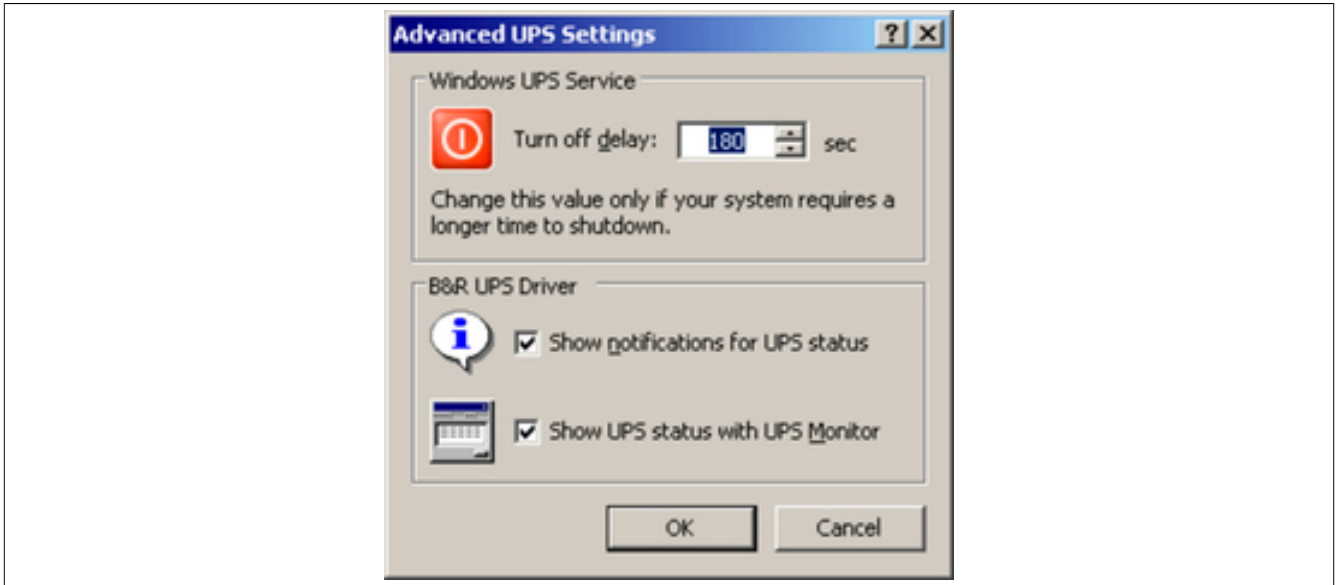


Figure 133: ADI Control Center - Advanced UPS settings

### Information:

Administrator rights are required in order to display this window.

#### 9.4.7.1 Changing the UPS shutdown time

The **Turn off delay** can be entered under **Windows UPS service** in seconds. This is the length of time that the UPS waits before switching off the power supply. When a critical alarm occurs (e.g. low battery level), the Windows UPS service will send a shutdown command with the turn off delay time to the UPS and shut down the system.

### Information:

This time is evaluated by the Windows UPS Service but cannot be set in the UPS system settings of the power options. This value should only be changed if the system requires longer than the default setting of 180 seconds to shut down.

### Caution!

The time entered must be longer than the time required to shut down the operating system.

#### 9.4.7.2 Enabling UPS notifications

Under **B&R UPS driver**, enable the checkbox **Show notifications for UPS status**. Any changes to the UPS status will then trigger a message from the B&R UPS driver.

### Information:

Shutting down the system is only reported by the Windows UPS service. The UPS service also sends other notifications if so enabled in the UPS system settings in the power options. These messages are only displayed when the Windows Messenger service<sup>4)</sup> is active and the PC is connected to a network. In addition, some conditions of the B&R add-on UPS are not detected by the Windows UPS Service and therefore do not trigger messages (e.g. when there are no battery settings on the UPS). Windows services can be found by opening the Control Panel and selecting "Services" under "Administrative tools".

If the checkbox **Show UPS status with UPS monitor** is also enabled, a new message is not displayed for every change. Instead, only a general message and request to start the B&R UPS monitor are shown. As long as the UPS monitor is active, no new messages will be displayed.

### Information:

Regardless of these options, all changes to the UPS status are logged in the Windows event log (under "Application").

<sup>4)</sup> The Windows Messenger service is supported starting with B&R Windows Embedded version 2.20 and higher.

## 9.4.8 Procedure following power failure

### 9.4.8.1 Overcurrent shutdown

If overcurrent >8 A is present during battery operation for a duration of 16 seconds, then an overcurrent shutdown takes place. A switch-off time of one minute is available to the system.

If power returns during this time, then the shutdown process is aborted.

#### **Information:**

**Overcurrent shutdown has the highest priority.**

### 9.4.8.2 Low battery shutdown

If the LowBatteryFlag is set during power failure, then a "low battery" shutdown is performed to prevent the battery from fully discharging. Once the switch-off time expires (3 minutes by default), the UPS shuts down.

If an "overcurrent" shutdown or "standard" shutdown is detected during the shutdown process, the "low battery" shutdown is replaced by the respective process.

### 9.4.8.3 Standard shutdown

The standard shutdown is in effect whenever the UPS service is active; the switch-off time is 3 minutes by default.

If power returns during the switch-off time, then the shutdown procedure is aborted.

If power returns during the shutdown process, then the shutdown timer will run until the B&R Industrial PC enters standby mode, at which point the system will be rebooted.

## 10 B&R Automation Device Interface (ADI) Development Kit

This software can be used to access B&R Automation Device Interface (ADI) functions directly from Windows applications created in one of the following development environments:

- Microsoft Visual C++ 6.0
- Microsoft Visual Basic 6.0
- Microsoft Embedded Visual C++ 4.0
- Microsoft Visual Studio 2005 (or newer)

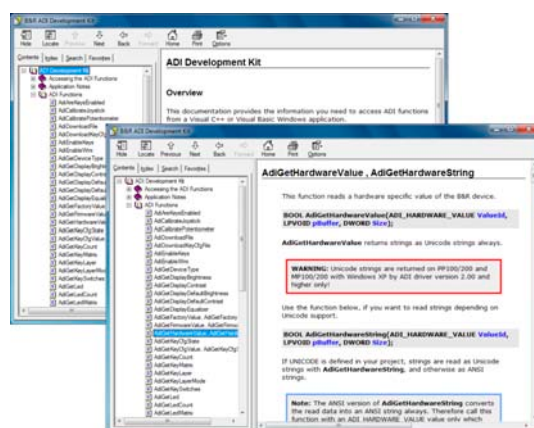


Figure 134: ADI Development Kit screenshots (version 3.60)

Features:

- One Microsoft Visual Basic module with ADI function declarations
- Header files and import libraries for Microsoft Visual C++
- Help files for Visual Basic and Visual C++
- Sample projects for Visual Basic and Visual C++
- ADI DLL (for application testing if no ADI driver is installed)

Supports the following systems (version 3.60 and higher):

- Automation PC 510
- Automation PC 511
- Automation PC 620
- Automation PC 810
- Automation PC 820
- Automation PC 910
- Panel PC 300
- Panel PC 700
- Panel PC 800
- Power Panel 100/200
- Power Panel 300/400
- Power Panel 500
- Mobile Panel 40/50
- Mobile Panel 100/200

The ADI driver installed on the stated product series must be suitable for that device. The ADI driver is already included in B&R images of embedded operating systems.

A detailed description of how to use ADI functions can be found in the online help documentation.



The B&R Automation Device Interface (ADI) development kit is available at no cost in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

## 11 B&R Automation Device Interface (ADI) .NET SDK

This software can be used to access B&R Automation Device Interface (ADI) functions directly from .NET applications created using Microsoft Visual Studio 2005 or later.

Supported programming languages:

- Visual Basic
- Visual C++
- Visual C#

System requirements

- Development system: PC with Windows XP/7 and
  - Microsoft Visual Studio 2005 (or newer)
  - Microsoft .NET Framework 2.0 and/or Microsoft .NET Compact Framework 2.0 (or newer)

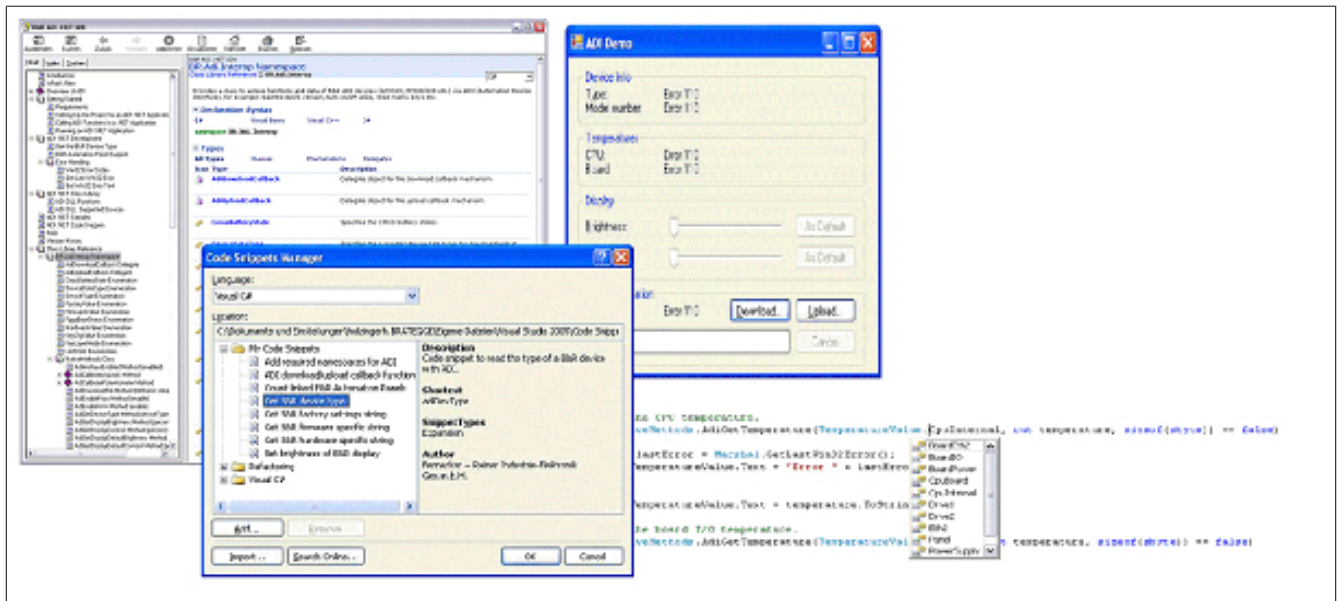


Figure 135: ADI .NET SDK screenshots (version 2.00)

Features (version 2.00 and higher):

- ADI .NET class library
- Help files in HTML Help 1.0 format (.chm) and MS Help 2.0 format (.HxS) (help documentation is in English)
- Sample projects and code snippets for Visual Basic, Visual C++ and Visual C#
- ADI DLL (for application testing if no ADI driver is installed)

Supports the following systems (version 2.00 and higher):

- Automation PC 510
- Automation PC 511
- Automation PC 620
- Automation PC 810
- Automation PC 820
- Automation PC 910
- Panel PC 300
- Panel PC 700
- Panel PC 800
- Power Panel 100/200
- Power Panel 300/400
- Power Panel 500
- Mobile Panel 40/50
- Mobile Panel 100/200

The ADI driver installed on the stated product series must be suitable for that device. The ADI driver is already included in B&R images of embedded operating systems.

A detailed description of how to use ADI functions can be found in the online help documentation.

The ADI .NET SDK is available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

## 12 B&R Key Editor

On display devices, it is often necessary to adapt the function keys and LEDs directly to the application software being used. The B&R Key Editor makes it quick and easy to implement a unique configuration for the application.

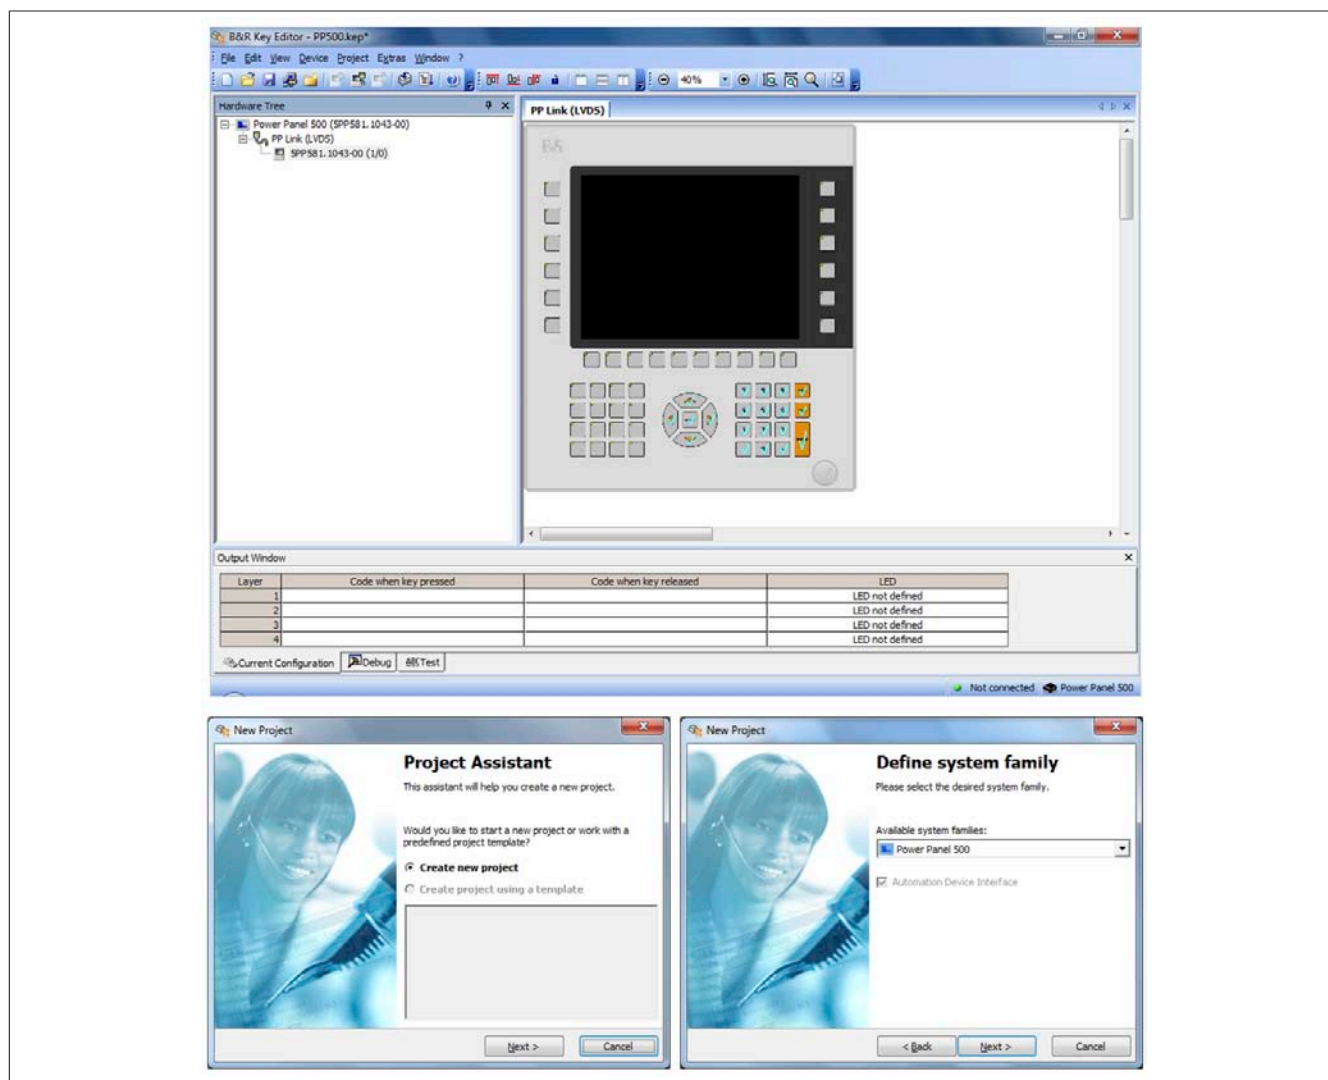


Figure 136: B&R Key Editor screenshots (version 3.30)

### Features:

- Configuration of normal keyboard keys (A, B, C, etc.)
- Keyboard shortcuts (CTRL+C, SHIFT+DEL, etc.) using only one key
- Special key functions (change brightness, etc.)
- Assignment of functions to LEDs (HDD access, power, etc.)
- 4 assignments possible per key (using layers)
- Configuration of the panel locking time when multiple Automation Panel 900 devices are connected to Automation PC and Panel PC devices.

### Supports the following systems (version 3.30):

- Automation PC 510
- Automation PC 511
- Automation PC 620
- Automation PC 810
- Automation PC 820
- Automation PC 910
- Automation Panel 800
- Automation Panel 830
- Automation Panel 900

- IPC2000, IPC2001, IPC2002
- IPC5000, IPC5600
- IPC5000C, IPC5600C
- Mobile Panel 40/50
- Mobile Panel 100/200
- Panel PC 300
- Panel PC 700
- Panel PC 800
- Power Panel 100/200
- Power Panel 300/400
- Power Panel 500

A detailed guide for configuring keys and LEDs can be found in the B&R Key Editor's online help documentation. The B&R Key Editor is available at no cost in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)). It can also be found on the B&R HMI Drivers & Utilities DVD (model number 5SWHMI.0000-00).

## Chapter 5 • Standards and certifications

---

### 1 Standards and guidelines

#### 1.1 CE mark



This mark certifies that all harmonized EN standards for the applicable directives have been met for B&R products.

#### 1.2 EMC directive

These devices meet the requirements of EC directive "2004/108/EC Electromagnetic compatibility" and are designed for the following areas:

EN 61131-2:2007	Programmable logic controllers - Part 2: Equipment requirements and tests
EN 61000-6-2:2005	Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments
EN 61000-6-4:2007	Electromagnetic compatibility (EMC) - Part 6-4: Generic standards - Emission standard for industrial environments

#### 1.3 Low voltage directive

These devices satisfy the requirements of EC directive "2006/95/EC Low voltage directive" and are designed for the following areas:

EN 61131-2:2007	Programmable logic controllers - Part 2: Equipment requirements and tests
EN 60204-1:2006 + A1:2009	Safety of machinery - Electrical equipment of machines - Part 1: General requirements

## 2 Certifications

### Danger!

**A complete system can only receive certification if ALL of the individual components it includes have the applicable certifications. If an individual component is being used that DOES NOT have an applicable certification, then the complete system will NOT RECEIVE certification.**

B&R products and services comply with applicable standards. This includes international standards from organizations such as ISO, IEC and CENELEC, as well as national standards from organizations such as UL, CSA, FCC, VDE, ÖVE, etc. We are committed to ensuring the reliability of our products in an industrial environment.

Unless otherwise specified, the following certifications apply:

### 2.1 UL certification



Products with this label have been certified by Underwriters Laboratories and are listed as "Industrial Control Equipment". This mark is valid for the USA and Canada and simplifies the certification of your machines and systems in these areas.

Underwriters Laboratories (UL) in accordance with the UL508 standard - 17th Edition  
Canadian (CSA) standard in accordance with C22.2 No. 142-M1987

## Chapter 6 • Accessories

The following accessories have successfully completed functional testing at B&R and are approved for use with this device. Nevertheless, it is important to observe any limitations that may apply to the complete system when operated with other individual components. When operating the complete system, the specifications for the individual components must be adhered to.

All components listed in this manual have been subjected to extensive system and compatibility testing and are approved for use. B&R can make no guarantee regarding the functionality of non-approved accessories.

### 1 Replacement CMOS batteries

#### 1.1 0AC201.91 / 4A0006.00-000

##### 1.1.1 General information

This lithium battery is needed to back BIOS CMOS data and the real-time clock (RTC).

The battery is subject to wear and must be replaced when the battery power is insufficient ("Bad" status).

##### 1.1.2 Order data


Model number	Short description	Figure
	<b>Batteries</b>	
0AC201.91	Lithium batteries 4 pcs., 3 V / 950 mAh button cell We hereby state that the lithium cells contained in this shipment qualify as "partly regulated". Handle with care. If the package is damaged, inspect the cells, repack intact cells and protect the cells against short circuit. For emergency information, call RENATA SA at +41 61 319 28 27.	
4A0006.00-000	Lithium battery, 3 V / 950 mAh, button cell	

Table 197: 0AC201.91, 4A0006.00-000 - Order data

##### 1.1.3 Technical data

#### Warning!

The battery must be replaced by a Type CR2477N Renata battery only. The use of another battery may present a risk of fire or explosion.

The battery may explode if handled improperly. Do not recharge, disassemble or dispose of in fire.

#### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	0AC201.91	4A0006.00-000
General information		
Storage time	Max. 3 years at 30°C	
Certification	Yes	
CE	Yes	Yes
cULus	Yes	-
Electrical characteristics		
Capacity	950 mAh	
Self-discharging	<1% per year (at 23°C)	
Voltage range	3 V	
Environmental conditions		
Temperature	-20 to 60°C	
Storage		

Table 198: 0AC201.91, 4A0006.00-000 - Technical data



Product ID	0AC201.91	4A0006.00-000
Relative humidity		
Operation		0 to 95%
Storage		0 to 95%
Transport		0 to 95%

Table 198: 0AC201.91, 4A0006.00-000 - Technical data

## 2 Power connectors

### 2.1 0TB103.9x

#### 2.1.1 General information

The single-row 3-pin terminal block 0TB103 is used to connect the supply voltage.

#### 2.1.2 Order data


Model number	Short description	Figure
	<b>Terminal blocks</b>	
0TB103.9	Connector, 24 VDC, 3-pin female, 3.31 mm <sup>2</sup> screw clamp, protected against vibration by the screw flange	
0TB103.91	Connector, 24 VDC, 3-pin female, 3.31 mm <sup>2</sup> cage clamp, protected against vibration by the screw flange	

Table 199: 0TB103.9, 0TB103.91 - Order data

#### 2.1.3 Technical data

#### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	0TB103.9		0TB103.91	
General information				
Certification				
CE			Yes	
cULus			Yes	
cULus HazLoc Class 1 Division 2			Yes	
GL			Yes	
Terminal block				
Note	Protected against vibration by the screw flange Nominal values according to UL			
Number of pins	3 (female)			
Type of terminal clamp	Screw clamps		Cage clamps <sup>2)</sup>	
Cable type	Only copper wires (no aluminum wires!)			
Distance between contacts	5.08 mm			
Connection cross section				
AWG wire	26 to 14 AWG		26 to 12 AWG	
Wire end sleeves with plastic covering			0.20 to 1.50 mm²	
Solid wires			0.20 to 2.50 mm²	
Fine strand wires	0.20 to 1.50 mm²		0.20 to 2.50 mm²	
With wire end sleeves			0.20 to 1.50 mm²	
Fastening torque	0.4 Nm		-	
Electrical characteristics				
Nominal voltage	300 V			
Nominal current <sup>1)</sup>	10 A / contact			
Contact resistance	≤ 5 mΩ			

Table 200: 0TB103.9, 0TB103.91 - Technical data

- 1) The limit data for each I/O module must be taken into consideration.  
 2) Cage clamp terminal blocks cannot be used side-by-side.

3 DVI/Monitor adapter

3.1 5AC900.1000-00

3.2 General information

This adapter enables a standard monitor to be connected to the DVI-I interface.

3.3 Order data


Model number	Short description	Figure
	Miscellaneous	
5AC900.1000-00	DVI (male connector) to CRT (female connector) adapter. For connecting a standard monitor to a DVI-I interface.	

Table 201: 5AC900.1000-00 - Order data

## 4 USB interface cover

### 4.1 5AC900.1201-00

#### 4.1.1 General information

Flat front-side USB interface cover for Automation Panel 900, Power Panel 500, Panel PC 700 and Panel PC 800 devices.

#### 4.1.2 Order data


Model number	Short description	Figure
<b>Accessories</b>		
5AC900.1201-00	USB interface cover M20 IP65 flat	

Table 202: 5AC900.1201-00 - Order data

### 4.2 5AC900.1201-01

#### 4.2.1 General information

Round front-side knurled USB interface cover (with anti-loss strap) for Automation Panel 900, Power Panel 500, Panel PC 700 and Panel PC 800 devices.

#### 4.2.2 Order data


Model number	Short description	Figure
<b>Accessories</b>		
5AC900.1201-01	USB interface cover M20 IP65 curved	

Table 203: 5AC900.1201-01 - Order data

## 5 Clamping blocks

### 5.1 5AC900.BLOC-00

#### 5.1.1 General information

These replacement clamping blocks are used to mount B&R panel devices.

#### 5.1.2 Order data


Model number	Short description	Figure
<b>Accessories</b>		
5AC900.BLOC-00	Terminal block with brackets, 10 pcs.; replacement part	

Table 204: 5AC900.BLOC-00 - Order data

## 6 Uninterruptible power supply

With an optionally integrated UPS, the B&R Industrial PC makes sure that the PC system completes write operations even when a power failure occurs. When the UPS detects a power failure, it switches to battery operation immediately without interruption. This means that all running programs are shut down properly by the UPS software to prevent the possibility of inconsistent data (only functions if the UPS is already configured and the driver is enabled).

### Information:

- The monitor/panel is not buffered by the UPS and will shut off when the power fails.
- More detailed information about uninterruptible power supplies can be found in the user's manual for the external UPS. This can be downloaded from the B&R website.

Because the charging circuit is integrated in the housing of the B&R Industrial PC, installation has been simplified to merely attaching the connection cable to the battery unit mounted next to the PC.

Special emphasis was placed on ease of maintenance when the battery unit was designed. Batteries are easily accessible from the front and can be replaced in just a few moments when servicing.

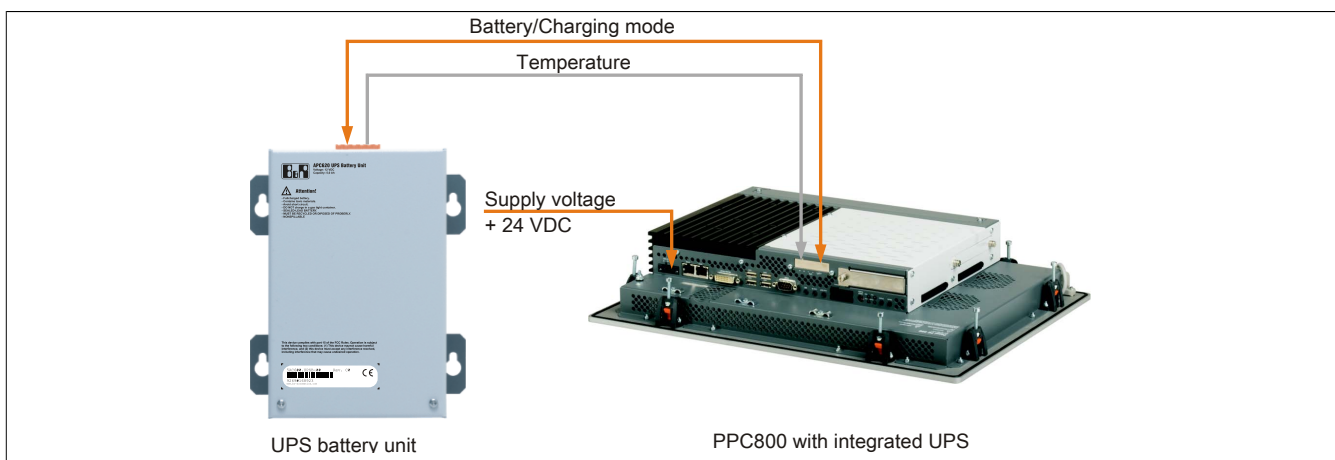


Figure 137: UPS principle

### 6.1 Features

- Long-lasting, maintenance-free rechargeable batteries
- Communication via integrated interfaces
- Temperature sensor
- Driver software
- Deep discharge protection

### 6.2 Requirements

- A suitable system unit
- Add-on UPS module 5AC600.UPSI-00
- Battery unit 5AC600.UPSB-00
- UPS connection cable 0.5 m (5CAUPS.0005-00) or 3 m (5CAUPS.0030-00)
- Configuration of the B&R UPS in the ADI Control Center

### 6.3 5AC600.UPSI-00

#### 6.3.1 General information

This add-on UPS module can easily be installed in an appropriate system unit (for a list of required revisions, see section 6.2 "Requirements" on page 258).

#### 6.3.2 Order data


Model number	Short description	Figure
	<b>Uninterruptible power supplies</b>	
5AC600.UPSI-00	UPS module for APC620, APC810, PPC800; for system units 5PC600.SX01-00 (beginning with rev. H0), 5PC600.SX02-00 (beginning with rev. G0), 5PC600.SX02-01 (beginning with rev. H0), 5PC600.SX05-00 (beginning with rev. F0), 5PC600.SX05-01 (beginning with rev. F0), 5PC600.SF03-00 (beginning with rev. A0), 5PC810.SX*, 5PC820.1505-00, 5PC820.1906-00. Order cable (5CAUPS.0005-00 or 5CAUPS.0030-00) and battery unit (5AC600.UPSB-00) separately.	
	<b>Required accessories</b>	
	<b>Uninterruptible power supplies</b>	
5AC600.UPSB-00	Battery unit 5 Ah; for APC620, APC810 or PPC800 UPS	
5CAUPS.0005-00	UPS cable 0.5 m; for UPS 5AC600.UPSI-00	
5CAUPS.0030-00	UPS cable 3 m; for UPS 5AC600.UPSI-00	

Table 205: 5AC600.UPSI-00 - Order data

#### 6.3.3 Technical data

##### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5AC600.UPSI-00
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
GL	Yes
<b>Electrical characteristics</b>	
Power consumption	Max. 7.5 watts
Power failure bypass	Max. 20 min at 150 W load
Deep discharge protection	Yes, at 10 V on the battery unit
Short circuit protection	No
Battery charging data	
Charging current	Max. 0.5 A
Switching threshold	
Battery operation	13 V
Mains operation	15 V

Table 206: 5AC600.UPSI-00 - Technical data

#### 6.3.4 Installation

This module is installed using the materials included in delivery. For more information regarding installation, see chapter 7 "Maintenance and service".

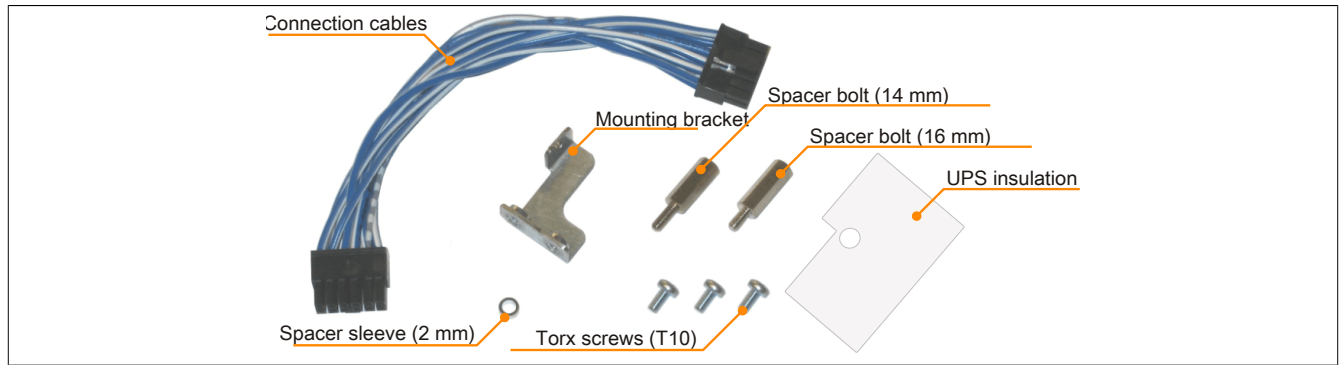


Figure 138: 5AC600.UPSI-00 Add-on UPS module - Installation materials



## 6.4 5AC600.UPSB-00

### 6.4.1 General information

The battery unit has a limited service life and should be replaced regularly (after the specified service life at the latest).

### 6.4.2 Order data


Model number	Short description	Figure
	<b>Uninterruptible power supplies</b>	
5AC600.UPSB-00	Battery unit 5 Ah; for APC620, APC810 or PPC800 UPS	

Table 207: 5AC600.UPSB-00 - Order data

### 6.4.3 Technical data

#### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5AC600.UPSB-00	
Revision	D0	E0
General information		
Battery	Energys Cyclon 12 V 5 Ah (6 connected in series) 10 years <sup>1)</sup> Single cell	
Type		
Service life		
Design		
Temperature sensor	NTC resistance	
Maintenance interval during storage	6 month interval between charges	
Certification	Yes Yes Yes	
CE		
cULus		
GL		
Charge duration when battery low	Typ. 15 hours	
Electrical characteristics		
Nominal voltage	12 V	
Battery current	Max. 8 A	
Capacity	5 Ah	
Fuse <sup>2)</sup>	No <sup>3)</sup>	Yes
Deep discharge voltage	10 V	
Environmental conditions		
Temperature	-30 to 60°C -40 to 80°C -65 to 80°C -65 to 80°C	
Charging mode		
Operation		
Storage		
Transport		
Relative humidity	5 to 95%, non-condensing 5 to 95%, non-condensing 5 to 95%, non-condensing	
Operation		
Storage		
Transport		
Altitude	Max. 3000 m	
Operation		

Table 208: 5AC600.UPSB-00, 5AC600.UPSB-00 - Technical data

Product ID	5AC600.UPSB-00
Mechanical characteristics	
Dimensions	
Width	104 mm <sup>4)</sup>
Length	170.5 mm
Height	87.5 mm
Weight	Approx. 3200 g

Table 208: 5AC600.UPSB-00, 5AC600.UPSB-00 - Technical data

- 1) At 25°C (up to 80% battery capacity).
- 2) 25 A fuse. Replacement fuses can be ordered separately whenever needed.
- 3) The fuse can be installed later in revisions up to and including D0. More information can be found in the "Maintenance and service" chapter of the APC810 and PPC800 user's manuals.
- 4) Dimensions without mounting clips.

#### 6.4.4 Temperature/Service life diagram up to 20% battery capacity

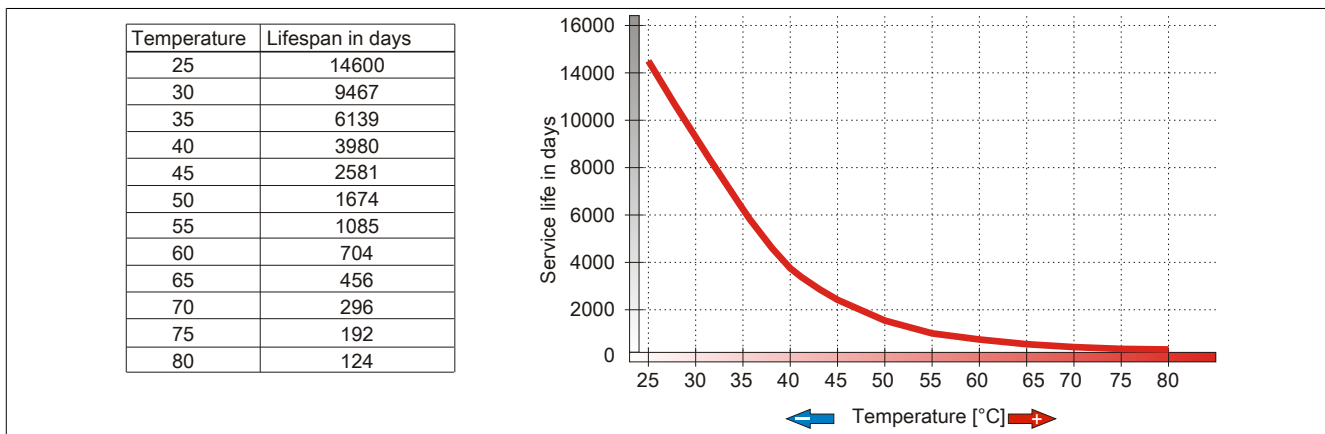


Figure 139: Temperature/Service life diagram

#### 6.4.5 Deep discharge cycles

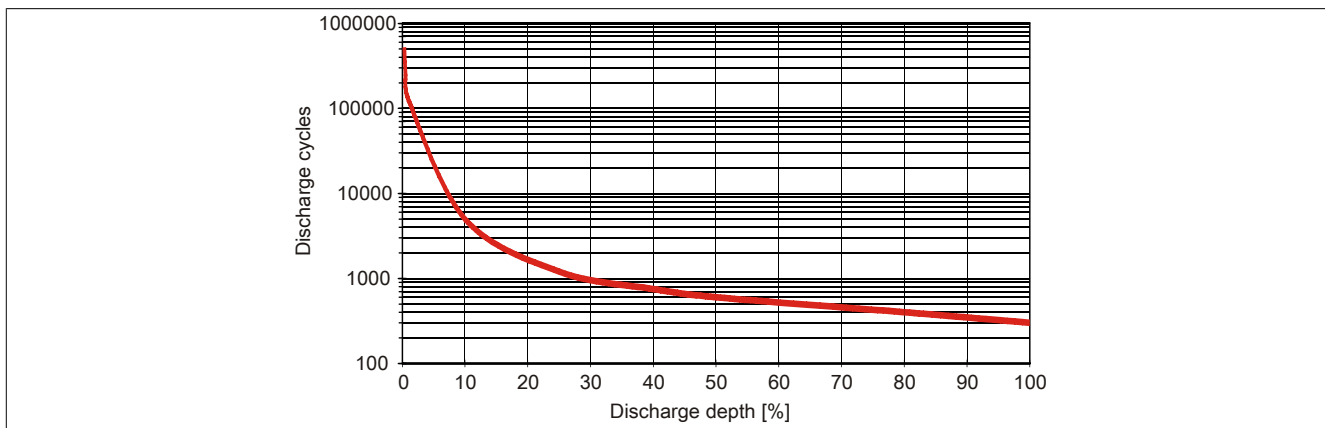


Figure 140: Deep discharge cycles

### 6.4.6 Dimensions

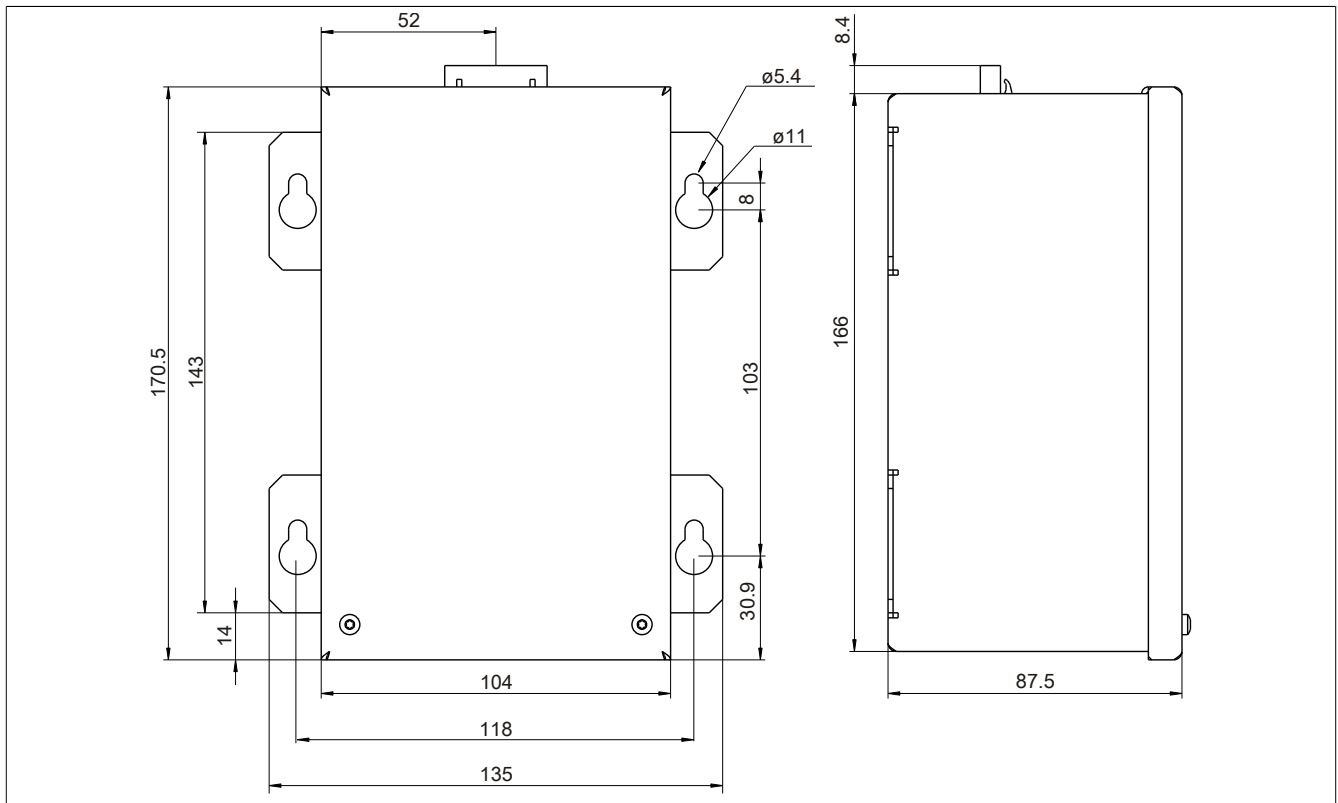


Figure 141: 5PC600.UPSB-00 - Dimensions

### 6.4.7 Drilling template

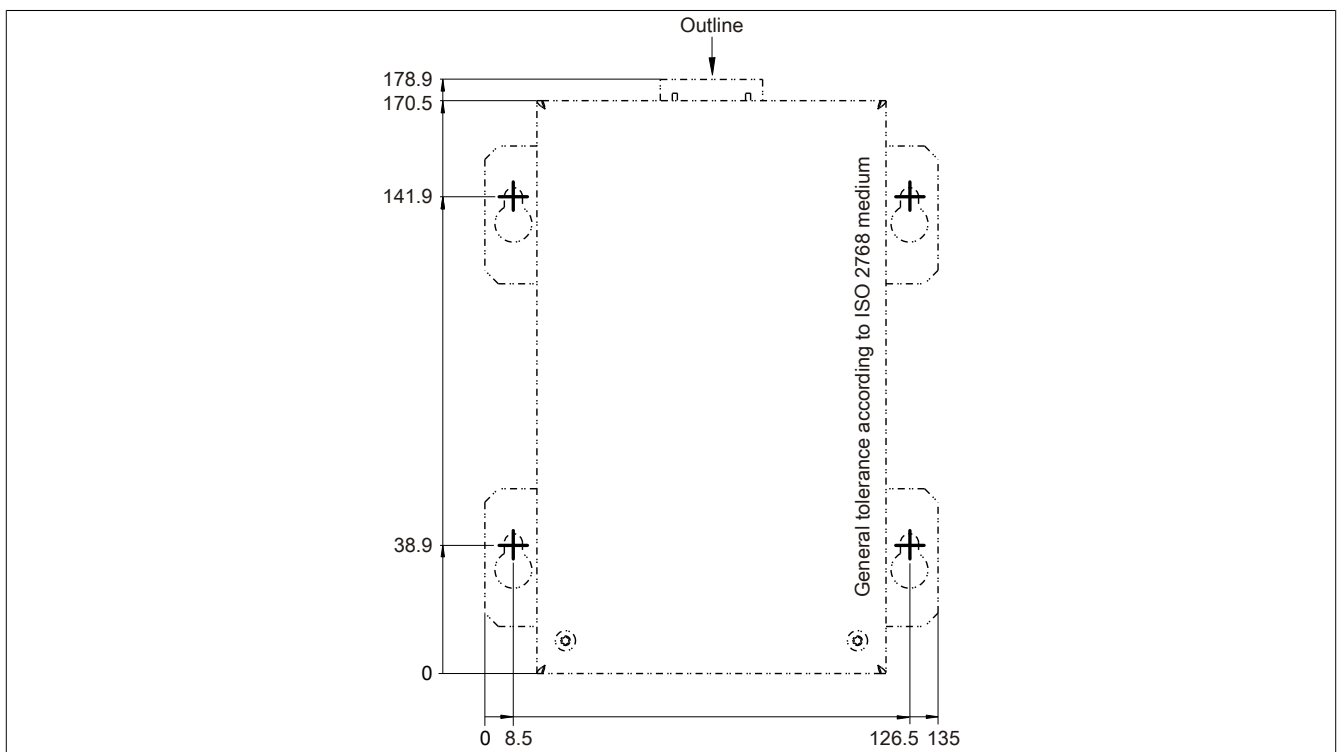


Figure 142: 5PC600.UPSB-00 - Drilling template

### 6.4.8 Installation instructions

Due to the unique construction of these batteries, they can be stored and operated in any position.

## 6.5 5CAUPS.00xx-00

### 6.5.1 General information

The UPS connection cable establishes the connection between the add-on UPS module (5AC600.UPSI-00) and the battery unit (5AC600.UPSB-00). It is available in lengths of 0.5 m and 3 m.

### 6.5.2 Order data


Model number	Short description	Figure
	<b>Uninterruptible power supplies</b>	
5CAUPS.0005-00	UPS cable 0.5 m; for UPS 5AC600.UPSI-00	
5CAUPS.0030-00	UPS cable 3 m; for UPS 5AC600.UPSI-00	

Table 209: 5CAUPS.0005-00, 5CAUPS.0030-00 - Order data

### 6.5.3 Technical data

#### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5CAUPS.0005-00	5CAUPS.0030-00
General information		
Certification		
CE	Yes	
cULus	Yes	
GL	Yes	
Cable structure		
Wire cross section	2x 0.5 mm <sup>2</sup> (AWG 20) 4x 2.5 mm <sup>2</sup> (AWG 13)	
Conductor resistance	At 0.5 mm <sup>2</sup> max. 39 Ω/km At 2.5 mm <sup>2</sup> max. 7.98 Ω/km	
Outer sheathing		
Material	Thermoplastic PVC-based material	
Color	Window gray (similar to RAL 7040)	
Connector		
Type	6-pin male connector with clamping yoke / 6-pin male multipoint connector with clamping yoke	
Electrical characteristics		
Operating voltage	Max. 300 V	
Peak operating voltage	Typically 12 VDC / max. 15 VDC	
Test voltage		
Wire/Wire	1500 V	
Current load	10 A at 20°C	
Environmental conditions		
Temperature		
Moving	-5 to 80°C	
Static	-30 to 80°C	
Mechanical characteristics		
Dimensions		
Length	0.5 m	3 m
Diameter	8.5 mm ±0.2 mm	
Flex radius		
Moving	10x wire cross section	
Fixed installation	5x wire cross section	
Weight	Approx. 100 g	Approx. 470 g

Table 210: 5CAUPS.0005-00, 5CAUPS.0030-00 - Technical data

6.6 5AC600.UPSF-00

6.6.1 General information

The UPS fuse kit can be used to add a fuse for the 5AC600.UPSB-00 battery unit.

Information about installing the 5AC600.UPSF-00 fuse kit can be found in the section "Installing the UPS fuse kit on the battery unit" on page 333.

**Information:**

The 5AC600.UPSF-00 UPS fuse kit is only needed for battery units up to and including revision D0. A 25 A fuse is integrated on the connector circuit board beginning with revision E0.

6.6.2 Order data


Model number	Short description	Figure
	Uninterruptible power supplies	
5AC600.UPSF-00	UPS fuse kit for battery unit 5AC600.UPSB-00 up to revision D0.	

Table 211: 5AC600.UPSF-00 - Order data

6.7 5AC600.UPSF-01

6.7.1 General information

These 25 A fuses are replacement parts for the 5AC600.UPSB-00 battery unit (beginning with revision E0) as well as the 5AC600.UPSF-00 fuse kit.

6.7.2 Order data


Model number	Short description	Figure
	Uninterruptible power supplies	
5AC600.UPSF-01	UPS fuse, 5 pcs.	

Table 212: 5AC600.UPSF-01 - Order data

## 7 External UPS

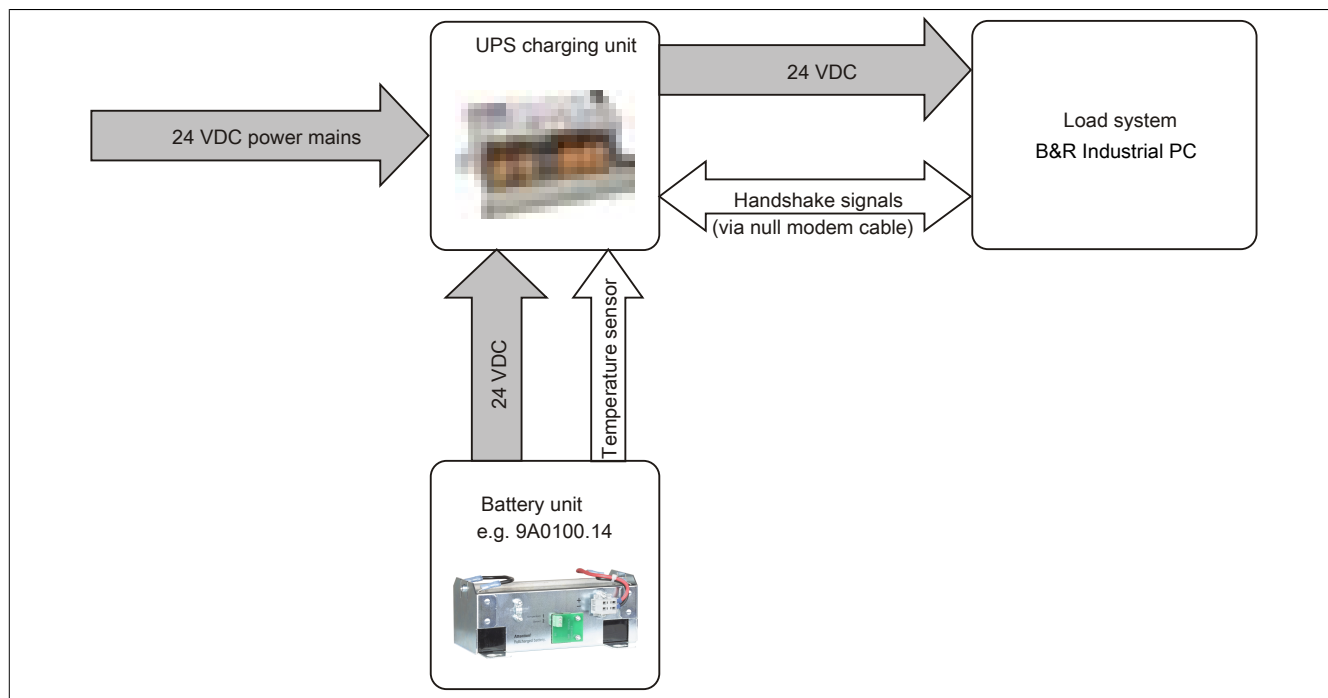


Figure 143: Block diagram of the complete system

### 7.1 General information

A UPS charging unit, battery unit and null modem cable are required to provide power from an external UPS.

In normal operation, the 24 VDC supply voltage is routed directly to the load system. If the mains supply voltage fails, the UPS battery unit powers the load system power so that shutdown can take place properly without losing data.

Data and commands are exchanged between the UPS and the load system via the handshake signals on the RS232 interface.

Additional information about external UPS is available in the UPS user's manual, which can be downloaded from the B&R website ([www.br-automation.com](http://www.br-automation.com)).

### 7.2 Order data

Model number	Short description	<div>Figure</div>
24 VDC UPS modules		
9A0100.11	UPS 24 VDC, 24 VDC input, 24 VDC output, serial interface	
9A0100.12	UPS battery unit type A, 24 V, 7 Ah, incl. battery cage	
9A0100.13	UPS batteries type A (replacement part), 2x 12 V, 7 Ah, for battery unit 9A0100.12	
9A0100.14	UPS battery unit type B, 24 V, 2.2 Ah, incl. battery cage	
9A0100.15	UPS batteries type B (replacement part), 2x 12 V, 2.2 Ah, for battery unit 9A0100.14	
9A0100.16	UPS battery unit type C, 24 V, 4.5 Ah, incl. battery cage	
9A0100.17	UPS batteries type C (replacement part), 2x 12 V, 4.5 Ah, for battery unit 9A0100.16	
	<b>Required accessories</b>	
	<b>Battery units</b>	
9A0100.12	UPS battery unit type A, 24 V, 7 Ah, incl. battery cage	
9A0100.14	UPS battery unit type B, 24 V, 2.2 Ah, incl. battery cage	
9A0100.16	UPS battery unit type C, 24 V, 4.5 Ah, incl. battery cage	
	<b>Cables</b>	
9A0017.01	RS232 null modem cable, 0.6 m, for connecting UPS and IPC (9-pin DSUB connector - 9-pin DSUB connector)	
9A0017.02	RS232 null modem cable, 1.8 m, for connecting UPS and IPC (9-pin DSUB connector - 9-pin DSUB connector)	
	<b>Optional accessories</b>	
	<b>Replacement batteries</b>	
9A0100.13	UPS batteries type A (replacement part), 2x 12 V, 7 Ah, for battery unit 9A0100.12	

Table 213: 9A0100.11, 9A0100.12, 9A0100.13, 9A0100.14, 9A0100.15, 9A0100.16, 9A0100.17 - Order data

Model number	Short description	Figure
9A0100.15	UPS batteries type B (replacement part), 2x 12 V, 2.2 Ah, for battery unit 9A0100.14	
9A0100.17	UPS batteries type C (replacement part), 2x 12 V, 4.5 Ah, for battery unit 9A0100.16	

Table 213: 9A0100.11, 9A0100.12, 9A0100.13, 9A0100.14, 9A0100.15, 9A0100.16, 9A0100.17 - Order data

8 PCI plug-in cards

8.1 5ACPCI.ETH1-01

8.1.1 General information

These universal (3.3 V and 5 V) half-size PCI Ethernet card have a 10/100 Mbit/s network connection and can be inserted and operated in a standard 16-bit PCI slot as an additional network interface.

- PCI Ethernet card
- 1 network connection (10/100 Mbit/s)

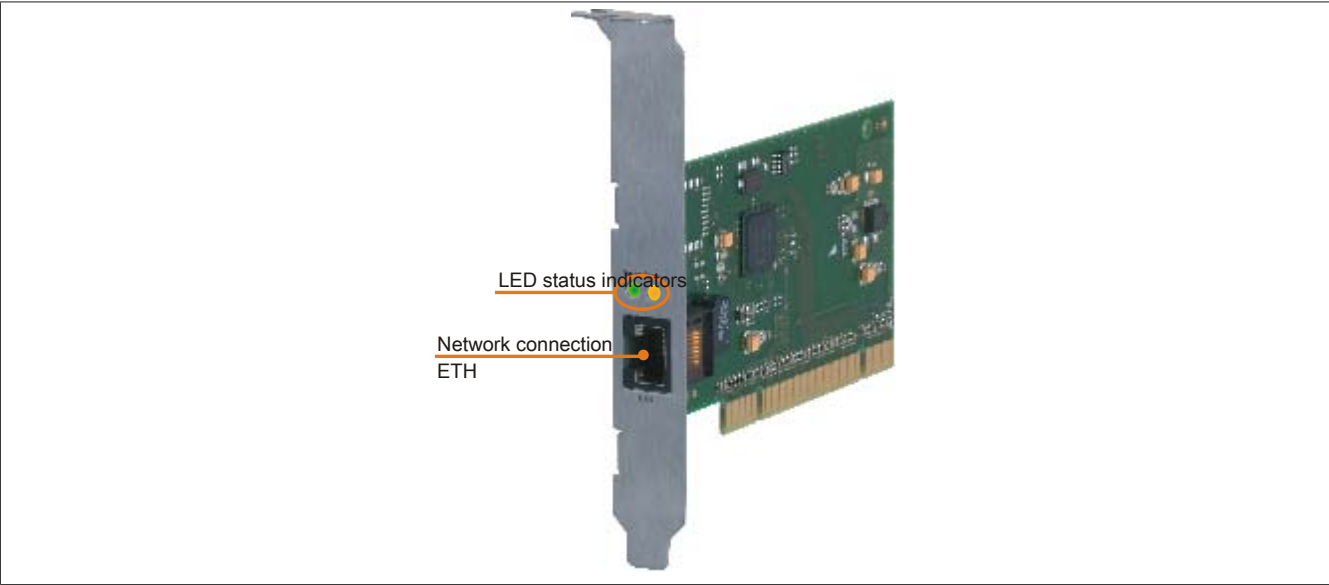


Figure 144: 5ACPCI.ETH1-01 - PCI 10/100 Ethernet card

8.1.2 Order data


Model number	Short description	Figure
	Accessories	
5ACPCI.ETH1-01	PCI Ethernet card 1x 10/100	

Table 214: 5ACPCI.ETH1-01 - Order data

8.1.3 Technical data

Product ID	5ACPCI.ETH1-01
General information	
B&R ID code	\$A58A
Diagnostics	
Data transfer	Yes, using status LED
Certification	
CE	Yes
cULus	Yes
GL	Yes

Table 215: 5ACPCI.ETH1-01 - Technical data



Product ID	5ACPCI.ETH1-01
Interfaces	
Ethernet	
Quantity	1
Controller	Intel 82551ER
Design	Shielded RJ45 port
Transfer rate	10/100 Mbit/s
Cable length	Max. 100 m between two stations (segment length)

Table 215: 5ACPCI.ETH1-01 - Technical data

### 8.1.3.1 Ethernet interface

#### Information:

The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the complete system. For the complete system in which this individual component is used, refer to the data given specifically for that device.

Ethernet interface		
Controller	Intel 82551ER	
Power supply	Universal card (2 notches) for 3.3 V or 5 V	
Cabling	S/STP (Cat 5e)	
Transfer rate	10/100 Mbit/s	
Cable length	Max. 100 m (min. Cat 5e)	
LED	On	Off
Green	100 Mbit/s	10 Mbit/s
Orange	Link (Ethernet network connection available)	Activity (blinking - data transfer in progress)

Speed Act/Link

ETH

Table 216: 5ACPCI.ETH1-01 - Technical data

### 8.1.4 Driver support

A special driver is required in order to operate the Intel 82551ER Ethernet controller. Drivers for approved operating systems (Windows XP Professional, Windows XP Embedded and MS-DOS) are available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

#### Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

### 8.1.5 Dimensions

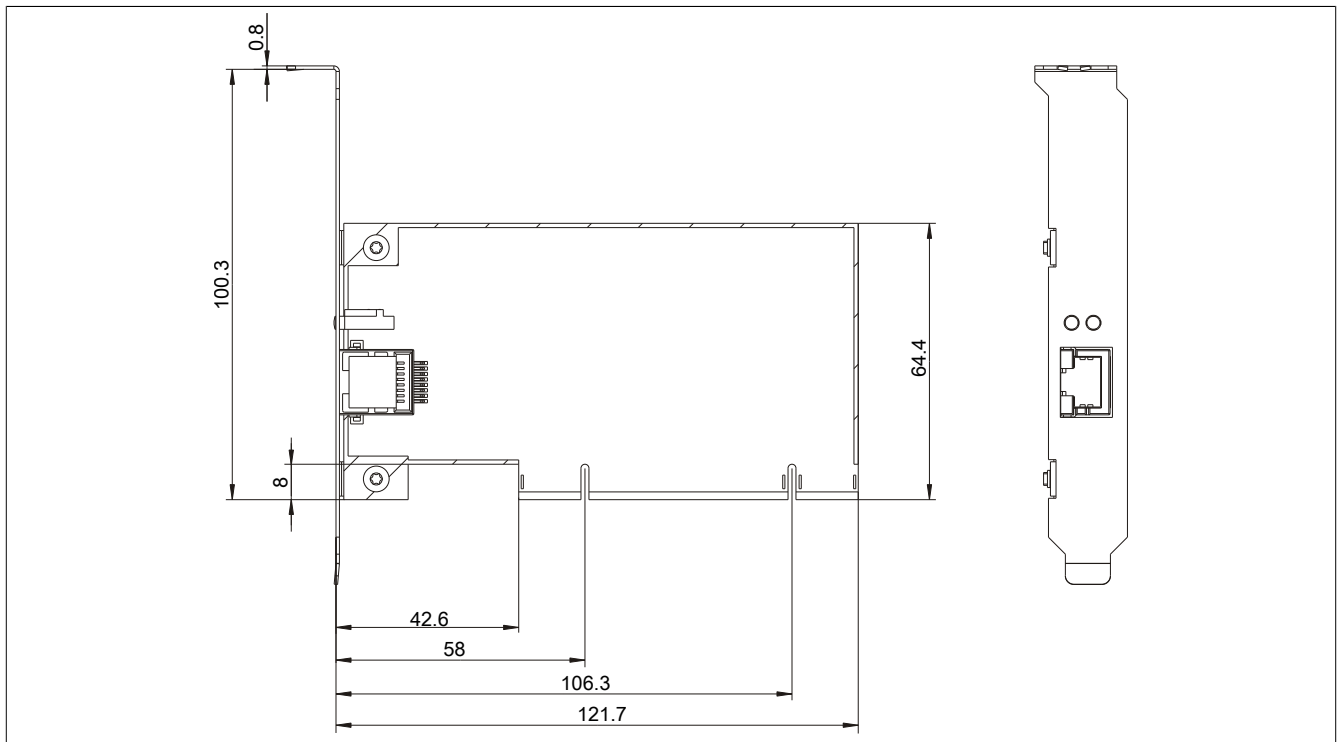


Figure 145: 5ACPCI.ETH1-01 - Dimensions

8.2 5ACPCI.ETH3-01

8.2.1 General information

These universal (3.3 V and 5 V) half-size PCI Ethernet card have three 10/100 Mbit/s network connections and can be inserted and operated in a standard 16-bit PCI slot as an additional network interface.

- PCI Ethernet card
- 3 network connections (10/100 Mbit/s)



Figure 146: 5ACPCI.ETH3-01 - PCI 10/100 Ethernet card

8.2.2 Order data


Model number	Short description	Figure
	<b>Accessories</b>	
5ACPCI.ETH3-01	PCI Ethernet card 3x 10/100	

Table 217: 5ACPCI.ETH3-01 - Order data

8.2.3 Technical data

Product ID	5ACPCI.ETH3-01
<b>General information</b>	
B&R ID code	\$A58B
Diagnostics Data transfer	Yes, using status LED
Certification CE cULus GL	Yes Yes Yes

Table 218: 5ACPCI.ETH3-01 - Technical data

Product ID	5ACPCI.ETH3-01
Interfaces	
Ethernet	
Quantity	3
Controller	Intel 82551ER
Design	Shielded RJ45 port
Transfer rate	10/100 Mbit/s
Cable length	Max. 100 m between two stations (segment length)

Table 218: 5ACPCI.ETH3-01 - Technical data

### 8.2.3.1 Ethernet interface



#### Information:


The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the complete system. For the complete system in which this individual component is used, refer to the data given specifically for that device.

Ethernet connections		
Controller	each with Intel 82551ER	
Power supply	Universal card (2 notches) for 3.3 V or 5 V	
Cabling	S/STP (Cat 5e)	
Transfer rate	10/100 Mbit/s	
Cable length	Max. 100 m (min. Cat 5e)	
LED	On	Off
Green	100 Mbit/s	10 Mbit/s
Orange	Link (Ethernet network connection available)	Activity (blinking - data transfer in progress)

Speed

Act/Link








ETH1

Speed

Act/Link








ETH2

Speed

Act/Link





ETH3

Table 219: 5ACPCI.ETH3-01 - Technical data

### 8.2.4 Driver support

A special driver is required in order to operate the Intel 82551ER Ethernet controller. Drivers for approved operating systems (Windows XP Professional, Windows XP Embedded and MS-DOS) are available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

#### Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

## 8.2.5 Dimensions

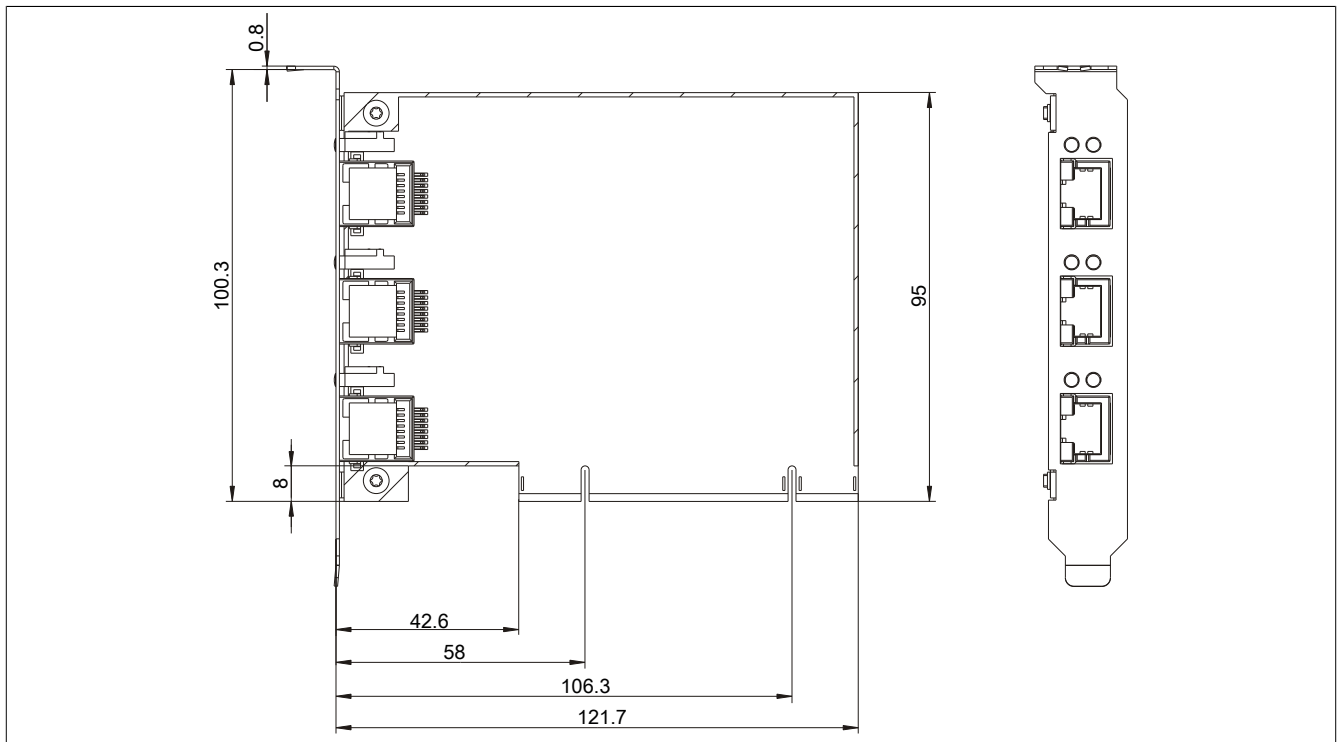


Figure 147: 5ACPCI.ETH3-01 - Dimensions

## 9 CompactFlash cards

### 9.1 General information

CompactFlash cards are storage media that are easy to replace. Due to their robustness against environmental influences (e.g. temperature, shock, vibration, etc.), CompactFlash cards are ideal for use as storage media in industrial environments.

### 9.2 General information

In order to be suited for use in industrial automation, CompactFlash cards must be highly reliable. The following items are very important to achieving the necessary level of reliability:

- The flash technology used
- An efficient algorithm for maximizing service life
- Good mechanisms for detecting and fixing errors in the flash memory

#### 9.2.1 Flash technology

Currently, CompactFlash cards are available with MLC (multi-level cell) and SLC (single-level cell) flash blocks. SLC flash memory has a service life 10 times longer than MLC, which is why only CompactFlash cards with SLC flash blocks are suited for industrial applications.

#### 9.2.2 Wear leveling

Wear leveling is an algorithm that can be used to maximize the service life of a CompactFlash card. There are three different algorithms:

- No wear leveling
- Dynamic wear leveling
- Static wear leveling

The basic idea behind wear leveling is to distribute data over a broad area of blocks or cells on the disk so that the same areas don't have to be cleared and reprogrammed over and over again.

##### 9.2.2.1 No wear leveling

The earliest CompactFlash cards didn't have an algorithm for maximizing service life. The service life of a CompactFlash card was determined only by the guaranteed lifespan of the flash blocks.

##### 9.2.2.2 Dynamic wear leveling

Dynamic wear leveling makes it possible to utilize unused flash blocks when writing to a file.

If the disk is 80% full with files, then only 20% can be used for wear leveling.

The service life of the CompactFlash card is therefore dependent on the amount of unused flash blocks.

##### 9.2.2.3 Static wear leveling

Static wear leveling monitors which data is rarely modified. From time to time, the controller then moves this data to blocks that have already been used frequently in order to prevent further wear on those cells.

#### 9.2.3 ECC error correction

Bit errors can be caused by inactivity or when a certain cell is being operated. Error correction coding (ECC) implemented via hardware or software can detect and correct many errors of this type.

#### 9.2.4 S.M.A.R.T. support

Self-Monitoring, Analysis and Reporting Technology (S.M.A.R.T.) is an industry standard for mass storage devices that has been introduced to monitor important parameters and quickly detect imminent failures. Critical performance and calibration data is monitored and stored in order to help predict the probability of errors.

### 9.2.5 Maximum reliability

CompactFlash cards supplied by B&R use SLC flash blocks and static wear leveling together with a powerful ECC algorithm to provide maximum reliability.

## 9.3 5CFCRD.xxxx-06

### 9.3.1 General information

#### Information:

B&R CompactFlash cards 5CFCRD.xxxx-06 and CompactFlash cards from a different manufacturer cannot be used in the same system at the same time. Due to differences in technology (older vs. newer technologies), problems can occur during system startup that are caused by different boot times.

see "Known problems/issues" on page 287

#### Information:

5CFCRD.xxxx-06 CompactFlash cards are supported on B&R devices with WinCE version  $\geq 6.0$ .

### 9.3.2 Order data


Model number	Short description	Figure
	<b>CompactFlash</b>	
5CFCRD.0512-06	CompactFlash 512 MB B&R (SLC)	
5CFCRD.1024-06	CompactFlash 1 GB B&R (SLC)	
5CFCRD.2048-06	CompactFlash 2 GB B&R (SLC)	
5CFCRD.4096-06	CompactFlash 4 GB B&R (SLC)	
5CFCRD.8192-06	CompactFlash 8 GB B&R (SLC)	
5CFCRD.016G-06	CompactFlash 16 GB B&R (SLC)	
5CFCRD.032G-06	CompactFlash 32 GB B&R (SLC)	

Table 220: 5CFCRD.0512-06, 5CFCRD.1024-06, 5CFCRD.2048-06, 5CFCRD.4096-06, 5CFCRD.8192-06, 5CFCRD.016G-06, 5CFCRD.032G-06 - Order data

### 9.3.3 Technical data

#### Caution!

A sudden loss of power may result in data loss! In very rare cases, the mass storage device may also become damaged.

To prevent damage and loss of data, the use of a UPS device is recommended.

#### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5CFCRD. 0512-06	5CFCRD. 1024-06	5CFCRD. 2048-06	5CFCRD. 4096-06	5CFCRD. 8192-06	5CFCRD. 016G-06	5CFCRD. 032G-06
<b>General information</b>							
Capacity	512 MB	1 GB	2 GB	4 GB	8 GB	16 GB	32 GB
Data retention	10 years						
Data reliability	<1 unrecoverable error in $10^{14}$ bit read accesses						
Lifetime monitoring	Yes						
MTBF	>3,000,000 hours (at 25°C)						
Maintenance	None						
Supported operating modes	PIO Mode 0-6, Multiword DMA Mode 0-4, Ultra DMA Mode 0-4						
Continuous reading							
Typical	33 MB/s	33 MB/s	33 MB/s	33 MB/s	33 MB/s	36 MB/s	36 MB/s
Maximum	35 MB/s	35 MB/s	35 MB/s	34 MB/s	34 MB/s	37 MB/s	37 MB/s
Continuous writing							
Typical	15 MB/s	15 MB/s	15 MB/s	14 MB/s	14 MB/s	28 MB/s	28 MB/s
Maximum	18 MB/s	18 MB/s	18 MB/s	17 MB/s	17 MB/s	30 MB/s	30 MB/s

Table 221: 5CFCRD.0512-06, 5CFCRD.1024-06, 5CFCRD.2048-06, 5CFCRD.4096-06, 5CFCRD.8192-06, 5CFCRD.016G-06, 5CFCRD.032G-06 - Technical data



Product ID	5CFCRD. 0512-06	5CFCRD. 1024-06	5CFCRD. 2048-06	5CFCRD. 4096-06	5CFCRD. 8192-06	5CFCRD. 016G-06	5CFCRD. 032G-06
Certification							
CE	Yes						
cULus	Yes						
cULus HazLoc Class 1 Division 2	-	-	-	-	-	Yes	-
ATEX Zone 22	-	-	-	-	-	Yes	-
GL	Yes						
Endurance							
Guaranteed data volume							
Guaranteed <sup>1)</sup>	50 TB	100 TB	200 TB	400 TB	800 TB	1600 TB	3200 TB
Results for 5 years <sup>1)</sup>	27.40 GB/day	54.79 GB/day	109.9 GB/day	219.8 GB/day	438.6 GB/day	876.72 GB/day	1753.44 GB/day
Clear/Write cycles							
Guaranteed	100,000						
SLC flash	Yes						
Wear leveling	Static						
Error correction coding (ECC)	Yes						
S.M.A.R.T. support	Yes						
Support							
Hardware	PP300/400, PP500, PPC300, PPC700, PPC725, PPC800, APC620, APC810, APC820						
Operating systems							
Windows 7 32-bit	No	No	No	No	No	Yes	Yes
Windows 7 64-bit	No	No	No	No	No	No	Yes
Windows Embedded Standard 7, 32-bit	No	No	No	No	Yes	Yes	Yes
Windows Embedded Standard 7, 64-bit	No	No	No	No	No	Yes	Yes
Windows XP Professional	No	No	No	Yes	Yes	Yes	Yes
Windows XP Embedded				Yes			
Windows Embedded Standard 2009	No	Yes	Yes	Yes	Yes	Yes	Yes
Windows CE 6.0	Yes	Yes	Yes	Yes	Yes	Yes <sup>2)</sup>	Yes <sup>2)</sup>
Windows CE 5.0				No			
Software							
PVI Transfer	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011)	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011)	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011)	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011)	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011)	≥ V3.6.8.40 (part of PVI Development Setup ≥ V3.0.0.3020)	≥V4.0.0.8 (part of PVI Development Setup ≥ V3.0.2.3014)
B&R Embedded OS Installer	≥V3.10	≥V3.10	≥V3.10	≥V3.10	≥V3.10	≥V3.20	≥V3.21
Environmental conditions							
Temperature							
Operation	0 to 70°C						
Storage	-65 to 150°C						
Transport	-65 to 150°C						
Relative humidity							
Operation	Max. 85% at 85°C						
Storage	Max. 85% at 85°C						
Transport	Max. 85% at 85°C						
Vibration							
Operation	20 g peak, 20 to 2000 Hz, 4 in each direction (JEDEC JESD22, method B103) 5.35 g RMS, 15 min per level (IEC 68-2-6)						
Storage	20 g peak, 20 to 2000 Hz, 4 in each direction (JEDEC JESD22, method B103) 5.35 g RMS, 15 min per level (IEC 68-2-6)						
Transport	20 g peak, 20 to 2000 Hz, 4 in each direction (JEDEC JESD22, method B103) 5.35 g RMS, 15 min per level (IEC 68-2-6)						
Shock							
Operation	1.5 kg peak, 0.5 ms 5 times (JEDEC JESD22, method B110) 30 g, 11 ms 1 times (IEC 68-2-27)						
Storage	1.5 kg peak, 0.5 ms 5 times (JEDEC JESD22, method B110) 30 g, 11 ms 1 times (IEC 68-2-27)						
Transport	1.5 kg peak, 0.5 ms 5 times (JEDEC JESD22, method B110) 30 g, 11 ms 1 times (IEC 68-2-27)						
Altitude							
Operation	Max. 4572 m						
Mechanical characteristics							
Dimensions							
Width	42.8 ±0.10 mm						
Length	36.4 ±0.15 mm						
Height	3.3 ±0.10 mm						
Weight	10 g						

Table 221: 5CFCRD.0512-06, 5CFCRD.1024-06, 5CFCRD.2048-06, 5CFCRD.4096-06, 5CFCRD.8192-06, 5CFCRD.016G-06, 5CFCRD.032G-06 - Technical data

1) Endurance of B&R CFs (with linear written block size ≥ 128 kB).

2) Not supported by the B&R Embedded OS Installer.

### 9.3.4 Temperature humidity diagram

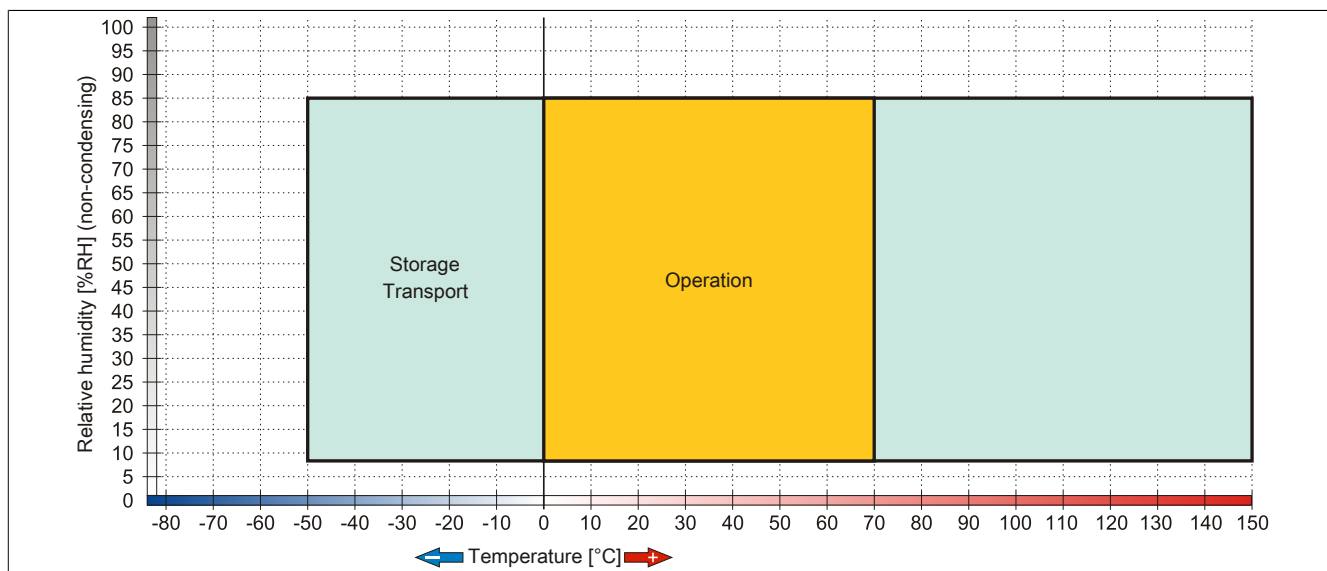


Figure 148: 5CFCRD.xxxx-06 CompactFlash cards - Temperature humidity diagram

### 9.3.5 Dimensions



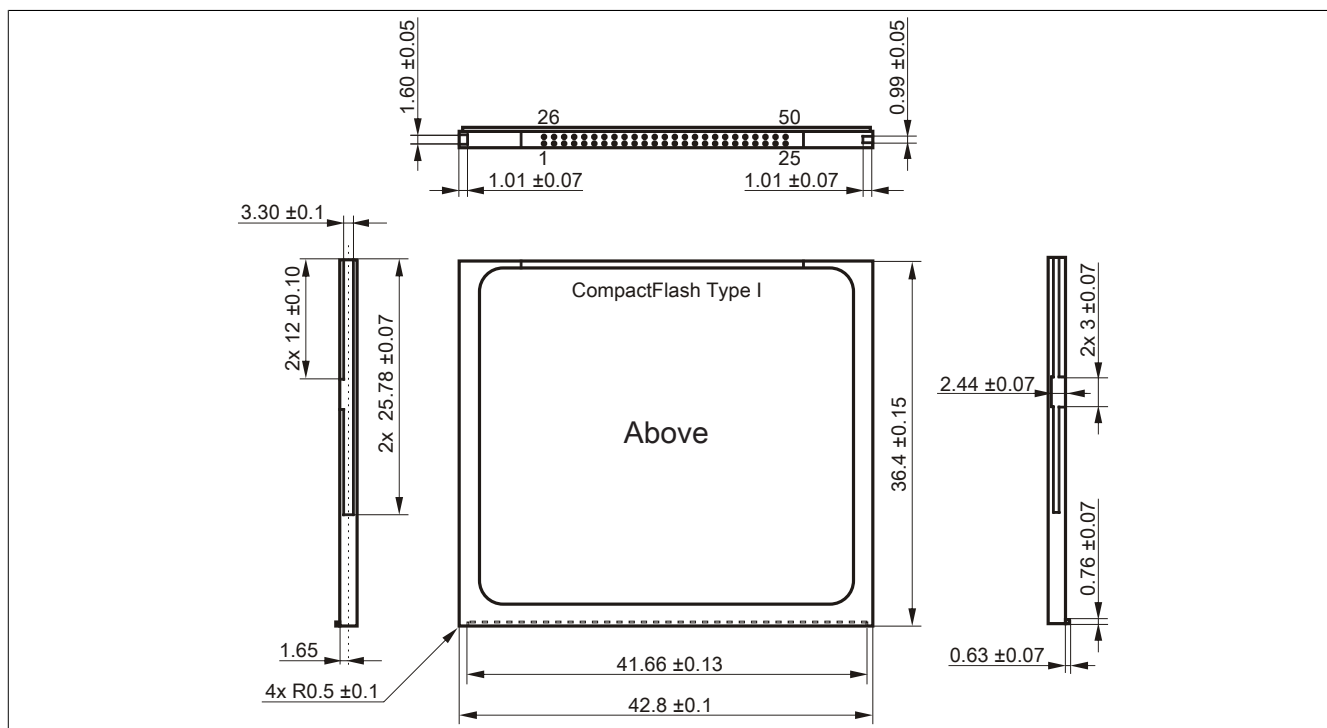


Figure 149: Type I CompactFlash card - Dimensions

## 9.3.6 Benchmark

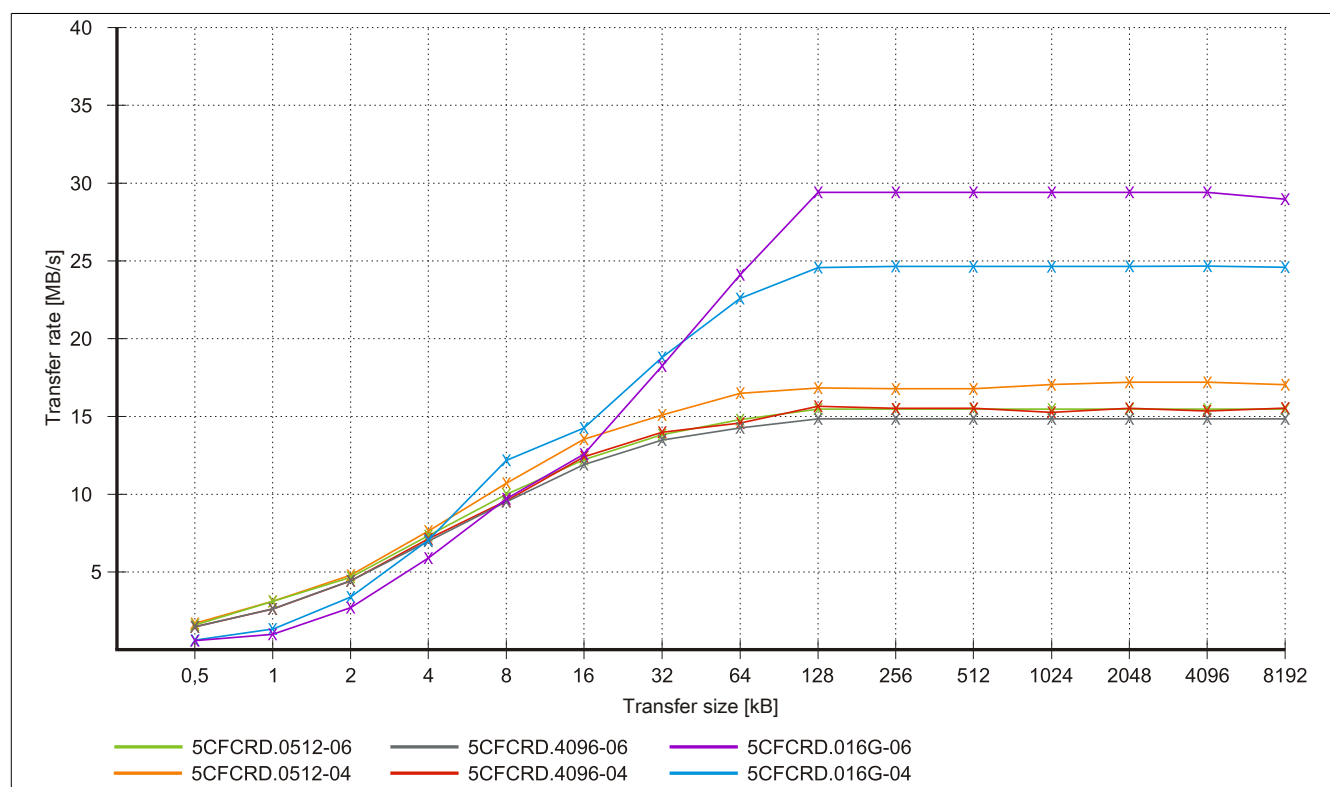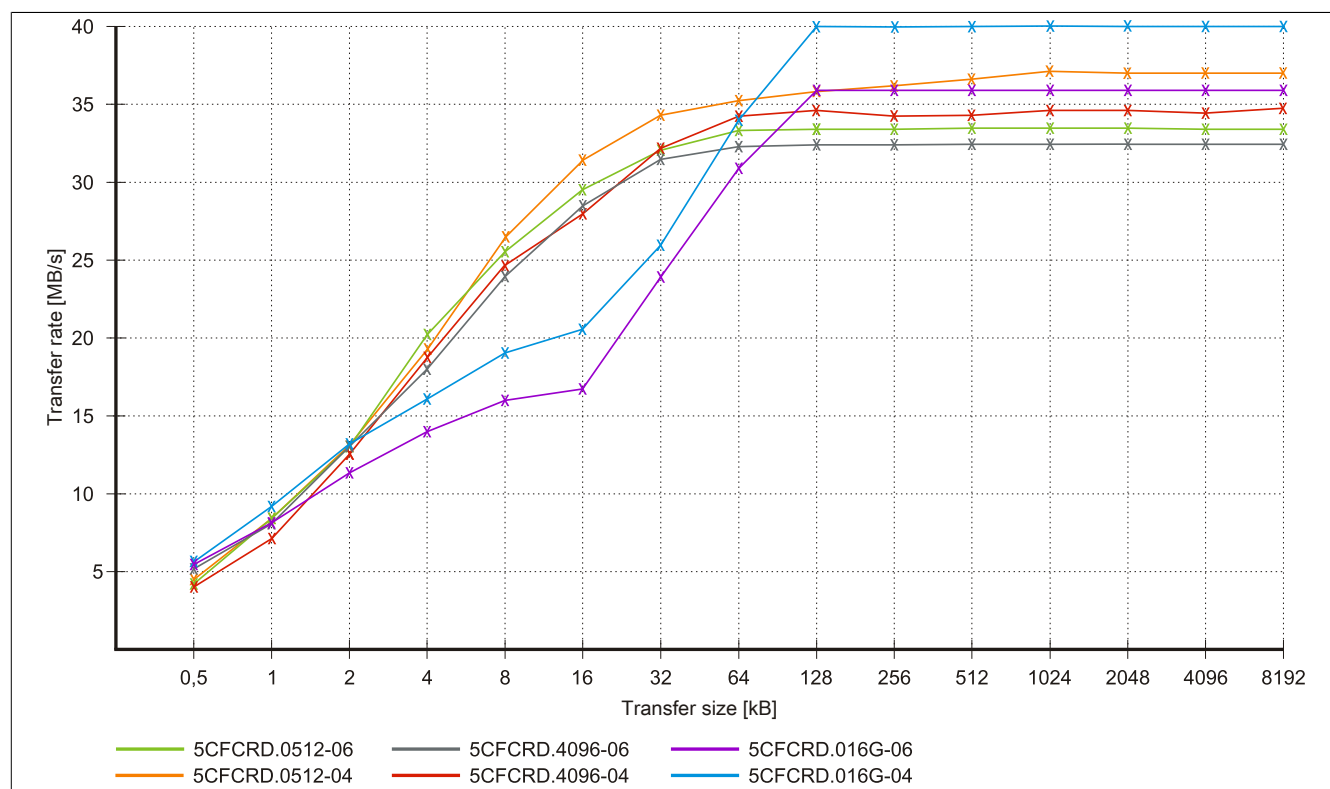

## 9.4 5CFCRD.xxxx-04

### 9.4.1 General information

#### Information:

B&R CompactFlash cards 5CFCRD.xxxx-04 and CompactFlash cards from a different manufacturer cannot be used in the same system at the same time. Due to differences in technology (older vs. newer technologies), problems can occur during system startup that are caused by different boot times.

see "Known problems/issues" on page 287

#### Information:

5CFCRD.xxxx-04 CompactFlash cards are supported on B&R devices with WinCE version  $\geq 6.0$ .

### 9.4.2 Order data


Model number	Short description	Figure
	<b>CompactFlash</b>	
5CFCRD.0512-04	CompactFlash 512 MB B&R (SLC)	
5CFCRD.1024-04	CompactFlash 1 GB B&R (SLC)	
5CFCRD.2048-04	CompactFlash 2 GB B&R (SLC)	
5CFCRD.4096-04	CompactFlash 4 GB B&R (SLC)	
5CFCRD.8192-04	CompactFlash 8 GB B&R (SLC)	
5CFCRD.016G-04	CompactFlash 16 GB B&R (SLC)	

Table 222: 5CFCRD.0512-04, 5CFCRD.1024-04, 5CFCRD.2048-04, 5CFCRD.4096-04, 5CFCRD.8192-04, 5CFCRD.016G-04 - Order data

### 9.4.3 Technical data

#### Caution!

A sudden loss of power may result in data loss! In very rare cases, the mass storage device may also become damaged.

To prevent damage and loss of data, the use of a UPS device is recommended.

#### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5CFCRD.0512-04	5CFCRD.1024-04	5CFCRD.2048-04	5CFCRD.4096-04	5CFCRD.8192-04	5CFCRD.016G-04
<b>General information</b>						
Capacity	512 MB	1 GB	2 GB	4 GB	8 GB	16 GB
Data retention	10 years					
Data reliability	<1 unrecoverable error in $10^{14}$ bit read accesses					
Lifetime monitoring	Yes					
MTBF	>3,000,000 hours (at 25°C)					
Maintenance	None					
Supported operating modes	PIO Mode 0-6, Multiword DMA Mode 0-4, Ultra DMA Mode 0-4					
Continuous reading						
Typical	35 MB/s (240X) <sup>1)</sup>	35 MB/s (240X) <sup>1)</sup>	35 MB/s (240X) <sup>1)</sup>	33 MB/s (220X) <sup>1)</sup>	27 MB/s (180X) <sup>1)</sup>	36 MB/s (240X) <sup>1)</sup>
Maximum	37 MB/s (260X) <sup>1)</sup>	37 MB/s (260X) <sup>1)</sup>	37 MB/s (260X) <sup>1)</sup>	34 MB/s (226X) <sup>1)</sup>	28 MB/s (186X) <sup>1)</sup>	37 MB/s (247X) <sup>1)</sup>

Table 223: 5CFCRD.0512-04, 5CFCRD.1024-04, 5CFCRD.2048-04, 5CFCRD.4096-04, 5CFCRD.8192-04, 5CFCRD.016G-04 - Technical data

Product ID	5CFCRD.0512-04	5CFCRD.1024-04	5CFCRD.2048-04	5CFCRD.4096-04	5CFCRD.8192-04	5CFCRD.016G-04
Continuous writing						
Typical	17 MB/s (110X)	17 MB/s (110X)	17 MB/s (110X)	16 MB/s (106X)	15 MB/s (100X)	18 MB/s (120X)
Maximum	20 MB/s (133X)	20 MB/s (133X)	20 MB/s (133X)	18 MB/s (120X)	17 MB/s (110X)	19 MB/s (126X)
Certification						
CE	Yes					
cULus	Yes					
GL	Yes					
Endurance						
Guaranteed data volume						
Guaranteed <sup>2)</sup>	50 TB	100 TB	200 TB	400 TB	800 TB	1600 TB
Results for 5 years <sup>2)</sup>	27.40 GB/day	54.79 GB/day	109.9 GB/day	219.8 GB/day	438.6 GB/day	876.72 GB/day
Clear/Write cycles						
Typical <sup>3)</sup>	2,000,000					
Guaranteed	100,000					
SLC flash	Yes					
Wear leveling	Static					
Error correction coding (ECC)	Yes					
S.M.A.R.T. support	No					
Support						
Hardware	PP300/400, PP500, PPC300, PPC700, PPC725, PPC800, APC620, APC810, APC820					
Operating systems						
Windows 7 32-bit	No	No	No	No	No	Yes
Windows 7 64-bit			No	No		
Windows Embedded Standard 7, 32-bit	No	No	No	No	Yes	Yes
Windows Embedded Standard 7, 64-bit	No	No	No	No	No	Yes
Windows XP Professional	No	No	No	Yes	Yes	Yes
Windows XP Embedded				Yes		
Windows Embedded Standard 2009	No	Yes	Yes	Yes	Yes	Yes
Windows CE 6.0	Yes	Yes	Yes	Yes	Yes	Yes <sup>4)</sup>
Windows CE 5.0				No		
Software						
PVI Transfer	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011)	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011)	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011)	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011)	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011)	≥ V3.6.8.40 (part of PVI Development Setup ≥ V3.0.0.3020)
B&R Embedded OS Installer	≥V3.10	≥V3.10	≥V3.10	≥V3.10	≥V3.10	≥V3.20
Environmental conditions						
Temperature						
Operation	0 to 70°C					
Storage	-65 to 150°C					
Transport	-65 to 150°C					
Relative humidity						
Operation	Max. 85% at 85°C					
Storage	Max. 85% at 85°C					
Transport	Max. 85% at 85°C					
Vibration						
Operation	20 g peak, 20 to 2000 Hz, 4 in each direction (JEDEC JESD22, method B103) 5.35 g RMS, 15 min per level (IEC 68-2-6)					
Storage	20 g peak, 20 to 2000 Hz, 4 in each direction (JEDEC JESD22, method B103) 5.35 g RMS, 15 min per level (IEC 68-2-6)					
Transport	20 g peak, 20 to 2000 Hz, 4 in each direction (JEDEC JESD22, method B103) 5.35 g RMS, 15 min per level (IEC 68-2-6)					
Shock						
Operation	1.5 kg peak, 0.5 ms 5 times (JEDEC JESD22, method B110) 30 g, 11 ms 1 times (IEC 68-2-27)					
Storage	1.5 kg peak, 0.5 ms 5 times (JEDEC JESD22, method B110) 30 g, 11 ms 1 times (IEC 68-2-27)					
Transport	1.5 kg peak, 0.5 ms 5 times (JEDEC JESD22, method B110) 30 g, 11 ms 1 times (IEC 68-2-27)					
Altitude						
Operation	Max. 4572 m					

Table 223: 5CFCRD.0512-04, 5CFCRD.1024-04, 5CFCRD.2048-04, 5CFCRD.4096-04, 5CFCRD.8192-04, 5CFCRD.016G-04 - Technical data

Product ID	5CFCRD.0512-04	5CFCRD.1024-04	5CFCRD.2048-04	5CFCRD.4096-04	5CFCRD.8192-04	5CFCRD.016G-04
<b>Mechanical characteristics</b>						
Dimensions						
Width	42.8 ±0.10 mm					
Length	36.4 ±0.15 mm					
Height	3.3 ±0.10 mm					
Weight	10 g					

Table 223: 5CFCRD.0512-04, 5CFCRD.1024-04, 5CFCRD.2048-04, 5CFCRD.4096-04, 5CFCRD.8192-04, 5CFCRD.016G-04 - Technical data

- 1) Speed specification with 1X = 150 Kb/s. All specifications refer to Samsung flash chips, CompactFlash cards in UDMA mode 4, 30 ns cycle time in True IDE mode with sequential write/read test.
- 2) Endurance of B&R CFs (with linear written block size ≥128 kB).
- 3) Depends on the average file size.
- 4) Not supported by the B&R Embedded OS Installer.

#### 9.4.4 Temperature humidity diagram

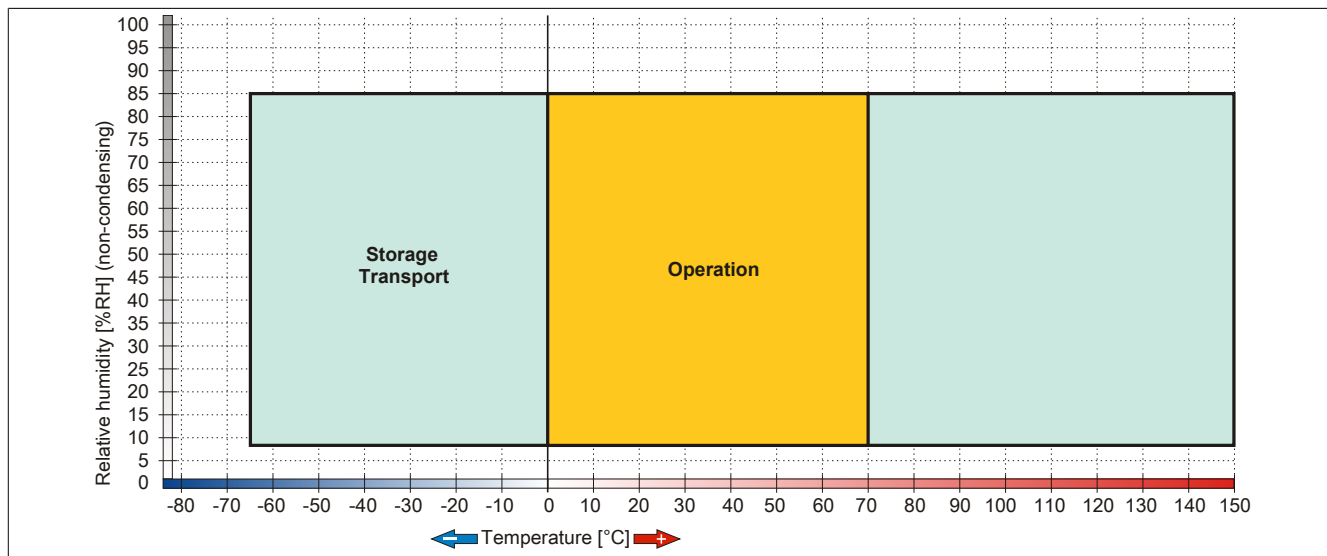


Figure 152: 5CFCRD.xxxx-04 CompactFlash cards - Temperature humidity diagram

#### 9.4.5 Dimensions

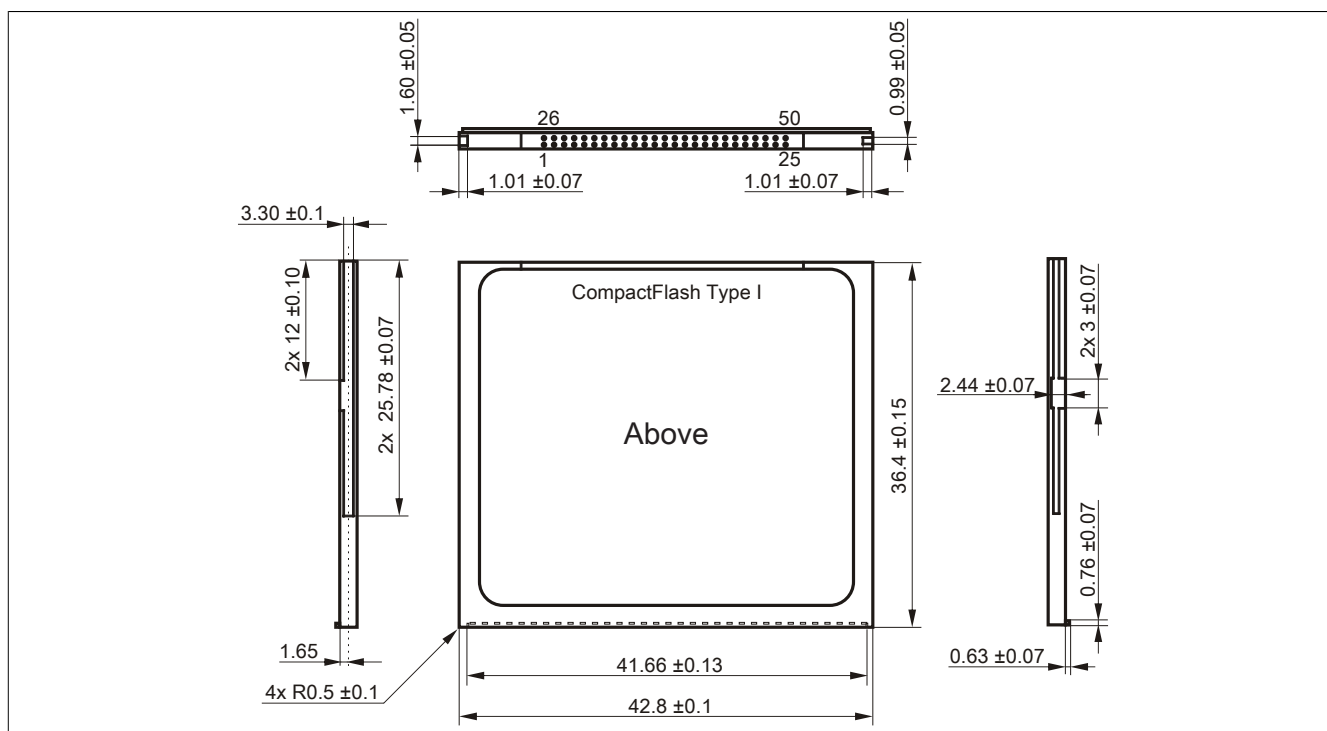


Figure 153: Type I CompactFlash card - Dimensions

## 9.4.6 Benchmark

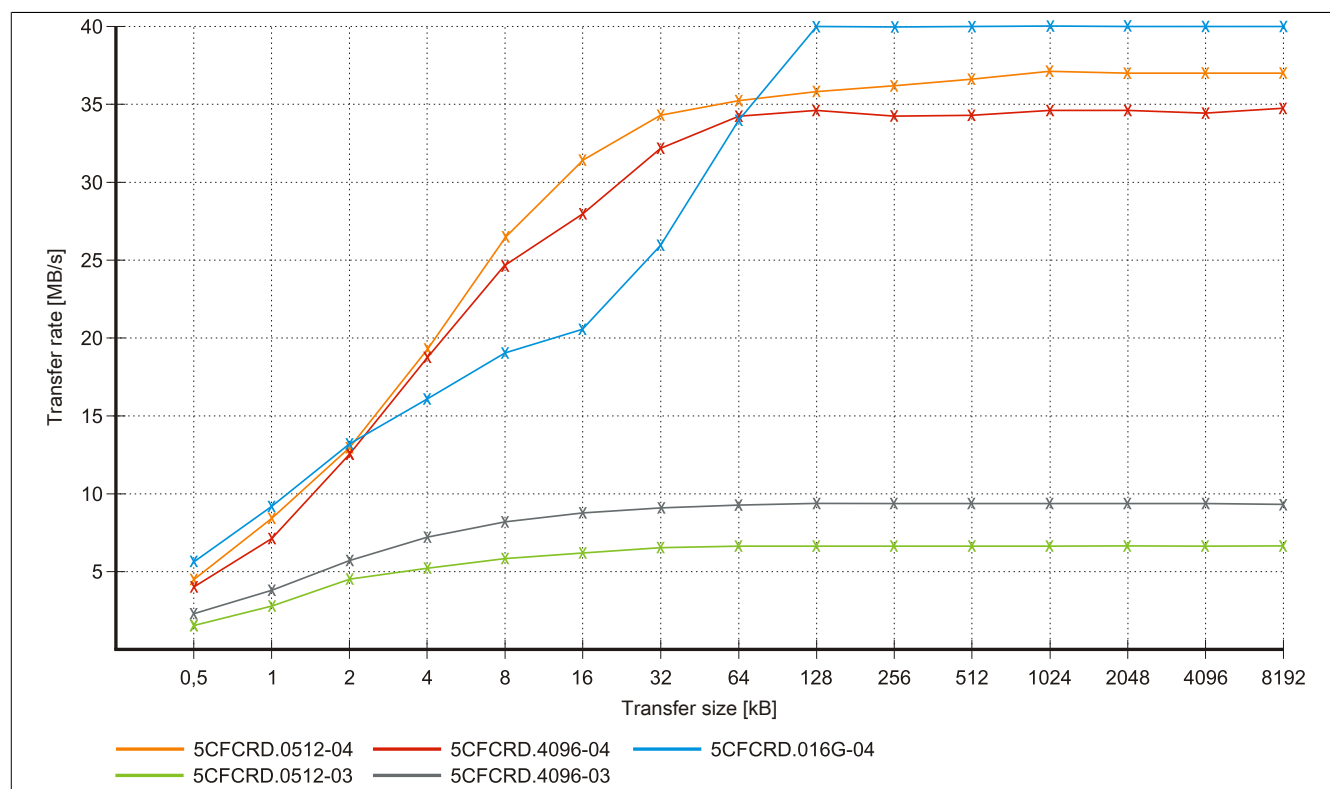


Figure 154: ATTO Disk Benchmark v2.34 read comparison - 5CFCRD.xxxx-03 and 5CFCRD.xxxx-04

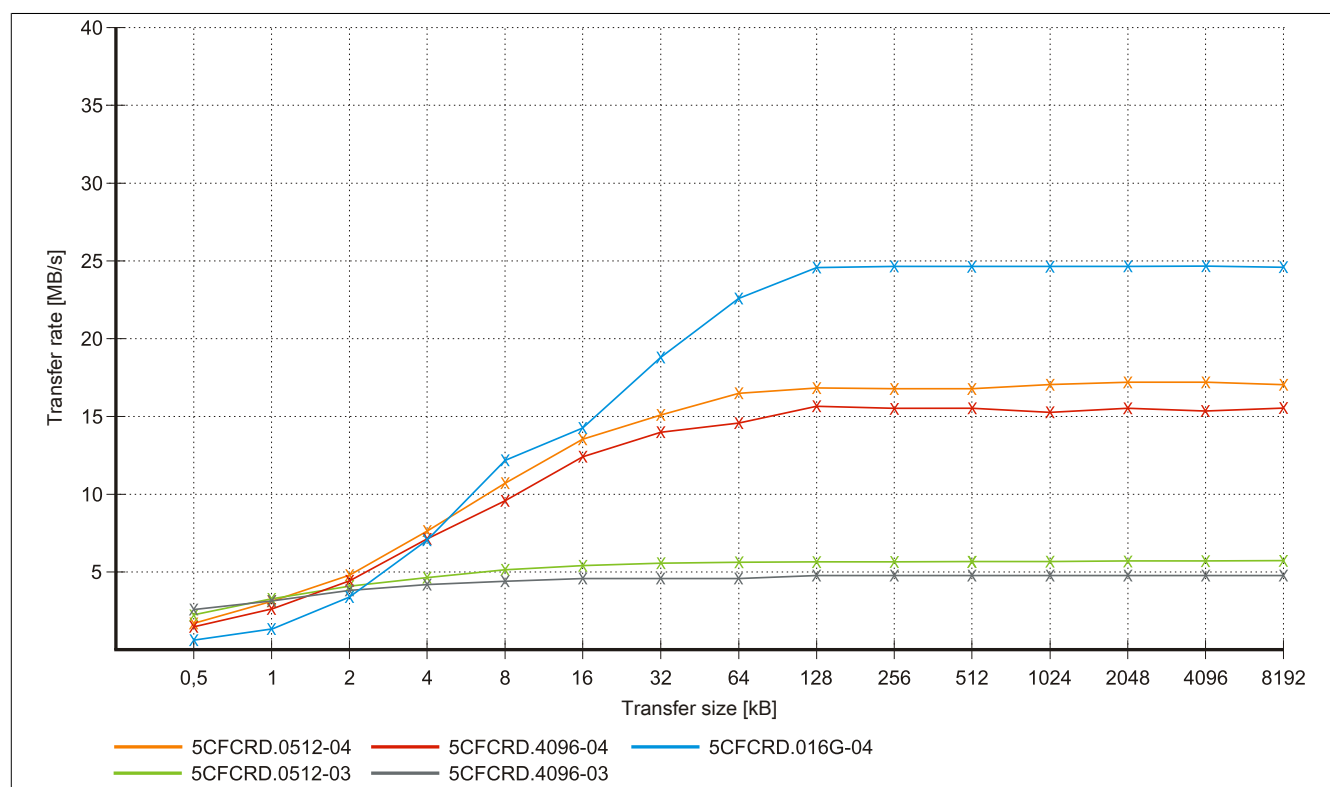


Figure 155: ATTO Disk Benchmark v2.34 write comparison - 5CFCRD.xxxx-03 and 5CFCRD.xxxx-04

## 9.5 5CFCRD.xxxx-03

### 9.5.1 General information

#### Information:

Western Digital CompactFlash cards 5CFCRD.xxxx-03 and CompactFlash cards from a different manufacturer cannot be used in the same system at the same time. Due to differences in technology (older vs. newer technologies), problems can occur during system startup that are caused by different boot times.

see "Known problems/issues" on page 287

#### Information:

On Windows CE 5.0 devices, 5CFCRD.xxxx-03 CompactFlash cards up to 1 GB are supported.

#### Information:

On CompactFlash cards 5CFCRD.xxxx-03, only the sticker and the description have changed. The technical data has not been changed.

### 9.5.2 Order data


Model number	Short description	Figure
	<b>CompactFlash</b>	
5CFCRD.0064-03	CompactFlash 64 MB Western Digital (SLC)	
5CFCRD.0128-03	CompactFlash 128 MB Western Digital (SLC)	
5CFCRD.0256-03	CompactFlash 256 MB Western Digital (SLC)	
5CFCRD.0512-03	CompactFlash 512 MB Western Digital (SLC)	
5CFCRD.1024-03	CompactFlash 1 GB Western Digital (SLC)	
5CFCRD.2048-03	CompactFlash 2 GB Western Digital (SLC)	
5CFCRD.4096-03	CompactFlash 4 GB Western Digital (SLC)	
5CFCRD.8192-03	CompactFlash 8 GB Western Digital (SLC)	

Table 224: 5CFCRD.0064-03, 5CFCRD.0128-03, 5CFCRD.0256-03, 5CFCRD.0512-03, 5CFCRD.1024-03, 5CFCRD.2048-03, 5CFCRD.4096-03, 5CFCRD.8192-03 - Order data

### 9.5.3 Technical data

#### Caution!

A sudden loss of power may result in data loss! In very rare cases, the mass storage device may also become damaged.

To prevent damage and loss of data, B&R recommends that you use a UPS device.

#### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5CFCRD.0064-03	5CFCRD.0128-03	5CFCRD.0256-03	5CFCRD.0512-03	5CFCRD.1024-03	5CFCRD.2048-03	5CFCRD.4096-03	5CFCRD.8192-03
<b>General information</b>								
Capacity	64 MB	128 MB	256 MB	512 MB	1 GB	2 GB	4 GB	8 GB
Data retention	10 years							
Data reliability	<1 unrecoverable error in 10 <sup>14</sup> bit read accesses							
Lifetime monitoring	Yes							
MTBF	>4,000,000 hours (at 25°C)							

Table 225: 5CFCRD.0064-03, 5CFCRD.0128-03, 5CFCRD.0256-03, 5CFCRD.0512-03, 5CFCRD.1024-03, 5CFCRD.2048-03, 5CFCRD.4096-03, 5CFCRD.8192-03 - Technical data



Product ID	5CFCRD. 0064-03	5CFCRD. 0128-03	5CFCRD. 0256-03	5CFCRD. 0512-03	5CFCRD. 1024-03	5CFCRD. 2048-03	5CFCRD. 4096-03	5CFCRD. 8192-03
Maintenance	None							
Supported operating modes	PIO Mode 0-4, Multiword DMA Mode 0-2							
Continuous reading	8 MB/s							
Typical								
Continuous writing	6 MB/s							
Typical								
Certification	Yes							
CE								
cULus								
GL								
Endurance								
Clear/Write cycles	>2,000,000							
Typical								
SLC flash	Yes							
Wear leveling	Static							
Error correction coding (ECC)	Yes							
S.M.A.R.T. support	No							
Support								
Hardware	MP100/200, PP100/200, PP300/400, PP500, PPC300, PPC700, PPC725, PPC800, Provit 2000, Provit 5000, APC620, APC680, APC810, APC820							
Operating systems	No No No No No No No No No No							
Windows 7 32-bit								
Windows 7 64-bit								
Windows Embedded Standard 7, 32-bit								
Windows Embedded Standard 7, 64-bit								
Windows XP Professional								
Windows XP Embedded								
Windows Embedded Standard 2009								
Windows CE 6.0								
Windows CE 5.0								
Software	≥V2.57 (part of PVI Development Setup ≥ V2.5.3.3005)							
PVI Transfer	≥ V2.21							
B&R Embedded OS Installer								
Environmental conditions								
Temperature	0 to 70°C -50 to 100°C -50 to 100°C							
Operation								
Storage								
Transport								
Relative humidity	8 to 95%, non-condensing 8 to 95%, non-condensing 8 to 95%, non-condensing							
Operation								
Storage								
Transport								
Vibration	Max. 16.3 g (159 m/s² 0-peak) Max. 30 g (294 m/s² 0-peak) Max. 30 g (294 m/s² 0-peak)							
Operation								
Storage								
Transport								
Shock	Max. 1000 g (9810 m/s² 0-peak) Max. 3000 g (29430 m/s² 0-peak) Max. 3000 g (29430 m/s² 0-peak)							
Operation								
Storage								
Transport								
Altitude	Max. 24383 m							
Operation								
Mechanical characteristics								
Dimensions	42.8 ±0.10 mm 36.4 ±0.15 mm 3.3 ±0.10 mm							
Width								
Length								
Height								
Weight	11.4 g							

Table 225: 5CFCRD.0064-03, 5CFCRD.0128-03, 5CFCRD.0256-03, 5CFCRD.0512-03, 5CFCRD.1024-03, 5CFCRD.2048-03, 5CFCRD.4096-03, 5CFCRD.8192-03 - Technical data

1) Not supported by the B&R Embedded OS Installer.

### 9.5.4 Temperature humidity diagram

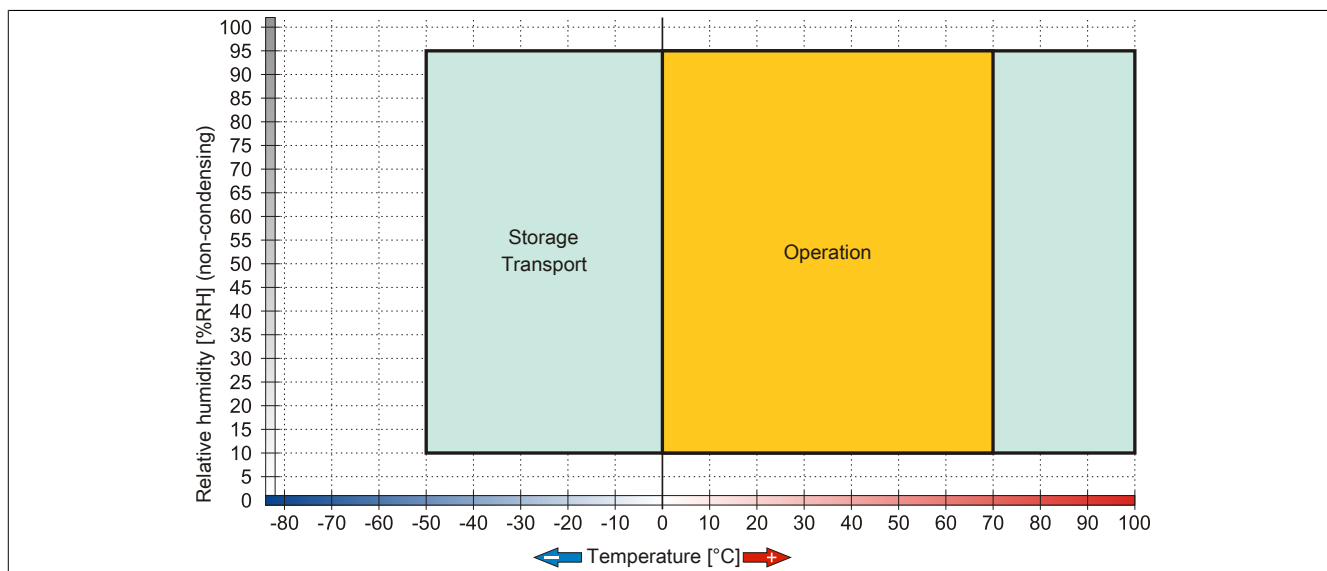


Figure 156: 5CFCRD.xxxx-03 CompactFlash cards - Temperature humidity diagram

### 9.5.5 Dimensions

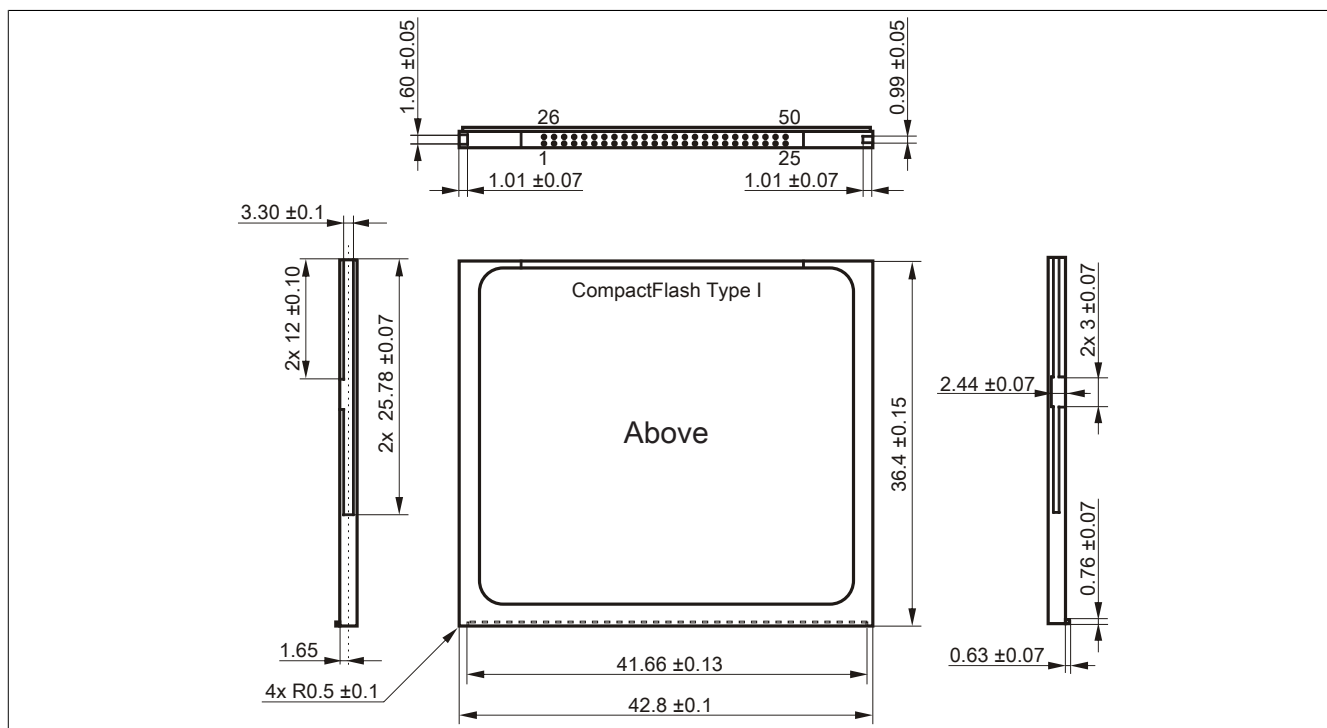


Figure 157: Type I CompactFlash card - Dimensions

## 9.6 Known problems/issues

The following is a known issue for devices with two CompactFlash slots:

- Using two different types of CompactFlash cards can cause problems with Automation PCs and Panel PCs. For example, it is possible that one of the two cards is not detected during system startup. This is caused by different startup speeds. CompactFlash cards with older technology require significantly more time during system startup than CompactFlash cards with newer technology. This behavior occurs near the end of the time frame provided for startup. The problem described can occur because the startup time for the CompactFlash cards fluctuates due to the different components being used. Depending on the CompactFlash cards being used, this error may occur never, sometimes or always.

## 10 USB flash drives

### 10.1 5MMUSB.2048-00

#### 10.1.1 General information

USB flash drives are storage media that are easy to replace. Because of their fast data transfer (USB 2.0), USB flash drives are ideal for use as portable data storage. Without requiring additional drivers ("hot plugging", except in the case of Windows 98SE), the USB flash drive can immediately act as an additional drive where data can be read or written.

#### Information:

Due to the vast quantity of USB flash drives available on the market as well as their short product life cycle, we reserve the right to supply alternative products at any time. The following measures may therefore be necessary in order to boot from these flash drives as well:

- The flash drive must be reformatted or in some cases even repartitioned (set active partition).
- The flash drive must be the first bootable device in the BIOS boot order; alternatively, the IDE controllers can be disabled in BIOS. This can be avoided in most cases if the "fdisk /mbr" command is additionally executed on the USB flash drive.

#### 10.1.2 Order data

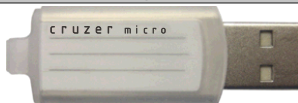
Model number	Short description	Figure
	<b>USB accessories</b>	
5MMUSB.2048-00	USB 2.0 flash drive, 2048 MB	

Table 226: 5MMUSB.2048-00 - Order data

#### 10.1.3 Technical data

#### Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the complete system. The data specifications for the complete system take precedence over those of individual components.

Product ID	5MMUSB.2048-00
<b>General information</b>	
Data retention	10 years
LEDs	1 LED (green) <sup>1)</sup>
MTBF	100,000 hours (at 25°C)
Type	USB 1.1, USB 2.0
Maintenance	None
Certification CE	Yes
<b>Interfaces</b>	
USB	
Type	USB 1.1, USB 2.0
Connection	To any USB Type A interface
Transfer rate	Low speed (1.5 Mbit/s), full speed (12 Mbit/s), high speed (480 Mbit/s)
Sequential reading	Max. 8.7 MB/s
Sequential writing	Max. 1.7 MB/s
<b>Support</b>	
Operating systems	
Windows XP Professional	Yes
Windows XP Embedded	Yes
Windows ME	Yes
Windows 2000	Yes
Windows CE 5.0	Yes
Windows CE 4.2	Yes
<b>Electrical characteristics</b>	
Power consumption	650 µA sleep mode, 150 mA read/write

Table 227: 5MMUSB.2048-00 - Technical data

Product ID	5MMUSB.2048-00
Environmental conditions	
Temperature	
Operation	0 to 45°C
Storage	-20 to 60°C
Transport	-20 to 60°C
Relative humidity	
Operation	10 to 90%, non-condensing
Storage	5 to 90%, non-condensing
Transport	5 to 90%, non-condensing
Vibration	
Operation	10 to 500 Hz: 2 g (19.6 m/s <sup>2</sup> 0-peak), oscillation rate 1/minute
Storage	10 to 500 Hz: 2 g (19.6 m/s <sup>2</sup> 0-peak), oscillation rate 1/minute
Transport	10 to 500 Hz: 2 g (19.6 m/s <sup>2</sup> 0-peak), oscillation rate 1/minute
Shock	
Operation	Max. 40 g (392 m/s <sup>2</sup> 0-peak) and 11 ms duration
Storage	Max. 80 g (784 m/s <sup>2</sup> 0-peak) and 11 ms duration
Transport	Max. 80 g (784 m/s <sup>2</sup> 0-peak) and 11 ms duration
Altitude	
Operation	Max. 3048 m
Storage	Max. 12192 m
Transport	Max. 12192 m
Mechanical characteristics	
Dimensions	
Width	19 mm
Length	52.2 mm
Height	7.9 mm

Table 227: 5MMUSB.2048-00 - Technical data

1) Indicates data being transferred (sending and receiving).

#### 10.1.4 Temperature humidity diagram

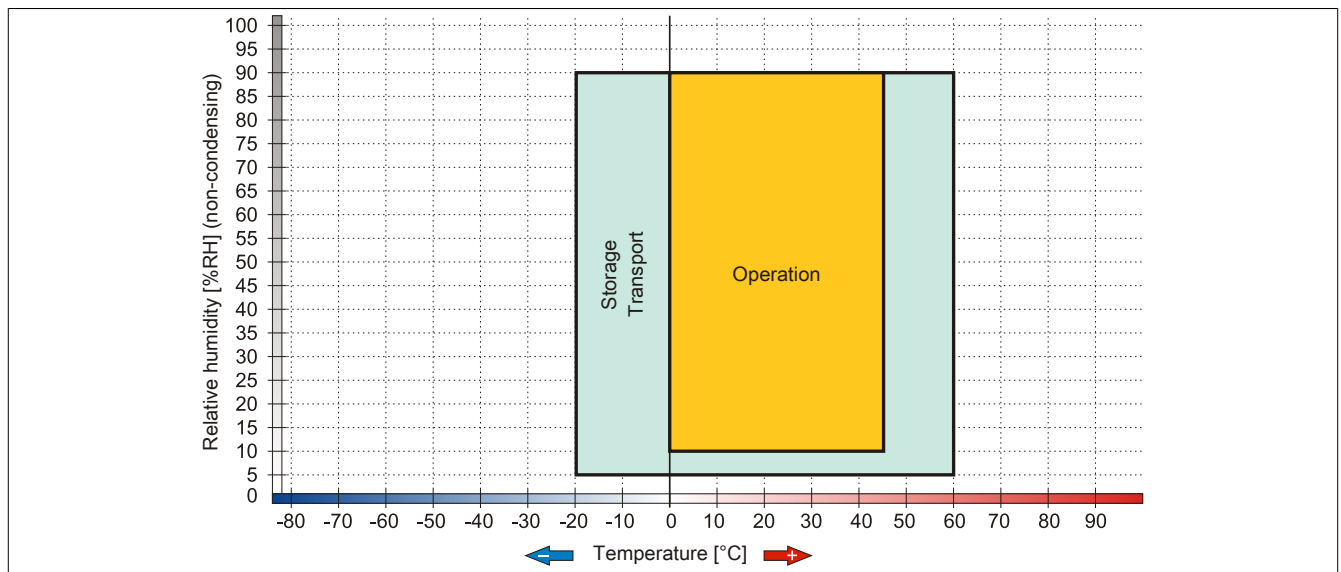


Figure 158: 5MMUSB.2048-00 - Temperature humidity diagram

## 10.2 5MMUSB.xxxx-01

### 10.2.1 General information

USB flash drives are storage media that are easy to replace. Because of their fast data transfer (USB 2.0), USB flash drives are ideal for use as portable data storage. Without requiring additional drivers ("hot plugging", except in the case of Windows 98SE), the USB flash drive can immediately act as an additional drive where data can be read or written.

#### Information:

Due to the vast quantity of USB flash drives available on the market as well as their short product life cycle, we reserve the right to supply alternative products at any time. The following measures may therefore be necessary in order to boot from these flash drives as well:

- The flash drive must be reformatted or in some cases even repartitioned (set active partition).
- The flash drive must be the first bootable device in the BIOS boot order; alternatively, the IDE controllers can be disabled in BIOS. This can be avoided in most cases if the "fdisk /mbr" command is additionally executed on the USB flash drive.

### 10.2.2 Order data


Model number	Short description	Figure
	<b>USB accessories</b>	
5MMUSB.2048-01	USB 2.0 flash drive, 2048 MB, B&R	
5MMUSB.4096-01	USB 2.0 flash drive, 4096 MB, B&R	

Table 228: 5MMUSB.2048-01, 5MMUSB.4096-01 - Order data

### 10.2.3 Technical data

Product ID	5MMUSB.2048-01	5MMUSB.4096-01
General information		
Capacity	2 GB	4 GB
Data retention	>10 years	
LEDs	1 LED (green) <sup>1)</sup>	
MTBF	>3,000,000 hours	
Type	USB 1.1, USB 2.0	
Maintenance	None	
Default file system	FAT16	FAT32
Certification CE	Yes	
Interfaces		
USB	USB 1.1, USB 2.0	
Type	To any USB Type A interface	
Connection	Low speed (1.5 Mbit/s), full speed (12 Mbit/s), high speed (480 Mbit/s)	
Transfer rate	Full speed max. 1 MB/s, High speed max. 32 MB/s	
Sequential reading	Full speed max. 0.9 MB/s, High speed max. 23 MB/s	
Sequential writing		
Support		
Operating systems		
Windows 7	Yes	
Windows XP Professional	Yes	
Windows XP Embedded	Yes	
Windows ME	Yes	
Windows 2000	Yes	
Windows CE 5.0	Yes	
Windows CE 4.2	Yes	
Electrical characteristics		
Power consumption	Max. 500 µA sleep mode, max. 120 mA read/write	
Environmental conditions		
Temperature		
Operation	0 to 70°C	
Storage	-50 to 100°C	
Transport	-50 to 100°C	

Table 229: 5MMUSB.2048-01, 5MMUSB.4096-01 - Technical data

Product ID	5MMUSB.2048-01	5MMUSB.4096-01
Relative humidity		
Operation		85%, non-condensing
Storage		85%, non-condensing
Transport		85%, non-condensing
Vibration		
Operation		20 to 2000 Hz: 20 g (peak)
Storage		20 to 2000 Hz: 20 g (peak)
Transport		20 to 2000 Hz: 20 g (peak)
Shock		
Operation		Max. 1500 g (peak)
Storage		Max. 1500 g (peak)
Transport		Max. 1500 g (peak)
Altitude		
Operation		Max. 3048 m
Storage		Max. 12192 m
Transport		Max. 12192 m
<b>Mechanical characteristics</b>		
Dimensions		
Width		17.97 mm
Length		67.85 mm
Height		8.35 mm

Table 229: 5MMUSB.2048-01, 5MMUSB.4096-01 - Technical data

1) Indicates data being transferred (sending and receiving).

### 10.2.4 Temperature humidity diagram

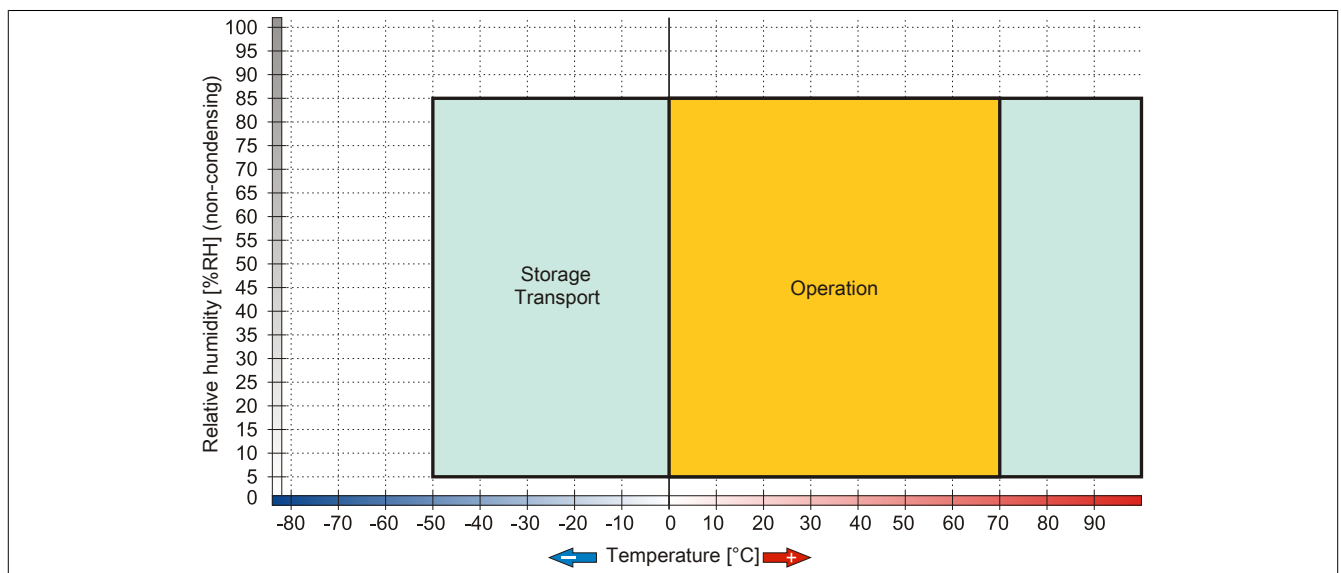


Figure 159: 5MMUSB.xxxx-01 - Temperature humidity diagram

## 11 USB media drive

### 11.1 5MD900.USB2-02

#### 11.1.1 General information

The USB media drive features a DVD-R/RW DVD+R/RW drive, a CompactFlash slot and one USB port on both the front and back. It is connected to a USB port on the B&R Industrial PC.

- Desktop or rack-mounted operation (mounting rail brackets)
- Integrated DVD-R/RW DVD+R/RW drive
- Integrated IDE/ATAPI CompactFlash slot (hot pluggable)
- Integrated USB 2.0 connection
- +24 VDC supply (back)
- USB 2.0 connection (back)
- Optional front cover

#### 11.1.2 Order data


Model number	Short description	<div>Figure</div> 
	<b>USB accessories</b>	
5MD900.USB2-02	USB 2.0 drive combination, consists of DVD-R/RW DVD+R/RW, CompactFlash slot (Type II), USB connection (Type A on the front, Type B on the back); 24V DC (order screw clamp terminal 0TB103.9 or cage clamp terminal 0TB103.91 separately)	
	<b>Required accessories</b>	
	<b>Other</b>	
5SWUTI.0000-00	OEM Nero CD-RW Software, only available with a CD writer.	
	<b>Terminal blocks</b>	
0TB103.9	Connector, 24 VDC, 3-pin female, 3.31 mm <sup>2</sup> screw clamp, protected against vibration by the screw flange	
0TB103.91	Connector, 24 VDC, 3-pin female, 3.31 mm <sup>2</sup> cage clamp, protected against vibration by the screw flange	
	<b>USB cable</b>	
5CAUSB.0018-00	USB 2.0 connection cable type A - type B, 1.8 m	
5CAUSB.0050-00	USB 2.0 connection cable type A - type B, 5 m	

Table 230: 5MD900.USB2-02 - Order data

#### 11.1.3 Interfaces

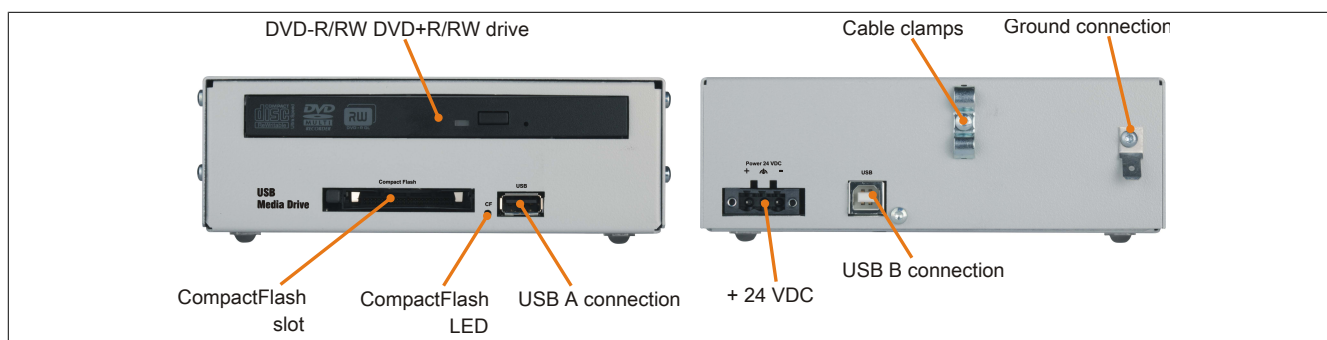


Figure 160: 5MD900.USB2-02 - Interfaces

#### 11.1.4 Technical data

Product ID	5MD900.USB2-02
<b>General information</b>	
Max. cable length	5 m (not including hub)
Certification	
CE	Yes
cULus	Yes
<b>Interfaces</b>	
CompactFlash slot 1	
Type	Type I
Connection	IDE/ATAPI
Activity LED	Signals read or write access to an inserted CompactFlash card

Table 231: 5MD900.USB2-02 - Technical data



Product ID	5MD900.USB2-02
USB	
Type	USB 2.0
Design	Type A front Type B back
Transfer rate	Low speed (1.5 Mbit/s), full speed (12 Mbit/s), high speed (480 Mbit/s)
Current load	Max. 500 mA
CD / DVD drive	
Data buffer capacity	2 MB
Data transfer rate	Max. 33.3 MB/s
Speed	Max. 5090 rpm $\pm 1\%$
Noise level	Approx. 45 dBA in a distance of 50 cm (full read access)
Compatible formats	CD-DA, CD-ROM mode 1/mode 2 CD-ROM XA mode 2 (form 1, form 2) Photo CD (single-/multi-session), Enhanced CD, CD text DVD-ROM, DVD-R, DVD-RW, DVD-Video DVD-RAM (4.7GB, 2.6GB) DVD+R, DVD+R (dual layer), DVD+RW
Laser class	Class 1 laser
Service life	60000 POH (power-on hours)
Interface	IDE (ATAPI)
Startup time	
CD	Max. 14 seconds (from 0 rpm to read access)
DVD	Max. 15 seconds (from 0 rpm to read access)
Access time	
CD	Typ. 140 ms (24x)
DVD	Typ. 150 ms (8x)
Readable media	
CD	CD/CD-ROM (12 cm, 8 cm), CD-R, CD-RW
DVD	DVD-ROM, DVD-R, DVD-RW, DVD-RAM, DVD+R, DVD+R (dual layer), DVD+RW
Writable media	
CD	CD-R, CD-RW
DVD	DVD-R/RW, DVD-RAM (4.7 GB), DVD+R/RW, DVD+R (dual layer)
Read speed	
CD	24x
DVD	8x
Write speed	
CD-R	10 to 24x
CD-RW	10 to 24x
DVD+R	3.3 to 8x
DVD+R (dual layer)	2.4 to 4x
DVD+RW	3.3 to 8x
DVD-R	2 to 6x
DVD-R (dual layer)	2 to 4x
DVD-RAM	3 to 5x
DVD-RW	2 to 6x
Write methods	
CD	Disk at once, session at once, packet write, track at once
DVD	Disk at once, incremental, overwrite, sequential
Electrical characteristics	
Nominal voltage	24 VDC $\pm 25\%$
Operating conditions	
Protection in accordance with EN 60529	Front: IP65 (only with optional front cover), back: IP20
Environmental conditions	
Temperature <sup>1)</sup>	
Operation	5 to 45°C
Storage	-20 to 60°C
Transport	-40 to 60°C
Relative humidity	
Operation	20 to 80%
Storage	5 to 90%
Transport	5 to 95%
Vibration	
Operation	5 to 500 Hz: 0.3 g (2.9 m/s <sup>2</sup> 0-peak)
Storage	10 to 100 Hz: 2 g (19.6 m/s <sup>2</sup> 0-peak)
Transport	10 to 100 Hz: 2 g (19.6 m/s <sup>2</sup> 0-peak)
Shock	
Operation	5 g, 11 ms
Storage	60 g, 11 ms
Transport	60 g, 11 ms
Altitude	
Operation	Max. 3000 m

Table 231: 5MD900.USB2-02 - Technical data

Product ID	5MD900.USB2-02
Mechanical characteristics	
Dimensions	
Width	156 mm
Height	52 mm
Depth	140 mm
Weight	Approx. 1100 g (without front cover)

Table 231: 5MD900.USB2-02 - Technical data

- 1) Temperature specifications refer to operation at 500 meters. The maximum ambient temperature is typically derated by 1°C per 1000 meters (starting at 500 meters above sea level).

11.1.5 Dimensions

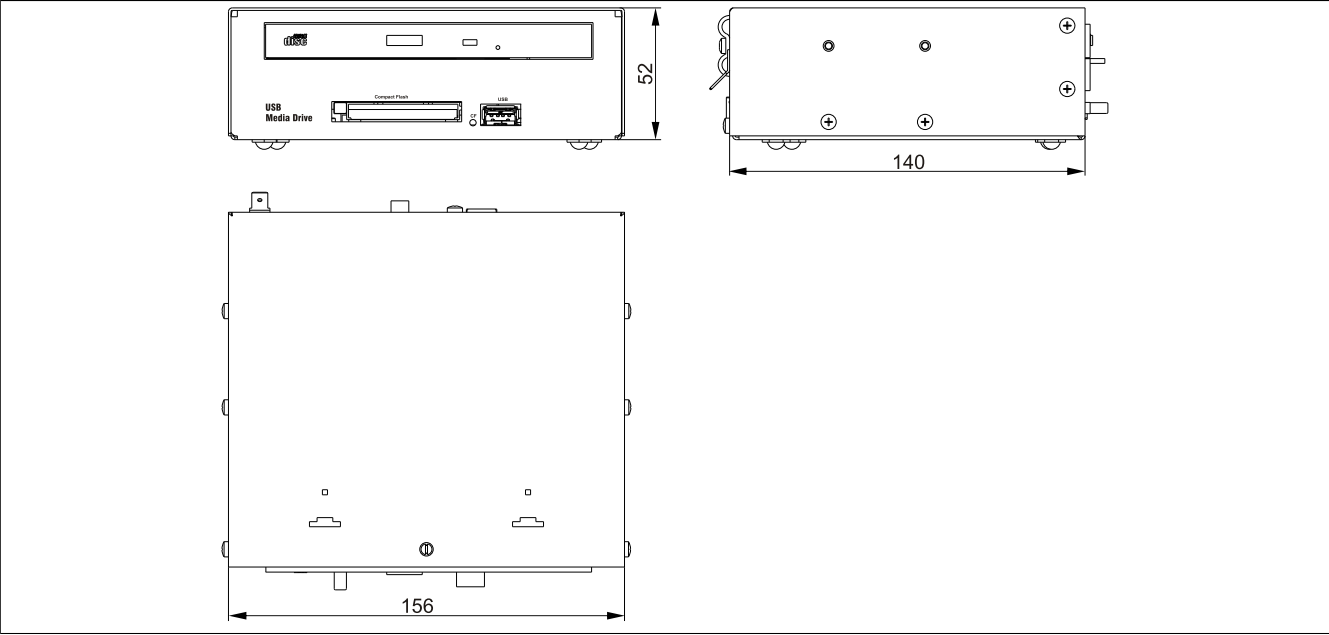


Figure 161: 5MD900.USB2-02 - Dimensions

11.1.6 Dimensions with front cover

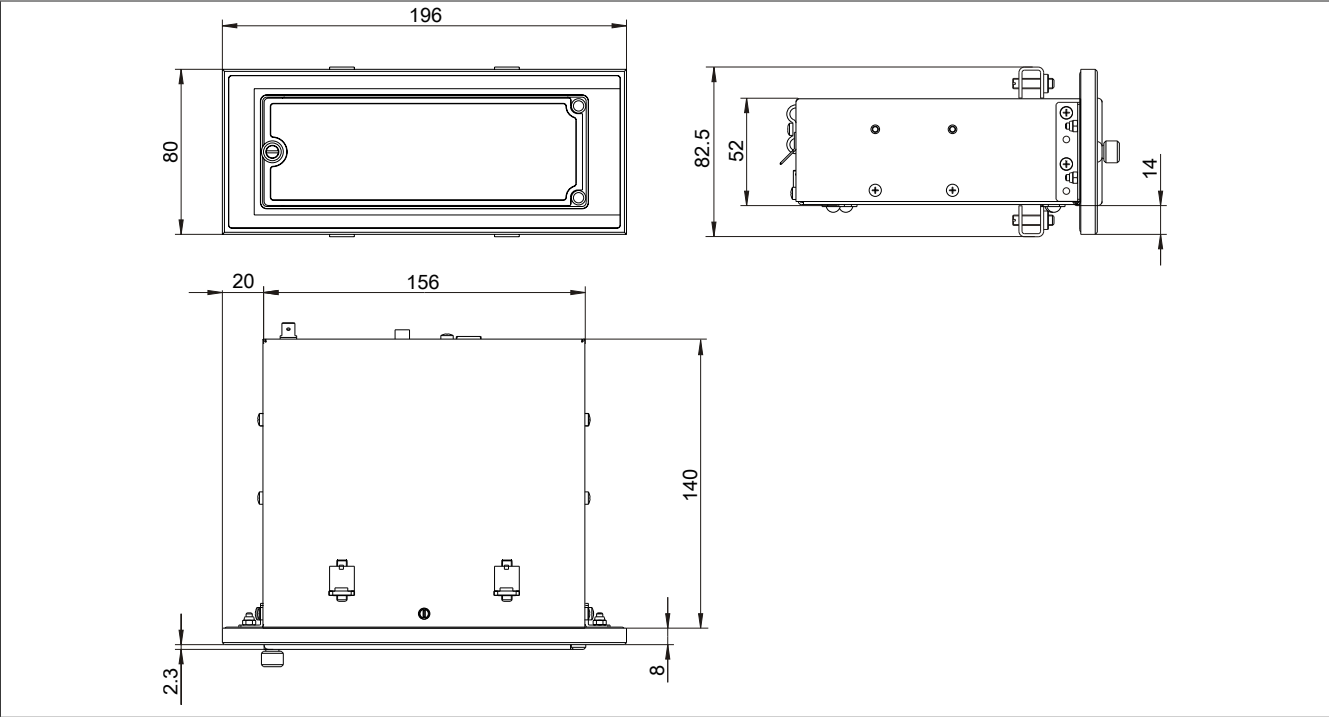


Figure 162: USB media drive with front cover - Dimensions

### 11.1.7 Cutout installation

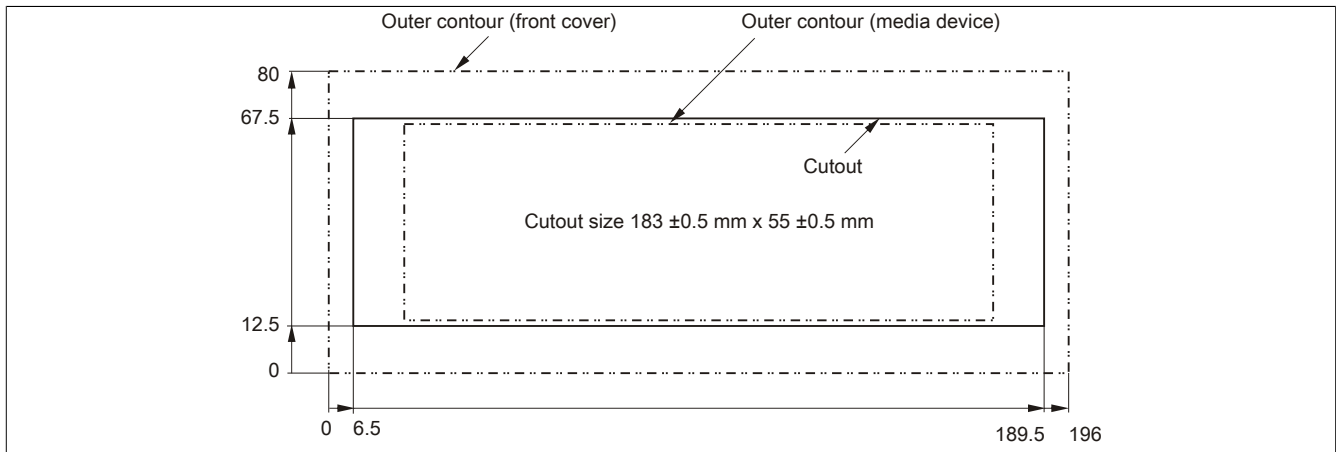


Figure 163: USB media drive with front cover - Installation cutout

### 11.1.8 Contents of delivery

Quantity	Component
1	USB media drive
2	Mounting rail brackets

Table 232: 5MD900.USB2-02 - Contents of delivery

### 11.1.9 Installation

The USB media drive can be operated as a desktop device (rubber feet) or as a rack-mounted device (2 mounting rail brackets included).

#### 11.1.9.1 Mounting orientation

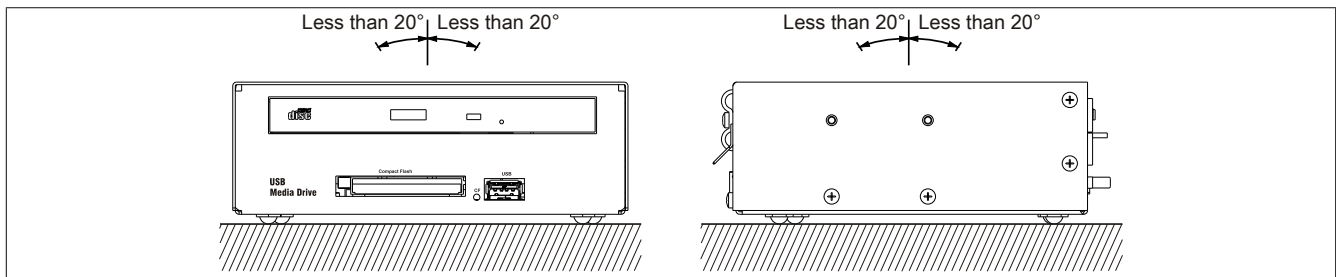


Figure 164: 5MD900.USB2-02 - Mounting orientation

## 11.2 5A5003.03

### 11.2.1 General information

This front cover can be mounted on the front of the USB media drive (model number 5MD900.USB2-00, 5MD900.USB2-01 or 5MD900.USB2-02) to protect the interface.

### 11.2.2 Order data


Model number	Short description	Figure
	<b>USB accessories</b>	
5A5003.03	Front cover, for remote CD-ROM drive 5A5003.02 and USB 2.0 drive combination 5MD900.USB2-00, 5MD900.USB2-01 and 5MD900.USB2-02	

Table 233: 5A5003.03 - Order data

### 11.2.3 Technical data

Product ID	5A5003.03
<b>General information</b>	
Certification	
CE	Yes
cULus	Yes
<b>Mechanical characteristics</b>	
Front	
Panel membrane	
Light background	Similar to Pantone 427CV
Dimensions	
Width	196 mm
Height	80 mm
Depth	8 mm

Table 234: 5A5003.03 - Technical data

### 11.2.4 Dimensions

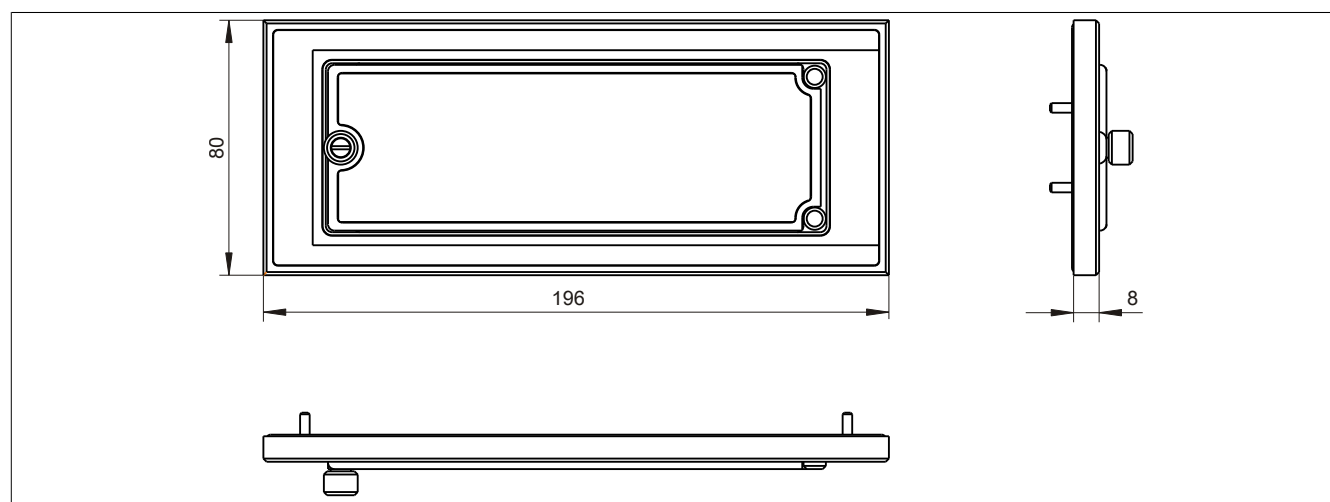


Figure 165: 5A5003.03 - Dimensions

### 11.2.5 Contents of delivery

Quantity	Component
1	Front cover 5A5003.03 for the USB media drive
4	M3 locknut
4	Cover retaining clip

Table 235: 5A5003.03 - Contents of delivery

### 11.2.6 Installation

The front cover is attached with 2 mounting rail brackets (included with the USB media drive) and 4 M3 locknuts. The 4 retaining clips provided can be used to mount the USB media drive and front cover as a whole, for example in a control cabinet door.

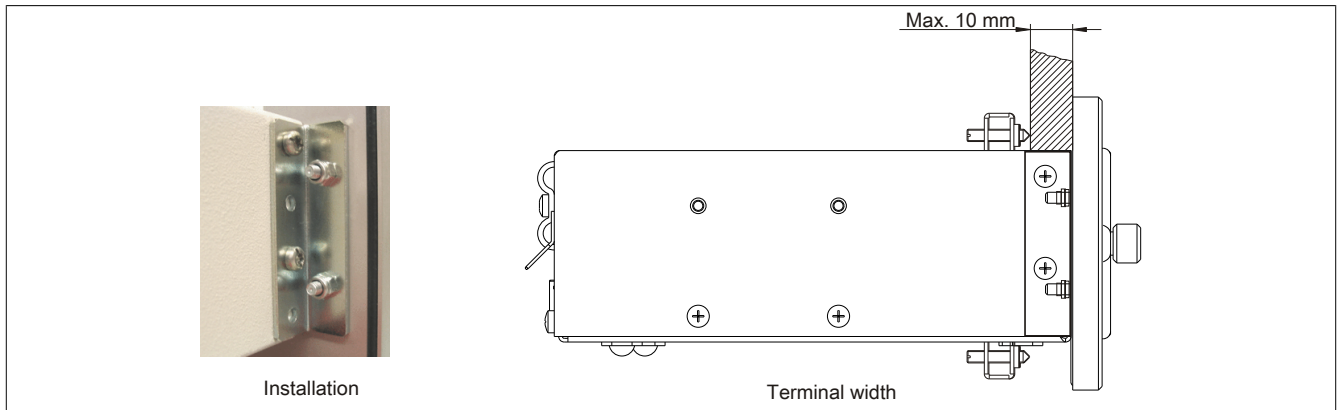


Figure 166: Front cover mounting and installation depth

#### 11.2.6.1 Cutout installation

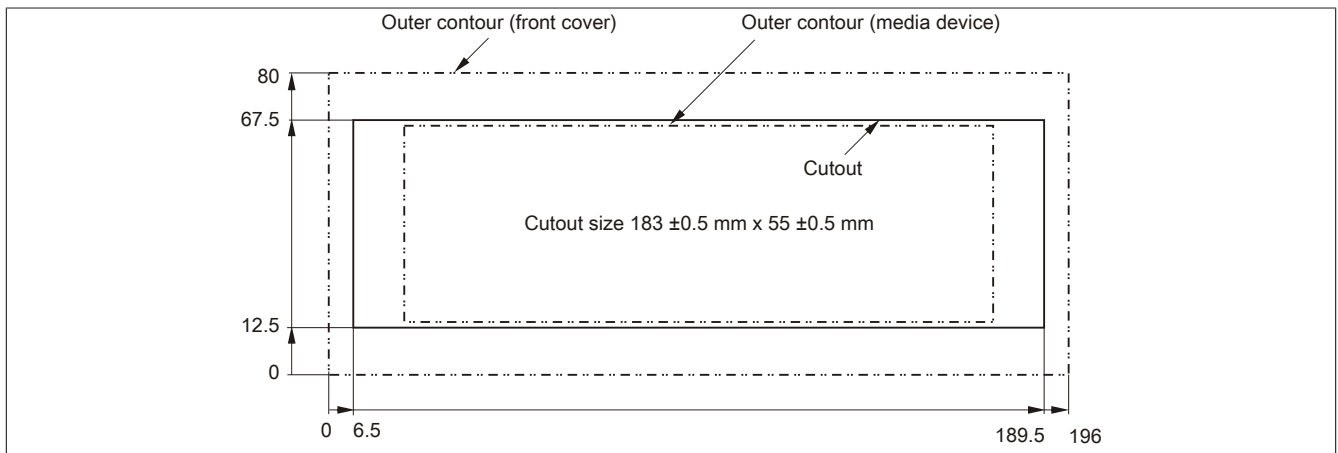


Figure 167: USB media drive with front cover - Installation cutout

## 12 HMI Drivers & Utilities DVD

### 12.1 5SWHMI.0000-00

#### 12.1.1 General information

This DVD contains drivers, utilities, software upgrades and user's manuals for B&R panel system products (see the "Industrial PCs" or "Visualization and operation" section of the B&R website at [www.br-automation.com](http://www.br-automation.com)).

When the DVD is created, its contents are identical to the files found in the Downloads section of the B&R website (Service \ Material-related downloads).

#### 12.1.2 Order data


Model number	Short description	Figure
	<b>Other</b>	
5SWHMI.0000-00	HMI Drivers & Utilities DVD	

Table 236: 5SWHMI.0000-00 - Order data

#### 12.1.3 Contents (V2.10)

##### BIOS product upgrades

- Automation PC 620 / Panel PC 700 CPU board 815E and 855GME BIOS
- Automation PC 620 / Panel PC 700 CPU board X855GME BIOS
- Automation PC 620 / Panel PC 700 CPU board 945GME N270 BIOS
- Automation PC 680
- Automation PC 810 / Automation PC 820 / Panel PC 800 B945GME BIOS
- Automation PC 810 / Panel PC 800 945GME N270 CPU board BIOS
- Automation PC 810 / Panel PC 800 GM45 CPU board BIOS
- Provit 2000 product family - IPC2000/2001/2002
- Provit 5000 product family - IPC5000/5600/5000C/5600C
- Power Panel 100 BIOS devices
- Mobile Panel 100 BIOS devices
- Power Panel 100 / Mobile Panel 100 user boot logo
- Power Panel 100 / Mobile Panel 100 REMHOST utility
- Power Panel 300/400 BIOS devices
- Power Panel 300/400 BIOS user boot logo
- Panel PC 310

##### Device drivers

- Automation Device Interface (ADI)
- Audio
- Chipset
- CD-ROM
- LS120
- Graphics
- Network

- PCI / SATA RAID controller
- Touch screen
- Touchpad
- Interface board

### Firmware upgrades

- Automation PC 620 / Panel PC 700 (MTCX, SDLR, SDLT)
- Automation PC 810 (MTCX, SDLR, SDLT)
- Automation PC 820 (MTCX, SDLR, SDLT)
- Mobile Panel 100 (SMCX)
- Panel PC 300 (MTCX)
- Power Panel 100 (aPCI)
- Power Panel 300/400 (aPCI)
- Power Panel 300/400 (MTCX)
- Panel PC 800 (MTCX, SDLR, SDLT)
- UPS firmware

### Utilities/Tools

- B&R Embedded OS Installer
- Windows CE Tools
- User boot logo conversion program
- SATA RAID Installation Utility
- Automation Device Interface (ADI)
- CompactFlash service life calculator (Silicon Systems)
- Miscellaneous
- MTC utilities
- B&R Key Editor
- MTC & Mkey utilities
- Mkey utilities
- UPS configuration software
- ICU ISA configuration
- Intel PCI NIC boot ROM
- Diagnostic programs

### Windows

- Windows CE 6.0
- Windows CE 5.0
- Windows CE 4.2
- Windows CE 4.1
- Windows CE Tools
- Windows Embedded Standard 2009
- Thin client
- Windows NT Embedded
- Windows XP Embedded
- VNC viewer

### MCAD templates for

- Industrial PCs
- Visualization and operating devices
- Slide-in label templates
- Custom designs

**ECAD templates for**

- Industrial PCs
- Automation PCs
- Automation Panel 900
- Panels (Power Panel)

**Documentation for**

- Automation PC 620
- Automation PC 680
- Automation PC 810
- Automation PC 820
- Automation Panel 800
- Automation Panel 900
- Panel PC 310
- Panel PC 700
- Panel PC 725
- Panel PC 800
- Power Panel 15/21/35/41
- Power Panel 100/200
- Power Panel 300/400
- Mobile Panel 40/50
- Mobile Panel 100/200
- Mobile Panel connection box
- Provit 2000
- Provit 3030
- Provit 4000
- Provit 5000
- Provit Benchmark
- Provit Mkey
- Windows CE 5.0 Help
- Windows CE 6.0 Help
- Windows NT Embedded application guide
- Windows XP Embedded application guide
- Uninterruptible power supply
- Implementation guides
- B&R Hilscher fieldbus cards (CANopen, DeviceNet, PROFIBUS, PROFINET)

**Service tools**

- Acrobat Reader 5.0.5 (freeware in German, English and French)
- Power Archiver 6.0 (freeware in German, English and French)
- Internet Explorer 5.0 (German and English)
- Internet Explorer 6.0 (German and English)



## 13 Cables

### 13.1 DVI cables

#### 13.1.1 5CADVI.0xxx-00

##### 13.1.1.1 General information

5CADVI.0xxx-00 DVI cables are designed for use in inflexible applications.

### Caution!

Power must be turned off before plugging in and unplugging cables.

##### 13.1.1.2 Order data


Model number	Short description	Figure
	<b>DVI cable</b>	
5CADVI.0018-00	DVI-D cable, 1.8 m	
5CADVI.0050-00	DVI-D cable, 5 m	
5CADVI.0100-00	DVI-D cable, 10 m	

Table 237: 5CADVI.0018-00, 5CADVI.0050-00, 5CADVI.0100-00 - Order data

##### 13.1.1.3 Technical data

Product ID	5CADVI.0018-00	5CADVI.0050-00	5CADVI.0100-00
General information			
Certification			
CE	Yes		
cULus	Yes		
GL	Yes		
Cable structure			
Wire cross section	AWG 28		
Shield	Individual cable pairs and entire cable		
Cable shielding	Tinned copper mesh, optical coverage >86%		
Outer sheathing			
Material	PVC		
Color	Beige		
Labeling	AWM STYLE 20276 80°C 30V VW1 DVI DIGITAL SINGLE LINK DER AN		
Connector			
Type	2x DVI-D (18+1), male		
Connection cycles	100		
Locating screw tightening torque	Max. 0.5 Nm		
Electrical characteristics			
Conductor resistance	Max. 237 Ω/km		
Insulation resistance	Min. 100 MΩ/km		
Mechanical characteristics			
Dimensions			
Length	1.8 m ±50 mm	5 m ±80 mm	10 m ±100 mm
Diameter	Max. 8.5 mm		
Flex radius	≥5x cable diameter (connector - ferrite bead and ferrite bead - ferrite bead)		
Weight	Approx. 260 g	Approx. 460 g	Approx. 790 g

Table 238: 5CADVI.0018-00, 5CADVI.0050-00, 5CADVI.0100-00 - Technical data

### 13.1.1.4 Flex radius specifications

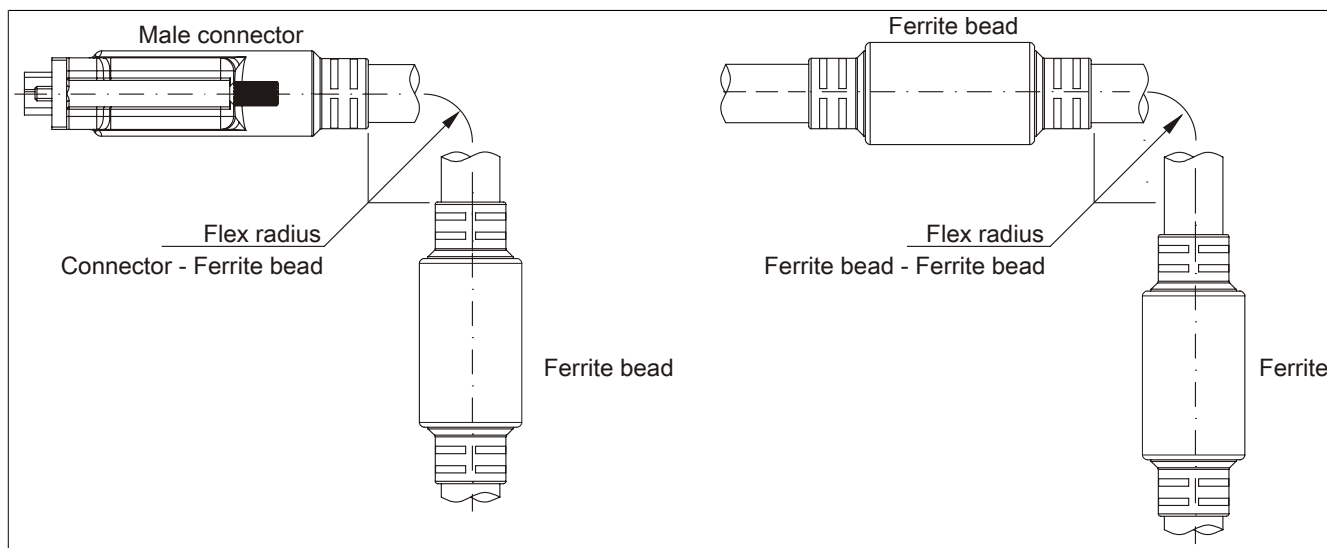


Figure 168: Flex radius specifications

### 13.1.1.5 Dimensions

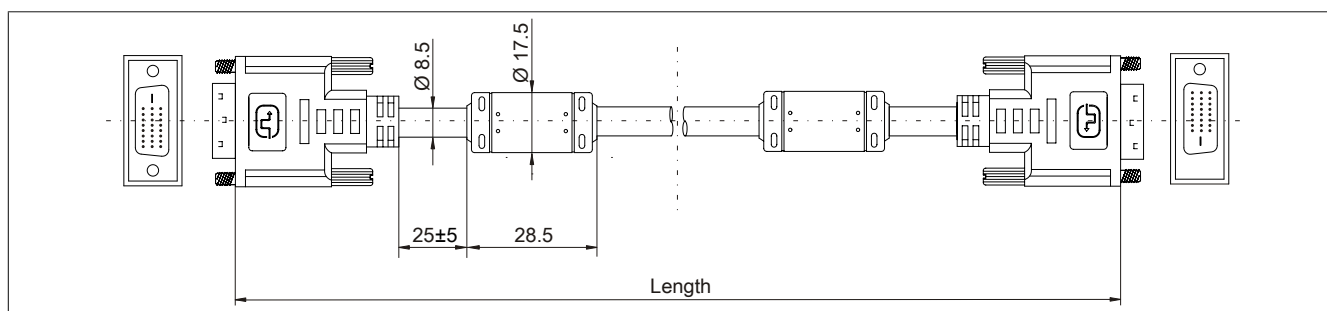


Figure 169: 5CADVI.0xxx-00 - Dimensions

## 13.1.1.6 Cable pinout

**Warning!**

If you choose to make a suitable cable yourself, it should be wired according to these specifications.

If a self-made cable is used, B&R cannot guarantee that it will function properly. All cables provided by B&R are guaranteed to function properly.

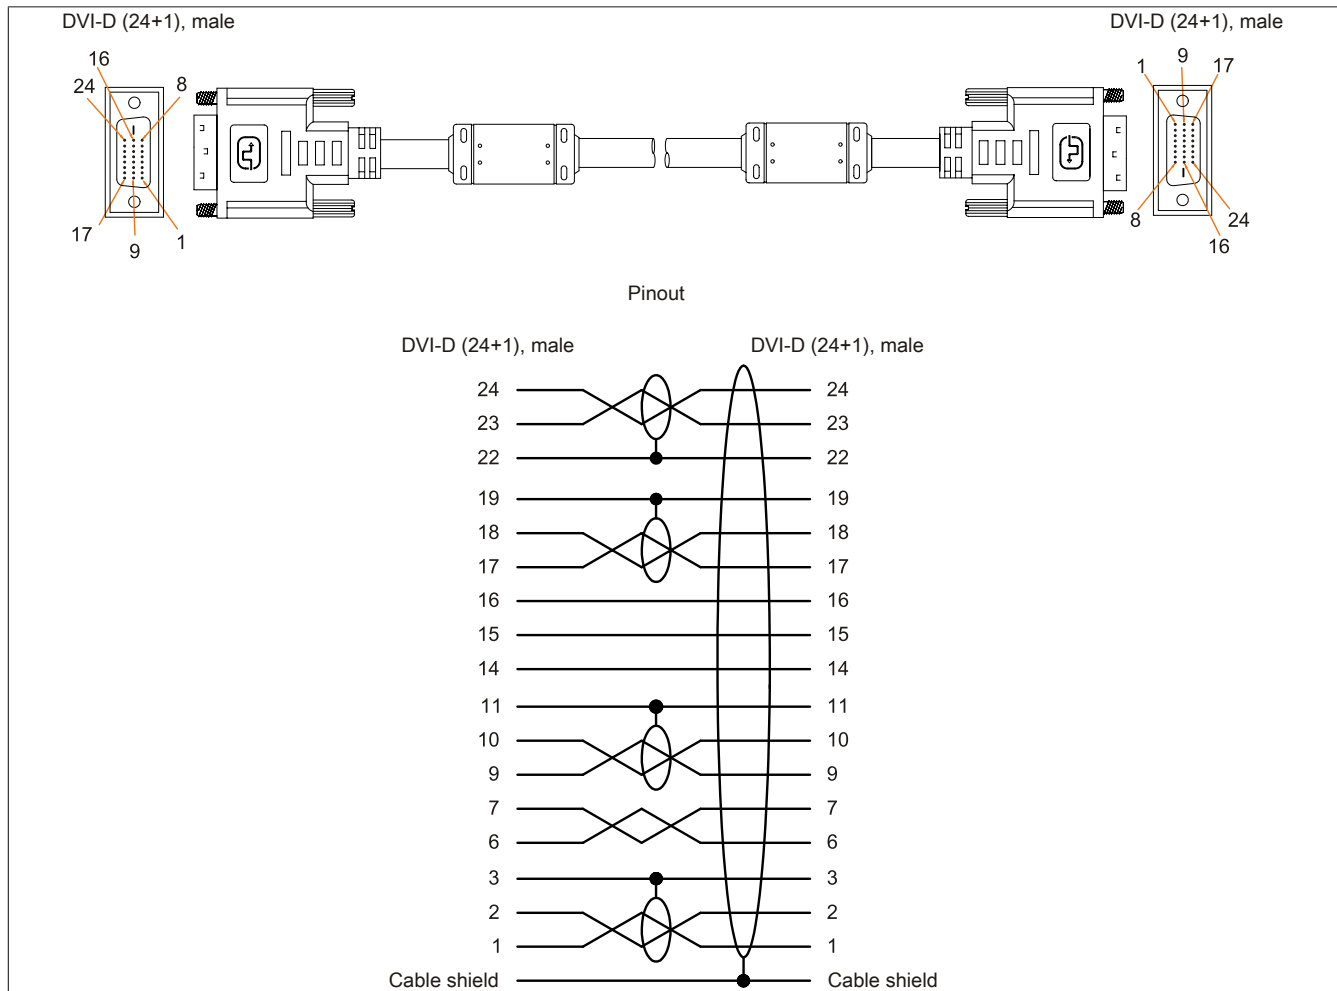


Figure 170: 5CADVI.0xxx-00 - Pinout

## 13.2 SDL cables

### 13.2.1 5CASDL.0xxx-00

#### 13.2.1.1 General information

5CASDL.0xxx-00 SDL cables are designed for use in inflexible applications. SDL flex cables 5CASDL.0xxx-03 are required for flexible applications (e.g. swing arm systems).

### Caution!

Power must be turned off before plugging in and unplugging cables.

#### 13.2.1.2 Order data


Model number	Short description	Figure
	<b>SDL cables</b>	
5CASDL.0018-00	SDL cable, 1.8 m	
5CASDL.0050-00	SDL cable, 5 m	
5CASDL.0100-00	SDL cable, 10 m	
5CASDL.0150-00	SDL cable, 15 m	
5CASDL.0200-00	SDL cable, 20 m	
5CASDL.0250-00	SDL cable, 25 m	
5CASDL.0300-00	SDL cable, 30 m	

Table 239: 5CASDL.0018-00, 5CASDL.0050-00, 5CASDL.0100-00, 5CASDL.0150-00, 5CASDL.0200-00, 5CASDL.0250-00, 5CASDL.0300-00 - Order data

#### 13.2.1.3 Technical data

Product ID	5CASDL. 0018-00	5CASDL. 0050-00	5CASDL. 0100-00	5CASDL. 0150-00	5CASDL. 0200-00	5CASDL. 0250-00	5CASDL. 0300-00
General information							
Certification	Yes Yes Yes						
CE							
cULus							
GL							
Cable structure							
Wire cross section	AWG 28		AWG 24				
Shield	Individual cable pairs and entire cable						
Cable shielding	Tinned copper mesh, optical coverage >85%						
Outer sheathing	PVC Black E74020-C (UL) AWM STYLE 20176 80°C 30V VW-1 DVI DIGITAL LINK						
Material							
Color							
Labeling							
Connector							
Type	2x DVI-D (24+1), male						
Connection cycles	100						
Contacts	Gold-plated						
Mechanical protection	Metal cover with crimped stress relief						
Locating screw tightening torque	Max. 0.5 Nm						
Electrical characteristics							
Conductor resistance	- ≤93 Ω/km						
AWG 24							
AWG 28	≤237 Ω/km		-				
Insulation resistance	Min. 10 MΩ/km						
Mechanical characteristics							
Dimensions	1.8 m ±30 mm   5 m ±30 mm   10 m ±50 mm   15 m ±100 mm   20 m ±100 mm   25 m ±100 mm   30 m ±100 mm Typ. 8.6 ±0.2 mm Max. 9 mm Typ. 11 ±0.2 mm Max. 11.5 mm						
Length							
Diameter							
Flex radius	≥5x cable diameter (connector - ferrite bead and ferrite bead - ferrite bead)						
Flexibility	Limited flexibility; valid for ferrite bead - ferrite bead (tested 100 cycles with 5x cable diameter, 20 cycles / minute)						
Weight	Approx. 300 g	Approx. 580 g	Approx. 1500 g	Approx. 2250 g	Approx. 2880 g	Approx. 4800 g	Approx. 5520 g

Table 240: 5CASDL.0018-00, 5CASDL.0050-00, 5CASDL.0100-00, 5CASDL.0150-00, 5CASDL.0200-00, 5CASDL.0250-00, 5CASDL.0300-00 - Technical data

13.2.1.4 Flex radius specifications

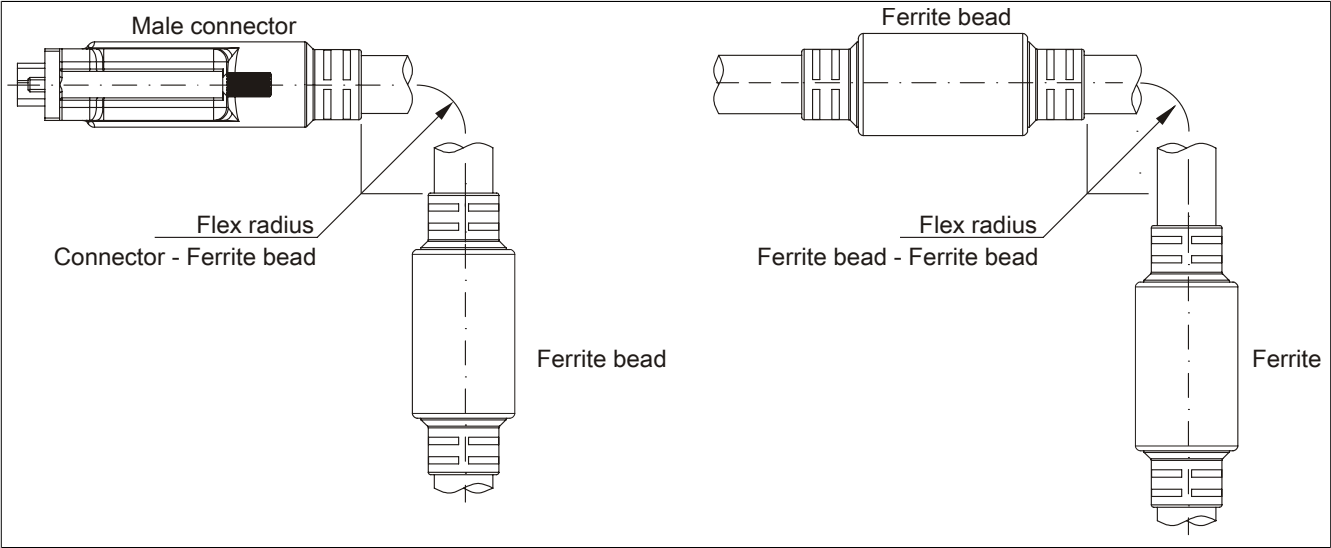


Figure 171: Flex radius specifications

13.2.1.5 Dimensions

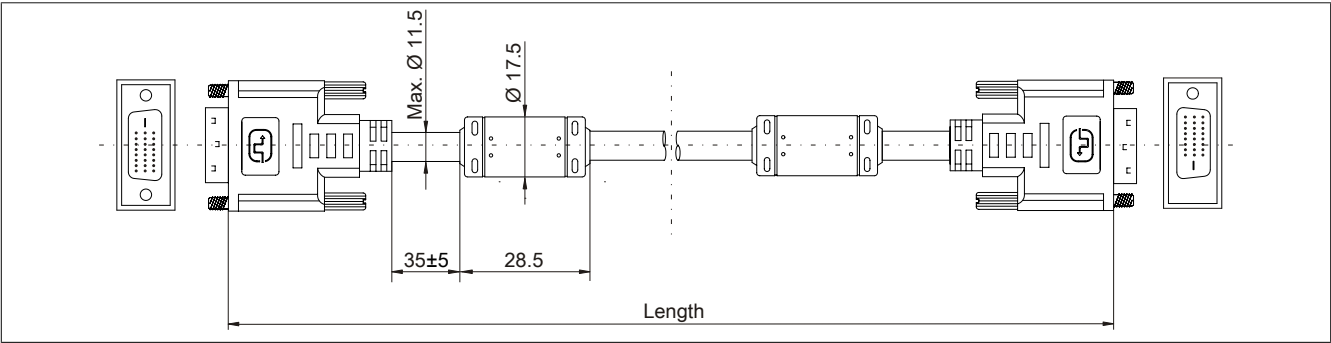


Figure 172: 5CASDL.0xxx-00- Dimensions

## 13.2.1.6 Cable pinout

**Warning!**

If you choose to make a suitable cable yourself, it should be wired according to these specifications.

If a self-made cable is used, B&R cannot guarantee that it will function properly. All cables provided by B&R are guaranteed to function properly.

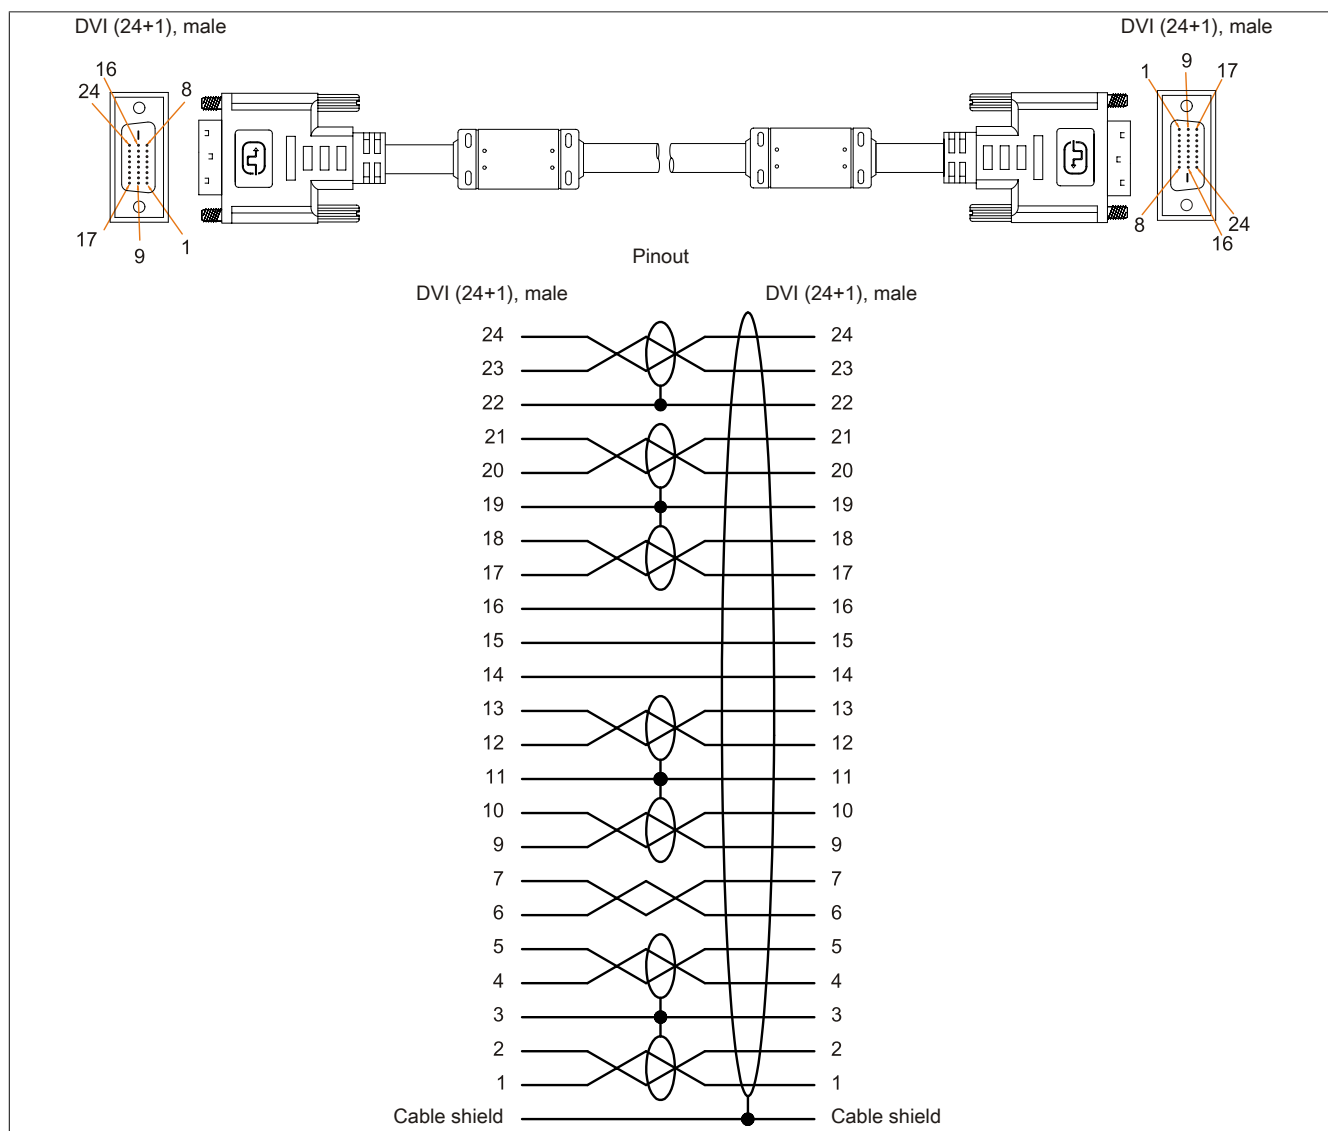


Figure 173: 5CASDL.0xxx-00 - Pinout

### 13.3 SDL cables with 45° male connector

#### 13.3.1 5CASDL.0xxx-01

##### 13.3.1.1 General information

5CASDL.0xxx-01 SDL cables with a 45° connector are designed for use in inflexible applications.

### Caution!

Power must be turned off before plugging in and unplugging cables.

##### 13.3.1.2 Order data


Model number	Short description	Figure
	<b>SDL cable - 45° connector</b>	
5CASDL.0018-01	SDL cable with 45° male connector, 1.8 m	
5CASDL.0050-01	SDL cable with 45° male connector, 5 m	
5CASDL.0100-01	SDL cable with 45° male connector, 10 m	
5CASDL.0150-01	SDL cable with 45° male connector, 15 m	

Table 241: 5CASDL.0018-01, 5CASDL.0050-01, 5CASDL.0100-01, 5CASDL.0150-01 - Order data

##### 13.3.1.3 Technical data

Product ID	5CASDL.0018-01	5CASDL.0050-01	5CASDL.0100-01	5CASDL.0150-01
General information				
Certification	Yes Yes Yes			
CE				
cULus				
GL				
Cable structure				
Wire cross section	AWG 28		AWG 24	
Shield	Individual cable pairs and entire cable			
Cable shielding	Tinned copper mesh, optical coverage >85%			
Outer sheathing	PVC Black			
Material				
Color				
Connector				
Type	2x DVI-D (24+1), male			
Connection cycles	100			
Contacts	Gold-plated			
Mechanical protection	Metal cover with crimped stress relief			
Locating screw tightening torque	Max. 0.5 Nm			
Electrical characteristics				
Conductor resistance	≤93 Ω/km -			
AWG 24				
AWG 28				
Insulation resistance	Min. 10 MΩ/km			
Mechanical characteristics				
Dimensions	1.8 m ±30 mm   5 m ±50 mm   10 m ±100 mm   15 m ±100 mm Max. 9 mm   Max. 11.5 mm			
Length				
Diameter				
Flex radius	≥5x cable diameter (connector - ferrite bead and ferrite bead - ferrite bead)			
Fixed installation				
Flexibility	Limited flexibility; valid for ferrite bead - ferrite bead (tested 100 cycles with 5x cable diameter, 20 cycles / minute)			
Weight	Approx. 300 g	Approx. 590 g	Approx. 2800 g	Approx. 2860 g

Table 242: 5CASDL.0018-01, 5CASDL.0050-01, 5CASDL.0100-01, 5CASDL.0150-01 - Technical data

### 13.3.1.4 Flex radius specifications

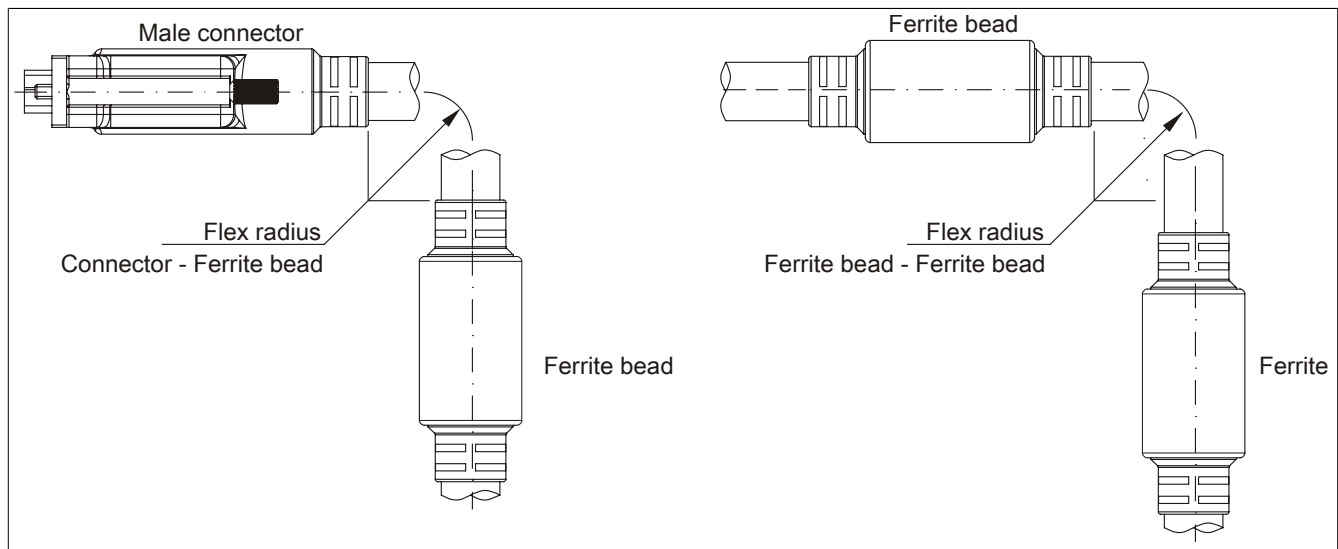


Figure 174: Flex radius specifications

### 13.3.1.5 Dimensions

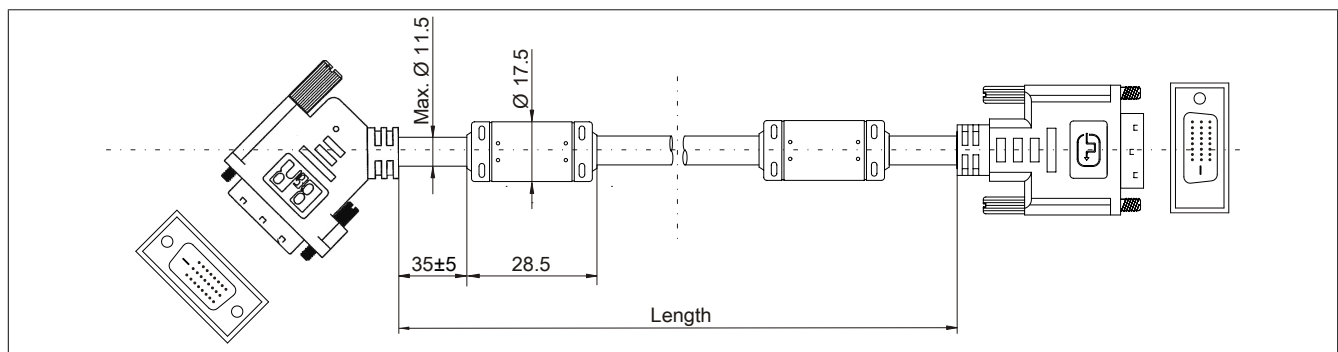


Figure 175: 5CASDL.0xxx-01 - Dimensions



13.3.1.6 Cable pinout

**Warning!**

If you choose to make a suitable cable yourself, it should be wired according to these specifications. If a self-made cable is used, B&R cannot guarantee that it will function properly. All cables provided by B&R are guaranteed to function properly.

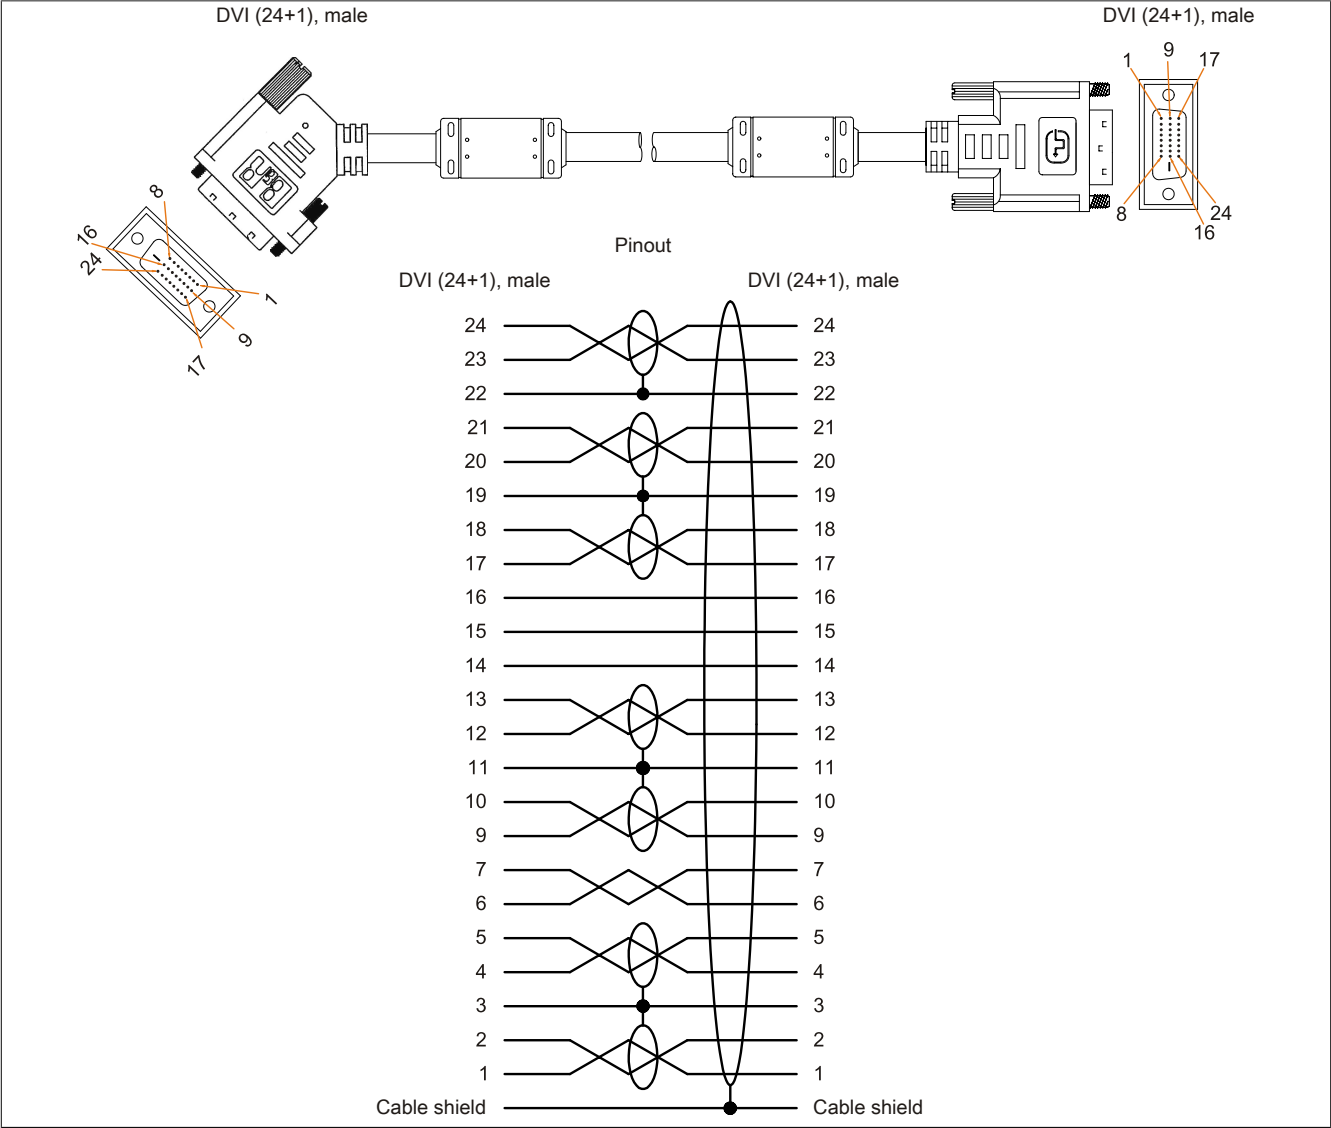


Figure 176: 5CASDL.0xxx-01 - Pinout

## 13.4 SDL flex cables

### 13.4.1 5CASDL.0xxx-03

#### 13.4.1.1 General information

5CASDL.0xxx-03 SDL flex cables are designed for use in both inflexible and flexible applications (e.g. support arm systems).

### Caution!

Power must be turned off before plugging in and unplugging cables.

#### 13.4.1.2 Order data


Model number	Short description	Figure
	<b>SDL flex cable</b>	
5CASDL.0018-03	SDL flex cable, 1.8 m	
5CASDL.0050-03	SDL flex cable, 5 m	
5CASDL.0100-03	SDL flex cable, 10 m	
5CASDL.0150-03	SDL flex cable, 15 m	
5CASDL.0200-03	SDL flex cable, 20 m	
5CASDL.0250-03	SDL flex cable, 25 m	
5CASDL.0300-03	SDL flex cable, 30 m	

Table 243: 5CASDL.0018-03, 5CASDL.0050-03, 5CASDL.0100-03, 5CASDL.0150-03, 5CASDL.0200-03, 5CASDL.0250-03, 5CASDL.0300-03 - Order data

#### 13.4.1.3 Technical data

Product ID	5CASDL. 0018-03	5CASDL. 0050-03	5CASDL. 0100-03	5CASDL. 0150-03	5CASDL. 0200-03	5CASDL. 0250-03	5CASDL. 0300-03
General information							
Certification							
CE							
cULus							
GL							
Cable structure							
Wire cross section	AWG 24 (control wires) AWG 26 (DVI, USB, data)						
Properties	Silicone- and halogen-free						
Shield	Individual cable pairs and entire cable						
Cable shielding	Aluminum-clad foil + tinned copper mesh						
Outer sheathing	Special semi-glossy TMPU Black (B&R) SDL Cable (UL) AWM 20236 80°C 30V E 63216						
Material							
Color							
Labeling							
Connector							
Type	2x DVI-D (24+1), male						
Connection cycles	Min. 200						
Contacts	Gold-plated						
Mechanical protection	Metal cover with crimped stress relief						
Locating screw tightening torque	Max. 0.5 Nm						
Electrical characteristics							
Operating voltage	≤30 V						
Test voltage	1 kV 0.5 kV						
Wire/Wire							
Wire/Shield							
Wave impedance	100 ±10 Ω						
Conductor resistance	≤95 Ω/km ≤145 Ω/km >200 MΩ/km						
AWG 24							
AWG 26							
Insulation resistance							
Operating conditions							
Approbation	UL AWM 20236 80°C 30 V						
Flame resistant	In accordance with UL758 (cable vertical flame test)						
Oil and hydrolysis resistance	According to VDE 0282-10						

Table 244: 5CASDL.0018-03, 5CASDL.0050-03, 5CASDL.0100-03, 5CASDL.0150-03, 5CASDL.0200-03, 5CASDL.0250-03, 5CASDL.0300-03 - Technical data

Product ID	5CASDL. 0018-03	5CASDL. 0050-03	5CASDL. 0100-03	5CASDL. 0150-03	5CASDL. 0200-03	5CASDL. 0250-03	5CASDL. 0300-03
Environmental conditions							
Temperature							
Storage							
Moving							
Fixed installation							
Mechanical characteristics							
Dimensions	1.8 m ±20 mm   5 m ±45 mm   10 m ±90 mm   15 m ±135 mm   20 m ±180 mm   25 m ±225 mm   30 m ±270 mm Max. 12 mm						
Length							
Diameter							
Flex radius	≥6x cable diameter (connector - ferrite bead) ≥10x cable diameter (from ferrite bead - ferrite bead) ≥15x cable diameter (from ferrite bead - ferrite bead)						
Fixed installation							
Flexible installation							
Flexibility	Flexible; valid for ferrite bead - ferrite bead (tested 300,000 cycles with 15x cable diameter, 4800 cycles/hour)						
Drag chain data	300,000 4800 cycles/hour 180 mm; 15x cable diameter 460 mm						
Flex cycles							
Velocity							
Flex radius							
Hub							
Weight	Approx. 460 g	Approx. 1020 g	Approx. 1940 g	Approx. 2840 g	Approx. 3740 g	Approx. 4560 g	Approx. 5590 g
Tension							
During operation							
During installation							

Table 244: 5CASDL.0018-03, 5CASDL.0050-03, 5CASDL.0100-03, 5CASDL.0150-03, 5CASDL.0200-03, 5CASDL.0250-03, 5CASDL.0300-03 - Technical data

#### 13.4.1.4 Flex radius specifications

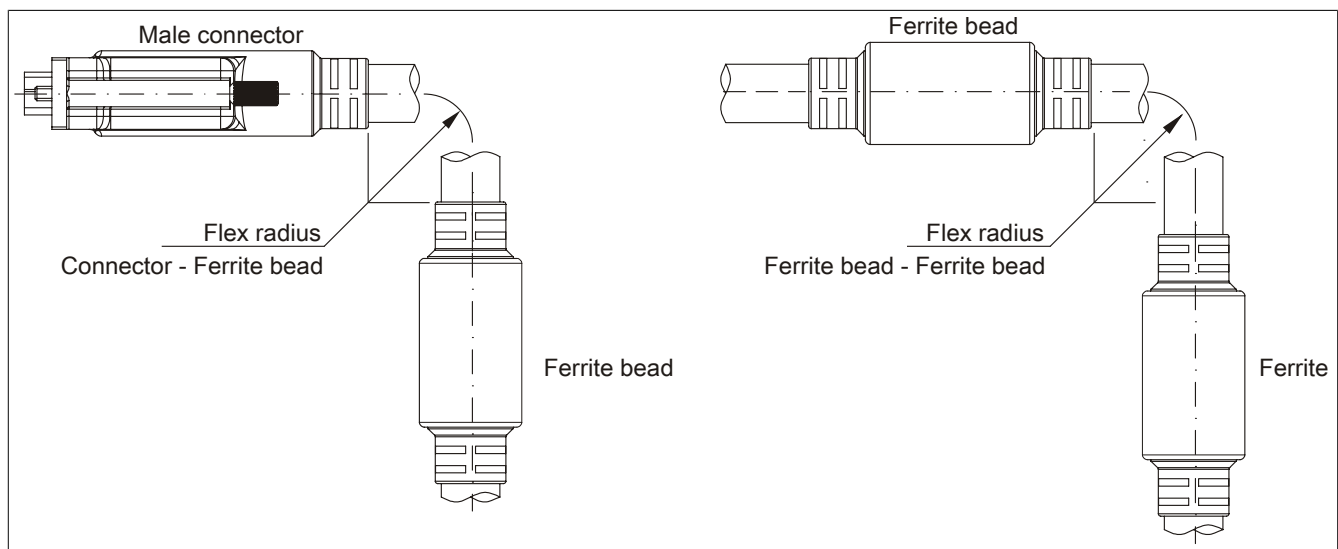


Figure 177: Flex radius specifications

#### 13.4.1.5 Dimensions

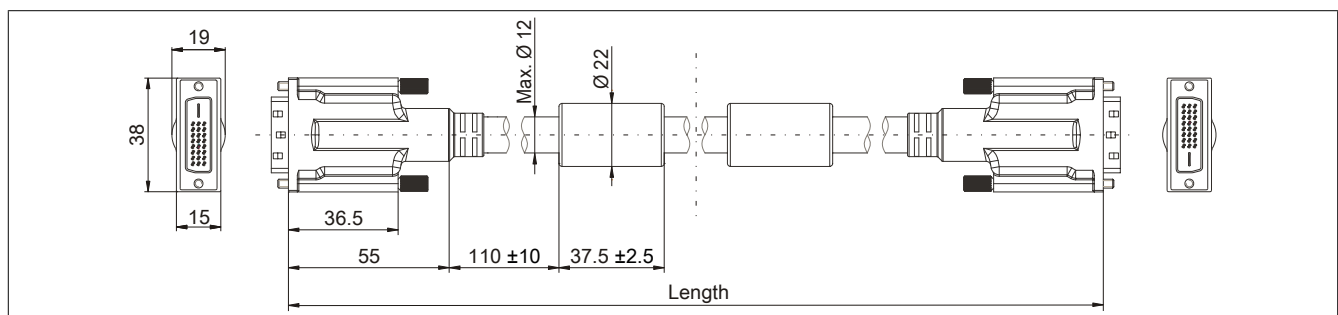


Figure 178: 5CASDL.0xxx-03 - Dimensions

## 13.4.1.6 Structure

Element	Assignment	Cross section	
DVI	TMDS data 0	26 AWG	
	TMDS data 1	26 AWG	
	TMDS data 2	26 AWG	
	TMDS cycle	26 AWG	
USB	XUSB0	26 AWG	
	XUSB1	26 AWG	
Data	SDL	26 AWG	
	DDC cycle	24 AWG	
	DDC data	24 AWG	
	+5 V	24 AWG	
	Mass	24 AWG	
Control wires	Hot plug detect	24 AWG	

Table 245: 5CASDL.0xxx-03 SDL flex cables - Structure

## 13.4.1.7 Cable pinout

**Warning!**

If you choose to make a suitable cable yourself, it should be wired according to these specifications.

If a self-made cable is used, B&R cannot guarantee that it will function properly. All cables provided by B&R are guaranteed to function properly.

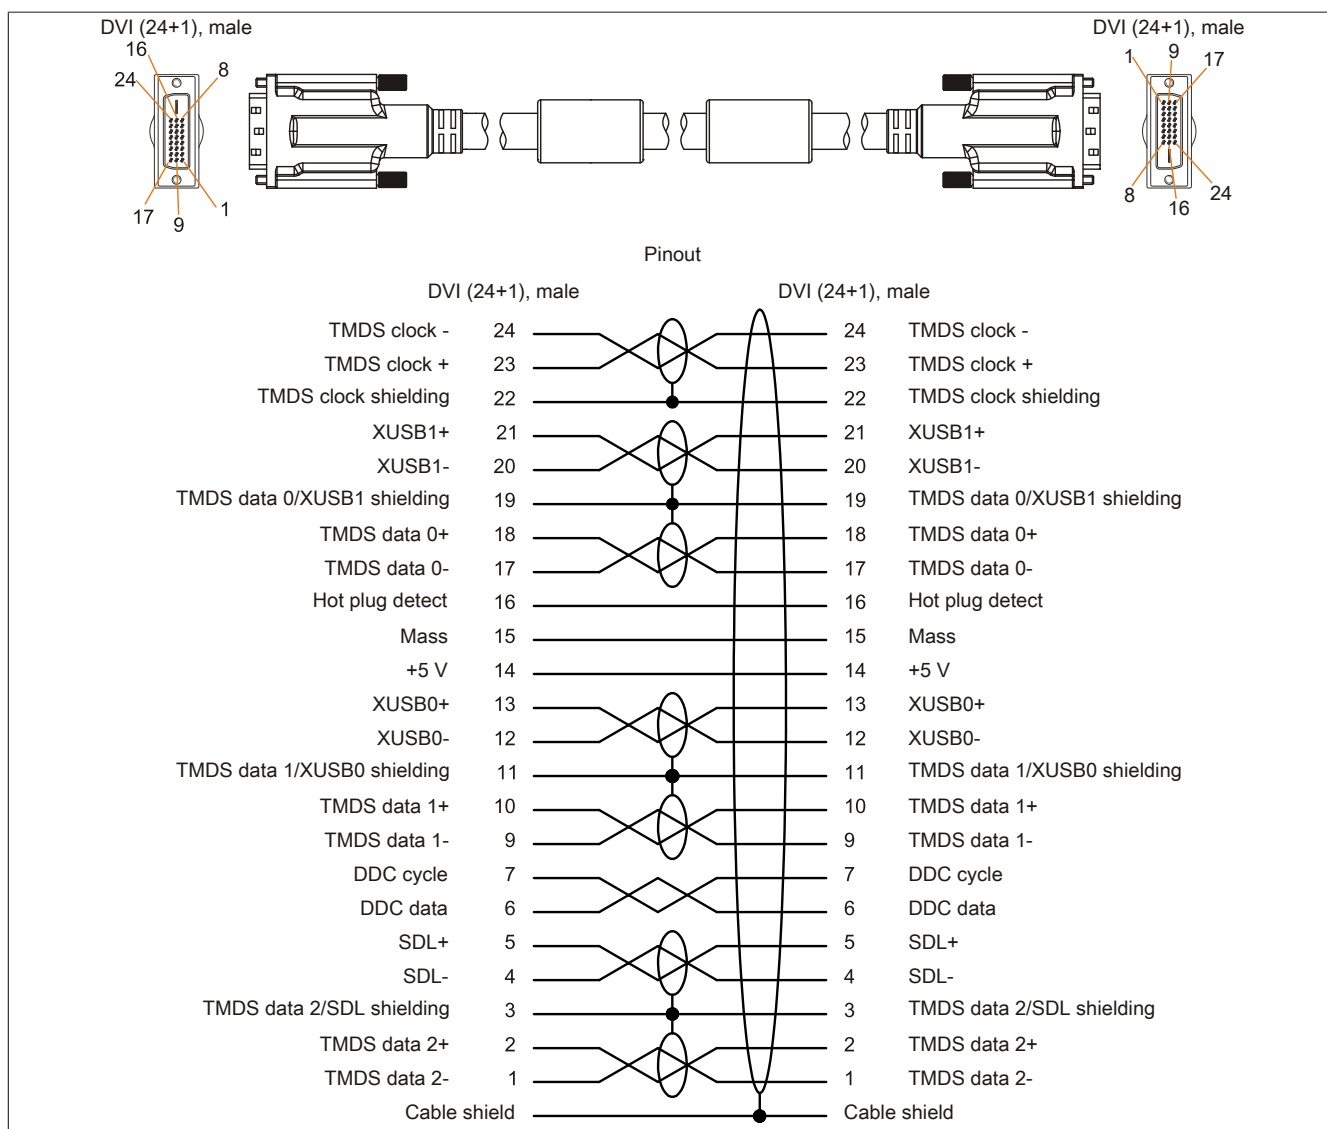


Figure 179: 5CASDL.0xxx-03 - Pinout

## 13.5 SDL flex cables with extender

### 13.5.1 5CASDL.0xx0-13

#### 13.5.1.1 General information

5CASDL.0xx0-13 SDL flex cables with an extender are designed for use in both inflexible and flexible applications (e.g. support arm systems).

### Caution!

Power must be turned off before plugging in and unplugging cables.

#### 13.5.1.2 Order data


Model number	Short description	Figure
	<b>SDL flex cable</b>	
5CASDL.0300-13	SDL flex cable with extender, 30 m	
5CASDL.0400-13	SDL flex cable with extender, 40 m	
5CASDL.0430-13	SDL flex cable with extender, 43 m	

Table 246: 5CASDL.0300-13, 5CASDL.0400-13, 5CASDL.0430-13 - Order data

#### 13.5.1.3 Technical data

Product ID	5CASDL.0300-13	5CASDL.0400-13	5CASDL.0430-13
General information			
Certification	Yes Yes Yes		
CE			
cULus			
GL			
Cable structure			
Wire cross section	AWG 24 (control wires) AWG 26 (DVI, USB, data)		
Properties	Silicone- and halogen-free		
Shield	Individual cable pairs and entire cable		
Cable shielding	Aluminum-clad foil + tinned copper mesh		
Outer sheathing	Special semi-glossy TMPU Black (B&R) SDL cable (UL) AWM 20236 80°C 30V E63216		
Material			
Color			
Labeling			
Connector			
Type	2x DVI-D (24+1), male		
Connection cycles	Min. 200		
Contacts	Gold-plated		
Mechanical protection	Metal cover with crimped stress relief		
Locating screw tightening torque	Max. 0.5 Nm		
Electrical characteristics			
Operating voltage	≤30 V		
Test voltage	1 kV 0.5 kV		
Wire/Wire			
Wire/Shield			
Wave impedance	100 ±10 Ω		
Conductor resistance	≤95 Ω/km ≤145 Ω/km		
AWG 24			
AWG 26			
Insulation resistance	>200 MΩ/km		
Operating conditions			
Approbation	UL AWM 20236 80°C 30 V		
Flame resistant	In accordance with UL758 (cable vertical flame test)		
Oil and hydrolysis resistance	According to VDE 0282-10		
Environmental conditions			
Temperature	-20 to 60°C -5 to 60°C -20 to 60°C		
Storage			
Moving			
Fixed installation			

Table 247: 5CASDL.0300-13, 5CASDL.0400-13, 5CASDL.0430-13 - Technical data

Product ID	5CASDL.0300-13	5CASDL.0400-13	5CASDL.0430-13
<b>Mechanical characteristics</b>			
Dimensions			
Length	30 m ±280 mm	40 m ±380 mm	43 m ±410 mm
Diameter		Max. 12 mm	
Extender box			
Width		35 mm	
Length		125 mm	
Height		18.5 mm	
Flex radius			
Fixed installation		$\geq 6 \times$ cable diameter (connector - ferrite bead) $\geq 10 \times$ cable diameter (from ferrite bead - ferrite bead)	
Flexible installation		$\geq 15 \times$ cable diameter (from ferrite bead - ferrite bead)	
Flexibility		Flexible; valid for ferrite bead - ferrite bead (tested 300,000 cycles with 15x cable diameter, 4800 cycles/hour)	
Drag chain data			
Flex cycles		300,000	
Velocity		4800 cycles/hour	
Flex radius		180 mm; 15x cable diameter	
Hub		460 mm	
Weight	Approx. 5430 g	Approx. 7200 g	Approx. 7790 g
Tension			
During operation		$\leq 50$ N	
During installation		$\leq 400$ N	

Table 247: 5CASDL.0300-13, 5CASDL.0400-13, 5CASDL.0430-13 - Technical data

### 13.5.1.4 Flex radius specifications

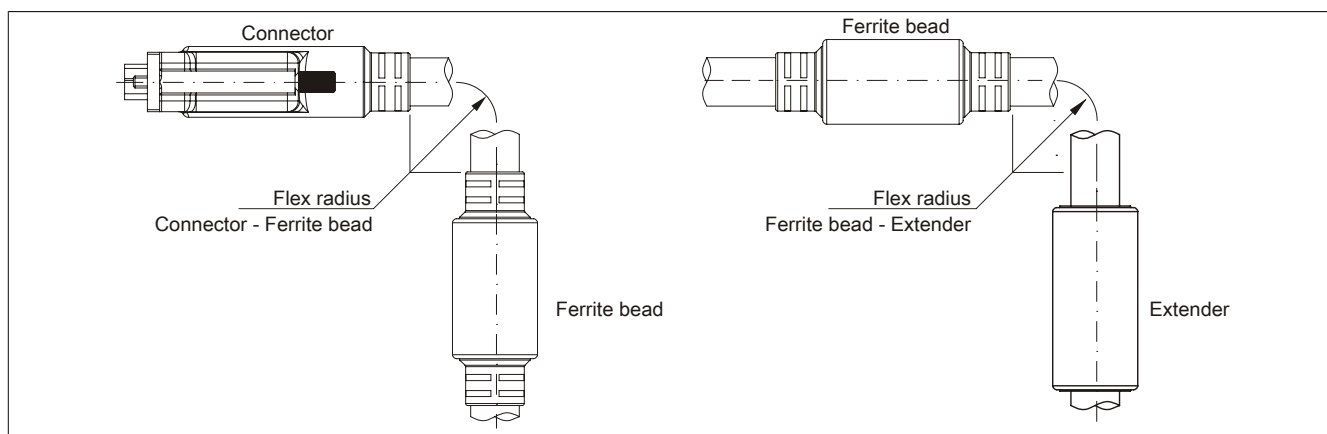


Figure 180: Flex radius specification with extender

### 13.5.1.5 Dimensions

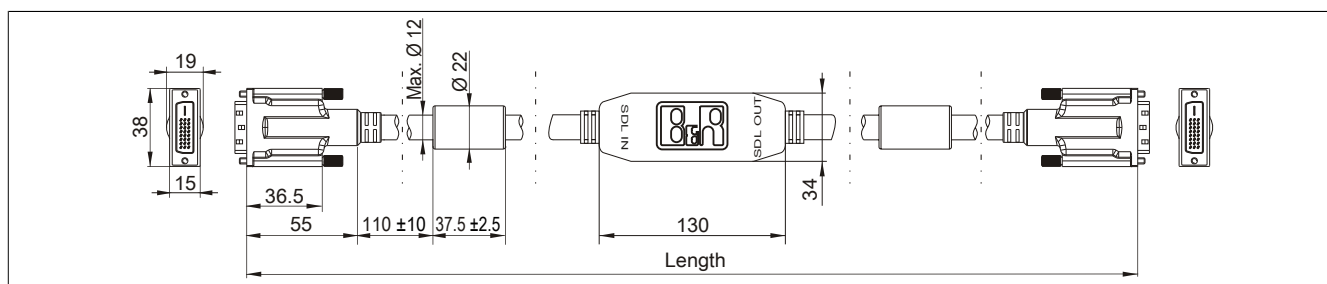


Figure 181: 5CASDL.0xx0-13 - Dimensions

13.5.1.6 Cable pinout

Warning!

If you choose to make a suitable cable yourself, it should be wired according to these specifications. If a self-made cable is used, B&R cannot guarantee that it will function properly. All cables provided by B&R are guaranteed to function properly.

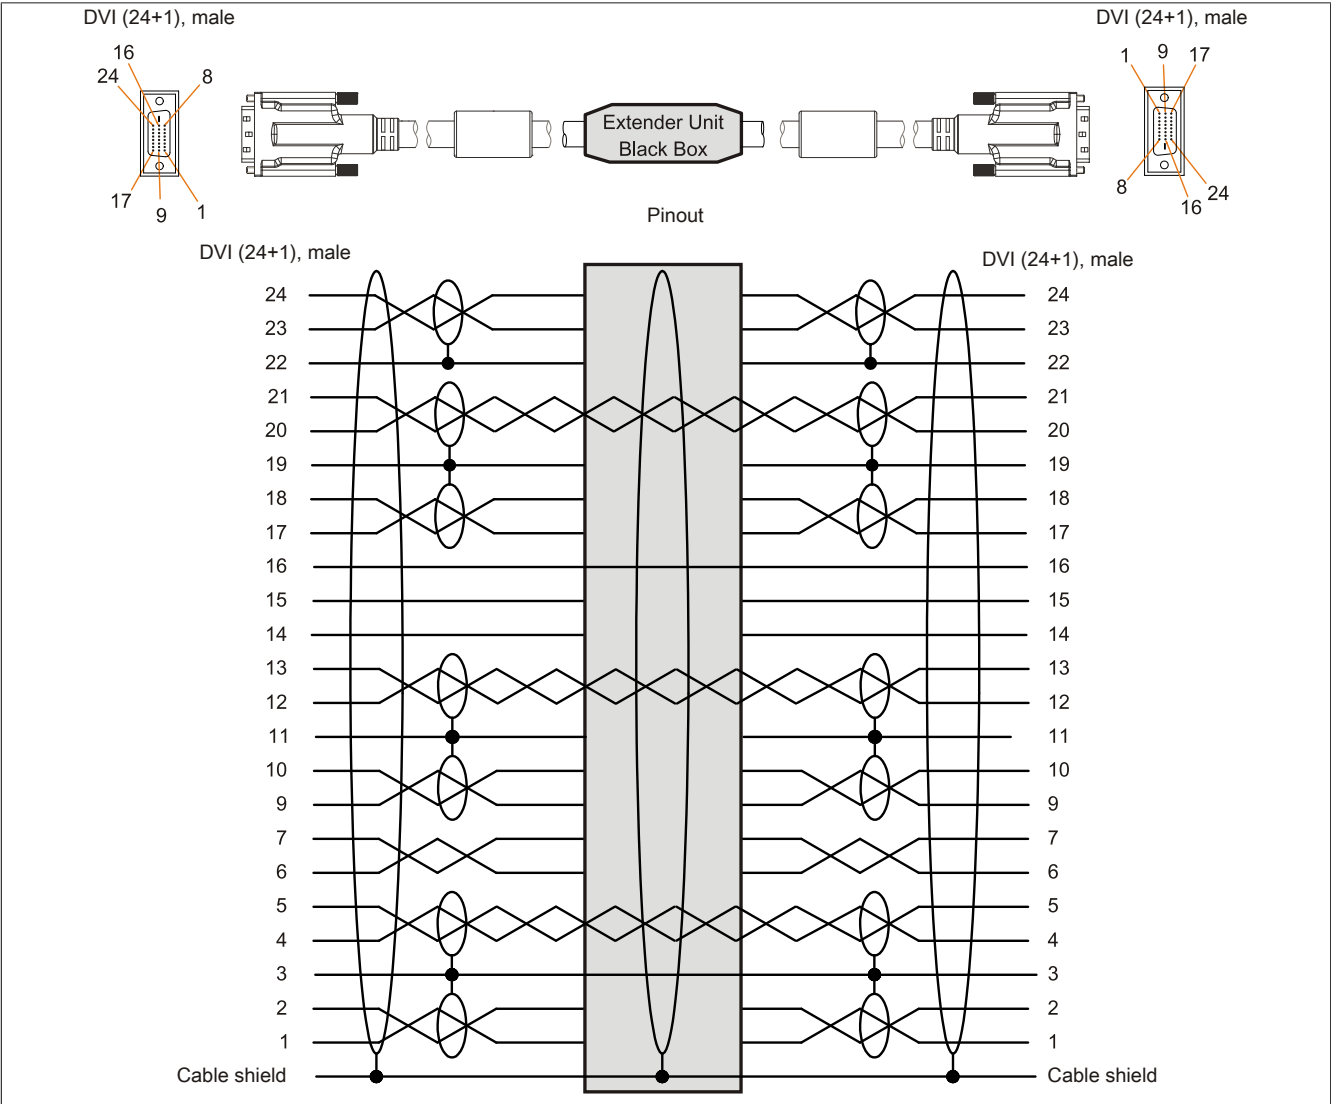


Figure 182: 5CASDL.0xx0-13 - Pinout

### 13.5.1.7 Cable connection

SDL flex cables with an extender must be connected between the B&R Industrial PC and the Automation Panel display unit in the correct direction. The proper signal direction is indicated on the extender.

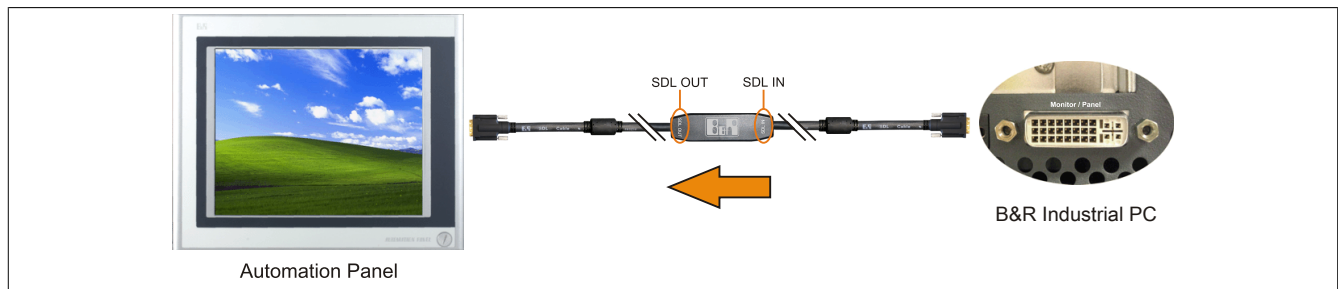


Figure 183: Example of the signal direction for an SDL flex cable with extender



13.6 USB cables

13.6.1 5CAUSB.00xx-00

13.6.1.1 General information

USB cables are designed to achieve USB 2.0 transfer speeds.

13.6.1.2 Order data


Model number	Short description	Figure
	USB cable	
5CAUSB.0018-00	USB 2.0 connection cable type A - type B, 1.8 m	
5CAUSB.0050-00	USB 2.0 connection cable type A - type B, 5 m	

Table 248: 5CAUSB.0018-00, 5CAUSB.0050-00 - Order data

13.6.1.3 Technical data

Product ID	5CAUSB.0018-00	5CAUSB.0050-00
General information		
Certification		
CE	Yes	
cULus	Yes	
Cable structure		
Wire cross section	AWG 24, 28	
Shield	Entire cable	
Outer sheathing		
Color	Beige	
Connector		
Type	USB type A male and USB type B male	
Mechanical characteristics		
Dimensions		
Length	1.8 m ±30 mm	5 m ±50 mm
Diameter	Max. 5 mm	
Flex radius	Min. 100 mm	

Table 249: 5CAUSB.0018-00, 5CAUSB.0050-00 - Technical data

13.6.1.4 Cable pinout

Warning!

If you choose to make a suitable cable yourself, it should be wired according to these specifications.

If a self-made cable is used, B&R cannot guarantee that it will function properly. All cables provided by B&R are guaranteed to function properly.

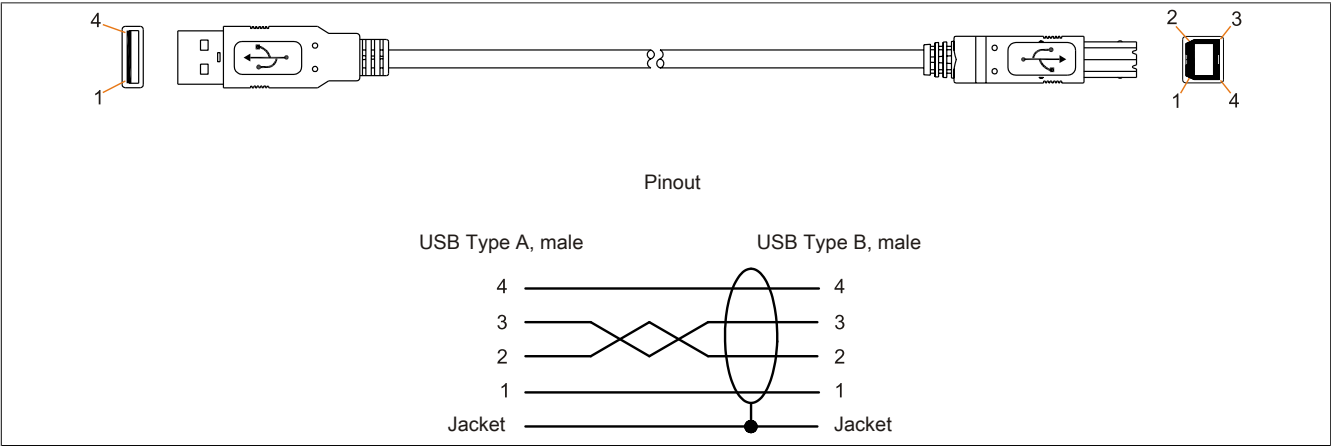


Figure 184: 5CAUSB.00xx-00 USB cables - Pinout

## 13.7 RS232 cables

### 13.7.1 9A0014.xx

#### 13.7.1.1 General information

RS232 cables are used as extension cables between two RS232 interfaces.

#### 13.7.1.2 Order data


Model number	Short description	Figure
	<b>RS232 cable</b>	
9A0014.02	RS232 extension cable for remote operation of a display unit with touch screen, 1.8 m	
9A0014.05	RS232 extension cable for remote operation of a display unit with touch screen, 5 m	
9A0014.10	RS232 extension cable for remote operation of a display unit with touch screen, 10 m	

Table 250: 9A0014.02, 9A0014.05, 9A0014.10 - Order data

#### 13.7.1.3 Technical data

Product ID	9A0014.02	9A0014.05	9A0014.10
General information			
Certification CE	Yes		
Cable structure			
Wire cross section	AWG 26		
Shield	Entire cable		
Outer sheathing Color	Beige		
Connector			
Type	9-pin male/female DSUB connector		
Locating screw tightening torque	Max. 0.5 Nm		
Mechanical characteristics			
Dimensions Length Diameter	1.8 m ±50 mm	5 m ±80 mm Max. 5 mm	10 m ±100 mm
Flex radius	Min. 70 mm		

Table 251: 9A0014.02, 9A0014.05, 9A0014.10 - Technical data

13.7.1.4 Cable pinout

Warning!

If you choose to make a suitable cable yourself, it should be wired according to these specifications. If a self-made cable is used, B&R cannot guarantee that it will function properly. All cables provided by B&R are guaranteed to function properly.

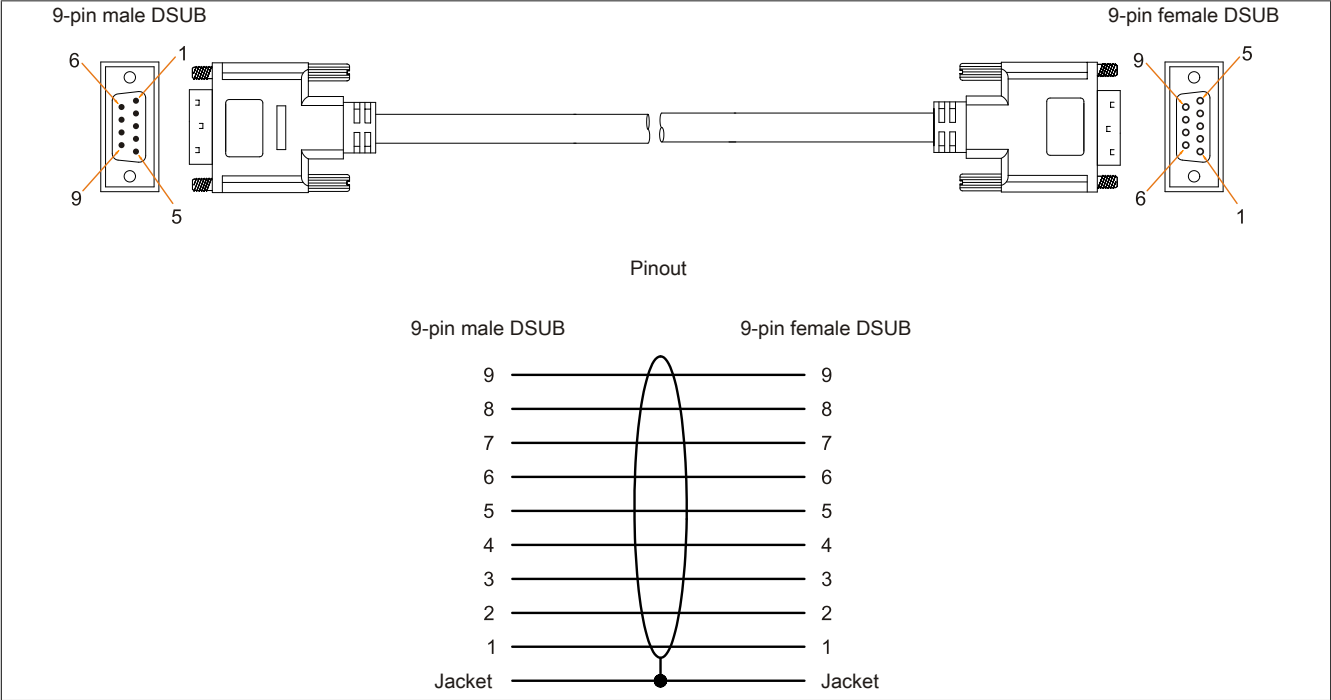


Figure 185: 9A0014.xx RS232 cables - Pinout

## 13.8 Internal supply cable

### 13.8.1 5CAMSC.0001-00

#### 13.8.1.1 General information

This supply cable is used internally, for example to provide power to special PCI cards. It is connected to the mainboard.

For requirements and procedures, see "Connecting an external device to the mainboard" on page 344.

### Caution!

Power must be turned off before plugging in and unplugging cables.

#### 13.8.1.2 Order data


Model number	Short description	Figure
<b>Accessories</b>		
5CAMSC.0001-00	Internal supply cable	

Table 252: 5CAMSC.0001-00 - Order data

#### 13.8.1.3 Technical data

<b>Product ID</b>	<b>5CAMSC.0001-00</b>
<b>General information</b>	
Certification CE	Yes
<b>Cable structure</b>	
Wire cross section	AWG 22
<b>Connector</b>	
Type	1x 4-pin male disk drive power connector, 1x 4-pin female connector housing
<b>Mechanical characteristics</b>	
Dimensions	
Length	100 mm ±5 mm
Flexibility	Flexible

Table 253: 5CAMSC.0001-00 - Technical data

# Chapter 7 • Maintenance and service

This chapter describes service/maintenance work that can be carried out by a qualified end user.

## 1 Changing the battery

The lithium battery buffers the internal real-time clock (RTC) and CMOS data.

### Information:

- The product design allows the battery to be changed with the B&R device switched either on or off. In some countries, safety regulations do not allow batteries to be changed while the module is switched on.
- Any BIOS settings that have been made will remain when the battery is changed with the power turned off (stored in non-volatile EEPROM). The date and time must be reset later since this data is lost when the battery is changed.
- The battery should only be changed by qualified personnel.

### Warning!

The battery must be replaced by a Type CR2477N Renata battery only. The use of another battery may present a risk of fire or explosion.

The battery may explode if handled improperly. Do not recharge, disassemble or dispose of in fire.

The following replacement lithium batteries are available: 4A0006.00-000 (1 pc.) and 0AC201.91 (4 pcs.).

### 1.1 Evaluating the battery status

The status of the battery is determined immediately after the device is started and subsequently checked by the system every 24 hours. During this measurement, the battery is subjected to a brief load (approximately 1 second) and then evaluated. Once determined, the battery status is displayed in BIOS (Advanced - OEM features - System board features - Voltage values) and in the B&R Control Center (ADI driver); it can also be read in a customer application using the ADI library.

Battery status	Description
N/A	The hardware or firmware being used is too old and does not support reading the battery status.
GOOD	Data buffering is intact.
BAD	From the point when battery capacity is recognized as insufficient (BAD), data buffering is intact for approximately another 500 hours.

Table 254: Battery status

From the point when battery capacity is recognized as insufficient, data buffering is intact for approximately another 500 hours. When replacing the battery, data is buffered for approximately 10 minutes by a gold leaf capacitor.

### 1.2 Procedure

- Disconnect the power supply to the B&R Industrial PC.
- Touch the housing or ground connection in order to discharge any electrostatic charge from your body.
- Remove the cover from the battery compartment and carefully pull out the battery using the removal strip.



Figure 186: Removing the battery

- The battery should not be held by its edges. Insulated tweezers may also be used to insert the battery.

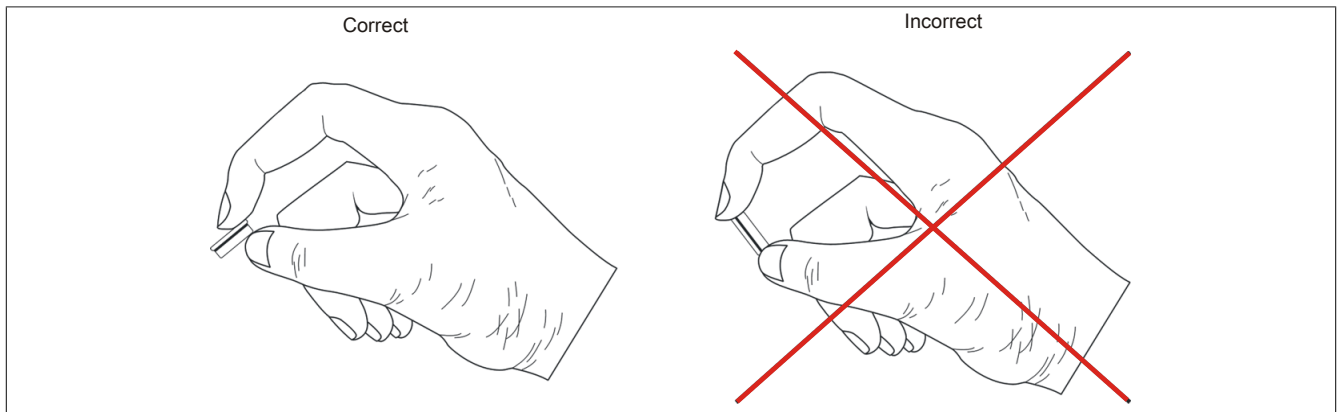


Figure 187: Battery handling

- Insert the new battery with the correct polarity.



Figure 188: Battery polarity

- To make the next battery replacement easier, be sure the removal strip is in place when inserting the battery.
- Reconnect the power supply to the B&R Industrial PC (plug in the power cable).
- Reset the date and time in BIOS.

## Warning!

**Lithium batteries are considered hazardous waste. Used batteries should be disposed of in accordance with applicable local regulations.**

## 2 Cleaning

### **Danger!**

**This device can only be cleaned when switched off in order to prevent unintended functions from being triggered when handling the touch screen or pressing keys.**

This device should be cleaned with a moist cloth. The cloth should be moistened with water and detergent, a screen cleaning agent or alcohol (ethanol). The cleaning agent should be applied to the cloth beforehand, not sprayed directly on the device! Aggressive solvents, chemicals, scouring agents, pressurized air or steam jets should never be used.

### **Information:**

**Displays with a touch screen should be cleaned regularly.**

### 3 Replacing a CompactFlash card

#### Caution!

**Power must be turned off before replacing CompactFlash cards.**

The CompactFlash card can be replaced quickly and easily by pressing the ejector (see image) with a pointed object such as a pen.

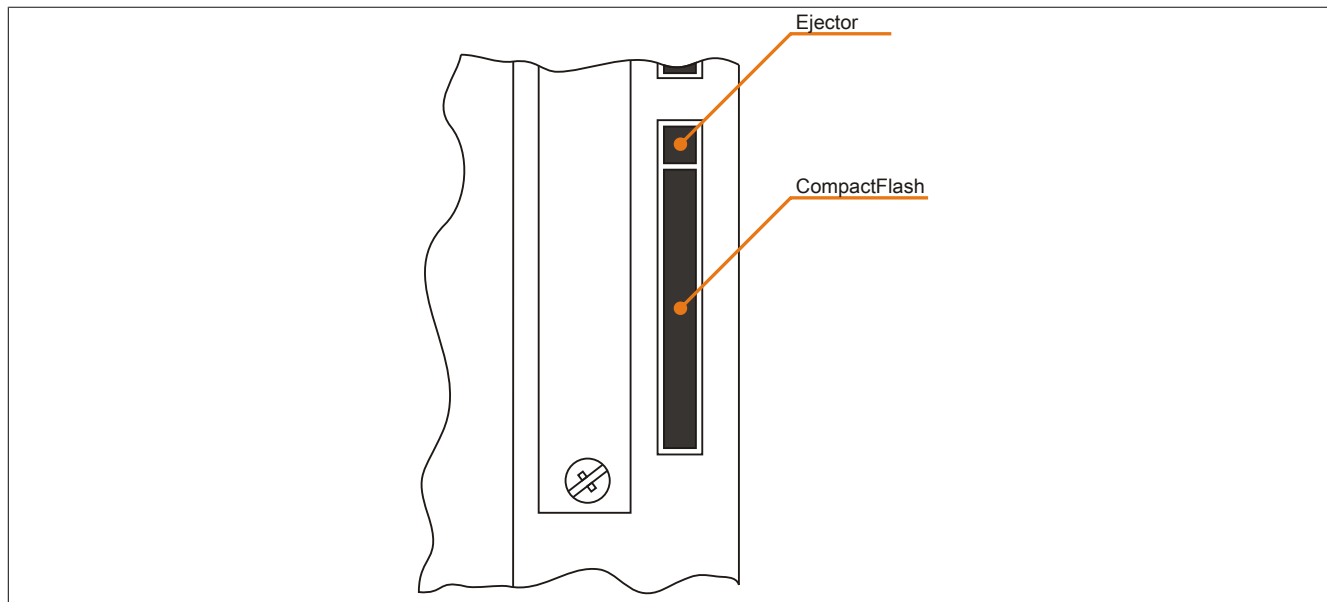


Figure 189: CompactFlash + ejector



## 4 Installing and replacing slide-in compact drives

### Information:

The SATA I interface allows disks to be replaced during operation (hot plugging). In order to take advantage of this capability, this feature must be supported by the operating system.

### 4.1 Procedure

1. Loosen and remove the two quick release screws on the protective cover / slide-in compact drive.



Figure 190: Loosening the quick release screws

2. Insert the compact SATA drive and tighten the quick release screws.



Figure 191: Inserting the compact SATA drive

## 5 Installing and replacing slide-in drives

Slide-in drives can be installed and replaced in system units with 1 card slot or in expansions with 2 card slots.

### 5.1 Procedure

1. Disconnect the power supply to the B&R Industrial PC.
2. Touch the housing or ground connection in order to discharge any electrostatic charge from your body.
3. Remove the dummy slide-in module or slide-in drive by unscrewing the two quick release screws.



Figure 192: Loosening the quick release screws

4. Insert the slide-in drive and tighten with the two ¼ turn screws.

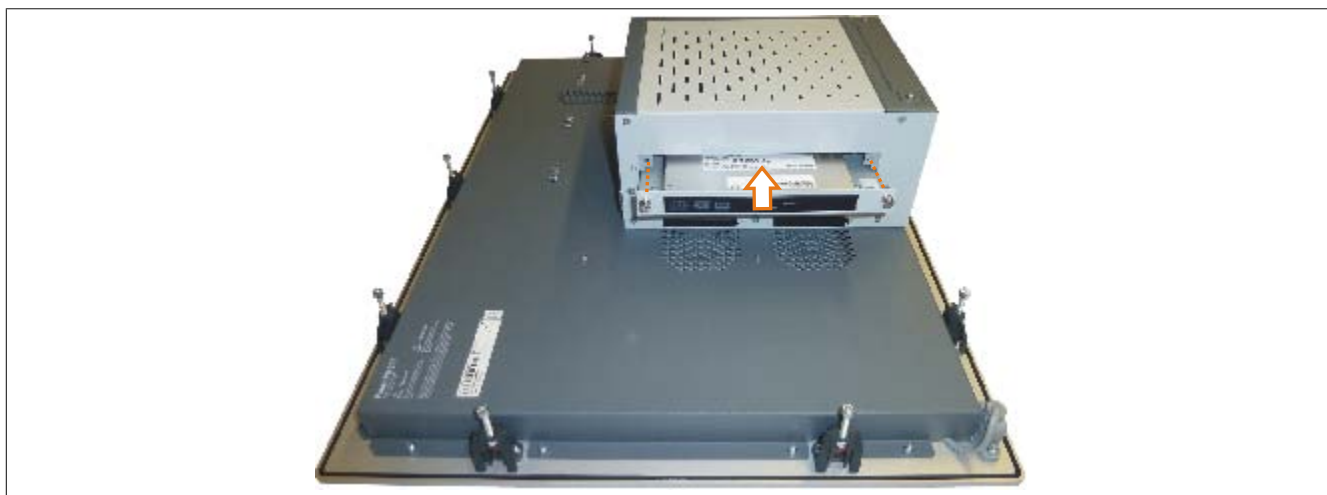


Figure 193: Installing the slide-in drive

## 6 Installing the slide-in compact adapter

Slide-in compact adapters can be installed and replaced in system units with 1 card slot or in expansions with 2 card slots. A slide-in compact drive (e.g. slide-in compact HDD) can be installed in a slide-in slot using the slide-in compact adapter.

### 6.1 Procedure

1. Disconnect the power supply to the B&R Industrial PC.
2. Touch the housing or ground connection in order to discharge any electrostatic charge from your body.
3. Remove the dummy slide-in module or slide-in drive by unscrewing the two quick release screws.



Figure 194: Loosening the quick release screws

4. Insert the slide-in compact adapter and tighten the two quick release screws.



Figure 195: Installing the slide-in compact adapter

5. Once the adapter has been installed, the slide-in compact drive can be inserted.



Figure 196: Inserting the slide-in compact drive

## 7 Installing and replacing fan kits

### Information:

The following section illustrates a characteristic example of a PPC800 model without expansion. The only difference in this procedure compared to models with an expansion is the number of combi-Torx screws to loosen.

### 7.1 Procedure

1. Loosen the indicated combi-Torx screws (T10) and remove the fan kit cover.

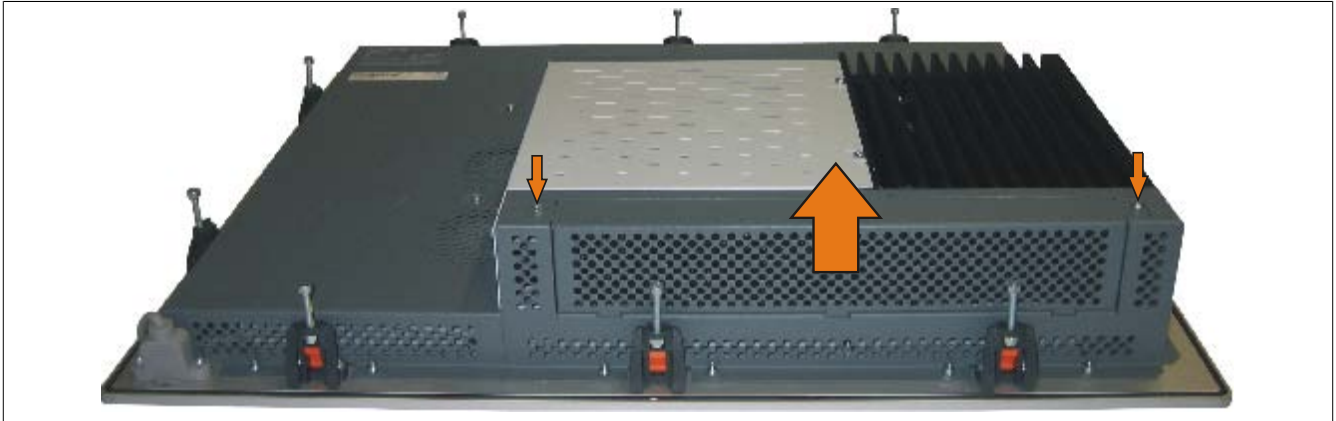


Figure 197: Removing the fan kit cover

2. Insert the fan kit frame and press down until it is fully fastened into the terminal.

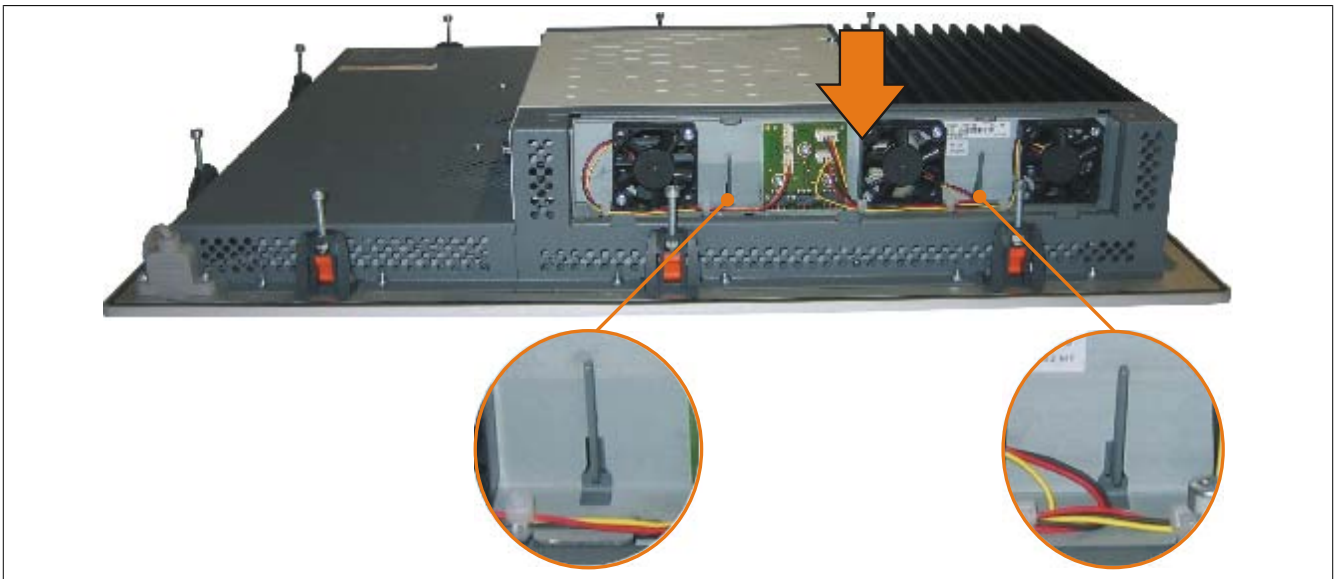


Figure 198: Inserting the fan kit

3. Place the dust filter in the fan kit cover and secure it with the filter clasp.

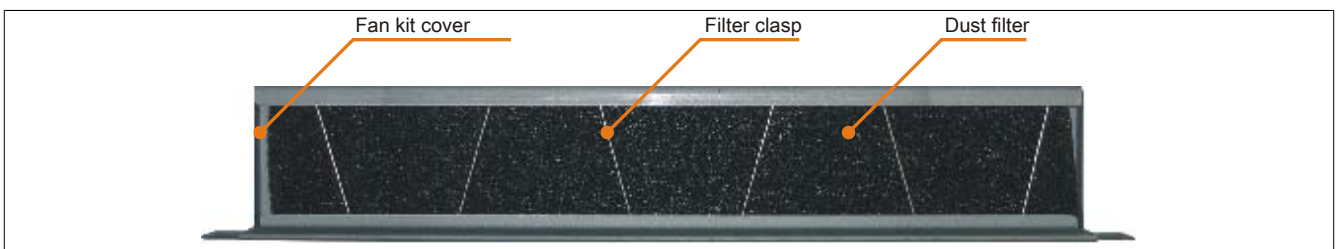


Figure 199: Securing the dust filter with the filter clasp

4. Place the fan kit cover in the housing and fasten using the Torx screws removed earlier.

### **Information:**

The dust filter should be checked regularly depending on the area of use and degree of contamination.

## 8 Installing the UPS module

This module is installed using the materials included in delivery.

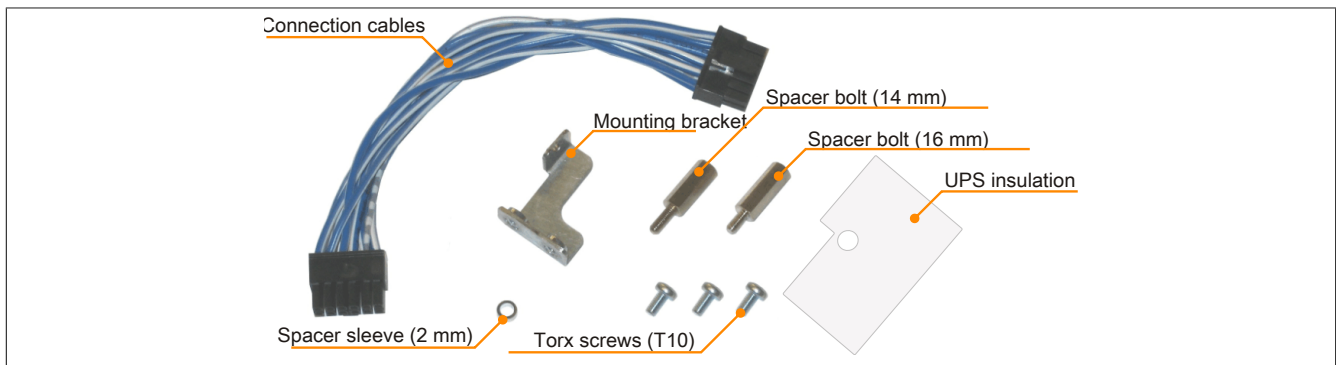


Figure 200: 5AC600.UPI-00 Add-on UPS module - Installation materials

### 8.1 Installation guidelines

1. Remove the side cover (see "Installing the side cover" on page 339).
2. Remove the UPS module cover by removing the 2 marked Torx screws (T10).

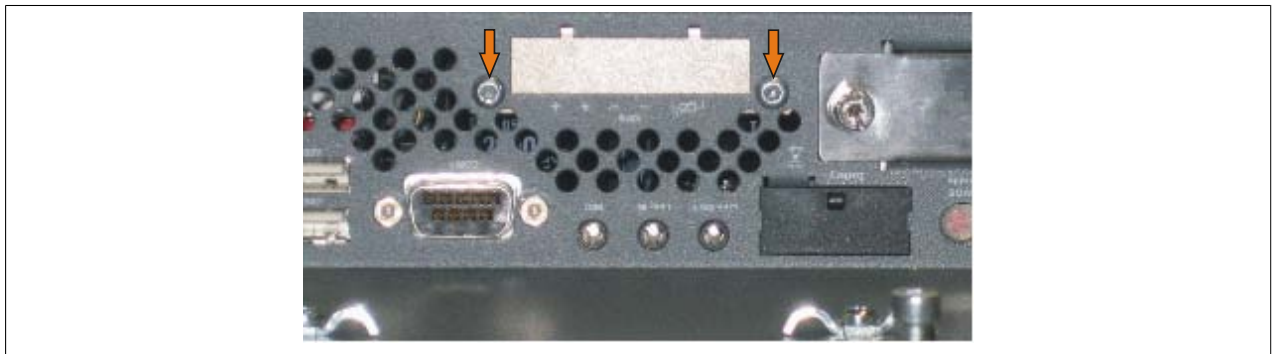


Figure 201: Removing the UPS module cover

3. Install the UPS module using 2 Torx screws (T10) on the housing and 1 Torx screw (T10) on the mainboard (spacing bolt). Use the previously removed Torx screws and the Torx screws from the installation material.

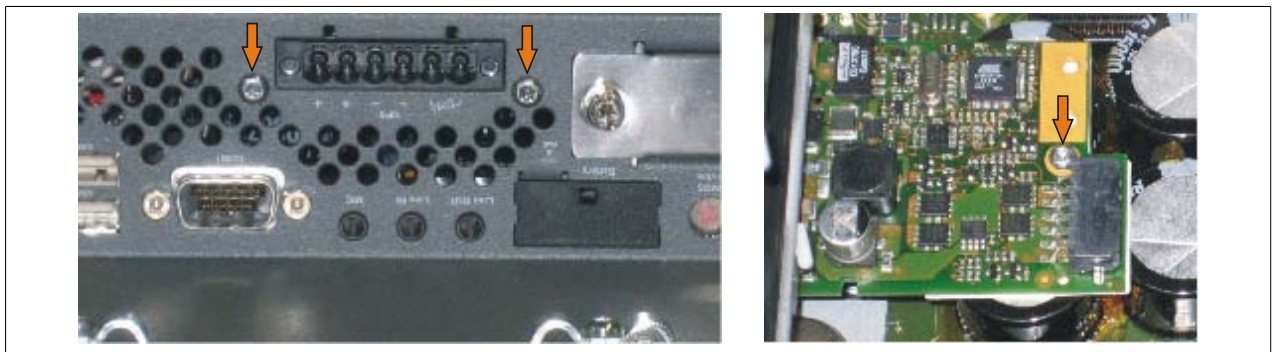


Figure 202: Installing the UPS module

4. Attach the connection cable (see marked female connector).



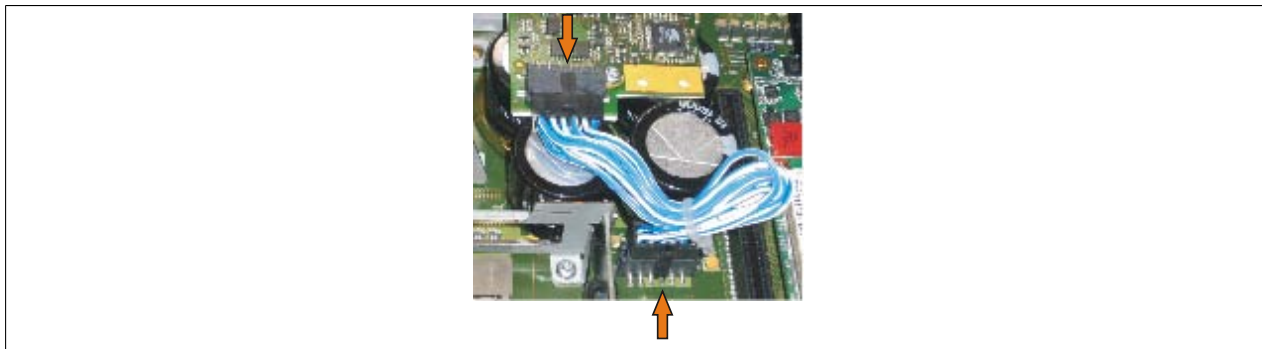


Figure 203: Attaching the connection cable

### Information:

When connecting the cable, make sure that the connector locks into place.

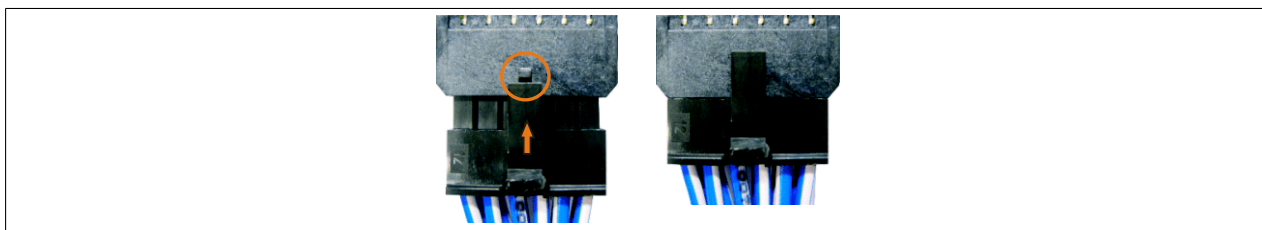


Figure 204: Connector locking mechanism

5. Attach the side cover.



## 9 Installing the UPS fuse kit on the battery unit

### Information:

The 5AC600.UPSF-00 UPS fuse kit is only needed for battery units up to and including revision D0. A 25 A fuse is integrated on the connector circuit board beginning with revision E0.

### 9.1 Procedure

1. Power to the 5AC600.UPSB-00 battery unit must be disconnected by unplugging the UPS connection cable from the B&R Industrial PC.
2. Remove the cover on the battery unit. This is done by unscrewing the two Torx screws (T10) so that the cover can be removed by sliding it towards the orange connector.



Figure 205: Removing the cover for the battery unit

3. To install the fuse, the red cable must be disconnected from the battery circuit board.



Figure 206: Disconnecting the cable

4. The male fuse kit connector must be connected to the female connector on the red cable (1). The female fuse kit connector must be connected to the male connector on the battery circuit board (2).

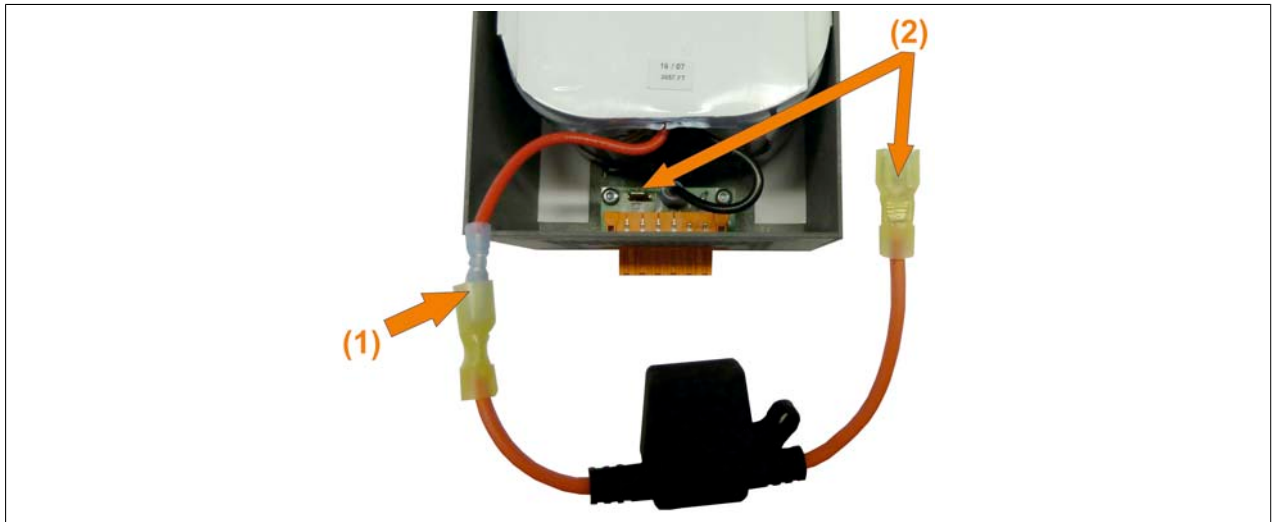


Figure 207: Connecting the fuse

5. The fuse can then be secured in the battery unit.



Figure 208: Securing the fuse

6. The cover for the battery unit can now be reattached. Insert the clips on the cover into the notch on the battery unit and tighten down the cover with the Torx screws removed previously.
7. Reconnect the 5AC600.UPSB-00 battery unit to the B&R Industrial PC.

## 10 Installing and replacing bus units

Bus units can be installed and replaced in system units with 1 card slot or in expansions with 2 card slots.

### 10.1 Procedure

1. Disconnect the power supply to the Panel PC 800.
2. Touch the housing or ground connection in order to discharge any electrostatic charge from your body.
3. Remove the side cover (see "Installing the side cover" on page 339).
4. Loosen the Torx screws (T10) mounted to the mainboard.



Figure 209: Removing the screws

5. Plug the bus unit into the bus unit slot and fasten it using three Torx screws (T10).

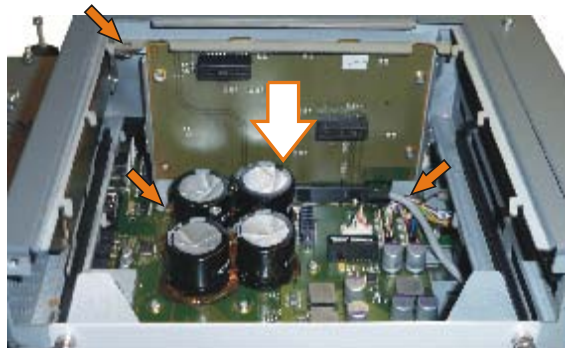


Figure 210: Installing the bus unit

6. Attach the side cover.

## 11 Installing and replacing adapters

1. Remove the side cover (see "Installing the side cover" on page 339).
2. Remove the 1 card slot or the 2 card slot expansion.

### 11.1 Procedure for the 5AC803.BC01-00 adapter

1. Loosen the Torx screws (T10) mounted to the mainboard.



Figure 211: Removing the screws

2. Place the adapter and guide rails in the intended positions and fasten them using the Torx screws (T10) removed earlier.

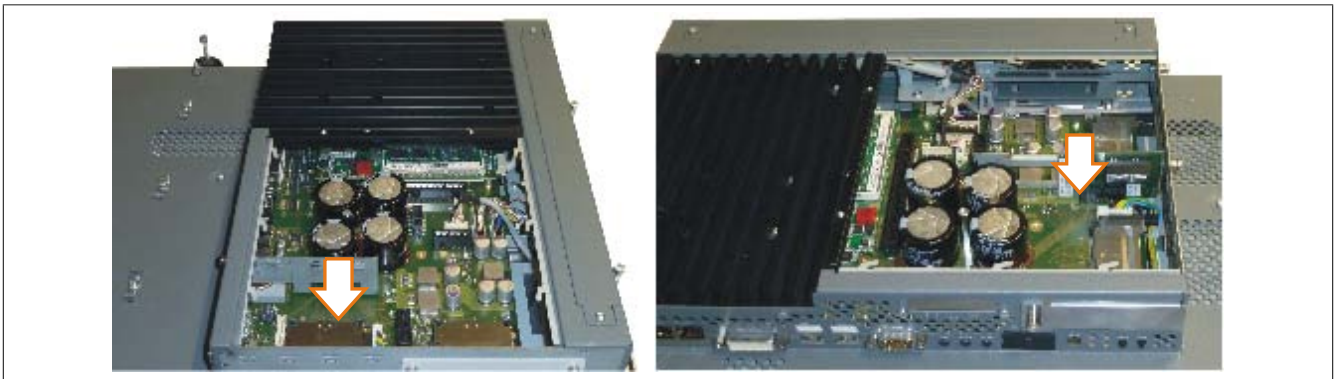


Figure 212: Installing the 5AC803.BC01-00 adapter

3. Attach the side cover.

## 11.2 Procedure for the 5AC803.BC02-00 adapter

1. Insert the adapter into the intended slot.



Figure 213: Installing the 5AC803.BC02-00 adapter

2. Attach the side cover.

## 12 Installing and replacing PCIe plug-in cards

### 12.1 Procedure

1. Loosen the quick release screws and remove the PCIe module cover.



Figure 214: Removing the PCIe module cover

2. Slide the PCIe plug-in card into place.

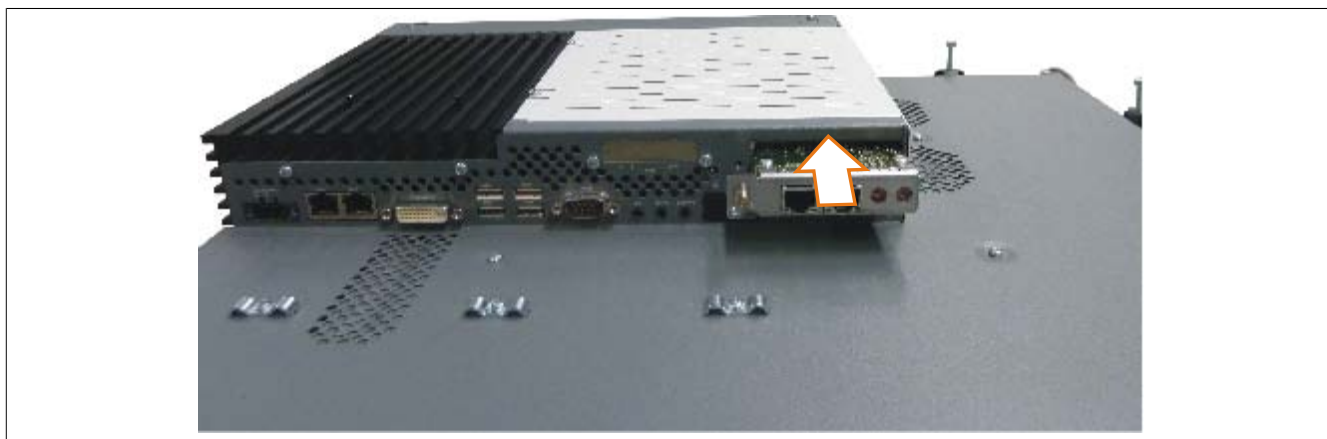


Figure 215: Inserting the PCIe plug-in card

3. Fasten the PCIe plug-in card using the quick release screws.



## 13 Installing the side cover

The side cover can be easily removed by loosening the Torx (T10) screws. The number of Torx screws can vary depending on the system.

### 13.1 PPC800 without expansion

1. Disconnect the power supply to the Panel PC 800.
2. Touch the housing or ground connection in order to discharge any electrostatic charge from your body.
3. Loosen the indicated combi-Torx screws (T10).
4. After the screws have been removed, the side cover can be removed by sliding it away from the heat sink.

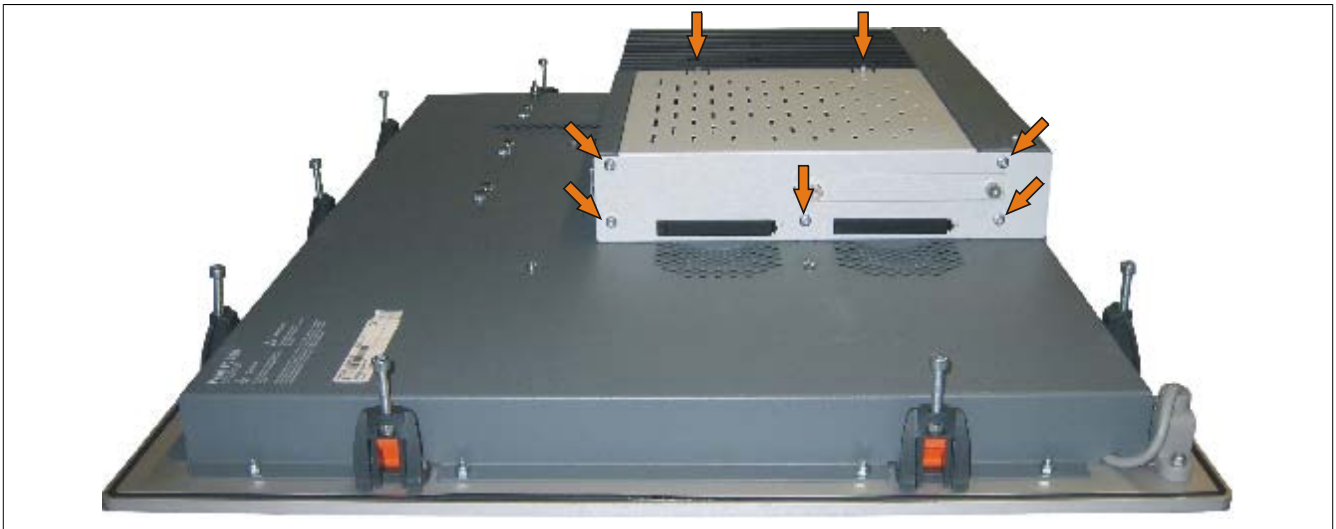


Figure 216: Installing the side cover on a PPC800 without an expansion

### 13.2 PPC800 with an expansion

1. Disconnect the power supply to the Panel PC 800.
2. Touch the housing or ground connection in order to discharge any electrostatic charge from your body.
3. Loosen the indicated combi-Torx screws (T10).
4. After the screws have been removed, the side cover can be removed by sliding it away from the heat sink.

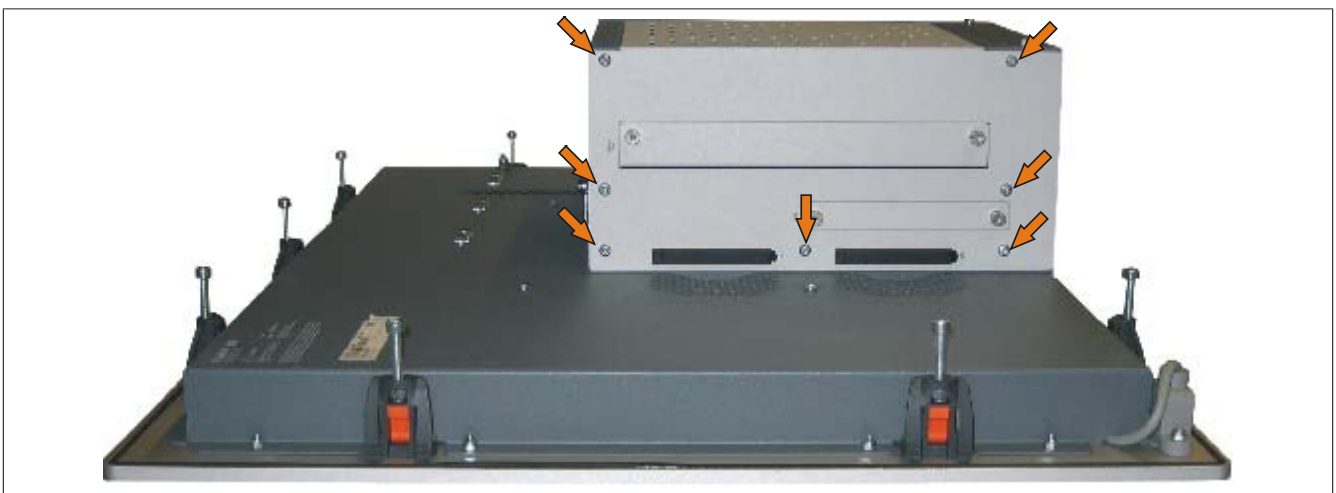


Figure 217: Installing the side cover on a PPC800 with an expansion (1-slot expansion shown in image)

## 14 Replacing a PCI SATA RAID hard disk in a RAID 1 set

This example assumes that the secondary hard disk (HDD1) is defective in a RAID 1 configuration. In such a case, the defective hard disk can be replaced by the replacement drive SATA hard disk.

Model number of PCI SATA RAID controller	Model number of required replacement SATA HDD	Note
5ACPCI.RAIC-01	5ACPCI.RAIC-02	60 GB hard disk
5ACPCI.RAIC-03	5ACPCI.RAIC-04	160 GB hard disk
5ACPCI.RAIC-05	5MMHDD.0250-00	250 GB hard disk
5ACPCI.RAIC-06	5MMHDD.0500-00	500 GB hard disk

Table 255: Overview of required replacement SATA HDD for PCI SATA HDD RAID controller

A size 10 Torx screwdriver is needed to replace the hard disk.

### 14.1 Procedure

1. Disconnect the power supply.
2. Touch the housing or ground connection in order to discharge any electrostatic charge from your body.
3. Remove the side cover.
4. Remove the SATA RAID insert.
5. Loosen the 4 appropriate fastening screws (M3x5).

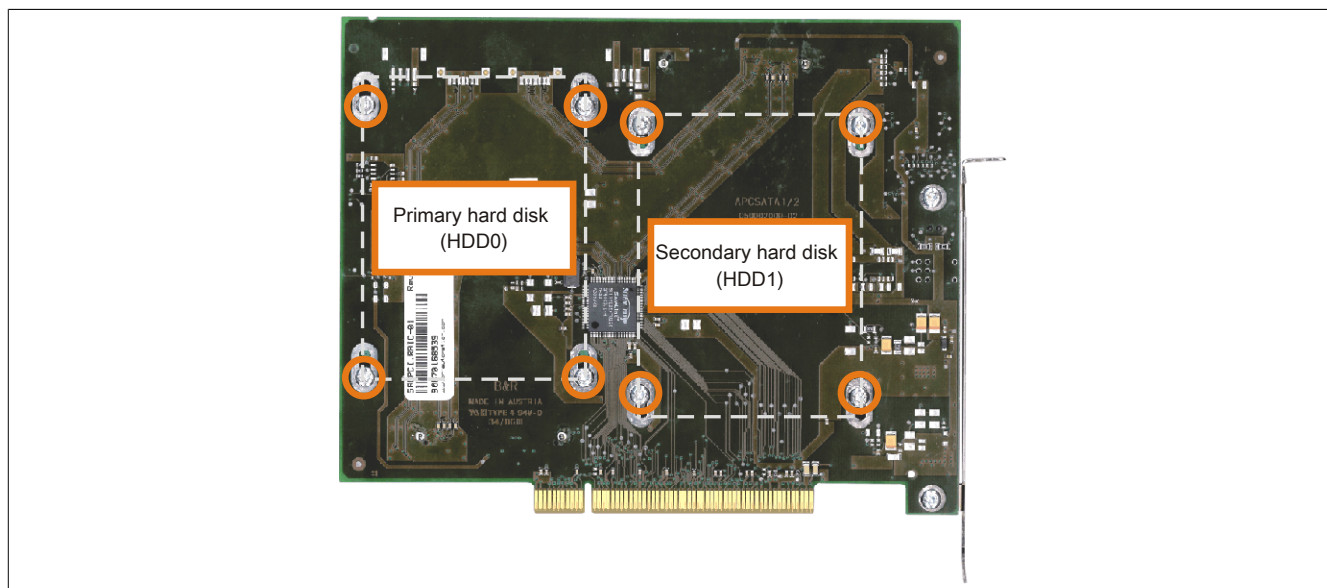


Figure 218: Screw layout on the back side of the 5ACPCI.RAIC-03 SATA RAID controller

6. On the front side, slide the hard disk down and away (Replacing the hard disk - left image).
7. Insert the new hard disk carefully into the connector (Replacing the hard disk - right image), being careful to only touch it on the front, not on the top.



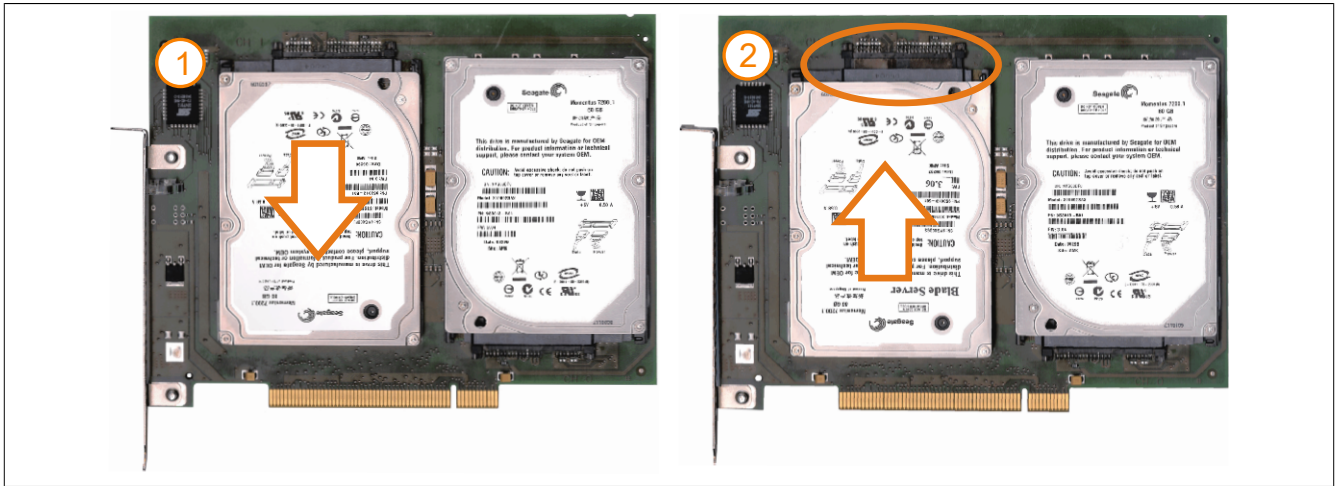


Figure 219: Replacing the hard disk

8. Re-secure the hard disk using the 4 fastening screws (M3x5) used earlier.
9. Reassemble the device in the reverse order.
10. An error message is output by the RAID BIOS after starting the system "RAID1 set is in Rebuild status. The rebuild will continue after boot sequence is complete".
11. A rebuild can be performed immediately in SATA RAID BIOS or once the PC has booted - see "Rebuild mirrored set" on page 165.

# Appendix A

## 1 Maintenance Controller Extended (MTCX)

The MTCX controller (FPGA processor) is located on the mainboard (part of every system unit).

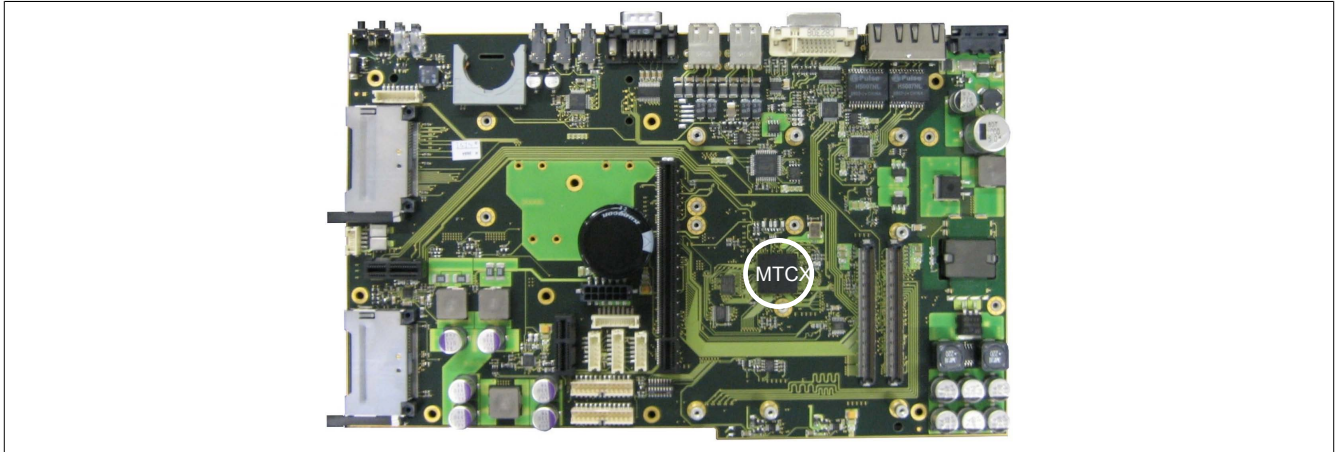


Figure 220: MTCX controller location

The MTCX is responsible for the following monitoring and control functions:

- Power on (power OK sequencing) and power failure logic
- Watchdog handling (NMI and reset handling)
- Temperature monitoring
- Fan control
- Key handling / coordination (matrix keyboard on Automation Panel 900 devices configurable using B&R Key Editor, PS/2 keyboard)
- LED handling (matrix keyboard with LEDs on Automation Panel 900 devices configurable using B&R Key Editor)
- Advanced desktop operation (USB forwarding)
- Daisy chain display operation (touch screen, USB forwarding)
- Panel locking mechanism (can be configured using B&R Control Center - ADI driver)
- Backlight control for connected B&R displays
- Statistical data recording (power cycles - records every switch-on, power on and fan hour; each full hour is counted, i.e. not increased at 50 minutes)
- SDL data transfer (display, matrix keyboard, touch screen, service data, USB)
- Status LEDs (HDD, Link, Run)

Extended MTCX functions are available by upgrading firmware <sup>1)</sup>. The version can be read in BIOS ("Advanced" - Baseboard/Panel Features) or in approved Microsoft Windows operating systems with the B&R Control Center.

### 1.1 Temperature monitoring - Fan control

The MTCX constantly monitors the temperature using temperature sensors, which directly determines how the fans are controlled. The speed depends on the measured temperature. The limit values depend on the MTCX firmware version being used.

<sup>1)</sup> Available in the Downloads section of the B&R website ([www.br-automation.com](http://www.br-automation.com)).

Sensor range	Startup temperature	Max fan speed at:
Board I/O	60°C	76°C
Board ETH2	60°C	76°C
Board power	60°C	76°C
Power supply	60°C	76°C
Slide-in drive 1	44°C	60°C
IF slot	65°C	81°C

Table 256: Temperature limits of the fan (MTCX PX32 V1.01)

Once the startup temperature is reached, the device is started at the minimum fan speed. The maximum fan speed is reached at a startup temperature of 16°C. The fan speed in this area is controlled depending on the temperature.

For example, slide-in 1:  $44^{\circ}\text{C} + 16^{\circ}\text{C} = 60^{\circ}\text{C}$  --> Maximum fan speed

The fans will only be shut off again if the evaluation temperature is more than 6°C below the switch-on temperature for a period of 30 minutes (=overshoot time).

2 Connecting an external device to the mainboard

A male connector on the mainboard allows +5 VDC and +12 VDC to be rerouted in order to provide power to special PCI cards, for example.

This voltage can be accessed using the "5CAMSC.0001-00" on page 320. The connector is located near the reset or power button (see image). In order to reach the connector, the side cover (see "Installing the side cover" on page 339) of the PPC800 as well as any slide-in drives and PClec and PCI plug-in cards must be removed.



Figure 221: Connector location for external devices

Connector for external devices			
Pin	Assignment	Power	4-pin connector, male
1	+12 VDC	Max. 10 watts	
2	GND		
3	GND	Max. 5 watts	
4	+5 VDC		

1234

Table 257: Connector on the mainboard - Pinout

Connections are protected with a 1 A multi-fuse.

### 3 5-wire AMT touch screen

#### 3.1 Technical data

##### Information:

The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the complete system. For the complete system in which this individual component is used, refer to the data given specifically for that device.

Product ID	5-wire AMT touch screen
<b>General information</b>	
Certification	
CE	Yes
c-UL-us	Yes
Manufacturer	AMT
Release pressure	<1 N
Light permeability	81 ±3%
<b>Environmental conditions</b>	
Temperature	
Operation	- 20 to 70°C
Storage	- 40 to 80°C
Transport	- 40 to 80°C
Relative humidity	
Operation	90% at max. 50°C
Storage	90% RH at max. 60°C for 504 hours
Transport	90% RH at max. 60°C for 504 hours
<b>Operating conditions</b>	
Service life	36 million touch operations at the same position (release pressure: 250 g, interval: 2x per second)
Chemical resistance <sup>1)</sup>	Acetone, methylene chloride, methyl ethyl ketone, isopropyl alcohol, hexane, turpentine, mineral spirits, unleaded gasoline, diesel, motor oil, gear lubricating oil, antifreeze, ammonia-based glass cleaner, chemical cleaning agents, household cleaning agents, vinegar, coffee, tea, lubricant, cooking oil, salt
Enabling	Finger, pointer, credit card, glove
Drivers	Touch screen drivers for approved operating systems are available in the Downloads section of the B&R website ( <a href="http://www.br-automation.com">www.br-automation.com</a> ).

Table 258: 5-wire AMT touch screen - Technical data

1) The active area of the touch screen is resistant to these chemicals for a period of one hour at 25°C.

#### 3.2 Temperature humidity diagram

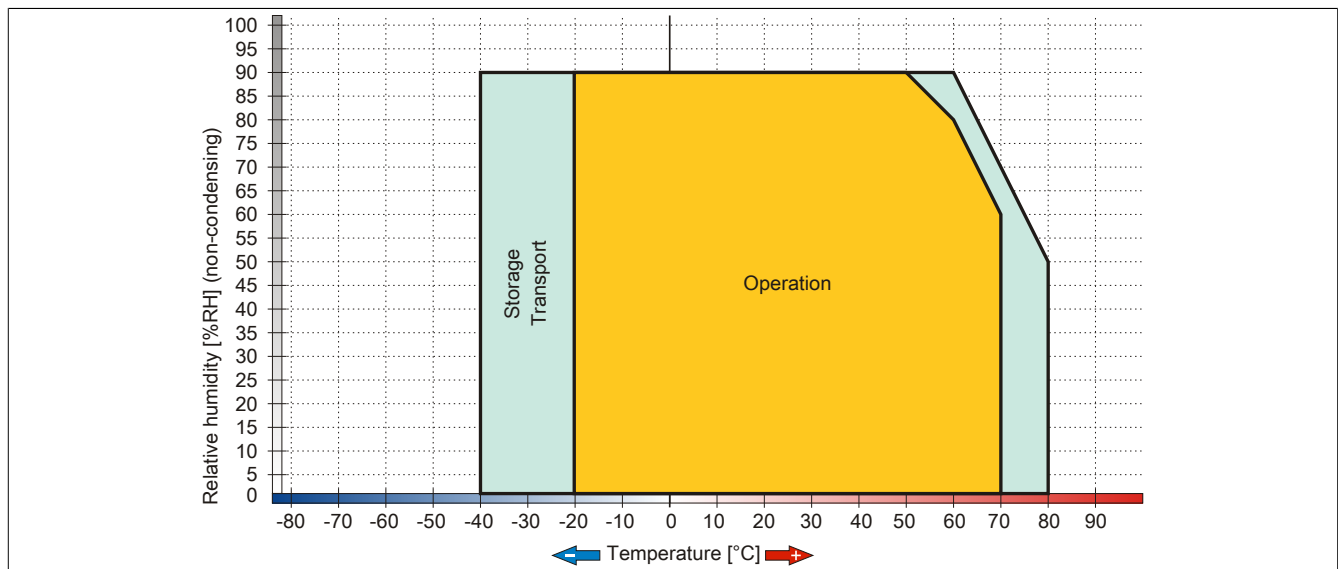


Figure 222: 5-wire AMT touch screen - Temperature humidity diagram

#### 3.3 Cleaning

##### Danger!

This device can only be cleaned when switched off in order to prevent unintended functions from being triggered when handling the touch screen or pressing keys.

This device should be cleaned with a moist cloth. The cloth should be moistened with water and detergent, a screen cleaning agent or alcohol (ethanol). The cleaning agent should be applied to the cloth beforehand, not sprayed directly on the device! Aggressive solvents, chemicals, scouring agents, pressurized air or steam jets should never be used.

### **Information:**

**Displays with a touch screen should be cleaned regularly.**

## 4 Panel overlay

The panel overlay conforms to DIN 42115 (Part 2). This means it is resistant to exposure to the following chemicals for a 24-hour period with no visible signs of damage:

### Information:

The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the complete system.


Ethanol Cyclohexanol Diacetone alcohol Glycol Isopropanol Glycerine Methanol Triacetin Dowandol DRM/PM	Formaldehyde 37 to 42% Acetaldehyde Aliphatic hydrocarbons Toluene Xylene White spirits	Trichloroethane Ethyl acetate Diethyl ether N-Butyl acetate Amyl acetate Butylcellosolve Ether
Acetone Methyl ethyl ketone Dioxan Cyclohexanone MIBK Isophorone	Formic acid < 50% Acetic acid < 50% Phosphoric acid < 30% Hydrochloric acid < 36% Nitric acid < 10% Trichloroacetic acid < 50% Sulphuric acid < 10%	Sodium hypochlorite < 20% Hydrogen peroxide < 25% Potassium carbonate Washing agents Tenside Fabric conditioner Ferrous chloride (FeCl <sub>2</sub> ) Ferrous chloride (FeCl <sub>3</sub> ) Dibutyl phthalate Dioctyl phthalate Sodium carbonate
Ammonia < 40% Caustic soda < 40% Potassium hydroxide Alkali carbonate Bichromate Potassium Acetonitrile Sodium bisulphate	Cutting oil Diesel oil Linseed oil Paraffin oil Blown castor oil Silicon oil Turpentine oil substitute Brake fluid Aviation fuel Gasoline Water Sea water Decon	

Table 259: Chemical resistance of the panel overlay

The panel overlay conforms to DIN 42115 section 2 for exposure to glacial acetic acid for less than one hour without visible damage.

## 5 Viewing angles

Viewing angle specifications (R, L, U, D) for the display types are listed in the technical data for each device.

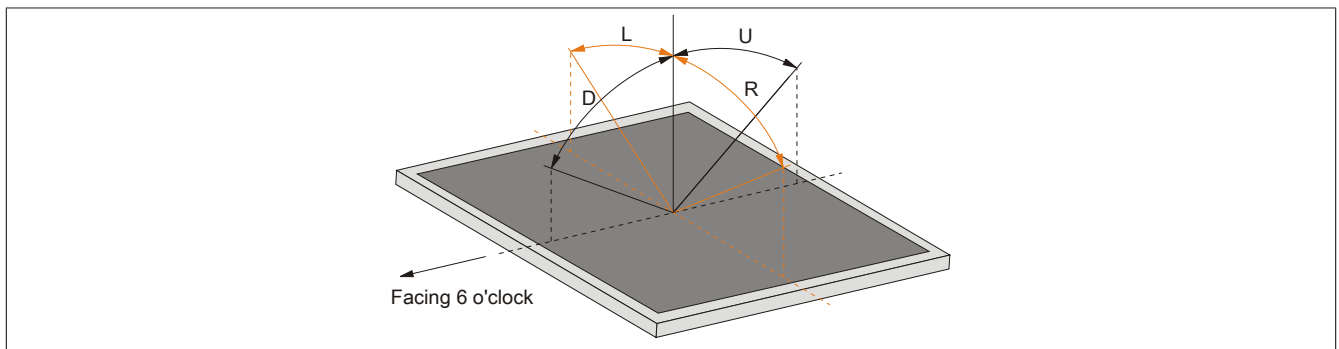



## 6 Mounting compatibility

This section describes the compatibility of the installation dimensions for Power Panel 100/200, Power Panel 300/400, Power Panel 500, Automation Panel 900, Automation Panel 700 and Panel PC 800 devices according to device diagonal.

The outer dimensions of the device types are identical for the respective diagonals.

The different device types are abbreviated as follows:

Device type	Abbreviation
Power Panel 100/200	PP100/200
Power Panel 300/400	PP300/400
Power Panel 500	PP500
Automation Panel 900	AP900
Panel PC 700	PPC700
Panel PC 800	PPC800

Table 260: Product abbreviations

### 6.1 Compatibility overview

The following table provides an overview of PP100/200, PP300/400, PP500, AP900, PPC700 and PPC800 devices. Detailed information can be found in the section 6.2 "Compatibility details" on page 350.

Compatibility between device types is represented on each line by matching symbols.

Size	Format	Compatible	PP100/200	PP300/400	PP500	AP900	PPC700	PPC800
5.7"	Horizontal1	Outer dimensions	■	■	■	-	-	-
		Installation dimensions	●	●	●	-	-	-
	Horizontal2	Outer dimensions	■	■	■	-	-	-
		Installation dimensions	●	●	●	-	-	-
	Vertical1	Outer dimensions	■	■	■	-	-	-
		Installation dimensions	●	●	▲	-	-	-
10.4"	Horizontal 1	Outer dimensions	■	■	■	■	■	-
		Installation dimensions	●	●	●	●	●	-
	Horizontal2	Outer dimensions	■	■	■	■	■	-
		Installation dimensions	●	●	▲	▲	▲	-
	Vertical1	Outer dimensions	■	■	■	■	■	-
		Installation dimensions	●	●	▲	▲	▲	-
12.1"	Horizontal1	Outer dimensions	■	■	■	■	■	-
		Installation dimensions	●	●	▲	▲	▲	-
15"	Horizontal1	Outer dimensions	■	■	■	■	■	■
		Installation dimensions	●	●	▲	●	●	●
	Vertical1	Outer dimensions	■	■	■	■	■	-
		Installation dimensions	●	●	▲	●	●	-
17"	Horizontal 1	Outer dimensions	-	-	-	■	■	-
		Installation dimensions	-	-	-	▲	▲	-
19"	Horizontal 1	Outer dimensions	-	-	-	■	■	-
		Installation dimensions	-	-	-	▲	-	-
21.3"	Horizontal 1	Outer dimensions	-	-	-	■	-	-
		Installation dimensions	-	-	-	▲	-	-

Table 261: Overview of device compatibility

## 6.2 Compatibility details

### 6.2.1 Example

The measurement values (all in mm) shown in this image apply to the other figures below.

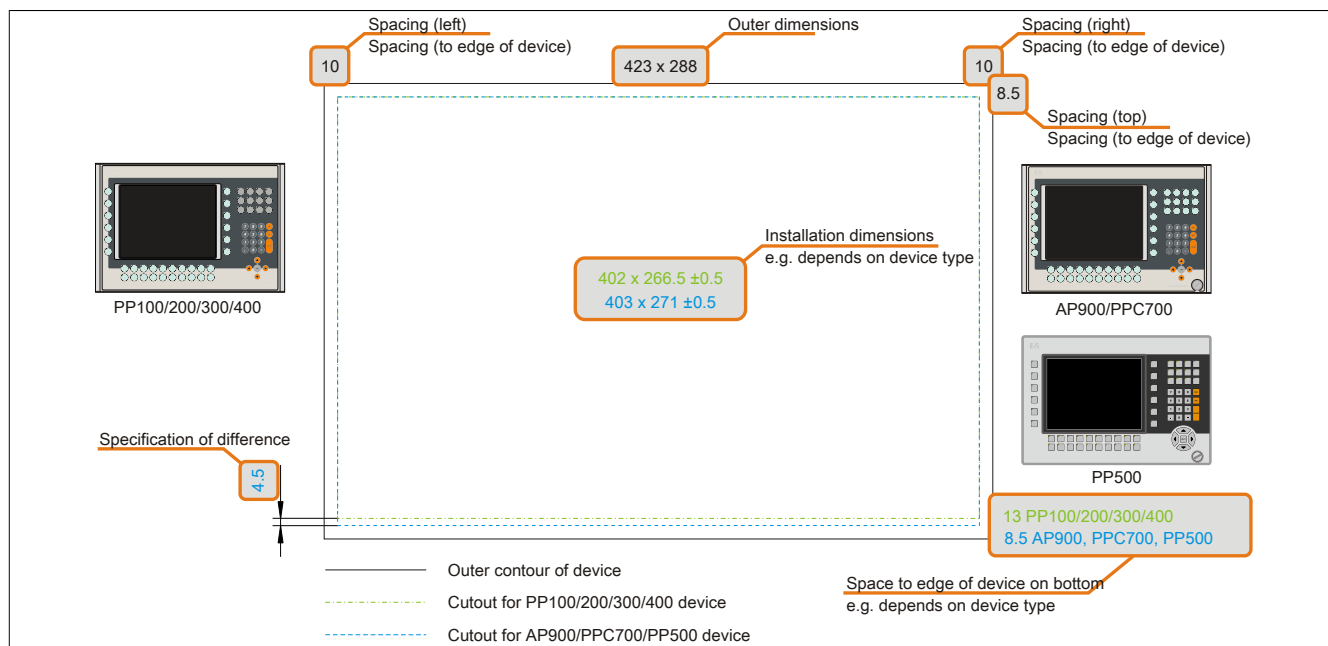


Figure 223: Overview of compatibility figures

### 6.2.2 5.7" devices

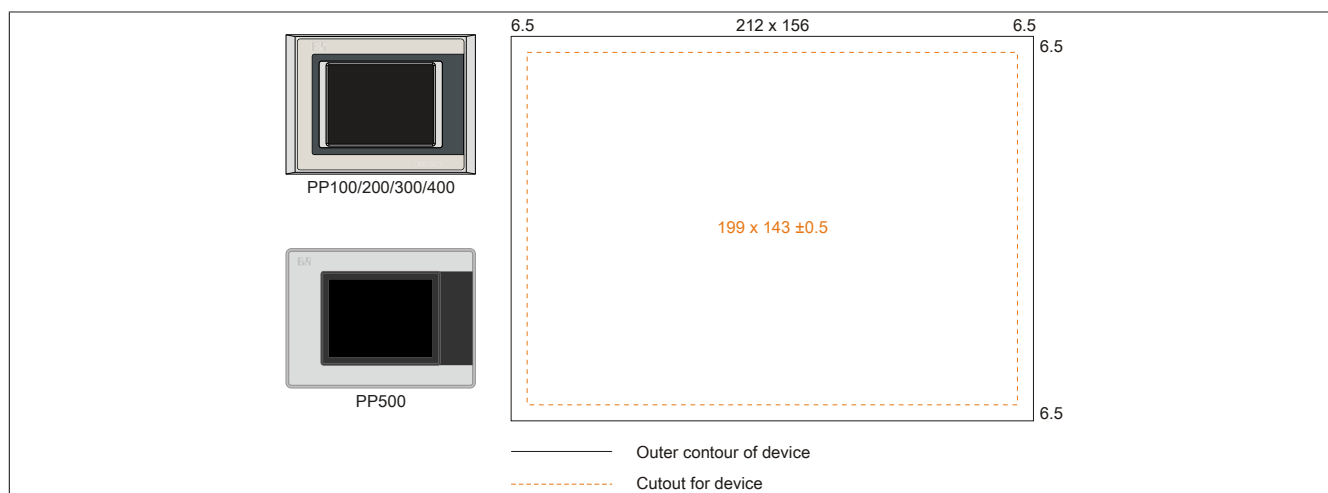


Figure 224: Mounting compatibility - 5.7" device - Horizontal1

5.7" Power Panel 500 devices and Power Panel 100/200/300/400 devices are 100% mounting compatible in the Horizontal1 format.

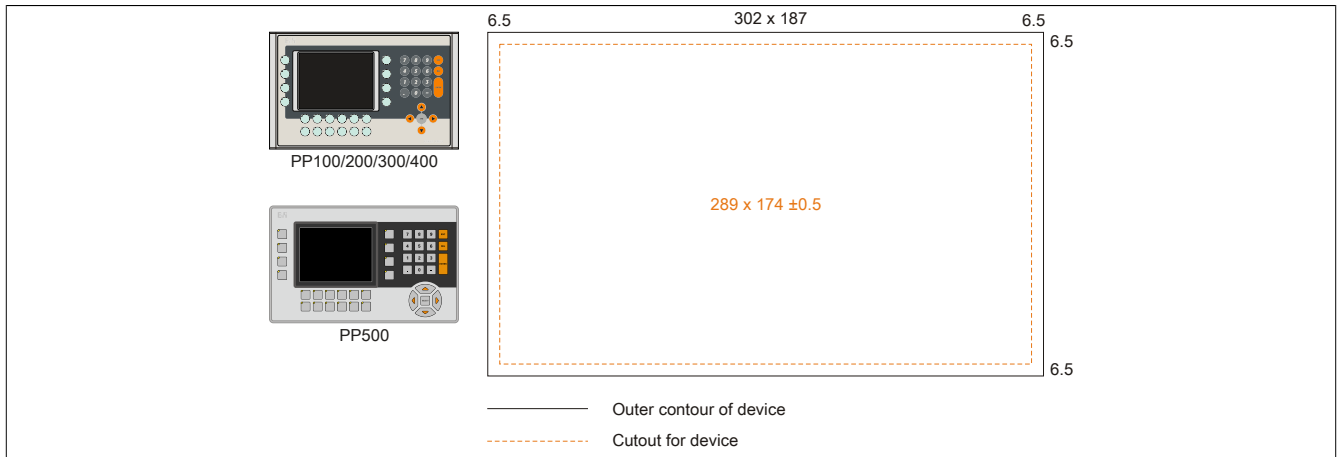


Figure 225: Mounting compatibility - 5.7" device - Horizontal2

5.7" Power Panel 500 devices and Power Panel 100/200/300/400 devices are 100% mounting compatible in the Horizontal2 format.

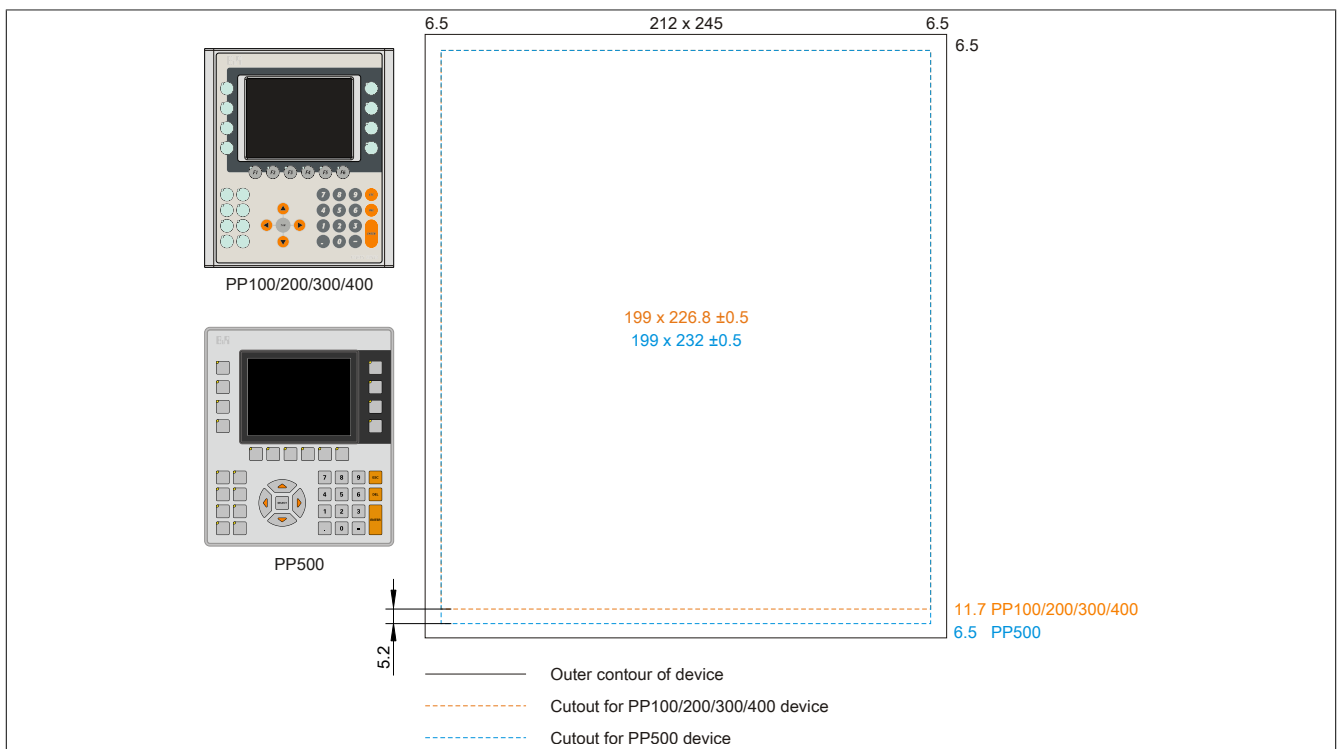


Figure 226: Mounting compatibility - 5.7" device - Vertical1

5.7" Power Panel 500 devices are not 100% mounting compatible with Power Panel 100/200/300/400 devices in the Vertical1 format. Power Panel 500 devices require a cutout that is 5.2 mm higher (bottom edge).

**The larger cutout can be used for all devices under certain conditions:**

- When mounting, make sure that the PP100/200/300/400 devices are placed and mounted as close to the center of the cutout as possible. Failure to do so can prevent the retaining clips from holding firmly, which means that a firm seal is no longer guaranteed with the gasket (IP65).

## 6.2.3 10.4" devices

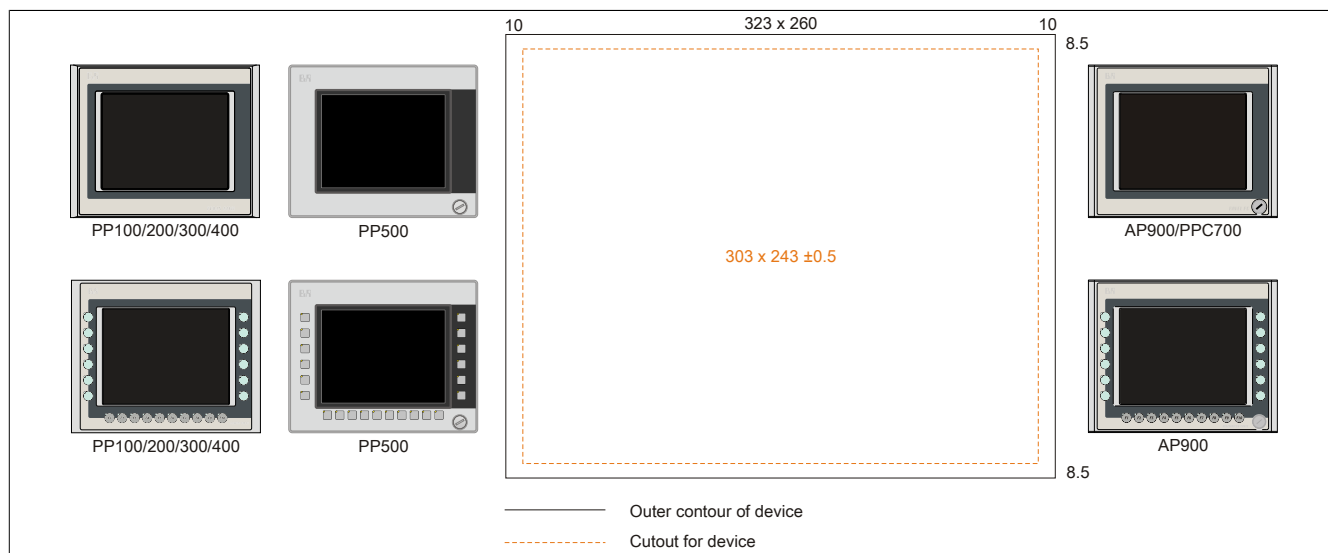


Figure 227: Mounting compatibility - 10.4" device - Horizontal1

10.4" Power Panel 500 devices and Power Panel 100/200/300/400 devices are 100% mounting compatible in the Horizontal1 format.

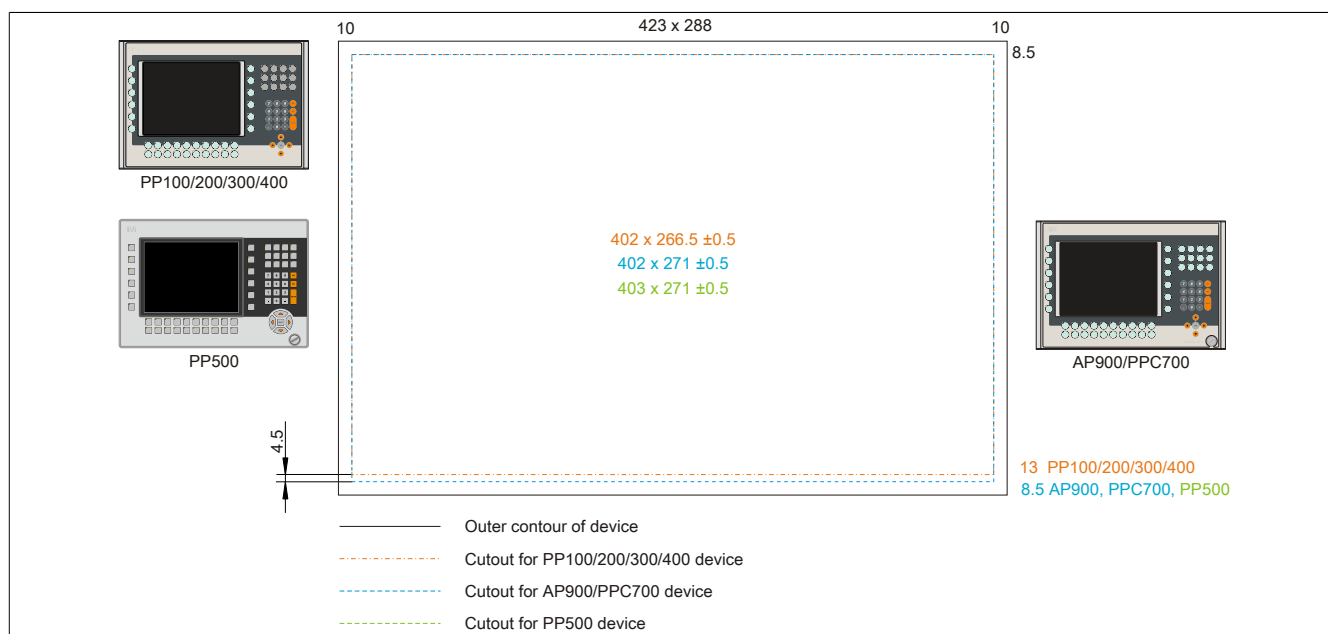


Figure 228: Mounting compatibility - 10.4" device - Horizontal2

10.4" Power Panel 500, Automation Panel 900 and Panel PC 700 devices are not 100% mounting compatible with Power Panel 100/200/300/400 devices in the Horizontal2 format. The Power Panel 500, Automation Panel 900 and Panel PC 700 devices require a cutout that is 4.5 mm higher (bottom edge).

**The larger cutout can be used for all devices under certain conditions:**

- When mounting, make sure that the PP100/200/300/400 devices are placed and mounted as close to the center of the cutout as possible. Failure to do so can prevent the retaining clips from holding firmly, which means that a firm seal is no longer guaranteed with the gasket (IP65).

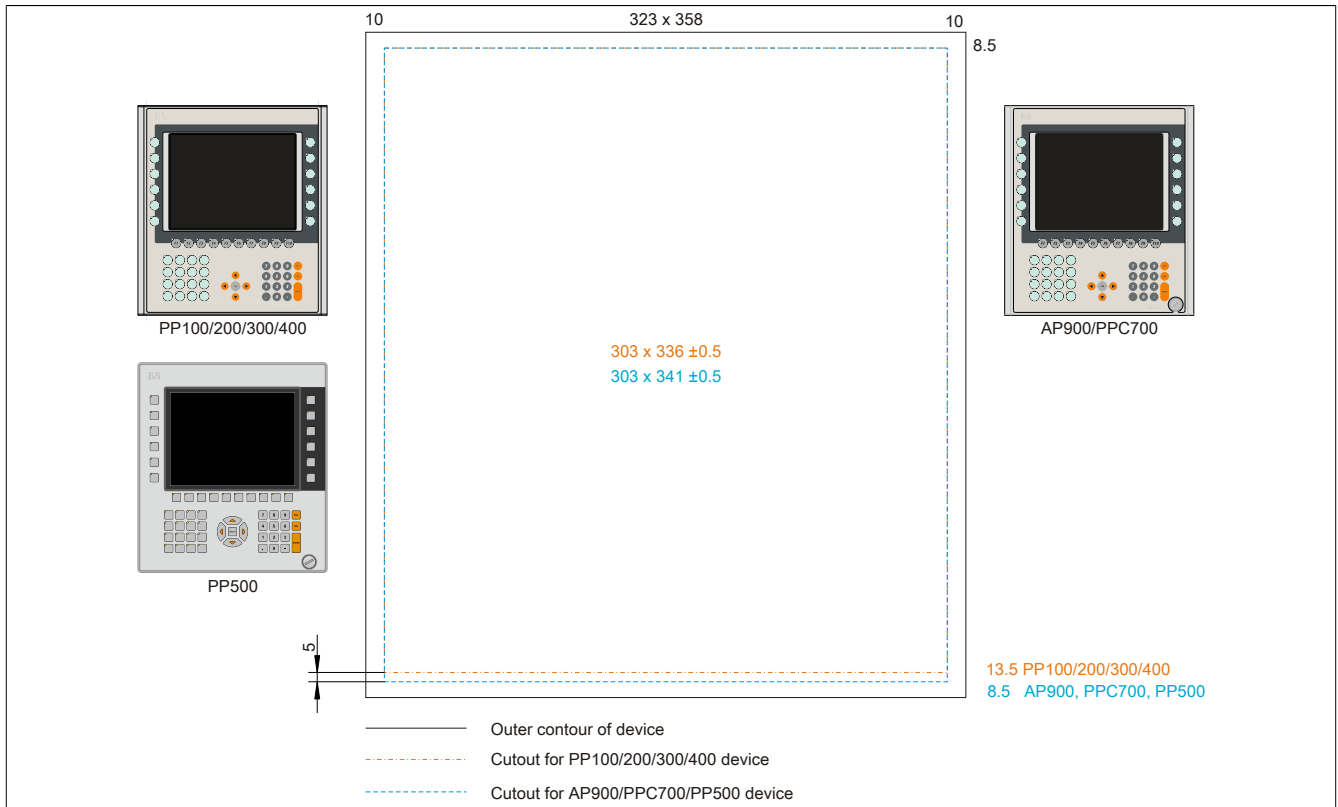


Figure 229: Mounting compatibility - 10.4" device - Vertical1

10.4" Power Panel 500, Automation Panel 900 and Panel PC 700 devices are not 100% mounting compatible with Power Panel 100/200/300/400 devices in Vertical1 format. The Power Panel 500, Automation Panel 900 and Panel PC 700 devices require a cutout that is 5 mm higher (bottom edge).

**The larger cutout can be used for all devices under certain conditions:**

- When mounting, make sure that the PP100/200/300/400 devices are placed and mounted as close to the center of the cutout as possible. Failure to do so can prevent the retaining clips from holding firmly, which means that a firm seal is no longer guaranteed with the gasket (IP65).

#### 6.2.4 12.1" devices

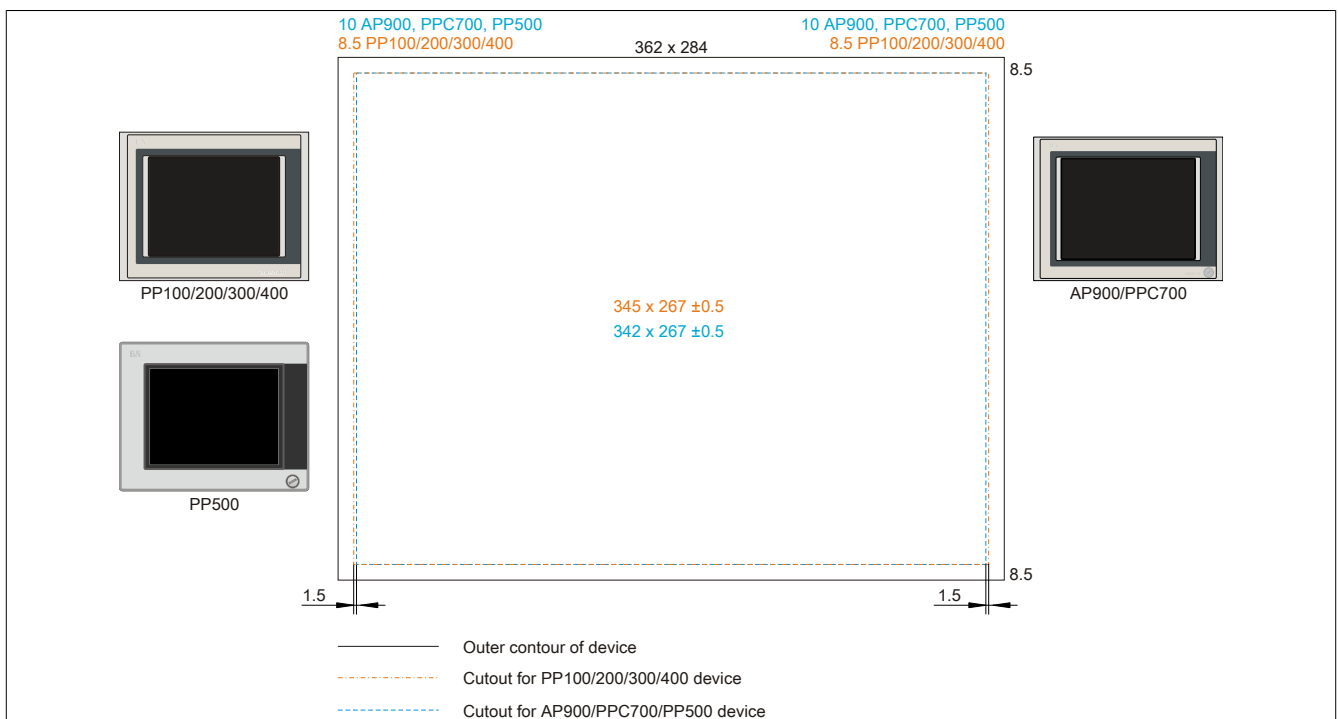


Figure 230: Mounting compatibility - 12.1" device - Horizontal1

12.1" Power Panel 500, Automation Panel 900 and Panel PC 700 devices are not 100% mounting compatible with Power Panel 100/200/300/400 devices in Horizontal1 format. The Power Panel 300/400 and Power Panel 100/200 devices require a cut that is 1.5 mm wider (left and right).

**The larger cutout can be used for all devices under certain conditions:**

- When mounting, make sure that the PP500, AP900 and PPC700 devices are mounted as close to the center of the cutout as possible.

### 6.2.5 15" devices

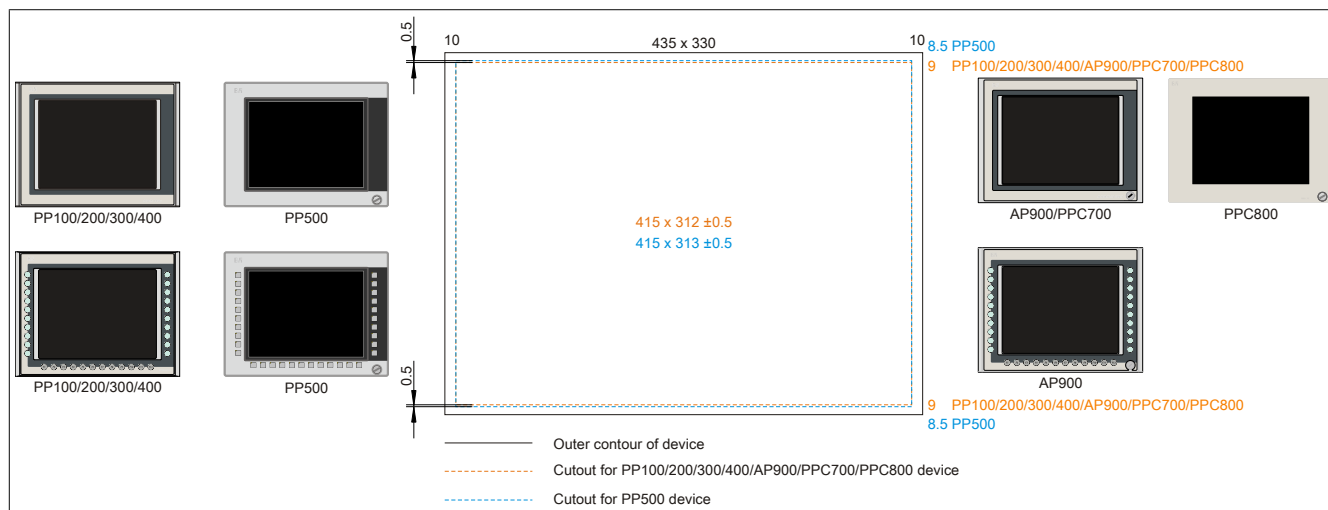


Figure 231: Mounting compatibility - 15" device - Horizontal1

15" Power Panel 500 devices are not 100% mounting compatible with Power Panel 100/200/300/400, Automation Panel 900, Panel PC 700 and Panel PC 800 devices in the Vertical1 format. The Power Panel 500 devices require a cutout that is 0.5 mm higher (top and bottom edge).

**The larger cutout can be used for all devices under certain conditions:**

- When mounting, make sure that the PP100/200, PP300/400, AP900, PPC700 and PPC800 devices are placed and mounted as close to the center of the cutout as possible. Failure to do so can prevent the retaining clips from holding firmly, which means that a firm seal is no longer guaranteed with the gasket (IP65).

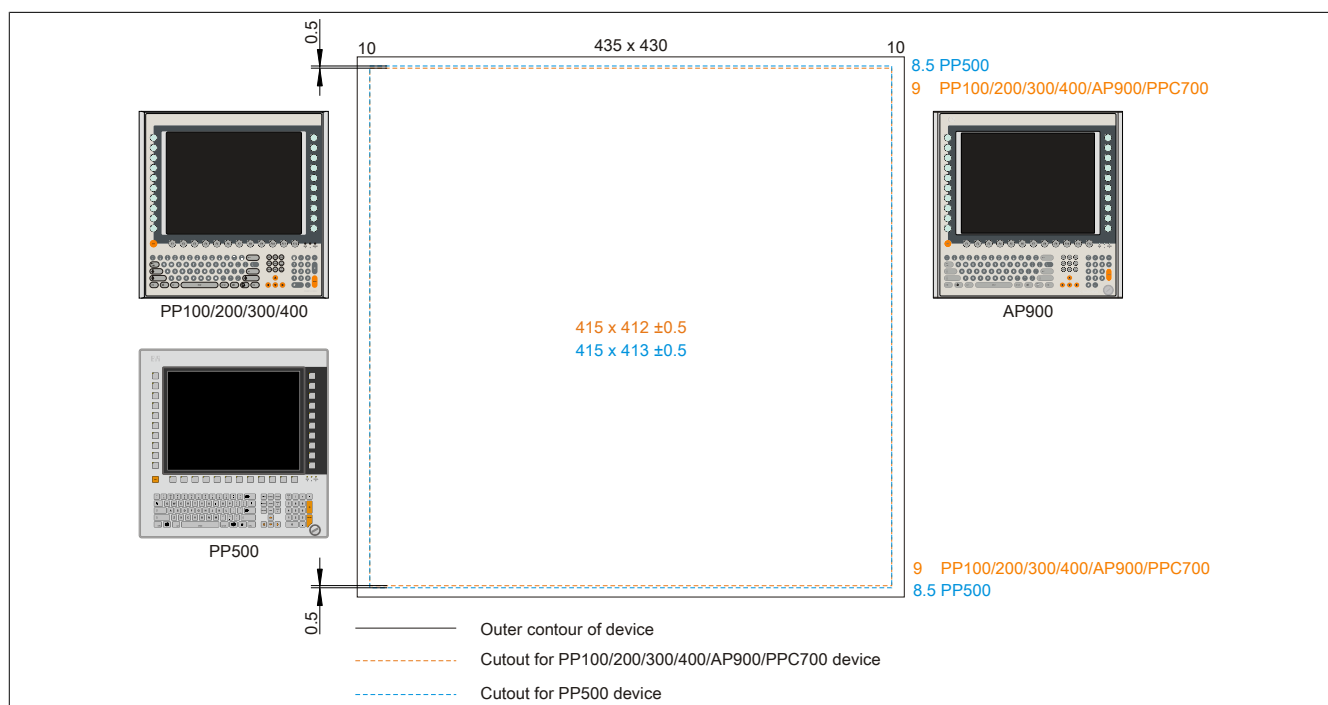


Figure 232: Mounting compatibility - 15" device - Vertical1

15" Power Panel 500 devices are not 100% mounting compatible with Power Panel 100/200/300/400, Automation Panel 900 and Panel PC 700 devices in the Vertical1 format. The Power Panel 500 devices require a cutout that is 0.5 mm higher (top and bottom edge).

**The larger cutout can be used for all devices under certain conditions:**

- When mounting, make sure that the PP100/200, PP300/400, AP900 and PPC700 devices are mounted as close to the center of the cutout as possible. Failure to do so can prevent the retaining clips from holding firmly, which means that a firm seal is no longer guaranteed with the gasket (IP65).

### 6.2.6 17" devices

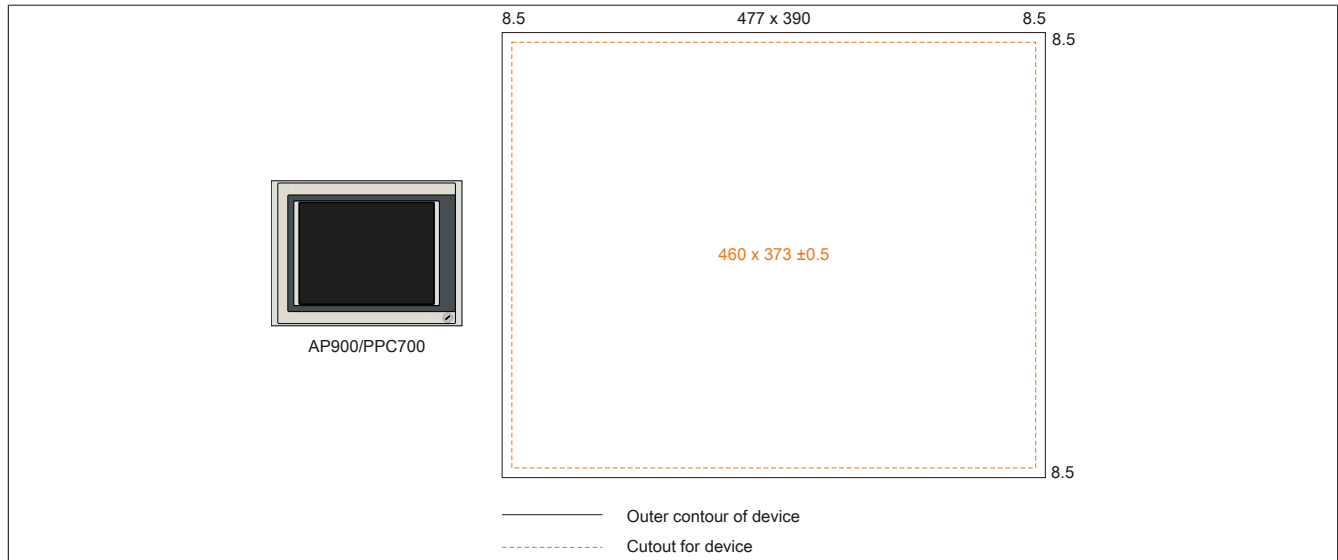


Figure 233: Mounting compatibility - 17" device - Horizontal1

17" Automation Panel 900 devices are 100% mounting compatible with Panel PC 700 devices in the Horizontal1 format.

### 6.2.7 19" devices

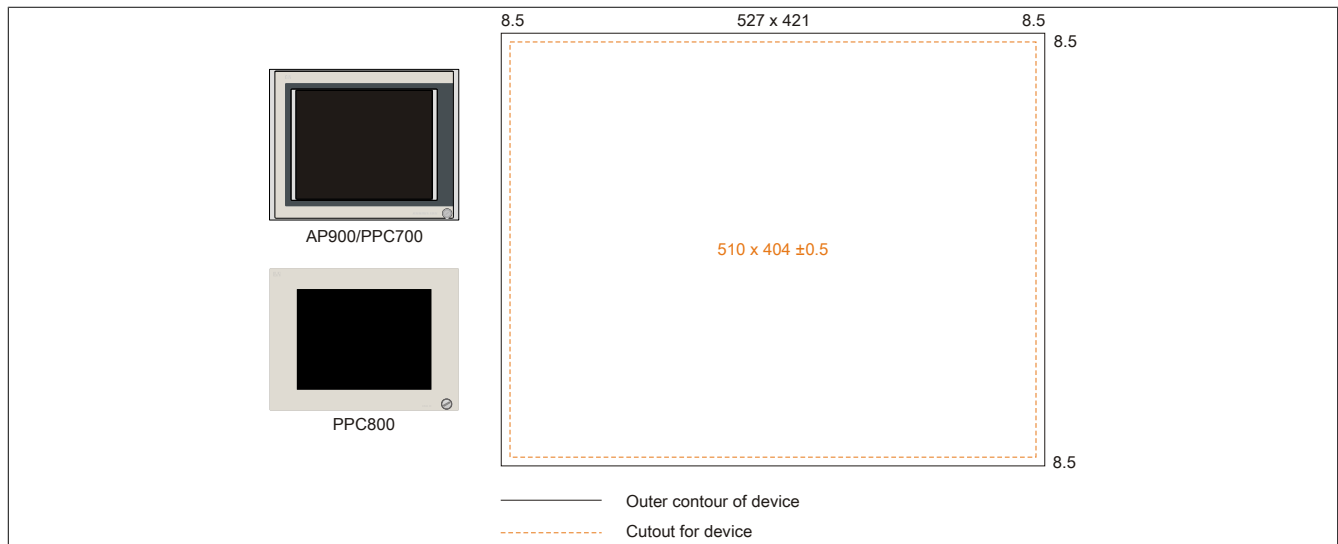


Figure 234: Mounting compatibility - 19" device - Horizontal1

19" Automation Panel 900, Panel PC 700 and Panel PC 800 are 100% mounting compatible in the Horizontal1 format.

## 6.2.8 21.3" devices

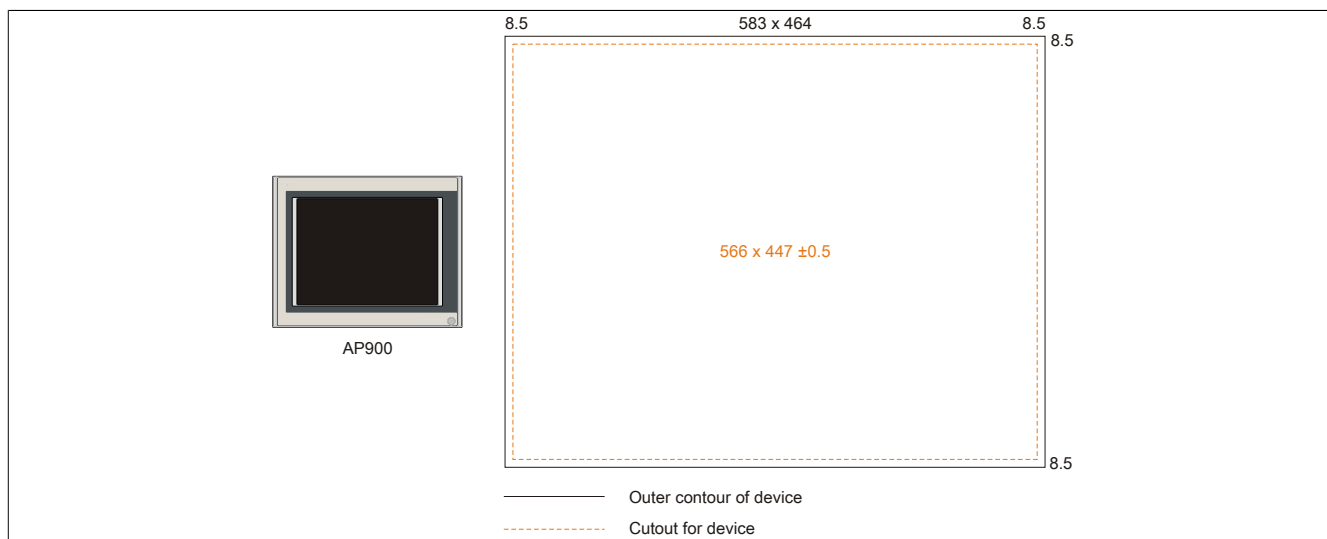


Figure 235: Mounting compatibility - 21.1" device - Horizontal1



## 7 Glossary

<b>Address</b>	An address is a character string for identifying a memory location or a memory area, where data is stored and can be retrieved. It is also a symbol (e.g. with numerical controllers) for identifying a function unit for which subsequent geometrical or technological data are determined by the symbol.
<b>Algorithms</b>	<p>According to DIN 19226: Algorithms are a finite series of well-defined regulations. The desired output quantities are created from permitted system input quantities. It describes how something is to be done. A procedure must at least satisfy the following requirements to be valid as an algorithm in a mathematical context.</p> <p><i>Discreteness</i>: An algorithm is made up of a finite series of steps.</p> <p><i>Determinacy</i>: Under the same start conditions, it always creates the same end result.</p> <p><i>Clearness</i>: The series of steps is clearly defined.</p> <p><i>Finiteness</i>: It ends after a finite number of steps.</p> <p>From a quantity theory perspective, an algorithm is clearly defined by a set of sizes [input, intermediate and output sizes], a set of elementary operations and also by a regulation, which specifies when and in what sequence certain operations should be carried out. From a functional perspective, it transfers a set of input sizes into a set of output sizes. It can be represented in text form in a natural or artificial formal language or using graphic representations [graph, program flow chart, structured chart, Petri Nets etc.].</p>
<b>ANSI</b>	American National Standards Institute > this organization promotes and manages American industrial standards.
<b>APC</b>	Abbreviation for »Automation PC«
<b>Application software</b>	Software, which is not used for operation by the computer itself, but rather when a computer is used to process a concrete application problem. It sets up the system software and uses this for fulfilling individual tasks. Application software can be accommodated in standard software used by a large number of customers in a wide range of industries. Common examples are Word, Excel, PowerPoint, Paint, Matlab etc. Industrial software tailored to the respective problems of a certain industry and individual software created for solving the particular problems of an individual user.
<b>Automation</b>	According to Brockhaus: The application of technical means, using specific programs that (either partially or totally) do not require human intervention to perform operations.
<b>Automation Runtime</b>	A uniform runtime system for all B&R automation components.
<b>Failure</b>	Failure according to IEC 61508: A function unit loses the ability to perform a required function. In regards to safety-oriented systems, a distinction is made between dangerous and safe failures. This depends on whether the status of the system failure is considered dangerous or safe. The cause of the failure may be load related or age-related, and therefore a random failure, or related to a flaw inherent in the system. In this case, it is known as a systematic failure.

Figure 1:	Configuration - Base system.....	24
Figure 2:	Configuration - Optional components.....	25
Figure 3:	Temperature sensor locations.....	29
Figure 4:	Supply voltage block diagram.....	31
Figure 5:	Block diagram with bus unit 5AC803.BX01-00.....	34
Figure 6:	Block diagram with bus unit 5AC803.BX01-01.....	35
Figure 7:	Block diagram with bus unit 5AC803.BX02-00.....	36
Figure 8:	Block diagram with bus unit 5AC803.BX02-01.....	37
Figure 9:	Serial number sticker (back).....	38
Figure 10:	Example of serial number search.....	38
Figure 11:	Ground connection.....	39
Figure 12:	5PC820.1505-00 - Front view.....	54
Figure 13:	5PC820.1505-00 - Rear view.....	54
Figure 14:	5PC820.1505 - Dimensions.....	57
Figure 15:	5PC820.1505-00 - Cutout installation.....	57
Figure 16:	5PC820.1906-00 - Front view.....	60
Figure 17:	5PC820.1906-00 - Rear view.....	60
Figure 18:	5PC820.1906-00 - Dimensions.....	63
Figure 19:	5PC820.1906-00 - Cutout installation.....	63
Figure 20:	5AC803.SX01-00, 5AC803.SX02-00 - Slots.....	68
Figure 21:	5AC803.SX01-00 - Dimensions .....	69
Figure 22:	5AC803.SX02-00 - Dimensions.....	70
Figure 23:	Standard half-size PCI card - Dimensions.....	70
Figure 24:	Standard half-size PCIe card - Dimensions.....	71
Figure 25:	1-slot bus units.....	73
Figure 26:	2-slot bus units.....	73
Figure 27:	PCI Express compact plug-in cards - Dimensions.....	76
Figure 28:	POWERLINK card - 2-port node number switch.....	82
Figure 29:	Integrating the POWERLINK plug-in card in Automation Studio.....	82
Figure 30:	5AC801.HDDI-00 - Temperature humidity diagram.....	84
Figure 31:	5AC801.HDDI-02 - Temperature humidity diagram.....	86
Figure 32:	5AC801.HDDI-03 - Temperature humidity diagram.....	88
Figure 33:	5AC801.HDDI-04 - Temperature humidity diagram.....	90
Figure 34:	5AC801.SSDI-00 - Temperature humidity diagram.....	92
Figure 35:	5AC801.SSDI-00 - ATTO disk benchmark v2.34 - Cyclic read.....	93
Figure 36:	5AC801.SSDI-00 - ATTO disk benchmark v2.34 - Cyclic write.....	93
Figure 37:	5AC801.SSDI-01 - Temperature humidity diagram.....	95
Figure 38:	5AC801.SSDI-02 - Temperature humidity diagram.....	97
Figure 39:	5AC801.SSDI-03 - Temperature humidity diagram.....	99
Figure 40:	5AC801.SSDI-04 - Temperature humidity diagram.....	101
Figure 41:	5MMSSD.0060-00 - Temperature humidity diagram.....	103
Figure 42:	5MMSSD.0060-01 - Temperature humidity diagram.....	105
Figure 43:	5MMSSD.0128-01 - Temperature humidity diagram.....	107
Figure 44:	5MMSSD.0180-00 - Temperature humidity diagram.....	109
Figure 45:	5AC801.HDDS-00 - Temperature humidity diagram.....	112
Figure 46:	5AC801.DVDS-00 - Temperature humidity diagram.....	114
Figure 47:	5AC801.DVRS-00 - Temperature humidity diagram.....	117
Figure 48:	PCI SATA RAID controller.....	118
Figure 49:	5ACPCI.RAIC-03 - Temperature humidity diagram.....	120
Figure 50:	5ACPCI.RAIC-04 - Temperature humidity diagram.....	122
Figure 51:	PCI SATA RAID controller.....	123
Figure 52:	5ACPCI.RAIC-05 - Temperature humidity diagram.....	125
Figure 53:	PCI SATA RAID controller.....	126
Figure 54:	5ACPCI.RAIC-06 - Temperature humidity diagram.....	128
Figure 55:	5MMHDD.0250-00 - Temperature humidity diagram.....	130
Figure 56:	5MMHDD.0500-00 - Temperature humidity diagram.....	132
Figure 57:	5AC803.FA01-00 - Fan kit.....	133

Figure 58:	5AC803.FA02-00 - Fan kit.....	134
Figure 59:	5AC803.FA03-00 - Fan kit.....	136
Figure 60:	Clamping blocks.....	137
Figure 61:	Mounting orientation 0° and +/- 45°.....	138
Figure 62:	Mounting orientation with 5AC801.DVRS-00.....	139
Figure 63:	Mounting orientation with 5AC801.DVDS-00.....	140
Figure 64:	Spacing for air circulation.....	141
Figure 65:	Flex radius - Cable connection.....	142
Figure 66:	Grounding concept.....	143
Figure 67:	Settings for Passmark BurnInTest Pro V4 and a 2-slot APC810 with DVD.....	145
Figure 68:	Test overview of a 2-slot APC810 with DVD.....	146
Figure 69:	One Automation Panel 900 via DVI.....	149
Figure 70:	One Automation Panel 900 system via onboard SDL.....	151
Figure 71:	One Automation Panel 800 system via onboard SDL.....	153
Figure 72:	One AP900 and one AP800 via onboard SDL.....	155
Figure 73:	Four Automation Panel 900 systems via onboard SDL.....	156
Figure 74:	Local connection of USB peripheral devices on the PPC800.....	159
Figure 75:	Remote connection of USB peripheral devices on the APC900 via DVI.....	160
Figure 76:	Remote connection of USB peripheral devices on the APC800/900 via SDL.....	161
Figure 77:	Open the RAID Configuration Utility.....	162
Figure 78:	RAID Configuration Utility - Menu.....	162
Figure 79:	RAID Configuration Utility - Menu.....	163
Figure 80:	RAID Configuration Utility - Create RAID set - Striped.....	163
Figure 81:	RAID Configuration Utility - Create RAID set - Mirrored.....	164
Figure 82:	RAID Configuration Utility - Delete RAID set.....	164
Figure 83:	RAID Configuration Utility - Rebuild mirrored set.....	165
Figure 84:	RAID Configuration Utility - Resolve conflicts.....	165
Figure 85:	RAID Configuration Utility - Low level format.....	166
Figure 86:	Boot screen.....	170
Figure 87:	GM45 Main menu.....	172
Figure 88:	GM45 Advanced menu.....	173
Figure 89:	GM45 Advanced - ACPI configuration.....	174
Figure 90:	GM45 Advanced - PCI configuration.....	175
Figure 91:	GM45 Advanced - PCI IRQ resource exclusion.....	176
Figure 92:	GM45 Advanced - PCI interrupt routing.....	177
Figure 93:	GM45 Advanced - PCI Express configuration.....	178
Figure 94:	GM45 Advanced - Graphics configuration.....	180
Figure 95:	GM45 Advanced - CPU configuration.....	182
Figure 96:	GM45 Advanced - Chipset settings.....	183
Figure 97:	GM45 Advanced - I/O interface configuration.....	184
Figure 98:	GM45 Advanced - Clock configuration.....	185
Figure 99:	GM45 Advanced - IDE configuration.....	185
Figure 100:	GM45 Advanced - Primary IDE master.....	187
Figure 101:	GM45 Advanced - Secondary IDE master.....	188
Figure 102:	GM45 Advanced - Third IDE master.....	189
Figure 103:	GM45 Advanced - Fourth IDE master.....	190
Figure 104:	GM45 Advanced - USB configuration.....	191
Figure 105:	GM45 Advanced - Keyboard/Mouse configuration.....	192
Figure 106:	GM45 Advanced - CPU board monitor.....	193
Figure 107:	GM45 Advanced - Baseboard/Panel features.....	194
Figure 108:	GM45 Advanced - Panel control.....	195
Figure 109:	GM45 Advanced - Baseboard monitor.....	196
Figure 110:	GM45 Advanced - Legacy devices.....	197
Figure 111:	GM45 Boot menu.....	198
Figure 112:	GM45 Security menu.....	199
Figure 113:	GM45 Security - Hard disk security user password.....	200
Figure 114:	GM45 Security - Hard disk security master password.....	201

Figure 115:	GM45 Power menu.....	201
Figure 116:	GM45 Exit menu.....	203
Figure 117:	CMOS profile hex switch.....	204
Figure 118:	PCI and PCIe routing with enabled APIC for GM45 CPU boards.....	213
Figure 119:	Software version.....	214
Figure 120:	Creating a bootable diskette in Windows XP - Step 1.....	218
Figure 121:	Creating a bootable diskette in Windows XP - Step 2.....	218
Figure 122:	Creating a bootable diskette in Windows XP - Step 3.....	218
Figure 123:	Creating a bootable diskette in Windows XP - Step 4.....	219
Figure 124:	Creating a bootable diskette in Windows XP - Step 5.....	219
Figure 125:	Creating a USB flash drive for B&R upgrade files.....	220
Figure 126:	Creating a CompactFlash card for B&R upgrade files.....	221
Figure 127:	ADI Control Center screenshots - Examples.....	234
Figure 128:	ADI Control Center - SDL Equalizer settings.....	236
Figure 129:	ADI Control Center - UPS settings.....	237
Figure 130:	ADI Control Center - UPS monitor.....	238
Figure 131:	ADI Control Center - UPS battery settings.....	239
Figure 132:	ADI Control Center - UPS settings.....	240
Figure 133:	ADI Control Center - Advanced UPS settings.....	242
Figure 134:	ADI Development Kit screenshots (version 3.60).....	244
Figure 135:	ADI .NET SDK screenshots (version 2.00).....	246
Figure 136:	B&R Key Editor screenshots (version 3.30).....	248
Figure 137:	UPS principle.....	258
Figure 138:	5AC600.UPSI-00 Add-on UPS module - Installation materials.....	260
Figure 139:	Temperature/Service life diagram.....	262
Figure 140:	Deep discharge cycles.....	262
Figure 141:	5PC600.UPSB-00 - Dimensions.....	263
Figure 142:	5PC600.UPSB-00 - Drilling template.....	263
Figure 143:	Block diagram of the complete system.....	266
Figure 144:	5ACPCI.ETH1-01 - PCI 10/100 Ethernet card.....	268
Figure 145:	5ACPCI.ETH1-01 - Dimensions.....	270
Figure 146:	5ACPCI.ETH3-01 - PCI 10/100 Ethernet card.....	271
Figure 147:	5ACPCI.ETH3-01 - Dimensions.....	273
Figure 148:	5CFCRD.xxxx-06 CompactFlash cards - Temperature humidity diagram.....	278
Figure 149:	Type I CompactFlash card - Dimensions.....	278
Figure 150:	ATTO Disk Benchmark v2.34 read comparison - 5CFCRD.xxxx-04 and 5CFCRD.xxxx-06.....	279
Figure 151:	ATTO Disk Benchmark v2.34 write comparison - 5CFCRD.xxxx-04 and 5CFCRD.xxxx-06.....	279
Figure 152:	5CFCRD.xxxx-04 CompactFlash cards - Temperature humidity diagram.....	282
Figure 153:	Type I CompactFlash card - Dimensions.....	282
Figure 154:	ATTO Disk Benchmark v2.34 read comparison - 5CFCRD.xxxx-03 and 5CFCRD.xxxx-04.....	283
Figure 155:	ATTO Disk Benchmark v2.34 write comparison - 5CFCRD.xxxx-03 and 5CFCRD.xxxx-04.....	283
Figure 156:	5CFCRD.xxxx-03 CompactFlash cards - Temperature humidity diagram.....	286
Figure 157:	Type I CompactFlash card - Dimensions.....	286
Figure 158:	5MMUSB.2048-00 - Temperature humidity diagram.....	289
Figure 159:	5MMUSB.xxxx-01 - Temperature humidity diagram.....	291
Figure 160:	5MD900.USB2-02 - Interfaces.....	292
Figure 161:	5MD900.USB2-02 - Dimensions.....	294
Figure 162:	USB media drive with front cover - Dimensions.....	294
Figure 163:	USB media drive with front cover - Installation cutout.....	295
Figure 164:	5MD900.USB2-02 - Mounting orientation .....	295
Figure 165:	5A5003.03 - Dimensions.....	296
Figure 166:	Front cover mounting and installation depth.....	297
Figure 167:	USB media drive with front cover - Installation cutout.....	297
Figure 168:	Flex radius specifications.....	302
Figure 169:	5CADVI.0xxx-00 - Dimensions.....	302
Figure 170:	5CADVI.0xxx-00 - Pinout.....	303
Figure 171:	Flex radius specifications.....	305

Figure 172:	5CASDL.0xxx-00- Dimensions.....	305
Figure 173:	5CASDL.0xxx-00 - Pinout.....	306
Figure 174:	Flex radius specifications.....	308
Figure 175:	5CASDL.0xxx-01 - Dimensions.....	308
Figure 176:	5CASDL.0xxx-01 - Pinout.....	309
Figure 177:	Flex radius specifications.....	311
Figure 178:	5CASDL.0xxx-03 - Dimensions.....	311
Figure 179:	5CASDL.0xxx-03 - Pinout.....	312
Figure 180:	Flex radius specification with extender.....	314
Figure 181:	5CASDL.0xx0-13 - Dimensions.....	314
Figure 182:	5CASDL.0xx0-13 - Pinout.....	315
Figure 183:	Example of the signal direction for an SDL flex cable with extender.....	316
Figure 184:	5CAUSB.00xx-00 USB cables - Pinout.....	317
Figure 185:	9A0014.xx RS232 cables - Pinout .....	319
Figure 186:	Removing the battery.....	322
Figure 187:	Battery handling.....	322
Figure 188:	Battery polarity.....	322
Figure 189:	CompactFlash + ejector.....	324
Figure 190:	Loosening the quick release screws.....	325
Figure 191:	Inserting the compact SATA drive.....	325
Figure 192:	Loosening the quick release screws.....	326
Figure 193:	Installing the slide-in drive.....	326
Figure 194:	Loosening the quick release screws.....	327
Figure 195:	Installing the slide-in compact adapter.....	327
Figure 196:	Inserting the slide-in compact drive.....	328
Figure 197:	Removing the fan kit cover.....	329
Figure 198:	Inserting the fan kit.....	329
Figure 199:	Securing the dust filter with the filter clasp.....	329
Figure 200:	5AC600.UPSI-00 Add-on UPS module - Installation materials.....	331
Figure 201:	Removing the UPS module cover.....	331
Figure 202:	Installing the UPS module.....	331
Figure 203:	Attaching the connection cable.....	332
Figure 204:	Connector locking mechanism.....	332
Figure 205:	Removing the cover for the battery unit.....	333
Figure 206:	Disconnecting the cable.....	333
Figure 207:	Connecting the fuse.....	334
Figure 208:	Securing the fuse.....	334
Figure 209:	Removing the screws.....	335
Figure 210:	Installing the bus unit.....	335
Figure 211:	Removing the screws.....	336
Figure 212:	Installing the 5AC803.BC01-00 adapter.....	336
Figure 213:	Installing the 5AC803.BC02-00 adapter.....	337
Figure 214:	Removing the PCIe module cover.....	338
Figure 215:	Inserting the PCIe plug-in card.....	338
Figure 216:	Installing the side cover on a PPC800 without an expansion.....	339
Figure 217:	Installing the side cover on a PPC800 with an expansion (1-slot expansion shown in image).....	339
Figure 218:	Screw layout on the back side of the 5ACPCI.RAIC-03 SATA RAID controller.....	340
Figure 219:	Replacing the hard disk.....	341
Figure 220:	MTCX controller location.....	342
Figure 221:	Connector location for external devices.....	344
Figure 222:	5-wire AMT touch screen - Temperature humidity diagram.....	345
Figure 223:	Overview of compatibility figures.....	350
Figure 224:	Mounting compatibility - 5.7" device - Horizontal1.....	350
Figure 225:	Mounting compatibility - 5.7" device - Horizontal2.....	351
Figure 226:	Mounting compatibility - 5.7" device - Vertical1.....	351
Figure 227:	Mounting compatibility - 10.4" device - Horizontal1.....	352
Figure 228:	Mounting compatibility - 10.4" device - Horizontal2.....	352

Figure 229:	Mounting compatibility - 10.4" device - Vertical1.....	353
Figure 230:	Mounting compatibility - 12.1" device - Horizontal1.....	353
Figure 231:	Mounting compatibility - 15" device - Horizontal1.....	354
Figure 232:	Mounting compatibility - 15" device - Vertical1.....	354
Figure 233:	Mounting compatibility - 17" device - Horizontal1.....	355
Figure 234:	Mounting compatibility - 19" device - Horizontal1.....	355
Figure 235:	Mounting compatibility - 21.1" device - Horizontal1.....	356

Table 1:	Manual history.....	13
Table 2:	Environmentally friendly separation of materials.....	16
Table 3:	Description of the safety notices used in this documentation.....	17
Table 4:	Range of nominal sizes.....	17
Table 5:	Ambient temperature with a fan kit.....	27
Table 6:	Temperature sensor locations.....	29
Table 7:	Overview of humidity specifications for individual components.....	30
Table 8:	Power calculation for 15" PPC800.....	32
Table 9:	Power calculation for 19" PPC800.....	33
Table 10:	24 VDC supply voltage connection.....	39
Table 11:	Monitor/Panel interface - RGB, DVI, SDL.....	40
Table 12:	DVI interface - Pinout.....	40
Table 13:	Cable lengths and resolutions for SDL transmission.....	40
Table 14:	Cable lengths and resolutions for DVI transmission.....	41
Table 15:	COM1 - Pinout.....	42
Table 16:	Ethernet interface (ETH1).....	43
Table 17:	Ethernet interface (ETH2).....	44
Table 18:	USB1, USB2, USB3 and USB4 interfaces.....	45
Table 19:	USB5 interface.....	45
Table 20:	CompactFlash slot (CF1).....	46
Table 21:	CompactFlash slot (CF2).....	46
Table 22:	MIC, Line IN, Line OUT.....	47
Table 23:	Add-on UPS slot.....	47
Table 24:	Power button.....	48
Table 25:	Reset button.....	48
Table 26:	LED status indicators.....	49
Table 27:	CMOS profile switch.....	49
Table 28:	Battery.....	50
Table 29:	Battery status.....	50
Table 30:	Slide-in compact slot.....	51
Table 31:	PClec slot.....	51
Table 32:	5PC820.1505-00 - Order data.....	52
Table 33:	5PC820.1505-00 - Technical data.....	54
Table 34:	5PC820.1906-00 - Order data.....	58
Table 35:	5PC820.1906-00 - Technical data.....	60
Table 36:	5PC800.BM45-00, 5PC800.BM45-01 - Order data.....	64
Table 37:	5PC800.BM45-00, 5PC800.BM45-01 - Technical data.....	64
Table 38:	5AC803.HS00-01 - Order data.....	66
Table 39:	5AC803.HS00-01 - Technical data.....	66
Table 40:	5MMDDR.2048-02, 5MMDDR.4096-02 - Order data.....	67
Table 41:	5MMDDR.2048-02, 5MMDDR.4096-02 - Technical data.....	67
Table 42:	5AC803.SX01-00, 5AC803.SX02-00 - Order data.....	68
Table 43:	5AC803.SX01-00, 5AC803.SX02-00 - Technical data.....	68
Table 44:	Slide-in slot 1.....	72
Table 45:	5AC803.BX01-00, 5AC803.BX01-01, 5AC803.BX02-00, 5AC803.BX02-01 - Order data.....	73
Table 46:	5AC803.BX01-00, 5AC803.BX01-01, 5AC803.BX02-00, 5AC803.BX02-01 - Technical data.....	74
Table 47:	5AC803.BC01-00 - Order data.....	75
Table 48:	5AC803.BC02-00 - Order data.....	75
Table 49:	5ACPCC.ETH0-00 - Order data.....	77
Table 50:	5ACPCC.ETH0-00 - Technical data.....	77
Table 51:	5ACPCC.ETH0-00 - Ethernet interface.....	78
Table 52:	5ACPCC.MPL0-00 - Order data.....	79
Table 53:	5ACPCC.MPL0-00 - Technical data.....	79
Table 54:	5ACPCC.MPL0-00 - POWERLINK interface.....	80
Table 55:	Status/Error LED - Ethernet TCP/IP operating mode.....	80
Table 56:	Status/Error LED - POWERLINK V1 operating mode.....	80
Table 57:	Status/Error LED as Error LED - POWERLINK V2 operating mode.....	80

Table 58:	Status/Error LED as Status LED - POWERLINK operating mode.....	81
Table 59:	Status/Error LED as Error LED - System failure error codes.....	81
Table 60:	POWERLINK station number (x1, x16).....	82
Table 61:	5AC801.HDDI-00 - Order data.....	83
Table 62:	5AC801.HDDI-00 - Technical data.....	83
Table 63:	5AC801.HDDI-02 - Order data.....	85
Table 64:	5AC801.HDDI-02 - Technical data.....	85
Table 65:	5AC801.HDDI-03 - Order data.....	87
Table 66:	5AC801.HDDI-03 - Technical data.....	87
Table 67:	5AC801.HDDI-04 - Order data.....	89
Table 68:	5AC801.HDDI-04 - Technical data.....	89
Table 69:	5AC801.SSDI-00 - Order data.....	91
Table 70:	5AC801.SSDI-00 - Technical data.....	91
Table 71:	5AC801.SSDI-01 - Order data.....	94
Table 72:	5AC801.SSDI-01 - Technical data.....	94
Table 73:	5AC801.SSDI-02 - Order data.....	96
Table 74:	5AC801.SSDI-02 - Technical data.....	96
Table 75:	5AC801.SSDI-03 - Order data.....	98
Table 76:	5AC801.SSDI-03 - Technical data.....	98
Table 77:	5AC801.SSDI-04 - Order data.....	100
Table 78:	5AC801.SSDI-04 - Technical data.....	100
Table 79:	5MMSSD.0060-00 - Order data.....	102
Table 80:	5MMSSD.0060-00 - Technical data.....	102
Table 81:	5MMSSD.0060-01 - Order data.....	104
Table 82:	5MMSSD.0060-01 - Technical data.....	104
Table 83:	5MMSSD.0128-01 - Order data.....	106
Table 84:	5MMSSD.0128-01 - Technical data.....	106
Table 85:	5MMSSD.0180-00 - Order data.....	108
Table 86:	5MMSSD.0180-00 - Technical data.....	108
Table 87:	5AC801.ADAS-00 - Order data.....	110
Table 88:	5AC801.ADAS-00 - Technical data.....	110
Table 89:	5AC801.HDDS-00 - Order data.....	111
Table 90:	5AC801.HDDS-00 - Technical data.....	111
Table 91:	5AC801.DVDS-00 - Order data.....	113
Table 92:	5AC801.DVDS-00 - Technical data.....	113
Table 93:	5AC801.DVRS-00 - Order data.....	115
Table 94:	5AC801.DVRS-00 - Technical data.....	115
Table 95:	5ACPCI.RAIC-03 - Order data.....	118
Table 96:	5ACPCI.RAIC-03 - Technical data.....	119
Table 97:	5ACPCI.RAIC-04 - Order data.....	121
Table 98:	5ACPCI.RAIC-04 - Technical data.....	121
Table 99:	5ACPCI.RAIC-05 - Order data.....	123
Table 100:	5ACPCI.RAIC-05 - Technical data.....	124
Table 101:	5ACPCI.RAIC-06 - Order data.....	126
Table 102:	5ACPCI.RAIC-06 - Technical data.....	127
Table 103:	5MMHDD.0250-00 - Order data.....	129
Table 104:	5MMHDD.0250-00 - Technical data.....	129
Table 105:	5MMHDD.0500-00 - Order data.....	131
Table 106:	5MMHDD.0500-00 - Technical data.....	131
Table 107:	5AC803.FA01-00 - Order data.....	133
Table 108:	5AC803.FA01-00 - Technical data.....	133
Table 109:	5AC803.FA02-00 - Order data.....	134
Table 110:	5AC803.FA02-00 - Technical data.....	134
Table 111:	5AC803.FA03-00 - Order data.....	136
Table 112:	5AC803.FA03-00 - Technical data.....	136
Table 113:	Evaluation example using a 2-slot APC810.....	147
Table 114:	Selecting display units.....	148



Table 115:	Possible system unit and CPU board combinations.....	149
Table 116:	Link modules.....	149
Table 117:	Cables for DVI configurations.....	149
Table 118:	Possible Automation Panel devices, resolutions and segment lengths.....	150
Table 119:	Possible system unit and CPU board combinations.....	151
Table 120:	Link modules.....	151
Table 121:	Cables for SDL configurations.....	151
Table 122:	Cable lengths and resolutions for SDL transmission.....	152
Table 123:	Possible system unit and CPU board combinations.....	153
Table 124:	Cables for SDL configurations.....	153
Table 125:	Cable lengths and resolutions for SDL transmission.....	153
Table 126:	Possible system unit and CPU board combinations.....	155
Table 127:	Link modules.....	155
Table 128:	Possible system unit and CPU board combinations.....	156
Table 129:	Link modules.....	156
Table 130:	Cables for SDL configurations.....	156
Table 131:	Cable lengths and resolutions for SDL transmission.....	157
Table 132:	BIOS-relevant keys in the RAID Configuration Utility.....	162
Table 133:	BIOS-relevant keys for POST.....	171
Table 134:	BIOS-relevant keys.....	171
Table 135:	GM45 Main menu - Configuration options.....	172
Table 136:	GM45 Advanced menu.....	173
Table 137:	GM45 Advanced - ACPI configuration - Configuration options.....	174
Table 138:	GM45 Advanced - PCI configuration - Configuration options.....	175
Table 139:	GM45 Advanced - PCI IRQ resource exclusion - Configuration options.....	176
Table 140:	GM45 Advanced - PCI interrupt routing - Configuration options.....	177
Table 141:	GM45 Advanced - PCI Express configuration - Configuration options.....	178
Table 142:	GM45 Advanced - Graphics configuration - Configuration options.....	180
Table 143:	GM45 Advanced - CPU configuration - Configuration options.....	182
Table 144:	GM45 Advanced - Chipset settings - Configuration options.....	183
Table 145:	GM45 Advanced - I/O interface configuration - Configuration options.....	184
Table 146:	GM45 Advanced - Clock configuration - Configuration options.....	185
Table 147:	GM45 Advanced - IDE configuration - Configuration options.....	186
Table 148:	GM45 Advanced - Primary IDE master - Configuration options.....	187
Table 149:	GM45 Advanced - Secondary IDE master - Configuration options.....	188
Table 150:	GM45 Advanced - Third IDE master - Configuration options.....	189
Table 151:	GM45 Advanced - Fourth IDE master - Configuration options.....	190
Table 152:	GM45 Advanced - USB configuration - Configuration options.....	191
Table 153:	GM45 Advanced - Keyboard/Mouse configuration - Configuration options.....	192
Table 154:	GM45 Advanced - CPU board monitor - Configuration options.....	193
Table 155:	GM45 Advanced - Baseboard/Panel features - Configuration options.....	194
Table 156:	GM45 Advanced - Panel control - Configuration options.....	195
Table 157:	GM45 Advanced - Baseboard monitor - Configuration options.....	196
Table 158:	GM45 Advanced - Legacy devices - Configuration options.....	197
Table 159:	GM45 Boot menu - Configuration options.....	198
Table 160:	GM45 Security menu - Configuration options.....	199
Table 161:	GM45 Security - Hard disk security user password.....	200
Table 162:	GM45 Security - Hard disk security master password.....	201
Table 163:	GM45 Power menu - Configuration options.....	202
Table 164:	GM45 Exit menu - Configuration options.....	203
Table 165:	Profile overview.....	204
Table 166:	GM45 Main - Overview of profile settings.....	204
Table 167:	GM45 Advanced - ACPI configuration - Overview of profile settings.....	204
Table 168:	GM45 Advanced - PCI configuration - Overview of profile settings.....	205
Table 169:	GM45 Advanced - PCI Express configuration - Overview of profile settings.....	205
Table 170:	GM45 Advanced - Graphics configuration - Overview of profile settings.....	205
Table 171:	GM45 Advanced - CPU configuration - Overview of profile settings.....	206

Table 172:	GM45 Advanced - Chipset configuration - Overview of profile settings.....	206
Table 173:	GM45 Advanced - I/O interface configuration - Overview of profile settings.....	206
Table 174:	GM45 Advanced - Clock configuration - Overview of profile settings.....	206
Table 175:	GM45 Advanced - IDE configuration - Overview of profile settings.....	206
Table 176:	GM45 Advanced - USB configuration - Overview of profile settings.....	207
Table 177:	GM45 Advanced - Keyboard/Mouse configuration - Overview of profile settings.....	207
Table 178:	GM45 Advanced - Baseboard/Panel features - Overview of profile settings.....	207
Table 179:	GM45 Main - Overview of profile settings.....	208
Table 180:	GM45 Security - Overview of profile settings.....	208
Table 181:	GM45 Power - Overview of profile settings.....	208
Table 182:	GM45 BIOS - POST messages.....	210
Table 183:	RAM address assignment.....	211
Table 184:	I/O address assignment.....	211
Table 185:	IRQ interrupt assignments in PIC mode.....	212
Table 186:	IRQ interrupt assignments in APIC mode.....	213
Table 187:	9S0000.01-010, 9S0000.01-020 - Order data.....	222
Table 188:	Tested resolutions and color depths for DVI signals.....	222
Table 189:	Tested resolutions and color depths for RGB signals.....	222
Table 190:	5SWWXP.0600-ENG, 5SWWXP.0600-GER, 5SWWXP.0600-MUL, 5SWWXP.0500-ENG, 5SWWXP.0500-GER, 5SWWXP.0500-MUL - Order data.....	223
Table 191:	5SWWI7.0100-ENG, 5SWWI7.1100-ENG, 5SWWI7.0100-GER, 5SWWI7.1100-GER, 5SWWI7.0300-MUL, 5SWWI7.1300-MUL, 5SWWI7.0200-ENG, 5SWWI7.1200-ENG, 5SWWI7.0200-GER, 5SWWI7.1200-GER, 5SWWI7.0400-MUL, 5SWWI7.1400-MUL - Order da- ta.....	225
Table 192:	5SWWXP.0734-ENG - Order data.....	228
Table 193:	Device functions in Windows Embedded Standard 2009.....	228
Table 194:	5SWWI7.0534-ENG, 5SWWI7.1534-ENG, 5SWWI7.0634-ENG, 5SWWI7.1634-ENG, 5SWWI7.0734-MUL, 5SWWI7.1734-MUL, 5SWWI7.0834-MUL, 5SWWI7.1834-MUL - Order da- ta.....	230
Table 195:	Device functions in Windows Embedded Standard 7.....	231
Table 196:	9A0003.02U, 1A4600.10, 1A4600.10-2, 1A4600.10-3, 1A4600.10-4 - Order data.....	233
Table 197:	0AC201.91, 4A0006.00-000 - Order data.....	252
Table 198:	0AC201.91, 4A0006.00-000 - Technical data.....	252
Table 199:	0TB103.9, 0TB103.91 - Order data.....	254
Table 200:	0TB103.9, 0TB103.91 - Technical data.....	254
Table 201:	5AC900.1000-00 - Order data.....	255
Table 202:	5AC900.1201-00 - Order data.....	256
Table 203:	5AC900.1201-01 - Order data.....	256
Table 204:	5AC900.BLOC-00 - Order data.....	257
Table 205:	5AC600.UPSI-00 - Order data.....	259
Table 206:	5AC600.UPSI-00 - Technical data.....	259
Table 207:	5AC600.UPSB-00 - Order data.....	261
Table 208:	5AC600.UPSB-00, 5AC600.UPSB-00 - Technical data.....	261
Table 209:	5CAUPS.0005-00, 5CAUPS.0030-00 - Order data.....	264
Table 210:	5CAUPS.0005-00, 5CAUPS.0030-00 - Technical data.....	264
Table 211:	5AC600.UPSF-00 - Order data.....	265
Table 212:	5AC600.UPSF-01 - Order data.....	265
Table 213:	9A0100.11, 9A0100.12, 9A0100.13, 9A0100.14, 9A0100.15, 9A0100.16, 9A0100.17 - Order da- ta.....	266
Table 214:	5ACPCI.ETH1-01 - Order data.....	268
Table 215:	5ACPCI.ETH1-01 - Technical data.....	268
Table 216:	5ACPCI.ETH1-01 - Technical data.....	269
Table 217:	5ACPCI.ETH3-01 - Order data.....	271
Table 218:	5ACPCI.ETH3-01 - Technical data.....	271
Table 219:	5ACPCI.ETH3-01 - Technical data.....	272
Table 220:	5CFCRD.0512-06, 5CFCRD.1024-06, 5CFCRD.2048-06, 5CFCRD.4096-06, 5CFCRD.8192-06, 5CFCRD.016G-06, 5CFCRD.032G-06 - Order data.....	276

Table 221:	5CFCRD.0512-06, 5CFCRD.1024-06, 5CFCRD.2048-06, 5CFCRD.4096-06, 5CFCRD.8192-06, 5CFCRD.016G-06, 5CFCRD.032G-06 - Technical data.....	276
Table 222:	5CFCRD.0512-04, 5CFCRD.1024-04, 5CFCRD.2048-04, 5CFCRD.4096-04, 5CFCRD.8192-04, 5CFCRD.016G-04 - Order data.....	280
Table 223:	5CFCRD.0512-04, 5CFCRD.1024-04, 5CFCRD.2048-04, 5CFCRD.4096-04, 5CFCRD.8192-04, 5CFCRD.016G-04 - Technical data.....	280
Table 224:	5CFCRD.0064-03, 5CFCRD.0128-03, 5CFCRD.0256-03, 5CFCRD.0512-03, 5CFCRD.1024-03, 5CFCRD.2048-03, 5CFCRD.4096-03, 5CFCRD.8192-03 - Order data.....	284
Table 225:	5CFCRD.0064-03, 5CFCRD.0128-03, 5CFCRD.0256-03, 5CFCRD.0512-03, 5CFCRD.1024-03, 5CFCRD.2048-03, 5CFCRD.4096-03, 5CFCRD.8192-03 - Technical data.....	284
Table 226:	5MMUSB.2048-00 - Order data.....	288
Table 227:	5MMUSB.2048-00 - Technical data.....	288
Table 228:	5MMUSB.2048-01, 5MMUSB.4096-01 - Order data.....	290
Table 229:	5MMUSB.2048-01, 5MMUSB.4096-01 - Technical data.....	290
Table 230:	5MD900.USB2-02 - Order data.....	292
Table 231:	5MD900.USB2-02 - Technical data.....	292
Table 232:	5MD900.USB2-02 - Contents of delivery.....	295
Table 233:	5A5003.03 - Order data.....	296
Table 234:	5A5003.03 - Technical data.....	296
Table 235:	5A5003.03 - Contents of delivery.....	296
Table 236:	5SWHMI.0000-00 - Order data.....	298
Table 237:	5CADVI.0018-00, 5CADVI.0050-00, 5CADVI.0100-00 - Order data.....	301
Table 238:	5CADVI.0018-00, 5CADVI.0050-00, 5CADVI.0100-00 - Technical data.....	301
Table 239:	5CASDL.0018-00, 5CASDL.0050-00, 5CASDL.0100-00, 5CASDL.0150-00, 5CASDL.0200-00, 5CASDL.0250-00, 5CASDL.0300-00 - Order data.....	304
Table 240:	5CASDL.0018-00, 5CASDL.0050-00, 5CASDL.0100-00, 5CASDL.0150-00, 5CASDL.0200-00, 5CASDL.0250-00, 5CASDL.0300-00 - Technical data.....	304
Table 241:	5CASDL.0018-01, 5CASDL.0050-01, 5CASDL.0100-01, 5CASDL.0150-01 - Order data.....	307
Table 242:	5CASDL.0018-01, 5CASDL.0050-01, 5CASDL.0100-01, 5CASDL.0150-01 - Technical data.....	307
Table 243:	5CASDL.0018-03, 5CASDL.0050-03, 5CASDL.0100-03, 5CASDL.0150-03, 5CASDL.0200-03, 5CASDL.0250-03, 5CASDL.0300-03 - Order data.....	310
Table 244:	5CASDL.0018-03, 5CASDL.0050-03, 5CASDL.0100-03, 5CASDL.0150-03, 5CASDL.0200-03, 5CASDL.0250-03, 5CASDL.0300-03 - Technical data.....	310
Table 245:	5CASDL.0xxx-03 SDL flex cables - Structure.....	312
Table 246:	5CASDL.0300-13, 5CASDL.0400-13, 5CASDL.0430-13 - Order data.....	313
Table 247:	5CASDL.0300-13, 5CASDL.0400-13, 5CASDL.0430-13 - Technical data.....	313
Table 248:	5CAUSB.0018-00, 5CAUSB.0050-00 - Order data.....	317
Table 249:	5CAUSB.0018-00, 5CAUSB.0050-00 - Technical data.....	317
Table 250:	9A0014.02, 9A0014.05, 9A0014.10 - Order data.....	318
Table 251:	9A0014.02, 9A0014.05, 9A0014.10 - Technical data.....	318
Table 252:	5CAMSC.0001-00 - Order data.....	320
Table 253:	5CAMSC.0001-00 - Technical data.....	320
Table 254:	Battery status.....	321
Table 255:	Overview of required replacement SATA HDD for PCI SATA HDD RAID controller.....	340
Table 256:	Temperature limits of the fan (MTCX PX32 V1.01).....	343
Table 257:	Connector on the mainboard - Pinout.....	344
Table 258:	5-wire AMT touch screen - Technical data.....	345
Table 259:	Chemical resistance of the panel overlay.....	347
Table 260:	Product abbreviations.....	349
Table 261:	Overview of device compatibility.....	349

0AC201.91.....	252
0TB103.9.....	254
0TB103.91.....	254
1A4600.10.....	233
1A4600.10-2.....	233
1A4600.10-3.....	233
1A4600.10-4.....	233
4A0006.00-000.....	252
5A5003.03.....	296
5AC600.UPSB-00.....	261
5AC600.UPSF-00.....	265
5AC600.UPSF-01.....	265
5AC600.UPSI-00.....	259
5AC801.ADAS-00.....	110
5AC801.DVDS-00.....	113
5AC801.DVRS-00.....	115
5AC801.HDDI-00.....	83
5AC801.HDDI-02.....	85
5AC801.HDDI-03.....	87
5AC801.HDDI-04.....	89
5AC801.HDDS-00.....	111
5AC801.SSDI-00.....	91
5AC801.SSDI-01.....	94
5AC801.SSDI-02.....	96
5AC801.SSDI-03.....	98
5AC801.SSDI-04.....	100
5AC803.BC01-00.....	75
5AC803.BC02-00.....	75
5AC803.BX01-00.....	73
5AC803.BX01-01.....	73
5AC803.BX02-00.....	73
5AC803.BX02-01.....	73
5AC803.FA01-00.....	133
5AC803.FA02-00.....	134
5AC803.FA03-00.....	136
5AC803.HS00-01.....	66
5AC803.SX01-00.....	68
5AC803.SX02-00.....	68
5AC900.1000-00.....	255
5AC900.1201-00.....	256
5AC900.1201-01.....	256
5AC900.BLOC-00.....	257
5ACPCC.ETH0-00.....	77
5ACPCC.MPL0-00.....	79
5ACPCI.ETH1-01.....	268
5ACPCI.ETH3-01.....	271
5ACPCI.RAIC-03.....	118
5ACPCI.RAIC-04.....	121
5ACPCI.RAIC-05.....	123
5ACPCI.RAIC-06.....	126
5CADVI.0018-00.....	301
5CADVI.0050-00.....	301
5CADVI.0100-00.....	301
5CAMSC.0001-00.....	320
5CASDL.0018-00.....	304
5CASDL.0018-01.....	307
5CASDL.0018-03.....	310
5CASDL.0050-00.....	304
5CASDL.0050-01.....	307
5CASDL.0050-03.....	310
5CASDL.0100-00.....	304
5CASDL.0100-01.....	307

5CASDL.0100-03.....	310
5CASDL.0150-00.....	304
5CASDL.0150-01.....	307
5CASDL.0150-03.....	310
5CASDL.0200-00.....	304
5CASDL.0200-03.....	310
5CASDL.0250-00.....	304
5CASDL.0250-03.....	310
5CASDL.0300-00.....	304
5CASDL.0300-03.....	310
5CASDL.0300-13.....	313
5CASDL.0400-13.....	313
5CASDL.0430-13.....	313
5CAUPS.0005-00.....	264
5CAUPS.0030-00.....	264
5CAUSB.0018-00.....	317
5CAUSB.0050-00.....	317
5CFCRD.0064-03.....	284
5CFCRD.0128-03.....	284
5CFCRD.016G-04.....	280
5CFCRD.016G-06.....	276
5CFCRD.0256-03.....	284
5CFCRD.032G-06.....	276
5CFCRD.0512-03.....	284
5CFCRD.0512-04.....	280
5CFCRD.0512-06.....	276
5CFCRD.1024-03.....	284
5CFCRD.1024-04.....	280
5CFCRD.1024-06.....	276
5CFCRD.2048-03.....	284
5CFCRD.2048-04.....	280
5CFCRD.2048-06.....	276
5CFCRD.4096-03.....	284
5CFCRD.4096-04.....	280
5CFCRD.4096-06.....	276
5CFCRD.8192-03.....	284
5CFCRD.8192-04.....	280
5CFCRD.8192-06.....	276
5MD900.USB2-02.....	292
5MMDDR.2048-02.....	67
5MMDDR.4096-02.....	67
5MMHDD.0250-00.....	129
5MMHDD.0500-00.....	131
5MMSSD.0060-00.....	102
5MMSSD.0060-01.....	104
5MMSSD.0128-01.....	106
5MMSSD.0180-00.....	108
5MMUSB.2048-00.....	288
5MMUSB.2048-01.....	290
5MMUSB.4096-01.....	290
5PC800.BM45-00.....	64
5PC800.BM45-01.....	64
5PC820.1505-00.....	52
5PC820.1906-00.....	58
5SWHMI.0000-00.....	298
5SWWI7.0100-ENG.....	225
5SWWI7.0100-GER.....	225
5SWWI7.0200-ENG.....	225
5SWWI7.0200-GER.....	225
5SWWI7.0300-MUL.....	225
5SWWI7.0400-MUL.....	225
5SWWI7.0534-ENG.....	230

5SWWI7.0634-ENG.....	230
5SWWI7.0734-MUL.....	230
5SWWI7.0834-MUL.....	230
5SWWI7.1100-ENG.....	225
5SWWI7.1100-GER.....	225
5SWWI7.1200-ENG.....	225
5SWWI7.1200-GER.....	225
5SWWI7.1300-MUL.....	225
5SWWI7.1400-MUL.....	225
5SWWI7.1534-ENG.....	230
5SWWI7.1634-ENG.....	230
5SWWI7.1734-MUL.....	230
5SWWI7.1834-MUL.....	230
5SWWXP.0500-ENG.....	223
5SWWXP.0500-GER.....	223
5SWWXP.0500-MUL.....	223
5SWWXP.0600-ENG.....	223
5SWWXP.0600-GER.....	223
5SWWXP.0600-MUL.....	223
5SWWXP.0734-ENG.....	228
9A0003.02U.....	233
9A0014.02.....	318
9A0014.05.....	318
9A0014.10.....	318
9A0100.11.....	266
9A0100.12.....	266
9A0100.13.....	266
9A0100.14.....	266
9A0100.15.....	266
9A0100.16.....	266
9A0100.17.....	266
9S0000.01-010.....	222
9S0000.01-020.....	222

**A**

Abbreviation.....	349
Accessories.....	252
ACPI.....	212, 213
Adapters.....	75
add-on UPS module.....	259
Add-on UPS slot.....	47
ADI.....	234
.NET SDK.....	246
Development Kit.....	244
SDL Equalizer settings.....	236
air circulation.....	141, 141
Ambient temperature	
Maximum.....	27
Minimum.....	28
ARemb.....	233
ARwin.....	233
Automation Runtime.....	233
Automation Runtime Embedded.....	233
Automation Runtime Windows.....	233

**B**

B&R Automation Device Interface.....	234
B&R CompactFlash.....	280
B&R Control Center.....	234
B&R Embedded OS Installer.....	221
B&R Key Editor.....	248
Backlight.....	167
Battery.....	50
beep codes.....	210
BIOS default settings.....	204
BIOS error signals.....	210
BIOS GM45	
ACPI configuration.....	174
Advanced.....	173
Baseboard/Panel features.....	194
Baseboard monitor.....	196
Boot.....	198
Chipset settings.....	183
Clock configuration.....	185
CPU board monitor.....	193
CPU configuration.....	182
Exit.....	203
Graphics configuration.....	180
Hard disk security master password.....	201
Hard disk security user password.....	200
I/O interface configuration.....	184
IDE configuration.....	185
Keyboard/Mouse configuration.....	192
Legacy devices.....	197
Main.....	172
Panel control.....	195
PCI configuration.....	175
PCI Express configuration.....	178
Power.....	201
Security.....	199
USB configuration.....	191
BIOS Setup keys.....	171
BIOS upgrade.....	214
Block diagrams.....	34

bus units.....	70, 73
----------------	--------

## C

Cable connections.....	142
Cables.....	301
DVI cables.....	301
SDL cables.....	304
SDL cables with 45° male connector.....	307
SDL flex cables.....	310
SDL flex cables with extender.....	313
USB cables.....	317
Card slot.....	51
CE mark.....	250
Certifications.....	251
UL.....	251
CF1.....	46
CF2.....	46
Changing the battery.....	321
Chemical resistance.....	347
Clamping blocks.....	257
Cleaning.....	323, 345
climate-controlled chamber.....	147
CMOS profile switch.....	49
COM1.....	42
CompactFlash	
Benchmark.....	283
CompactFlash cards.....	274
CompactFlash slot.....	46, 46
Complete system.....	26
Configuration	
Base system.....	24
Optional components.....	25
Connecting an external device.....	344
Control Center.....	144, 234
Creating reports.....	234
Cutout - PPC800 15".....	57
Cutout - PPC800 19".....	63

## D

dead/stuck pixels.....	167
defective pixels.....	167
deflect disturbances.....	143
Device interfaces.....	39
Dimensions	
5A5003.03.....	296
5MD900.USB2-02.....	294
Dimensions - PPC800 15".....	57
Dimensions - PPC800 19".....	63
Dimension standards.....	17
Disposal.....	16, 16
Distribution of resources	
I/O address assignments.....	211
Drives.....	83
dual-channel memory.....	67
DVI cables.....	301
DVI resolution.....	41
Dynamic wear leveling.....	274



**E**

Electromagnetic compatibility.....	250
Embedded OS Installer.....	221
EMC directive.....	250
ESD.....	14
Electrical components with a housing.....	14
Electrical components without a housing.....	14
Individual components.....	14
Packaging.....	14
ETH1.....	43
ETH2.....	44
Ethernet.....	43, 44
evaluate the temperature.....	145
Evaluating temperatures.....	144
Evaluating the battery status.....	50, 321
example programs.....	147
Expansions.....	68
External device.....	344

**F**

Fan control.....	342
Fan kit.....	133
Firmware upgrade.....	216
Flex radius.....	142
Flex radius specifications.....	142
functional ground.....	39, 143

**G**

General tolerance.....	17
GM45.....	46, 64
GM45 CPU boards.....	64
ground connection.....	39, 143
Grounding.....	39
Grounding concept.....	143
Guidelines.....	17

**H**

HDA sound.....	47
HMI Drivers & Utilities DVD.....	298
Humidity specifications.....	30

**I**

I/O address assignment.....	211
immunity to disturbances.....	143
implementation guide.....	147
Inserts.....	68
Installation	
with clamping blocks.....	137
Installing and replacing adapters.....	336
Installing and replacing bus units.....	335
Installing and replacing fan kits.....	329
Installing and replacing PCIec plug-in cards.....	338
Installing and replacing slide-in compact drives.....	325
Installing and replacing slide-in drives.....	326
Installing the side cover.....	339
Installing the slide-in compact adapter.....	327

Installing the UPS fuse kit.....	333
Installing the UPS module.....	331
Interfaces.....	39
Interrupt assignment.....	212

## K

Key Editor.....	248
-----------------	-----

## L

LED status indicators.....	49
loopback plug.....	146
Low battery.....	241, 243
Low voltage directive.....	250

## M

Main memory.....	67
Maintenance Controller Extended.....	342
Manual history.....	13
Monitor/Panel interface.....	40
Mounting compatibility.....	349
Mounting orientation.....	138
MS-DOS.....	222
MTCX.....	342
MTCX upgrade.....	49

## O

Operating system	
Windows 7.....	225
Windows Embedded Standard 2009.....	228
Windows Embedded Standard 7.....	230
Windows XP Professional.....	223

## P

Panel overlay.....	347
Parity error.....	210
PCI.....	268
PClec.....	76
PClec slot.....	51
Peripheral USB devices.....	159
plug-in card.....	76, 268
Power button.....	48
Power calculation.....	32, 33
Power connectors.....	254
power failure.....	49, 243
POWERLINK	
Card number switch.....	82
LED status indicators.....	80
Link LED.....	80
Speed LED.....	80
station number.....	82
System failure error codes.....	81
PPC800 15"	
Cutout.....	57
Dimensions.....	57
Interfaces.....	54
Power calculation.....	32

Technical data.....	54
PPC800 19"	
Cutout.....	63
Dimensions.....	63
Interfaces.....	60
Power calculation.....	33
Technical data.....	60
PPC800 interfaces 15".....	54
PPC800 interfaces 19".....	60
Product abbreviations.....	349
Proper ESD handling.....	14

## R

RAM address assignment.....	211
Relative humidity.....	30
Replacing a CompactFlash card.....	324
Replacing a PCI SATA RAID hard disk.....	340
Reset button.....	48
Resolution.....	64
Reversed battery polarity.....	238
RS232 cables.....	318

## S

Safety guidelines.....	14
Intended use.....	14
Safety notices	
Environmental conditions.....	15
Environmentally friendly disposal.....	16
Installation.....	15
Operation.....	15
Policies and procedures.....	14
Protection against electrostatic discharge.....	14
Separation of materials.....	16
Transport and storage.....	15
Screen burn-in.....	167, 167
SDL.....	40
SDL cables.....	304
SDL cables with 45° male connector.....	307
SDL flex cables.....	310
SDL flex cables with extender.....	313
SDL resolution.....	40
serial interface.....	42
Serial number sticker.....	38, 38
service life of the display.....	167
Slide-in compact slot.....	51
Slide-in slot.....	72
Smart Display Link / DVI.....	40
software versions.....	234
spacing.....	141
Standards and guidelines.....	250
Static wear leveling.....	274
supply voltage.....	39, 143
Supply voltage block diagram.....	31

## T

Technical data - PPC800 15".....	54
Technical data - PPC800 19".....	60
Temperature monitoring.....	28, 342

Temperature monitoring - Fan control.....	342
Temperature sensor locations.....	29
Temperature specifications.....	26
temperature testing.....	144
Temperature testing instructions.....	144
Temperature testing procedure.....	144
Touch screen calibration.....	158

## U

UL certification.....	251
Uninterruptible power supply.....	258
Upgrade	
BIOS.....	214
Firmware.....	216
Upgrade information.....	214
UPS.....	258
Changing the battery settings.....	238
Changing the shutdown time.....	241
Changing the UPS shutdown time.....	242
Configuring UPS system settings.....	240
Displaying UPS default values.....	237
Installing the UPS service.....	237
Low battery shutdown.....	243
Overcurrent shutdown.....	243
power failure.....	243
Saving battery settings.....	240
Standard shutdown.....	243
Updating battery settings.....	239
UPS configuration.....	237
UPS configuration.....	237
UPS fuse kit.....	333, 333
USB cables.....	317
USB flash drive.....	288
USB interfaces.....	45
USB media drive.....	292
user serial ID.....	234

## V

Viewing angles.....	348
---------------------	-----

## W

WES2009.....	228
WES7.....	231
Windows 7.....	225
Windows Embedded Standard 2009.....	228
Windows Embedded Standard 7.....	230
Windows XP Professional.....	223