6 TERMINAL BLOCKS

6.1 GENERAL INFORMATION

Modules within the B&R 2010 control generation are connected to other control elements using double row terminal blocks.

The following advantages are achieved through the special construction of the terminal blocks:

- Whether the terminal block is properly connected is indicated by means of a status LED on each and every module. This information can also be evaluated through the application program.
- The terminal block can be coded so as to prevent accidental connection to the wrong I/O module (see chapter "Project Planning and Installation" section "Dimensions and Installation").
- The terminal block is easily removed with a built-in ejection lever (see chapter "Project Planning and Installation" section "Dimensions and Installation").

To prevent damage, a stress relief should be used for the I/O cable.



6.2 TECHNICAL DATA



¹⁾ The respective limit data for the I/O modules has to be taken into consideration!