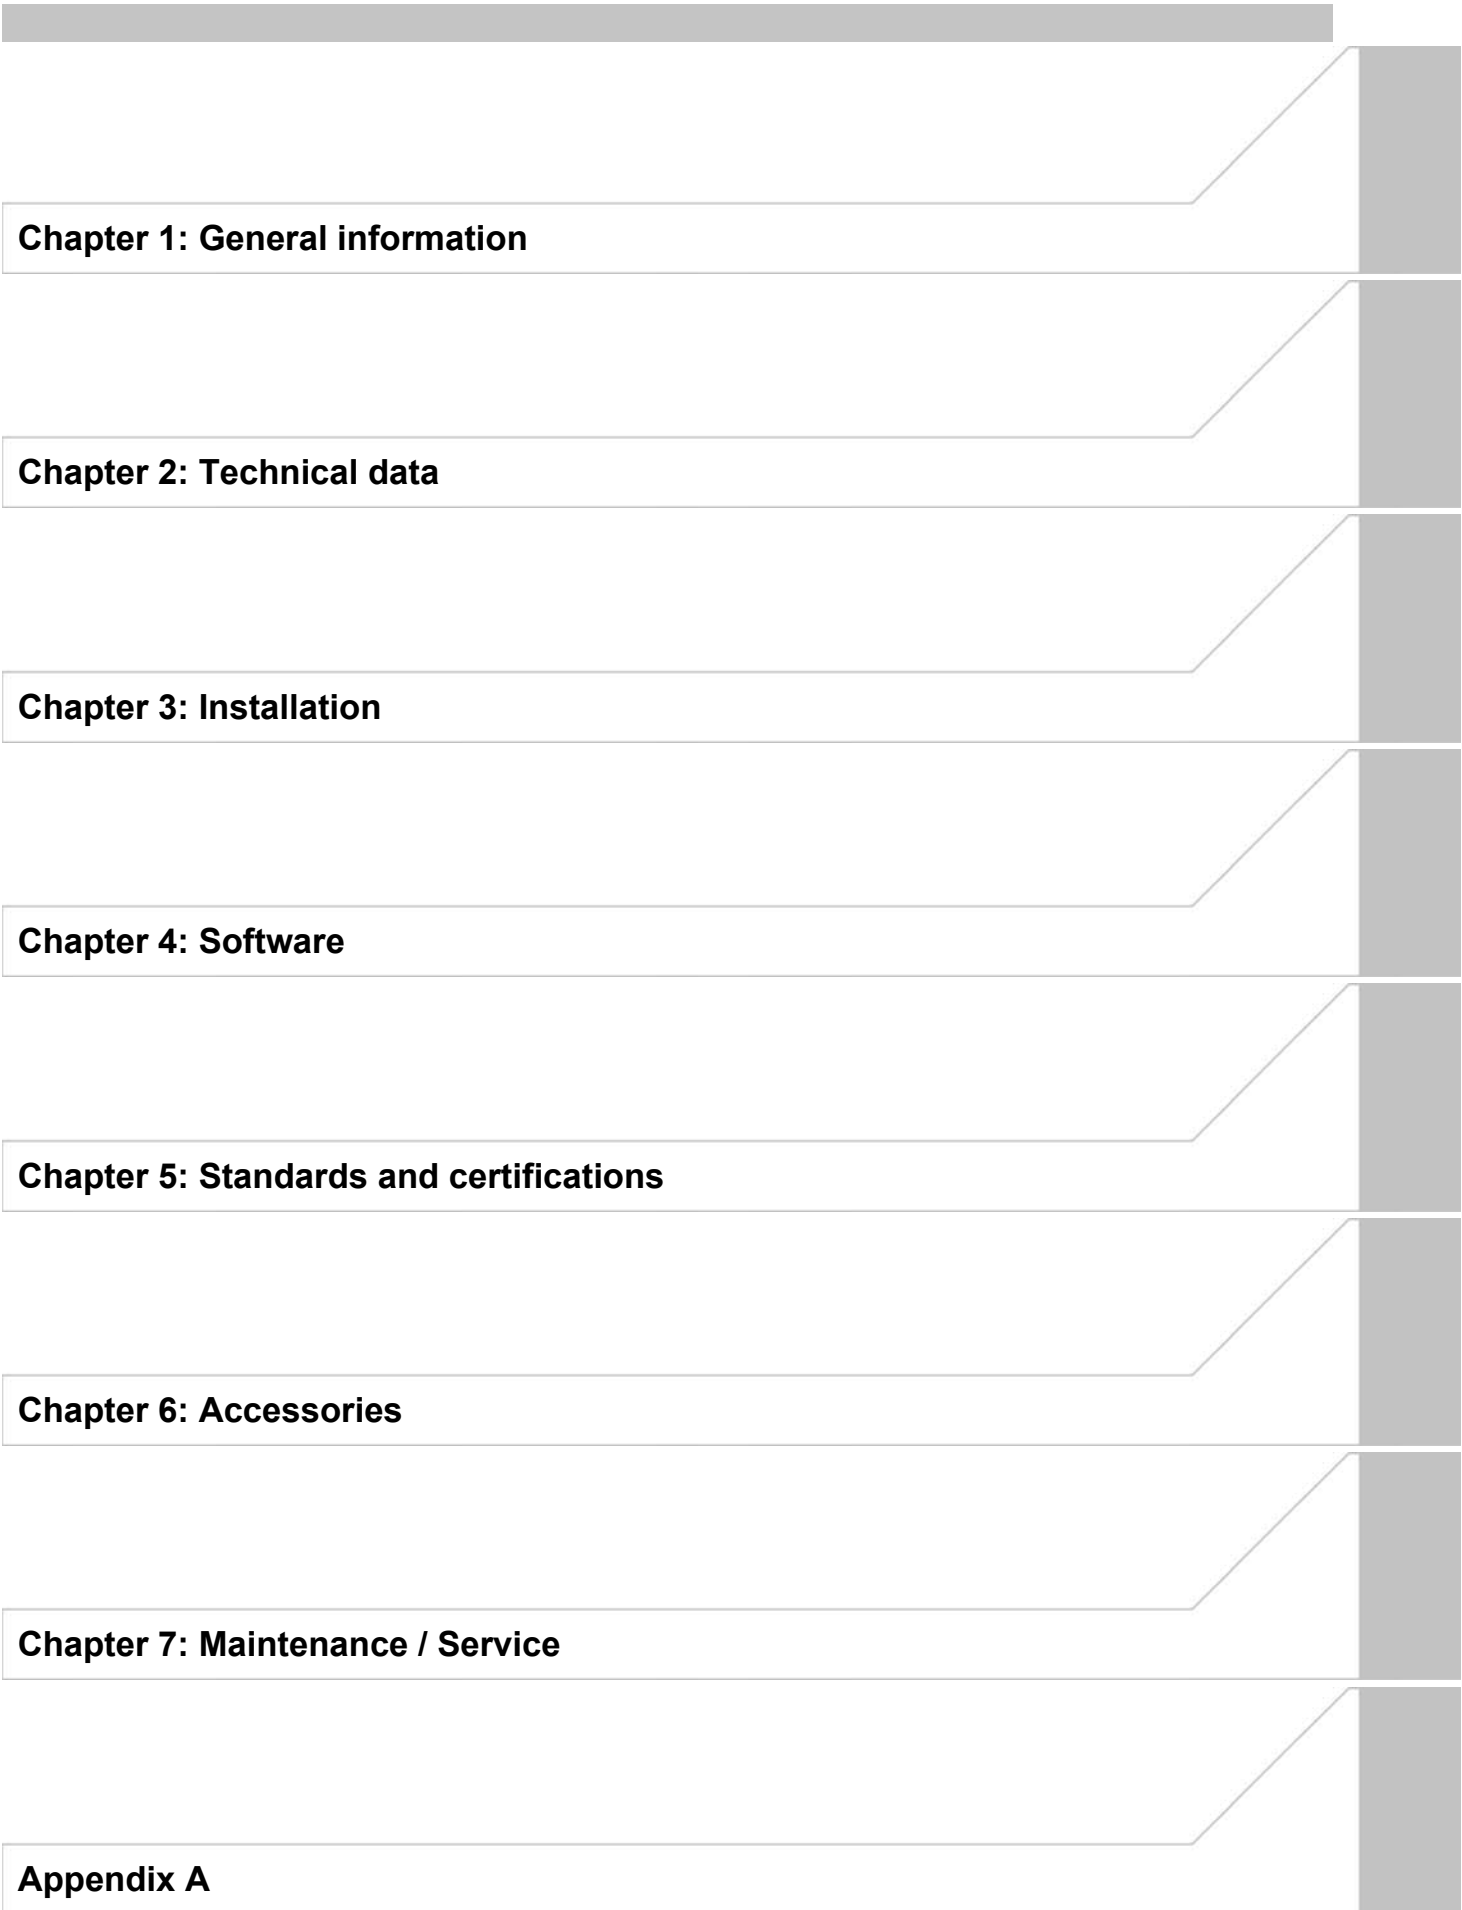


Automation PC 510

User's Manual

Version: **1.05 (April 2013)**
Model no.: **MAAPC510-ENG**

All information contained in this manual is current as of its creation/publication. We reserve the right to change the contents of this manual without notice. The information contained herein is believed to be accurate as of the date of publication; however, Bernecker + Rainer Industrie-Elektronik Ges.m.b.H. makes no warranty, expressed or implied, with regard to the products or documentation contained within this manual. In addition, Bernecker + Rainer Industrie-Elektronik Ges.m.b.H. shall not be liable for any incidental or consequential damages in connection with or arising from the furnishing, performance or use of this documentation. Software names, hardware names and trademarks are registered by their respective companies.



Chapter 1: General information

Chapter 2: Technical data

Chapter 3: Installation

Chapter 4: Software

Chapter 5: Standards and certifications

Chapter 6: Accessories

Chapter 7: Maintenance / Service

Appendix A

Chapter 1 General information.....	9
1 Manual history.....	9
2 Safety notices.....	10
2.1 Intended use.....	10
2.2 Protection against electrostatic discharge.....	10
2.2.1 Packaging.....	10
2.2.2 Guidelines for proper ESD handling.....	10
2.3 Policies and procedures.....	10
2.4 Transport and storage.....	11
2.5 Installation.....	11
2.6 Operation.....	11
2.6.1 Protection against touching electrical parts.....	11
2.6.2 Environmental conditions - Dust, humidity, aggressive gases.....	11
2.6.3 Viruses and dangerous programs.....	11
2.7 Environmentally friendly disposal.....	12
2.7.1 Separation of materials.....	12
3 Organization of safety notices.....	13
4 Guidelines.....	13
5 Overview.....	14
Chapter 2 Technical data.....	16
1 Introduction.....	16
1.1 Features.....	16
1.2 System components / configuration.....	17
1.2.1 Configuration - Base system.....	17
1.2.2 Configuration - Software and accessories.....	18
2 Fully assembled device.....	19
2.1 Temperature specifications.....	19
2.1.1 Temperature monitoring.....	19
2.1.2 Temperature sensor locations.....	19
2.2 Humidity specifications.....	20
2.3 Power management.....	21
2.3.1 Supply voltage block diagram.....	21
2.4 Device interfaces.....	22
2.4.1 Overview of device interfaces.....	22
2.4.2 +24 VDC supply voltage.....	23
2.4.3 Serial interface COM1.....	24
2.4.4 Ethernet (ETH).....	24
2.4.5 USB interfaces (USB1, 2).....	25
2.4.6 Battery.....	26
2.4.7 CompactFlash slot.....	27
2.4.8 SD memory card slot.....	27
2.4.9 Power button.....	28
2.4.10 Reset button.....	28
2.4.11 Status LEDs.....	29
2.4.12 Interface board slot.....	30
3 Individual components.....	31
3.1 System units.....	31
3.1.1 5PC510.SX01-00.....	31
3.2 CPU boards US15W.....	36
3.2.1 General information.....	36
3.2.2 Order data.....	36
3.2.3 Technical data.....	36
3.3 Main memory.....	38
3.3.1 Order data.....	38
3.3.2 Technical data.....	38
3.4 Interface boards.....	39

3.4.1 5PP5IF.CETH-00.....	39
3.4.2 5PP5IF.CHDA-00.....	41
3.4.3 5PP5IF.FETH-00.....	43
3.4.4 5PP5IF.FPLM-00.....	45
3.4.5 5PP5IF.FCAN-00.....	49
3.4.6 5PP5IF.FX2X-00.....	51
3.4.7 5PP5IF.FXCM-00.....	53
3.5 I/O boards.....	55
3.5.1 5PP5IO.GMAC-00.....	55
3.6 Drives.....	62
3.6.1 5MMHDD.0250-00.....	62
3.6.2 5MMHDD.0500-00.....	64
3.6.3 5MMSSD.0060-00.....	66
3.6.4 5MMSSD.0180-00.....	68
Chapter 3 Installation.....	70
1 Installation.....	70
1.1 Procedure.....	70
1.2 Important mounting information.....	70
1.3 Mounting orientations.....	71
1.3.1 Mounting orientation 0°.....	71
1.3.2 Mounting orientation 90°.....	71
1.3.3 Mounting orientation 180°.....	72
1.4 Spacing for air circulation.....	73
2 Cable connections.....	74
3 Grounding concept.....	75
4 General instructions for performing Temperature tests.....	76
4.1 Procedure.....	76
4.2 Evaluation of temperatures in Windows operating systems.....	76
4.2.1 Evaluation using the B&R Control Center.....	76
4.2.2 Evaluation using the BurnIn tool from Passmark.....	76
4.3 Evaluating the temperatures in an operating system other than Windows.....	79
4.4 Evaluating the measurement results.....	79
5 Connection examples.....	80
5.1 Selecting the display units.....	80
5.2 One Automation Panel 900 via onboard DVI.....	81
5.2.1 Link modules.....	81
5.2.2 Cables.....	81
5.2.3 Possible Automation Panel units, resolutions and segment lengths.....	82
5.2.4 BIOS settings.....	82
5.3 One Automation Panel 900 via onboard SDL.....	83
5.3.1 Link modules.....	83
5.3.2 Cables.....	83
5.3.3 BIOS settings.....	84
5.4 One Automation Panel 800 via onboard SDL.....	85
5.4.1 Cables.....	85
5.4.2 BIOS settings.....	85
5.5 One AP900 and one AP800 via onboard SDL.....	86
5.5.1 Link modules.....	86
5.5.2 Cables.....	86
5.5.3 BIOS settings.....	86
5.6 Four Automation Panel 900 units via onboard SDL.....	87
5.6.1 Link modules.....	87
5.6.2 Cables.....	87
5.6.3 BIOS settings.....	88
6 Connecting peripheral USB devices.....	89
6.1 Locally on the APC510.....	89

6.2 Remote connection to Automation Panel 900 via DVI.....	90
6.3 Remote connection to Automation Panel 800 / 900 via SDL.....	90
Chapter 4 Software.....	91
1 BIOS options.....	91
1.1 General information.....	91
1.2 BIOS setup and boot procedure.....	91
1.2.1 BIOS setup keys.....	93
1.3 Main.....	94
1.4 OEM features.....	95
1.4.1 CPU board features.....	96
1.4.2 System unit features.....	101
1.4.3 I/O board features.....	105
1.4.4 IF board features.....	110
1.4.5 Memory module features.....	112
1.5 Advanced.....	113
1.5.1 RAM configuration.....	114
1.5.2 Boot configuration.....	115
1.5.3 Peripheral configuration.....	116
1.5.4 IDE configuration.....	117
1.5.5 Video configuration.....	120
1.5.6 USB configuration.....	121
1.5.7 SDIO configuration.....	122
1.5.8 ACPI table/features control.....	123
1.5.9 PCI Express root port 1.....	123
1.5.10 PCI Express root port 2.....	126
1.5.11 Console redirection.....	127
1.6 Security.....	130
1.6.1 Set supervisor password.....	131
1.6.2 Set user password.....	132
1.7 Power.....	133
1.7.1 Advanced CPU control.....	134
1.7.2 Platform power management.....	137
1.8 Boot.....	138
1.8.1 Legacy.....	139
1.9 Exit.....	143
1.10 BIOS default settings.....	144
1.10.1 Main.....	144
1.10.2 OEM features.....	144
1.10.3 Advanced.....	146
1.10.4 Power.....	148
1.10.5 Boot.....	149
1.11 Distribution of resources.....	150
1.11.1 RAM address assignment.....	150
1.11.2 I/O address assignment.....	150
1.11.3 Interrupt assignments in PIC mode.....	150
1.11.4 Interrupt assignments in APIC mode.....	151
2 Upgrade information.....	152
2.1 BIOS upgrade.....	152
2.1.1 Important information.....	152
2.1.2 Using the Control Center.....	153
2.2 Firmware upgrade.....	154
2.2.1 Procedure.....	154
2.3 Upgrade problems.....	154
3 Windows XP Professional.....	155
3.1 Order data.....	155
3.2 Overview.....	155

3.3 Installation.....	155
3.4 Drivers.....	155
4 Windows 7.....	156
4.1 General information.....	156
4.2 Order data.....	156
4.3 Overview.....	156
4.4 Installation.....	157
4.5 Drivers.....	157
4.6 Special considerations, limitations.....	157
5 Windows Embedded Standard 2009.....	158
5.1 General information.....	158
5.2 Order data.....	158
5.3 Overview.....	158
5.4 Features with WES2009 (Windows Embedded Standard 2009).....	158
5.5 Touch screen driver.....	159
5.6 Installation.....	159
5.7 Drivers.....	159
5.7.1 Touch screen driver.....	159
6 Windows Embedded Standard 7.....	160
6.1 General information.....	160
6.2 Order data.....	160
6.3 Overview.....	160
6.4 Features with WES7 (Windows Embedded Standard 7).....	161
6.5 Installation.....	161
6.6 Drivers.....	161
6.6.1 Touch screen driver.....	161
7 Windows CE.....	162
7.1 General information.....	162
7.2 Order data.....	162
7.3 Overview.....	162
7.4 Windows CE 6.0 features.....	162
7.5 Requirements.....	163
7.6 Installation.....	163
7.7 B&R Embedded OS Installer.....	163
8 Automation Runtime.....	164
8.1 General information.....	164
8.2 Order data.....	164
8.3 Automation Runtime Windows (ARwin).....	164
8.4 Automation Runtime Embedded (ARemb).....	164
9 B&R Automation Device Interface (ADI) - Control Center.....	165
9.1 Functions.....	165
9.2 Installation.....	166
10 B&R Automation Device Interface (ADI) Development Kit.....	167
11 B&R Automation Device Interface (ADI) .NET SDK.....	169
12 B&R Key Editor.....	171
Chapter 5 Standards and certifications.....	173
1 Standards and guidelines.....	173
1.1 CE mark.....	173
1.2 EMC directive.....	173
1.3 Low-voltage directive.....	173
2 Certifications.....	174
2.1 UL certification.....	174
Chapter 6 Accessories.....	175
1 Replacement CMOS batteries.....	175
1.1 0AC201.91 / 4A0006.00-000.....	175

1.1.1 General information.....	175
1.1.2 Order data.....	175
1.1.3 Technical data.....	175
2 Power connectors.....	177
2.1 0TB103.9x.....	177
2.1.1 General information.....	177
2.1.2 Order data.....	177
2.1.3 Technical data.....	177
3 Interface board connection.....	178
3.1 0TB1208.3100.....	178
3.1.1 General information.....	178
3.1.2 Order data.....	178
3.1.3 Technical data.....	178
4 CompactFlash cards.....	179
4.1 General information.....	179
4.2 General information.....	179
4.2.1 Flash technology.....	179
4.2.2 Wear leveling.....	179
4.2.3 ECC error correction.....	179
4.2.4 S.M.A.R.T. support.....	179
4.2.5 Maximum reliability.....	180
4.3 5CFCRD.xxxx-06.....	181
4.3.1 General information.....	181
4.3.2 Order data.....	181
4.3.3 Technical data.....	181
4.3.4 Temperature humidity diagram.....	183
4.3.5 Dimensions.....	183
4.3.6 Benchmark.....	184
4.4 5CFCRD.xxxx-03.....	185
4.4.1 General information.....	185
4.4.2 Order data.....	185
4.4.3 Technical data.....	185
4.4.4 Temperature humidity diagram.....	187
4.4.5 Dimensions.....	187
4.5 Known problems / issues.....	188
5 USB media drive.....	189
5.1 5MD900.USB2-02.....	189
5.1.1 General information.....	189
5.1.2 Order data.....	189
5.1.3 Interfaces.....	189
5.1.4 Technical data.....	189
5.1.5 Dimensions.....	191
5.1.6 Dimensions with front cover.....	191
5.1.7 Cutout installation.....	192
5.1.8 Contents of delivery.....	192
5.1.9 Installation.....	192
5.2 5A5003.03.....	193
5.2.1 General information.....	193
5.2.2 Order data.....	193
5.2.3 Technical data.....	193
5.2.4 Dimensions.....	193
5.2.5 Contents of delivery.....	193
5.2.6 Installation.....	193
6 USB flash drive.....	195
6.1 5MMUSB.2048-01.....	195
6.1.1 General information.....	195
6.1.2 Order data.....	195

6.1.3 Technical data.....	195
6.1.4 Temperature humidity diagram.....	196
7 Cables.....	197
7.1 DVI cables.....	197
7.1.1 5CADVI.0xxx-00.....	197
7.2 SDL cables.....	200
7.2.1 5CASDL.0xxx-00.....	200
7.3 SDL cables with 45° connector.....	203
7.3.1 5CASDL.0xxx-01.....	203
7.4 SDL flex cables.....	206
7.4.1 5CASDL.0xxx-03.....	206
7.5 SDL flex cables with extender.....	209
7.5.1 5CASDL.0xx0-13.....	209
7.6 USB cables.....	213
7.6.1 5CAUSB.00xx-00.....	213
7.7 RS232 cables.....	214
7.7.1 9A0014.xx.....	214
8 HMI Drivers & Utilities DVD.....	216
8.1 5SWHMI.0000-00.....	216
8.1.1 General information.....	216
8.1.2 Order data.....	216
8.1.3 Contents (V2.10).....	216
Chapter 7 Maintenance / Service.....	219
1 Changing the battery.....	219
1.1 Battery status evaluation.....	219
1.2 Procedure.....	219
2 Replacing a CompactFlash card.....	221
Appendix A	222
1 Maintenance Controller Extended (MTCX).....	222
2 Abbreviations.....	223
3 Glossary.....	224

Chapter 1 • General information

1 Manual history

Version	Date	Change
0.10 Preliminary	26-Aug-11	First version
1.00	08-May-12	- Chapter 4 "Software" updated - Chapter 7 "Maintenance / Service" updated - Updated terminal block 0TB1208.3100 (interface board plug) in Chapter 6 "Accessories". - Added new CompactFlash cards 5CFCRD.xxxx-06 in Chapter 6 "Accessories". Discontinued CompactFlash cards 5CFCRD.xxxx-04. - Updated interface board 5PP5IF.FETH-00 on page 5PP5IF.FETH-00. - Updated hard disk 5MMHDD.0250-00 on page 5MMHDD.0250-00. - Sections "Temperature specifications" on page 19, "Humidity specifications" on page 20 and "Power management" on page 21 updated in Chapter 2 "Technical data" - Updated section "Mounting orientations" on page 71 in Chapter 3 "Installation".
1.01	18-Jun-12	Section "Cable lengths and resolutions for SDL transmission" on page 56 updated
1.05	10-Apr-13	- Section "General instructions for performing Temperature tests" on page 76 updated - Section "Organization of safety notices" on page 13 revised, descriptions for cautions and warnings updated - Updated Windows 7 Service Pack 1 (see "Windows 7" on page 156). - Updated Windows Embedded Standard 7 Service Pack 1 (see "Windows Embedded Standard 7" on page 160). - Updated "B&R Automation Device Interface (ADI) - Control Center" on page 165. - Updated "B&R Automation Device Interface (ADI) Development Kit" on page 167 to version 3.40. - Updated "B&R Automation Device Interface (ADI) .NET SDK" on page 169 to version 1.80. - Updated "B&R Key Editor" on page 171 to version 3.30. - Updated technical data for CPU boards, see "CPU boards US15W" on page 36. - Section "Maintenance Controller Extended (MTCX)" on page 222 updated - CompactFlash card 5CFCRD.032G-06 updated, see "5CFCRD.xxxx-06" on page 181. - Updated drives "5MMHDD.0500-00" on page 64, "5MMSSD.0060-00" on page 66 and "5MMSSD.0180-00" on page 68. - Added "USB media drive" on page 189. - Revised general information and technical data for I/O board "5PP5IO.GMAC-00" on page 55. - Added "Connection examples" on page 80. - Added section "HMI Drivers & Utilities DVD" on page 216. - Updated all technical data.

2 Safety notices

2.1 Intended use

Programmable logic controllers (PLCs), operating/monitoring devices (industrial PCs, Power Panels, Mobile Panels, etc.), and B&R uninterruptible power supplies have been designed, developed, and manufactured for conventional use in industrial environments. They were not designed, developed and manufactured for any use involving serious risks or hazards that could lead to death, injury, serious physical damage or loss of any kind without the implementation of exceptionally stringent safety precautions. In particular, such risks and hazards include the use of these devices to monitor nuclear reactions in nuclear power plants, their use in flight control or flight safety systems as well as in the control of mass transportation systems, medical life support systems or weapons systems.

2.2 Protection against electrostatic discharge

Electrical components that can be damaged by electrostatic discharge (ESD) must be handled accordingly.

2.2.1 Packaging

- **Electrical components with a housing**
...Do not require special ESD packaging but must be handled properly (see "Electrical components with a housing").
- **Electrical components without a housing**
...Must be protected by ESD-suitable packaging.

2.2.2 Guidelines for proper ESD handling

Electrical components with a housing

- Do not touch the connector contacts on connected cables.
- Do not touch the contact tips on circuit boards.

Electrical components without a housing

The following applies in addition to the points listed under "Electrical components with a housing":

- Any persons handling electrical components or devices with installed electrical components must be grounded.
- Components may only be touched on their narrow sides or front plate.
- Components should always be stored in a suitable medium (ESD packaging, conductive foam, etc.). Metallic surfaces are not suitable storage surfaces!
- Components should not be subjected to electrostatic discharge (e.g. through the use of charged plastics).
- Ensure a minimum distance of 10 cm from monitors and TV sets.
- Measurement devices and equipment must be grounded.
- Measurement probes on potential-free measurement devices must be discharged on sufficiently grounded surfaces before taking measurements.

Individual components

- ESD protective measures for individual components are thoroughly integrated at B&R (conductive floors, footwear, arm bands, etc.).
- These increased ESD protective measures for individual components are not necessary for customers handling B&R products.

2.3 Policies and procedures

Electronic devices are never completely failsafe. If the programmable control system, operating/monitoring device or uninterruptible power supply fails, the user is responsible for ensuring that other connected devices, e.g. motors, are brought to a secure state.

When using programmable logic controllers or operating/monitoring devices as control systems together with a Soft PLC (e.g. B&R Automation Runtime or comparable product) or Slot PLC (e.g. B&R LS251 or comparable product), the safety precautions applying to industrial control systems (e.g. the provision of safety devices such as emergency stop circuits, etc.) must be observed in accordance with applicable national and international regulations. The same applies for all other devices connected to the system, such as drives.

All tasks such as the installation, commissioning and servicing of devices are only permitted to be carried out by qualified personnel. Qualified personnel are those familiar with the transport, mounting, installation, commissioning and operation of devices who also have the appropriate qualifications (e.g. IEC 60364). National accident prevention regulations must be observed.

The safety notices, connection descriptions (type plate and documentation) and limit values listed in the technical data are to be read carefully before installation and commissioning and must be observed.

2.4 Transport and storage

During transport and storage, devices must be protected against undue stress (mechanical loads, temperature, humidity, aggressive atmospheres, etc.).

2.5 Installation

- Installation must be performed according to this documentation using suitable equipment and tools.
- Devices may only be installed by qualified personnel without voltage applied. Before installation, voltage to the control cabinet must be switched off and prevented from being switched on again.
- General safety guidelines and national accident prevention regulations must be observed.
- Electrical installation must be carried out according to applicable guidelines (e.g. line cross sections, fuses, protective ground connections).

2.6 Operation

2.6.1 Protection against touching electrical parts

To operate programmable logic controllers, operating/monitoring devices or uninterruptible power supplies, it is necessary for certain parts to carry dangerous voltage levels over 42 VDC. Touching one of these parts can result in a life-threatening electric shock. This could lead to death, severe injury or damage to equipment.

Before turning on the programmable logic controller, operating/monitoring devices or the uninterruptible power supply, the housing must be properly grounded (PE rail). Ground connections must be established even when testing or operating operating/monitoring devices or the uninterruptible power supply for a short time!

Before turning the device on, all parts that carry voltage must be securely covered. During operation, all covers must remain closed.

2.6.2 Environmental conditions - Dust, humidity, aggressive gases

The use of operating/monitoring devices (e.g. industrial PCs, Power Panels, Mobile Panels, etc.) and uninterruptible power supplies in very dusty environments should be avoided. Dust collection on the devices can affect functionality and may prevent sufficient cooling, especially in systems with active cooling systems (fans).

The presence of aggressive gases can also lead to malfunctions. When combined with high temperature and humidity, aggressive gases – e.g. with sulfur, nitrogen and chlorine components – can induce chemical reactions that can damage electronic components very quickly. Signs of the presence of aggressive gases are blackened copper surfaces and cable ends on existing equipment.

For operation in dusty or humid conditions, correctly installed (e.g. cutout installations) operating/monitoring devices like the Automation Panel or Power Panel are protected on the front. The back of all devices must be protected from dust and humidity and cleaned at suitable intervals.

2.6.3 Viruses and dangerous programs

This system is subject to potential risk each time data is exchanged or software is installed from a data medium (e.g. diskette, CD-ROM, USB flash drive, etc.), a network connection or the Internet. The user is responsible for assessing these dangers, implementing preventive measures such as virus protection programs, firewalls, etc. and making sure that software is only obtained from trusted sources.

2.7 Environmentally friendly disposal

All B&R programmable controllers, operating/monitoring devices and uninterruptible power supplies are designed to inflict as little harm as possible on the environment.

2.7.1 Separation of materials

It is necessary to separate different materials so the device can undergo an environmentally friendly recycling process.

Component	Disposal
Programmable logic controllers Operating/monitoring devices Uninterruptible power supply Batteries and rechargeable batteries Cables	Electronics recycling
Cardboard box / paper packaging	Paper / cardboard recycling
Plastic packaging	Plastic recycling

Table 1: Environmentally friendly separation of materials

Disposal must comply with applicable legal regulations.


3 Organization of safety notices

Safety notices in this manual are organized as follows:

Safety notice	Description
Danger!	Disregarding these safety guidelines and notices can be life-threatening.
Warning!	Disregarding these safety guidelines and notices can result in severe injury or substantial damage to equipment.
Caution!	Disregarding these safety guidelines and notices can result in injury or damage to equipment.
Information:	This information is important for preventing errors.

Table 2: Description of the safety notices used in this documentation

4 Guidelines



European dimension standards apply to all dimension diagrams in this document.

All dimensions are specified in mm.

Range of nominal sizes	General tolerance according to DIN ISO 2768 (medium)
Up to 6 mm	± 0.1 mm
For 6 to 30 mm	± 0.2 mm
For 30 to 120 mm	± 0.3 mm
For 120 to 400 mm	± 0.5 mm
For 400 to 1000 mm	± 0.8 mm

Table 3: Range of nominal sizes

5 Overview

Product ID	Short description	on page
Automation Runtime		
1A4600.10-5	B&R Automation Runtime ARwin, incl. License Label	164
1A4601.06-5	B&R Automation Runtime ARemb, incl. License Label	164
1A4601.06-T	B&R Automation Runtime ARemb Terminal, incl. License Label	164
Batteries		
0AC201.91	Lithium batteries 4 pieces, 3 V / 950 mAh button cell Hereby we declare that the Lithium cells contained in this shipment qualify as „partly regulated“. Handle with care. If the package is damaged, inspect cells, repack intact cells and protect cells against short circuits. For emergency information, call RENATA SA at + 41 61 319 28 27	175
4A0006.00-000	Lithium battery, 3 V / 950 mAh, button cell	175
CPU boards		
5PP5CP.US15-00	Intel Atom Z510 CPU board, 1100 MHz, single-core, 400 MHz FSB, 512 kB L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 module	36
5PP5CP.US15-01	Intel Atom Z520 CPU board, 1330 MHz, single-core, 533 MHz FSB, 512 kB L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 module	36
5PP5CP.US15-02	Intel Atom Z530 CPU board, 1600 MHz, single-core, 533 MHz FSB, 512 kB L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 module	36
CompactFlash		
5CFCRD.0064-03	CompactFlash 64 MB Western Digital (SLC)	185
5CFCRD.0128-03	CompactFlash 128 MB Western Digital (SLC)	185
5CFCRD.016G-06	CompactFlash 16 GB B&R (SLC)	181
5CFCRD.0256-03	CompactFlash 256 MB Western Digital (SLC)	185
5CFCRD.032G-06	CompactFlash 32 GB B&R (SLC)	181
5CFCRD.0512-03	CompactFlash 512 MB Western Digital (SLC)	185
5CFCRD.0512-06	CompactFlash 512 MB B&R (SLC)	181
5CFCRD.1024-03	CompactFlash 1 GB Western Digital (SLC)	185
5CFCRD.1024-06	CompactFlash 1 GB B&R (SLC)	181
5CFCRD.2048-03	CompactFlash 2 GB Western Digital (SLC)	185
5CFCRD.2048-06	CompactFlash 2 GB B&R (SLC)	181
5CFCRD.4096-03	CompactFlash 4 GB Western Digital (SLC)	185
5CFCRD.4096-06	CompactFlash 4 GB B&R (SLC)	181
5CFCRD.8192-03	CompactFlash 8 GB Western Digital (SLC)	185
5CFCRD.8192-06	CompactFlash 8 GB B&R (SLC)	181
DVI cable		
5CADVI.0018-00	DVI-D cable, 1.8 m.	197
5CADVI.0050-00	DVI-D cable, 5 m.	197
5CADVI.0100-00	DVI-D cable, 10 m.	197
Drives		
5MMHDD.0250-00	250 GB SATA hard disk replacement for 5AC801.HDDI-03 and 5ACPCI.RAIC-05; Remark: Please see manual for proper use of the hard disk.	62
5MMHDD.0500-00	500 GB SATA hard disk replacement for 5AC801.HDDI-04, 5AC901.CHDD-01 and 5ACPCI.RAIC-06; Remark: Please see manual for proper use of the hard disk.	64
5MMSSD.0060-00	60 GB SATA SSD (MLC); Spare part for 5AC801.SSDI-01; SSD for 5PP5IO.GMAC-00; Remark: Please see manual for proper use of the SSD.	66
5MMSSD.0180-00	180 GB SATA SSD (MLC); Spare part for 5AC801.SSDI-02; SSD for 5PP5IO.GMAC-00; Remark: Please see manual for proper use of the SSD.	68
I/O board		
5PP5IO.GMAC-00	APC510 I/O board connections for 2x USB 2.0, 1x RS232/422/485, HDA sound, Smart Display Link/DVI-D; optional Hard Disk	55
Interface boards		
5PP5IF.CETH-00	PP500 interface board; connection for 1x Ethernet 10/100/1000	39
5PP5IF.CHDA-00	PP500 interface board; connection for 1x MIC, 1x Line IN, 1x Line OUT	41
5PP5IF.FCAN-00	PP500 interface board; connection for 1x CAN master, 512 kB SRAM; order plug separately (cage clamp: 0TB1208.3100)	49
5PP5IF.FETH-00	PP500 interface board; connection for 1x Ethernet 10/100/1000, 512 kB SRAM	43
5PP5IF.FPLM-00	PP500 interface board; connections for 2x POWERLINK (with integrated hub); 512 kB SRAM.	45
5PP5IF.FX2X-00	PP500 interface board; connection for 1x X2X master, 512 kB SRAM; order plug separately (cage clamp: 0TB1208.3100)	51
5PP5IF.FXCM-00	PP500 interface board; connection for 1x CAN master, 1x X2X master, 512 kByte SRAM; order plug separately (cage clamp: 0TB1208.3100)	53
Main memory		
5MMDDR.0512-01	SO-DIMM DDR2 RAM 512 MB PC2-5300	38
5MMDDR.1024-01	SO-DIMM DDR2 RAM 1024 MB PC2-5300	38
5MMDDR.2048-01	SO-DIMM DDR2 RAM 2048 MB PC2-5300	38
Other		
5SWHMI.0000-00	HMI Drivers & Utilities DVD	216
RS232 cable		
9A0014.02	RS232 extension cable for remote operating of a display unit with touch screen, 1.8 m.	214
9A0014.05	RS232 extension cable for remote operating of a display unit with touch screen, 5 m.	214
9A0014.10	RS232 extension cable for remote operating of a display unit with touch screen, 10 m.	214
SDL cable - 45° connector		
5CASDL.0018-01	SDL cable; 45° connector, 1.8 m.	203
5CASDL.0050-01	SDL cable; 45° connector, 5 m.	203
5CASDL.0100-01	SDL cable; 45° connector, 10 m.	203
5CASDL.0150-01	SDL cable; 45° connector, 15 m.	203

Product ID	Short description	on page
SDL cables		
5CASDL.0018-00	SDL cable, 1.8 m.	200
5CASDL.0050-00	SDL cable, 5 m.	200
5CASDL.0100-00	SDL cable, 10 m.	200
5CASDL.0150-00	SDL cable, 15 m.	200
5CASDL.0200-00	SDL cable, 20 m.	200
5CASDL.0250-00	SDL cable, 25 m.	200
5CASDL.0300-00	SDL cable, 30 m.	200
SDL flex cable		
5CASDL.0018-03	SDL Cable flex, 1.8 m.	206
5CASDL.0050-03	SDL cable flex, 5 m.	206
5CASDL.0100-03	SDL cable flex, 10 m.	206
5CASDL.0150-03	SDL cable flex, 15 m.	206
5CASDL.0200-03	SDL cable flex, 20 m.	206
5CASDL.0250-03	SDL cable flex, 25 m.	206
5CASDL.0300-03	SDL cable flex, 30 m.	206
5CASDL.0300-13	SDL cable flex with extender, 30 m.	209
5CASDL.0400-13	SDL cable flex with extender, 40 m.	209
5CASDL.0430-13	SDL Cable flex with extender, 43 m.	209
System units		
5PC510.SX01-00	APC510 System Unit connections for 1x RS232, 2x USB 2.0, 1x Ethernet 10/100/1000; can be expanded with interface board; I/O board (5PP510.GMAC-00) and 24 VDC plug for supply voltage (screw clamp: 0TB103.9; cage clamp: 0TB103.91) must be ordered separately.	31
Terminal blocks		
0TB103.9	Connector, 24 VDC, 3-pin female, screw clamps 3.31 mm ² , protected against vibration by the screw flange	177
0TB103.91	Connector, 24 VDC, 3-pin female, cage clamps 3.31 mm ² , protected against vibration by the screw flange	177
0TB1208.3100	Connector, 8-pin, cage clamp, 1 mm ² , protected against vibration by the screw flange.	178
USB accessories		
5A5003.03	Front cover, for remote CD-ROM drive 5A5003.02 and USB 2.0 drive combination 5MD900.USB2-00, 5MD900.USB2-01 and 5MD900.USB2-02.	193
5MD900.USB2-02	USB 2.0 DVD-R/RW DVD+R/RW drive, CompactFlash slot (Type II), USB connector (Type A on front, Type B on back), 24 VDC, please order 0TB103.9 screw clamp or 0TB103.91 cage clamp separately	189
5MMUSB.2048-01	USB 2.0 flash drive, 2048 MB, B&R	195
USB cable		
5CAUSB.0018-00	USB 2.0 connecting cable type A - type B, 1.8 m.	213
5CAUSB.0050-00	USB 2.0 connecting cable type A - type B, 5 m.	213
Windows 7 Professional/Ultimate		
5SWWI7.0100-ENG	Microsoft OEM Windows 7 Professional 32-bit, DVD, English. Only available with a new device.	156
5SWWI7.0100-GER	Microsoft OEM Windows 7 Professional 32-bit, DVD, German. Only available with a new device.	156
5SWWI7.0300-MUL	Microsoft OEM Windows 7 Ultimate 32-bit, DVD, multilanguage. Only available with a new device.	156
5SWWI7.1100-ENG	Microsoft OEM Windows 7 Professional 32-bit, Service Pack 1, DVD, English. Only available with a new device.	156
5SWWI7.1100-GER	Microsoft OEM Windows 7 Professional 32-bit, Service Pack 1, DVD, German. Only available with a new device.	156
5SWWI7.1300-MUL	Microsoft OEM Windows 7 Ultimate 32-bit, Service Pack 1, DVD, multilanguage. Only available with a new device.	156
Windows CE 6.0		
5SWWCE.0837-ENG	Microsoft OEM Windows CE 6.0 Professional, English; for APC510; please order CompactFlash separately (minimum 128 MB).	162
Windows Embedded Standard 2009		
5SWWXP.0737-ENG	Microsoft OEM Windows Embedded Standard 2009, English; for PP500; please order CompactFlash separately (minimum 1 GB).	158
Windows Embedded Standard 7		
5SWWI7.0537-ENG	Microsoft OEM Windows Embedded Standard 7 32-bit, English; for APC510; please order CompactFlash separately (minimum 8 GB).	160
5SWWI7.0737-MUL	Microsoft OEM Windows Embedded Standard 7 Premium 32-bit, multilanguage; for APC510; please order CompactFlash separately (minimum 8 GB).	160
5SWWI7.1537-ENG	Microsoft OEM Windows Embedded Standard 7 32-bit, Service Pack 1, English; for APC510; please order CompactFlash separately (minimum 16 GB).	160
5SWWI7.1737-MUL	Microsoft OEM Windows Embedded Standard 7 Premium 32-bit, Service Pack 1, multilanguage; for APC510; please order CompactFlash separately (minimum 16 GB).	160
Windows XP Professional		
5SWWXP.0600-ENG	Microsoft OEM Windows XP Professional Service Pack 3, CD, English. Only available with a B&R device.	155
5SWWXP.0600-GER	Microsoft OEM Windows XP Professional Service Pack 3, CD, German. Only available with a device.	155
5SWWXP.0600-MUL	Microsoft OEM Windows XP Professional Service Pack 3, CD, multilanguage. Only available with a B&R device.	155

Chapter 2 • Technical data

1 Introduction

The APC510 and APC511 are the first choices when it comes to running applications where good performance needs to be combined with particularly compact dimensions. These devices are based on Intel Atom processors, which are optimized for minimum power dissipation. In the consumer area, this means extended battery life for laptops; for usage in industrial environments, however, the strength of Atom processors lies in their ability to reach the upper end of the temperature scale without requiring the use of fans. B&R is able to draw on many years of experience in the area of heat balancing, which makes it possible to operate even selected Core2 Duo processors fanless. The most important factor considered when designing the APC510 and APC511 was keeping their dimensions to an absolute minimum, and this meant doing away with the space normally taken up by fans. Another factor that contributes to their compact design is the absence of slots for PCI and PCI Express cards, as well as for standard drives such as CD/DVD-ROM. Despite this, however, these Automation PCs are not limited at all in terms of modularity and flexibility. A gigabit Ethernet interface, USB 2.0 ports and serial interfaces are all part of the standard package, along with sound output (High Definition Audio) and a removable external CompactFlash card.

The APC510 builds on the proven design of the Automation PC series. Its compact dimensions and minimal footprint means that it requires very little space in the control cabinet. The CompactFlash slot, CMOS battery as well as the power and reset buttons are easily accessible behind the front cover.

1.1 Features

- Intel® Atom™ Z510, Z520 or Z530 processor
- Up to 2 GB SDRAM
- 2x USB 2.0
- 1x RS232
- 1x Ethernet 10/100/1000 Mbit/s
- Optional interface boards
- 1 CompactFlash slot (type I)
- 24 VDC supply voltage
- Operation without a fan or heat sink
- BIOS (Insyde)
- Real-time clock (RTC, battery-backed)

1.2 System components / configuration

The APC510 system can be assembled to meet individual requirements and operating conditions.

The following components are absolutely essential for operation:

- System unit
- CPU board
- Main memory
- I/O board
- Drive (mass storage device such as CompactFlash card) for the operating system
- Power connector (terminal block)

1.2.1 Configuration - Base system

Base system configuration	
System unit	
A system unit consists of a housing and mainboard.	 5PC510.SX01-00
CPU board - Main memory	
CPU board	Select one
	5PP5CP.US15-00 - 1100 MHz 5PP5CP.US15-01 - 1330 MHz 5PP5CP.US15-02 - 1600 MHz
Main memory	Select one
	5MMDDR.0512-01 5MMDDR.1024-01 5MMDDR.2048-01
I/O board	Select one
	5PP5IO.GMAC-00

Figure 1: Base system configuration

1.2.2 Configuration - Software and accessories

Configuration - Software and accessories											
System unit											
A system unit consists of a housing and mainboard.	 5PC510.SX01-00										
Optional drives	Select one										
	5MMSSD.0060-00 - SATA-SSD 60 GB 5MMSSD.0180-00 - SATA-SSD 180 GB 5MMHDD.0250-00 - SATA-HDD 250 GB 5MMHDD.0500-00 - SATA-HDD 500 GB										
Interface board	Select one										
	5PP5IF.CETH-00 - 1x ETH 10/100/100 5PP5IF.CHDA-00 - 1x HDA sound 5PP5IF.FETH-00 - 1x ETH 10/100/100, SRAM 5PP5IF.FPLM-00 - 2x POWERLINK, SRAM 5PP5IF.FCAN-00 - 1x CAN, SRAM 5PP5IF.FX2X-00 - 1x X2X, SRAM 5PP5IF.FXCM-00 - 1x CAN, 1x X2X, SRAM										
CompactFlash	Select one										
	5CFCRD.0512-06 5CFCRD.4096-06 5CFCRD.1024-06 5CFCRD.8192-06 5CFCRD.2048-06 5CFCRD.016G-06 5CFCRD.032G-06										
USB accessories	Select one										
	5MMUSB.2048-01										
Software	Select one										
     	<table><tr><td>Windows XP 5SWWXP.0600-ENG 5SWWXP.0600-GER 5SWWXP.0600-MUL</td><td>Windows 7 5SWWI7.1100-ENG 5SWWI7.1100-GER 5SWWI7.1300-MUL</td><td>Automation Runtime 1A4600.10-5 1A4601.06-5 1A4601.06-T</td></tr><tr><td>Windows Embedded Standard 2009 5SWWXP.0737-ENG</td><td>Windows Embedded Standard 7 5SWWI7.1537-ENG 5SWWI7.1737-MUL</td><td></td></tr><tr><td>Windows CE 6.0 5SWWCE.0837-ENG</td><td></td><td></td></tr></table>	Windows XP 5SWWXP.0600-ENG 5SWWXP.0600-GER 5SWWXP.0600-MUL	Windows 7 5SWWI7.1100-ENG 5SWWI7.1100-GER 5SWWI7.1300-MUL	Automation Runtime 1A4600.10-5 1A4601.06-5 1A4601.06-T	Windows Embedded Standard 2009 5SWWXP.0737-ENG	Windows Embedded Standard 7 5SWWI7.1537-ENG 5SWWI7.1737-MUL		Windows CE 6.0 5SWWCE.0837-ENG			
Windows XP 5SWWXP.0600-ENG 5SWWXP.0600-GER 5SWWXP.0600-MUL	Windows 7 5SWWI7.1100-ENG 5SWWI7.1100-GER 5SWWI7.1300-MUL	Automation Runtime 1A4600.10-5 1A4601.06-5 1A4601.06-T									
Windows Embedded Standard 2009 5SWWXP.0737-ENG	Windows Embedded Standard 7 5SWWI7.1537-ENG 5SWWI7.1737-MUL										
Windows CE 6.0 5SWWCE.0837-ENG											
Terminal blocks	Select 1 each										
	Power connectors 0TB103.9 0TB103.91	Interface board connection 0TB1208.3100									

Figure 2: Configuration - Software and accessories

2 Fully assembled device

2.1 Temperature specifications

Temperature specifications must take both the permissible temperature range of the system unit as well as that of the installed components into consideration. The latter can be found in the technical data for the individual components.

The permissible temperature ranges based on the type of installation must also be taken into consideration. For more information about this, refer to section "Mounting orientations" on page 71.

Information regarding worst-case conditions

- Thermal Analysis Tool (TAT V2.02) from Intel for simulating a 100% processor load
- BurnInTest tool (BurnInTest V4.0 Pro from Passmark Software) for simulating a 100% load on the interface via loop back adapters (serial interfaces, USB ports)
- Maximum system expansion and power consumption

2.1.1 Temperature monitoring

Sensors monitor temperature values at various places inside the APC510 (CPU, interfaces, interface board, I/O board). The location of the temperature sensors can be seen in "Figure 3: Temperature sensor locations" on page 19. The values listed in the table represent the defined maximum temperature¹⁾ for the respective measurement point. An alarm is not triggered if this temperature is exceeded. These temperatures can be read in BIOS or in approved Microsoft Windows operating systems together with Automation Runtime and the B&R Control Center.

2.1.2 Temperature sensor locations

Sensors monitor temperature values at various locations (USB ports, main memory) inside the APC510. These temperatures²⁾ can be read in Microsoft Windows operating systems using the B&R Control Center³⁾ or in Automation Runtime using data points in Automation Studio.

For applications that don't use Windows, the temperatures can be evaluated using the B&R implementation guide. In addition to the implementation guide, there are also programs available in MS-DOS.

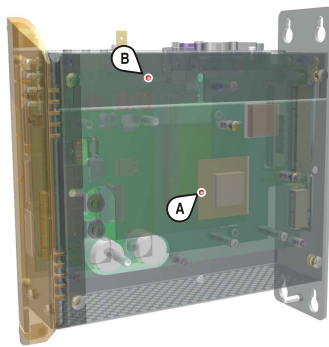


Figure 3: Temperature sensor locations

Position	Measurement point for	Measurement	Max. specified
A	CPU	Ambient temperature of the processor (sensor integrated in the processor)	100°C: 5PP5CP.US15-00, 5PP5CP.US15-01 90°C: 5PP5CP.US15-02
A	Main memory	Ambient temperature of the main memory (sensor integrated in the processor)	80°C
B	Interfaces	Temperature of the interfaces (sensor integrated next to the USB ports).	80°C
	Interface board	Temperature of an interface board (sensor integrated on the interface board)	Board-specific
	I/O board	Temperature of an I/O board (sensor integrated on the I/O board)	Board-specific

Table 4: Temperature sensor locations

1) The temperature measured approximates the immediate ambient temperature but may also be influenced by neighboring components.

2) The temperature measured approximates the immediate ambient temperature but may also be influenced by neighboring components.

3) The B&R Control Center is included in the ADI driver, which is available in the Downloads section of the B&R website (www.br-automation.com).

2.2 Humidity specifications

The following table displays the minimum and maximum relative humidity values for the individual components that are relevant for the humidity limitations of a fully assembled device. The lowest and highest common values are always used when establishing these limits.

Component		Operation ¹⁾	Storage / Transport ¹⁾
System units		5 to 90%	5 to 95%
CPU boards US15W		5 to 90%	5 to 95%
Main memory for CPU boards		10 to 90%	5 to 95%
Interface boards	5PP5IF.CETH-00	5 to 90%	5 to 95%
	5PP5IF.CHDA-00	5 to 90%	5 to 95%
	5PP5IF.FETH-00	5 to 90%	5 to 95%
	5PP5IF.FPLM-00	5 to 90%	5 to 95%
	5PP5IF.FCAN-00	5 to 90%	5 to 95%
	5PP5IF.FETH-00	5 to 90%	5 to 95%
	5PP5IF.FX2X-00	5 to 90%	5 to 95%
	5PP5IF.FXCM-00	5 to 90%	5 to 95%
I/O boards	5PP5IO.GMAC-00	5 to 90%	5 to 95%
Drives	5MMHDD.0250-00	5 to 95%	5 to 95%
	5MMHDD.0500-00	5 to 95%	5 to 95%
	5MMSSD.0060-00	5 to 95%	5 to 95%
	5MMSSD.0180-00	5 to 95%	5 to 95%
Accessories	5CFCRD.xxxx-06 CompactFlash cards	85%	85%
	5CFCRD.xxxx-04 CompactFlash cards	85%	85%
	5CFCRD.xxxx-03 CompactFlash cards	8 to 95%	8 to 95%
	5MMUSB.2048-01 flash drive	10 to 90%	5 to 90%

Table 5: Overview of humidity specifications for individual components

1) Specifications correspond to non-condensing relative humidity.

The specifications listed correspond to the relative humidity at an ambient temperature of 30°C. More detailed information about specific temperature-dependent humidity values can be found in the technical data for the individual components.

2.3 Power management

2.3.1 Supply voltage block diagram

The following block diagram illustrates the simplified structure of the supply voltage for system units.

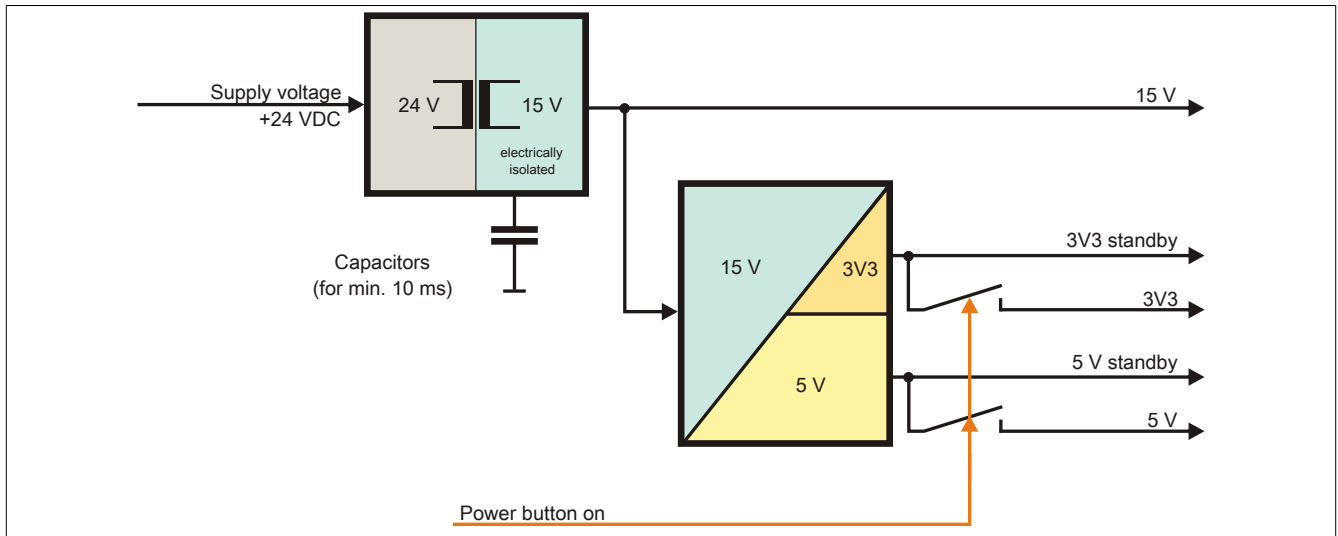


Figure 4: Supply voltage for system units

Description

15 V is generated from the supply voltage using a DC-to-DC converter. This electrically isolated 15 V supplies additional DC-to-DC converters that generate the remaining voltage.

After the system is turned on (e.g. using the power button), the 3V3 and 5 V voltages are active on the system.

2.4 Device interfaces

2.4.1 Overview of device interfaces

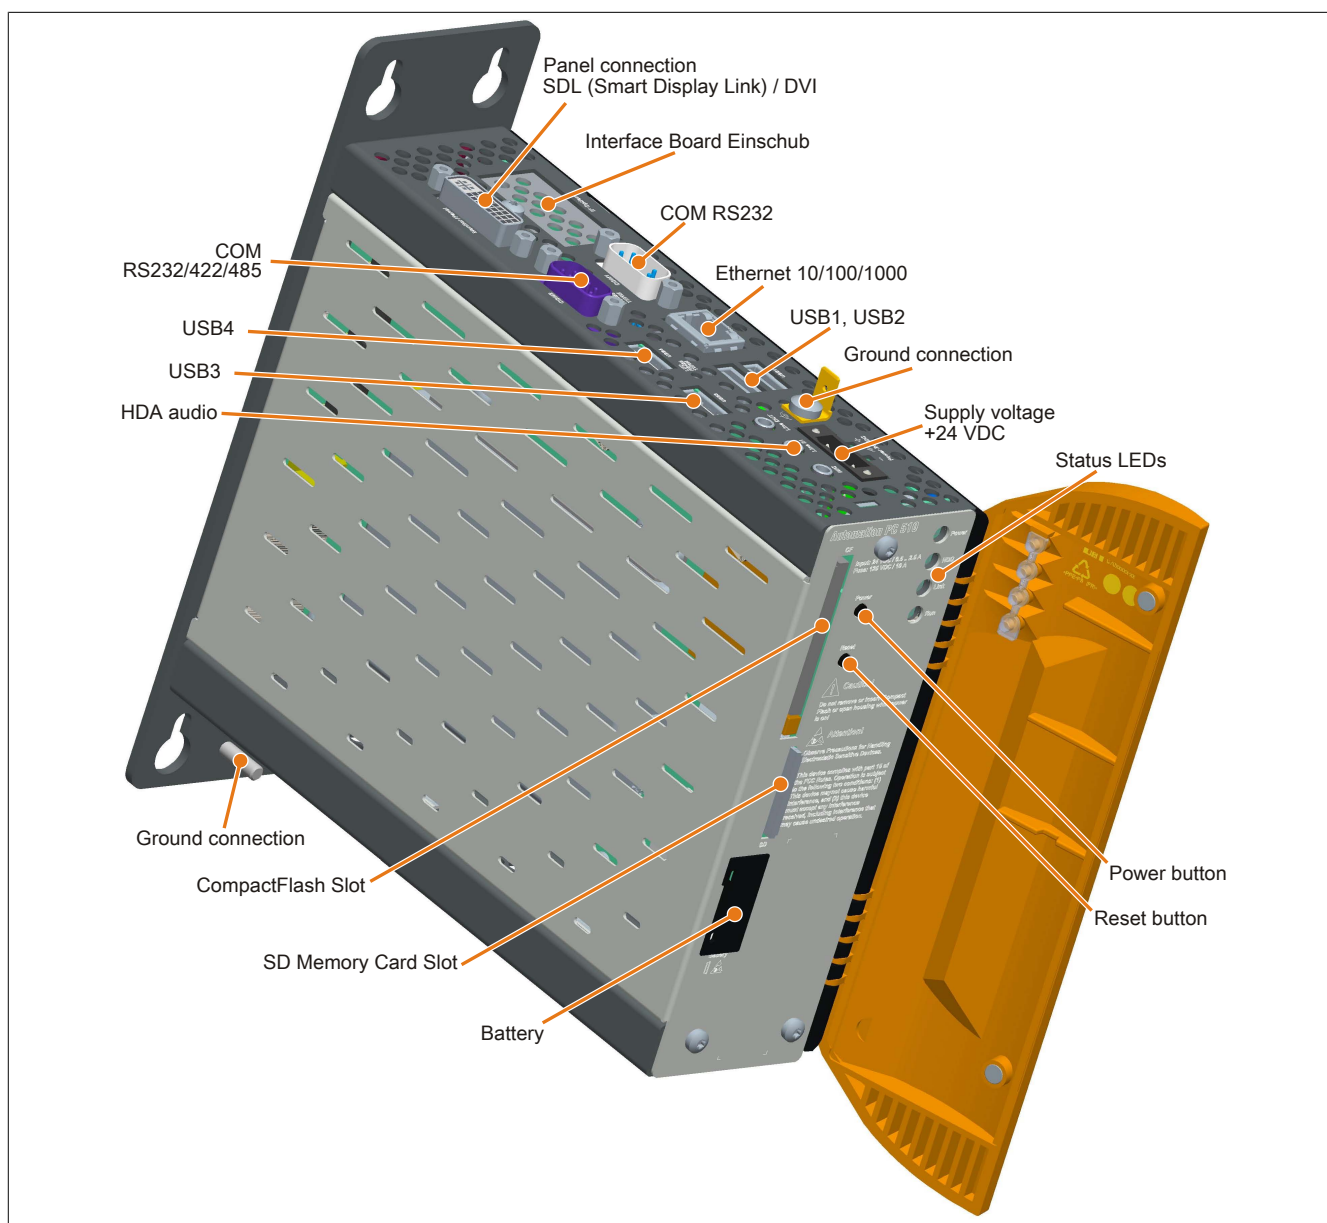


Figure 5: Overview of interfaces with an inserted I/O board

2.4.2 +24 VDC supply voltage

The 3-pin socket required for the supply voltage connection is not included in delivery. It can be ordered from B&R using model number 0TB103.9 (screw clamp) or 0TB103.91 (cage clamp).

The pinout can be found either in the following table or printed on the APC510 housing. The supply voltage is protected internally by a soldered fuse (10 A, fast-acting) to prevent damage to the device in the event of an overload (fuse replacement necessary) or if the voltage supply is connected incorrectly (reverse polarity protection - fuse replacement not necessary). The device must be returned to B&R for repairs if the fuse is blown in the event of an error.

Supply voltage	
Protected against reverse polarity	
Pin	Description
1	+
2	Functional ground
3	-
Model number	Short description
Terminal blocks	
0TB103.9	Connector 24 V 5.08 3-pin screw clamp
0TB103.91	Connector 24 V 5.08 3-pin cage clamp

3-pin, male

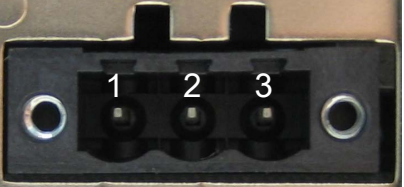


Table 6: Supply voltage connection 24 VDC

2.4.2.1 Grounding

Caution!

The functional ground (pin 2) must be connected to ground (e.g. control cabinet) using the shortest possible path. Using the largest possible conductor cross section on the supply plug is recommended.

The ground connection is located on the bottom of the APC510 system.

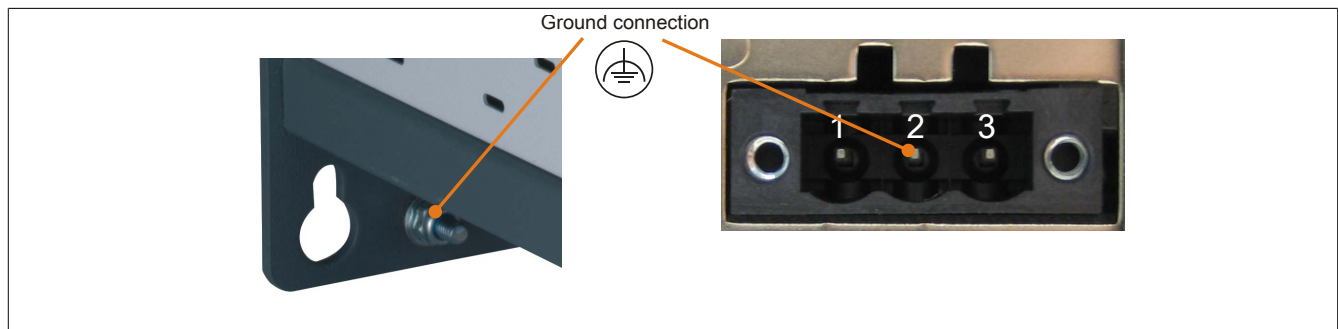


Figure 6: Ground connection

The M4 self-locking nut can be used, for example, to fasten a copper strip to a central grounding point in the control cabinet or system where the APC510 is installed. The largest possible conductor cross section should be used (at least 2.5 mm²).

2.4.3 Serial interface COM1

Serial interface COM1		
RS232		
Type	RS232, modem-capable, not electrically isolated	
UART	16550-compatible, 16-byte FIFO	
Transfer rate	Max. 115 kbaud	
Cable length	Max. 15 meters	
Pin	Assignment	
1	DCD	
2	RXD	
3	TXD	
4	DTR	
5	GND	
6	DSR	
7	RTS	
8	CTS	
9	RI	

9-pin DSUB connector

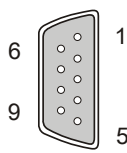


Table 7: Pinout - COM1


2.4.4 Ethernet (ETH)

This Ethernet controller is integrated in the CPU board and connected to external devices via the CPU board.

Ethernet connection (ETH)		
Controller	Intel 82574	
Cabling	S/STP (Cat 5e)	
Transfer rate	10/100/1000 Mbit/s ¹⁾	
Cable length	Max. 100 m (min. Cat 5e)	
Speed LED	On	Off
Green	100 Mbit/s	10 Mbit/s ²⁾
Orange	1000 Mbit/s	-
Link LED	On	Off
Orange	Link (Ethernet network connection available)	Activity (blinking - data transfer in progress)

RJ45 twisted pair (10BaseT/100BaseT), female

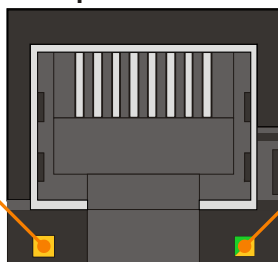1



Link LED

Speed LED

Table 8: Ethernet connection (ETH)

1) Switching takes place automatically.

2) The 10 Mbit/s transfer speed / connection only exists if the Link LED is also lit at the same time.

Driver support

A special driver is required in order to operate the Intel 82574 Ethernet controller. Drivers for approved operating systems are available in the Downloads section of the B&R website (www.br-automation.com).

Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

2.4.5 USB interfaces (USB1, 2)

The APC510 features a USB 2.0 (Universal Serial Bus) host controller with multiple USB ports, 2 of which are accessible externally for easy user access.

Warning!

Peripheral USB devices can be connected to these USB ports. Due to the vast number of USB devices available on the market, B&R cannot guarantee their performance. B&R does ensure the performance of all USB devices that they provide.

Caution!

Because this interface is designed according to general PC specifications, extreme care should be exercised with regard to EMC, cable routing, etc.

USB1, 2

Universal Serial Bus (USB1, USB2) ¹⁾		2x USB type A, female 
Type	USB 2.0	
Design	Type A	
Transfer rate	Low speed (1.5 Mbit/s), full speed (12 Mbit/s), high speed (480 Mbit/s)	
Current load ²⁾ USB1, USB2	Max. 1 A	
Cable length	Max. 5 m (without hub)	

Table 9: USB1, USB2 connections

- 1) The interfaces, etc. available on the device or module have been numbered as such for easy identification. This numbering may differ from that used by the particular operating system.
- 2) Each USB port is protected by a maintenance-free "USB current-limiting circuit breaker" (max. 500 mA or 1 A).

2.4.6 Battery

The lithium battery (3 V, 950 mAh) buffers both the internal real-time clock (RTC) as well as data stored in SRAM on interface cards. It is located behind the black cover on the front of the device. The battery's buffer lifespan is at least 4 years (at 50°C, 8.5 µA for the components being supplied and a self-discharge of 40%; if an interface board with SRAM is installed, then the lifespan is reduced to 2½ years). The battery has a limited service life and should be replaced regularly (after the specified service life at the latest).

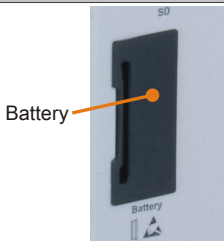
Battery		
Battery		
Type	Renata 950 mAh	
Removable	Yes, accessible from the outside	
Service life	4 years ¹⁾	
Model number	Short description	
	Batteries	
0AC201.91	Lithium batteries, 4 pcs., 3 V / 950 mAh, button cell	
4A0006.00-000	Lithium battery, 1 pc., 3 V / 950 mAh, button cell	

Table 10: Battery

1) At 50°C, 8.5 µA of the supplied components and a self-discharge of 40%. If an interface board with SRAM has been installed, the service life is 2½ years.

Battery status evaluation

The status of the battery is determined immediately after the device is started and subsequently checked by the system every 24 hours. During this measurement, the battery is subjected to a brief load (approximately 1 second) and then evaluated. Once determined, the battery status is displayed in BIOS (under OEM features -> CPU board features -> CPU board monitor) and in the B&R Control Center (ADI driver); it can also be read in a customer application using the ADI library.

Battery status	Description
N/A	The hardware or firmware being used is too old and does not support reading the battery status.
GOOD	Data buffering is intact.
BAD	From the point when battery capacity is recognized as insufficient (BAD), data buffering is intact for approximately another 500 hours

Table 11: Battery status

From the point when battery capacity is recognized as insufficient, data buffering is intact for approximately another 500 hours. When replacing the battery, data is buffered for approximately 10 minutes by a gold leaf capacitor.

2.4.7 CompactFlash slot

This CompactFlash slot is connected to the chipset internally via IDE PATA. Type I CompactFlash cards are supported.

CompactFlash slot	
Connection	PATA master
CompactFlash Type	Type I
Model number	Short description
CompactFlash	
5CFCRD.0512-06	CompactFlash 512 MB B&R
5CFCRD.1024-06	CompactFlash 1024 MB B&R
5CFCRD.2048-06	CompactFlash 2048 MB B&R
5CFCRD.4096-06	CompactFlash 4096 MB B&R
5CFCRD.8192-06	CompactFlash 8192 MB B&R
5CFCRD.016G-06	CompactFlash 16 GB B&R
5CFCRD.032G-06	CompactFlash 32 GB B&R

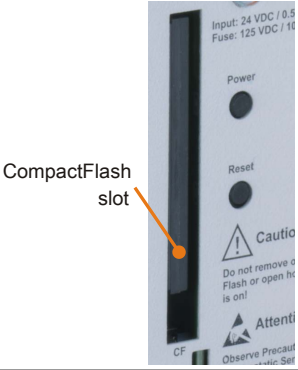


Table 12: CompactFlash slot

Warning!

Power must be turned off before inserting or removing CompactFlash cards.

2.4.8 SD memory card slot

The SD memory card slot only supports SD memory cards, not SDHC cards. In addition, SD memory cards can only be used as mass storage devices; booting from SD memory cards is not possible.

SD memory card slot	

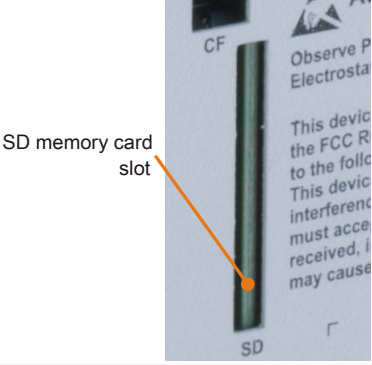


Table 13: SD memory card slot

2.4.9 Power button

The power button provides a wide range of ATX power supply functions.

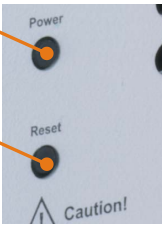
Power button	
The power button acts like the on/off switch on a normal desktop PC with an ATX power supply: Press and release ... Switches on the APC510 or shuts down the operating system and switches off the APC510 Press and hold ... Switches off the ATX power supply without shutting down the APC510 (data could be lost!) Pressing the power button does not reset the MTCX processor.	Power button Reset button 

Table 14: Power button

2.4.10 Reset button

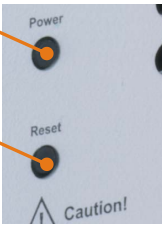
Reset button	
Pushing the reset button triggers a hardware and PCI reset. The APC510 is restarted (cold restart). Pressing the reset button does not reset the MTCX processor.	Power button Reset button 


Table 15: Reset button

Warning!

A system reset can result in lost data!

2.4.11 Status LEDs

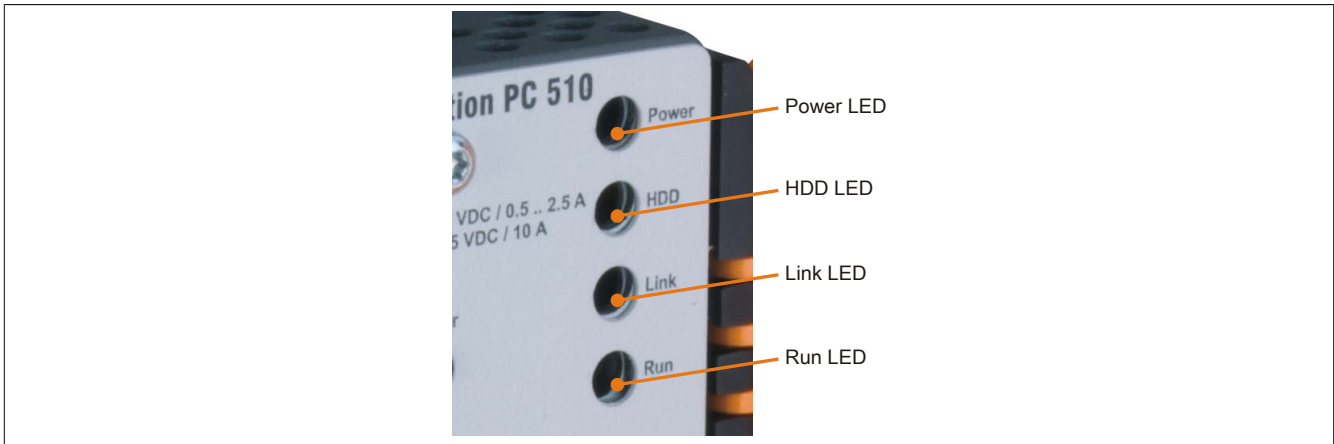Status LEDs are located behind the device's orange front cover.



The following timing is used for the status LEDs:

Block size: 250 ms

Repeat interval: 500 ms, 2 boxes thus represent one interval


LED	Color	Status	Description	LED indicator
Power	Green	On	Supply voltage OK	
		Blinking	Device booted, battery status "BAD"	
			Information: For more information, see see "Battery" on page 26.	
	Red	On	System in standby mode (S5: Soft-off mode or S4: Hibernation mode - suspend-to-disk)	
		Blinking	MTCX running, battery status "BAD". System in standby mode (S5: Soft-off mode or S4: Hibernation mode - suspend-to-disk).	
	Red / green	Blinking	Faulty or incomplete BIOS, MTCX or I/O FPGA update, battery status OK, supply voltage OK	
			Faulty or incomplete BIOS, MTCX or I/O FPGA update, battery status OK, standby mode (S5: Soft-off mode or S4: Hibernation mode - suspend-to-disk)	
			Faulty or incomplete BIOS, MTCX or I/O FPGA update, battery status BAD, supply voltage OK	
			Faulty or incomplete BIOS, MTCX or I/O FPGA update, battery status BAD, standby mode (S5: Soft-off mode or S4: Hibernation mode - suspend-to-disk)	
			Information: An update must be performed again.	
CF	Yellow	On	Indicates IDE drive access (CF)	
Link	Yellow	On	Indicates an active SDL connection on the panel connector	
		Blinking	Indicates that an active SDL connection has been interrupted by a loss of power to the display unit	
			Information: Check the supply voltage / power connector of the connected display unit.	
Run	Green	Blinking	Automation Runtime booting Controlled by Automation Runtime (ARemb and ARwin)	
	Green	On	Application running Controlled by Automation Runtime (ARemb and ARwin)	
	Red	On	Application in service mode Controlled by Automation Runtime (ARemb and ARwin)	

Table 16: Status LEDs - Data

2.4.12 Interface board slot

Interface board slot	
Model number	Short description
	Interface boards
5PP5IF.CETH-00	PP500 interface board; connection for 1x Ethernet 10/100/1000
5PP5IF.CHDA-00	PP500 interface board; connection for 1x MIC, 1x Line IN, 1x Line OUT
5PP5IF.FETH-00	PP500 interface board; connection for 1x Ethernet 10/100/1000, 512 kB SRAM
5PP5IF.FPLM-00	PP500 interface board; connections for 2x POWERLINK
5PP5IF.FCAN-00	PP500 interface board; connection for 1x CAN master, 512 kB SRAM
5PP5IF.FX2X-00	PP500 interface board; connection for 1x X2X master, 512 kB SRAM
5PP5IF.FXCM-00	PP500 interface board; connection for 1x CAN master, 1x X2X master, 512 kB SRAM;...

Interface board insert



Table 17: Interface board slot

Information:
Interface boards can ONLY be installed and replaced by B&R.

3 Individual components

3.1 System units

3.1.1 5PC510.SX01-00

3.1.1.1 General information

- Intel® Atom™ technology
- Fan-free operation
- Can be expanded by adding an interface board
- Compact dimensions for tight space in the control cabinet

3.1.1.2 Order data

Model number	Short description	Figure
	System units	
5PC510.SX01-00	APC510 System Unit connections for 1x RS232, 2x USB 2.0, 1x Ethernet 10/100/1000; can be expanded with interface board; I/O board (5PP5IO.GMAC-00) and 24 VDC plug for supply voltage (screw clamp: 0TB103.9; cage clamp: 0TB103.91) must be ordered separately.	
	Required accessories	
	CPU boards	
5PP5CP.US15-00	Intel Atom Z510 CPU board, 1100 MHz, single-core, 400 MHz FSB, 512 kB L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 module	
5PP5CP.US15-01	Intel Atom Z520 CPU board, 1330 MHz, single-core, 533 MHz FSB, 512 kB L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 module	
5PP5CP.US15-02	Intel Atom Z530 CPU board, 1600 MHz, single-core, 533 MHz FSB, 512 kB L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 module	
	Main memory	
5MMDDR.0512-01	SO-DIMM DDR2 RAM 512 MB PC2-5300	
5MMDDR.1024-01	SO-DIMM DDR2 RAM 1024 MB PC2-5300	
5MMDDR.2048-01	SO-DIMM DDR2 RAM 2048 MB PC2-5300	
	Terminal blocks	
0TB103.9	Connector, 24 VDC, 3-pin female, screw clamps 3.31 mm², protected against vibration by the screw flange	
0TB103.91	Connector, 24 VDC, 3-pin female, cage clamps 3.31 mm², protected against vibration by the screw flange	
	Optional accessories	
	Batteries	
0AC201.91	Lithium batteries 4 pieces, 3 V / 950 mAh button cell Hereby we declare that the Lithium cells contained in this shipment qualify as „partly regulated“. Handle with care. If the package is damaged, inspect cells, repack intact cells and protect cells against short circuits. For emergency information, call RENATA SA at + 41 61 319 28 27	
4A0006.00-000	Lithium battery, 3 V / 950 mAh, button cell	
	CompactFlash	
5CFCRD.016G-06	CompactFlash 16 GB B&R (SLC)	
5CFCRD.032G-06	CompactFlash 32 GB B&R (SLC)	
5CFCRD.1024-06	CompactFlash 1 GB B&R (SLC)	
5CFCRD.2048-06	CompactFlash 2 GB B&R (SLC)	
5CFCRD.4096-06	CompactFlash 4 GB B&R (SLC)	
5CFCRD.8192-06	CompactFlash 8 GB B&R (SLC)	
	I/O board	
5PP5IO.GMAC-00	APC510 I/O board connections for 2x USB 2.0, 1x RS232/422/485, HDA sound, Smart Display Link/DVI-D; optional Hard Disk	
	Interface boards	
5PP5IF.CETH-00	PP500 interface board; connection for 1x Ethernet 10/100/1000	
5PP5IF.CHDA-00	PP500 interface board; connection for 1x MIC, 1x Line IN, 1x Line OUT	
5PP5IF.FCAN-00	PP500 interface board; connection for 1x CAN master, 512 kB SRAM; order plug separately (cage clamp: 0TB1208.3100)	
5PP5IF.FETH-00	PP500 interface board; connection for 1x Ethernet 10/100/1000, 512 kB SRAM	
5PP5IF.FPLM-00	PP500 interface board; connections for 2x POWERLINK (with integrated hub): 512 kB SRAM.	

Table 18: 5PC510.SX01-00 - Order data

Model number	Short description	Figure
5PP5IF.FX2X-00	PP500 interface board; connection for 1x X2X master, 512 kB SRAM; order plug separately (cage clamp: 0TB1208.3100)	
5PP5IF.FXCM-00	PP500 interface board; connection for 1x CAN master, 1x X2X master, 512 kByte SRAM; order plug separately (cage clamp: 0TB1208.3100)	
	USB accessories	
5MMUSB.2048-01	USB 2.0 flash drive, 2048 MB, B&R	

Table 18: 5PC510.SX01-00 - Order data

3.1.1.3 Technical data

Product ID	5PC510.SX01-00
General information	
Cooling	Fan-free
LEDs	Power, CF, Link, Run
B&R ID code	\$C645
Battery	
Type	Renata 950 mAh
Service life	4 years ¹⁾
Removable	Yes, accessible from the outside
Design	Lithium Ion
Power button	Yes
Reset button	Yes
Buzzer	Yes
Certification	
CE	Yes
cULus	Yes
Controller	
Boot loader	BIOS
Watchdog	MTCX
Power failure logic	
Controller	MTCX ²⁾
Buffer time	10 ms
Graphics	
Controller	Intel® Graphics Media Accelerator 500
Memory	
Type	DDR2 SDRAM
Size	Max. 2 GB
Interfaces	
COM1 ³⁾	
Type	RS232, modem-capable, not electrically isolated
Design	9-pin DSUB plug
UART	16550-compatible, 16-byte FIFO
Max. baud rate	115 kbit/s
CompactFlash slot 1	
Quantity	1
Type	Type I
SD memory card slot	
Type	SD card
USB	
Quantity	2
Type	USB 2.0
Design	Type A
Transfer rate	Low speed (1.5 Mbit/s), full speed (12 Mbit/s), high speed (480 Mbit/s)
Current load	Max. 1 A per connection
Ethernet	
Quantity	1
Controller	Intel 82574
Design	Shielded RJ45 port
Transfer rate	10/100/1000 Mbit/s
Inserts	
Interface board	Yes
I/O board	Yes
Electrical characteristics	
Nominal voltage	24 VDC ±25%
Nominal current	1.5 A ⁴⁾
Starting current	Typ. 3 A, max. 50 A for <300 µs
Power consumption	35 W ⁵⁾
Electrical isolation	Yes
Operating conditions	
Protection in accordance with EN 60529	IP20 (only with installed CompactFlash card, inserted IF board or optional IF cover)

Table 19: 5PC510.SX01-00 - Technical data

Product ID	5PC510.SX01-00
Environmental conditions	
Temperature	
Operation	0 to 50°C
Storage	-20 to 60°C
Transport	-20 to 60°C
Relative humidity	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration	
Operation (continuous)	2 to 9 Hz: 1.75 mm amplitude / 9 to 200 Hz: 0.5 g
Operation (occasional)	2 to 9 Hz: 3.5 mm amplitude / 9 to 200 Hz: 1 g
Storage	2 to 8 Hz: 7.5 mm amplitude / 8 to 200 Hz: 2 g / 200 to 500 Hz: 4 g
Transport	2 to 8 Hz: 7.5 mm amplitude / 8 to 200 Hz: 2 g / 200 to 500 Hz: 4 g
Shock	
Operation	15 g, 11 ms
Storage	30 g, 15 ms
Transport	30 g, 15 ms
Altitude	
Operation	Max. 3000 m (component-dependent) ⁶⁾
Mechanical characteristics	
Housing	
Material	Galvanized plate, plastic
Front cover	Colored orange plastic (similar to Pantone 144CV)
Paint	Light gray (similar to Pantone 427CV), dark gray (similar to Pantone 432CV)
Dimensions	
Width	58 mm
Height	210 mm
Depth	202.4 mm
Weight	1600 g

Table 19: 5PC510.SX01-00 - Technical data

- 1) At 50°C, 8.5 µA of the supplied components and a self-discharge of 40%. If an interface board with SRAM is installed, then the service life equals 2½ years.
- 2) Maintenance Controller Extended.
- 3) The COM1 interface is identified in BIOS as the COMA interface.
- 4) The specified value applies to a nominal voltage of 24 VDC.
- 5) The specified value applies to a system unit with a CPU board and I/O board, but without an interface board.
- 6) The maximum ambient temperature is typically derated by 1°C per 1000 meters (starting at 500 meters above sea level).

3.1.1.4 Dimensions

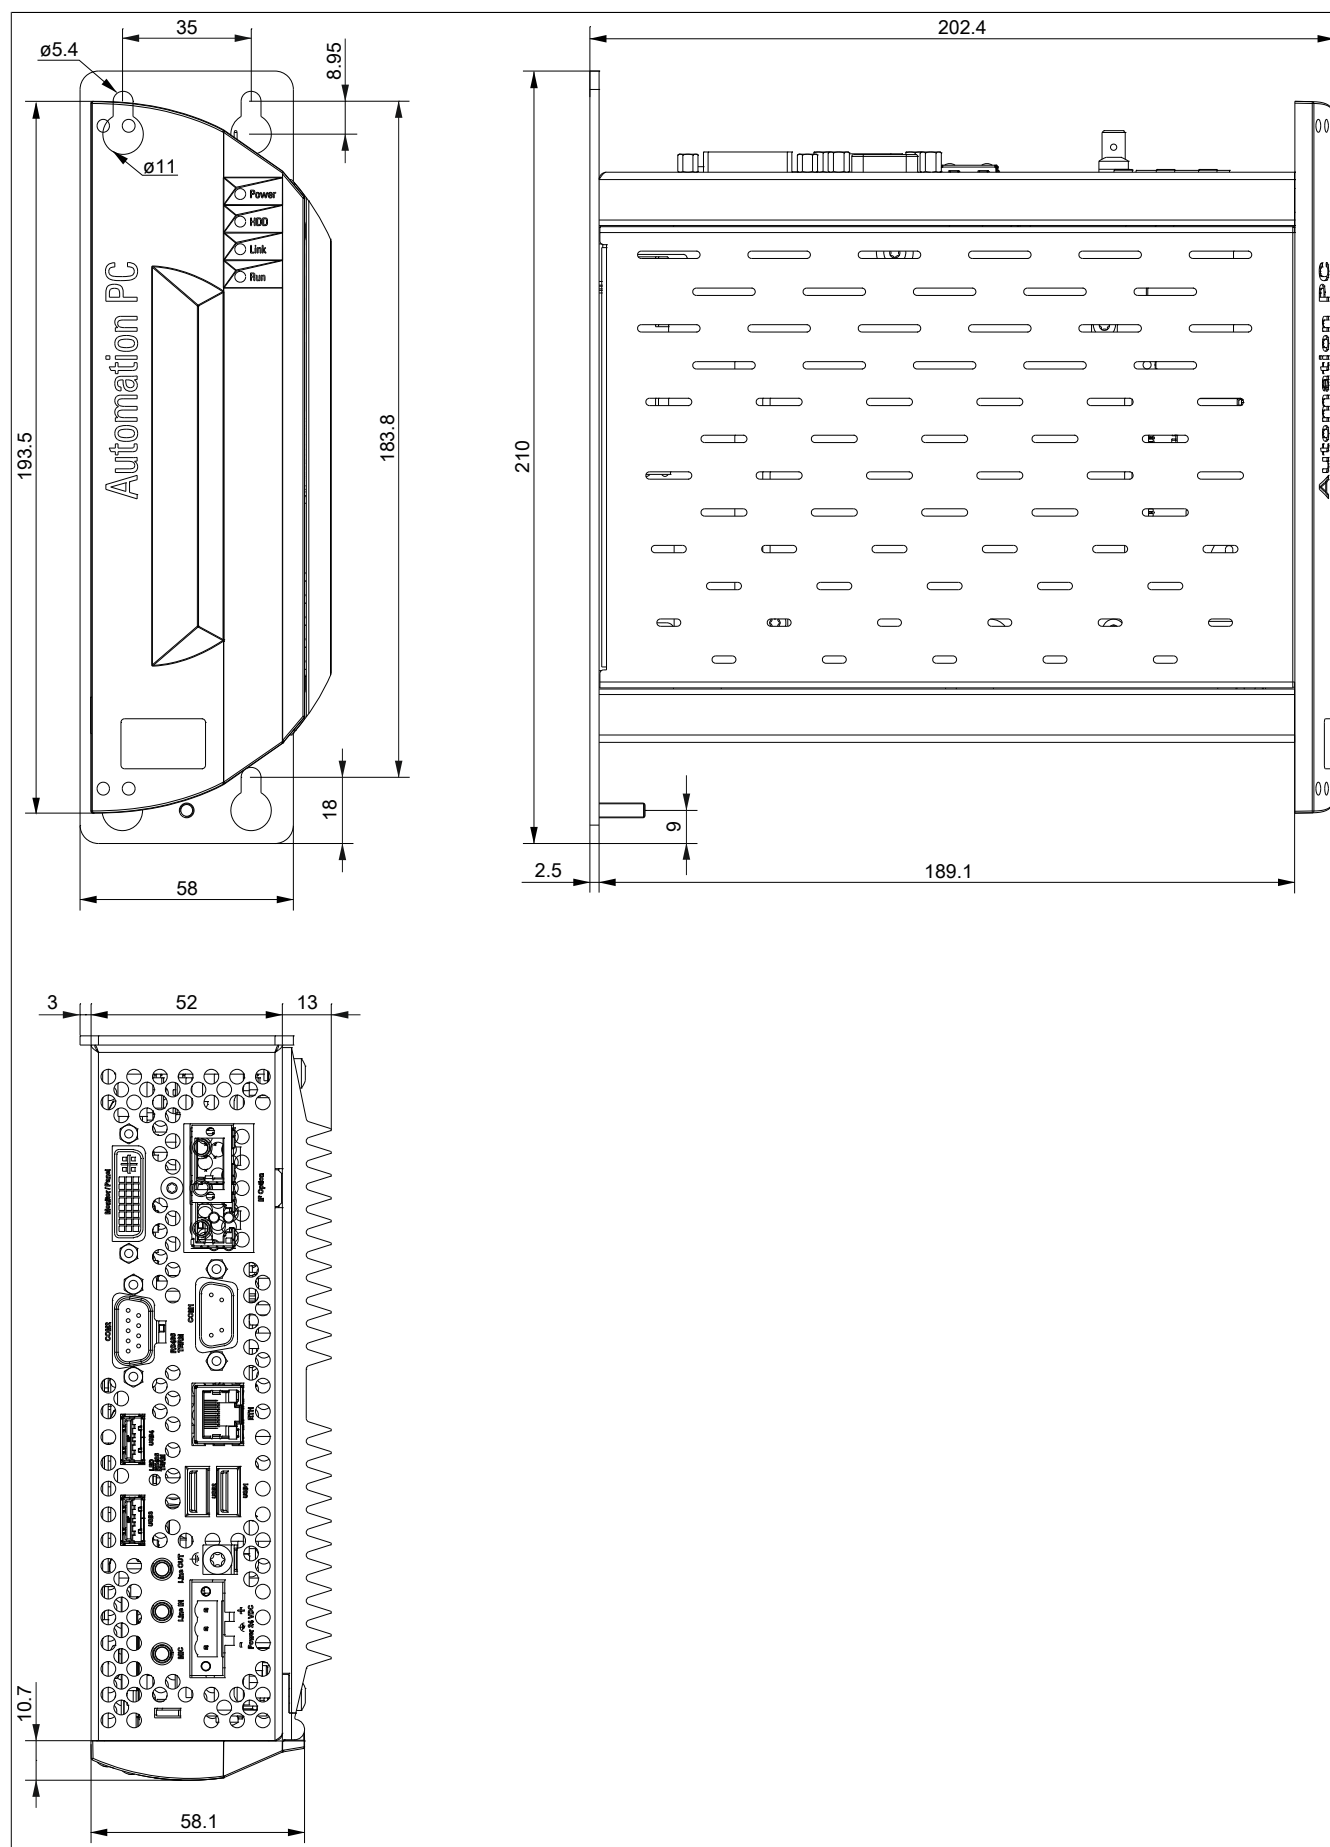


Figure 7: 5PC510.SX01-00 - Dimensions

3.1.1.5 Drilling template

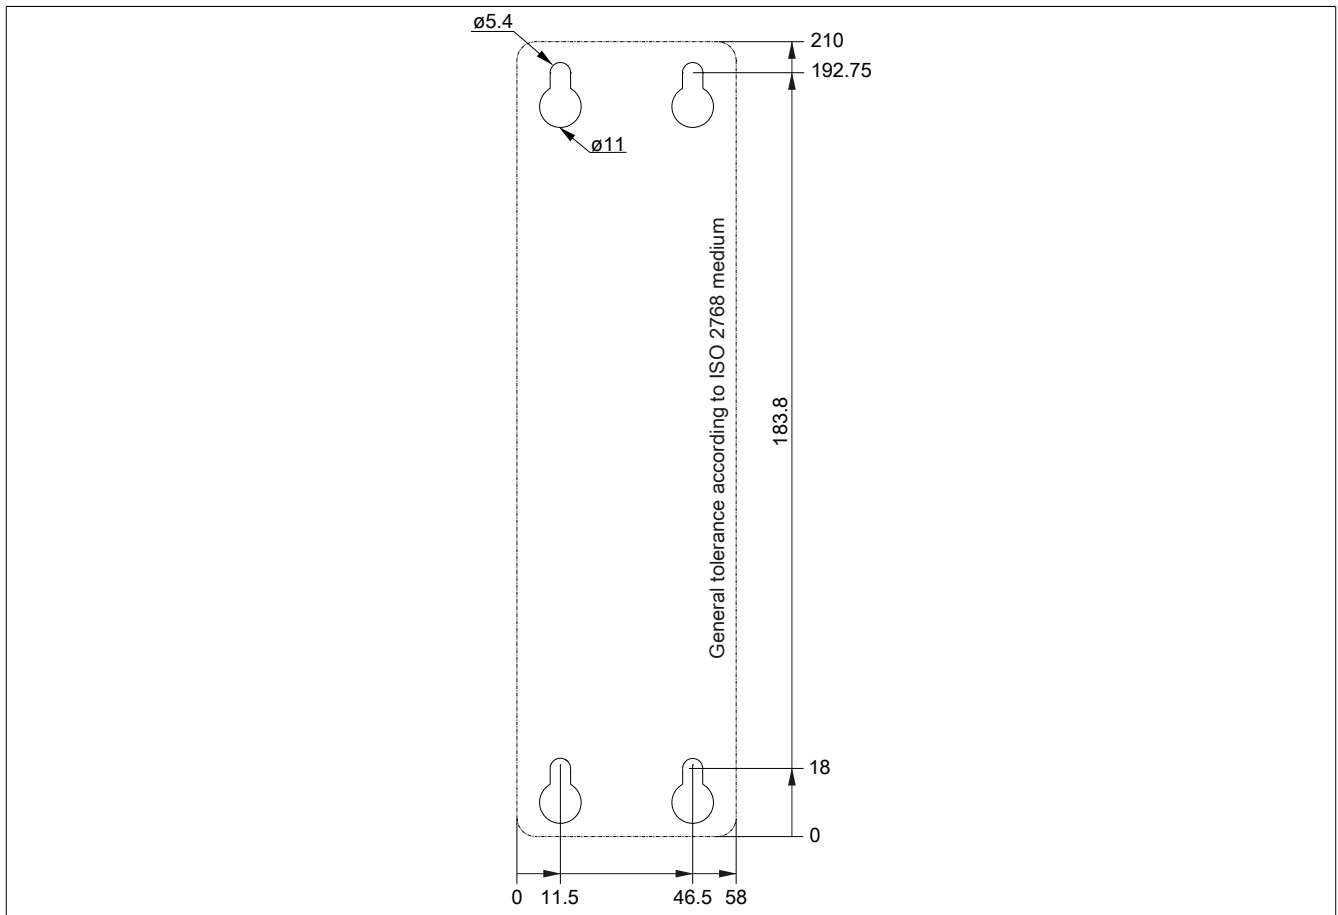


Figure 8: 5PC510.SX01-00 - Drilling template

3.2 CPU boards US15W

3.2.1 General information

CPU boards are based on the Intel® US15W chipset and contain one DDR2 memory socket for a maximum of 2 GB. In addition, the Intel® GMA 500 with 128 MB RAM is also integrated.

- Intel® Atom™ technology
- Intel® US15W chipset
- 1x DDR2 memory socket
- Intel® GMA 500
- Insyde BIOS

3.2.2 Order data

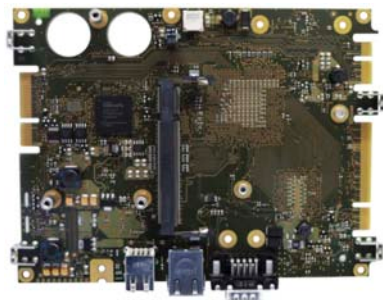
Model number	Short description	Figure
	CPU boards	
5PP5CP.US15-00	Intel Atom Z510 CPU board, 1100 MHz, single-core, 400 MHz FSB, 512 kB L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 module	
5PP5CP.US15-01	Intel Atom Z520 CPU board, 1330 MHz, single-core, 533 MHz FSB, 512 kB L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 module	
5PP5CP.US15-02	Intel Atom Z530 CPU board, 1600 MHz, single-core, 533 MHz FSB, 512 kB L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 module	
	Required accessories	
	Main memory	
5MMDDR.0512-01	SO-DIMM DDR2 RAM 512 MB PC2-5300	
5MMDDR.1024-01	SO-DIMM DDR2 RAM 1024 MB PC2-5300	
5MMDDR.2048-01	SO-DIMM DDR2 RAM 2048 MB PC2-5300	

Table 20: 5PP5CP.US15-00, 5PP5CP.US15-01, 5PP5CP.US15-02 - Order data

3.2.3 Technical data

Product ID	5PP5CP.US15-00		5PP5CP.US15-01	5PP5CP.US15-02
General information				
Certification				
CE	Yes			
cULus	Yes			
GL	Yes			
Controller				
Boot loader	BIOS Insyde			
Processor				
Type	Intel® Atom™ Z510PT	Intel® Atom™ Z520PT	Intel® Atom™ Z530P	
Clock frequency	1100 MHz	1330 MHz	1600 MHz	
Number of cores		1		
Architectures		45 nm		
L1 cache		32 kB		
L2 cache		512 kB		
External bus	400 MHz	533 MHz	533 MHz	
Intel® 64 Architecture		No		
Intel® Hyper-Threading Technology		Yes		
Intel® Virtualization Technology (VT-x)	No	Yes	Yes	
Enhanced Intel SpeedStep® Technology		Yes		
Expanded command set		SSE2, SSE3, SSSE3		
Chipset	Intel® US15WPT	Intel® US15WPT	Intel® US15WP	
Real-time clock				
Accuracy	At 25°C: typ. 12 ppm (1 seconds) per day ¹⁾			
Battery-buffered	Yes			
Memory socket				
Type	DDR2			
Size	Max. 2 GB			

Table 21: 5PP5CP.US15-00, 5PP5CP.US15-01, 5PP5CP.US15-02 - Technical data

Product ID	5PP5CP.US15-00	5PP5CP.US15-01	5PP5CP.US15-02
Graphics	Intel® Graphics Media Accelerator 500 Up to 256 MB ²⁾ Max. 32-bit Depends on the system unit used ³⁾		
Controller			
Memory			
Color depth			
Resolution			
Power management	ACPI 3.0		

Table 21: 5PP5CP.US15-00, 5PP5CP.US15-01, 5PP5CP.US15-02 - Technical data

- 1) At 50°C, 8.5 µA of the supplied components and a self discharge of 40%.
- 2) Allocated in main memory
- 3) For the PP500: The maximum resolution is automatically determined when selecting the PP500 system unit.

3.3 Main memory

3.3.1 Order data

Model number	Short description	Figure
	Main memory	
5MMDDR.0512-01	SO-DIMM DDR2 RAM 512 MB PC2-5300	
5MMDDR.1024-01	SO-DIMM DDR2 RAM 1024 MB PC2-5300	
5MMDDR.2048-01	SO-DIMM DDR2 RAM 2048 MB PC2-5300	

Table 22: 5MMDDR.0512-01, 5MMDDR.1024-01, 5MMDDR.2048-01 - Order data

3.3.2 Technical data

Product ID	5MMDDR.0512-01	5MMDDR.1024-01	5MMDDR.2048-01
General information			
Type	SO-DIMM DDR2 SDRAM		
Memory size	512 MB	1 GB	2 GB
Construction	200-pin		
Organization	64M x 64-bit	128M x 64-bit	256M x 64-bit
Velocity	DDR2-667 (PC2-5300)		
Certification			
CE	Yes		
cULus	Yes		
GL	Yes		

Table 23: 5MMDDR.0512-01, 5MMDDR.1024-01, 5MMDDR.2048-01 - Technical data

Information:

A main memory module can only be replaced at B&R.

3.4 Interface boards

Information:

Interface boards can **ONLY** be installed and replaced by B&R.

3.4.1 5PP5IF.CETH-00

3.4.1.1 General information

The interface board 5PP5IF.CETH-00 has a 10/100/1000 Mbit/sec network connection as well as 512 kB SRAM and can be used as an additional network interface in a Power Panel 500, Automation PC 510 or Automation PC 511.

- 1 network connection (10/100/1000 Mbit/s)
- Compatible with PP500, APC511 and APC511

The interface board can be operated using Automation Runtime in Automation Studio 3.0.90.18 or higher and Automation Runtime D4.01.

3.4.1.2 Order data

Model number	Short description	Figure
	Interface boards	
5PP5IF.CETH-00	PP500 interface board; connection for 1x Ethernet 10/100/1000	

Table 24: 5PP5IF.CETH-00 - Order data

3.4.1.3 Technical data

Product ID	5PP5IF.CETH-00
General information	
B&R ID code	\$B4D5
Diagnostics	
Data transfer	Yes, using status LED
Certification	
CE	Yes
cULus	Yes
GL	Yes
Interfaces	
Ethernet	
Quantity	1
Controller	Intel 82574
Design	Shielded RJ45 port
Transfer rate	10/100/1000 Mbit/s
Cable length	Max. 100 m between two stations (segment length)
Electrical characteristics	
Power consumption	2 W
Environmental conditions	
Temperature	
Operation	0 to 55°C
Storage	-20 to 60°C
Transport	-20 to 60°C
Relative humidity	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing

Table 25: 5PP5IF.CETH-00 - Technical data

3.4.1.3.1 Ethernet interface (ETH)

Ethernet connection		
Controller	Intel 82574	
Cabling	S/STP (Cat 5e)	
Transfer rate	10/100/1000 Mbit/s ¹⁾	
Cable length	Max. 100 m (min. Cat 5e)	
Speed LED	On	Off
Green	100 Mbit/s	10 Mbit/s ²⁾
Orange	1000 Mbit/s	-
Link LED	On	Off
Orange	Link (Ethernet network connection available)	Activity (blinking - data transfer in progress)

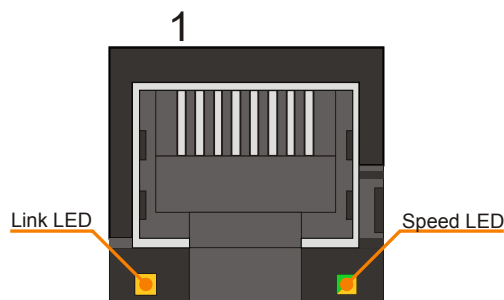


Table 26: 5PP5IF.CETH-00 - Ethernet connection

- 1) Switching takes place automatically.
2) The 10 Mbit/s transfer speed / connection is only present if the IF slot Link LED is also lit at the same time.

A special driver is required in order to operate the Intel 82574 Ethernet controller. Drivers for approved operating systems are available in the Downloads section of the B&R website (www.br-automation.com).

Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

3.4.2 5PP5IF.CHDA-00

3.4.2.1 General information

The 5PP5IF.CHDA-00 interface board has an HDA sound chip with externally accessible MIC, Line IN and Line OUT channels.

- 1x MIC
- 1x Line IN
- 1x Line OUT
- Compatible with PP500, APC511 and APC511

The interface board can be operated using Automation Runtime in Automation Studio 3.0.90.18 or higher and Automation Runtime A4.01.

3.4.2.2 Order data

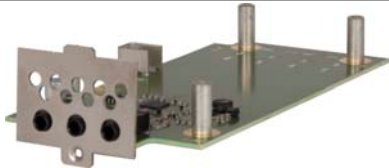
Model number	Short description	Figure
	Interface boards	
5PP5IF.CHDA-00	PP500 interface board; connection for 1x MIC, 1x Line IN, 1x Line OUT	

Table 27: 5PP5IF.CHDA-00 - Order data

3.4.2.3 Technical data

Product ID	5PP5IF.CHDA-00
General information	
B&R ID code	\$B4D6
Certification	
CE	Yes
cULus	Yes
Interfaces	
Audio	
Type	HDA sound
Controller	Realtek ALC 662
Inputs	Microphone, Line in
Outputs	Line OUT
Electrical characteristics	
Power consumption	2 W
Environmental conditions	
Temperature	
Operation	0 to 55°C
Storage	-20 to 60°C
Transport	-20 to 60°C
Relative humidity	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing

Table 28: 5PP5IF.CHDA-00 - Technical data

3.4.2.3.1 MIC, Line IN, Line OUT

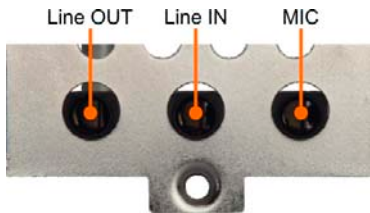
MIC, Line IN, Line OUT	
Controller	Realtek ALC 662
MIC	Connection of a mono microphone with a 3.5 mm jack
Line IN	Stereo Line IN signal supplied via a 3.5 mm jack
Line OUT	Connection of a stereo playback device (e.g. amplifier) via a 3.5 mm jack
	3.5mm socket, female 

Table 29: MIC, Line IN, Line OUT

A special driver is required in order to operate the audio controller. Drivers for approved operating systems are available in the Downloads section of the B&R website (www.br-automation.com).

Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

3.4.3 5PP5IF.FETH-00

3.4.3.1 General information

The interface board 5PP5IF.FETH-00 has a 10/100/1000 Mbit/sec network connection as well as 512 kB SRAM and can be used as an additional network interface in a Power Panel 500, Automation PC 510 or Automation PC 511.

- 1 network connection (10/100/1000 Mbit/s)
- 512 kB SRAM
- Compatible with PP500, APC511 and APC511

The interface board can only be operated using Automation Runtime (in Automation Studio 3.0.90.18 or higher and Automation Runtime D4.01).

3.4.3.2 Order data

Model number	Short description	Figure
Interface boards		
5PP5IF.FETH-00	PP500 interface board; connection for 1x Ethernet 10/100/1000, 512 kB SRAM	

Table 30: 5PP5IF.FETH-00 - Order data

3.4.3.3 Technical data

Product ID	5PP5IF.FETH-00
General information	
B&R ID code	\$B7C4
Diagnostics Data transfer	Yes, using status LED
Certification CE cULus GL	Yes Yes Yes
Controller	
SRAM Size Battery-buffered Remanent variables in power failure mode	512 kB Yes 256 kB (e.g. for Automation Runtime, see AS help documentation) ¹⁾
Interfaces	
Ethernet Quantity Controller Design Transfer rate Cable length	1 Intel 82574 Shielded RJ45 port 10/100/1000 Mbit/s Max. 100 m between two stations (segment length)
Electrical characteristics	
Power consumption	4 W
Environmental conditions	
Temperature Operation Storage Transport	0 to 50°C -20 to 60°C -20 to 60°C
Relative humidity Operation Storage Transport	5 to 90%, non-condensing 5 to 95%, non-condensing 5 to 95%, non-condensing

Table 31: 5PP5IF.FETH-00 - Technical data

1) with optimized access via write combining.

3.4.3.3.1 Ethernet interface (ETH)

Ethernet connection		
Controller	Intel 82574	
Cabling	S/STP (Cat 5e)	
Transfer rate	10/100/1000 Mbit/s ¹⁾	
Cable length	Max. 100 m (min. Cat 5e)	
Speed LED	On	Off
Green	100 Mbit/s	10 Mbit/s ²⁾
Orange	1000 Mbit/s	-
Link LED	On	Off
Orange	Link (Ethernet network connection available)	Activity (blinking - data transfer in progress)

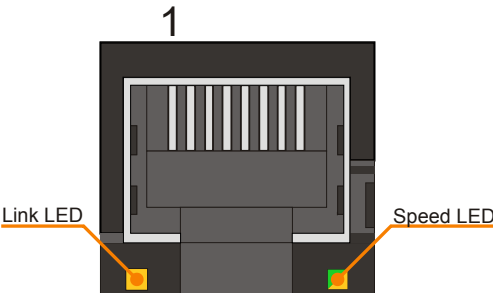


Table 32: 5PP5IF.FETH-00 - Ethernet connection

- 1) Switching takes place automatically.
2) The 10 Mbit/s transfer speed / connection is only present if the IF slot Link LED is also lit at the same time.

A special driver is required in order to operate the Intel 82574 Ethernet controller. Drivers for approved operating systems are available in the Downloads section of the B&R website (www.br-automation.com).

Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

3.4.4 5PP5IF.FPLM-00

3.4.4.1 General information

The 5PP5IF.FPLM-00 interface board has two POWERLINK connections and 512 kB SRAM.

The integrated hub allows for the easiest possible implementation of a simple tree structure or optional ring-redundancy without extra effort.

With pollresponse chaining, the module also offers a solution for the highest demands in regard to response time and the shortest cycle times. When combined with the B&R control system, poll response chaining provides ideal performance, particularly for central control tasks.

- 2x POWERLINK V1/V2 connections
- 512 kB SRAM
- Integrated hub for efficient cabling
- Configurable ring redundancy
- Poll response chaining
- Compatible with PP500, APC511 and APC511

The interface board can only be operated under Automation Runtime.

3.4.4.2 Order data

Model number	Short description	Figure
	Interface boards	
5PP5IF.FPLM-00	PP500 interface board; connections for 2x POWERLINK (with integrated hub); 512 kB SRAM.	

Table 33: 5PP5IF.FPLM-00 - Order data

3.4.4.3 Technical data

Product ID	5PP5IF.FPLM-00
General information	
B&R ID code	\$B4D8
Diagnostics Data transfer	Yes, using status LED
Certification CE cULus GL	Yes Yes Yes
Controller	
SRAM Size Battery-buffered Remanent variables in power failure mode	512 kB Yes 256 kB (e.g. for Automation Runtime, see AS help documentation) ¹⁾
Interfaces	
POWERLINK Quantity Transmission Type Design Transfer rate Cable length	2 100 Base-T (ANSI/IEEE 802.3) Type 4 Internal 2x hub, 2x shielded RJ45 port 100 Mbit/s Max. 100 m between two stations (segment length)
Electrical characteristics	
Power consumption	3 W
Environmental conditions	
Temperature Operation Storage Transport	0 to 55°C -20 to 60°C -20 to 60°C

Table 34: 5PP5IF.FPLM-00 - Technical data

Product ID	5PP5IF.FPLM-00
Relative humidity	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing

Table 34: 5PP5IF.FPLM-00 - Technical data

1) with optimized access via write combining.

3.4.4.3.1 POWERLINK interface

POWERLINK interface board, 2 connections		
Cabling	S/STP (Cat 5e)	
Cable length	Max. 100 m (min. Cat 5e)	
Speed LED	On	Off
Green / red	see Status / Error LED	
Link LED	On	Off
Yellow	Link (POWERLINK network connection available)	Activity (blinking - data transfer in progress)

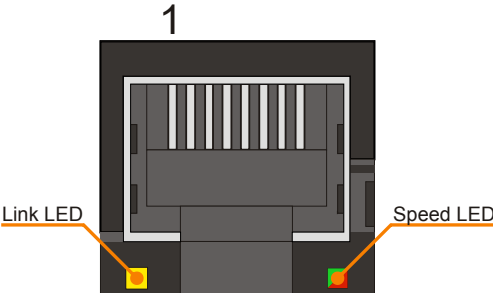


Table 35: POWERLINK interface board, 2-port connection

3.4.4.3.2 LED STATUS

The Status/Error LED has two colors, red and green. The status LEDs can have different meanings depending on operating mode.

Ethernet TCP/IP mode

The interface can be operated purely as an Ethernet TCP/IP interface.

Green - Status	Description
On	The POWERLINK interface is operated purely as an Ethernet TCP/IP interface.

Table 36: Status/Error LED - Ethernet TCP/IP operating mode

POWERLINK V1

Status LED		Status of the POWERLINK station
Green	Red	
On	Off	The POWERLINK station is running with no errors.
Off	On	A fatal system error has occurred. The error type can be read using the PLC logbook. An irreparable problem has occurred. The system cannot properly carry out its tasks. This status can only be changed by resetting the module.
Blinking alternately		The POWERLINK managing node failed. This error code can only occur in controlled node operation.
Off	Blinking	System failure. The red blinking LED signals a certain type of error using a blink code (see section "System failure error codes" on page 48).

Table 37: Status/Error LED - POWERLINK V1 operating mode

POWERLINK V2

Red - Error	Description
On	The POWERLINK interface has encountered an error (failed Ethernet frames, increased number of collisions on the network, etc.). If an error occurs in the following states, then the green LED blinks over the red LED: - BASIC_ETHERNET - PRE_OPERATIONAL_1 - PRE_OPERATIONAL_2 - READY_TO_OPERATE

Table 38: Status/Error LED as an Error LED - POWERLINK V2 operating mode

Green - status	Description
Off NOT_ACTIVE	Managing Node (MN) The bus is monitored for POWERLINK frames. If a frame is not received within the configured time window (timeout), the interface goes directly into PRE_OPERATIONAL_1 status (single flash). If POWERLINK communication is detected before this time passes, however, the interface goes directly into the BASIC_ETHERNET status (flickering). Controlled Node (CN) The bus is monitored for POWERLINK frames. If a frame is not received within the configured time window (timeout), the interface goes directly into BASIC_ETHERNET status (flickering). If POWERLINK communication is detected before this time passes, however, the interface goes directly into the PRE_OPERATIONAL_1 status (single flash).
Green flickering (approx. 10 Hz) BASIC_ETHERNET	The interface is in BASIC_ETHERNET status operated purely as an Ethernet TCP/IP interface. Managing Node (MN) This status can only be changed by resetting the interface. Controlled Node (CN) If POWERLINK communication is detected while in this status, the interface goes into the PRE_OPERATIONAL_1 state (single flash).
Single flash (approx. 1 Hz) PRE_OPERATIONAL_1	The interface status is PRE_OPERATIONAL_1. Managing Node (MN) The MN starts the operation of the "reduced cycle". Collisions are allowed on the bus. There is not yet any cyclic communication. Controlled Node (CN) The CN waits until it receives an SoC frame and then switches to PRE_OPERATIONAL_2 status (double flash).
Double flash (approx. 1 Hz) PRE_OPERATIONAL_2	The interface status is PRE_OPERATIONAL_2. Managing Node (MN) The MN begins with the cyclic communication (cyclic input data is not yet evaluated). The CNs are configured in this status. Controlled Node (CN) In this status, the interface is normally configured by the manager. Once complete, a command changes the status to PRE_OPERATIONAL_3 (triple flash).
Triple flash (approx. 1 Hz) READY_TO_OPERATE	The interface status is READY_TO_OPERATE. Managing Node (MN) Normal cyclic and asynchronous communication. Received PDO data is ignored. Controlled Node (CN) The configuration of the interface is complete. Normal cyclic and asynchronous communication. The PDO data sent corresponds to the PDO mapping used. However, cyclic data is not yet evaluated.
On OPERATIONAL	The interface status is OPERATIONAL.
Blinking (approx. 2.5 Hz) STOPPED	The interface status is STOPPED. Managing Node (MN) This status is not possible for the MN. Controlled Node (CN) No output data is produced, and no input data is received. Only the appropriate command from the manager can enter or leave this state.

Table 39: Status/Error LED as status LED - POWERLINK operating mode

System failure error codes

Incorrect configuration or defective hardware can cause a system failure error.

The error is displayed via the red error LED using four switch-on phases. The switch-on phases are either 150 ms or 600 ms long. Error code outputs are repeated cyclically after 2 seconds.

Legend:

- ... 150 ms
- ... 600 ms
- Delay ... 2 sec. delay

Error description	Error code displayed by red status LED									
RAM error	•	•	•	–	Pause	•	•	•	–	Pause
Hardware errors	–	•	•	–	Pause	–	•	•	–	Pause

Table 40: Status/error LED as error LED - system failure error codes

3.4.4.4 Firmware update

The firmware is a component of Automation Studio. The module is automatically changed to this version.

To update the firmware included in Automation Studio, you must upgrade the hardware (see the Help system under "Project Management - Automation Studio Upgrade").

3.4.5 5PP5IF.FCAN-00

3.4.5.1 General information

The 5PP5IF.FCAN-00 interface board has one CAN master interface and 512 kB SRAM.

- 1x CAN master interface
- 512 kB SRAM
- Compatible with PP500, APC511 and APC511

The interface board can only be operated under Automation Runtime.

3.4.5.2 Order data

Model number	Short description	Figure
Interface boards		
5PP5IF.FCAN-00	PP500 interface board; connection for 1x CAN master, 512 kB SRAM; order plug separately (cage clamp: 0TB1208.3100)	
Required accessories		
Terminal blocks		
0TB1208.3100	Connector, 8-pin, cage clamp, 1 mm², protected against vibration by the screw flange.	

Table 41: 5PP5IF.FCAN-00 - Order data

3.4.5.3 Technical data

Product ID	5PP5IF.FCAN-00
General information	
B&R ID code	\$B4DA
Diagnostics	
Module status	Yes, using status LED
Data transfer	Yes, using status LED
Terminating resistor	Yes, using status LED
Certification	
CE	Yes
cULus	Yes
GL	Yes
Controller	
SRAM	
Size	512 kB
Battery-buffered	Yes
Remanent variables in power failure mode	256 kB (e.g. for Automation Runtime, see AS help documentation) ¹⁾
Interfaces	
CAN	
Quantity	1
Design	8-pin multipoint plug
Transfer rate	Max. 500 kbit/s
Terminating resistor	
Type	Can be activated and deactivated using a sliding switch
Default setting	Disabled
Electrical characteristics	
Power consumption	3 W
Environmental conditions	
Temperature	
Operation	0 to 55°C
Storage	-20 to 60°C
Transport	-20 to 60°C
Relative humidity	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing

Table 42: 5PP5IF.FCAN-00 - Technical data

1) with optimized access via write combining.

3.4.5.3.1 CAN interface

CAN bus	
The electrically isolated CAN bus interface is a 8-pin multipoint plug.	
Transfer rate	Max. 500 kbit/s
Cable length	Max. 1000 meters
Pin	CAN bus
1	-
2	-
3	-
4	CAN _L (CAN ground)
5	SHLD (shield)
6	SHLD (shield)
7	CAN _L (CAN Low)
8	CAN _H (CAN High)

8-pin multipoint plug

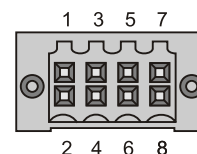


Table 43: 5PP5IF.FCAN-00 - CAN interface

3.4.5.3.2 Status LEDs

Status LEDs			
LED	Color	Status	Description
CAN	Yellow	On	Sending data
		Off	Receiving data
Status LED	Green	On	Interface module is active
	Red	On	CPU starting up
TERM LED	Yellow	On	The terminating resistor is switched on
		Off	The terminating resistor is switched off

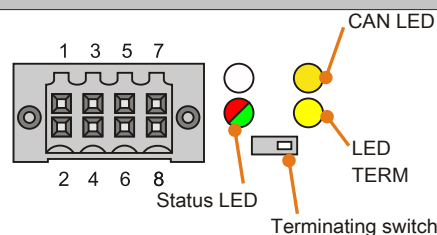


Table 44: 5PP5IF.FCAN-00 - Status LEDs

3.4.5.3.3 CAN terminating switch

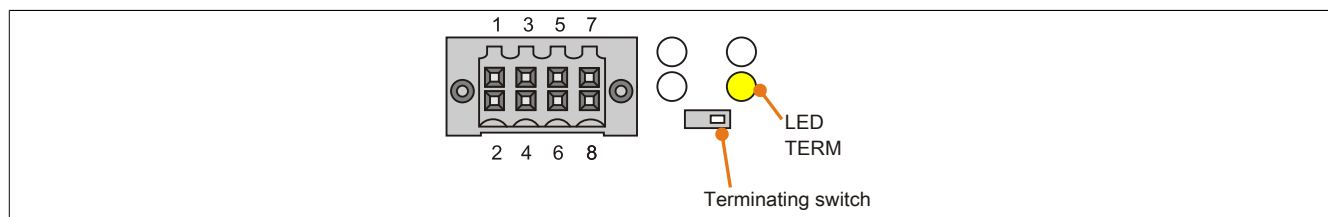


Figure 9: CAN terminating switch

A CAN terminating resistor is integrated on the interface board. It can be turned on and off with a switch on the front. An active terminating resistor is indicated by the TERM LED.

3.4.5.4 Firmware update

The firmware is a component of Automation Studio. The module is automatically changed to this version.

To update the firmware included in Automation Studio, you must upgrade the hardware (see the Help system under "Project Management - Automation Studio Upgrade").

3.4.6 5PP5IF.FX2X-00

3.4.6.1 General information

The 5PP5IF.FX2X-00 interface board has one X2X Link master interface and 512 kB SRAM.

- 1x X2X Link master interface
- 512 kB SRAM
- Compatible with PP500, APC511 and APC511

The interface board can only be operated under Automation Runtime.

3.4.6.2 Order data

Model number	Short description	Figure
Interface boards		
5PP5IF.FX2X-00	PP500 interface board; connection for 1x X2X master, 512 kB SRAM; order plug separately (cage clamp: 0TB1208.3100)	
Required accessories		
Terminal blocks		
0TB1208.3100	Connector, 8-pin, cage clamp, 1 mm², protected against vibration by the screw flange.	

Table 45: 5PP5IF.FX2X-00 - Order data

3.4.6.3 Technical data

Product ID	5PP5IF.FX2X-00
General information	
B&R ID code	\$B4D9
Diagnostics	
Module status	Yes, using status LED
Data transfer	Yes, using status LED
Certification	
CE	Yes
cULus	Yes
GL	Yes
Controller	
SRAM	
Size	512 kB
Battery-buffered	Yes
Remanent variables in power failure mode	256 kB (e.g. for Automation Runtime, see AS help documentation) ¹⁾
Interfaces	
X2X	
Type	X2X Link master
Quantity	1
Design	8-pin multipoint plug
Electrical characteristics	
Power consumption	3 W
Environmental conditions	
Temperature	
Operation	0 to 55°C
Storage	-20 to 60°C
Transport	-20 to 60°C
Relative humidity	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing

Table 46: 5PP5IF.FX2X-00 - Technical data

¹⁾ with optimized access via write combining.

3.4.6.3.1 X2X interface

X2X Link Master connection	
The electrically isolated X2X Link is a 8-pin multipoint plug.	
Pin	X2X Link
1	X2X\
2	X2X
3	X2X _L
4	-
5	SHLD (shield)
6	SHLD (shield)
7	-
8	-

8-pin multipoint plug

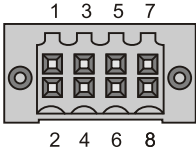


Table 47: 5PP5IF.FX2X-00 - X2X interface

3.4.6.3.2 Status LEDs

Status LEDs			
LED	Color	Status	Description
X2X	Yellow	On	Sending data
		Off	Receiving data
Status LED	Green	On	Interface module is active
	Red	On	CPU starting up

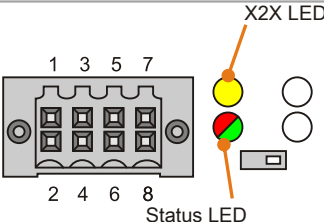


Table 48: 5PP5IF.FX2X-00 - Status LEDs

3.4.6.4 Firmware update

The firmware is a component of Automation Studio. The module is automatically changed to this version.

To update the firmware included in Automation Studio, you must upgrade the hardware (see the Help system under "Project Management - Automation Studio Upgrade").

3.4.7 5PP5IF.FXCM-00

3.4.7.1 General information

The 5PP5IF.FXCM-00 interface board has one combined CAN master, one X2X Link master interface and 512 kB SRAM.

- 1x CAN master interface
- 1x X2X master interface
- 512 kB SRAM
- Compatible with PP500, APC511 and APC511

The interface board can only be operated under Automation Runtime.

3.4.7.2 Order data

Model number	Short description	Figure
	Interface boards	
5PP5IF.FXCM-00	PP500 interface board; connection for 1x CAN master, 1x X2X master, 512 kByte SRAM; order plug separately (cage clamp: 0TB1208.3100)	
	Required accessories	
	Terminal blocks	
0TB1208.3100	Connector, 8-pin, cage clamp, 1 mm ² , protected against vibration by the screw flange.	

Table 49: 5PP5IF.FXCM-00 - Order data

3.4.7.3 Technical data

Product ID	5PP5IF.FXCM-00
General information	
B&R ID code	\$BB9D
Diagnostics	
Module status	Yes, using status LED
Data transfer	Yes, using status LED
Terminating resistor	Yes, using status LED
Certification	
CE	Yes
cULus	Yes
GL	Yes
Controller	
SRAM	
Size	512 kB
Battery-buffered	Yes
Remanent variables in power failure mode	256 kB (e.g. for Automation Runtime, see AS help documentation) ¹⁾
Interfaces	
CAN	
Quantity	1
Design	8-pin multipoint plug
Transfer rate	Max. 500 kbit/s
Terminating resistor	
Type	Can be activated and deactivated using a sliding switch
Default setting	Disabled
X2X	
Type	X2X Link master
Quantity	1
Design	8-pin multipoint plug
Electrical characteristics	
Power consumption	3 W
Environmental conditions	
Temperature	
Operation	0 to 55°C
Storage	-20 to 60°C
Transport	-20 to 60°C
Relative humidity	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing

Table 50: 5PP5IF.FXCM-00 - Technical data

1) with optimized access via write combining.

3.4.7.3.1 CAN interface

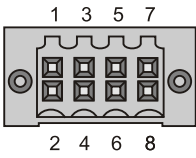
CAN bus		8-pin multipoint plug
Pin	CAN bus	
The electrically isolated CAN bus interface is a 8-pin multipoint plug.		
Transfer rate	Max. 500 kbit/s	
Cable length	Max. 1000 meters	
1	-	
2	-	
3	-	
4	CAN _L (CAN ground)	
5	SHLD (shield)	
6	SHLD (shield)	
7	CAN _L (CAN Low)	
8	CAN _H (CAN High)	

Table 51: 5PP5IF.FCAN-00 - CAN interface

3.4.7.3.2 X2X interface

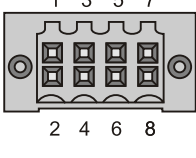
X2X Link Master connection		8-pin multipoint plug
Pin	X2X Link	
The electrically isolated X2X Link is a 8-pin multipoint plug.		
1	X2X _L	
2	X2X	
3	X2X _L	
4	-	
5	SHLD (shield)	
6	SHLD (shield)	
7	-	
8	-	

Table 52: 5PP5IF.FX2X-00 - X2X interface

3.4.7.3.3 Status LEDs

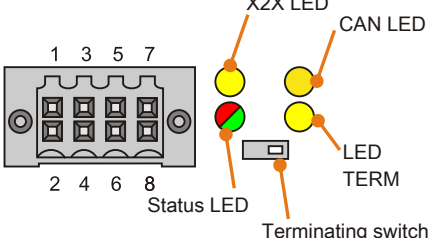
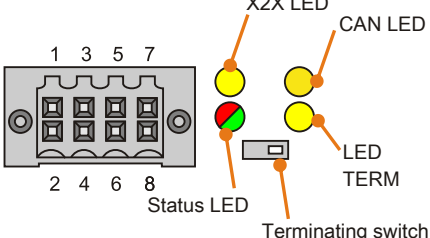
Status LEDs				
LED	Color	Status	Description	
X2X	Yellow	On	Sending data	
		Off	Receiving data	
CAN	Yellow	On	Sending data	
		Off	Receiving data	
Status LED	Green	On	Interface module is active	
	Red	On	CPU starting up	
TERM LED	Yellow	On	The terminating resistor is switched on	
		Off	The terminating resistor is switched off	

Table 53: 5PP5IF.FXCM-00 - Status LEDs

3.4.7.3.4 CAN terminating switch

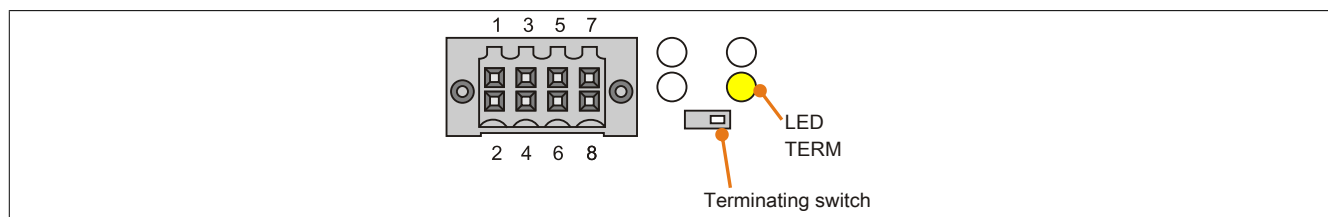


Figure 10: CAN terminating switch

A CAN terminating resistor is integrated on the interface board. It can be turned on and off with a switch on the front. An active terminating resistor is indicated by the TERM LED.

3.4.7.4 Firmware update

The firmware is a component of Automation Studio. The module is automatically changed to this version.

To update the firmware included in Automation Studio, you must upgrade the hardware (see the Help system under "Project Management - Automation Studio Upgrade").

3.5 I/O boards

Information:

I/O boards can ONLY be installed and replaced by B&R.

3.5.1 5PP5IO.GMAC-00

3.5.1.1 General information

The APC510 I/O board 5PP5IO.GMAC-00 has 1x RS232/422/485 interface, 2x USB 2.0 connection, 1x HDA sound connection and 1x Smart Display Link/DVI socket. A hard disk or solid-state disk can also be optionally installed. The I/O board can be operated with Automation PC 510 devices.

- 2x USB 2.0
- 1x RS232/422/485
- 1x HDA sound
- 1x Smart Display Link/DVI
- Optional SATA interface for HDD (hard disk drive) or SSD (solid-state drive)
- Compatible with the APC510

3.5.1.2 Order data

Model number	Short description	Figure
	I/O board	
5PP5IO.GMAC-00	APC510 I/O board connections for 2x USB 2.0, 1x RS232/422/485, HDA sound, Smart Display Link/DVI-D; optional Hard Disk	
	Optional accessories	
	Drives	
5MMHDD.0250-00	250 GB SATA hard disk replacement for 5AC801.HDDI-03 and 5ACPCI.RAIC-05; Remark: Please see manual for proper use of the hard disk.	
5MMHDD.0500-00	500 GB SATA hard disk replacement for 5AC801.HDDI-04, 5AC901.CHDD-01 and 5ACPCI.RAIC-06; Remark: Please see manual for proper use of the hard disk.	
5MMSSD.0060-00	60 GB SATA SSD (MLC); Spare part for 5AC801.SSDI-01; SSD for 5PP5IO.GMAC-00; Remark: Please see manual for proper use of the SSD.	
5MMSSD.0180-00	180 GB SATA SSD (MLC); Spare part for 5AC801.SSDI-02; SSD for 5PP5IO.GMAC-00; Remark: Please see manual for proper use of the SSD.	

Table 54: 5PP5IO.GMAC-00 - Order data

3.5.1.3 Technical data

Product ID	5PP5IO.GMAC-00
General information	
B&R ID code	\$CB0B
Certification	
CE	Yes
cULus	Yes
Interfaces	
COM2 ¹⁾	
Type	RS232/422/485, electrically isolated
Design	9-pin DSUB plug
UART	16550-compatible, 16-byte FIFO
Max. baud rate	115 kbit/s
USB	
Quantity	2
Type	USB 2.0
Design	Type A
Transfer rate	Low speed (1.5 Mbit/s), full speed (12 Mbit/s), high speed (480 Mbit/s)
Current load	Max. 1 A
Panel/Monitor interface	
Design	DVI-I socket
Type	SDL/DVI

Table 55: 5PP5IO.GMAC-00 - Technical data

Product ID	5PP5IO.GMAC-00
Audio	
Type	HDA sound
Inputs	Microphone, Line in
Outputs	Line OUT
Optional SATA	PATA to SATA bridge (SATA I)
Electrical characteristics	
Power consumption	12 W
Environmental conditions	
Temperature	
Operation	0 to 50°C
Storage	-20 to 60°C
Transport	-20 to 60°C
Relative humidity	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing

Table 55: 5PP5IO.GMAC-00 - Technical data

1) The COM2 interface is identified in BIOS as the COMD interface.

3.5.1.3.1 Panel connection - SDL (Smart Display Link) / DVI

Panel connection - SDL (Smart Display Link) / DVI	
The following overview lists the video signals available on the panel output. For details, see the technical data for the CPU board being used.	
CPU board	Video signals with all system unit variants
5PP5CP.US15-00	DVI, SDL
5PP5CP.US15-01	DVI, SDL
5PP5CP.US15-02	DVI, SDL



Table 56: Panel connection - DVI, SDL

Information:

Only digital panels can be connected to the panel connection (analog monitors not permitted).

Pinout

Pin	Assignment	Description	Pin	Assignment	Description
1	TMDS data 2-	DVI lane 2 (negative)	16	HPD	Hot plug detect
2	TMDS data 2+	DVI lane 2 (positive)	17	TMDS data 0-	DVI lane 0 (negative)
3	TMDS data 2/4 SHIELD	Shield for data pair 2 and 4	18	TMDS data 0+	DVI lane 0 (positive)
4	SDL-	SDL lane (negative)	19	TMDS Data 0/ XUSB1 SHIELD	Shield for data pair 0 and USB1
5	SDL+	SDL lane (positive)	20	XUSB1-	USB lane 1 (negative)
6	DDC clock	DDC-based control signal (clock)	21	XUSB1+	USB lane 1 (positive)
7	DDC data	DDC-based control signal (data)	22	TMDS clock shield	Shield for clock pair
8	NC	Not connected	23	TMDS clock+	DVI clock (positive)
9	TMDS data 1-	DVI lane 1 (negative)	24	TMDS clock -	DVI clock (negative)
10	TMDS DATA 1+	DVI lane 1 (negative) HDMI clock (positive)	C1	NC	Not connected
11	TMDS DATA 1/ XUSB0 SHIELD	Shield for data pair 1 and USB0	C2	NC	Not connected
12	XUSB0-	USB lane 0 (negative)	C3	NC	Not connected
13	XUSB0+	USB lane 0 (positive)	C4	NC	Not connected
14	+5 V power ¹⁾	+5 V power supply	C5	NC	Not connected
15	Ground (return for +5 V, HSync and VSync)	Ground			

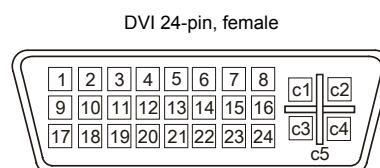


Table 57: Pinout - DVI connection

1) Protected internally by a multifuse.

Cable lengths and resolutions for SDL transmission

The following table lists the relationship between segment lengths and maximum resolution depending on the SDL cable being used:

SDL cables Segment length [m]	Resolution					
	VGA 640 x 480	SVGA 800 x 600	XGA 1024 x 768	SXGA 1280 x 1024	UXGA 1600 x 1200	FHD 1920 x 1080
1.8	5CASDL.0018-00	5CASDL.0018-00	5CASDL.0018-00	5CASDL.0018-00	5CASDL.0018-00	5CASDL.0018-00
	5CASDL.0018-01	5CASDL.0018-01	5CASDL.0018-01	5CASDL.0018-01	5CASDL.0018-01	5CASDL.0018-01
	5CASDL.0018-03	5CASDL.0018-03	5CASDL.0018-03	5CASDL.0018-03	5CASDL.0018-03	5CASDL.0018-03
5	5CASDL.0050-00	5CASDL.0050-00	5CASDL.0050-00	5CASDL.0050-00	5CASDL.0050-00	5CASDL.0050-00
	5CASDL.0050-01	5CASDL.0050-01	5CASDL.0050-01	5CASDL.0050-01	5CASDL.0050-01	5CASDL.0050-01
	5CASDL.0050-03	5CASDL.0050-03	5CASDL.0050-03	5CASDL.0050-03	5CASDL.0050-03	5CASDL.0050-03
10	5CASDL.0100-00	5CASDL.0100-00	5CASDL.0100-00	5CASDL.0100-00	5CASDL.0100-00	5CASDL.0100-00
	5CASDL.0100-01	5CASDL.0100-01	5CASDL.0100-01	5CASDL.0100-01	5CASDL.0100-01	5CASDL.0100-01
	5CASDL.0100-03	5CASDL.0100-03	5CASDL.0100-03	5CASDL.0100-03	5CASDL.0100-03	5CASDL.0100-03
15	5CASDL.0150-00	5CASDL.0150-00	5CASDL.0150-00	5CASDL.0150-00	-	-
	5CASDL.0150-01	5CASDL.0150-01	5CASDL.0150-01	5CASDL.0150-01	-	-
	5CASDL.0150-03	5CASDL.0150-03	5CASDL.0150-03	5CASDL.0150-03	-	5CASDL.0150-03
20	5CASDL.0200-00	5CASDL.0200-00	5CASDL.0200-00	5CASDL.0200-00	-	-
	5CASDL.0200-03	5CASDL.0200-03	5CASDL.0200-03	5CASDL.0200-03	-	5CASDL.0200-03
25	5CASDL.0250-00	5CASDL.0250-00	5CASDL.0250-00	-	-	-
	5CASDL.0250-03	5CASDL.0250-03	5CASDL.0250-03	-	-	-
30	5CASDL.0300-00	5CASDL.0300-00	-	-	-	-
	5CASDL.0300-03	5CASDL.0300-03	5CASDL.0300-13	5CASDL.0300-13	-	5CASDL.0300-13
40	5CASDL.0400-13	5CASDL.0400-13	5CASDL.0400-13	5CASDL.0400-13	-	5CASDL.0400-13

Table 58: Cable lengths and resolutions for SDL transmission

3.5.1.3.2 Serial interface COM2

Serial interface COM2			
	RS232	RS422/485	
Type	RS232; not modem-capable; electrically isolated		
UART	16550-compatible, 16-byte FIFO		
Transfer rate	Max. 115 kbit/s		
Bus length	Max. 15 m	Max. 1200 m	
Pin	RS232 pinout	RS422 pinout	
1	NC	TXD\	
2	RXD	NC	
3	TXD	NC	
4	NC	TXD	
5	GND	GND	
6	NC	RXD\	
7	RTS	NC	
8	CTS	NC	
9	NC	RXD	

9-pin DSUB socket

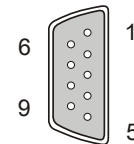


Table 59: Pinout - COM2

3.5.1.3.3 I/O address and IRQ

Resource	Default setting	Additional setting options
I/O address	2E8h	238h, 2F8h, 328h, 338h, 3E8h, 3F8h ¹⁾
IRQ	10	3, 4, 5, 6, 11, 12 ¹⁾

Table 60: RS232/422/485 - I/O address and IRQ

1) If these settings are not already used in the system.

3.5.1.3.4 RS232 - Bus length and cable type

The maximum transfer rate of 115 kbit/s depends on the cable type being used.

Extension	Transfer rate
≤ 15 m	Typ. 64 kbit/s
≤ 10 m	Typ. 115 kbit/s
≤ 5 m	Typ. 115 kbit/s

Table 61: RS232 - Bus length and transfer rate

The material used for the cable should have all or most of the following properties in order to reach an optimal transfer rate.

RS232 cables	Property
Signal lines	
Cable cross section	4x 0.16 mm ² (26AWG), tinned Cu wire
Wire insulation	PE
Conductor resistance	≤ 82 Ω/ km
Stranding	Wires stranded in pairs
Shield	Paired shield with aluminum foil
Grounding line	
Cable cross section	1x 0,34 mm ² (22AWG/19), tinned Cu wire
Wire insulation	PE
Conductor resistance	≤59 Ω/km
Outer sheathing	
Material	PUR mixture
Features	Halogen-free
Cable shielding	From tinned copper wires

Table 62: RS232 - Cable requirements

3.5.1.3.5 RS422 - Bus length and cable type

The RTS line must be switched on to switch the transmitter to active.

The maximum transfer rate of 115 kbit/s depends on the type of cable being used.

Extension	Transfer rate
1200 m	Typ. 115 kbit/s

Table 63: RS422 - Bus length and transfer rate

The material used for the cable should have all or most of the following properties in order to reach an optimal transfer rate.

RS422 cables	Property
Signal lines	
Cable cross section	4x 0.25 mm ² (24AWG/19), tinned Cu wire
Wire insulation	PE
Conductor resistance	≤82 Ω/km
Stranding	Wires stranded in pairs
Shield	Paired shield with aluminum foil
Grounding line	
Cable cross section	1x 0,34 mm ² (22AWG/19), tinned Cu wire
Wire insulation	PE
Conductor resistance	≤59 Ω/km
Outer sheathing	
Material	PUR mixture
Features	Halogen-free
Cable shielding	From tinned copper wires

Table 64: RS422 - Cable requirements

3.5.1.3.6 RS485 - Bus length and cable type

The maximum transfer rate of 115 kbit/s depends on the type of cable being used.

Extension	Transfer rate
1200 m	Typ. 115 kbit/s

Table 65: RS485 - Bus length and transfer rate

The material used for the cable should have all or most of the following properties in order to reach an optimal transfer rate.

RS485 cables	Property
Signal lines	
Cable cross section	4x 0.25 mm ² (24AWG/19), tinned Cu wire
Wire insulation	PE
Conductor resistance	≤82 Ω/km
Stranding	Wires stranded in pairs
Shield	Paired shield with aluminum foil
Grounding line	
Cable cross section	1x 0,34 mm ² (22AWG/19), tinned Cu wire
Wire insulation	PE
Conductor cross section	≤59 Ω/km

Table 66: RS485 - Cable requirements

RS485 cables	Property
Outer sheathing	
Material	PUR mixture
Features	Halogen-free
Cable shielding	From tinned copper wires

Table 66: RS485 - Cable requirements

3.5.1.3.7 When operated as an RS485 interface

When operated in this mode, the pins of the RS422 default interface (1, 4, 6 and 9) must be used. Pins should be connected as shown.

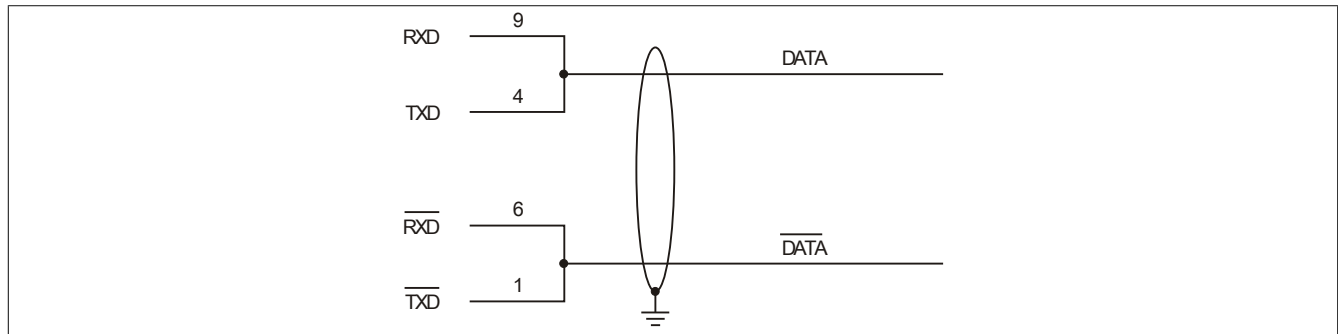


Figure 11: RS232/422/485 interface - Operation in RS485 mode

The RTS line must be switched by the driver for each transmission or reception; there is no automatic switch-back mechanism. This cannot be configured in Windows.

The voltage drop resulting from long cable lengths can lead to greater potential differences between bus stations, which can hinder communication. This can be improved by running ground wire with the others.

3.5.1.3.8 RS485 - Bus length and cable type

The maximum transfer rate of 115 kbit/s depends on the type of cable being used.

Extension	Transfer rate
1200 m	Typ. 115 kbit/s

Table 67: RS485 - Bus length and transfer rate

The material used for the cable should have all or most of the following properties in order to reach an optimal transfer rate.

RS485 cables	Property
Signal lines	
Cable cross section	4x 0.25 mm ² (24AWG/19), tinned Cu wire
Wire insulation	PE
Conductor resistance	≤82 Ω/km
Stranding	Wires stranded in pairs
Shield	Paired shield with aluminum foil
Grounding line	
Cable cross section	1x 0,34 mm ² (22AWG/19), tinned Cu wire
Wire insulation	PE
Conductor cross section	≤59 Ω/km
Outer sheathing	
Material	PUR mixture
Features	Halogen-free
Cable shielding	From tinned copper wires

Table 68: RS485 - Cable requirements

3.5.1.3.9 Terminating resistor

A RS485 TERM terminating resistor for the COM2 serial interface is already integrated on the I/O board. It can be turned on and off with a switch between the COM1 and COM2 serial interfaces. An active terminating resistor is indicated by a yellow RS485 TERM LED.

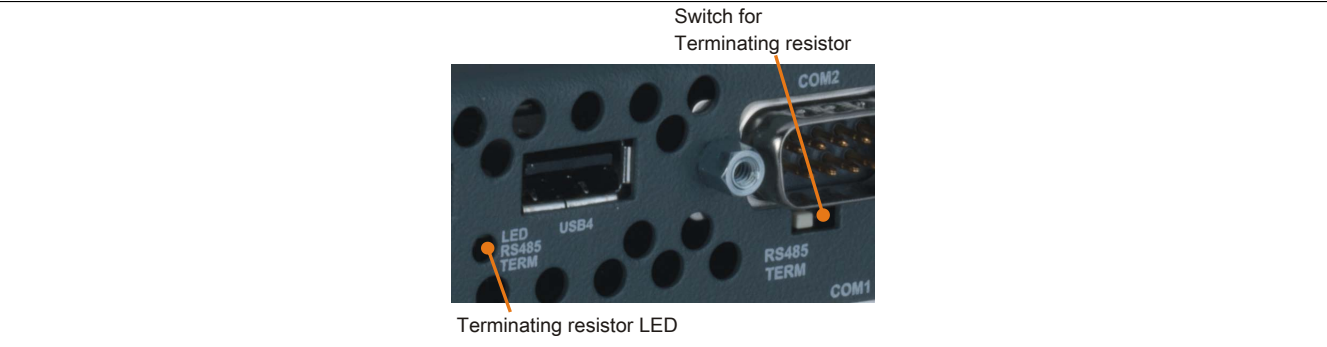


Figure 12: Serial Interface (COM) terminating resistor

3.5.1.3.10 USB interfaces (USB3, 4)

The APC510 I/O board features a USB 2.0 (Universal Serial Bus) host controller with multiple USB ports, 2 of which are accessible externally for easy user access.

Warning!

Peripheral USB devices can be connected to these USB ports. Due to the vast number of USB devices available on the market, B&R cannot guarantee their performance. B&R does ensure the performance of all USB devices that they provide.

Caution!

Because this interface is designed according to general PC specifications, extreme care should be exercised with regard to EMC, cable routing, etc.

USB3, 4

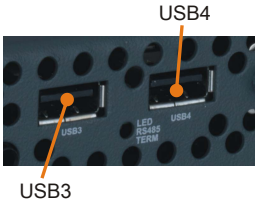
Universal Serial Bus (USB3, USB4) ¹⁾		
Type	USB 2.0	2x USB type A, female 
Design	Type A	
Transfer rate	Low speed (1.5 Mbit/s), full speed (12 Mbit/s), high speed (480 Mbit/s)	
Current load ²⁾ USB3, USB4	Max. 1 A	
Cable length	Max. 5 m (without hub)	

Table 69: USB3, USB4 connections

- 1) The interfaces, etc. available on the device or module have been numbered as such for easy identification. This numbering may differ from that used by the particular operating system.
- 2) Each USB port is protected by a maintenance-free "USB current-limiting circuit breaker" (max. 1 A).

3.5.1.3.11 MIC, Line IN, Line OUT

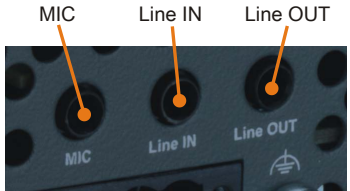
MIC, Line IN, Line OUT		
Controller	Realtek ALC 662	3.5mm socket, female 
MIC	Connection of a mono microphone with a 3.5 mm jack	
Line IN	Stereo Line IN signal supplied via a 3.5 mm jack	
Line OUT	Connection of a stereo playback device (e.g. amplifier) via a 3.5 mm jack	

Table 70: MIC, Line IN, Line OUT

A special driver is required in order to operate the audio controller. Drivers for approved operating systems are available in the Downloads section of the B&R website (www.br-automation.com).

Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

3.5.1.3.12 Optional SATA connection

The optional SATA connection is connected internally to the chipset with a PATA to SATA bridge.

Optional SATA connection	
Connection	SATA
Model number	Short description
	Optional accessories
	Drives
5MMSSD.0060-00	60 GB SATA SSD (MLC); replacement part for 5AC801.SSDI-01; SSD for 5PP5IO.GMAC-00; note: Please see the manual for information about using this SSD.
5MMSSD.0180-00	180 GB SATA SSD (MLC); replacement part for 5AC801.SSDI-02; SSD for 5PP5IO.GMAC-00; note: Please see the manual for information about using this SSD.
5MMHDD.0250-00	250 GB SATA hard disk replacement part for 5AC801.HDDI-03 and 5ACPCI.RAIC-05; Note: Please see the manual for information about using this hard disk.
5MMHDD.0500-00	500 GB SATA hard disk replacement part for 5AC801.HDDI-04, 5AC901.CHDD-01 and 5ACPCI.RAIC-06; note: Please see the manual for information about using this hard disk.

Table 71: Optional SATA connection

3.6 Drives

3.6.1 5MMHDD.0250-00

3.6.1.1 General information

This 250 GB hard disk can be used as a replacement part or an accessory.

- 250 GB hard disk
- Replacement hard disk for a 5AC801.HDDI-03 hard disk or a 5ACPCI.RAIC-05 RAID controller
- APC510 accessory (optional hard disk for the I/O board)
- Specified for 24-hour operation
- S.M.A.R.T. Support

Information:

Installing or replacing a drive can **ONLY** be done at the B&R plant.

3.6.1.2 Order data

Model number	Short description	Figure
	Drives	
5MMHDD.0250-00	250 GB SATA hard disk replacement for 5AC801.HDDI-03 and 5ACPCI.RAIC-05; Remark: Please see manual for proper use of the hard disk.	

Table 72: 5MMHDD.0250-00 - Order data

3.6.1.3 Technical data

Information:

The following characteristics, features and limit values only apply to this individual component and can deviate from those specified for the fully assembled device. For the assembled device in which this individual component is used, refer to the data given specifically for that device.

Product ID	5MMHDD.0250-00
General information	
Certification	
CE	Yes
cULus	Yes
Hard disk drive	
Capacity	250 GB
Number of heads	1
Number of sectors	488,397,168
Bytes per sector	512
Cache	8 MB
Speed	5400 rpm $\pm 0.2\%$
Startup time	Typ. 3.6 s (from 0 rpm to read access)
MTBF	550,000 POH ¹⁾
S.M.A.R.T. Support	Yes
Interface	SATA
Access time	5.56 ms
Supported transfer modes	SATA 1.0, Serial ATA Revision 2.6 PIO mode 0-4, multiword DMA mode 0-2, UDMA mode 0-6
Data transfer rate	
Internal	Max. 1175 Mbit/s
To/From host	Max. 150 MB/s (SATA I), max. 300 MB/s (SATA II)
Positioning time	
Minimum (track to track)	1 ms
Nominal (read only)	14 ms
Maximum (read only)	30 ms

Table 73: 5MMHDD.0250-00 - Technical data

Product ID	5MMHDD.0250-00
Environmental conditions	
Temperature ²⁾	
Operation ³⁾	0 to 60°C
24-hour operation ⁴⁾	0 to 60°C
Storage	-40 to 70°C
Transport	-40 to 70°C
Relative humidity ⁵⁾	
Operation	5 to 95%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration	
Operation	5 to 500 Hz: 0.5 g; no unrecoverable errors
Storage	5 to 500 Hz: 5 g; no unrecoverable errors
Transport	5 to 500 Hz: 5 g; no unrecoverable errors
Shock	
Operation	350 g and 2 ms duration; no unrecoverable errors
Storage	800 g and 2 ms duration; no unrecoverable errors
	1000 g and 1 ms duration; no unrecoverable errors
	600 g and 0.5 ms duration; no unrecoverable errors
Transport	800 g and 2 ms duration; no unrecoverable errors
	1000 g and 1 ms duration; no unrecoverable errors
	600 g and 0.5 ms duration; no unrecoverable errors
Altitude	
Operation	-300 to 3048 m
Storage	-300 to 12192 m
Mechanical characteristics	
Dimensions	
Width	9.5 mm
Height	69 mm
Depth	100 mm
Weight	100 g
Manufacturer information	
Manufacturer	Seagate
Manufacturer product ID	ST9250315AS

Table 73: 5MMHDD.0250-00 - Technical data

- 1) With 8760 POH (power on hours) per year and 25°C surface temperature.
- 2) Temperature values for 305 meter altitude. The temperature specification must be reduced linearly by 1 °C every 305 meters. The temperature increase and decrease can be a maximum of 20 °C per hour.
- 3) Standard operation means 333 POH (power-on hours) per month.
- 4) 24-hour operation means 732 POH (power-on hours) per month.
- 5) Humidity gradient: Maximum 30% per hour.

3.6.1.4 Temperature humidity diagram

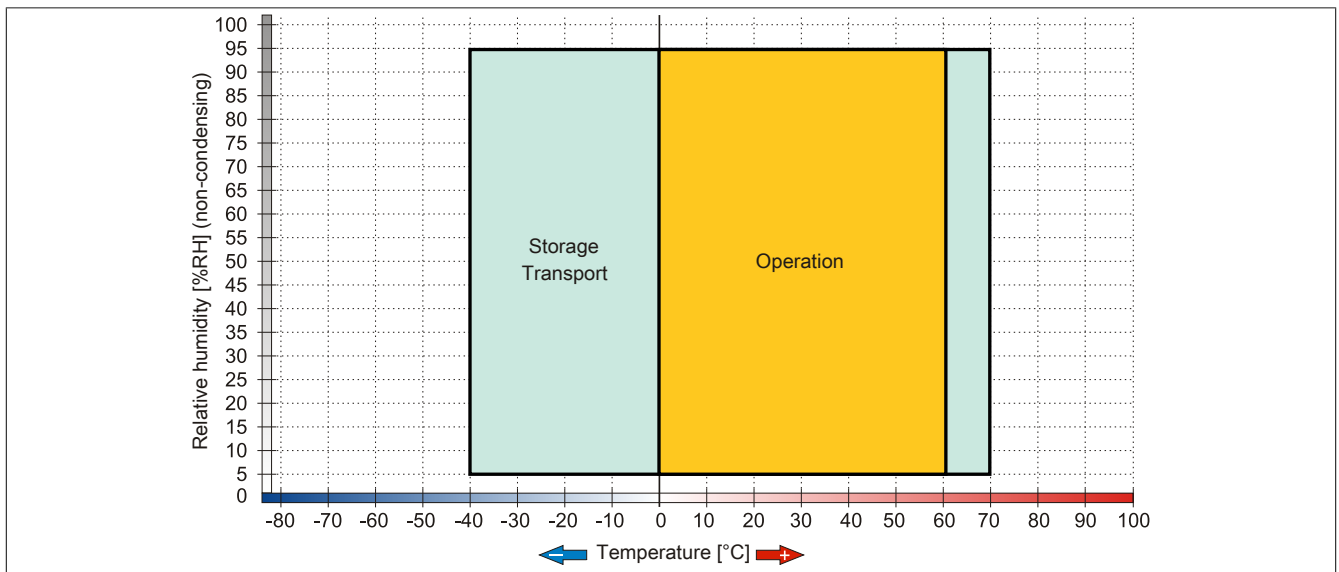


Figure 13: 5MMHDD.0250-00 - Temperature humidity diagram

3.6.2 5MMHDD.0500-00

3.6.2.1 General information

This 500 GB hard disk can be used as a replacement part or an accessory.

- 500 GB hard disk
- Replacement hard disk for a 5AC801.HDDI-04 / 5AC901.CHDD-01 hard disk or a 5ACPCI.RAIC-05 RAID controller
- APC510 accessory (optional hard disk for the I/O board)
- Specified for 24-hour operation
- S.M.A.R.T. Support

Information:

Installing or replacing a drive can **ONLY** be done at the B&R plant.

3.6.2.2 Order data

Model number	Short description	Figure
5MMHDD.0500-00	Drives 500 GB SATA hard disk replacement for 5AC801.HDDI-04, 5AC901.CHDD-01 and 5ACPCI.RAIC-06; Remark: Please see manual for proper use of the hard disk.	

Table 74: 5MMHDD.0500-00 - Order data

3.6.2.3 Technical data

Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the fully assembled device. The data specifications for the fully assembled device take precedence over those of individual components.

Product ID	5MMHDD.0500-00
General information	
Certification	
CE	Yes
cULus	Yes
Hard disk drive	
Capacity	500 GB
Number of heads	2
Number of sectors	976.773.168
Bytes per sector	512 (logical) / 4096 (physical)
Cache	16 MB
Speed	5400 rpm $\pm 0.2\%$
Startup time	Typ. 3.5 s (from 0 rpm to read access)
Service life	5 years
MTBF	1,000,000 POH ¹⁾
S.M.A.R.T. Support	Yes
Interface	SATA
Access time	5.5 ms
Supported transfer modes	SATA II
Data transfer rate	
Internal	Max. 147 MB/s
To/From host	Max. 150 MB/s (SATA I), max. 300 MB/s (SATA II)

Table 75: 5MMHDD.0500-00 - Technical data

Product ID	5MMHDD.0500-00
Positioning time	
Nominal (read only)	11 ms
Maximum (read only)	21 ms
Environmental conditions	
Temperature ²⁾	
Operation ³⁾	0 to 60°C
24-hour operation ⁴⁾	0 to 60°C
Storage	-40 to 70°C
Transport	-40 to 70°C
Relative humidity ⁵⁾	
Operation	5 to 95%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration	
Operation (continuous)	5 to 500 Hz: 0.25 g; no unrecoverable errors
Operation (occasional)	5 to 500 Hz: 0.5 g; no unrecoverable errors
Storage	10 to 500 Hz: 5 g; no unrecoverable errors
Transport	10 to 500 Hz: 5 g; no unrecoverable errors
Shock	
Operation	400 g and 2 ms duration; no unrecoverable errors
Storage	1000 g and 2 ms duration; no unrecoverable errors
Transport	1000 g and 2 ms duration; no unrecoverable errors
Altitude	
Operation	-305 to 3048 m
Storage	-305 to 12192 m
Mechanical characteristics	
Dimensions	
Width	7 mm
Height	69 mm
Depth	100 mm
Weight	100 g
Manufacturer information	
Manufacturer	Western Digital
Manufacturer product ID	WD5000LUCT

Table 75: 5MMHDD.0500-00 - Technical data

- 1) With 8760 POH (power on hours) per year and 25°C surface temperature.
- 2) Temperature values for 305 meter altitude. The temperature specification must be reduced linearly by 1 °C every 305 meters. The temperature increase and decrease can be a maximum of 20 °C per hour.
- 3) Standard operation means 333 POH (power-on hours) per month.
- 4) 24-hour operation means 732 POH (power-on hours) per month.
- 5) Humidity gradient: Maximum 20% per hour.

3.6.2.4 Temperature humidity diagram

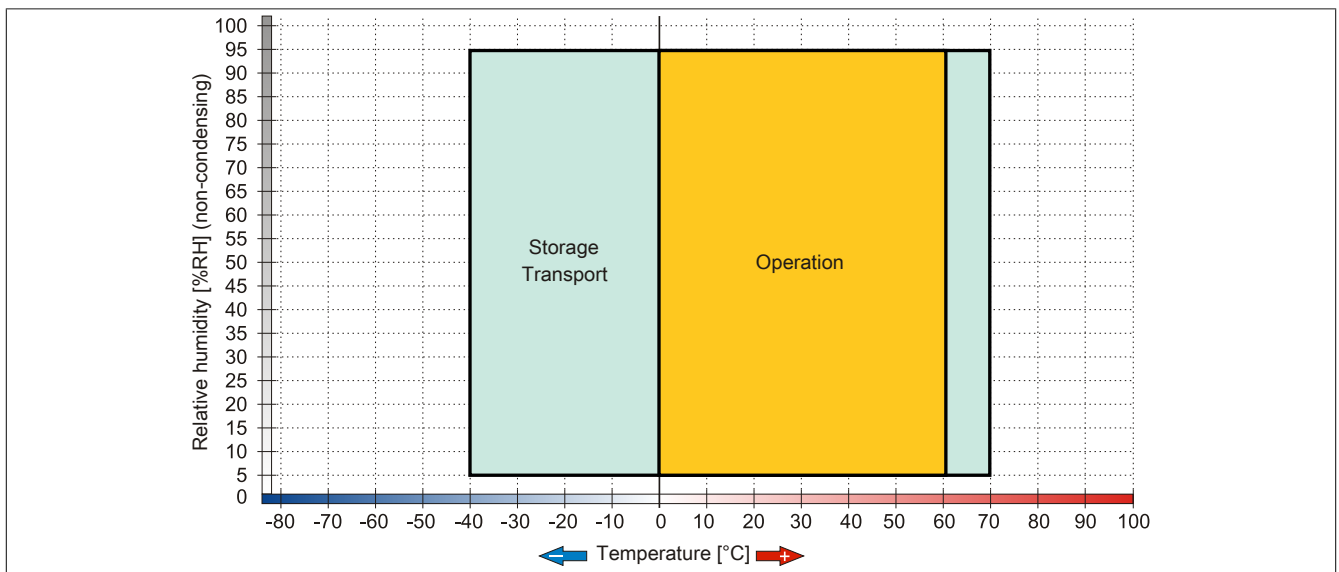


Figure 14: 5MMHDD.0500-00 - Temperature humidity diagram

3.6.3 5MMSSD.0060-00

3.6.3.1 General information

This 60 GB slide-in compact SSD (solid state drive) drive can be used as a replacement or accessory part. This SSD is based on multi-level cell (MLC) technology.

- Replacement drive for solid-state drive 5AC801.SSDI-01 and 5AC901.CSSD-01
- Accessory for the APC510 (optional SSD for I/O board)

Information:

Installing or replacing a drive can **ONLY** be done at the B&R plant.

3.6.3.2 Order data

Model number	Short description	Figure
	Drives	
5MMSSD.0060-00	60 GB SATA SSD (MLC); Spare part for 5AC801.SSDI-01; SSD for 5PP5IO.GMAC-00; Remark: Please see manual for proper use of the SSD.	

Table 76: 5MMSSD.0060-00 - Order data

3.6.3.3 Technical data

Caution!

A sudden loss of power may result in data loss! In very rare cases, mass memory may also be damaged. To prevent damage and loss of data, the use of a UPS device is recommended.

Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the fully assembled device. The data specifications for the fully assembled device take precedence over those of individual components.

Product ID	5MMSSD.0060-00
General information	
Certification	
CE	Yes
cULus	Yes
Solid state drive	
Capacity	60 GB
Data reliability	< 1 unrecoverable errors in 10 ¹⁶ bit read accesses
MTBF	1,200,000 hours
S.M.A.R.T. Support	Yes
Interface	SATA
Maintenance	None
Continuous reading	Max. 550 MB/s with SATA 6 Gbit/s Max. 280 MB/s with SATA 3 Gbit/s
Continuous writing	Max. 475 MB/s with SATA 6 Gbit/s Max. 245 MB/s with SATA 3 Gbit/s
IOPS ¹⁾	
4k read	15000
4k write	
Typical	23000
Maximum	80000
Endurance	
MLC flash	Yes

Table 77: 5MMSSD.0060-00 - Technical data

Product ID	5MMSSD.0060-00
Compatibility	SATA Revision 3.0 compliant ACS-2 SSD Enhanced SMART ATA feature set Native Command Queuing (NCQ) command
Environmental conditions	
Temperature	
Operation	0 to 70°C
Storage	-55 to 95°C
Transport	-55 to 95°C
Relative humidity	
Operation	5 to 95%
Storage	5 to 95%
Transport	5 to 95%
Vibration	
Operation	5 to 700 Hz: 2.17 g
Storage	5 to 800 Hz: 3.13 g
Transport	5 to 800 Hz: 3.13 g
Shock	
Operation	1500 g, 0.5 ms
Storage	1500 g, 0.5 ms
Transport	1500 g, 0.5 ms
Altitude	
Operation	-300 to 12,192 m
Storage	-300 to 12,192 m
Transport	-300 to 12,192 m
Mechanical characteristics	
Dimensions	
Width	9.5 mm
Height	69 mm
Depth	100 mm
Weight	78 g
Manufacturer information	
Manufacturer	Intel
Manufacturer product ID	SSDSC2CW060A3

Table 77: 5MMSSD.0060-00 - Technical data

1) IOPS: Random read and write input/output operations per second

3.6.3.4 Temperature humidity diagram

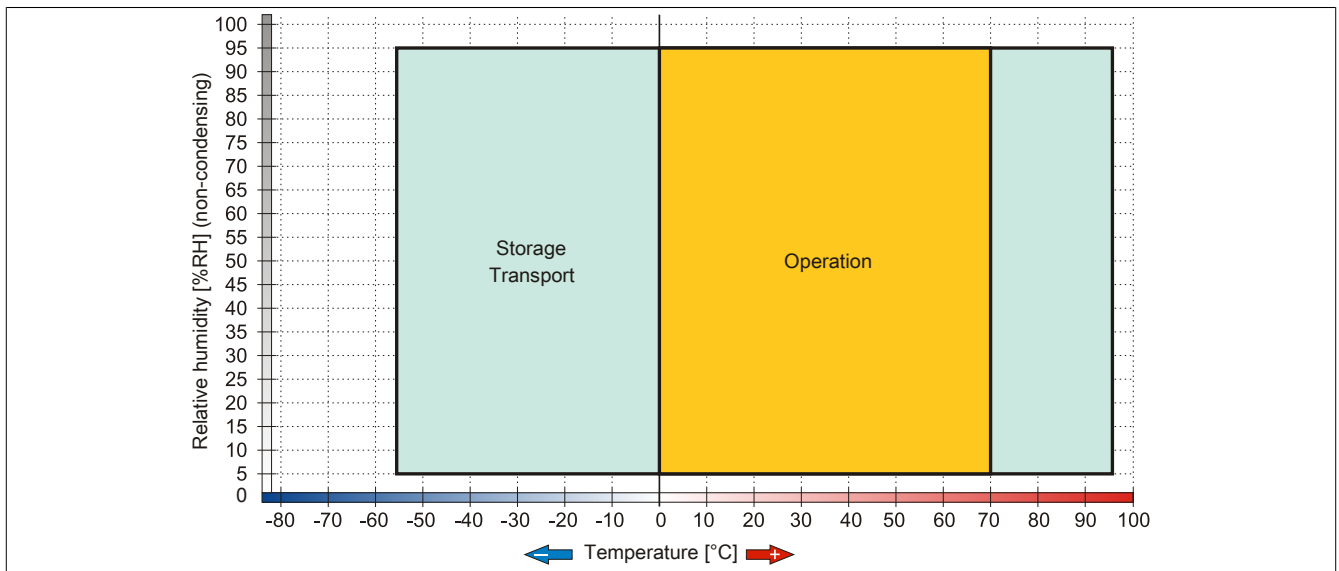


Figure 15: 5AC801.SSDI-01 - Temperature humidity diagram

3.6.4 5MMSSD.0180-00

3.6.4.1 General information

This 180 GB slide-in compact SSD (solid state drive) drive can be used as a replacement or accessory part. SSD is based on Multi Level Cell (MLC) technology.

- Replacement drive for solid-state drive 5AC801.SSDI-02 and 5AC901.CSSD-02
- Accessory for the APC510 (optional SSD for I/O board)

Information:

Installing or replacing a drive can **ONLY** be done at the B&R plant.

3.6.4.2 Order data

Model number	Short description	Figure
	Drives	
5MMSSD.0180-00	180 GB SATA SSD (MLC); Spare part for 5AC801.SSDI-02; SSD for 5PP5IO.GMAC-00; Remark: Please see manual for proper use of the SSD.	

Table 78: 5MMSSD.0180-00 - Order data

3.6.4.3 Technical data

Caution!

A sudden loss of power may result in data loss! In very rare cases, mass memory may also be damaged. To prevent damage and loss of data, the use of a UPS device is recommended.

Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the fully assembled device. The data specifications for the fully assembled device take precedence over those of individual components.

Product ID	5MMSSD.0180-00
General information	
Certification	
CE	Yes
cULus	Yes
Solid state drive	
Capacity	180 GB
Data reliability	< 1 unrecoverable errors in 10 ¹⁶ bit read accesses
MTBF	1,200,000 hours
S.M.A.R.T. Support	Yes
Interface	SATA
Maintenance	None
Continuous reading	Max. 550 MB/s with SATA 6 Gbit/s Max. 280 MB/s with SATA 3 Gbit/s
Continuous writing	Max. 520 MB/s with SATA 6 Gbit/s Max. 260 MB/s with SATA 3 Gbit/s
IOPS ¹⁾	
4k read	50000
4k write	
Typical	60000
Maximum	80000
Endurance	
MLC flash	Yes

Table 79: 5MMSSD.0180-00 - Technical data

Product ID	5MMSSD.0180-00
Compatibility	SATA Revision 3.0 compliant ACS-2 SSD Enhanced SMART ATA feature set Native Command Queuing (NCQ) command
Environmental conditions	
Temperature	
Operation	0 to 70°C
Storage	-55 to 95°C
Transport	-55 to 95°C
Relative humidity	
Operation	5 to 95%
Storage	5 to 95%
Transport	5 to 95%
Vibration	
Operation	5 to 700 Hz: 2.17 g
Storage	5 to 800 Hz: 3.13 g
Transport	5 to 800 Hz: 3.13 g
Shock	
Operation	1500 g, 0.5 ms
Storage	1500 g, 0.5 ms
Transport	1500 g, 0.5 ms
Altitude	
Operation	-300 to 12,192 m
Storage	-300 to 12,192 m
Transport	-300 to 12,192 m
Mechanical characteristics	
Dimensions	
Width	9.5 mm
Height	69 mm
Depth	100 mm
Weight	78 g
Manufacturer information	
Manufacturer	Intel
Manufacturer product ID	SSDSC2CW180A3

Table 79: 5MMSSD.0180-00 - Technical data

1) IOPS: Random read and write input/output operations per second

3.6.4.4 Temperature humidity diagram

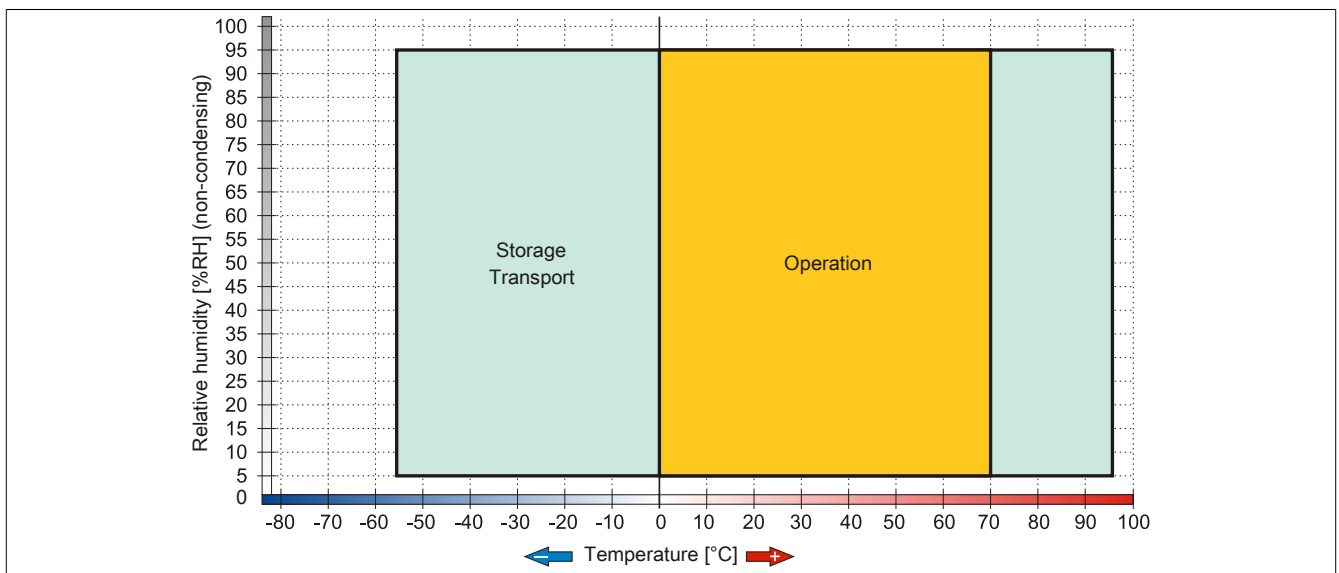


Figure 16: 5AC801.SSDI-02 - Temperature humidity diagram

Chapter 3 • Installation

1 Installation

Devices are installed using the mounting plates found on the housing. These plates are designed for M5 screws.

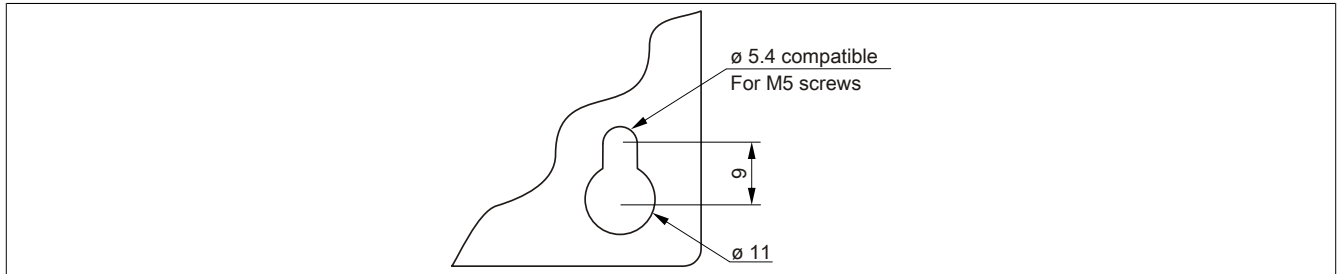


Figure 17: Mounting plates

The exact positioning of the mounting holes can be seen in the drilling templates in Chapter 2 "Technical data", section "Individual components" on page 31.

1.1 Procedure

1. Drill the necessary holes in the control cabinet. The exact position of the mounting holes is illustrated in the drilling templates.
2. Mount the B&R Industrial PC to the control cabinet using M5 screws.

1.2 Important mounting information

- Environmental conditions must be taken into consideration.
- This device must be mounted to a flat surface.
- This device is only certified for operation in closed rooms.
- This device must not be subjected to direct sunlight.
- Ventilation holes must not be covered.
- This device must be mounted in one of the approved orientations.
- The wall or control cabinet must be able to withstand four times the total weight of the device.
- The flex radius of connected cables (DVI, SDL, USB, etc.) must not be exceeded.

1.3 Mounting orientations

The following diagrams show the approved mounting orientations for the Automation PC 510.

1.3.1 Mounting orientation 0°

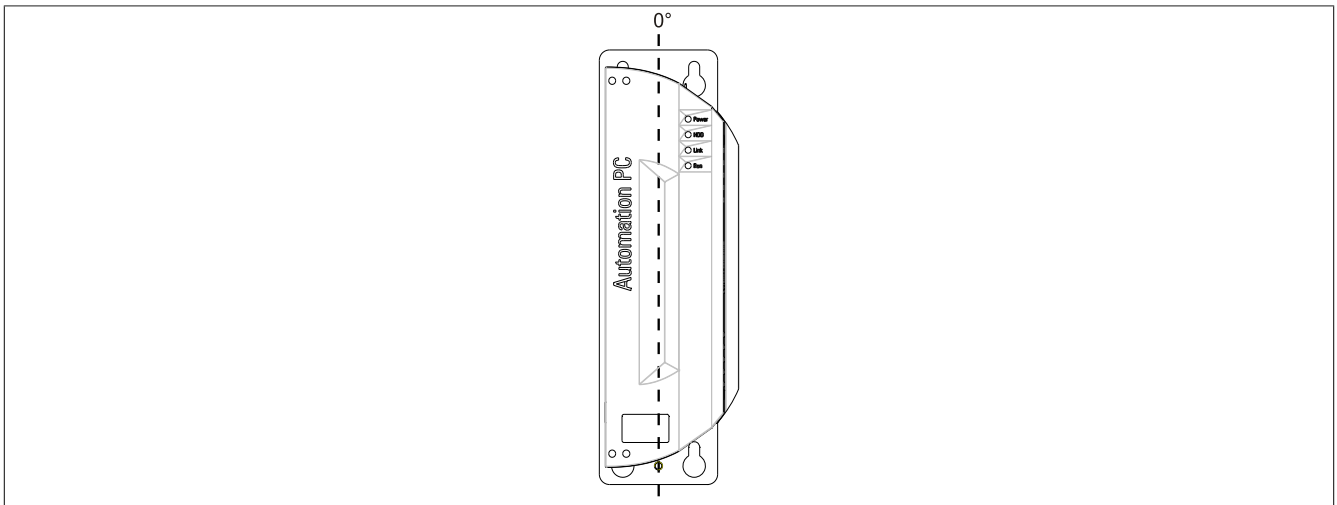


Figure 18: Mounting orientation 0°

1.3.2 Mounting orientation 90°

The maximum ambient temperature specification must be **reduced by 5°C** when using a 90° (horizontal) mounting orientation.

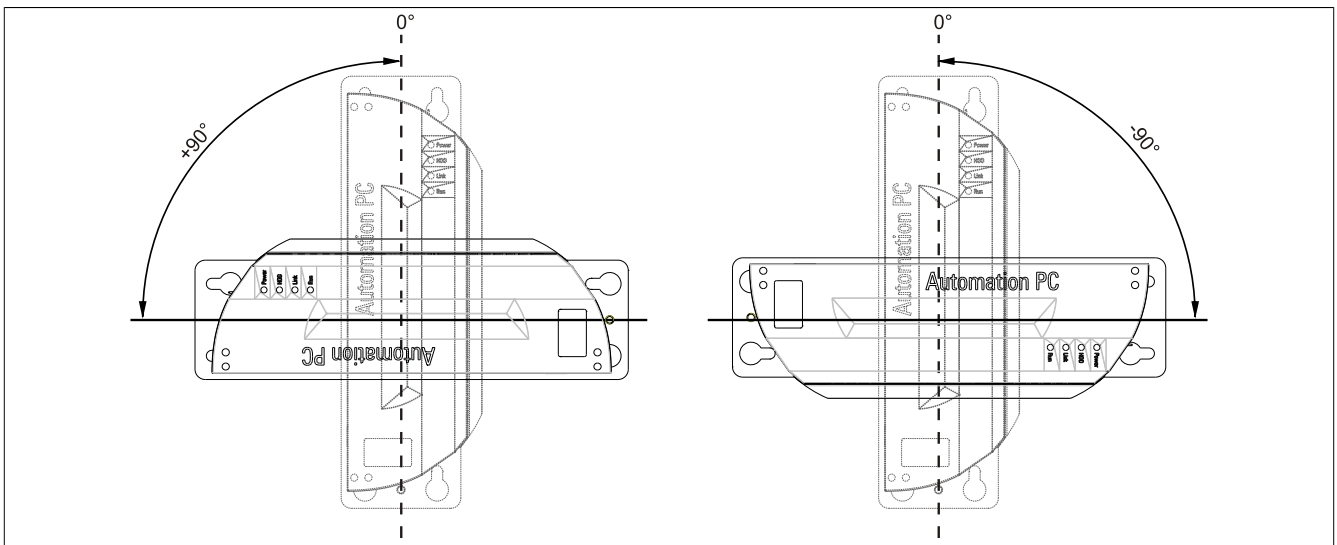


Figure 19: Mounting orientation -90° or +90°.

1.3.3 Mounting orientation 180°

There are no limitations regarding ambient temperature when mounted at 180°.

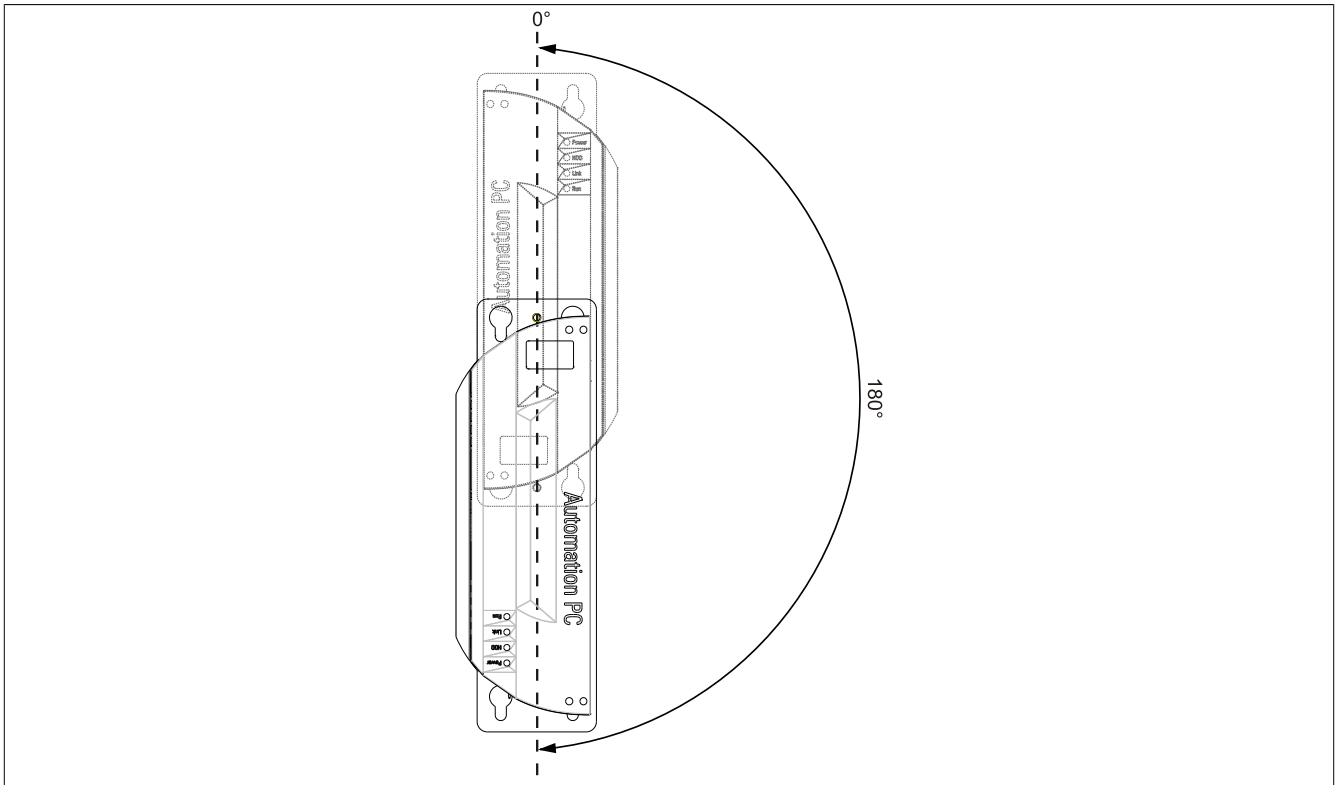


Figure 20: Mounting orientation 180°

1.4 Spacing for air circulation

In order to guarantee sufficient air circulation, allow the specified amount of space above, below, to the side and behind the Automation PC 510 devices. The minimum specified spacing is indicated in the following diagram. This applies to all Automation PC 510 variants.

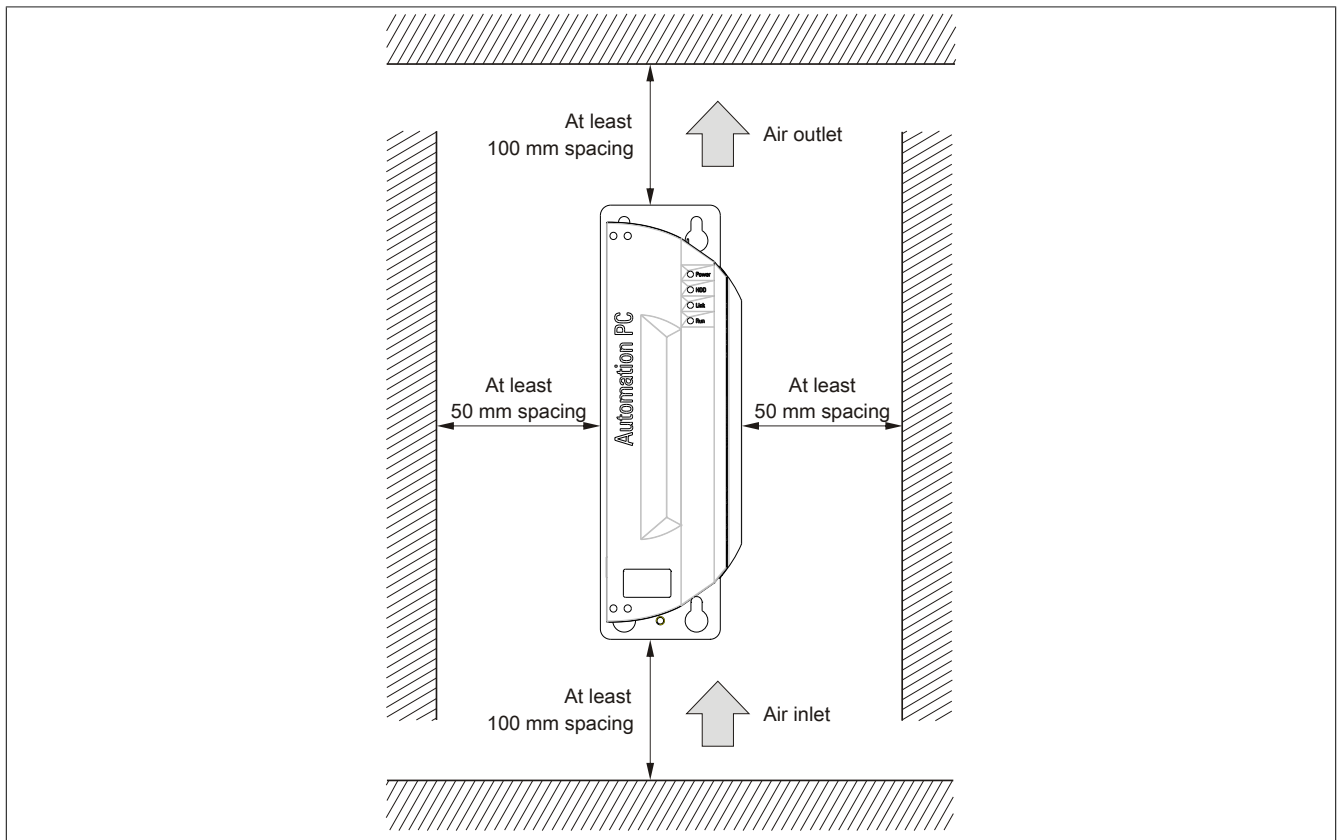


Figure 21: Spacing for air circulation

Information:

The spacing specifications for air circulation are based on the worst-case scenario for operation at the maximum specified ambient temperature (see "Temperature specifications" in the chapter "Technical data").

If the spacing specifications for air circulation cannot be adhered to, then the maximum specified temperatures for the temperature sensors (see "Temperature sensor locations" in chapter "Technical data") must be monitored by the user and appropriate measures taken if they are exceeded.

2 Cable connections

Flex radius specifications must be taken into account when laying or connecting cables.

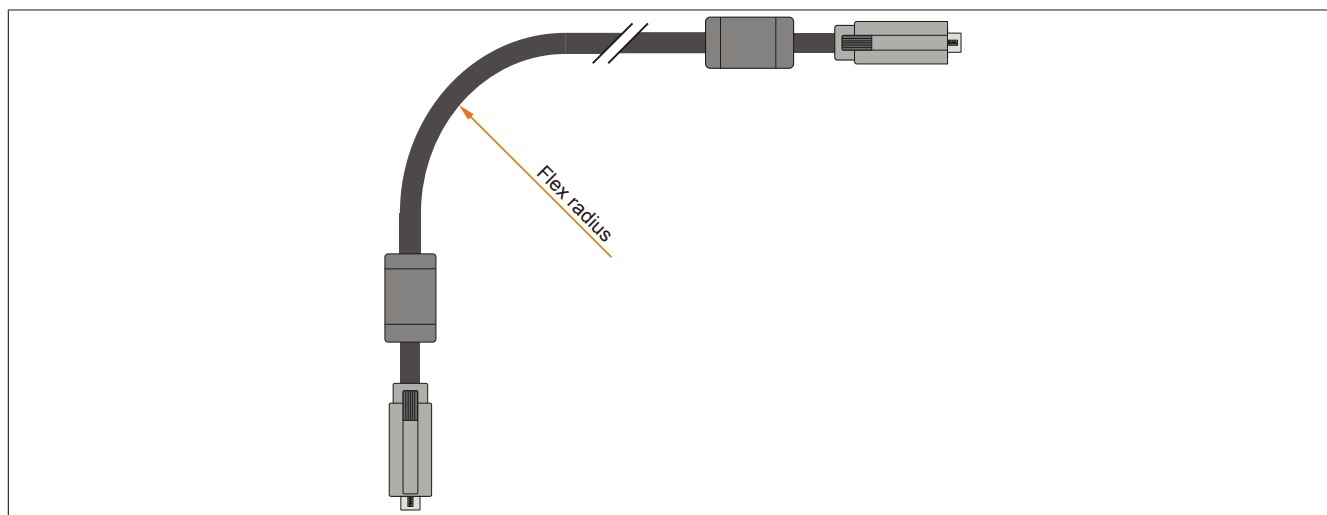


Figure 22: Flex radius - Cable connection

Information:

The specified flex radius can be found in the Automation Panel 800 or Automation Panel 900 user's manual, which can be downloaded as a PDF file from the B&R website at www.br-automation.com.

3 Grounding concept

Functional ground is a current path of low impedance between electrical circuits and ground. It is used, for example, to improve immunity to disturbances and not necessarily as a protective measure. It therefore serves only to deflect disturbances, not to provide any kind of protection against electric shock.

The functional ground on the device has 2 connections:

- Supply voltage
- Ground connection

To guarantee safe conductance of electric disturbances, the following points should be observed:

- The device should be connected to the central grounding point in the control cabinet using the shortest route possible.
- A cable with a minimum cross section of 2.5 mm^2 per connection should be used. If a cable with wire tip sleeves is connected to the 0TB103.9 or 0TB103.91 terminal block, then a cable with maximum 1.5 mm^2 per connection is possible.
- Note the line shielding concept; all connected data cables are used as shielded lines.

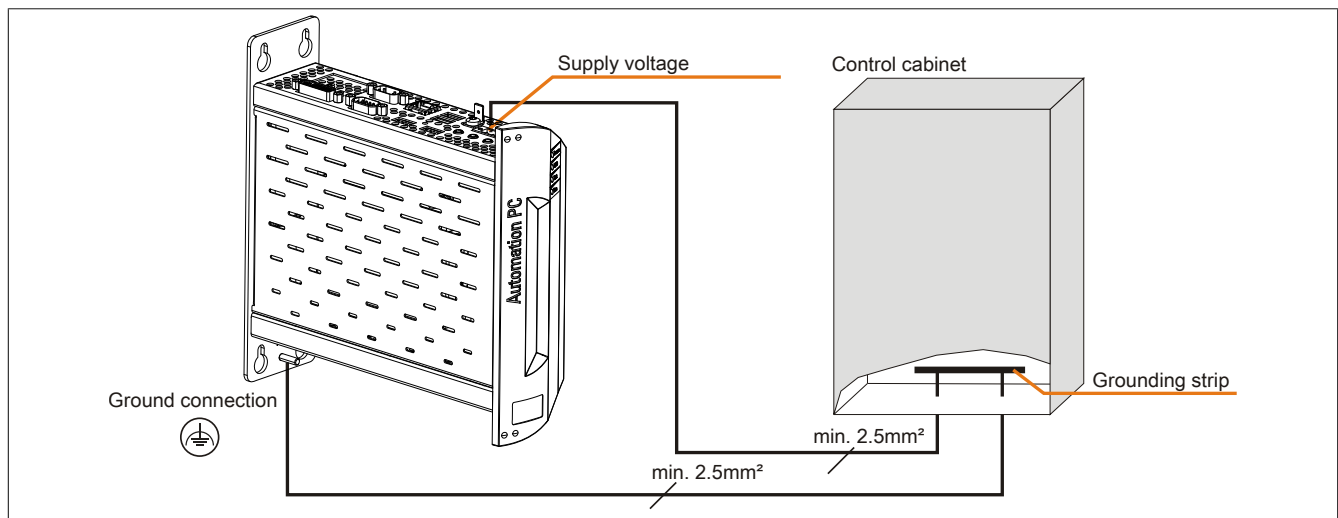


Figure 23: Grounding concept

4 General instructions for performing Temperature tests

The purpose of these instructions is to explain general procedures for performing application-specific temperature tests with B&R industrial PCs or Power Panels. However, these instructions are meant to serve only as a guideline.

4.1 Procedure

In order to obtain accurate results, the testing conditions should match the conditions in the field. This means that for the duration of the temperature tests, the target application should be running, the PC should be installed in the control cabinet that will be used, etc.

Additionally, a temperature sensor should be installed for the device being tested to provide live monitoring of the ambient temperature. In order to obtain accurate measurements, this sensor should be mounted at a distance of 5 to 10 cm from the B&R industrial PC, near the air intake (not near the exhaust).

All B&R industrial PCs and Power Panels are equipped with internal temperature sensors. These are installed in different locations for each series. The number of sensors and the temperature limits also vary from series to series.

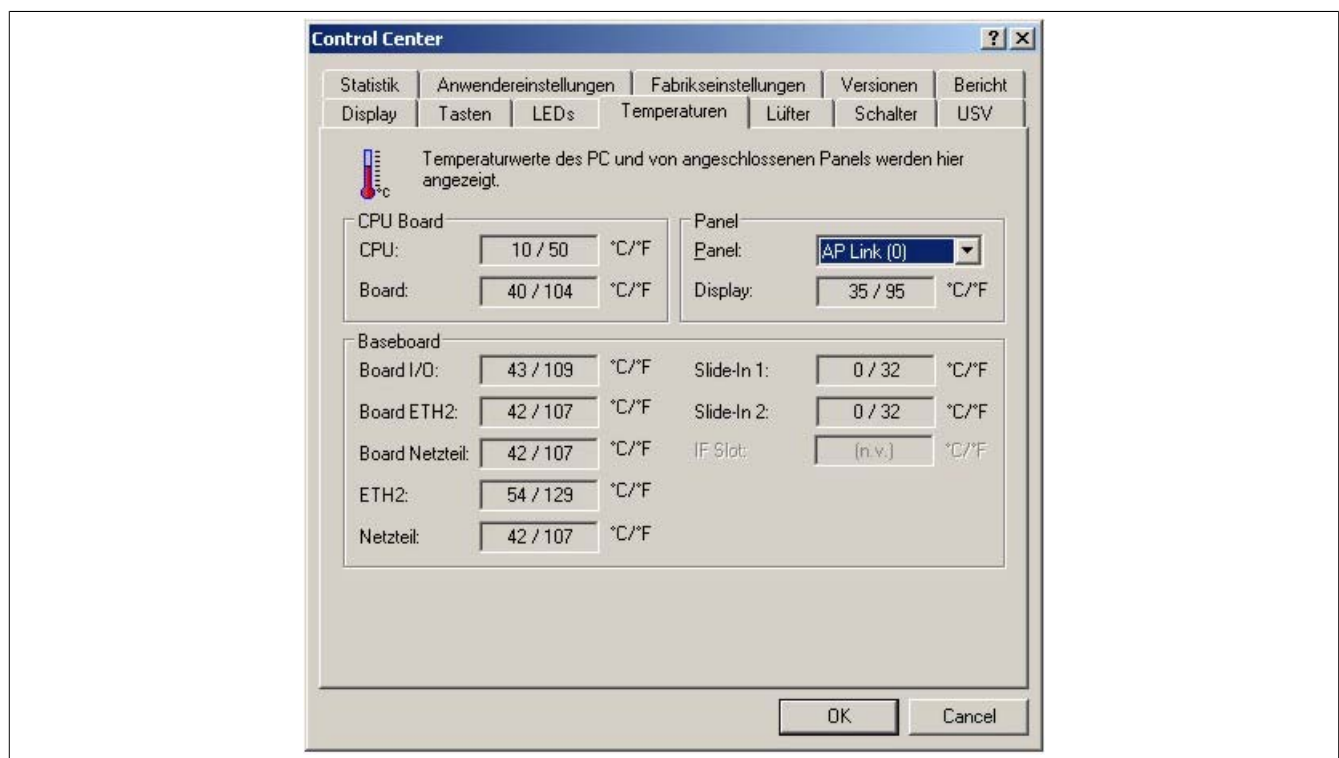
For information about the locations of temperature sensors and the maximum specified values, please see section "Temperature sensor locations" in Chapter 2 "Technical data".

To ensure a reliable evaluation of the temperature situation, a minimum of 8 hours are recommended for testing.

4.2 Evaluation of temperatures in Windows operating systems

4.2.1 Evaluation using the B&R Control Center

The B&R Control Center can be used to evaluate the temperatures. The temperatures can be viewed on the "Temperatures" tab. The B&R Control Center can be downloaded at no cost from the Downloads section of the B&R website (www.br-automation.com). The B&R Control Center uses the B&R Automation Device Interface (ADI).



A new application can be created if a historic recording of the data is required.

Information:

Software development kits such as the ADI .NET SDK are available on the B&R website (www.br-automation.com).

4.2.2 Evaluation using the BurnIn tool from Passmark

If a separate application is not created or used for temperature evaluation, then B&R recommends using the BurnIn Test software tool from the company Passmark.

Standard and Professional versions of the BurnIn tool are available. In addition to the software package, there are also various loopback adapters (serial, parallel, USB, etc.) and test CDs/DVDs available. The exact software and loopback adapters used will determine the corresponding load that can be generated on the system and peripheral devices.

Information:

Loopback adapters are also available from Passmark. More information is available at www.passmark.com.

The following screenshots are based on Passmark BurnIn Pro Version V4 and an APC810 2-slot with DVD.

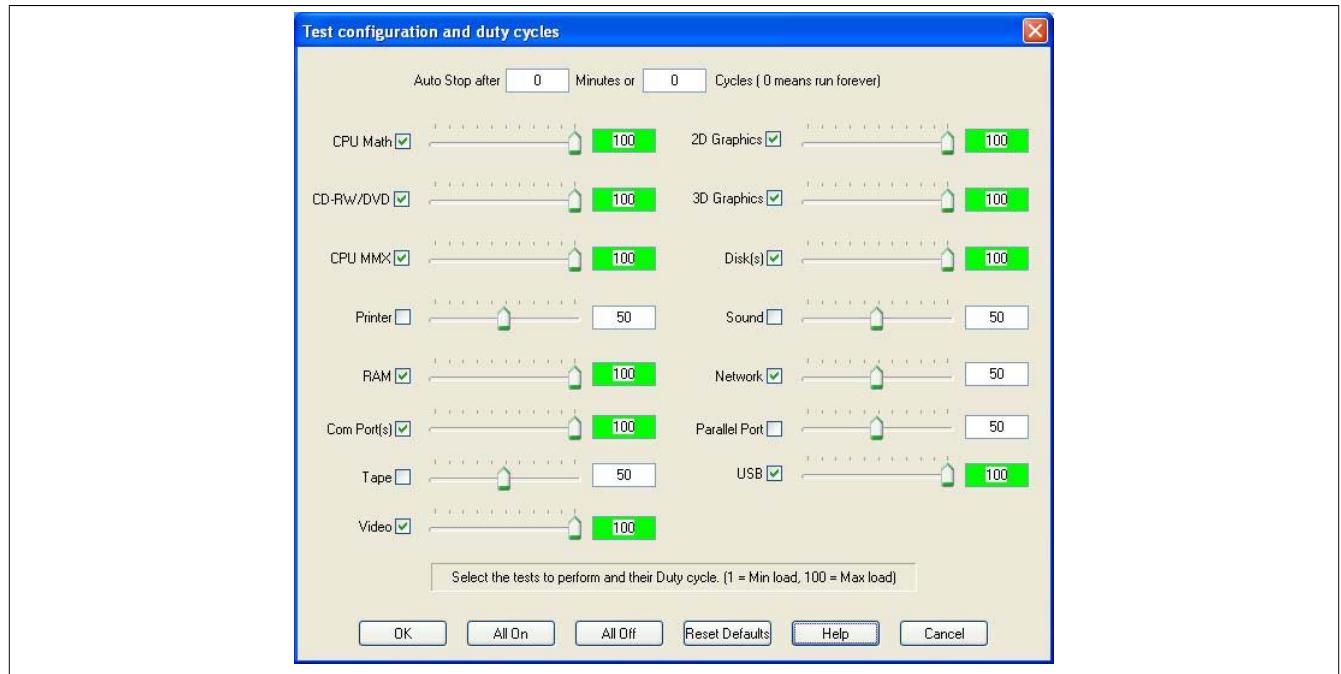


Figure 24: Settings for Passmark BurnIn Pro V4 with an APC810 2-slot with DVD

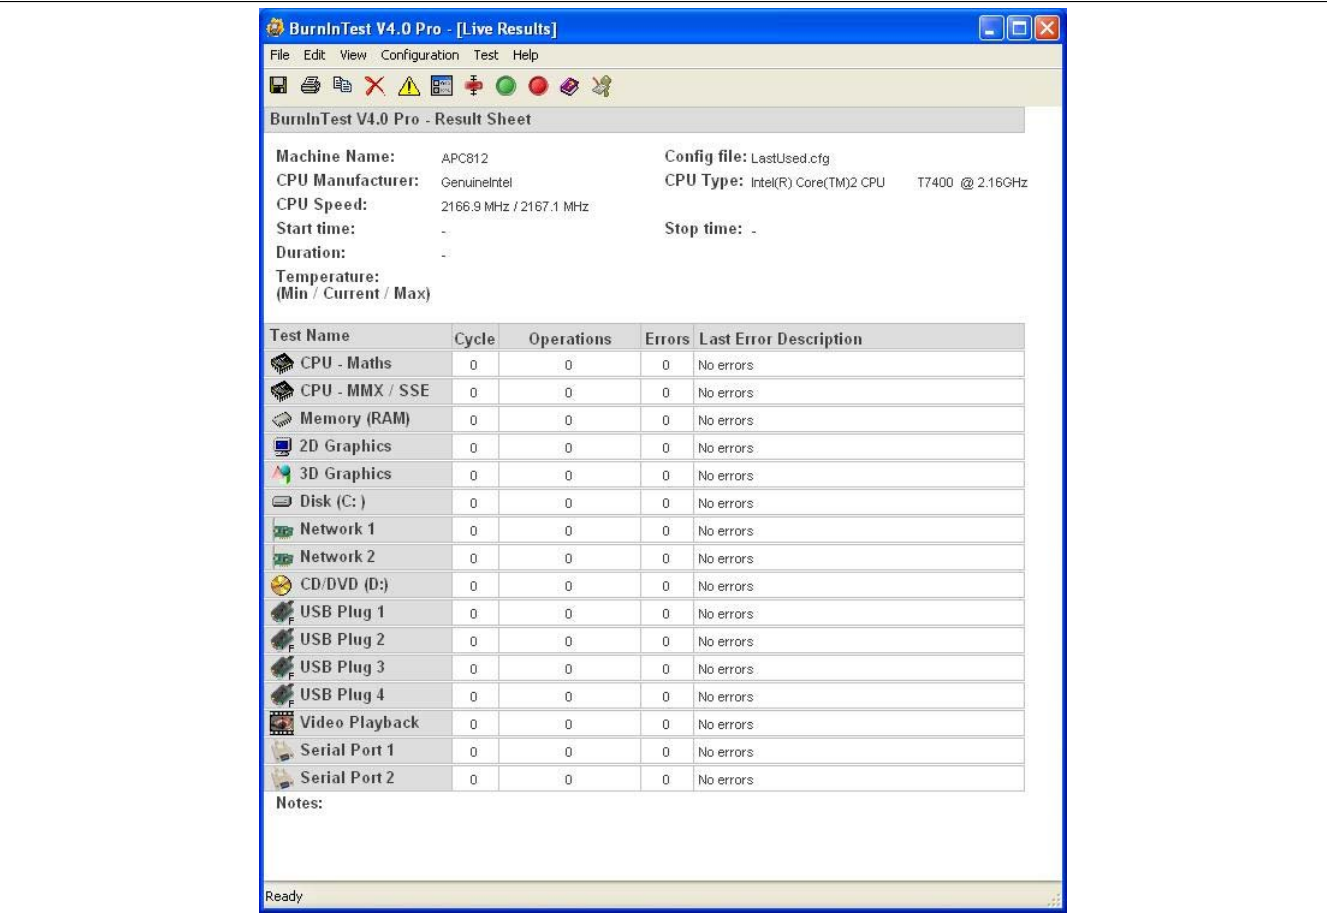


Figure 25: Test overview of an APC810 2-slot with DVD

The respective test properties may need to be fine tuned depending on the availability of a loopback adapter and DVDs.


Information:

If there is no USB loopback adapter available, USB flash drives can also be used. The USB flash drives must be available in Windows as formatted drives. The test USB must then be deselected and the USB flash drives must be configured in the disk properties.



Information:

Serial loopback adapters are relatively easy to create yourself. Simple connect several pins on the serial interface with wires.



4.3 Evaluating the temperatures in an operating system other than Windows

For applications that don't use Windows, the temperatures can be evaluated using the B&R implementation guide. In addition to the implementation guide, there are also programs available in MS-DOS.

The implementation guide only describes the device-specific functions and not the main functions of the example programs.

If code from the sample programs is used, please observe the notes in the implementation guide regarding the TODO statements, I/O access functions, etc.

Information:

Sample programs and implementation guides for all B&R Industrial PCs and Power Panel can be downloaded at no cost from the B&R website (www.br-automation.com).

4.4 Evaluating the measurement results

The maximum temperature value recorded by each sensor must not exceed the temperature limits specified in the user's manuals.

If the temperature tests cannot be performed in a climate-controlled chamber, they can still be performed in an office environment. In this case, however, it is necessary to measure the ambient temperature. Experience at B&R has shown that values measured on passive systems (systems without a fan kit) can be projected linearly based on the ambient temperature. In order to be able to project the temperature values for systems with a fan kit, the fans must be running. It is also important to consider the speed, etc.

If the temperature tests are performed in a climate controlled chamber with fans, the devices will be cooled by these fans, and the results will be skewed. The measurement results for passive devices would therefore be unusable. In order to obtain accurate results in climate controlled chambers with fans, the chamber fans must be turned off and the device must be allowed to run for a sufficient amount of time (several hours) before beginning the test.

Example using an APC810 2-slot

The following example is only valid as long as the instructions for installation and mounting orientation provided in the user's manual are followed.

Temperature sensor	Measured temperature	Projected temperature	
Ambient temperature	20°C	35°C	45°C
CPU	48°C	63°C	73°C
CPU board	51°C	66°C	76°C
Board I/O	51°C	66°C	76°C
Board ETH2	52°C	67°C	77°C
Board power supply	51°C	66°C	76°C
ETH2	65°C	80°C	90°C
Power supply	51°C	66°C	76°C

Table 80: Evaluation example using an APC810 2-slot

5 Connection examples

The following examples provide an overview of the configuration options for connecting Automation Panel 800 and Automation Panel 900 and/or Automation Panel 800 devices with the APC510. The following questions will be answered:

- How are Automation Panel 900 devices connected to the monitor / panel output of the APC510, and what needs to be considered?
- How are Automation Panel 800 devices connected to the monitor / panel output of the APC510, and what needs to be considered?
- What is "display clone" operation?
- How many Automation Panel 900 devices can be connected per line?
- How many Automation Panel 900 devices can be connected to an Automation Panel 800 device per line?
- How are the connected devices internally numbered?
- Are there limitations to the segment length and if so, what are they?
- What cables and link modules are needed?
- Do BIOS settings have to be changed for a specific configuration?

5.1 Selecting the display units

If an Automation Panel 800 and an Automation Panel 900 should be connected on the same line, the devices must have the same display type. The following table lists the AP900 devices that can be connected on the same line with an AP800 device.

Automation Panel 800	Automation Panel 900
5AP820.1505-00	5AP920.1505-01 5AP951.1505-01 5AP980.1505-01 5AP981.1505-01
5AP880.1505-00	5AP920.1505-01 5AP951.1505-01 5AP980.1505-01 5AP981.1505-01

Table 81: Selecting the display units

5.2 One Automation Panel 900 via onboard DVI

An Automation Panel 900 with max. SXGA resolution is connected to the integrated DVI interface (onboard). As an alternative, an office TFT with a DVI interface can also be operated. A separate cable is used for touch screen and USB. If USB devices are to be operated on the Automation Panel 900, the maximum distance is 5 meters. USB devices can only be connected directly to the Automation Panel (without a hub).

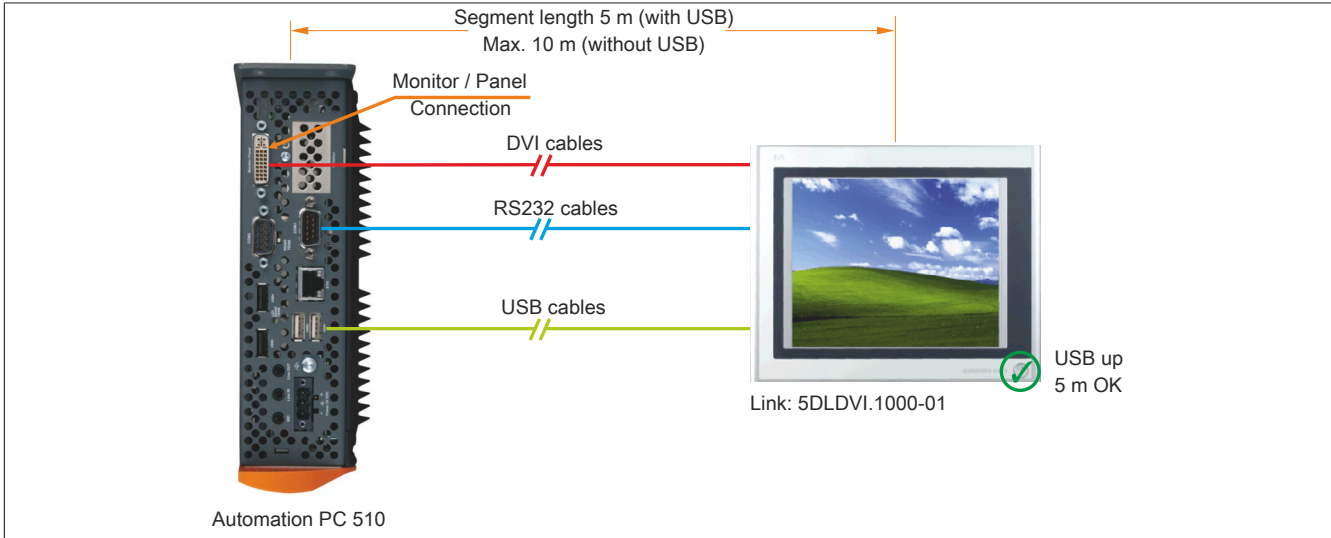


Figure 26: One Automation Panel 900 via onboard DVI (sample photo)

5.2.1 Link modules

Information:

A corresponding link module must be selected for every device used.

Model number	Description	Note
5DLDMI.1000-01	Automation Panel Link DVI receiver connections for DVI-D, RS232 and USB 2.0 (Type B); 24 VDC (screw clamp 0TB103.9 or cage clamp 0TB103.91 sold separately).	For Automation Panel 900

Table 82: Link modules

5.2.2 Cables

Select one Automation Panel 900 cable each from the 3 required types.

Model number	Description	Length
5CADVI.0018-00	DVI-D cable, 1.8 m.	1.8 m ±50 mm
5CADVI.0050-00	DVI-D cable, 5 m.	5 m ±80 mm
5CADVI.0100-00	DVI-D cable, 10 m.	10 m ±100 mm
9A0014.02	RS232 extension cable for remote operation of a display unit with touch screen, 1.8 m.	1.8 m ±50 mm
9A0014.05	RS232 extension cable for remote operation of a display unit with touch screen, 5 m.	5 m ±80 mm
9A0014.10	RS232 extension cable for remote operation of a display unit with touch screen, 10 m.	10 m ±100 mm
5CAUSB.0018-00	USB 2.0 connection cable type A - type B, 1.8 m.	1.8 m ±30 mm
5CAUSB.0050-00	USB 2.0 connection cable type A - type B, 5 m.	5 m ±50 mm

Table 83: Cables for DVI configurations

Information:

Detailed technical data about the cables can be found in the Automation Panel 900 user's manual. This can be downloaded as a PDF file from the B&R website at www.br-automation.com.

5.2.3 Possible Automation Panel units, resolutions and segment lengths

The following Automation Panel 900 units can be used. In rare cases, the segment length is limited according to the resolution.

Model number	Diagonal	Resolution	Touch screen	Keys	Max. segment length
5AP920.1043-01	10.4"	VGA	✓	-	5 m / 10 m ¹⁾
5AP920.1214-01	12.1"	SVGA	✓	-	5 m / 10 m ¹⁾
5AP920.1505-01	15.0"	XGA	✓	-	5 m / 10 m ¹⁾
5AP920.1706-01	17.0"	SXGA	✓	-	5 m / 10 m ¹⁾
5AP920.1906-01	19.0"	SXGA	✓	-	5 m / 10 m ¹⁾

Table 84: Possible Automation Panel units, resolutions and segment lengths

1) USB support is not possible on the Automation Panel 900 because USB is limited to 5 m.

Information:

The DVI transfer mode does not allow reading statistical values on Automation Panel 900 units.

5.2.4 BIOS settings

No special BIOS settings are necessary for operation.

5.3 One Automation Panel 900 via onboard SDL

An Automation Panel 900 is connected to the integrated SDL interface (onboard) via an SDL cable. USB devices can only be connected directly to the Automation Panel (without a hub).

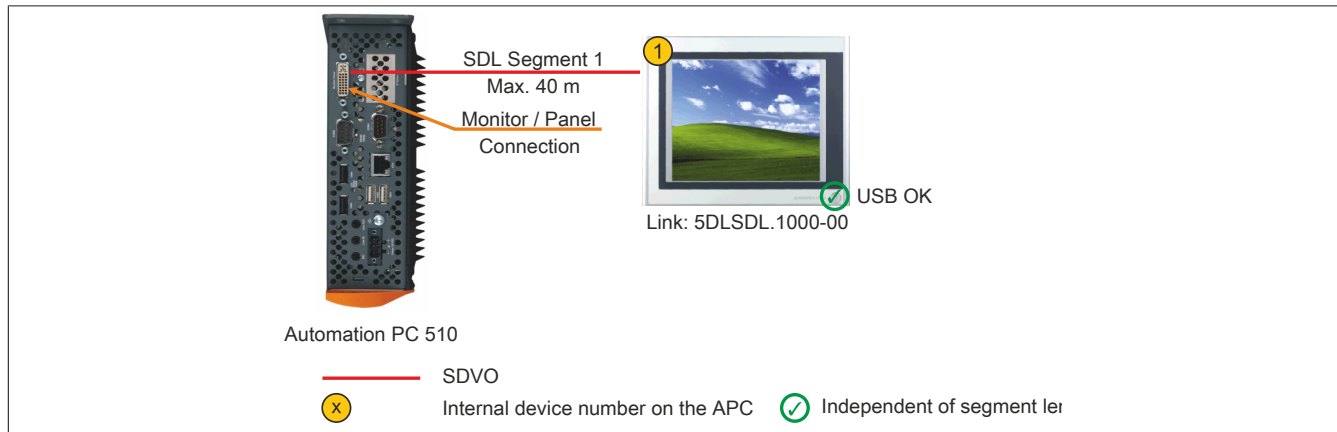


Figure 27: One Automation Panel 900 via onboard SDL (sample photo)

5.3.1 Link modules

Information:

A corresponding link module must be selected for every device used.

Model number	Description	Note
5DLSDDL.1000-00	Automation Panel Link SDL receiver Connection for SDL in, transfer of display data, touch screen, USB 1.1, matrix keys, and service data, 24 VDC (screw clamp 0TB103.9 or cage clamp 0TB103.91 sold separately).	For Automation Panel 900

Table 85: Link modules

5.3.2 Cables

Select an Automation Panel 900 cable from the following table.

Model number	Description	Length
5CASDL.0018-00	SDL cable, 1.8 m	1.8 m ±30 mm
5CASDL.0050-00	SDL cable, 5 m	5 m ±30 mm
5CASDL.0100-00	SDL cable, 10 m	10 m ±50 mm
5CASDL.0150-00	SDL cable, 15 m	15 m ±100 mm
5CASDL.0200-00	SDL cable, 20 m	20 m ±100 mm
5CASDL.0250-00	SDL cable, 25 m	25 m ±100 mm
5CASDL.0300-00	SDL cable, 30 m	30 m ±100 mm
5CASDL.0018-03	SDL flex cable, 1.8 m	1.8 m ±20 mm
5CASDL.0050-03	SDL flex cable, 5 m	5 m ±45 mm
5CASDL.0100-03	SDL flex cable, 10 m	10 m ±90 mm
5CASDL.0150-03	SDL flex cable, 15 m	15 m ±135 mm
5CASDL.0200-03	SDL flex cable, 20 m	20 m ±180 mm
5CASDL.0250-03	SDL flex cable, 25 m	25 m ±225 mm
5CASDL.0300-03	SDL flex cable, 30 m	30 m ±270 mm
5CASDL.0300-13	SDL flex cable with extender, 30 m	30 m ±280 mm
5CASDL.0400-13	SDL flex cable with extender, 40 m	40 m ±380 mm
5CASDL.0430-13	SDL flex cable with extender, 43 m	43 m ±410 mm
5CASDL.0018-01	SDL cable, 45° connector, 1.8 m	1.8 m ±30 mm
5CASDL.0050-01	SDL cable, 45° connector, 5 m	5 m ±50 mm
5CASDL.0100-01	SDL cable, 45° connector, 10 m	10 m ±100 mm
5CASDL.0150-01	SDL cable, 45° connector, 15 m	15 m ±100 mm

Table 86: Cables for SDL configurations

Information:

Detailed technical data about the cables can be found in the Automation Panel 900 user's manual. This can be downloaded as a PDF file from the B&R website at www.br-automation.com.

5.3.2.1 Cable lengths and resolutions for SDL transmission

The following table lists the relationship between segment lengths and maximum resolution depending on the SDL cable being used:

SDL cables Segment length [m]	Resolution					
	VGA 640 x 480	SVGA 800 x 600	XGA 1024 x 768	SXGA 1280 x 1024	UXGA 1600 x 1200	FHD 1920 x 1080
1.8	5CASDL.0018-00	5CASDL.0018-00	5CASDL.0018-00	5CASDL.0018-00	5CASDL.0018-00	5CASDL.0018-00
	5CASDL.0018-01	5CASDL.0018-01	5CASDL.0018-01	5CASDL.0018-01	5CASDL.0018-01	5CASDL.0018-01
	5CASDL.0018-03	5CASDL.0018-03	5CASDL.0018-03	5CASDL.0018-03	5CASDL.0018-03	5CASDL.0018-03
5	5CASDL.0050-00	5CASDL.0050-00	5CASDL.0050-00	5CASDL.0050-00	5CASDL.0050-00	5CASDL.0050-00
	5CASDL.0050-01	5CASDL.0050-01	5CASDL.0050-01	5CASDL.0050-01	5CASDL.0050-01	5CASDL.0050-01
	5CASDL.0050-03	5CASDL.0050-03	5CASDL.0050-03	5CASDL.0050-03	5CASDL.0050-03	5CASDL.0050-03
10	5CASDL.0100-00	5CASDL.0100-00	5CASDL.0100-00	5CASDL.0100-00	5CASDL.0100-00	5CASDL.0100-00
	5CASDL.0100-01	5CASDL.0100-01	5CASDL.0100-01	5CASDL.0100-01	5CASDL.0100-01	5CASDL.0100-01
	5CASDL.0100-03	5CASDL.0100-03	5CASDL.0100-03	5CASDL.0100-03	5CASDL.0100-03	5CASDL.0100-03
15	5CASDL.0150-00	5CASDL.0150-00	5CASDL.0150-00	5CASDL.0150-00	-	-
	5CASDL.0150-01	5CASDL.0150-01	5CASDL.0150-01	5CASDL.0150-01	-	-
	5CASDL.0150-03	5CASDL.0150-03	5CASDL.0150-03	5CASDL.0150-03	-	5CASDL.0150-03
20	5CASDL.0200-00	5CASDL.0200-00	5CASDL.0200-00	5CASDL.0200-00	-	-
	5CASDL.0200-03	5CASDL.0200-03	5CASDL.0200-03	5CASDL.0200-03	-	5CASDL.0200-03
25	5CASDL.0250-00	5CASDL.0250-00	5CASDL.0250-00	-	-	-
	5CASDL.0250-03	5CASDL.0250-03	5CASDL.0250-03	-	-	-
30	5CASDL.0300-00	5CASDL.0300-00	-	-	-	-
	5CASDL.0300-03	5CASDL.0300-03	5CASDL.0300-13	5CASDL.0300-13	-	5CASDL.0300-13
40	5CASDL.0400-13	5CASDL.0400-13	5CASDL.0400-13	5CASDL.0400-13	-	5CASDL.0400-13

Table 87: Cable lengths and resolutions for SDL transmission

5.3.3 BIOS settings

No special BIOS settings are necessary for operation.

For detailed information, see the user's manual for the B&R industrial PC used.

Touch screen functionality

COM C must be enabled in BIOS in order to operate the panel touch screen connected to the monitor/panel interface ("OEM features - I/O board features - LPC devices").

5.4 One Automation Panel 800 via onboard SDL

An Automation Panel 800 is connected to the integrated SDL interface (onboard) via an SDL cable. USB devices can only be connected directly to the extension keyboard (without a hub).

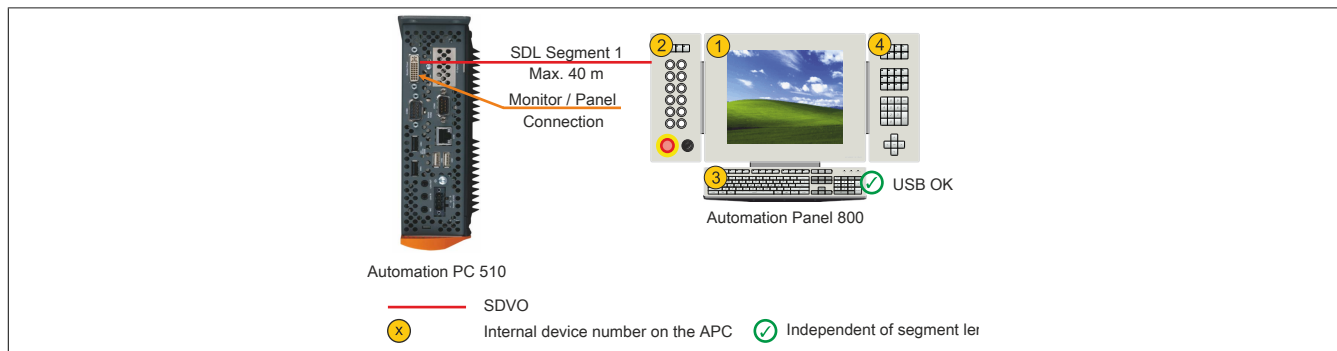


Figure 28: One Automation Panel 800 via onboard SDL (sample photo)

5.4.1 Cables

Select an Automation Panel 800 SDL cable from the following table.

Model number	Description	Length
5CASDL.0018-20	SDL cable flex for Automation Panel 800, 1.8 m.	1.8 m ±20 mm
5CASDL.0050-20	SDL cable flex for Automation Panel 800, 5 m.	5 m ±45 mm
5CASDL.0100-20	SDL cable flex for Automation Panel 800, 10 m.	10 m ±90 mm
5CASDL.0150-20	SDL cable flex for Automation Panel 800, 15 m.	15 m ±135 mm
5CASDL.0200-20	SDL cable flex for Automation Panel 800, 20 m.	20 m ±180 mm
5CASDL.0250-20	SDL cable flex for Automation Panel 800, 25 m.	25 m ±230 mm
5CASDL.0300-30	SDL cable flex for Automation Panel 800 with extender, 30 m.	30 m ±280 mm
5CASDL.0400-30	SDL cable flex for Automation Panel 800 with extender, 40 m.	40 m ±380 mm

Table 88: Cables for SDL configurations

Information:

Detailed technical data about the cables can be found in the Automation Panel 800 user's manual. This can be downloaded as a PDF file from the B&R website at www.br-automation.com.

5.4.1.1 Cable lengths and resolutions for SDL transmission

The following table lists the relationship between segment lengths and maximum resolution depending on the SDL cable being used:

Cables Segment length [m]	Resolution
	XGA 1024 x 768
1.8	5CASDL.0018-20
5	5CASDL.0050-20
10	5CASDL.0100-20
15	5CASDL.0150-20
20	5CASDL.0200-20
25	5CASDL.0250-20
30	5CASDL.0300-30
40	5CASDL.0400-30

Table 89: Cable lengths and resolutions for SDL transmission

5.4.2 BIOS settings

No special BIOS settings are necessary for operation.

For detailed information, see the user's manual for the B&R industrial PC used.

Touch screen functionality

COM C must be enabled in BIOS in order to operate the panel touch screen connected to the monitor/panel interface ("OEM features - I/O board features - LPC devices").

5.5 One AP900 and one AP800 via onboard SDL

An Automation Panel 900 and an Automation Panel 800 are connected to the integrated SDL interface (onboard) via SDL. Both of the panels show the same content (display clone).

USB is supported up to a maximum distance (segment 1 + segment 2) of 30 m on the two displays. Starting at a distance of 30 m, USB is only available on the first display (front and back) up to a maximum of 40 m. USB devices can only be connected directly to the Automation Panel 900 or extension keyboard (without a hub).

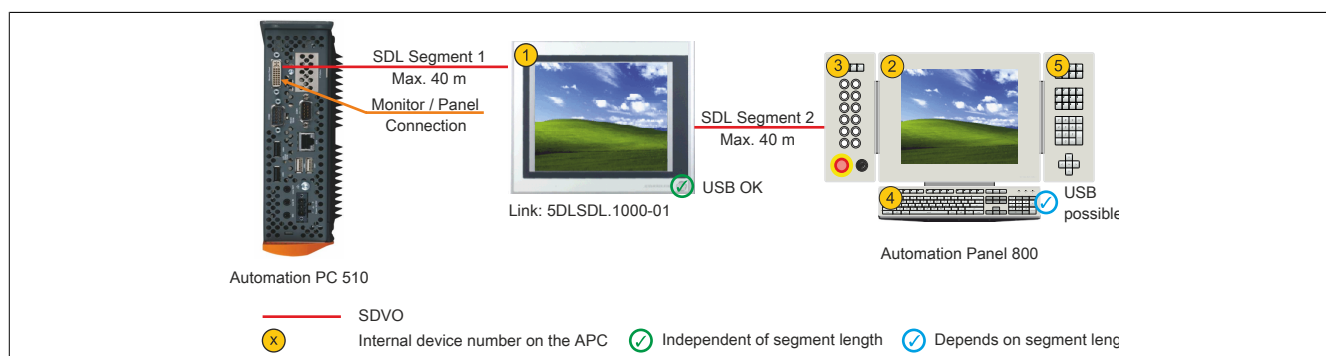


Figure 29: One AP900 and one AP800 via onboard SDL (sample photo)

5.5.1 Link modules

Information:

A corresponding link module must be selected for every device used.

Model number	Description	Note
5DLSDL.1000-01	Automation Panel Link SDL transceiver Connections for SDL in, transfer of display data, touch screen, USB 1.1, matrix keys, and service data, 24 VDC (screw clamp 0TB103.9 or cage clamp 0TB103.91 sold separately).	For Automation Panel 900

Table 90: Link modules

5.5.2 Cables

Information:

Detailed technical data about the cables can be found in the **Automation Panel 900 user's manual**. This can be downloaded as a PDF file from the B&R website at www.br-automation.com.

Information:

Detailed technical data about the cables can be found in the **Automation Panel 800 user's manual**. This can be downloaded as a PDF file from the B&R website at www.br-automation.com.

5.5.3 BIOS settings

No special BIOS settings are necessary for operation.

For detailed information, see the user's manual for the B&R industrial PC used.

Touch screen functionality

COM C must be enabled in BIOS in order to operate the panel touch screen connected to the monitor/panel interface ("OEM features - I/O board features - LPC devices").

5.6 Four Automation Panel 900 units via onboard SDL

An Automation Panel 900 is connected to the integrated SDL interface (onboard) via an SDL cable. Up to three other Automation Panels of the same type are connected to this Automation Panel and operated via SDL. All four of the panels show the same content (display clone).

USB is supported up to a maximum distance (SDL segment 1 + SDL segment 2) of 30 m on the first two panels (front and back side). From a distance of 30 m and longer, USB is only available for the first panel (front and back side). USB devices can only be connected directly to the Automation Panel (without a hub).

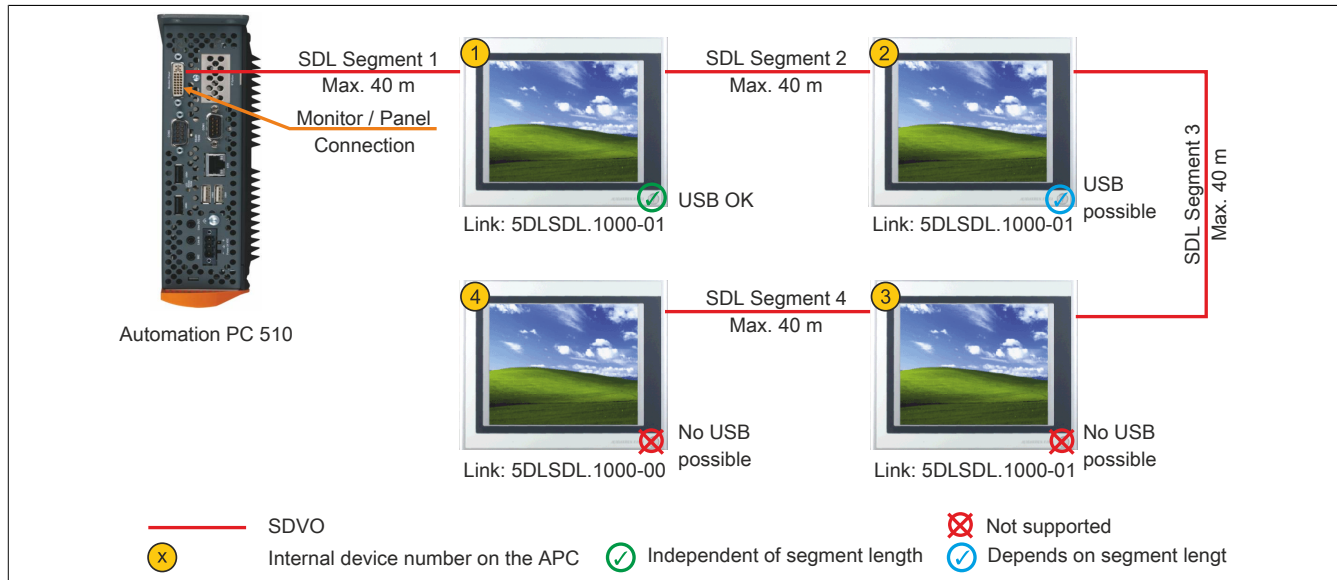


Figure 30: Four Automation Panel 900 units via onboard SDL (sample photo)

5.6.1 Link modules

Information:

A corresponding link module must be selected for every device used.

Model number	Description	Note
5DLSDL.1000-00	Automation Panel Link SDL receiver Connection for SDL in, transfer of display data, touch screen, USB 1.1, matrix keys, and service data, 24 VDC (screw clamp 0TB103.9 or cage clamp 0TB103.91 sold separately).	For Automation Panel 900
5DLSDL.1000-01	Automation Panel Link SDL transceiver Connections for SDL in, transfer of display data, touch screen, USB 1.1, matrix keys, and service data, 24 VDC (screw clamp 0TB103.9 or cage clamp 0TB103.91 sold separately).	For Automation Panel 900

Table 91: Link modules

5.6.2 Cables

Select an Automation Panel 900 cable from the following table.

Model number	Description	Length
5CASDL.0018-00	SDL cable, 1.8 m	1.8 m ±30 mm
5CASDL.0050-00	SDL cable, 5 m	5 m ±30 mm
5CASDL.0100-00	SDL cable, 10 m	10 m ±50 mm
5CASDL.0150-00	SDL cable, 15 m	15 m ±100 mm
5CASDL.0200-00	SDL cable, 20 m	20 m ±100 mm
5CASDL.0250-00	SDL cable, 25 m	25 m ±100 mm
5CASDL.0300-00	SDL cable, 30 m	30 m ±100 mm
5CASDL.0018-03	SDL flex cable, 1.8 m	1.8 m ±20 mm
5CASDL.0050-03	SDL flex cable, 5 m	5 m ±45 mm
5CASDL.0100-03	SDL flex cable, 10 m	10 m ±90 mm
5CASDL.0150-03	SDL flex cable, 15 m	15 m ±135 mm
5CASDL.0200-03	SDL flex cable, 20 m	20 m ±180 mm
5CASDL.0250-03	SDL flex cable, 25 m	25 m ±225 mm
5CASDL.0300-03	SDL flex cable, 30 m	30 m ±270 mm
5CASDL.0300-13	SDL flex cable with extender, 30 m	30 m ±280 mm
5CASDL.0400-13	SDL flex cable with extender, 40 m	40 m ±380 mm
5CASDL.0430-13	SDL flex cable with extender, 43 m	43 m ±410 mm

Table 92: Cables for SDL configurations

Model number	Description	Length
5CASDL.0018-01	SDL cable, 45° connector, 1.8 m	1.8 m ±30 mm
5CASDL.0050-01	SDL cable, 45° connector, 5 m	5 m ±50 mm
5CASDL.0100-01	SDL cable, 45° connector, 10 m	10 m ±100 mm
5CASDL.0150-01	SDL cable, 45° connector, 15 m	15 m ±100 mm

Table 92: Cables for SDL configurations

Information:

Detailed technical data about the cables can be found in the Automation Panel 900 user's manual. This can be downloaded as a PDF file from the B&R website at www.br-automation.com.

5.6.2.1 Cable lengths and resolutions for SDL transmission

The following table lists the relationship between segment lengths and maximum resolution depending on the SDL cable being used:

SDL cables Segment length [m]	Resolution					
	VGA 640 x 480	SVGA 800 x 600	XGA 1024 x 768	SXGA 1280 x 1024	UXGA 1600 x 1200	FHD 1920 x 1080
1.8	5CASDL.0018-00	5CASDL.0018-00	5CASDL.0018-00	5CASDL.0018-00	5CASDL.0018-00	5CASDL.0018-00
	5CASDL.0018-01	5CASDL.0018-01	5CASDL.0018-01	5CASDL.0018-01	5CASDL.0018-01	5CASDL.0018-01
	5CASDL.0018-03	5CASDL.0018-03	5CASDL.0018-03	5CASDL.0018-03	5CASDL.0018-03	5CASDL.0018-03
5	5CASDL.0050-00	5CASDL.0050-00	5CASDL.0050-00	5CASDL.0050-00	5CASDL.0050-00	5CASDL.0050-00
	5CASDL.0050-01	5CASDL.0050-01	5CASDL.0050-01	5CASDL.0050-01	5CASDL.0050-01	5CASDL.0050-01
	5CASDL.0050-03	5CASDL.0050-03	5CASDL.0050-03	5CASDL.0050-03	5CASDL.0050-03	5CASDL.0050-03
10	5CASDL.0100-00	5CASDL.0100-00	5CASDL.0100-00	5CASDL.0100-00	5CASDL.0100-00	5CASDL.0100-00
	5CASDL.0100-01	5CASDL.0100-01	5CASDL.0100-01	5CASDL.0100-01	5CASDL.0100-01	5CASDL.0100-01
	5CASDL.0100-03	5CASDL.0100-03	5CASDL.0100-03	5CASDL.0100-03	5CASDL.0100-03	5CASDL.0100-03
15	5CASDL.0150-00	5CASDL.0150-00	5CASDL.0150-00	5CASDL.0150-00	-	-
	5CASDL.0150-01	5CASDL.0150-01	5CASDL.0150-01	5CASDL.0150-01	-	-
	5CASDL.0150-03	5CASDL.0150-03	5CASDL.0150-03	5CASDL.0150-03	-	5CASDL.0150-03
20	5CASDL.0200-00	5CASDL.0200-00	5CASDL.0200-00	5CASDL.0200-00	-	-
	5CASDL.0200-03	5CASDL.0200-03	5CASDL.0200-03	5CASDL.0200-03	-	5CASDL.0200-03
25	5CASDL.0250-00	5CASDL.0250-00	5CASDL.0250-00	-	-	-
	5CASDL.0250-03	5CASDL.0250-03	5CASDL.0250-03	-	-	-
30	5CASDL.0300-00	5CASDL.0300-00	-	-	-	-
	5CASDL.0300-03	5CASDL.0300-03	5CASDL.0300-13	5CASDL.0300-13	-	5CASDL.0300-13
40	5CASDL.0400-13	5CASDL.0400-13	5CASDL.0400-13	5CASDL.0400-13	-	5CASDL.0400-13

Table 93: Cable lengths and resolutions for SDL transmission

5.6.3 BIOS settings

No special BIOS settings are necessary for operation.

For detailed information, see the user's manual for the B&R industrial PC used.

Touch screen functionality

COM C must be enabled in BIOS in order to operate the panel touch screen connected to the monitor/panel interface ("OEM features - I/O board features - LPC devices").

6 Connecting peripheral USB devices

Warning!

Peripheral USB devices can be connected to these USB ports. Due to the vast number of USB devices available on the market, B&R cannot guarantee their performance. B&R does ensure the performance of all USB devices that they provide.

6.1 Locally on the APC510

Many different peripheral USB devices can be connected to the 4 USB ports. These USB interfaces can each handle a load of 1 A. The maximum transfer rate is USB 2.0.



Figure 31: Local connection of USB peripheral devices on the APC510

6.2 Remote connection to Automation Panel 900 via DVI

Many different peripheral USB devices can be connected to the 2 or 3 USB ports on the Automation Panel 900. These can each handle a load of 500 mA. The maximum transfer rate is USB 2.0.

Information:

Only end devices (no hubs) can be connected to the Automation Panel 900.



Figure 32: Remote connection of USB peripheral devices to the APC900 via DVI

6.3 Remote connection to Automation Panel 800 / 900 via SDL

Many different peripheral USB devices can be connected to the 2 or 3 USB ports on Automation Panel 900 and/or USB connections on the Automation Panel 800 devices. These can each handle a load of 500 mA. The maximum transfer rate is USB 1.1.

Information:

Only end devices (no hubs) can be connected to the Automation Panel 800/900.



Figure 33: Remote connection of USB peripheral devices to the APC800/900 via SDL

Chapter 4 • Software

1 BIOS options

Information:

The following diagrams, BIOS menu items and their descriptions refer to BIOS version 1.00. It is therefore possible that these diagrams and BIOS descriptions will not correspond with the BIOS version actually installed.

1.1 General information

BIOS is an acronym for "Basic Input/Output System". It is the most basic standardized interface between the user and the system (hardware). The BIOS system used in this B&R industrial PC is produced by Insyde.

The BIOS Setup utility can be used to modify basic system configuration settings. These settings are stored in CMOS and EEPROM memory (as a backup).

CMOS data is buffered by a battery (if present) and continues to remain stored on the B&R Industrial PC even when the power is turned off (no 24 VDC supply).

1.2 BIOS setup and boot procedure

BIOS is immediately activated when switching on the power supply or pressing the power button on the B&R Industrial PC. The system checks if the setup data from EEPROM memory is "OK". If the data is "OK", then it is transferred to CMOS. If the data is "not OK", then the CMOS data is checked to see whether it is valid. An error message is output if the CMOS data contains errors, and the boot procedure can be continued by pressing <F1>. To prevent an error message from appearing at each restart, the BIOS Setup utility can be opened by pressing . The settings can then be re-saved.

BIOS reads the system configuration information, checks and configures the system with the Power-On Self-Test (POST).

When these "preliminaries" are finished, BIOS seeks an operating system on the available data storage devices (hard drive, floppy drive, etc.). BIOS then launches the operating system and hands over to it the control of system operations.

To enter BIOS Setup, the <F2> key must be pressed after the USB controller has been initialized as soon as the following message appears on the monitor (during POST): "Press F2 to go to Setup Utility"

Information:

The POST screen is only displayed for a fraction of a second due to optimized boot procedures. It is however, still possible to enter BIOS.

Processor Type : Intel(R) Atom(TM) CPU Z520 @ 1.33GHz

System Memory Speed : 533 MHz

CPUID : 106C2

F2 is pressed. Go to Setup Utility.

Other Device 1 : BR-SSD-C004G-01-0101

Figure 34: Boot screen

1.2.1 BIOS setup keys

The following keys are enabled during POST:

Information:

Key signals from USB keyboards will only be registered after the USB controller has been initialized.

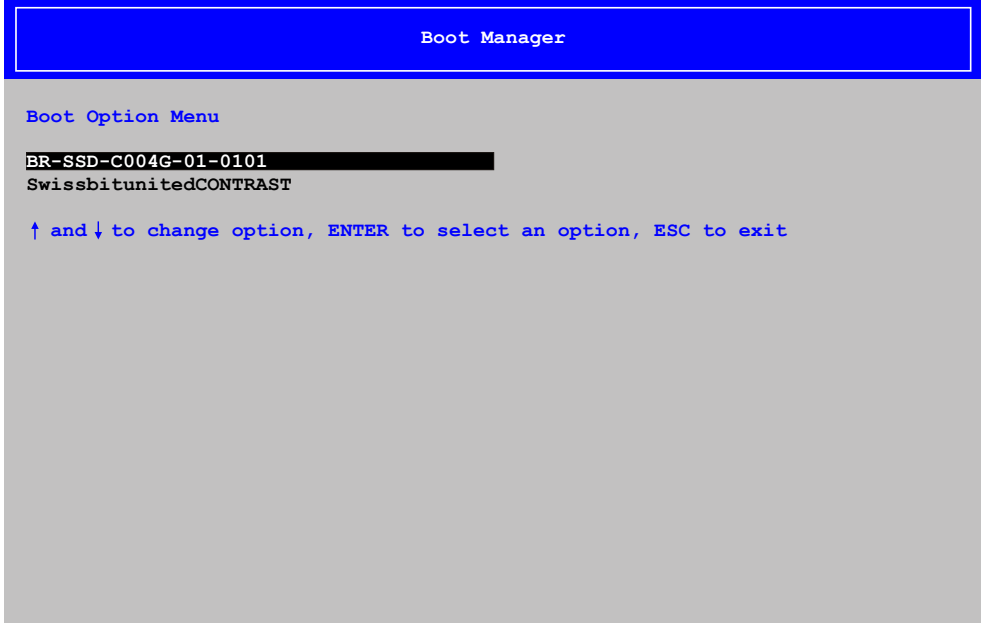
Keys	Function
F2	Opens the main BIOS Setup screen
F12	Opens the boot menu. This list all bootable devices that are connected to the system. Select the device to boot from with cursor ↑, cursor ↓ and <ENTER>. Use the ESC key to exit the boot menu.
	
<Pause>	Pauses POST. Pressing any other key resumes POST.

Table 94: BIOS-relevant keys for POST

The following keys can be used once inside BIOS Setup:

Key	Function
F1	Opens general help information
Cursor ↑	Moves to the previous item
Cursor ↓	Moves to the next item
Cursor ←	Moves to the previous menu
Cursor →	Go to the next menu
F5/F6	Change BIOS settings
Enter	Changes to the selected screen
F9	Loads and configures CMOS default values for all BIOS settings
F10	Saves and exits
ESC	Exits a submenu

Table 95: BIOS-relevant keys

1.3 Main

Immediately after the <F2> key is pressed during startup, the main BIOS setup menu appears.

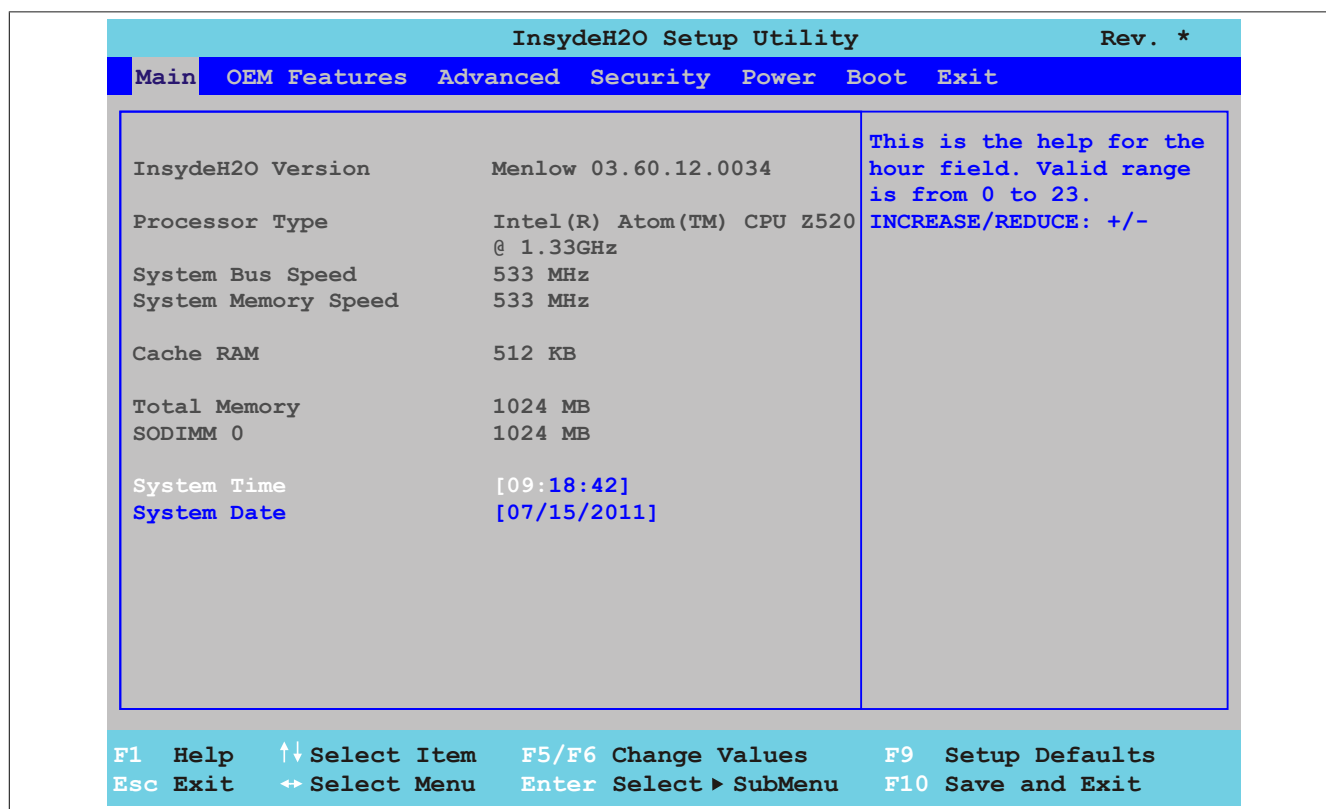


Figure 35: US15W Main - Menu

BIOS setting	Description	Configuration options	Effect
InsydeH2O Version	Displays the BIOS InsydeH2O version.	None	-
Processor Type	Displays the processor type	None	-
System Bus Speed	Displays the System Bus speed		
System Memory Speed	Displays the system memory speed.	None	-
RAM cache	Displays the Cache RAM in the system.	None	-
Total memory	Displays the entire system memory size.	None	-
SODIMM 0	Displays the amount of RAM in the SODIMM 0 slot.	None	-
System time	The currently configured system time setting. This is buffered by the CMOS battery when the system is switched off.	Changes the system time	Sets the system time in the format Hour:Minute:Second (hh:mm:ss)
System date	The currently configured system date. This is buffered by the CMOS battery when the system is switched off.	Changes the system date	Sets the system date in the format Month:Day:Year (mm:dd:yyyy)

Table 96: US15W - Main menu setting options

1.4 OEM features

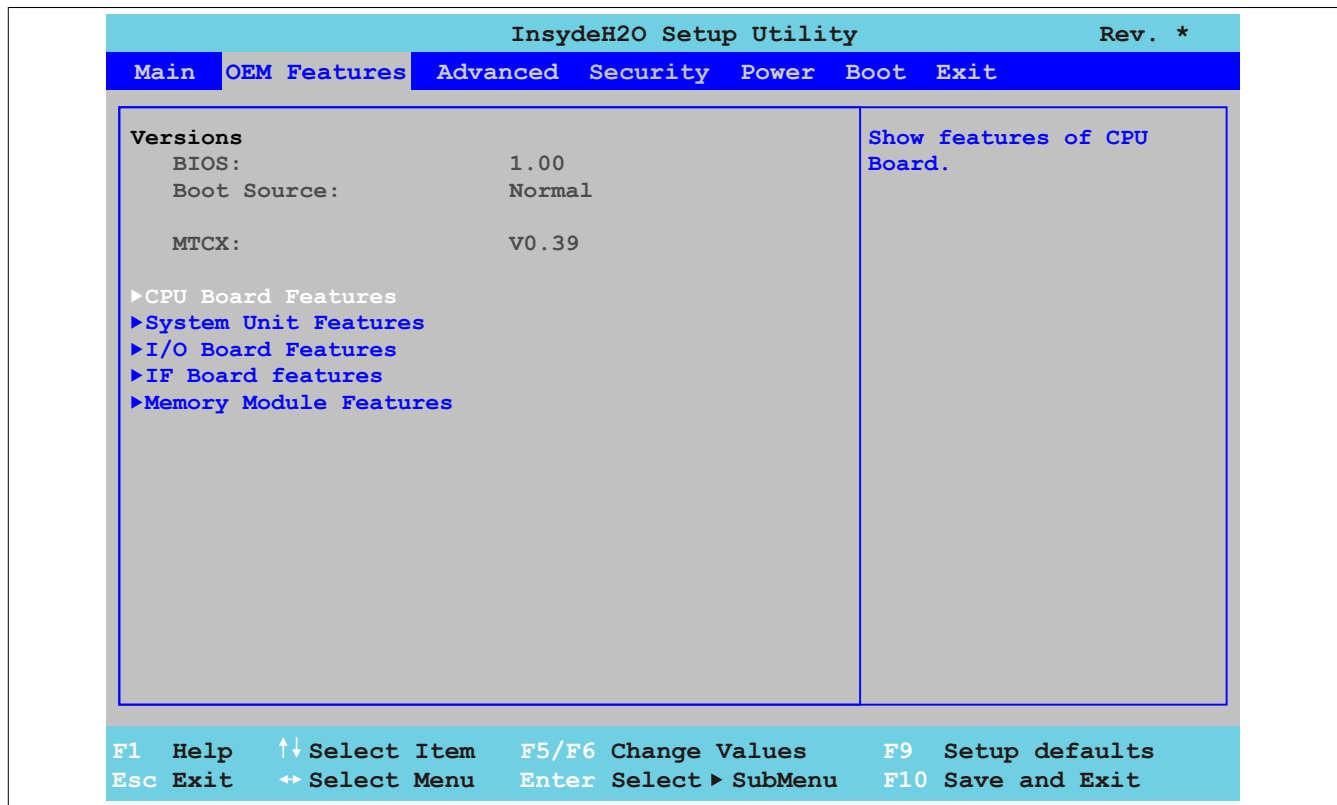


Figure 36: US15W OEM Features - Menu

BIOS setting	Description	Configuration options	Effect
BIOS	Displays the installed B&R BIOS version	None	-
Boot Source	Displays whether the Normal BIOS version or the backup BIOS version (backup) is booted.		Information: If a BIOS update failed, then the back-up BIOS will be loaded automatically. The BIOS update can then be attempted again.
MTCX	Displays the installed MTCX version	None	
CPU board features	Displays device-specific information and setup of device specific values for the CPU board.	Enter	
System unit features	Displays device-specific information and setup of device specific values for the system unit.	Enter	Opens the submenu See "System unit features" on page 101
I/O board features¹⁾	Displays device-specific information for the I/O board.	Enter	Opens the submenu See "I/O board features" on page 105
IF board features²⁾	Displays device-specific information for the IF board.	Enter	Opens the submenu See "IF board features" on page 110
Memory module features	Displays device-specific information for the main memory	Enter	Opens the submenu See "Memory module features" on page 112

Table 97: US15W OEM Features - Menu setting options

- 1) This submenu is only displayed when there is an I/O board connected to the system unit.
- 2) This submenu is only displayed when there is an interface board connected to the system unit.

1.4.1 CPU board features

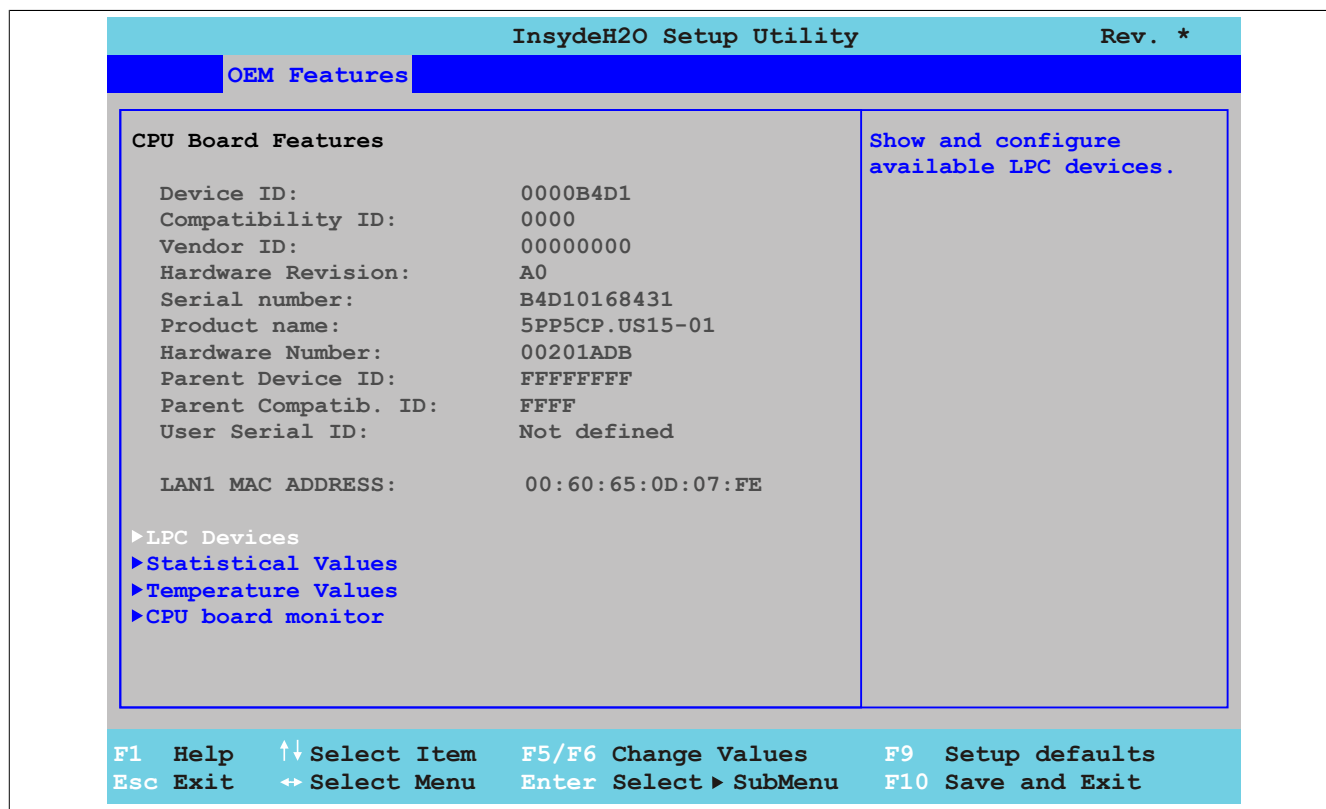


Figure 37: US15W OEM Features - CPU Board Features

BIOS setting	Description	Configuration options	Effect
Device ID	Displays the device ID of the CPU board	None	-
Compatibility ID	Displays the version of the device within the same B&R device ID. This ID is needed for Automation Runtime.	None	-
Vendor ID	Displays the vendor ID	None	-
Hardware Revision	Displays the CPU board hardware revision	None	-
Serial number	Displays the B&R serial number	None	-
Product name	Displays the B&R model number	None	-
Hardware Number	Displays the CPU board hardware number.	None	-
Parent device ID	Displays the manufacturer number	None	-
Parent Compatib. ID	Displays the manufacturer ID	None	-
User serial ID	Displays the user serial ID. This 8-digit hexadecimal value can be freely specified by the user (e.g. to give the device a unique ID) and can only be changed using the "B&R Control Center" included with the ADI driver.	None	-
LAN1 MAC ADDRESS	Displays the assigned MAC address for the ETH interface	None	-
LPC devices	Configuration of the LPC Devices.	Enter	Opens the submenu See "LPC devices" on page 97
Statistical values	Displays statistical values	Enter	Opens the submenu See "Statistical values" on page 98
Temperature values	Displays current temperature values	Enter	Opens the submenu See "Temperature values" on page 99
CPU Board Monitor	Displays the current voltage values on the CPU board being used.	Enter	Opens the submenu See "CPU board monitor" on page 100

Table 98: US15W OEM Features - CPU Board Features setting options

1.4.1.1 LPC devices

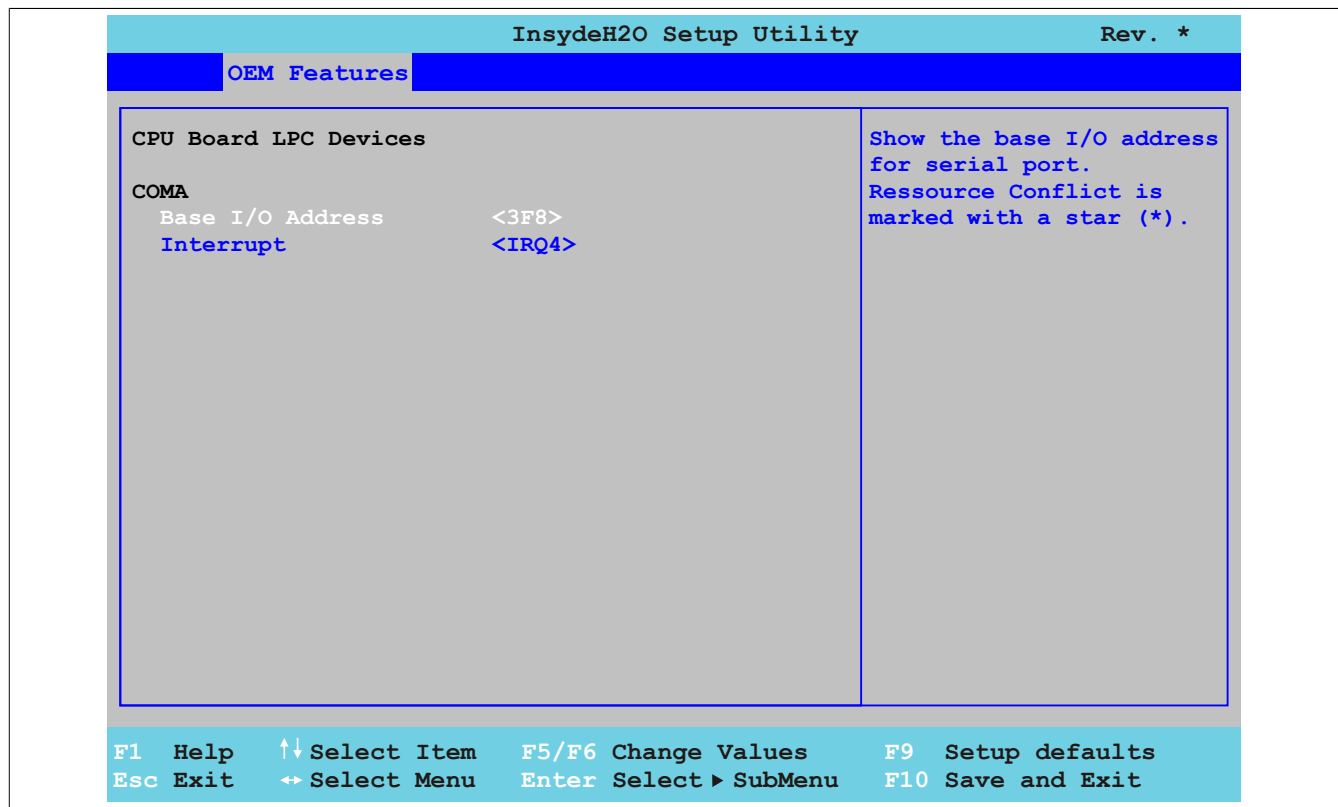


Figure 38: US15W OEM features - CPU board features - LPC devices

BIOS setting	Description	Configuration options	Effect
COMA	Settings for the COM serial interface	None	-
Base I/O Address	Selects the base I/O address for the COM port	Disabled, 238, 2E8, 2F8, 328, 338, 3E8, 3F8	Disables or assigns the selected base I/O address.
Interrupt	Selection of the interrupt for the COM port.	IRQ3, IRQ4, IRQ5, IRQ6, IRQ10, IRQ11, IRQ12	Selected interrupt is assigned.

Table 99: US15W OEM Features - CPU Board Features - LPC Devices setting options

Information:

A resource conflict can occur regarding the Base I/O address or Interrupt settings, which will cause a warning. In order to make the settings anyways, the setting must first be made on the Base I/O address or Interrupt being that is used.

1.4.1.2 Statistical values

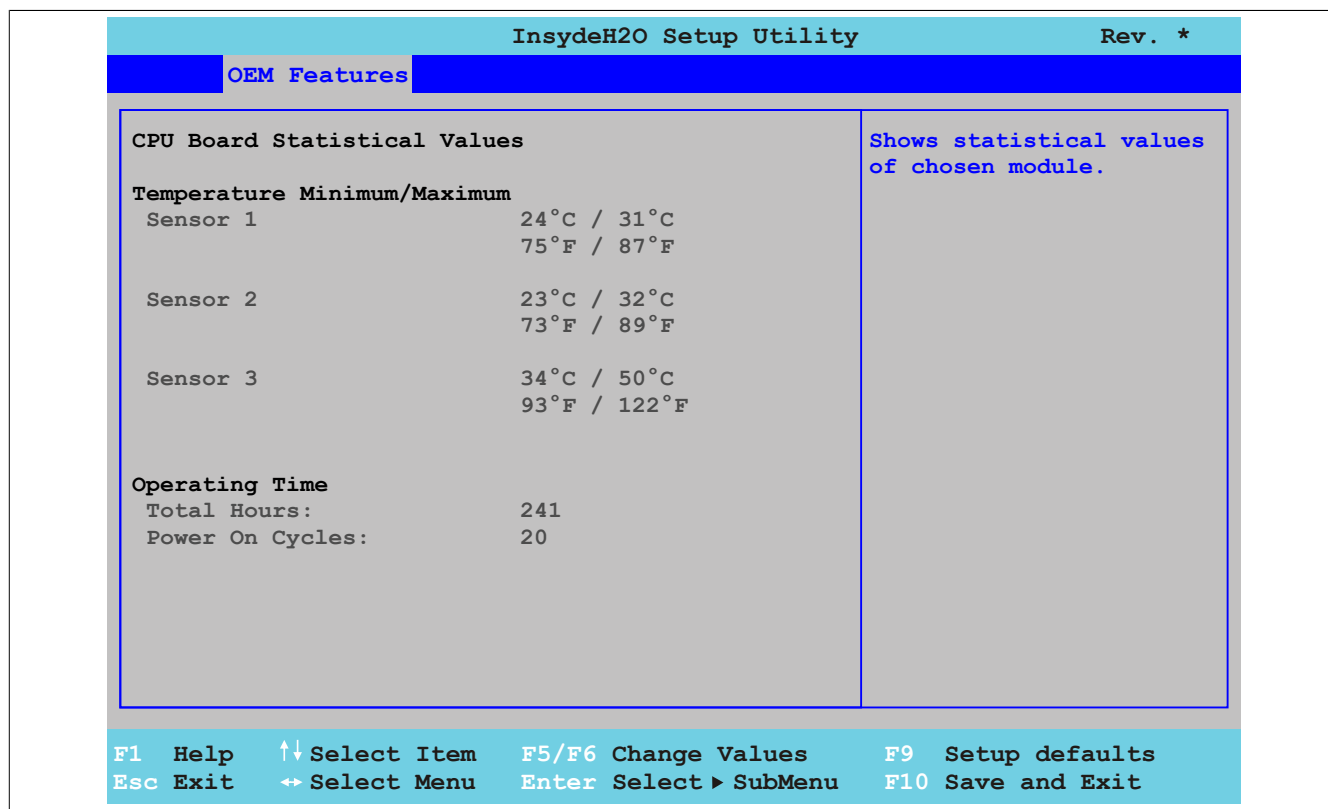


Figure 39: US15W OEM features - CPU board features- Statistical values

BIOS setting	Description	Configuration options	Effect
Sensor 1	Displays the minimum and maximum temperature of sensor 1 (interfaces) in °C and °F.	None	-
Sensor 2	Displays the minimum and maximum temperature of sensor 2 (CPU) in °C and °F.	None	-
Sensor 3	Displays the minimum and maximum temperature of sensor 3 (main memory) in °C and °F.	None	-
Total hours	Displays the runtime in hours	None	-
Power on cycles	Displays the number of power-on cycles. Each restart increases the counter by one.	None	-

Table 100: US15W OEM Features - CPU Board Features - Statistical Values setting options

1.4.1.3 Temperature values

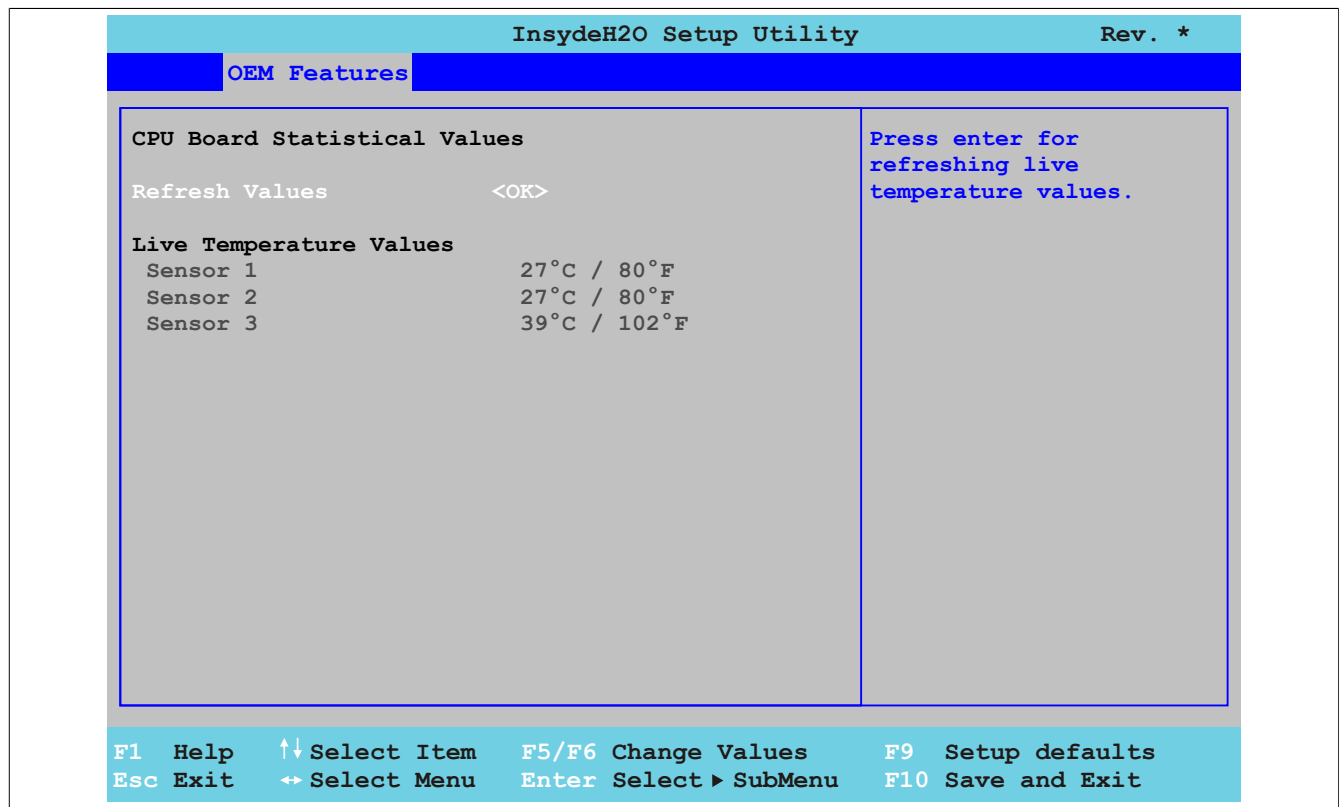


Figure 40: US15W OEM features - CPU board features- Temperature values

BIOS setting	Description	Configuration options	Effect
Refresh values	Option for refreshing the temperature values.	OK	Refreshes the temperature values shown below.
Sensor 1	Displays the current temperature of Sensor 1 (interfaces) in °C and °F.	None	-
Sensor 2	Displays the current temperature of sensor 2 (CPU) in °C and °F	None	-
Sensor 3	Displays the current temperature of sensor 3 (main memory) in °C and °F.	None	-

Table 101: US15W OEM Features - CPU Board Features - Temperature Values setting options

1.4.1.4 CPU board monitor

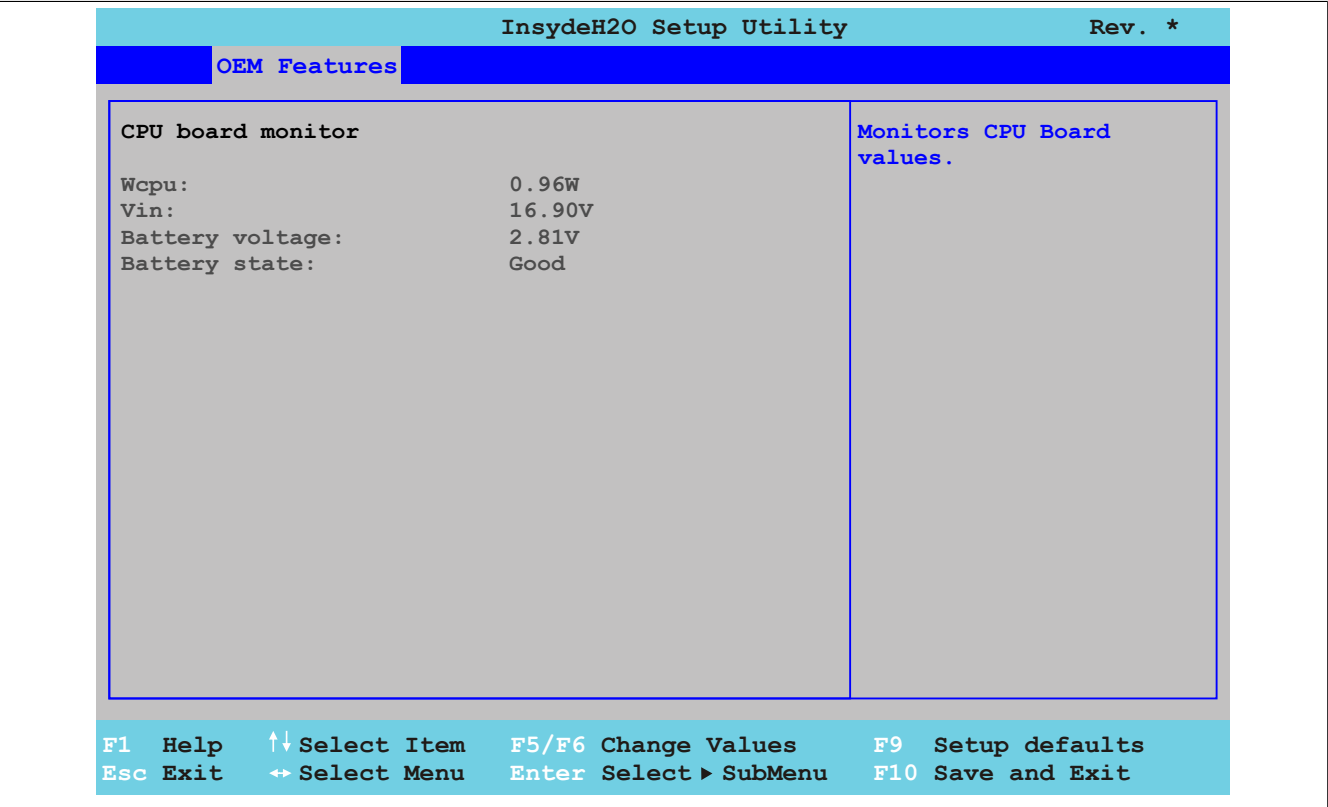


Figure 41: US15W OEM Features - CPU Board Features - CPU Board Monitor

BIOS setting	Description	Configuration options	Effect
Wcpu:	Displays the CPU power consumption in watts.	None	-
Vin:	Displays the current voltage of the power supply in volts.	None	-
Battery voltage:	Displays the battery voltage in volts	None	-
Battery state:	Displays the status of the battery	None	-

Table 102: US15W OEM Features - CPU Board Features - CPU Board Monitor setting options

1.4.2 System unit features

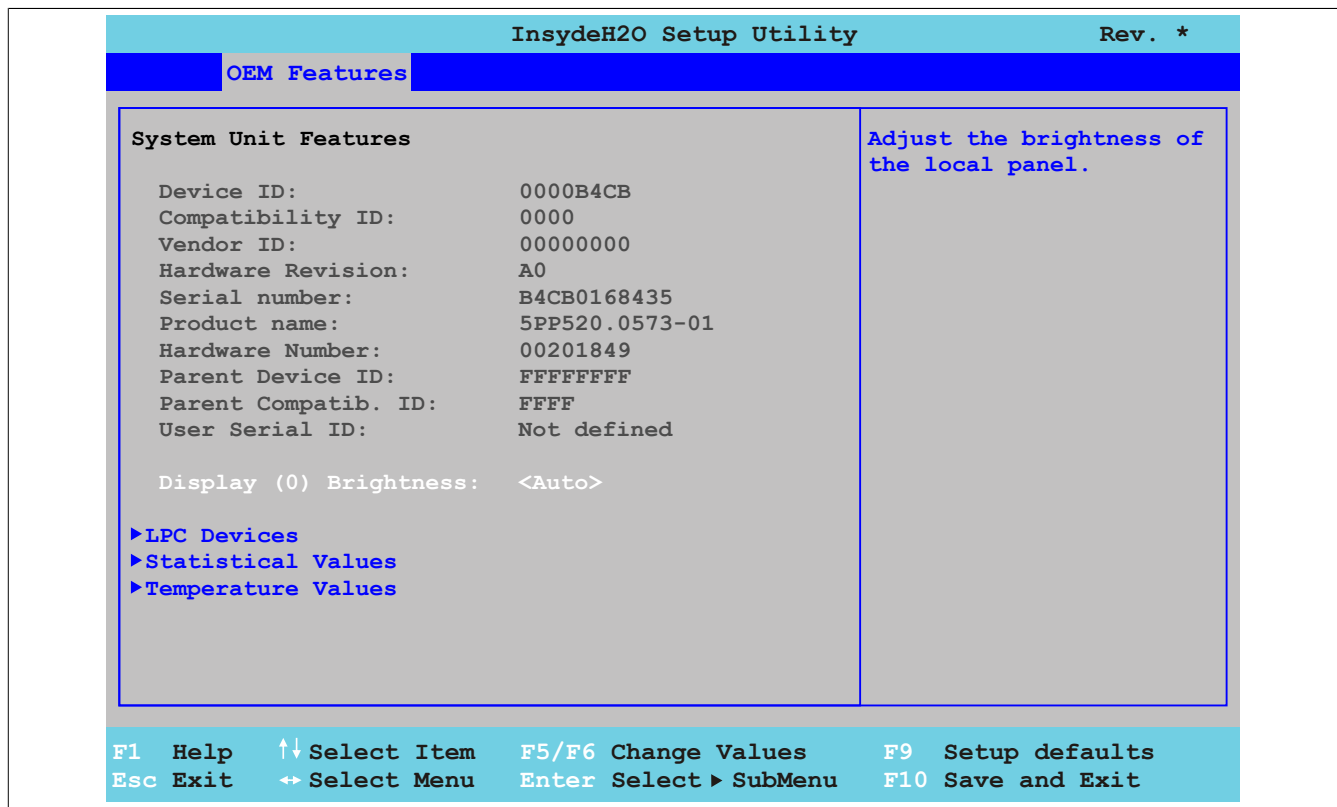


Figure 42: US15W OEM Features - System Unit Features

BIOS setting	Description	Configuration options	Effect
Device ID	Displays the device code of the Power Panel device	None	-
Compatibility ID	Displays the version of the device within the same B&R device ID. This ID is needed for Automation Runtime.	None	-
Vendor ID	Displays the vendor ID	None	-
Hardware Revision	Displays the system unit hardware revision	None	-
Serial number	Displays the B&R serial number	None	-
Product name	Displays the B&R model number	None	-
Hardware Number	Displays the system unit hardware number	None	-
Parent device ID	Displays the manufacturer number	None	-
Parent Compatib. ID	Displays the manufacturer ID	None	-
User serial ID	Displays the user serial ID. This 8-digit hexadecimal value can be freely specified by the user (e.g. to give the device a unique ID) and can only be changed using the "B&R Control Center" included with the ADI driver.	None	-
Display (0) Brightness ¹⁾	Option for setting the backlighting of the display.	Auto	The optimal brightness is automatically configured using the factory settings. A brightness value between 100% and 0% is set.
		0%, 10%, 20%, 30%, 40%, 50%, 60%, 70%, 80%, 90%, 100%	Manual setting of the desired brightness within factory settings limits.
LPC devices	Configuration of the LPC Devices.	Enter	Opens the submenu See "LPC devices" on page 102
Statistical values	Displays statistical values	Enter	Opens the submenu See "Statistical values" on page 103
Temperature values	Displays current temperature values	Enter	Opens the submenu See "Temperature values" on page 104

Table 103: US15W OEM Features - System Unit Features setting options

1) This setting is only available for PP500 system units.

1.4.2.1 LPC devices

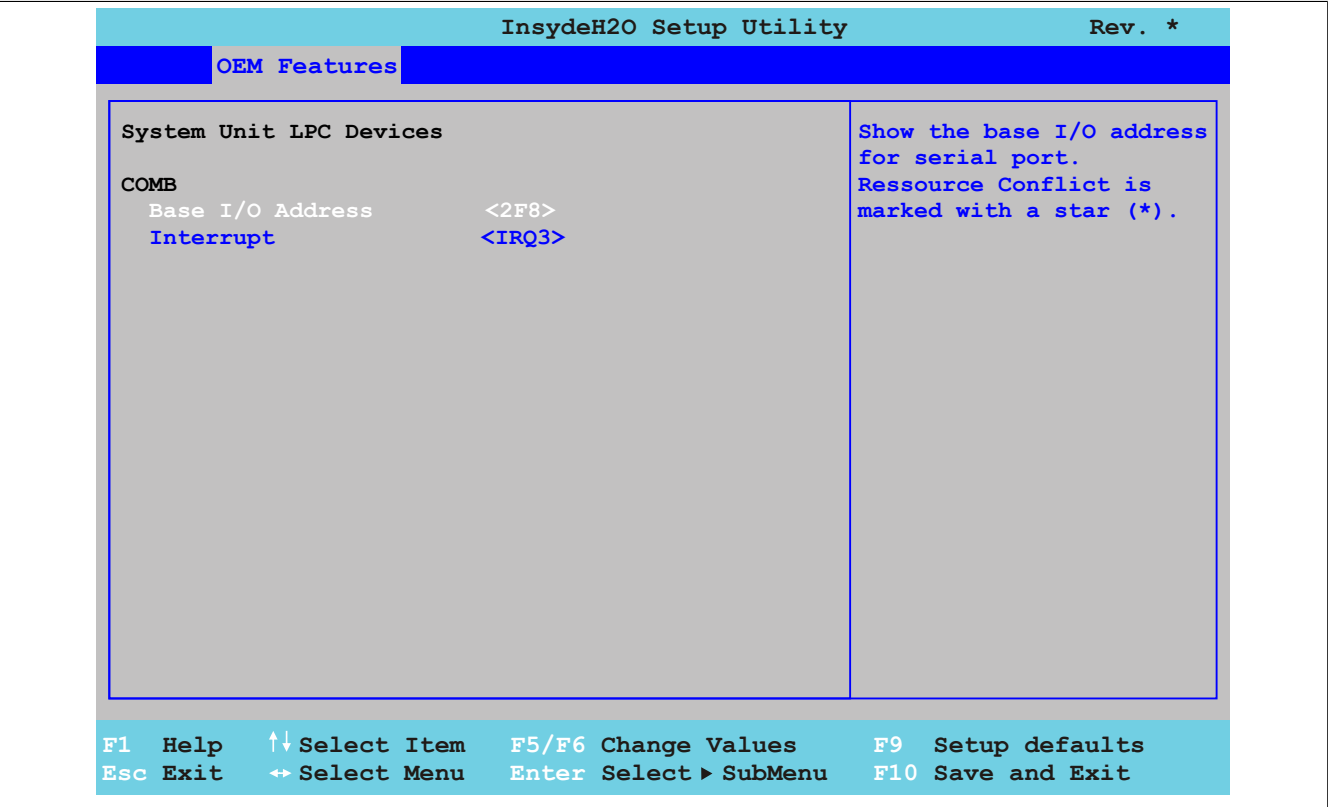


Figure 43: US15W OEM Features - System Unit Features - LPC Devices

BIOS setting	Description	Configuration options	Effect
COMB	Settings for the COM serial interface	None	-
Base I/O Address	Selects the base I/O address for the COM port	Disabled, 238, 2E8, 2F8, 328, 338, 3E8, 3F8	Disables or assigns the selected base I/O address.
Interrupt	Selection of the interrupt for the COM port.	IRQ3, IRQ4, IRQ5, IRQ6, IRQ10, IRQ11, IRQ12	Selected interrupt is assigned.

Table 104: US15W OEM Features - System Unit Features - LPC Devices setting options

Information:

A resource conflict can occur regarding the Base I/O address or Interrupt settings, which will cause a warning. In order to make the settings anyways, the setting must first be made on the Base I/O address or Interrupt being that is used.

1.4.2.2 Statistical values

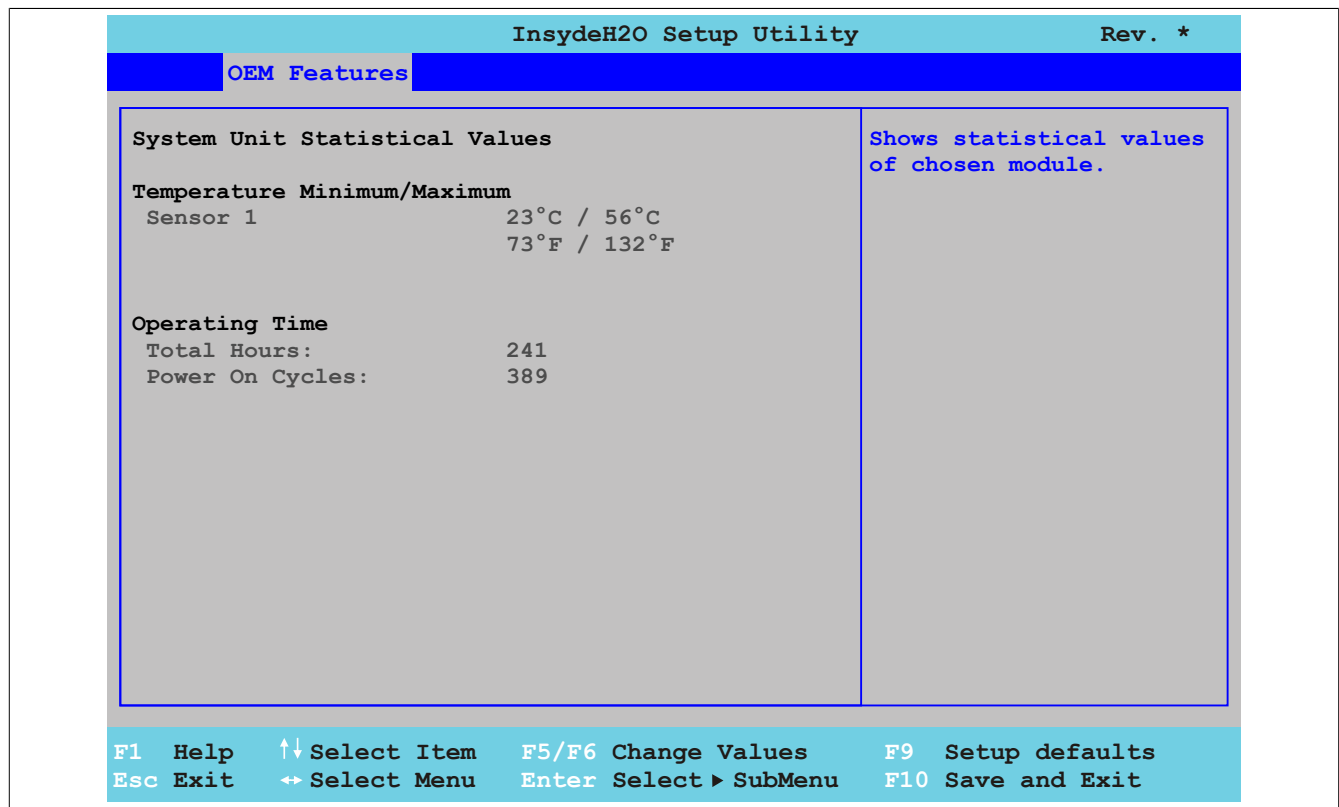


Figure 44: US15W OEM features - System unit features- Statistical values

BIOS setting	Description	Configuration options	Effect
Sensor 1	Displays the minimum and maximum sensor temperature 1 in °C and °F.	None	-
Total hours	Displays the runtime in hours	None	-
Power on cycles	Displays the number of power-on cycles. Each restart increases the counter by one.	None	-

Table 105: US15W OEM Features - System Unit Features - Statistical Values setting options

1.4.2.3 Temperature values

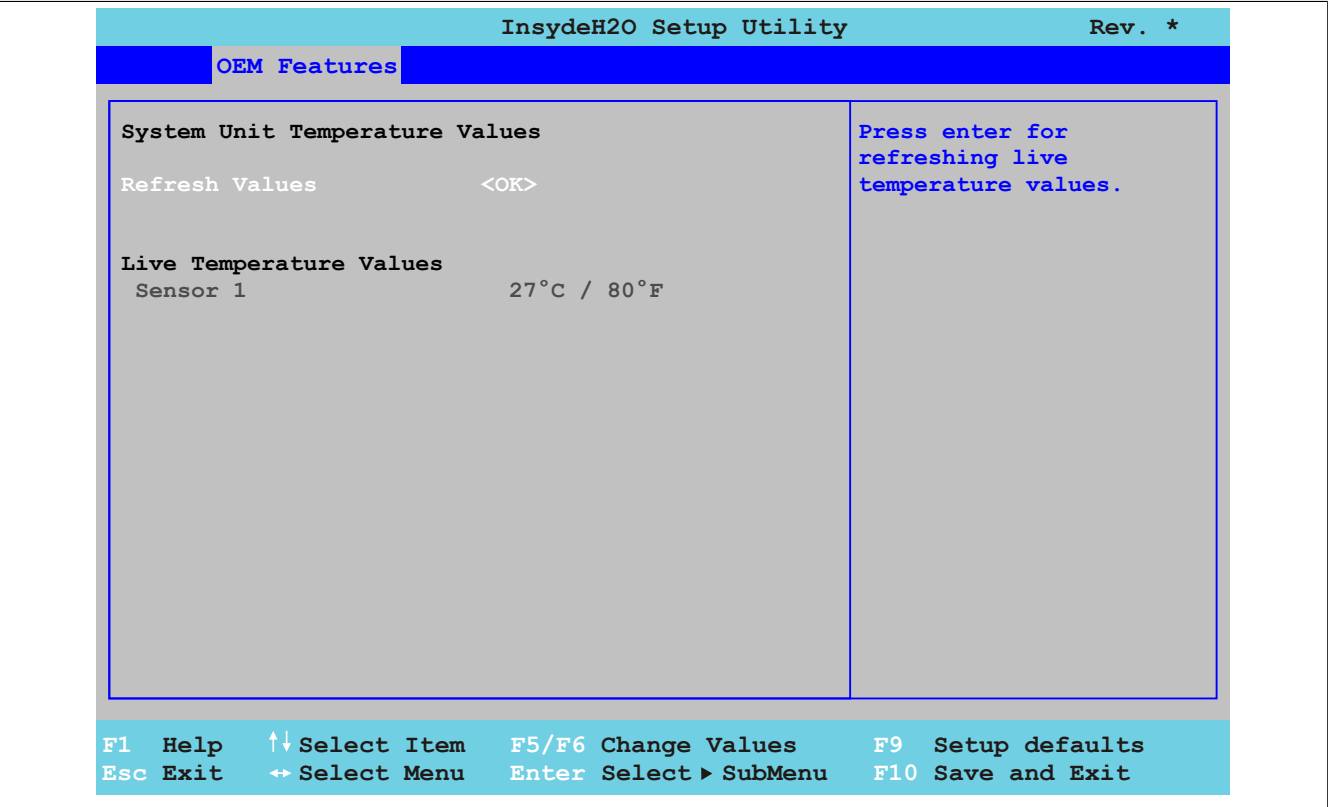


Figure 45: US15W OEM features - System unit features- Temperature values

BIOS setting	Description	Configuration options	Effect
Refresh values	Option for refreshing the temperature values.	OK	Refreshes the temperature values shown below.
Sensor 1	Displays the current sensor temperature 1 in °C and °F.	None	-

Table 106: US15W OEM Features - System Unit Features - Temperature Values setting options

1.4.3 I/O board features

Information:

The values and menus shown may vary depending on which I/O board is connected.

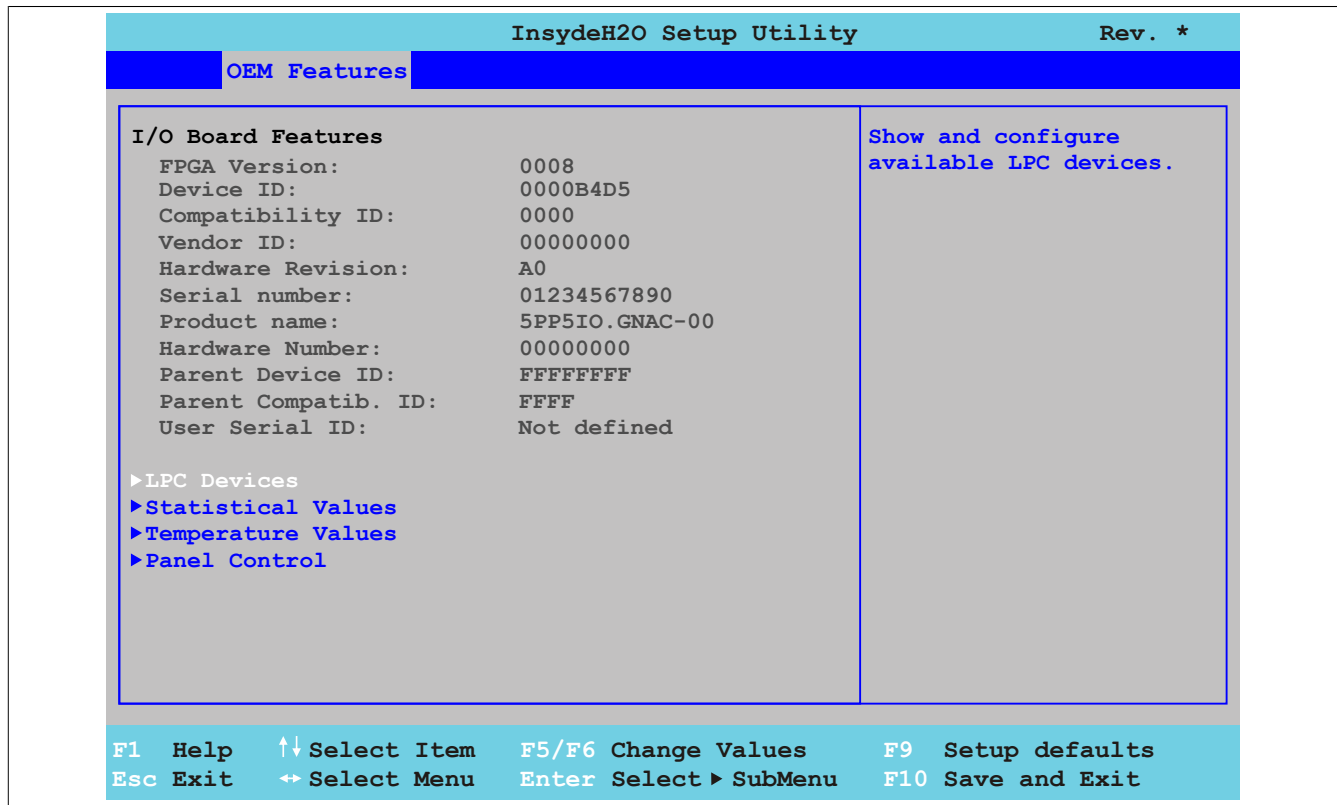


Figure 46: US15W OEM Features - I/O Board Features

BIOS setting	Description	Configuration options	Effect
FPGA Version	Shows the FPGA version of the I/O board.	None	-
Device ID	Displays the device ID of the I/O board.	None	-
Compatibility ID	Displays the version of the device within the same B&R device ID. This ID is needed for Automation Runtime.	None	-
Vendor ID	Displays the vendor ID	None	-
Hardware Revision	Displays the hardware revision of the I/O board.	None	-
Serial number	Displays the B&R serial number	None	-
Product name	Displays the B&R model number	None	-
Hardware Number	Displays the hardware number of the I/O board.	None	-
Parent device ID	Displays the manufacturer number	None	-
Parent Compatib. ID	Displays the manufacturer ID	None	-
User serial ID	Displays the user serial ID. This 8-digit hexadecimal value can be freely specified by the user (e.g. to give the device a unique ID) and can only be changed using the "B&R Control Center" included with the ADI driver.	None	-
LPC devices	Configuration of the LPC Devices.	Enter	Opens the submenu See "LPC devices" on page 106
Statistical values	Displays statistical values	Enter	Opens the submenu See "Statistical values" on page 107
Temperature values	Displays current temperature values	Enter	Opens the submenu See "Temperature values" on page 108
Panel control	For special setup of connected panels (display units).	Enter	Opens the submenu See "Panel control" on page 109

Table 107: US15W OEM Features - I/O Board Features setting options

1.4.3.1 LPC devices

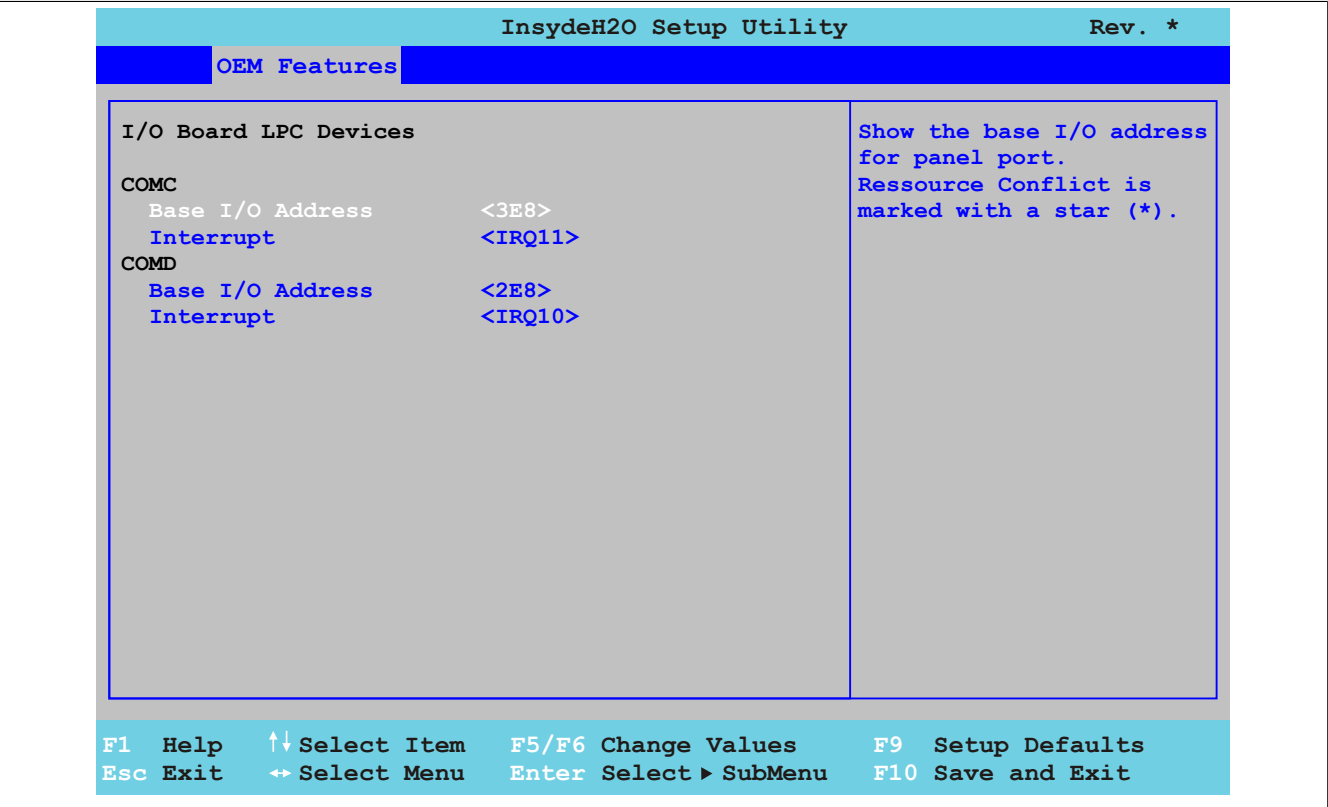


Figure 47: US15W OEM Features - I/O Board Features - LPC Devices

BIOS setting	Description	Configuration options	Effect
COMC	Setting for the panel interface on the I/O board.	None	-
Base I/O Address	Selects the base I/O address for the COM port	Disabled, 238, 2E8, 2F8, 328, 338, 3E8, 3F8	Disables or assigns the selected base I/O address.
Interrupt	Selection of the interrupt for the COM port.	IRQ3, IRQ4, IRQ5, IRQ6, IRQ10, IRQ11, IRQ12	Selected interrupt is assigned.
COMD	Setting for the serial interface (COM) on the I/O board.	None	-
Base I/O Address	Selects the base I/O address for the COM port	Disabled, 238, 2E8, 2F8, 328, 338, 3E8, 3F8	Disables or assigns the selected base I/O address.
Interrupt	Selection of the interrupt for the COM port.	IRQ3, IRQ4, IRQ5, IRQ6, IRQ10, IRQ11, IRQ12	Selected interrupt is assigned.

Table 108: US15W OEM Features - I/O Board Features - LPC Devices setting options

Information:

A resource conflict can occur regarding the Base I/O address or Interrupt settings, which will cause a warning. In order to make the settings anyways, the setting must first be made on the Base I/O address or Interrupt being that is used.

1.4.3.2 Statistical values

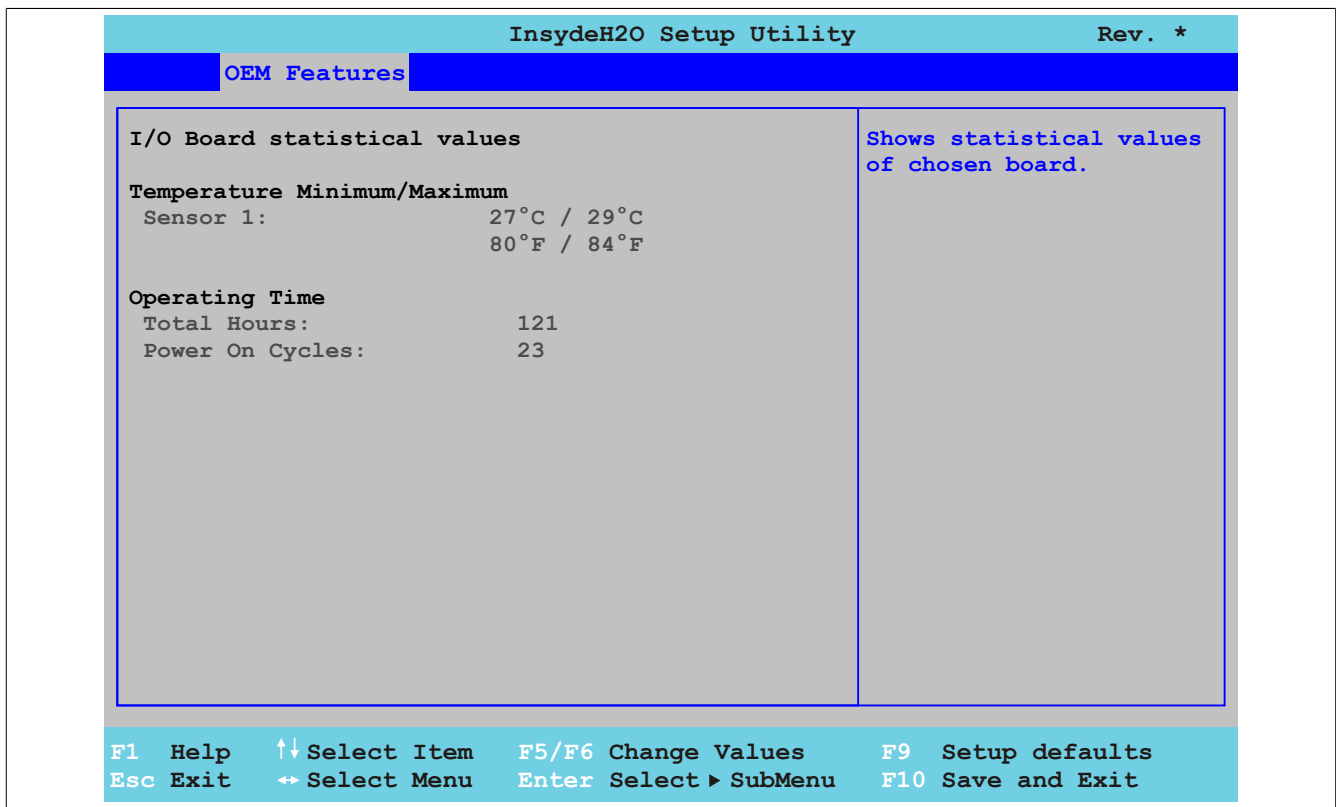


Figure 48: US15W OEM Features - I/O Board Features - Statistical Values

BIOS setting	Description	Configuration options	Effect
Sensor 1	Displays the minimum and maximum sensor temperature 1 in °C and °F.		
Total hours	Displays the runtime in hours	None	-
Power on cycles	Displays the number of power-on cycles. Each restart increases the counter by one.	None	-

Table 109: US15W OEM Features - I/O Board Features - Statistical Values setting options

1.4.3.3 Temperature values

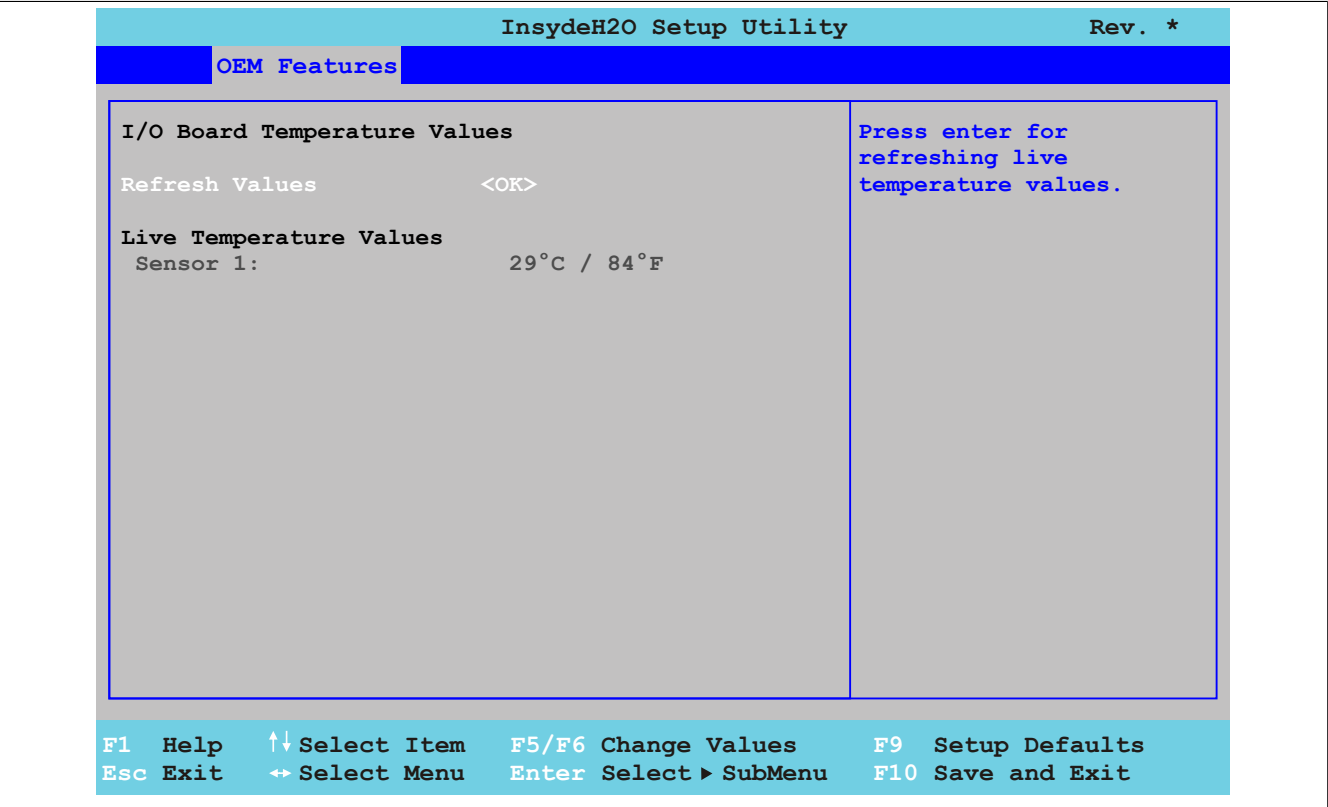


Figure 49: US15W OEM Features - I/O Board Features - Temperature Values

BIOS setting	Description	Configuration options	Effect
Refresh values	Option for refreshing the temperature values.	OK	Refreshes the temperature values shown below.
Sensor 1	Displays the current temperature of Sensor 1 (interfaces) in °C and °F.	None	-

Table 110: US15W OEM Features - I/O Board Features - Temperature Values setting options

1.4.3.4 Panel control

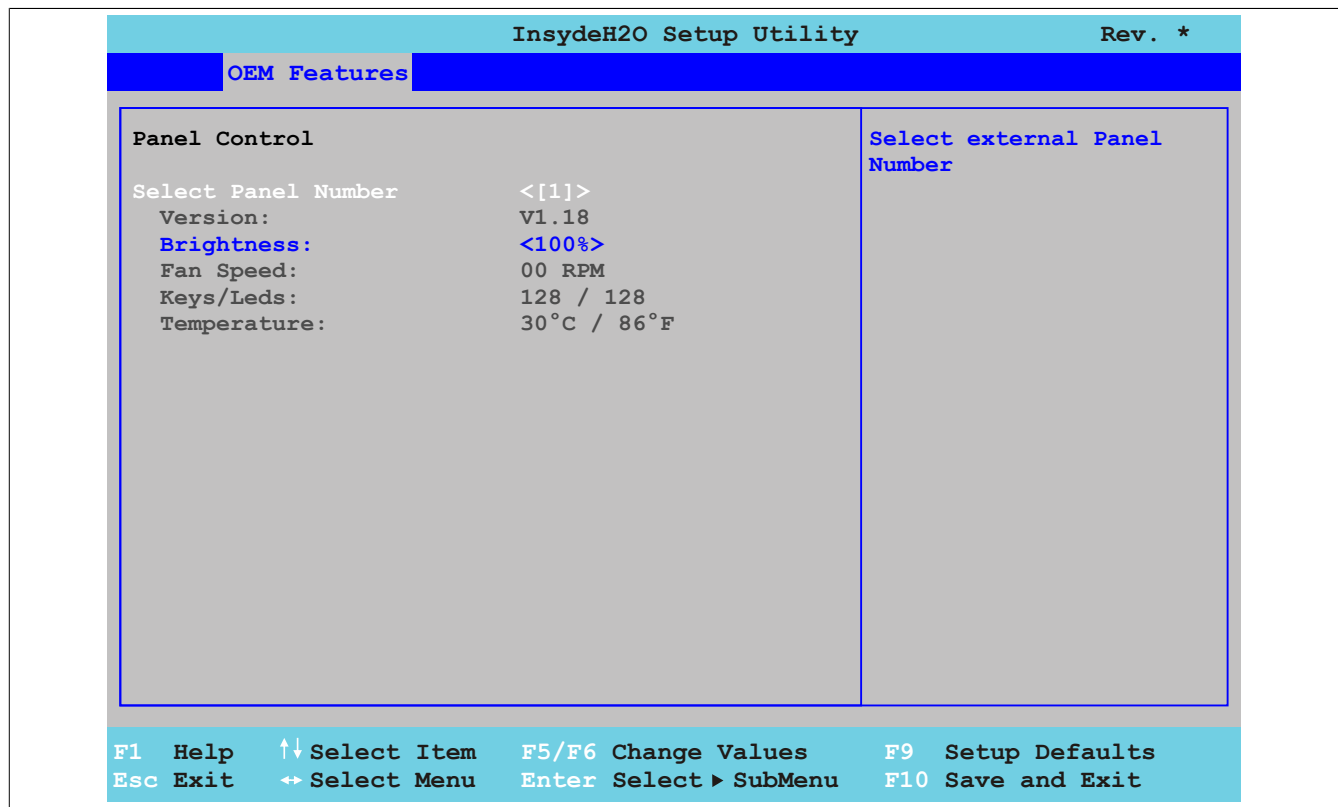


Figure 50: US15W OEM Features - I/O Board Features - Panel Control

BIOS setting	Description	Configuration options	Effect
Select panel number	Selection of the panel number for which the values should be read out and/or changed.	0...15	Selection of panel 0 - 15.
Version	Displays the firmware version of the SDLR controller	None	-
Brightness	For setting the brightness of the selected panel.	0%, 10%, 20%, 30%, 40%, 50%, 60%, 70%, 80%, 90%, 100%	Sets the brightness (in %) of the selected panel. Changes take effect after saving and restarting the system (e.g. by pressing <F10>).
Fan speed	Displays the fan speed of the selected panel.	None	-
Keys/LEDs	Displays the available keys and LEDs on the selected panel.	None	-
Temperature	Displays the selected panel's temperature (in °C and °F).	None	-

Table 111: US15W OEM Features - I/O Board Features - Panel Control setting options

1.4.4 IF board features

Information:

The values and menus shown may vary depending on which interface board is connected.

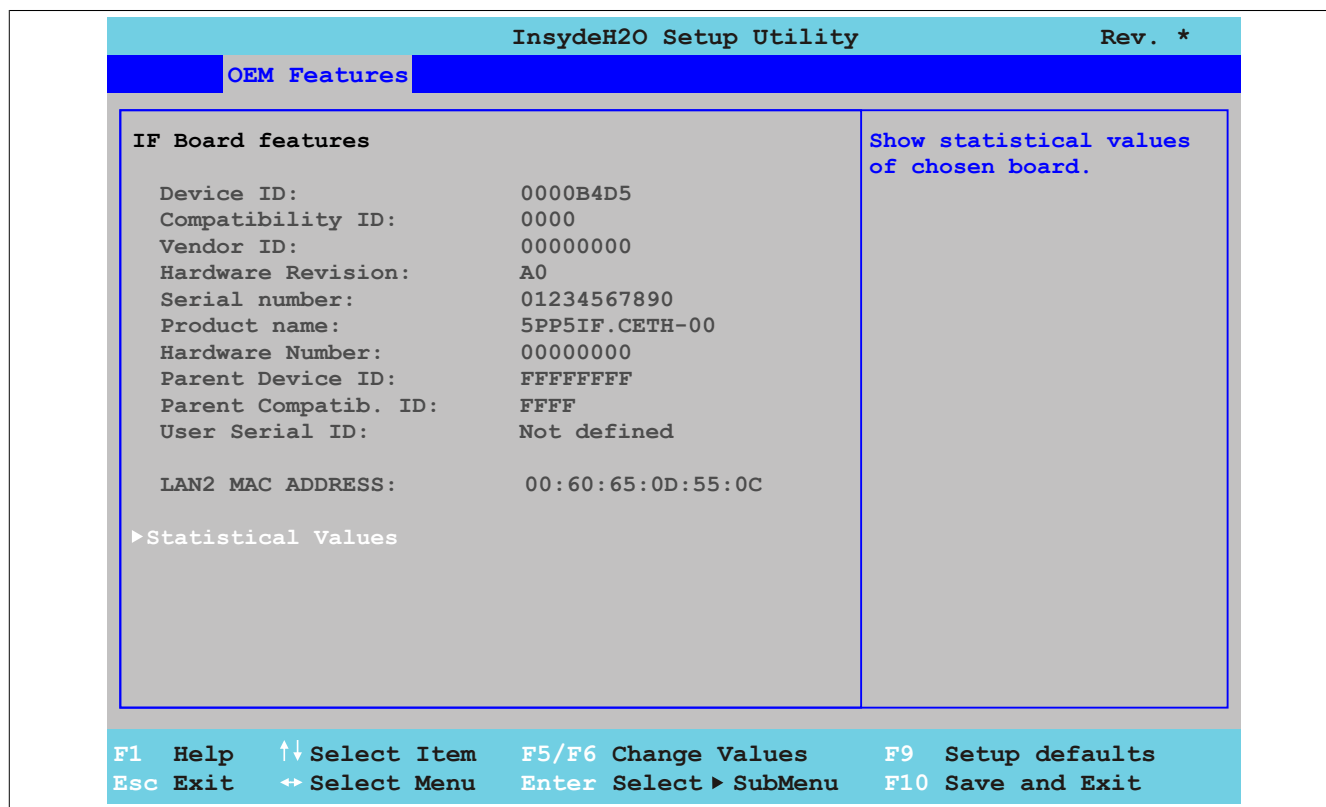


Figure 51: US15W OEM Features - IF Board Features

BIOS setting	Description	Configuration options	Effect
Device ID	Displays the device ID of the IF board.	None	-
Compatibility ID	Displays the version of the device within the same B&R device ID. This ID is needed for Automation Runtime.	None	-
Vendor ID	Displays the vendor ID	None	-
Hardware Revision	Displays the IF board hardware revision.	None	-
Serial number	Displays the B&R serial number	None	-
Product name	Displays the B&R model number	None	-
Hardware Number	Displays the IF board hardware number.	None	-
Parent device ID	Displays the manufacturer number	None	-
Parent Compatib. ID	Displays the manufacturer ID	None	-
User serial ID	Displays the user serial ID. This 8-digit hexadecimal value can be freely specified by the user (e.g. to give the device a unique ID) and can only be changed using the "B&R Control Center" included with the ADI driver.	None	-
LAN2 MAC ADDRESS ¹⁾	Displays the assigned MAC address for the ETH interface	None	-
Statistical values	Displays statistical values	Enter	Opens the submenu See "Statistical values" on page 111

Table 112: US15W OEM Features - IF Board Features setting options

1) The LAN2 MAC ADDRESS is only displayed with the interface board 5PP5IF.CETH-00.

1.4.4.1 Statistical values

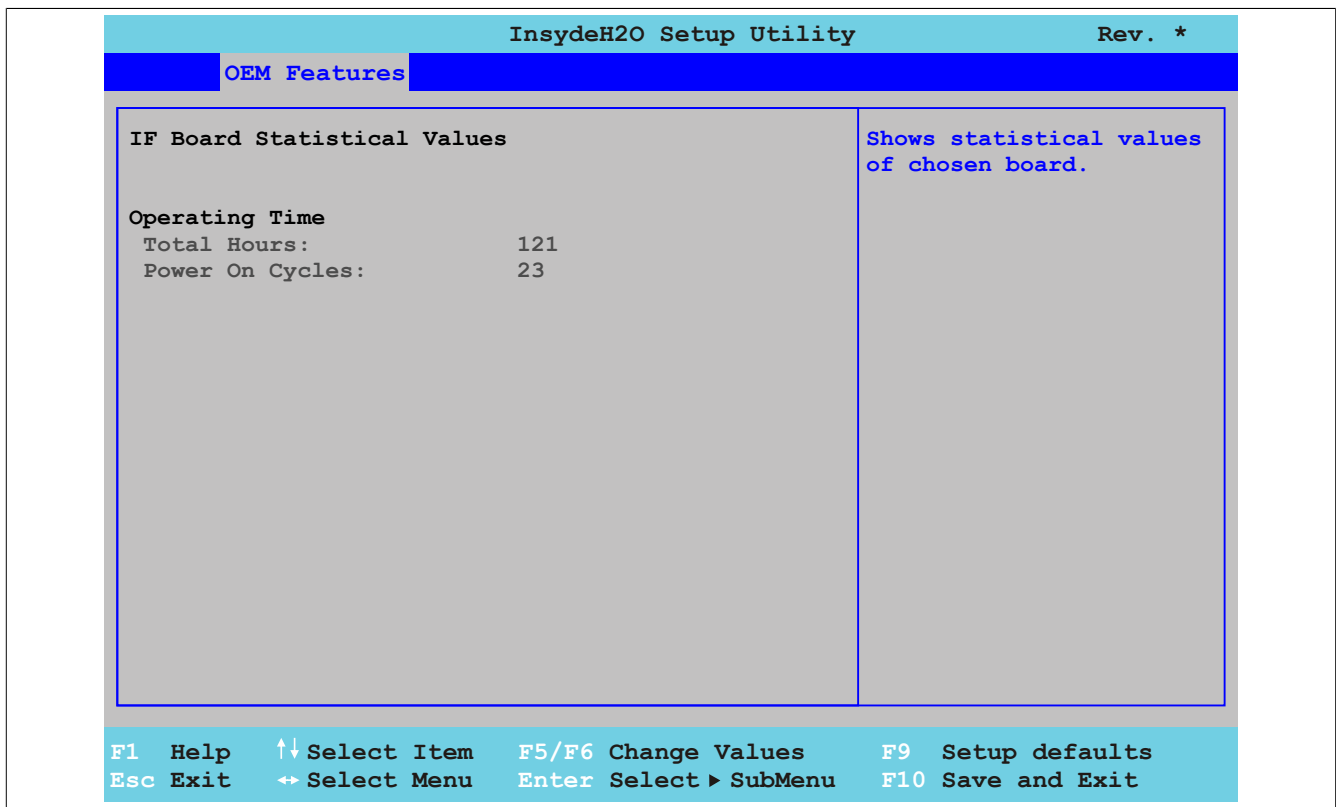


Figure 52: US15W OEM Features - IF Board Features - Statistical Values

BIOS setting	Description	Configuration options	Effect
Total hours	Displays the runtime in hours	None	-
Power on cycles	Displays the number of power-on cycles. Each restart increases the counter by one.	None	-

Table 113: US15W OEM Features - IF Board Features - Statistical Values setting options

1.4.5 Memory module features

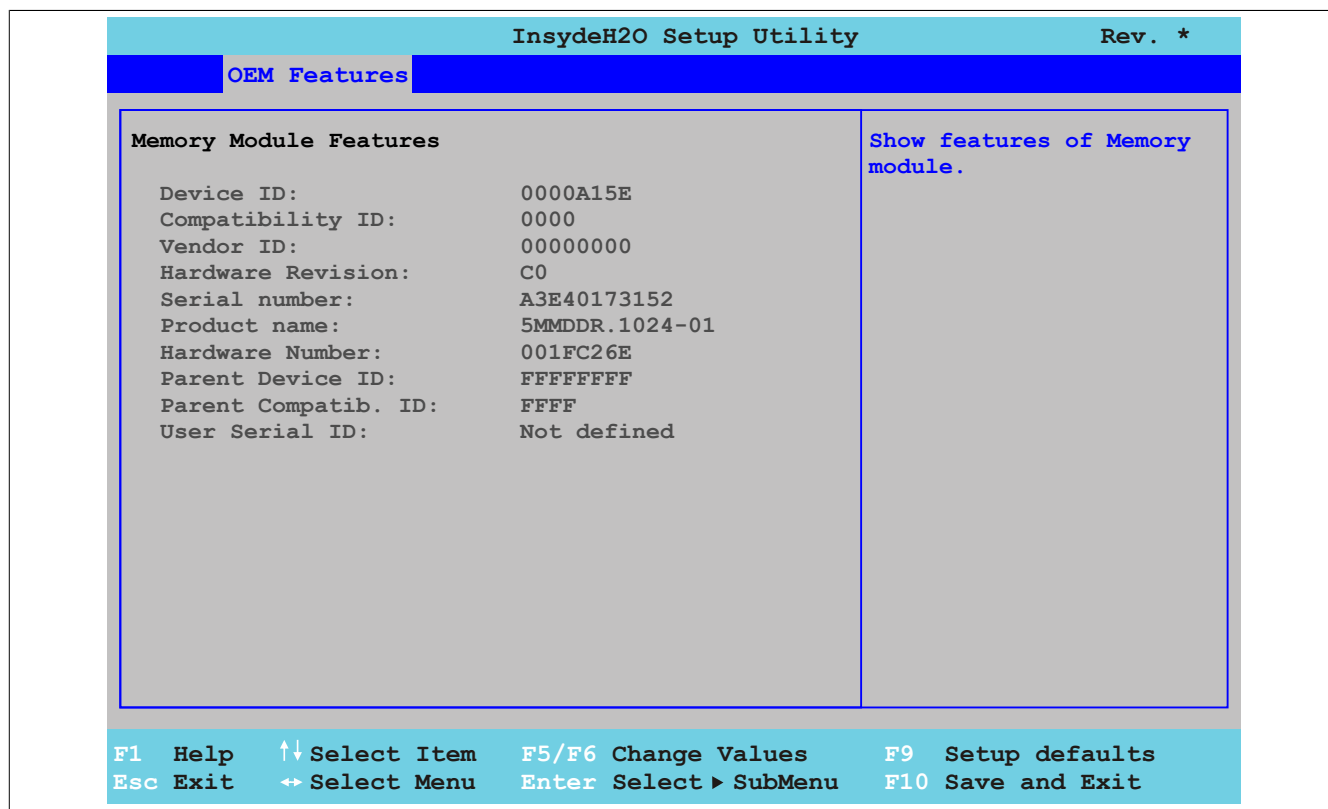


Figure 53: US15W OEM Features - Memory Module Features

BIOS setting	Description	Configuration options	Effect
Device ID	Displays the device ID of the RAM.	None	-
Compatibility ID	Displays the version of the device within the same B&R device ID. This ID is needed for Automation Runtime.	None	-
Vendor ID	Displays the vendor ID	None	-
Hardware Revision	Displays the main memory hardware revision.	None	-
Serial number	Displays the B&R serial number	None	-
Product name	Displays the B&R model number	None	-
Hardware Number	Displays the main memory hardware number.	None	-
Parent device ID	Displays the manufacturer number	None	-
Parent Compatib. ID	Displays the manufacturer ID	None	-
User serial ID	Displays the user serial ID. This 8-digit hexadecimal value can be freely specified by the user (e.g. to give the device a unique ID) and can only be changed using the "B&R Control Center" included with the ADI driver.	None	-

Table 114: US15W OEM Features - Memory Module Features setting options

1.5 Advanced

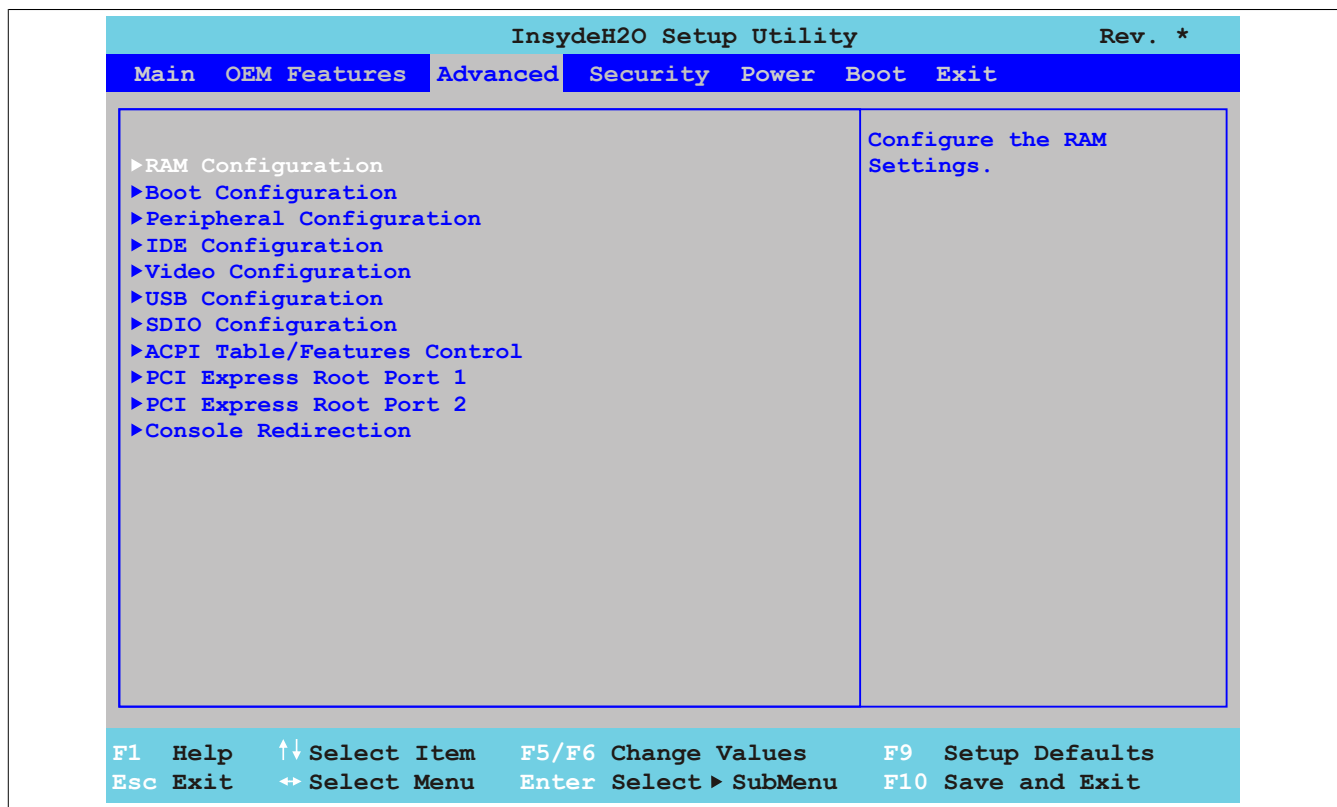


Figure 54: US15W Advanced - Menu

BIOS setting	Description	Configuration options	Effect
RAM Configuration	Configures RAM settings.	Enter	Opens the submenu See "RAM configuration" on page 114
Boot configuration	Configures boot settings	Enter	Opens the submenu See "Boot configuration" on page 115
Peripheral configuration¹⁾	Configures peripheral settings	Enter	Opens the submenu See "Peripheral configuration" on page 116
IDE Configuration	Configures IDE functions	Enter	Opens the submenu See "IDE configuration" on page 117
Video Configuration	Configures graphics settings	Enter	Opens the submenu See "Video configuration" on page 120
USB Configuration	Configures USB settings.	Enter	Opens the submenu See "USB configuration" on page 121
SDIO Configuration²⁾	Configures SDIO settings.	Enter	Opens the submenu See "SDIO configuration" on page 122
ACPI table/features control configuration	Configures ACPI table/features	Enter	Opens the submenu See "ACPI table/features control" on page 123
PCI Express root port 1	Configures PCI Express settings on port 1 Warning! Improper settings can cause instability or device problems. It is therefore strongly recommended that these settings only be changed by experienced users.	Enter	Opens the submenu See "PCI Express root port 1" on page 123

Table 115: US15W Advanced - Menu setting options

BIOS setting	Description	Configuration options	Effect
PCI Express root port 2	Configures PCI Express settings on port 2 Warning! Improper settings can cause instability or device problems. It is therefore strongly recommended that these settings only be changed by experienced users.	Enter	Opens the submenu See "PCI Express root port 2" on page 126
Console redirection ³⁾	Configures the remote console	Enter	Opens the submenu See "Console redirection" on page 127

Table 115: US15W Advanced - Menu setting options

- 1) This menu option is only available if there is an audio connection.
- 2) SDIO - Secure Digital Input Output
- 3) These settings are only visible to Automation PC 511 system units without I/O board. The mode/node switches must be set to "00" (default).

1.5.1 RAM configuration

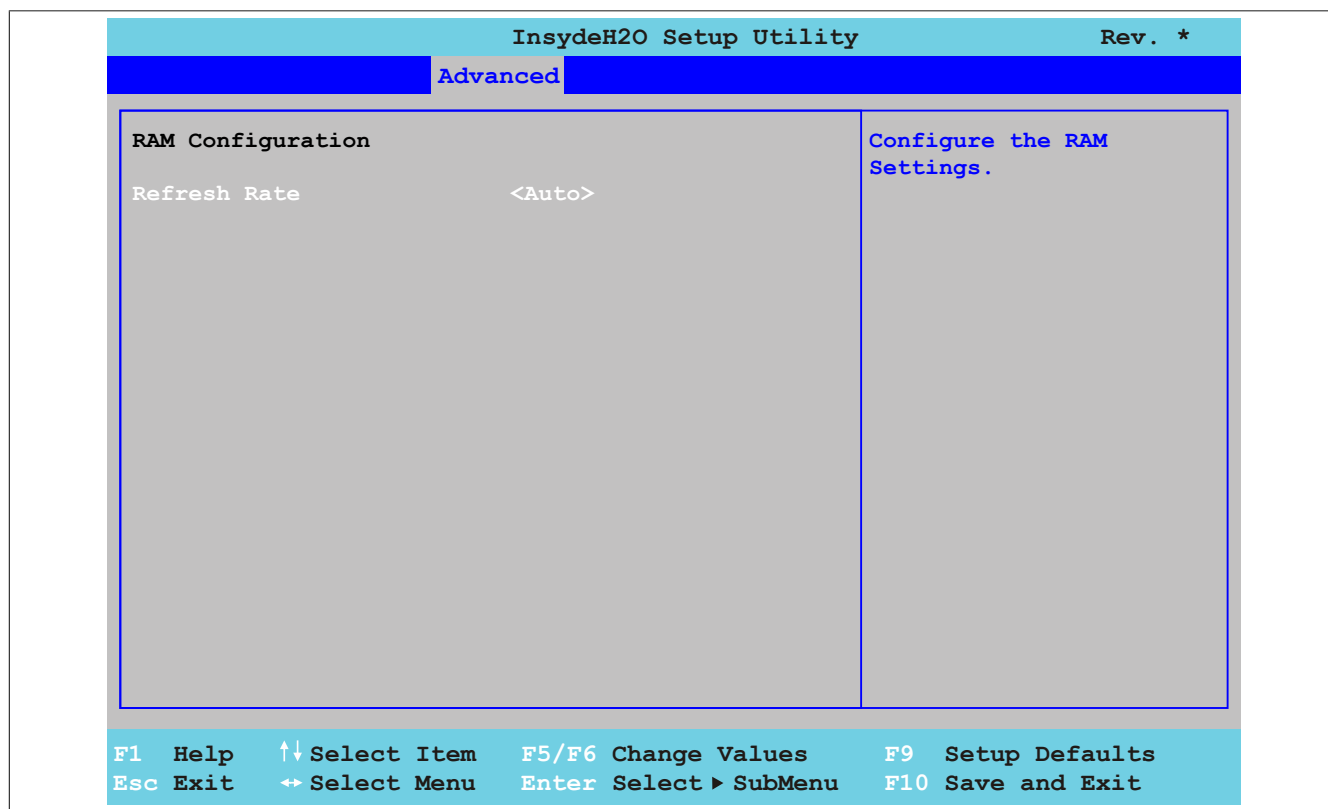


Figure 55: US15W Advanced - RAM configuration

BIOS setting	Description	Configuration options	Effect
Refresh rate	Option for setting the DRAM refresh rate.	Auto	DRAM Refresh Rate is read from the SPD data of the DRAM module.
		7.8μs	Manual setting for the DRAM refresh rate.
		3.9μs	Manual setting for the DRAM refresh rate.

Table 116: US15W Advanced - RAM Configuration setting options

1.5.2 Boot configuration

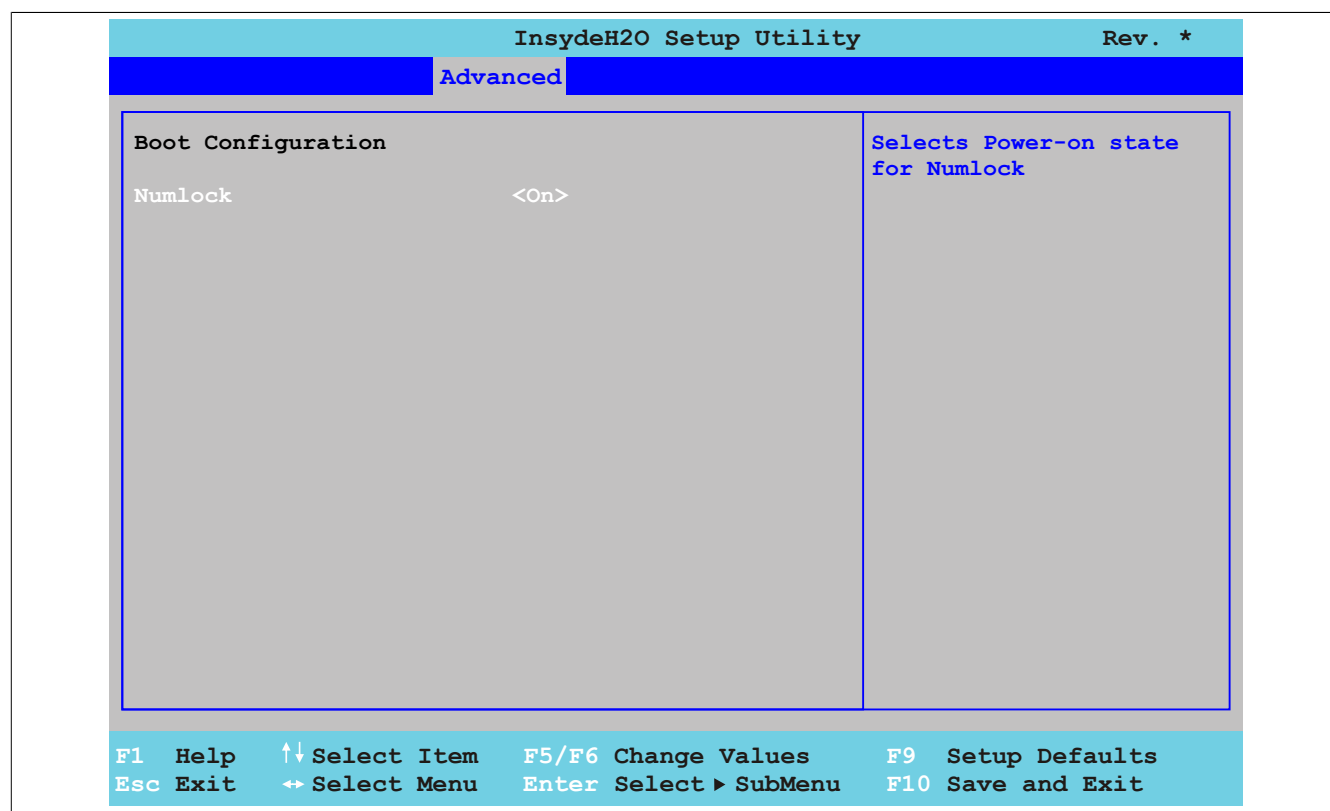


Figure 56: US15W Advanced - Boot configuration

BIOS setting	Description	Configuration options	Effect
NumLock	With this field you can define the state of the Num-Lock key when booting.	On	Enables the numeric keypad
		Off	Only enables the cursor (movement) functions of the numeric keypad

Table 117: US15W Advanced - Boot Configuration setting options

1.5.3 Peripheral configuration

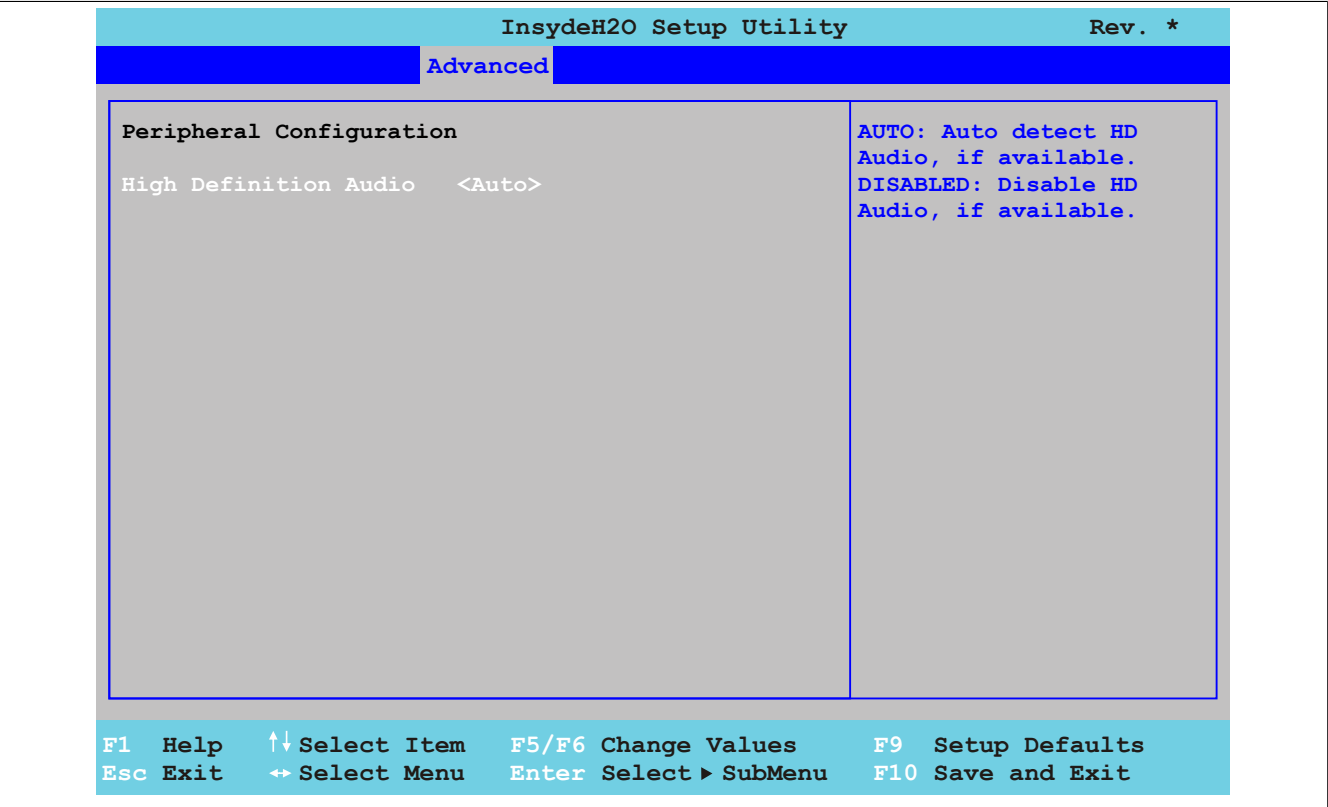


Figure 57: US15W Advanced - Peripheral configuration

BIOS setting	Description	Configuration options	Effect
High Definition Audio	The audio mode support can be turned on or off here.	Disabled	Disables the audio controller
		Auto	Enables High Definition Audio (HDA) Sound. The HDA controller automatically detects installed audio devices.

Table 118: US15W Advanced - Peripheral Configuration setting options

Information:

The menu option "Peripheral Configuration" is only shown if there is an Audio connection.

1.5.4 IDE configuration

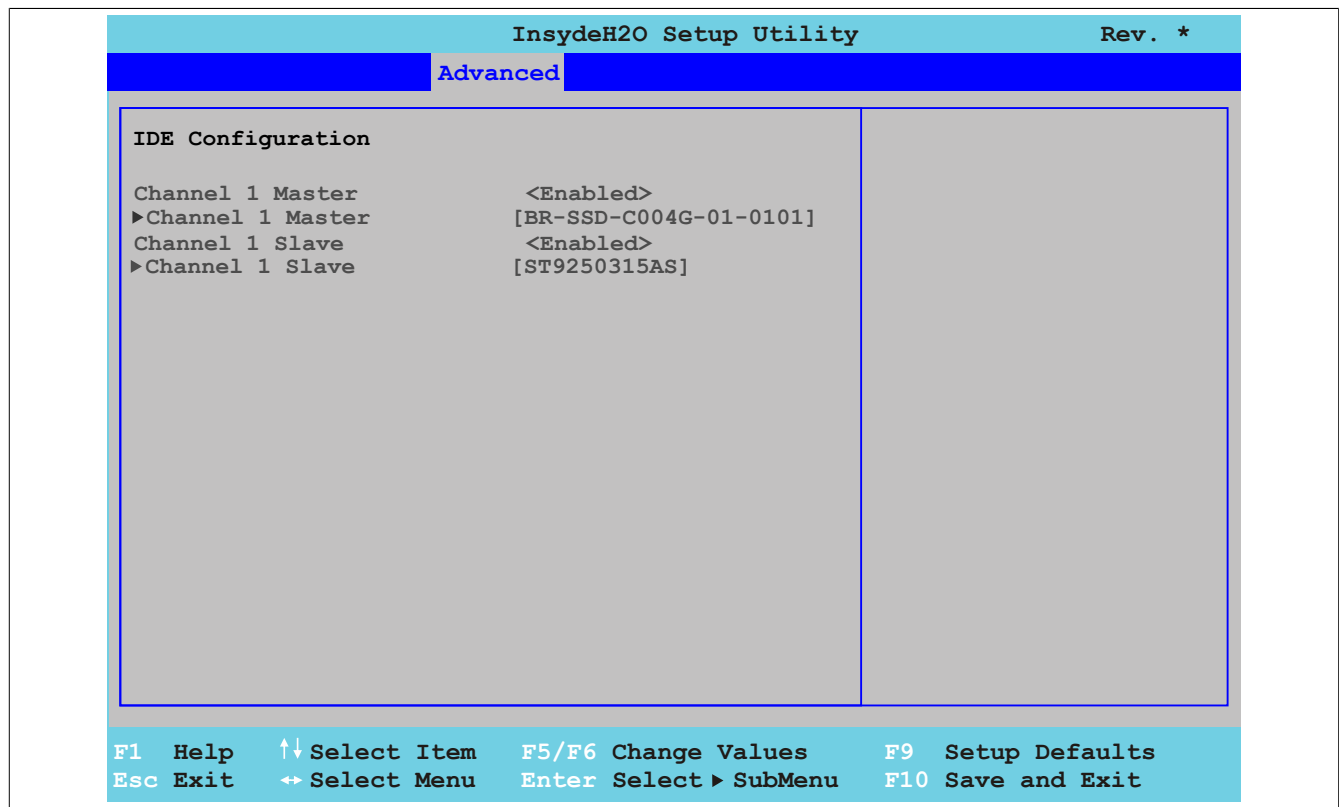


Figure 58: US15W Advanced - IDE configuration

BIOS setting	Description	Configuration options	Effect
Channel 1 master	Option to enable/disable the drive connected to the Channel 1 Master.	Disabled	Disables mass memory
		Enabled	Enables mass memory
Channel 1 master	Displays the drive that is connected to Channel 1 Master.	Enter	Opens the submenu See "Channel 1 master" on page 118
Channel 1 slave	Option to enable/disable the drive connected to the Channel 1 Slave.	Disabled	Disables mass memory
		Enabled	Enables mass memory
Channel 1 slave	Displays the drive that is connected to Channel 1 Slave.	Enter	Opens the submenu See "Channel 1 slave" on page 119

Table 119: US15W Advanced - IDE Configuration setting options

1.5.4.1 Channel 1 master

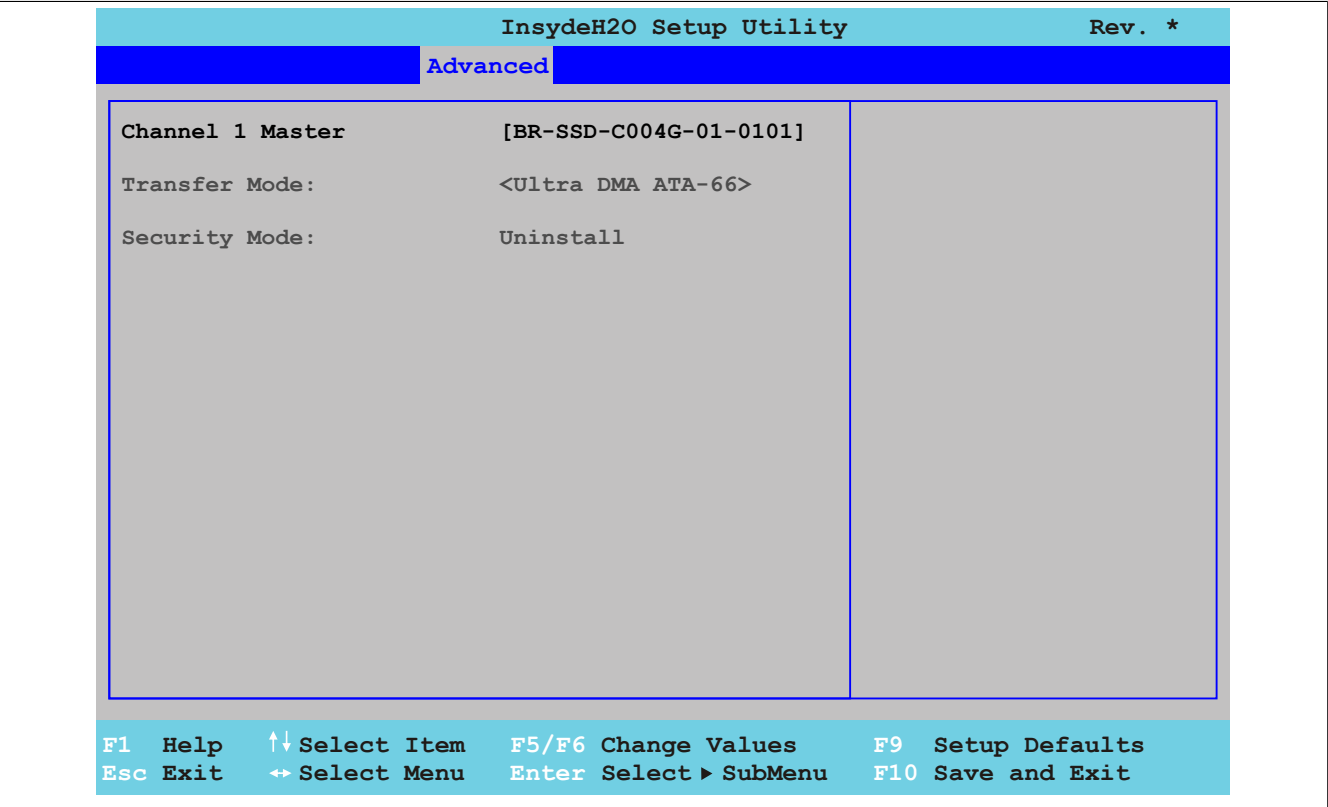


Figure 59: US15W Advanced - IDE Configuration - Channel 1 Master

BIOS setting	Description	Configuration options	Effect
Transfer mode	Displays the communication path between the Channel 1 Master drive and the system memory.	None	-
Security Mode		None	-

Table 120: US15W Advanced - IDE Configuration - Channel 1 Master setting options

1.5.4.2 Channel 1 slave

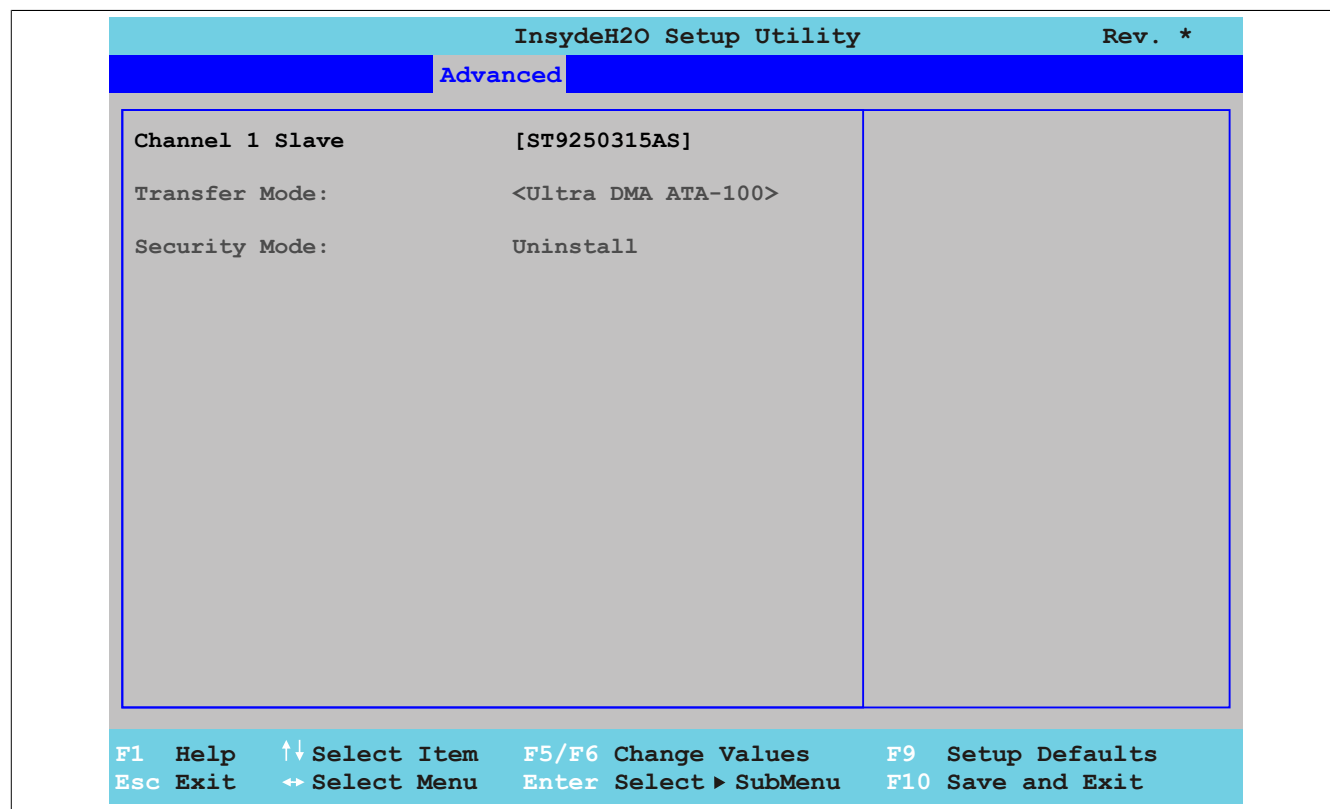


Figure 60: US15W Advanced - IDE Configuration - Channel 1 Slave

BIOS setting	Description	Configuration options	Effect
Transfer mode	Displays the communication path between the Channel 1 Slave drive and the system memory.	None	-
Security Mode		None	-

Table 121: US15W Advanced - IDE Configuration - Channel 1 Slave setting options

1.5.5 Video configuration

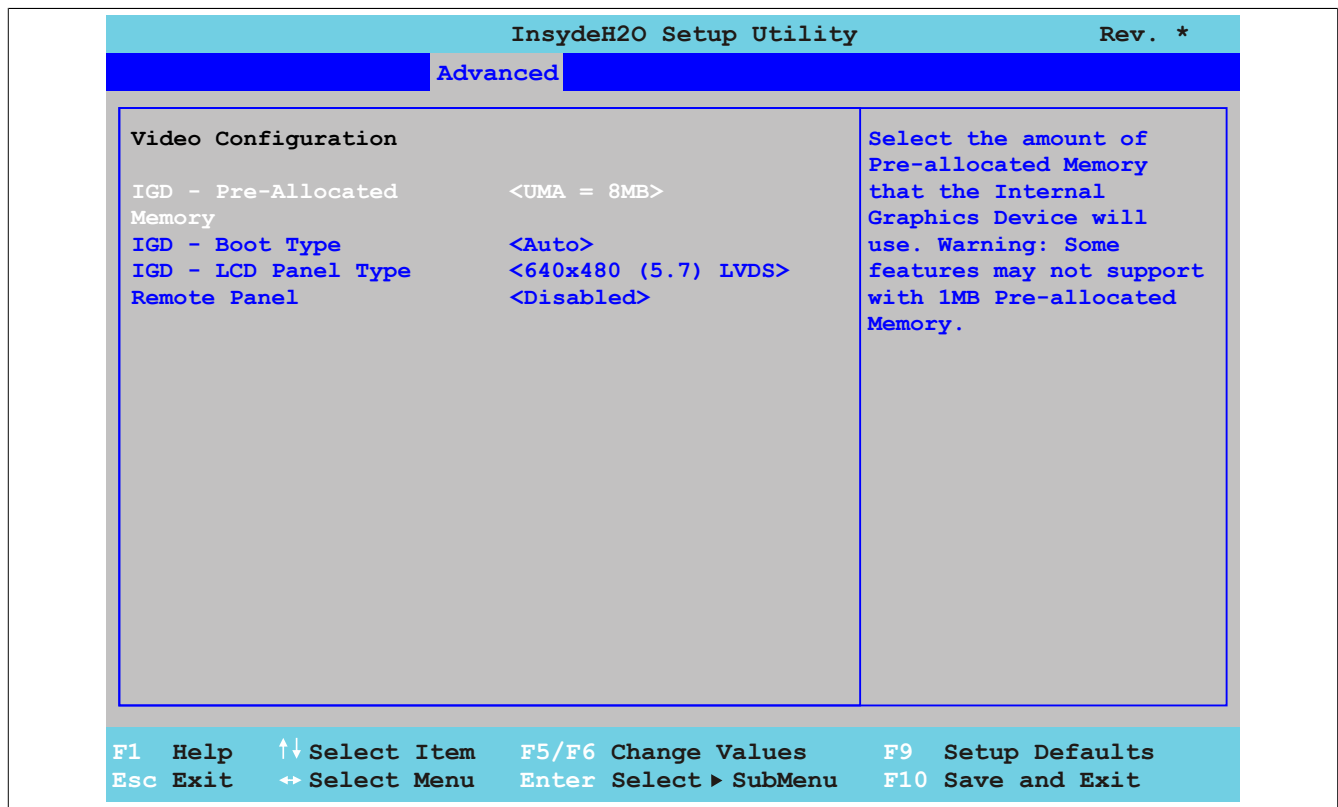


Figure 61: US15W Advanced - Video configuration

BIOS setting	Description	Configuration options	Effect
IGD - Pre-allocated memory	Option for setting the memory size that can be used for the internal graphics controller. Information: Some functions are not supported with the setting "UMA = 1MB".	UMA = 1MB	Allocates 1 MB main memory
		UMA = 4MB	Allocates 4 MB main memory
		UMA = 8MB	Allocates 8 MB main memory
IGD - Boot Type	Option to define the enabled panel during the POST.	Auto	One of the panels listed under "IGD - LCD Panel Type" will be automatically selected.
		LFP(LVDS)	The POST is shown on the display of the Power Panel 500 (LFP = Local Flat Panel).
		EFP(SDL or DVI)	The POST is shown on an external panel (EFP = External Flat Panel).
IGD - LCD Panel Type ¹⁾	Option for setting the display resolution. Information: If the display setting is present in the EPROM data, then this setting has no effect on the display resolution because the EPROM data is loaded each time the system is restarted and the BIOS setting is overwritten.	640x480 (5.7) LVDS	Resolution with 640 x 480 pixels (for 5.7" display)
		800x480 (7.0) LVDS	Resolution with 800 x 480 pixels (for 7" display)
		800x600 (8.4) LVDS	Resolution with 800 x 600 pixels (for 8.4" display)
		640x480 (10.4) LVDS	Resolution with 640 x 480 pixels (for 10.4" display)
		800x600 (12.0) LVDS	Resolution with 800 x 600 pixels (for 12.0" display)
		1024x768 (15.0) LVDS	Resolution with 1024 x 768 pixels (for 15" display)
Remote Panel ²⁾	Option to control the device remotely (with no display connected) from another PC via the Ethernet interface. This makes it possible to make BIOS settings.	Enabled	Enables this function
		Disabled	Disables this function

Table 122: US15W Advanced - Video Configuration setting options

- 1) This setting is only available for PP500 system units.
 2) This setting is hidden unless an I/O board is installed. This option does not appear if a display is connected or integrated. On APC511 system units it is also shown even if no I/O board is installed.

1.5.6 USB configuration

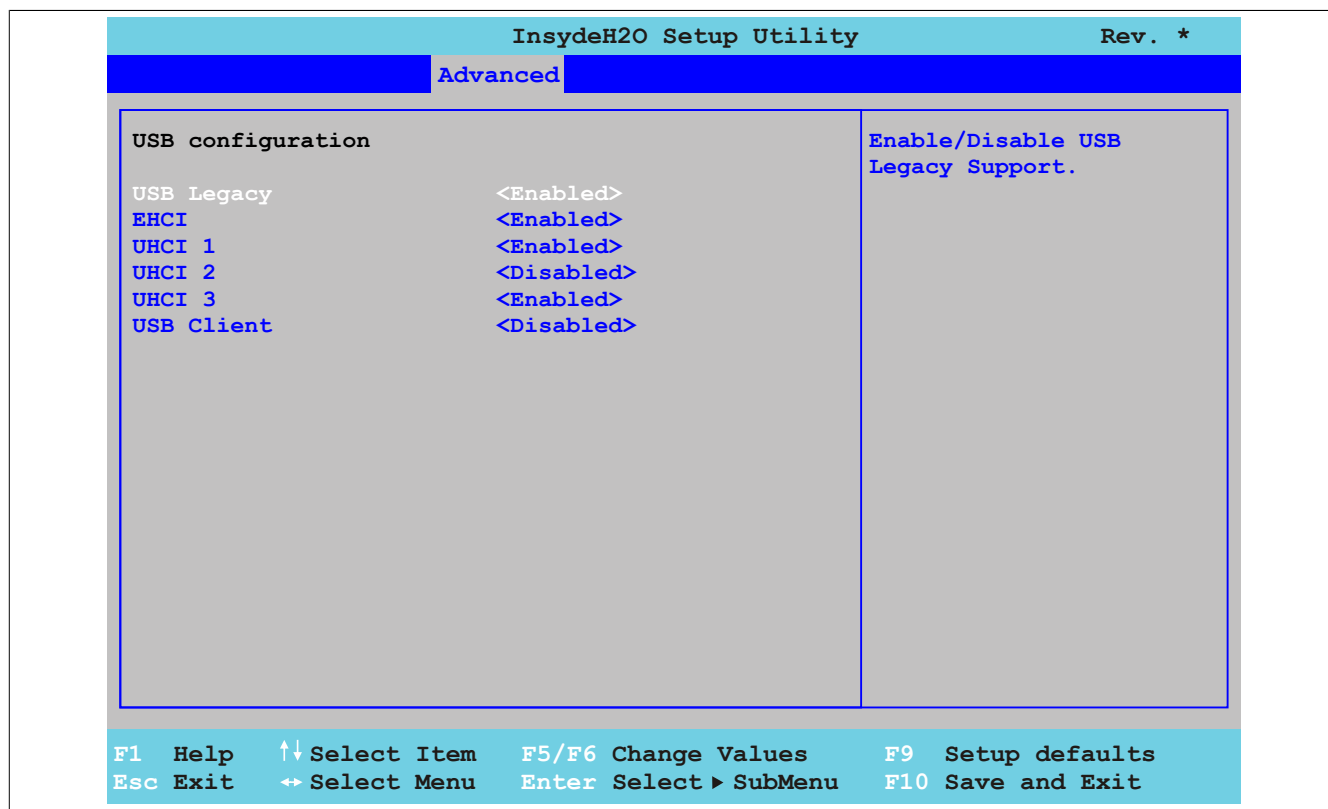


Figure 62: US15W Advanced - USB configuration

BIOS setting	Description	Configuration options	Effect
USB Legacy	Legacy USB support can be enabled/disabled here. USB ports do not function during startup. USB support is available again after the operating system has started. A USB keyboard is still recognized during POST.	Enabled	Enables this function
		Disabled	Disables this function
EHCI	The support for the operating system can be set up without the fully automatic EHCI function.	Enabled	Enables USB support. USB 2.0 support is enabled as soon as a USB 2.0 device is connected to the interface.
		Disabled	Disables USB 2.0 support.
UHCI 1	Configuration of the USB UHCI controller 1 for USB port 2 and 3.	Enabled	Enables USB support.
		Disabled	Disables USB support.
Warning! If this setting is <i>Disabled</i>, then the settings <i>UHCI 2</i> and <i>UHCI 3</i> will also be set to <i>Disabled</i> and all USB ports will be disabled. As a result, it will no longer be possible to enter BIOS. However, if UHCI 1 has been disabled, then you can use the Backup BIOS to once again enter BIOS. For more information, see "OEM features" on page 95			
UHCI 2 ¹⁾	Configuration of the USB UHCI controller 2 for USB ports on the I/O board.	Enabled	Enables USB support.
		Disabled	Disables USB support.
UHCI 3 ¹⁾	Configuration of the USB UHCI controller 3 for USB port 3.	Enabled	Enables USB support.
		Disabled	Disables USB support.
USB client	Setting for USB Client support.	Enabled	Enables USB Client support.
		Disabled	Disables USB Client support.

Table 123: US15W Advanced - USB Configuration setting options

1) These settings are only possible if *UHCI 1* is set to *Enabled*.

1.5.7 SDIO configuration

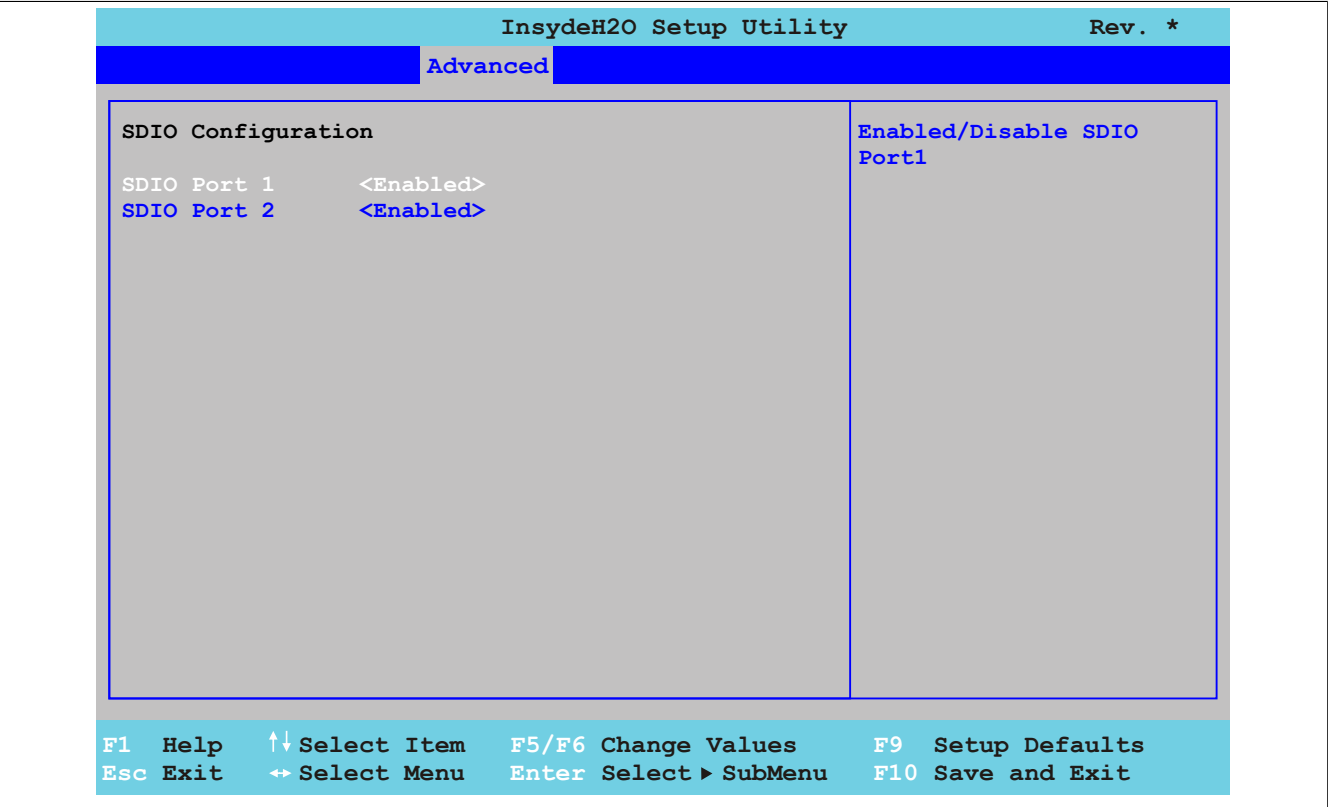


Figure 63: US15W Advanced - SDIO configuration

BIOS setting	Description	Configuration options	Effect
SDIO port 1	SDIO Port 1 (Secure Digital Input Output - SD Memory Card Slot) can be enabled / disabled here.	Enabled	Enables this function
		Disabled	Disables this function
SDIO port 2	SDIO Port 2 (Secure Digital Input Output - SD Memory Card Slot) can be enabled / disabled here.	Enabled	Enables this function
		Disabled	Disables this function

Table 124: US15W Advanced - SDIO Configuration setting options

1.5.8 ACPI table/features control

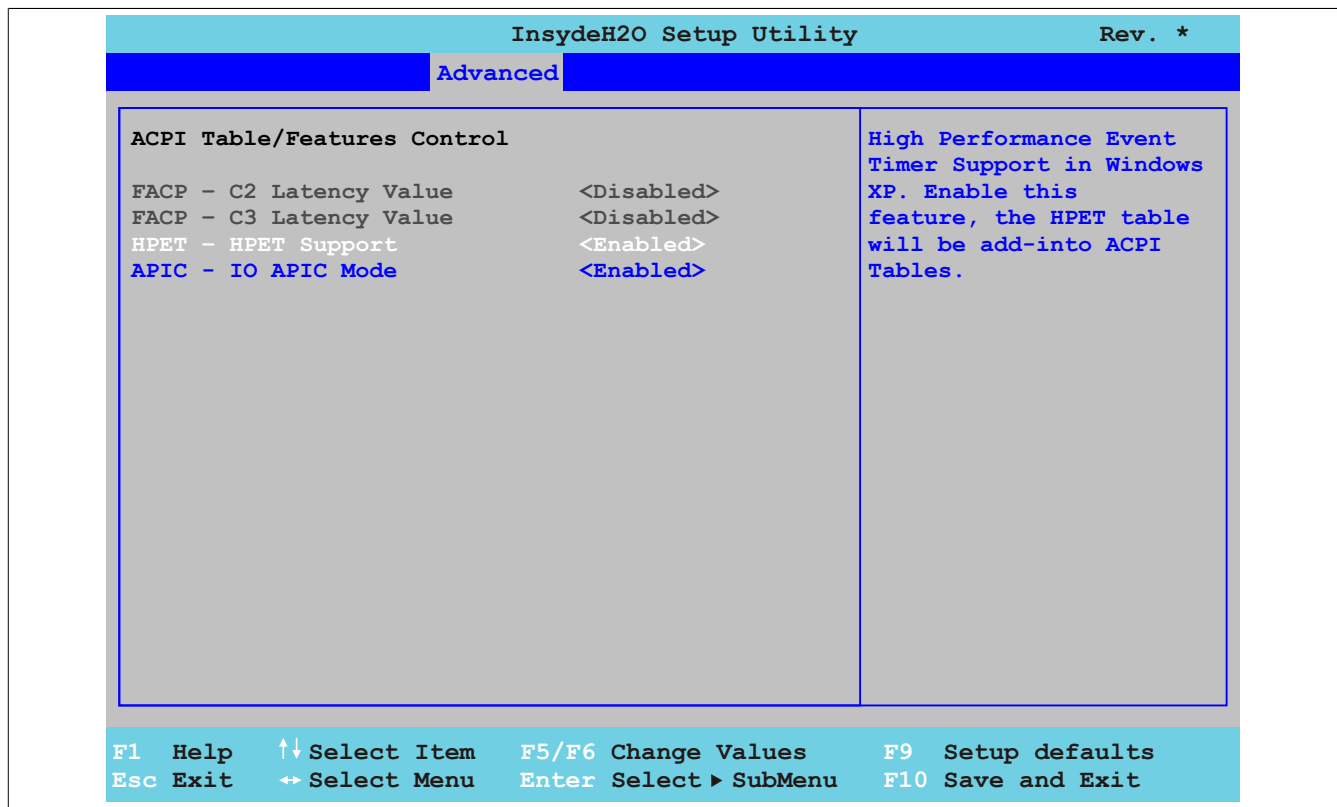


Figure 64: US15W Advanced - ACPI Table/Features Control

BIOS setting	Description	Configuration options	Effect
FACP – C2 Latency Value ¹⁾	Option for setting a latency period in the C2 state.	Enabled	Enables this function A latency of 1 μ s is set (i.e. the C2 state will be entered within 1 μ s and exited again within 1 μ s).
		Disabled	Disables this function
FACP – C3 Latency Value ¹⁾	Option for setting a latency period in the C3 state.	Enabled	Enables this function A latency of 85 μ s is set (i.e. the C3 state will be entered within 85 μ s and exited again within 85 μ s).
		Disabled	Disables this function
HPET – HPET Support	The HPET is a timer inside the PC. It is able to trigger an interrupt with a high degree of accuracy, which allows other programs to better synchronize a variety of applications.	Enabled	Enables this function This function is recommended for multimedia applications.
		Disabled	Disables this function
APIC - I/O APIC mode	This option controls the support of the advanced programmable interrupt controller in the processor.	Enabled	Enables this function
		Disabled	Disables this function

Warning!

Windows XP will not be started if this setting is disabled.

Table 125: US15W Advanced - ACPI Table/Features Control setting options

1) These settings are only possible if *C-States* under the *Advanced CPU control* menu item is set to *Enabled*.

1.5.9 PCI Express root port 1

Warning!

Improper settings can cause instability or device problems. It is therefore strongly recommended that these settings only be changed by experienced users.

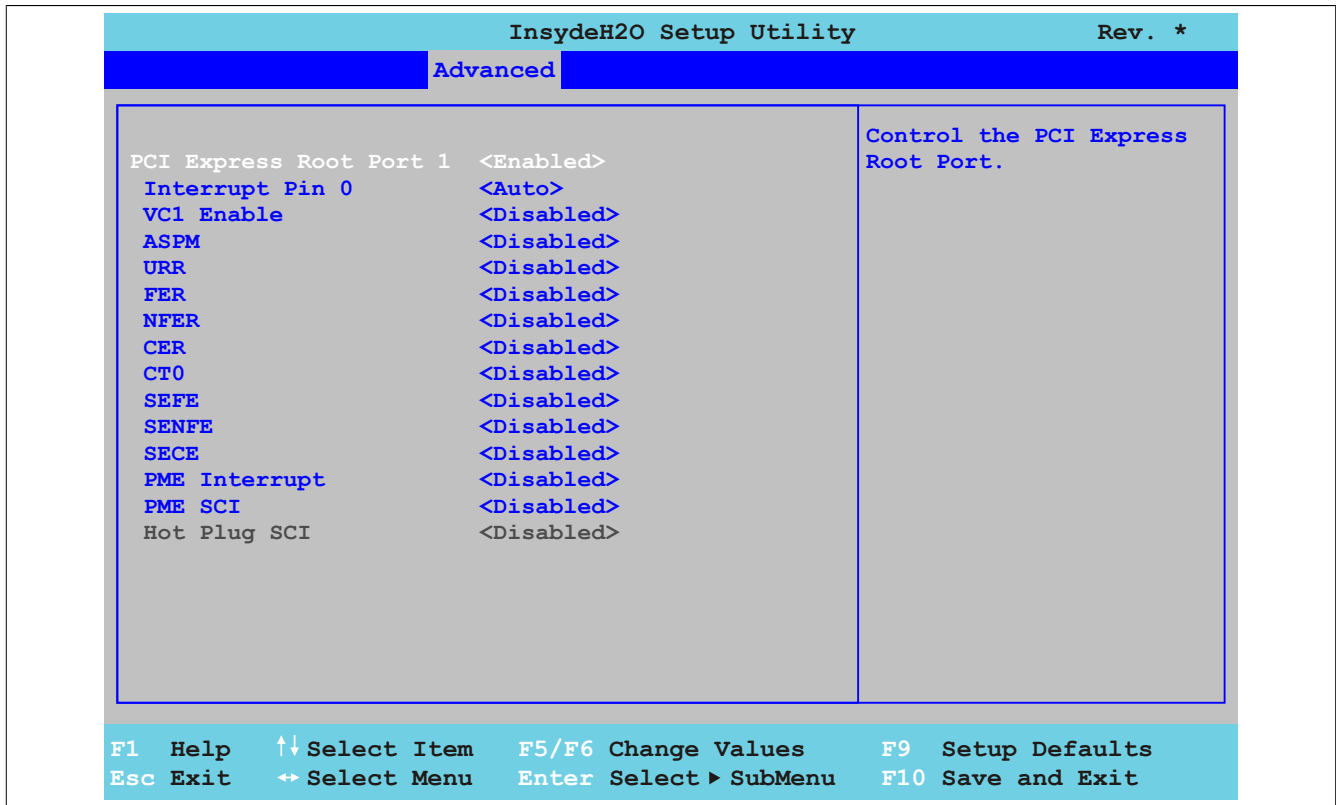


Figure 65: US15W Advanced - PCI Express Root Port 1

BIOS setting	Description	Configuration options	Effect
PCI Express root port 1	This option is used to enable/disable PCI Express Root Port 1.	Enabled	Enables PCI Express root port 1
		Disabled	PCI Express Root Port 1 and 2 disabled.
Interrupt pin 0		Auto	IRQ enabled for Root Port 1.
		Disabled	IRQ disabled for Root Port 1.
VC1 Enable	Virtual Channel 1	Auto	Setting the mapping via the BIOS setting "VC1/TC Mapping".
		Disabled	Disables this function The TC0 Traffic class is automatically used and mapped to the VC0 Virtual Channel.
VC1/TC Mapping ¹⁾	This option is used to define which traffic will be mapped to which Virtual Channel.	TC0	TBD
		TC1	The TC1 traffic class is mapped manually to the VC1 Virtual Channel.
		TC2	The TC2 traffic class is mapped manually to the VC1 Virtual Channel.
		TC3	The TC3 traffic class is mapped manually to the VC1 Virtual Channel.
		TC4	The TC4 traffic class is mapped manually to the VC1 Virtual Channel.
		TC5	The TC5 traffic class is mapped manually to the VC1 Virtual Channel.
		TC6	The TC6 traffic class is mapped manually to the VC1 Virtual Channel.
		TC7	The TC7 traffic class is mapped manually to the VC1 Virtual Channel.
ASPM	<i>Active State Power Management</i> Option for setting a power saving function (L0s/L1) for PCIe links if they do not require full power.	Enabled	Enables this function
		Disabled	Disables this function
Automatic ASPM ²⁾	Option for configuring automatic or manual assignment of the ASPM.	Auto	Automatic assignment by BIOS and the operating system
		Manual	Setting for assignment under the BIOS setting "ASPM L0s" and "ASPM L1".
ASPM L0s ³⁾	Option for configuring the L0 power saving function	Disabled	Disables this function
		Root port only	Enables the power saving function for the root port
		Endpoint Port Only	Enables the power saving function for the endpoint port
		Root&Endpoint Ports	Enables the power saving function for the root and endpoint ports
ASPM L1 ³⁾	Option for setting the L1 power saving function. Power consumption is lower than with L0, but the exit latency is higher.	Enabled	Enables this function
		Disabled	Disables this function
URR	<i>Unsupported Request (UR) reporting</i>	Enabled	Enables this function

Table 126: US15W Advanced - PCI Express Root Port 1 setting options

BIOS setting	Description	Configuration options	Effect
	Option for reporting unsupported requests. Logging of error messages received by the root port is controlled exclusively by the root control register.	Disabled	Disables this function
FER	Fatal error reporting Option for reporting fatal errors. All of the functions of a multifunction device will be monitored. The report for the root port takes place internally inside the root complex.	Enabled	Enables this function
		Disabled	Disables this function
NFER	Non-fatal error reporting Option for reporting non-fatal errors. All of the functions of a multifunction device will be monitored. The report for the root port takes place internally inside the root complex.	Enabled	Enables this function
		Disabled	Disables this function
CER	Correctable error reporting Option for reporting non-fatal errors. All of the functions of a multifunction device will be monitored. The report for the root port takes place internally inside the root complex.	Enabled	Enables this function
		Disabled	Disables this function
CT0	PCI Express completion timer T0 Option for enabling/disabling the PCI Express completion timer Information: This setting should be set to "Enabled" if the system detected an ROB (processor reorder buffer) timeout.	Enabled	Enables this function
		Disabled	Disables this function
SEFE	System error on fatal error Option for generating a system error if a fatal error is registered by a device on the root port or by the root port itself	Enabled	Enables this function
		Disabled	Disables this function
SEFE	System error on non-fatal error Option for generating a system error if a non-fatal error is registered by a device on the root port or by the root port itself	Enabled	Enables this function
		Disabled	Disables this function
SECE	System error on correctable error Option for generating a system error if a correctable error is registered by a device on the root port or by the root port itself	Enabled	Enables this function
		Disabled	Disables this function
PME Interrupt	Power management event interrupt Option for generating a PME Interrupt. An Interrupt is generated when a PME Message is received from a PCIe device.	Enabled	Enables this function A PME Interrupt is generated when a PME message is received.
		Disabled	Disables this function
PME SCI	Option for generating an SCI if power management is detected	Enabled	Enables this function Enables the root port to generate an SCI if power management is detected
		Disabled	Disables this function
Hot Plug SCI	Option for generating an SCI if a Hot Plug is detected.	Enabled	Enables this function The Root Port is enabled to generate SCI if a Hot Plug is detected.
		Disabled	Disables this function

Table 126: US15W Advanced - PCI Express Root Port 1 setting options

- 1) These settings are only possible if *VC1 Enable* is set to *Auto*.
- 2) These settings are only possible if *ASPM* is set to *Enabled*.
- 3) These settings are only possible if *Automatic ASPM* is set to *Manual*.

1.5.10 PCI Express root port 2

Warning!

Improper settings can cause instability or device problems. It is therefore strongly recommended that these settings only be changed by experienced users.

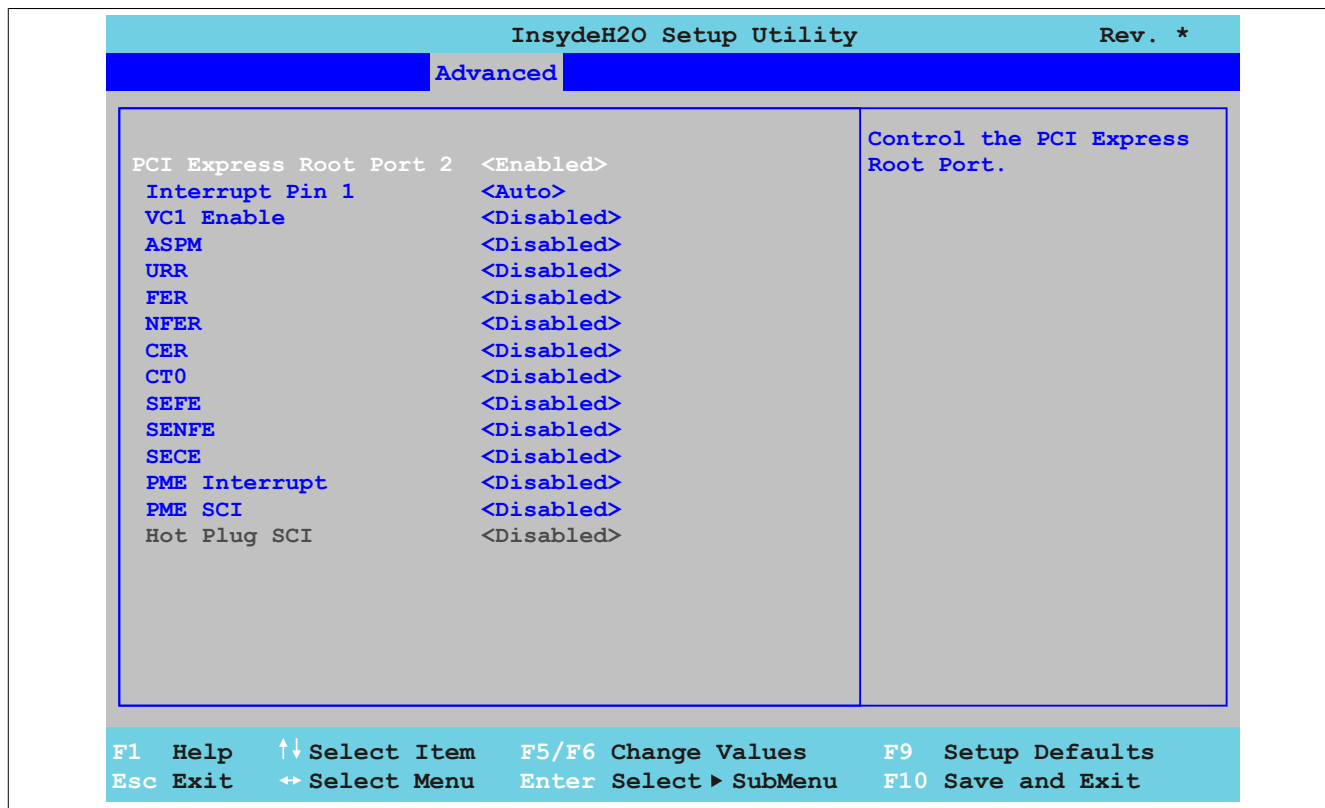


Figure 66: US15W Advanced - PCI Express Root Port 2

BIOS setting	Description	Configuration options	Effect
PCI Express root port 2	This option is used to enable/disable PCI Express Root Port 2.	Enabled	Enables PCI Express root port 2
		Disabled	PCI Express Root Port 2 disabled.
Interrupt pin 1	Information: This function is disabled by default when using ARwin and/or a fieldbus card. The function must be disabled in order to use a fieldbus card.	Auto	IRQ enabled for Root Port 2.
		Disabled	IRQ disabled for Root Port 2.
VC1 Enable	Virtual Channel 1	Auto	Setting the mapping via the BIOS setting "VC1/TC Mapping".
		Disabled	Disables this function The TC0 Traffic class is automatically used and mapped to the VC0 Virtual Channel.
VC1/TC Mapping ¹⁾	This option is used to define which traffic will be mapped to which Virtual Channel.	TC0	TBD
		TC1	The TC1 traffic class is mapped manually to the VC1 Virtual Channel.
		TC2	The TC2 traffic class is mapped manually to the VC1 Virtual Channel.
		TC3	The TC3 traffic class is mapped manually to the VC1 Virtual Channel.
		TC4	The TC4 traffic class is mapped manually to the VC1 Virtual Channel.
		TC5	The TC5 traffic class is mapped manually to the VC1 Virtual Channel.
		TC6	The TC6 traffic class is mapped manually to the VC1 Virtual Channel.
		TC7	The TC7 traffic class is mapped manually to the VC1 Virtual Channel.
ASPM	Active State Power Management Option for setting a power saving function (L0s/L1) for PCIe links if they do not require full power.	Enabled	Enables this function
		Disabled	Disables this function
Automatic ASPM ²⁾	Option for configuring automatic or manual assignment of the ASPM.	Auto	Automatic assignment by BIOS and the operating system

Table 127: US15W Advanced - PCI Express Root Port 2 setting options

BIOS setting	Description	Configuration options	Effect
		Manual	Setting for assignment under the BIOS setting "ASPM L0s" and "ASPM L1".
ASPM L0s ³⁾	Option for configuring the L0 power saving function	Disabled	Disables this function
		Root port only	Enables the power saving function for the root port
		Endpoint Port Only	Enables the power saving function for the Endpoint port.
		Root&Endpoint Ports	Enables the power saving function for the root and endpoint ports
ASPM L1 ³⁾	Option for setting the L1 power saving function. Power consumption is lower than with L0, but the exit latency is higher.	Enabled	Enables this function
		Disabled	Disables this function
URR	<i>Unsupported Request (UR) reporting</i> Option for reporting unsupported requests. Logging of error messages received by the root port is controlled exclusively by the root control register.	Enabled	Enables this function
		Disabled	Disables this function
FER	<i>Fatal error reporting</i> Option for reporting fatal errors. All of the functions of a multifunction device will be monitored. The report for the root port takes place internally inside the root complex.	Enabled	Enables this function
		Disabled	Disables this function
NFER	<i>Non-fatal error reporting</i> Option for reporting non-fatal errors. All of the functions of a multifunction device will be monitored. The report for the root port takes place internally inside the root complex.	Enabled	Enables this function
		Disabled	Disables this function
CER	<i>Correctable error reporting</i> Option for reporting non-fatal errors. All of the functions of a multifunction device will be monitored. The report for the root port takes place internally inside the root complex.	Enabled	Enables this function
		Disabled	Disables this function
CT0	<i>PCI Express completion timer T0</i> Option for enabling/disabling the PCI Express completion timer Information: This setting should be set to "Enabled" if the system detected an ROB (processor reorder buffer) timeout.	Enabled	Enables this function
		Disabled	Disables this function
SEFE	<i>System error on fatal error</i> Option for generating a system error if a fatal error is registered by a device on the root port or by the root port itself	Enabled	Enables this function
		Disabled	Disables this function
SENEFE	<i>System error on non-fatal error</i> Option for generating a system error if a non-fatal error is registered by a device on the root port or by the root port itself	Enabled	Enables this function
		Disabled	Disables this function
SECE	<i>System error on correctable error</i> Option for generating a system error if a correctable error is registered by a device on the root port or by the root port itself	Enabled	Enables this function
		Disabled	Disables this function
PME Interrupt	<i>Power management event interrupt</i> Option for generating a PME Interrupt. An Interrupt is generated when a PME Message is received from a PCIe device.	Enabled	Enables this function A PME Interrupt is generated when a PME message is received.
		Disabled	Disables this function
PME SCI	Option for generating an SCI if power management is detected	Enabled	Enables this function Enables the root port to generate an SCI if power management is detected
		Disabled	Disables this function
Hot Plug SCI	Option for generating an SCI if a Hot Plug is detected.	Enabled	Enables this function The Root Port is enabled to generate SCI if a Hot Plug is detected.
		Disabled	Disables this function

Table 127: US15W Advanced - PCI Express Root Port 2 setting options

- 1) These settings are only possible if *VC1 Enable* is set to *Auto*.
 2) These settings are only possible if *ASPM* is set to *Enabled*.
 3) These settings are only possible if *Automatic ASPM* is set to *Manual*.

1.5.11 Console redirection

Information:

These settings are only visible to Automation PC 511 system units without I/O board. The mode/node switches must be set to "00" (default).

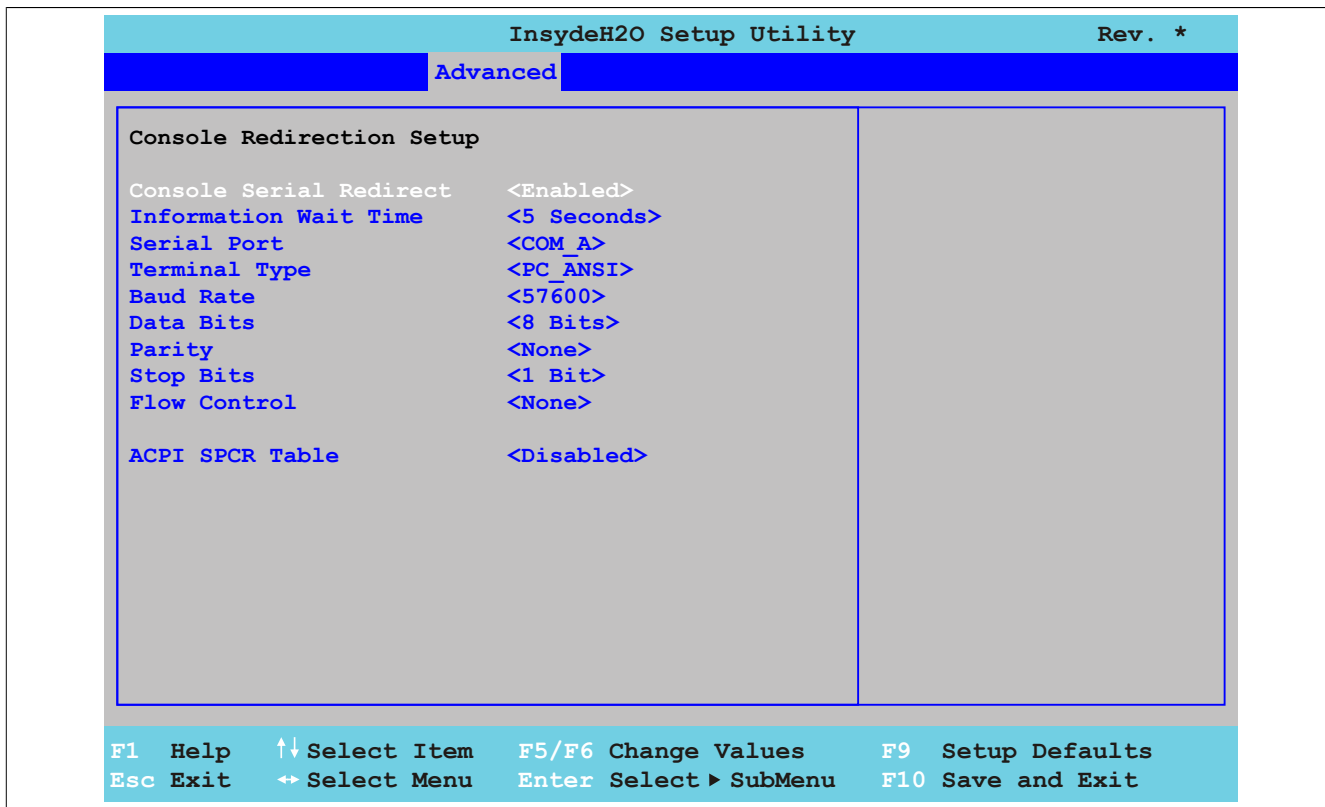


Figure 67: US15W Advanced - Console Redirection

BIOS setting	Description	Configuration options	Effect
Console Serial Redirect	Option for setting the remote console. The Remote Console enables you to access the BIOS setup via the serial interface using a terminal emulator (PuTTY or HyperTerminal).	Enabled	Enables this function
		Disabled	Disables this function
	Information: This setting is automatically enabled when using an APC511 without I/O board and the mode/node switch position "00" (default).		
Information Wait Time	Option for setting the amount of time for the Remote Console to wait before accessing the BIOS for the first time.	0 Seconds, 2 Seconds, 5 Seconds, 10 Seconds, 30 Seconds	The Remote Console waits x seconds before accessing the BIOS for the first time.
Serial port	Option for setting the serial interface.	COM_A	Access via the COMA serial interface.
		COM_B	Access via the COMB serial interface.
		COM_C	Access via the COMC serial interface.
		COM_D	Access via the COMD serial interface.
		All Ports	TBD
Terminal type	Option for configuring keyboard input	VT_100	Enables the VT100 convention (ASCII character set)
		VT_100+	Enables the VT100+ convention (ASCII character set and support for color, function keys, etc)
		VT_UTF8	Enables the VT-UTF8 convention (uses UTF8 encoding to assign Unicode characters to one or more bytes)
		PC_ANSI	Enables the PC ANSI convention (extended ASCII character set).
Baud rate	Option for setting the transfer rate of the serial interface (bits per second)	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200	Enables a transfer rate of x bits
Data bits	Option for configuring the character length (data bits) to use for serial communication	7 bits	Character length with 7 bits
		8 bits	Character length with 8 bits
Parity	Option for configuring the parity bit to use for serial communication	None	Parity bit not used
		Even	Uses an even number of parity bits
		Odd	Uses an odd number of parity bits
Stop bits	Option for configuring the stop bits to use for serial communication	1-bit	Uses 1 bit as the stop bit
		2-bit	Uses 2 bits as the stop bit
Flow control	Option for configuring the data flow control	None	Data flow control not enabled

Table 128: US15W Advanced - Console Redirection setting options

BIOS setting	Description	Configuration options	Effect
ACPI SPCR Table	Option for setting ACPI Serial Port Console Redirection (SPCR).	RTS/CTS	Hardware handshake enabled
		XON/XOFF	Software handshake enabled.
		Enabled	Enables this function
		Disabled	Disables this function

Table 128: US15W Advanced - Console Redirection setting options

1.6 Security

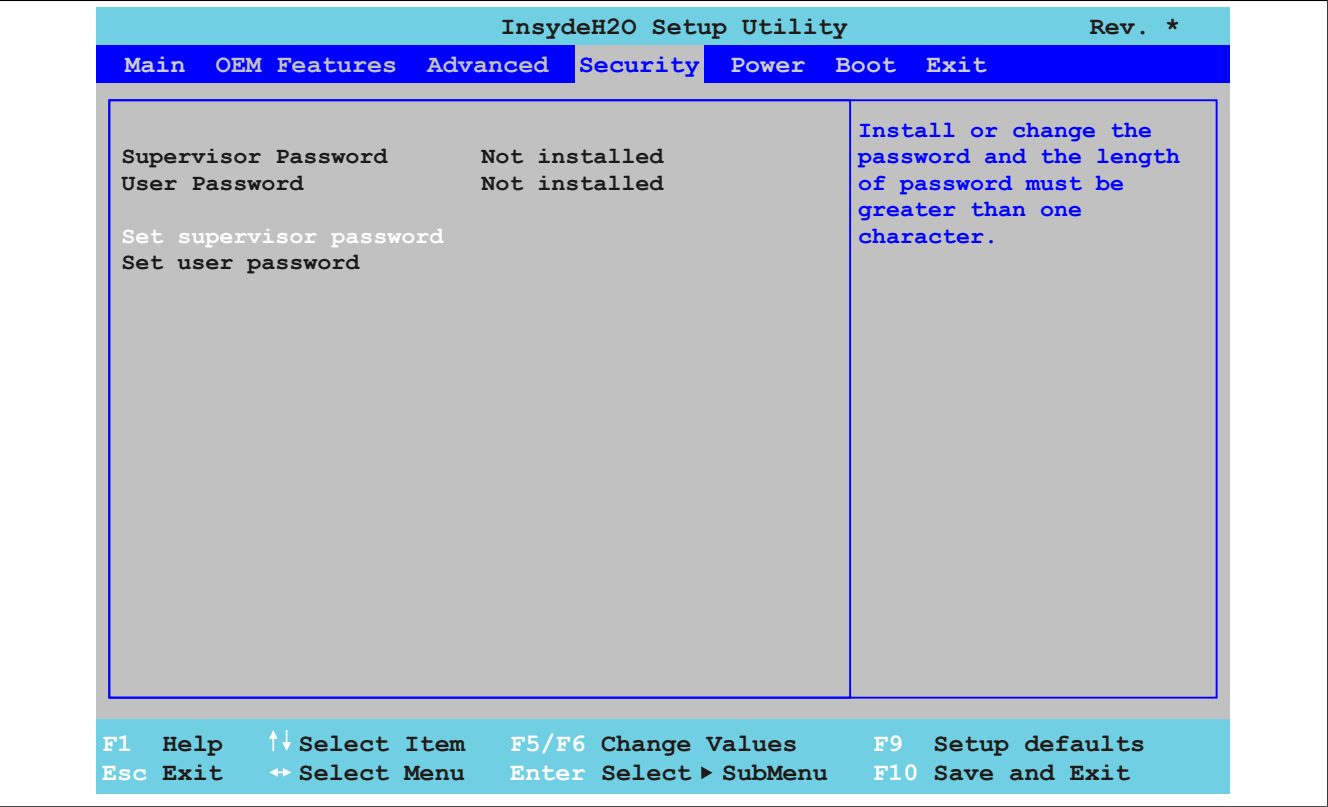


Figure 68: US15W Security - Menu

BIOS setting	Description	Configuration options	Effect
Supervisor Password	Displays whether or not a supervisor password has been set.	None	-
User Password	Displays whether or not a user password has been set.	None	-
Set supervisor password	Option for entering/changing a supervisor password. A supervisor password is necessary to edit all BIOS settings.	Enter	Password entry
Set User Password	Option for entering/changing a user password. A user password allows the user to edit only certain BIOS settings.	Enter	Password entry

Table 129: US15W Security - Menu setting options

1.6.1 Set supervisor password

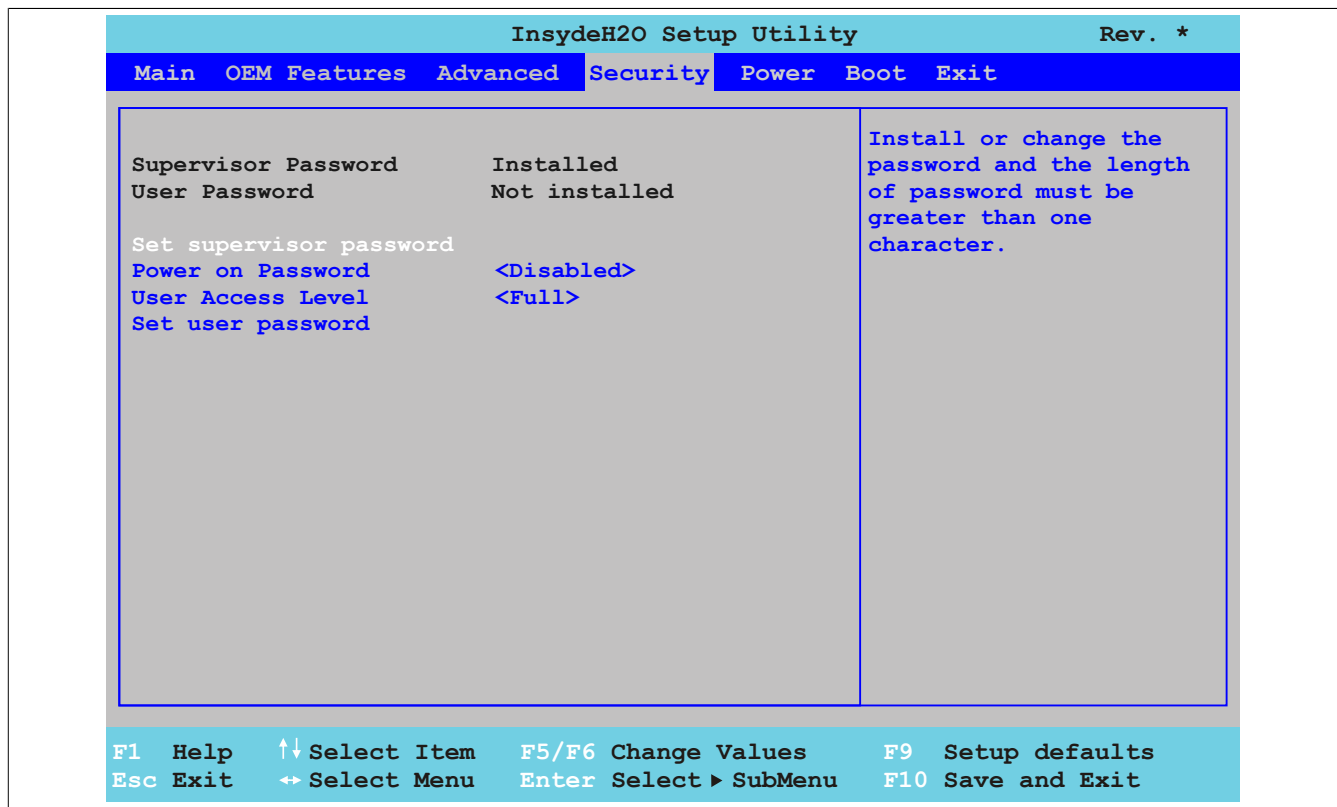


Figure 69: US15W Security - Set Supervisor Password

BIOS setting	Description	Configuration options	Effect
Supervisor Password	Displays whether or not a supervisor password has been set.	None	-
User Password	Displays whether or not a user password has been set.	None	-
Set supervisor password	Option for entering/changing a supervisor password. A supervisor password is necessary to edit all BIOS settings.	Enter	Password entry
Power on Password	Entering BIOS or starting the operating system requires a password to be entered.	Enabled	POST requires the Supervisor Password to be entered.
		Disabled	Entering BIOS requires the Supervisor Password to be entered, but the operating system can be started without a password.
User Access Level	Assigning editing permissions in BIOS. These settings are only relevant if a user password has been created.	View Only	User can only view BIOS settings (cannot make any changes).
		Limited	User can view all BIOS settings, but only make some changes. Settings that the user can change: Main - System Time, Main - System Date, Advanced - Boot Configuration - Numlock
		Full	User has full access to BIOS and can make any changes.

Table 130: US15W Security - Set Supervisor Password setting options

1.6.2 Set user password

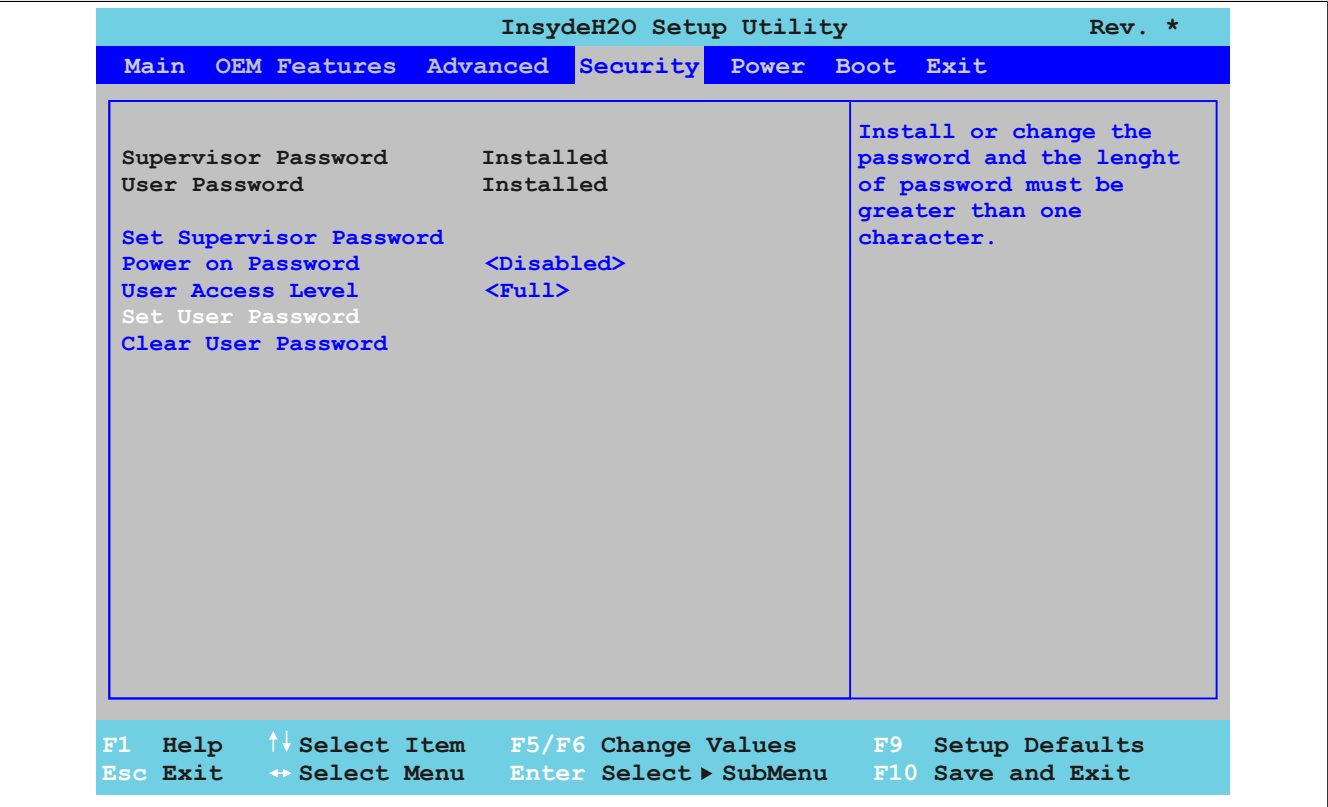


Figure 70: US15W Security - Set User Password

BIOS setting	Description	Configuration options	Effect
Supervisor Password	Displays whether or not a supervisor password has been set.	None	-
User Password	Displays whether or not a user password has been set.	None	-
Set User Password	Option for entering/changing a user password. A user password allows the user to edit only certain BIOS settings.	Enter	Password entry
Clear User Password ¹⁾	Option for clearing the user password.		Clears user password.

Table 131: US15W Security - Set User Password - Setting options

1) This setting is only visible if a user password was created with *Set user password*.

1.7 Power

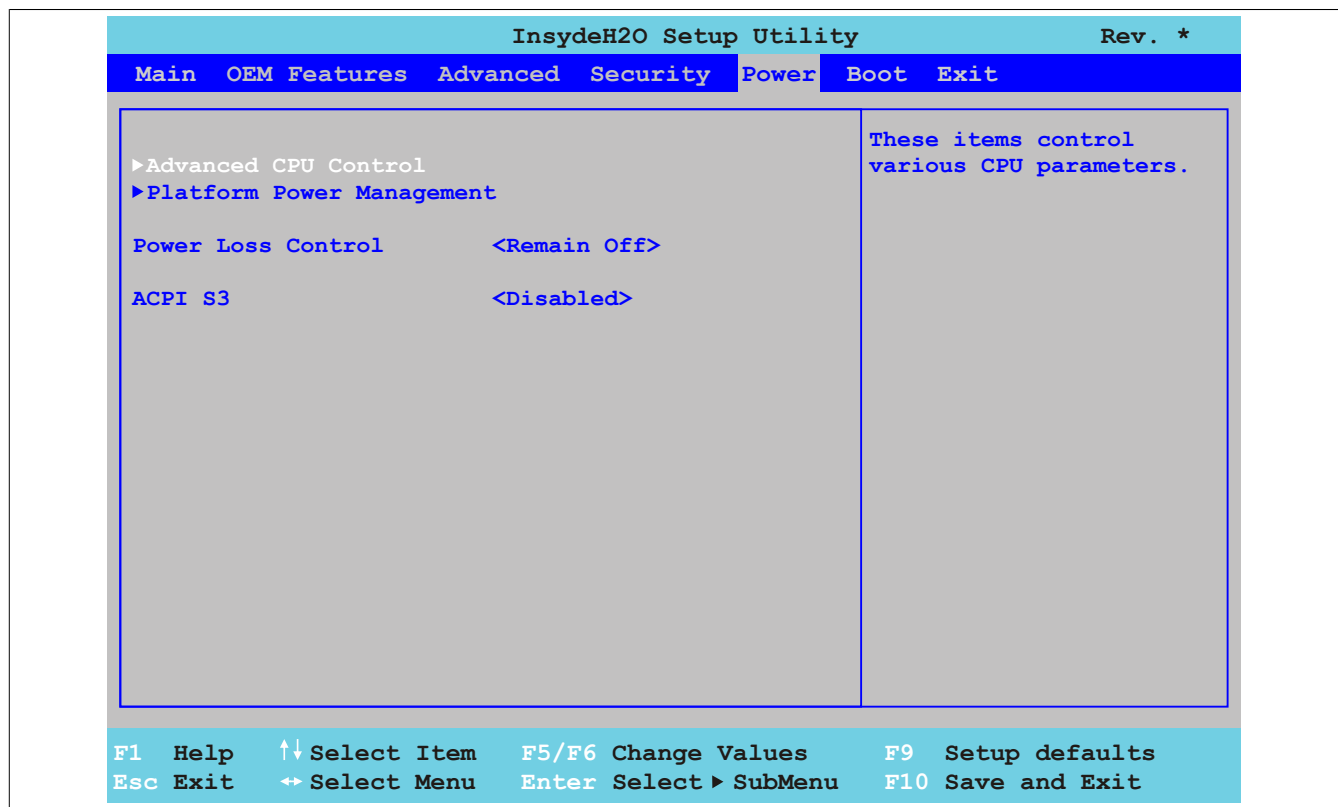


Figure 71: US15W Power - Menu

BIOS setting	Description	Configuration options	Effect
Advanced CPU control	Configuration of the Advanced CPU Control settings.	None	Opens the submenu See "Advanced CPU control" on page 134
Platform power management	Configuration of the Platform Power Management settings.	None	Opens the submenu See "Platform power management" on page 137
Power loss control	This option determines what should occur after a power failure.	Remain off	Device remains off.
		Turn on	The device turns back on.
ACPI S3	This option is used to determine whether or not the operating system should be written to the RAM, in which case only the RAM should be supplied with power.	Enabled	Enables this function
		Disabled	Disables the function

Table 132: US15W Power - Menu setting options

1.7.1 Advanced CPU control

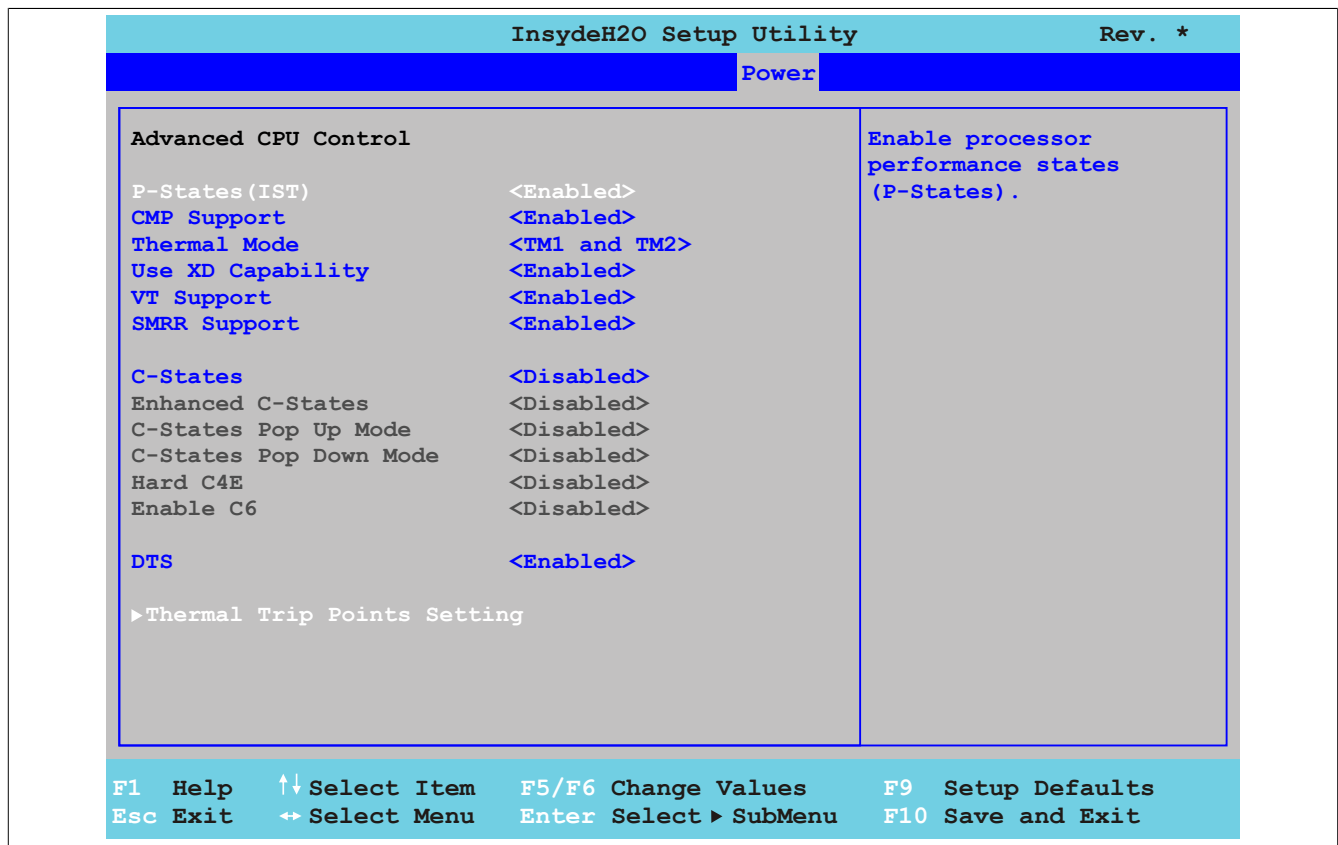


Figure 72: US15W Power - Advanced - CPU Control

BIOS setting	Description	Configuration options	Effect
P-States(IST)	Option for controlling the Intel(R) SpeedStep(TM) technology. The processor clock speed is increased or decreased according to the amount of calculations that must be made. As a result, the power consumption depends largely on the processor load.	Enabled	The processor speed is regulated by the operating system.
		Disabled	Disables SpeedStep technology.
CMP Support	This option supports the use of multiple CPUs (CMP=core multi-processing). Information: In order to use ARwin, CMP support must be switched off to avoid runtime violations.	Enabled	Enables this function
		Disabled	Disables this function
Thermal Mode ¹⁾	Option for configuring the temperature monitoring. Information: To operate the processor within the specified values, we recommend not changing the default setting (TM1 and TM2).	Disabled	Temperature monitoring disabled.
		TM1	Intel Thermal Mode 1 enabled. If the CPU reaches excessive temperatures, the processor speed will be reduced by 50%.
		TM2	Intel Thermal Mode 2 enabled. If the CPU reaches excessive temperatures, the Intel SpeedStep technology will be activated.
		TM1 and TM2	Intel Thermal Mode 1 and 2 enabled. If the CPU reaches excessive temperatures, TM1 reduces the processor speed by 50% and TM2 activates the Intel SpeedStep technology.
Use XD Capability	This option is a safety feature that protects specific data regions of the system memory from potentially damaging code.	Enabled	Enables this function
		Disabled	Disables this function
VT Support	Option for activating or deactivating a virtual machine. Information: A restart is required in order to apply changes made to this setting.	Enabled	If the function is enabled, a virtual machine can use the additional hardware capacity.
		Disabled	Disables this function

Table 133: US15W Power - Advanced CPU Control setting options

BIOS setting	Description	Configuration options	Effect
SMRR Support	The SMRR (System Management Range Register) limits cacheable references of addresses in SMRAM in order to keep the code running in SMM (System Management Mode). In some circumstances, an intruder who is logged on as administrator could configure the Intel processor to gain access to the SMM. Implementation of SMRR reduces this risk of unauthorized access.	Enabled	Enables this function
		Disabled	Disables this function
C-States	This setting allows the operating system to set processor clock rates on its own, thereby saving energy.	Enabled	Enables this function The processors are run at different frequencies, thereby saving energy.
		Disabled	Disables this function Both processors are run at the same frequency.
Enhanced C-States ²⁾	This setting allows the operating system to set processor clock rates on its own, thereby saving energy.	Enabled	Enables this function
		Disabled	Disables this function
C-State Pop Up Mode	This setting makes it possible to detect Bus Master requests and to assign processor clock frequencies. This can be done to save energy.	Enabled	If ICH receives a Bus Master request, then the system changes from C3/C4 state to C2 state and the Bus Master is automatically activated.
		Disabled	Bus Master data transfer is a Break Event and ICH will attempt to return to the C0 state.
C-State Pop Down Mode ³⁾	This setting makes it possible to detect Bus Master requests and to assign processor clock frequencies. This can be done to save energy.	Enabled	If ICH does not receive a Bus Master request, then the system will be set back to C3/C4 state.
		Disabled	ICH will not attempt to automatically return to C3/C4 state.
Hard C4E ⁴⁾	Power Management for the Intel Atom processor - Enhanced C4 support.	Enabled	Enables this function CPU voltage is reduced and the Memory Cache is turned off.
		Disabled	Disables this function
Enable C6	Power Management for the Intel Atom processor - C6 support.	Enabled	Enables this function The internal CPU voltage is reduced (can also be 0 V).
		Disabled	Disables this function
DTS	Option for enabling or disabling the CPU Digital Thermal Sensor function.	Enabled	Enables this function
		Disabled	Disables this function
Thermal Trip Points Setting ⁵⁾	Configuration of the Thermal Trip Points settings.	Enter	Opens the submenu See "Thermal trip points settings" on page 136

Table 133: US15W Power - Advanced CPU Control setting options

- 1) These settings are only possible if *P-States(IST)* is set to *Enabled*.
- 2) These settings are only possible if *C-States* is set to *Enabled*.
- 3) These settings are only possible if *C-States Pop Up Mode* is set to *Enabled*.
- 4) These settings are only possible if *Enhanced C-States* is set to *Enabled*.
- 5) These settings are only possible if *DTS* is set to *Enabled*.

1.7.1.1 Thermal trip points settings

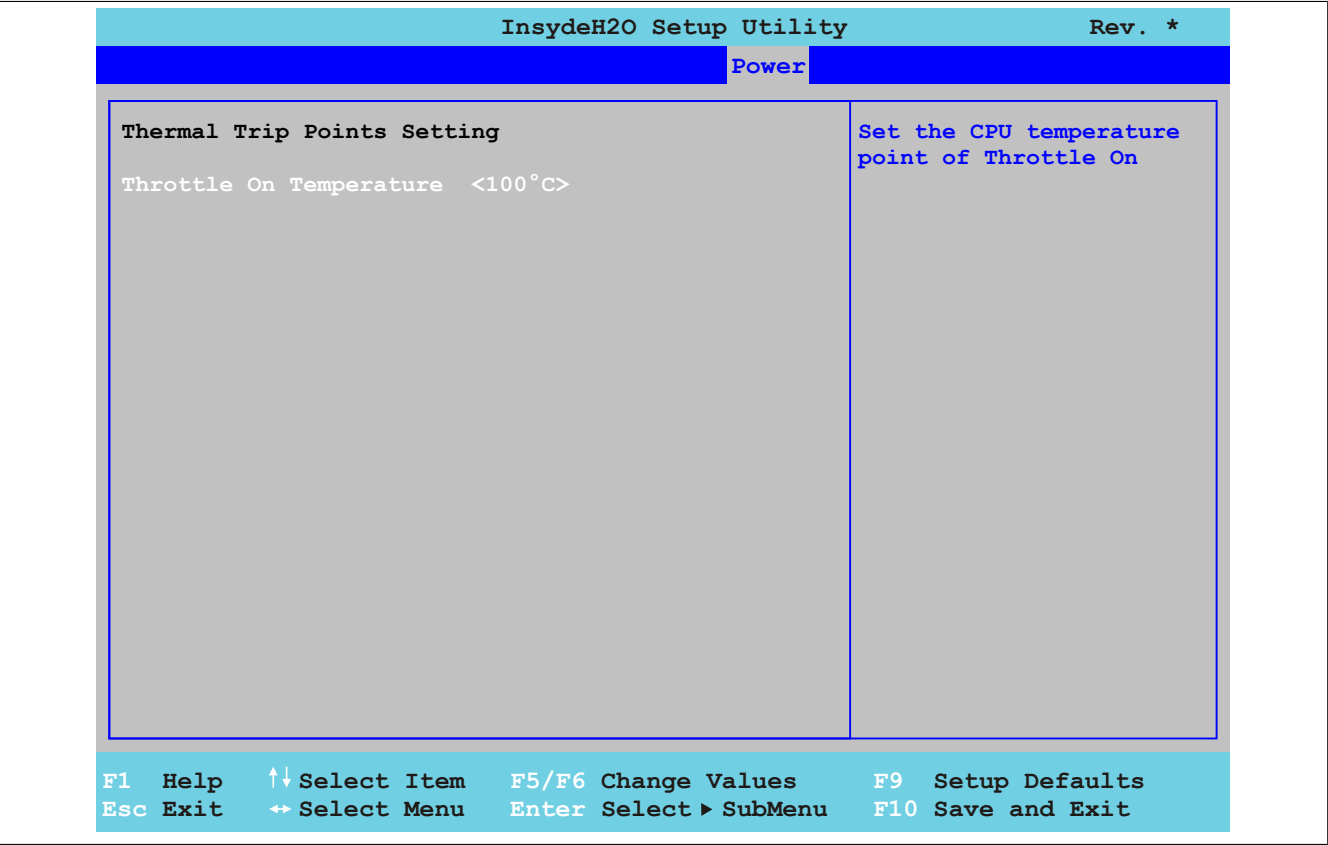


Figure 73: US15W Power - Advanced - CPU Control - Thermal Trip Points Settings

BIOS setting	Description	Configuration options	Effect
Throttle On Temperature	This function can be used to set a temperature at which the operating system throttles the system.	40°C, 45°C, 50°C, 55°C, 60°C, 65°C, 70°C, 75°C, 80°C, 85°C, 90°C, 95°C, 100°C	Temperature setting for the thermal trip point. Can be set in 5 degree increments.

Table 134: US15W Power - Advanced CPU Control - Thermal Trip Points Settings options

1.7.2 Platform power management

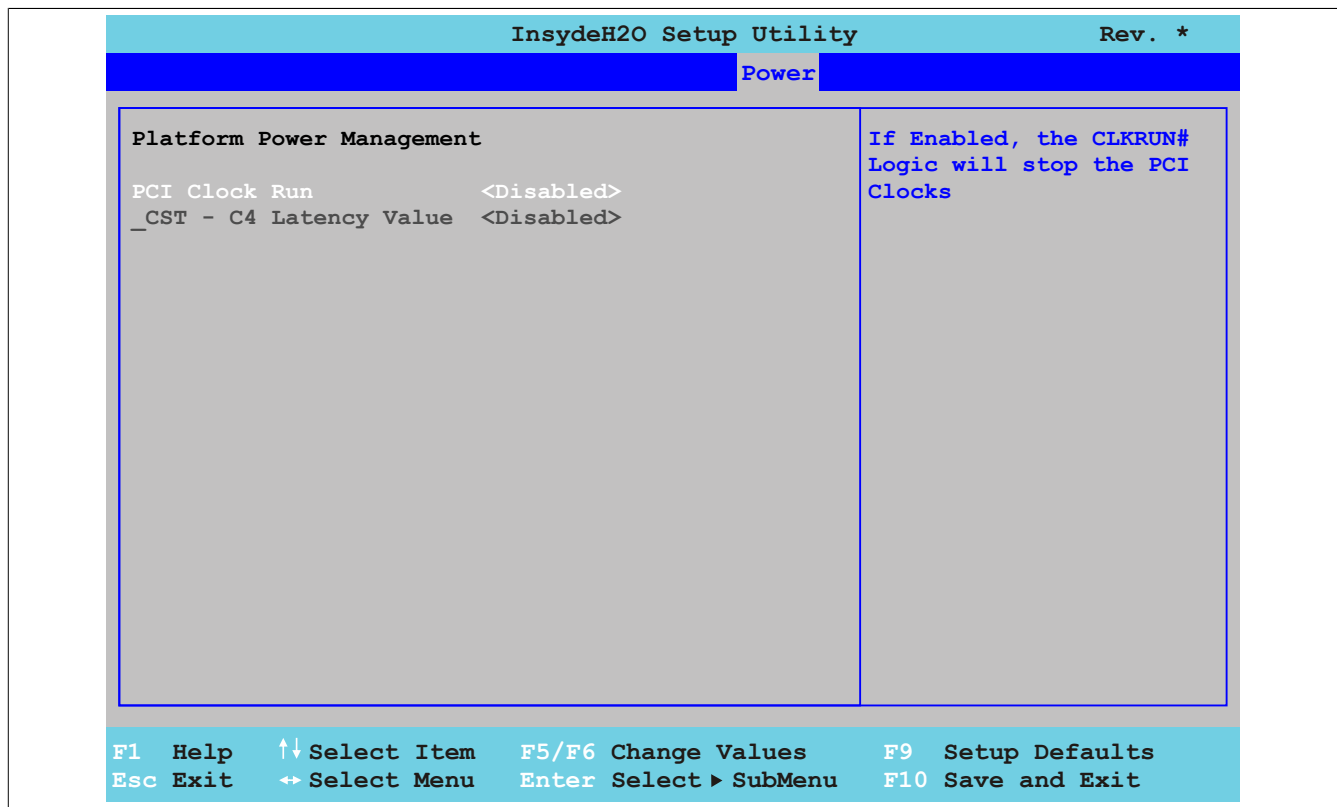


Figure 74: US15W Power - Platform Power Management

BIOS setting	Description	Configuration options	Effect
PCI Clock Run	Option for enabling / disabling the PCI Clocks to save energy.	Enabled	Enables this function
		Disabled	Disables this function
_CST - C4 Latency Value ¹⁾	Option for enabling / disabling the latency period for C4 C-States in the ACPI _CST object. Information: For more detailed information about this setting, see the ACPI specification (www.acpi.info).	Enabled	Enables this function
		Disabled	Disables this function
C4 on C3 - Deeper Sleep ²⁾	Fine-tunes the power saving function on an ACPI operating system.	Enabled	Processor is needed in C4 if the operating system is initiated in a C3 state.
		Disabled	Disables this function

Table 135: US15W Power - Platform Power Management setting options

- 1) These settings are only possible if *C-States* under the *Advanced CPU control* menu item is set to *Enabled*.
 2) These settings are only possible if *_CST - C4 Latency Value* is set to *Enabled*.

1.8 Boot

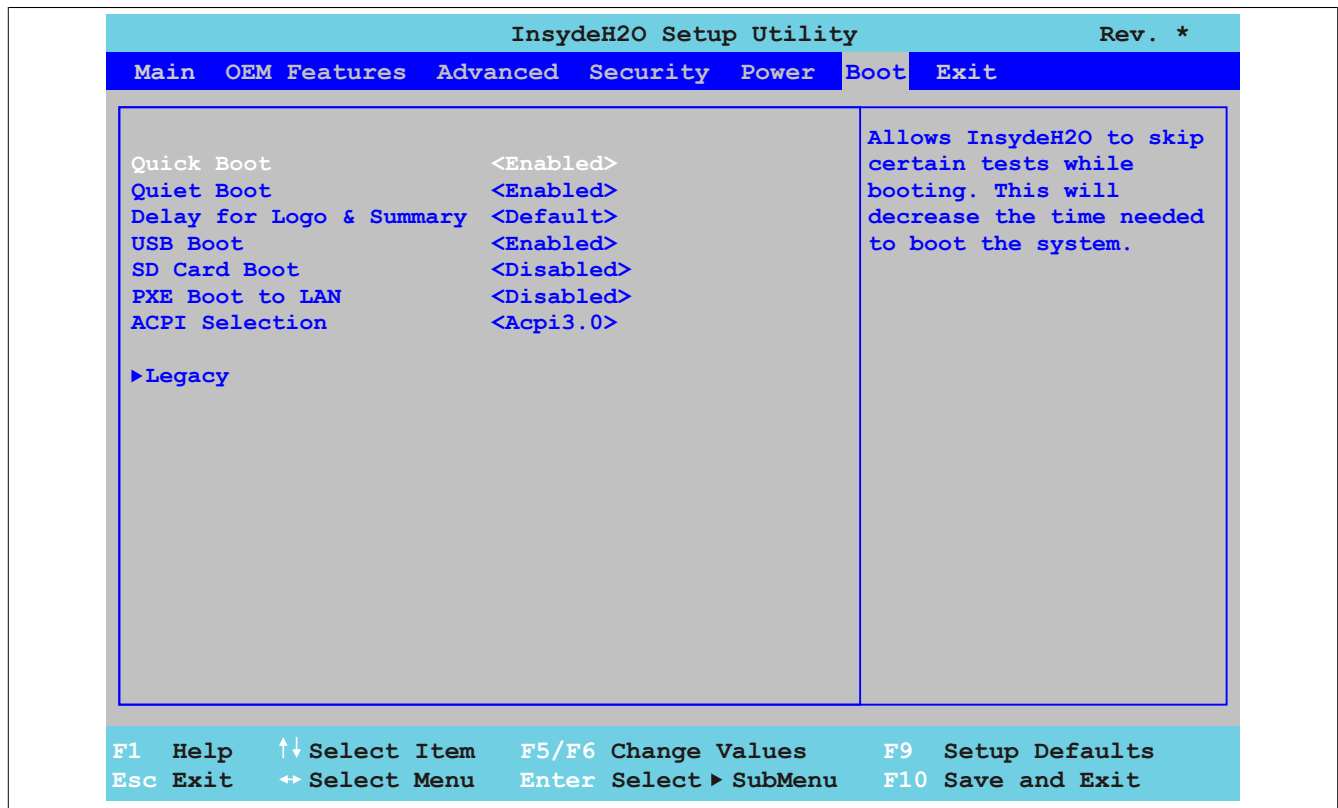


Figure 75: US15W Boot - Menu

BIOS setting	Description	Configuration options	Effect
Quick Boot	This function reduces the boot time by skipping some POST tests.	Enabled	Enables this function
		Disabled	Disables this function
Quiet Boot	Determines if POST message or OEM logo (default = black background) is displayed.	Enabled	OEM logo display instead of POST message.
		Disabled	POST message display.
Delay for Logo & Summary	Option for setting the display duration of the logo and summary screen.	Default	The display duration is minimized for a quick boot procedure.
		1 Sec., 1.5 Sec., 2 Sec., 2.5 Sec., 3 Sec., 4 Sec., 5 Sec., 10 Sec., 20 Sec.	A display duration of x seconds can be defined.
USB Boot	This function can be used to enable / disable the option of booting from USB devices.	Enabled	Enables this function
		Disabled	Disables this function
SD Card Boot	This function can be used to enable / disable the option of booting from SD cards.	Enabled	Enables this function
		Disabled	Disables this function
PXE Boot to LAN	This function can be used to enable / disable the option of booting from LAN (ETH).	Enabled	Enables this function
		Disabled	Disables this function
ACPI Selection	Option for setting the power option specifications to be supported. The ACPI functions must be supported by the drivers and operating systems being used.	Acpi 1.0B	ACPI functions in accordance with v1.0B
		Acpi 3.0	ACPI functions in accordance with v3.0
		Acpi 4.0	ACPI functions in accordance with v4.0
Legacy	Boot order configuration and display	Enter	Opens the submenu See "Legacy" on page 139

Table 136: US15W Boot - Menu setting options

1.8.1 Legacy

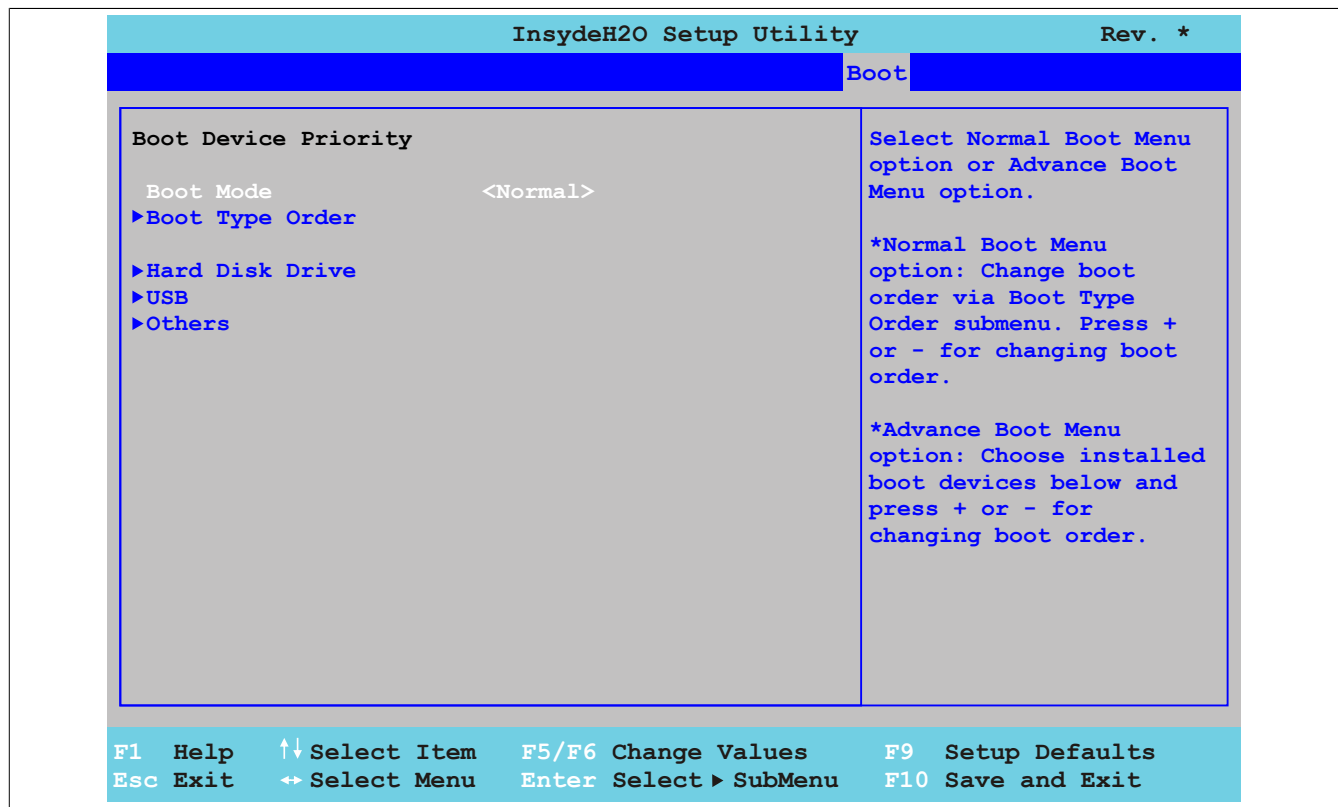


Figure 76: US15W Boot - Legacy

BIOS setting	Description	Configuration options	Effect
Boot mode	Boot mode configuration.	Normal	Displays the submenus for changing the boot sequence settings.
		Advanced	Displays only the product names of the bootable connected devices. The boot sequence can be defined right here.
Boot type order ¹⁾	Configuration of Boot Type Order settings.	Enter	Opens the submenu See "Boot type order" on page 140
Hard disk drive ¹⁾²⁾	Displays the inserted CompactFlash cards.	Enter	Opens the submenu See "Hard disk drive" on page 141
USB ¹⁾³⁾	Displays connected USB flash drives.	Enter	Opens the submenu See "USB" on page 141
Others ¹⁾⁴⁾	Displays the CPU Boards / Baseboards for PXE Boot with the onboard Ethernet interfaces.	Enter	Opens the submenu See "Other" on page 142

Table 137: US15W Boot - Legacy setting options

- 1) These submenus are only shown if *Normal boot mode* is set to *Normal*.
- 2) Only shown if a CompactFlash card is connected.
- 3) Only shown if a USB flash drive is connected.
- 4) Only shown if *PXE boot to LAN* is set to *Enabled* in the boot menu.

1.8.1.1 Boot type order

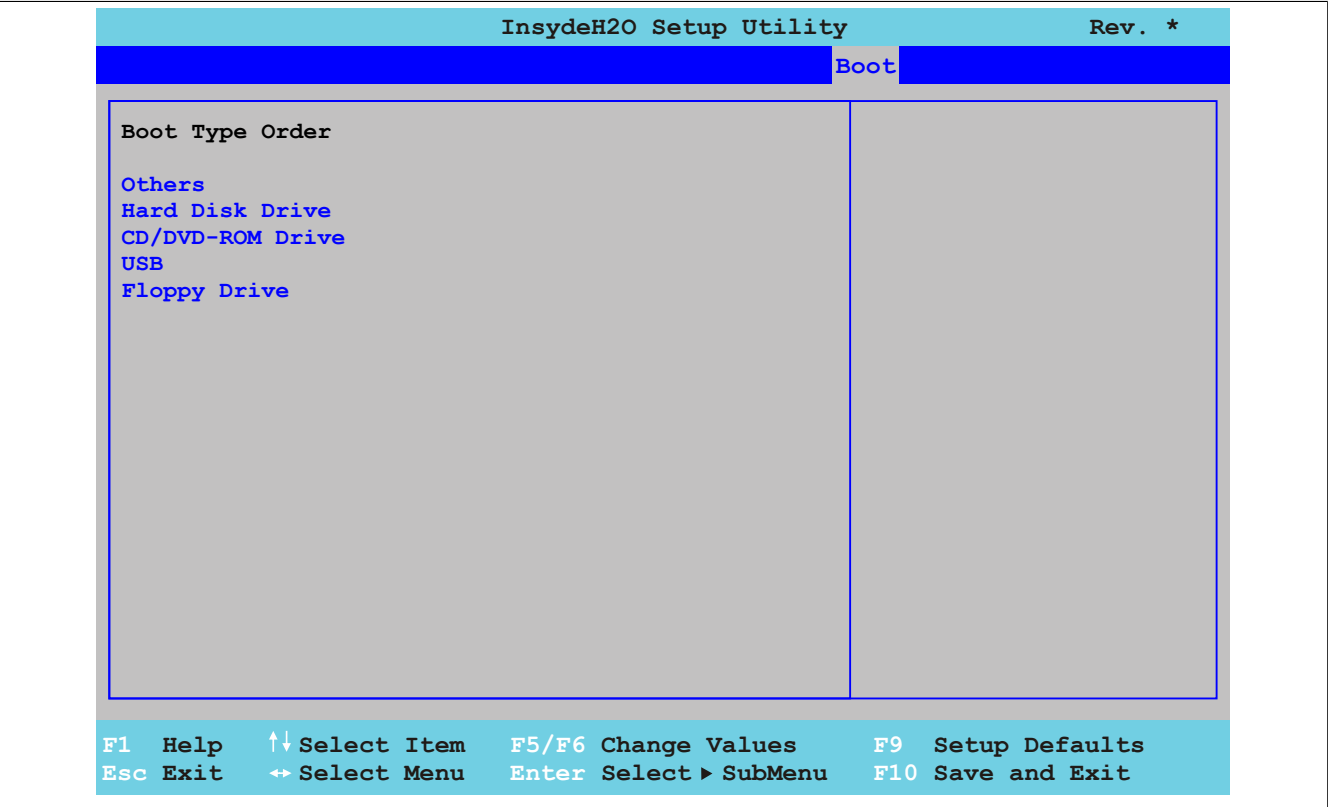


Figure 77: US15W Boot - Legacy - Boot Type Order

BIOS setting	Description	Configuration options	Effect
Others	Option for selecting drives to be used for booting	Others	Specifies the desired boot sequence
Hard disk drive		Hard disk drive	
CD/DVD ROM drive		CD/DVD ROM drive	
USB		USB	
Floppy Drive		Floppy Drive	

Table 138: US15W Boot - Legacy - Boot Type Order setting options

1.8.1.2 Hard disk drive

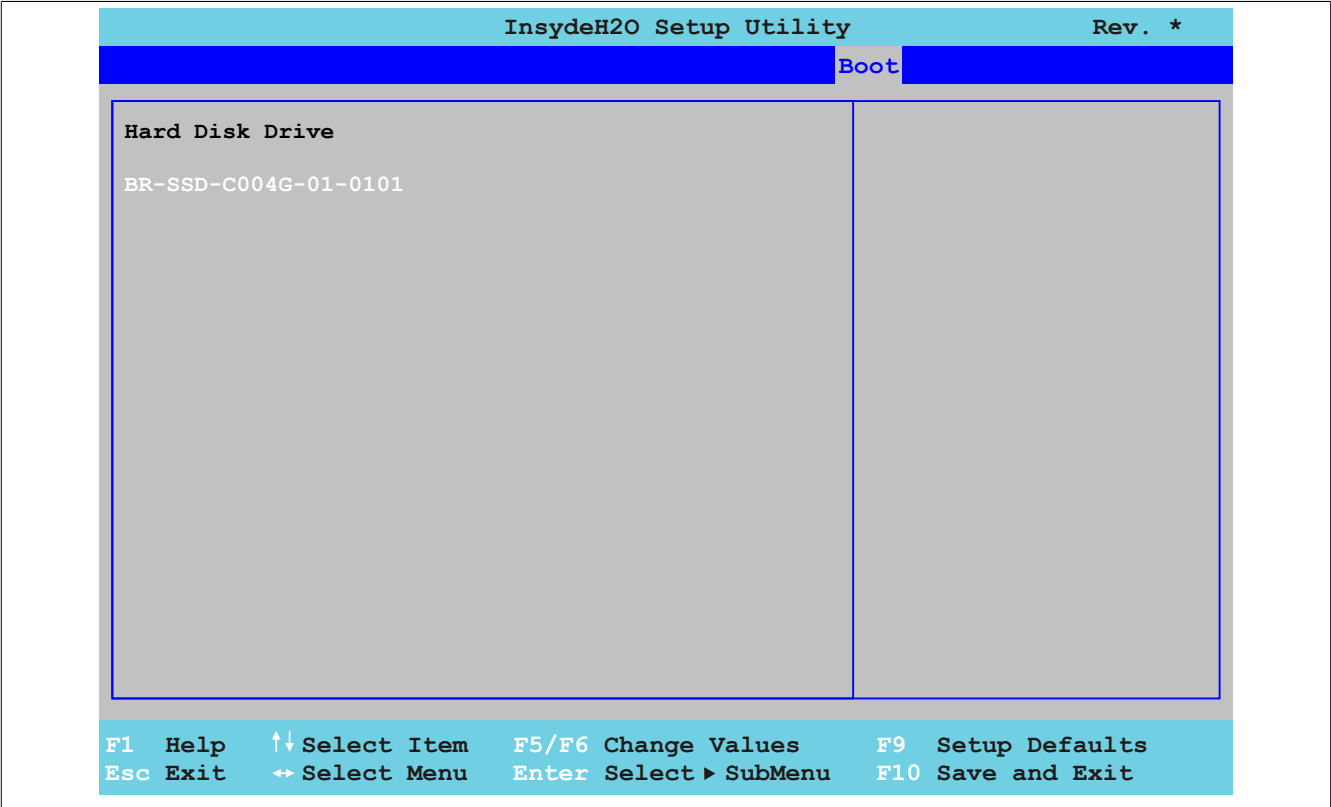


Figure 78: US15W Boot - Legacy - Hard Disk Drive

BIOS setting	Description	Configuration options	Effect
	Displays the inserted CompactFlash cards.	None	-

Table 139: US15W Boot - Legacy - Hard Disk Drive setting options

1.8.1.3 USB

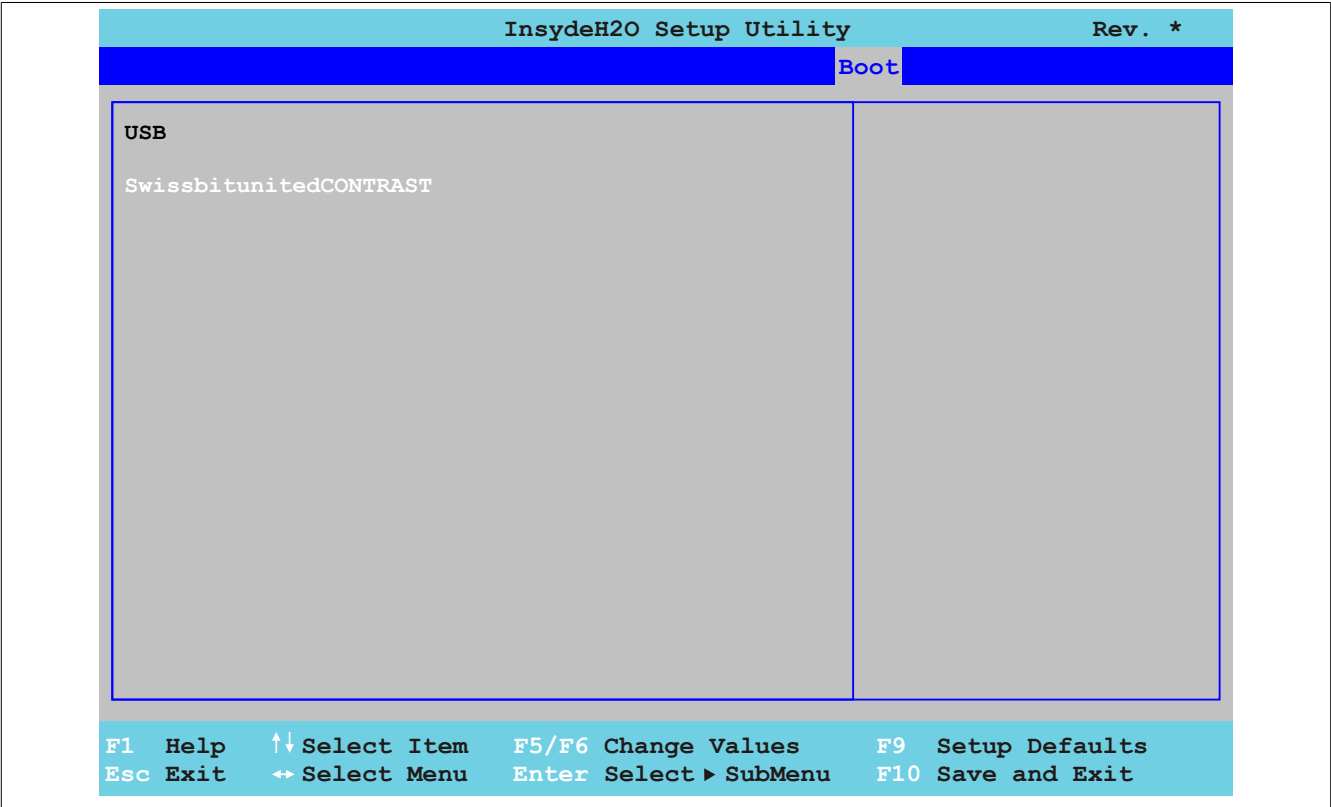


Figure 79: US15W Boot - Legacy - USB

BIOS setting	Description	Configuration options	Effect
	Displays connected USB flash drives.	None	-

Table 140: US15W Boot - Legacy - USB setting options

1.8.1.4 Other

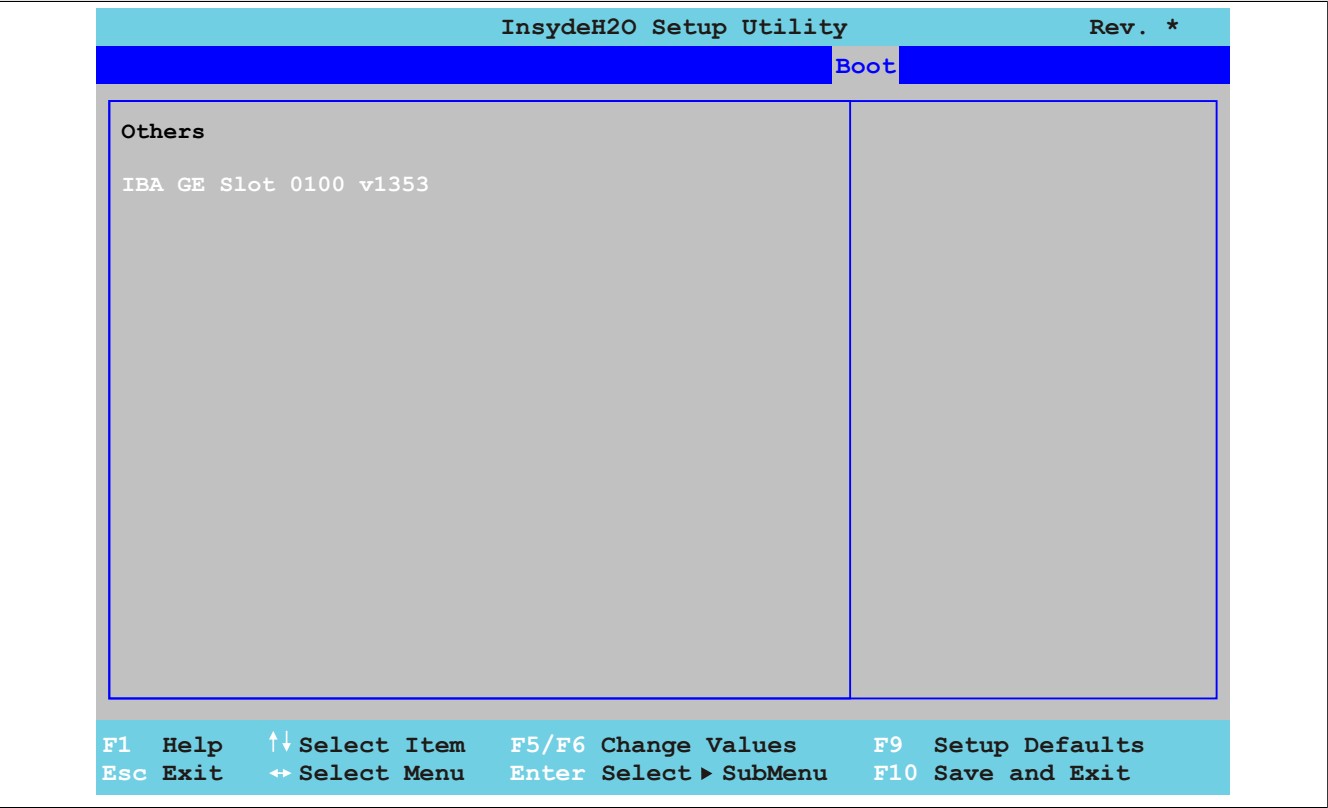


Figure 80: US15W Boot - Legacy - Others

BIOS setting	Description	Configuration options	Effect
-	Displays the CPU Boards / Baseboards for PXE Boot with the onboard Ethernet interfaces.	None	-

Table 141: US15W Boot - Legacy - Others setting options

1.9 Exit

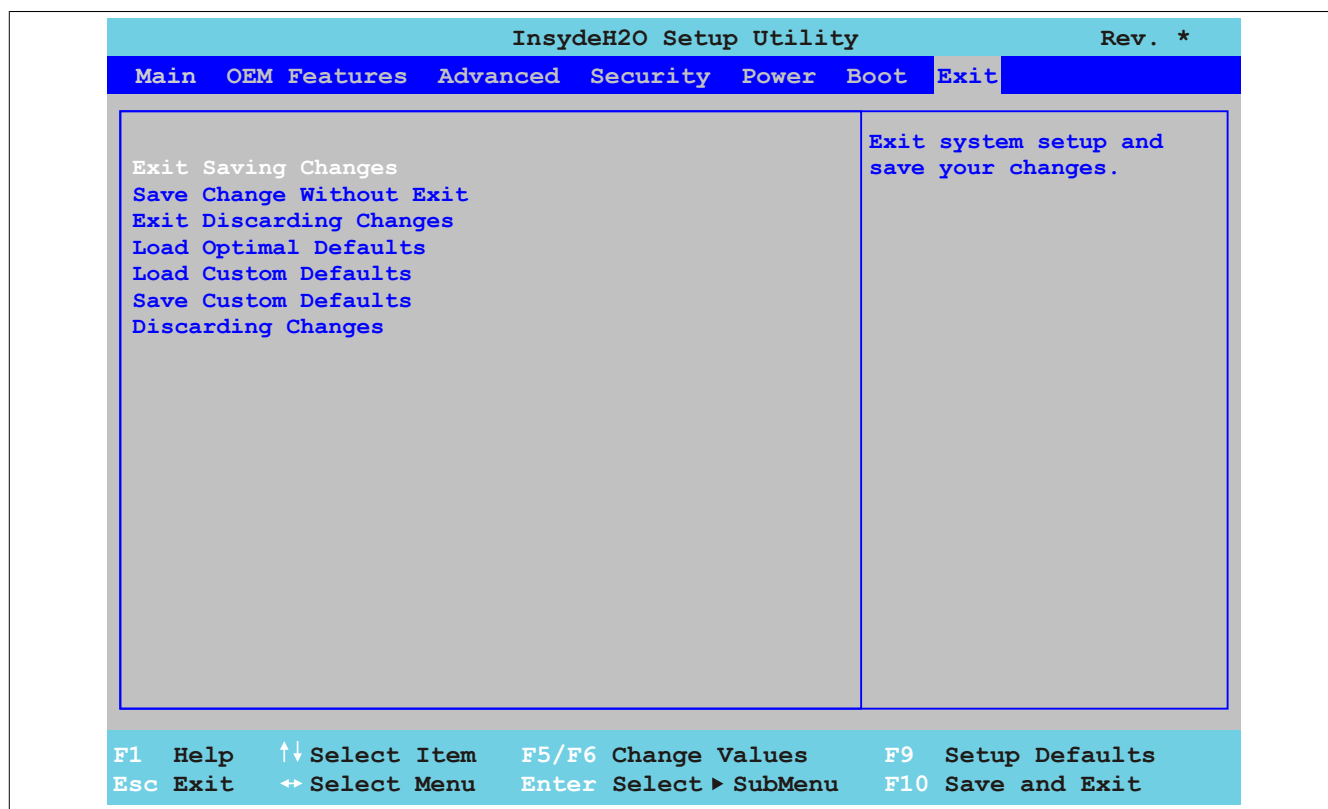


Figure 81: US15W Exit - Menu

BIOS setting	Description	Configuration options	Effect
Exit saving changes	Selecting this option closes BIOS Setup. Any changes made are saved to CMOS after confirmation, and the system is rebooted.	OK / Cancel	
Save Change Without Exit	After this is confirmed, any changes that have been made will be saved to the CMOS.	OK / Cancel	
Exit discarding changes	Selecting this option closes BIOS Setup without saving any changes made. The system is then rebooted.	OK / Cancel	
Load Optimal Defaults	This item loads the CMOS default values, which are defined by the Mode / Node switch settings. These settings are loaded for all BIOS configurations.	OK / Cancel	
Load Custom Defaults	This item loads the CMOS values, which are defined by the Mode / Node switch settings. These settings are loaded for all BIOS configurations.	OK / Cancel	
Save Custom Defaults	This saves defined CMOS vales. These settings are saved for all BIOS configurations.	OK / Cancel	
Discarding Changes	In the event that settings were made that the user can no longer remember, they can be reset as long as they haven't been saved.	OK / Cancel	

Table 142: US15W Exit - Menu setting options

1.10 BIOS default settings

If the function "load setup defaults" is chosen in the main BIOS setup menu, or if exit is selected (or <F9> is pressed) in the individual setup screens, the following BIOS settings are the optimized values that will be used.

1.10.1 Main

Setting / Option	Profile 0	My setting
InsydeH2O Version	-	
Processor Type	-	
System Bus Speed	-	
System Memory Speed	-	
RAM cache	-	
Total memory	-	
SODIMM 0	-	
System time	-	
System date	-	

Table 143: US15W - Main profile setting overview

1.10.2 OEM features

Setting / Option	Profile 0	My setting
BIOS	-	
Boot Source	-	
MTCX	-	

Table 144: US15W - OEM Features profile setting overview

1.10.2.1 CPU board features

Setting / Option	Profile 0	My setting
Device ID	-	
Compatibility ID	-	
Vendor ID	-	
Hardware Revision	-	
Serial number	-	
Product name	-	
Hardware Number	-	
Parent device ID	-	
Parent Compatib. ID	-	
User serial ID	-	
LAN1 MAC ADDRESS	-	
LPC devices		
COMA	-	
Base I/O Address	3F8	
Interrupt	IRQ4	
Statistical values		
Sensor 1	-	
Sensor 2	-	
Sensor 3	-	
Total hours	-	
Power On Cycles	-	
Temperature values		
Refresh values	-	
Sensor 1	-	
Sensor 2	-	
Sensor 3	-	
Temperature values		
Wcpu	-	
Vin	-	
Battery voltage	-	
Battery state	-	

Table 145: US15W - CPU Board Features profile setting overview

1.10.2.2 System unit features

Setting / Option	Profile 0	My setting
Device ID	-	
Compatibility ID	-	
Vendor ID	-	
Hardware Revision	-	
Serial number	-	
Product name	-	
Hardware Number	-	
Parent device ID	-	
Parent Compatib. ID	-	
User serial ID	-	
Display (0) Brightness	Auto	
LPC devices		
COMB	-	
Base I/O Address	2F8	
Interrupt	IRQ3	
Statistical values		
Sensor 1	-	
Total hours	-	
Power on cycles	-	
Temperature values		
Refresh values	-	
Sensor 1	-	

Table 146: US15W - System Unit Features profile setting overview

1.10.2.3 I/O board features

Setting / Option	Profile 0	My setting
FPGA Version	-	
Device ID	-	
Compatibility ID	-	
Vendor ID	-	
Hardware Revision	-	
Serial number	-	
Product name	-	
Hardware Number	-	
Parent device ID	-	
Parent Compatib. ID	-	
User serial ID	-	
I/O board LPC devices		
COMC		
Base I/O Address	3E8	
Interrupt	IRQ11	
COMD		
Base I/O Address	2E8	
Interrupt	IRQ10	
Statistical values		
Sensor 1	-	
Total hours	-	
Power on cycles	-	
Refresh values		
Sensor 1	-	
Panel control		
Select panel number	1	
Version	-	
Brightness	100%	
Fan speed	-	
Keys/LEDs	-	
Temperature	-	

Table 147: US15W - I/O Board Features profile setting overview

1.10.2.4 IF board features

Setting / Option	Profile 0	My setting
Device ID	-	
Compatibility ID	-	
Vendor ID	-	
Hardware Revision	-	

Table 148: US15W - IF Board Features profile setting overview

Setting / Option	Profile 0	My setting
Serial number	-	
Product name	-	
Hardware Number	-	
Parent device ID	-	
Parent Compatib. ID	-	
User serial ID	-	
LAN2 MAC ADDRESS	-	
Statistical values		
Total hours	-	
Power on cycles	-	

Table 148: US15W - IF Board Features profile setting overview

1.10.2.5 Memory module features

Setting / Option	Profile 0	My setting
Device ID	-	
Compatibility ID	-	
Vendor ID	-	
Hardware Revision	-	
Serial number	-	
Product name	-	
Hardware Number	-	
Parent device ID	-	
Parent Compatib. ID	-	
User serial ID	-	

Table 149: US15W - Memory Module Features profile setting overview

1.10.3 Advanced

1.10.3.1 RAM Configuration

Setting / Option	Profile 0	My setting
Refresh rate	Auto	

Table 150: US15W - Overview of RAM configuration profile settings

1.10.3.2 Boot configuration

Setting / Option	Profile 0	My setting
NumLock	On	

Table 151: US15W - Overview of boot configuration profile settings

1.10.3.3 Peripheral configuration

Setting / Option	Profile 0	My setting
High Definition Audio ¹⁾	Auto	

Table 152: US15W - Overview of peripheral configuration profile settings

1) This menu option is only available if there is an audio connection.

1.10.3.4 IDE Configuration

Setting / Option	Profile 0	My setting
Channel 1 master	Enabled ¹⁾	
Channel 1 master		
Transfer mode	-	
Security Mode	-	
Channel 1 slave	Enabled ¹⁾	
Channel 1 slave		
Transfer mode	-	
Security Mode	-	

Table 153: US15W - Overview of IDE configuration profile settings

1) Only with drive installed.

1.10.3.5 Video Configuration

Setting / Option	Profile 0	My setting
IGD - Pre-allocated memory	UMA = 8MB	
IGD - Boot Type	Auto	
IGD - LCD Panel Type ¹⁾	640x480 (5.7) LVDS	
Remote Panel	Disabled ²⁾	

Table 154: US15W - Overview of Video configuration profile settings

- 1) This setting is only available for PP500 system units.
 2) On APC511 system units with no I/O board, this option is enabled by default.

1.10.3.6 USB Configuration

Setting / Option	Profile 0	My setting
USB Legacy	Enabled	
EHCI	Enabled	
UHCI 1	Enabled	
UHCI 2	If an I/O board is not connected: Disabled If an I/O board is connected: Enabled	
UHCI 3	Enabled	
USB client	Disabled	

Table 155: US15W - Overview of USB configuration profile settings

1.10.3.7 SDIO Configuration

Setting / Option	Profile 0	My setting
SDIO port 1	Enabled	
SDIO port 2	Enabled	

Table 156: US15W - Overview of SDIO configuration profile settings

1.10.3.8 ACPI Table/Features Control

Setting / Option	Profile 0	My setting
FACP - C2 Latency Value	Disabled	
FACP - C3 Latency Value	Disabled	
HPET - HPET support	Enabled	
APIC - I/O APIC mode	Enabled	

Table 157: US15W - ACPI Table/Features Control profile setting overview

1.10.3.9 PCI Express root port 1

Setting / Option	Profile 0	My setting
PCI Express root port 1	Enabled	
Interrupt pin 0	Auto	
VC1 Enable	Disabled	
VC1/TC Mapping	Disabled	
ASPM	Disabled	
Automatic ASPM	Disabled	
ASPM L0s	Disabled	
ASPM L1s	Disabled	
URR	Disabled	
FER	Disabled	
NFER	Disabled	
CER	Disabled	
CT0	Disabled	
SEFE	Disabled	
SENF	Disabled	
SECE	Disabled	
PME Interrupt	Disabled	
PME SCI	Disabled	
Hot Plug SCI	Disabled	

Table 158: US15W - PCI Express Root Port 1 profile setting overview

1.10.3.10 PCI Express root port 2

Setting / Option	Profile 0	My setting
PCI Express root port 2	Enabled	
Interrupt pin 1	If a fieldbus card is not connected: Auto If a fieldbus card is connected: Disabled	
VC1 Enable	Disabled	
VC1/TC Mapping	Disabled	
ASPM	Disabled	
Automatic ASPM	Disabled	
ASPM L0s	Disabled	
ASPM L1s	Disabled	
URR	Disabled	
FER	Disabled	
NFER	Disabled	
CER	Disabled	
CT0	Disabled	
SEFE	Disabled	
SENF	Disabled	
SECE	Disabled	
PME Interrupt	Disabled	
PME SCI	Disabled	
Hot Plug SCI	Disabled	

Table 159: US15W - PCI Express Root Port 2 profile setting overview

1.10.3.11 Console redirection

Setting / Option	Profile 0	My setting
Console Serial Redirect	Enabled	
Information Wait Time	5 seconds	
Serial port	COM_A	
Terminal type	PC_ANSI	
Baud rate	57600	
Data bits	8 bits	
Parity	None	
Stop bits	1-bit	
Flow control	None	
ACPI SPCR Table	Disabled	

Table 160: US15W - Console Redirection - profile setting overview

1.10.4 Power

Setting / Option	Profile 0	My setting
Power loss control	Read from the EEPROM data	
ACPI S3	Disabled	

Table 161: US15W - Power profile setting overview

1.10.4.1 Advanced CPU control

Setting / Option	Profile 0	My setting
P-States(IST)	Enabled	
CMP Support	Enabled	
Thermal Mode	TM1 and TM2	
Use XD Capability	Enabled	
VT Support	Enabled	
SMRR Support	Enabled	
C-States	Disabled	
Enhanced C-States	Disabled	
C-States Pop Up Mode	Disabled	
C-States Pop Down Mode	Disabled	
Hard C4E	Disabled	
Enable C6	Disabled	
DTS	Enabled	
Thermal trip points setting		
Throttle On Temperature	100°C	

Table 162: US15W - Advanced CPU Control profile setting overview

1.10.4.2 Platform power management

Setting / Option	Profile 0	My setting
PCI Clock Run	Disabled	
_CST - C4 Latency Value	Disabled	
C4 on C3 - Deeper Sleep	Disabled	

Table 163: US15W - Platform Power Management profile setting overview

1.10.5 Boot

Setting / Option	Profile 0	My setting
Quick Boot	Enabled	
Quiet Boot	Enabled	
Delay for Logo & Summary	Default	
USB Boot	Enabled	
SD Card Boot	Disabled	
PXE Boot to LAN	Disabled	
ACPI Selection	Acpi3.0	

Table 164: US15W - Boot profile setting overview

1.11 Distribution of resources

1.11.1 RAM address assignment

RAM address	Address in hexadecimal	Resource
(TOM - FB ¹⁾) – TOM ²⁾	N.A.	ACPI reclaim, MPS and NVS area ³⁾
(TOM - FB - TSEG ⁴⁾) – (TOM - FB)	N.A.	VGA frame buffer ⁵⁾
1024 kB – (TOM - 8 MB - 192 kB)	100000h - N.A.	Extended memory
896kB – 1024 kB	0E0000h - 0FFFFFFh	Runtime BIOS
832kB – 896 kB	0D0000h - 0DFFFFh	Upper memory
640kB – 832 kB	0A0000h - 0CFFFFh	Video memory and BIOS
639kB – 640 kB	09FC00h - 09FFFFh	Extended BIOS data
0 – 639 kB	000000h - 09FC00h	Conventional memory

Table 165: RAM address assignment

- 1) FB - VGA frame buffer
- 2) TOM = Top of Memory: Max. installed DRAM
- 3) Only if ACPI Aware OS is set to "YES" in the setup.
- 4) TSEG - Intended internally for SMI handling in system BIOS.
- 5) The VGA frame buffer can be reduced to 1 MB in the setup.

1.11.2 I/O address assignment

I/O address	Resource
0000h - 00FFh	Motherboard resources
01F0h - 01F7h	Primary IDE channel
03B0h - 03DFh	Video system
03F6h - 03F6h	Primary IDE channel command port
03F7h - 03F7h	Primary IDE channel status port
03F8h - 03FFh	COM1
0480h - 04BFh	Motherboard resources
04D0h - 04D1h	Motherboard resources
0800h - 087Fh	Motherboard resources
0CF8h - 0CFBh	PCI config address register
0CFCh - 0CFFh	PCI config data register
0D00h - FFFFh	PCI / PCI Express bus ¹⁾
4100h - 417Fh	MTCX
FF00h - FF07h	IDE bus master register

Table 166: I/O address assignment

- 1) The BIOS assigns the PCI and PCI Express Bus I/O resources from FFF0h downward. Devices that are not compatible with PnP/PCI/PCI Express cannot use the I/O resources in this area.

1.11.3 Interrupt assignments in PIC mode

IRQ	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	NMI	NONE
System timer	•																	
Keyboard		•																
IRQ cascade			•															
COM1 (Serial port A)				○	•	○	○				○	○	○					
COM2 (Serial port B)				•	○	○	○				○	○	○					
ACPI ¹⁾										•								
Real-time clock									•									
Coprocessor (FPU)														•				
Primary IDE channel															•			
Secondary IDE channel																•		

Table 167: IRQ interrupt assignments in PIC mode

- 1) Advanced Configuration and Power Interface.

- ... Default setting
- ... Optional setting

1.11.4 Interrupt assignments in APIC mode

A total of 23 IRQs are available in APIC (**A**dvanced **P**rogrammable **I**nterrupt **C**ontroller) mode. The activation of this option is only effective if it takes place before the operating system is activated.

IRQ	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	NMI	NONE
System timer	•																									
Keyboard		•																								
IRQ cascade			•																							
COM1 (Serial port A)				○	•	○	○				○	○	○													
COM2 (Serial port B)				•	○	○	○				○	○	○													
ACPI ¹⁾									•																	
Real-time clock								•																		
Coprocessor (FPU)														•												
Primary IDE channel															•											
Secondary IDE channel																•										
PIRQ A ²⁾																	•									
PIRQ B ³⁾																		•								
PIRQ C ⁴⁾																			•							
PIRQ D ⁵⁾																				•						
PIRQ E ⁶⁾																					•					
PIRQ F ⁷⁾																						•				
PIRQ G ⁸⁾																							•			
PIRQ H ⁹⁾																								•		

Table 168: IRQ interrupt assignments in APIC mode

- 1) Advanced Configuration and Power Interface.
- 2) PIRQ A: for IF board; GMA500 graphics controller, LPC, root port 1, Ethernet controller, USB client
- 3) PIRQ B: for IF board; root port 2
- 4) PIRQ C: for IF board
- 5) PIRQ D: for IF board; HD audio
- 6) PIRQ E: UHCI host controller 0, SDIO 0 controller
- 7) PIRQ F: UHCI host controller 1, SDIO 1 controller
- 8) PIRQ G: UHCI host controller 2, SDIO 2 controller
- 9) PIRQ H: EHCI host controller

- ... Default setting
- ... Optional setting

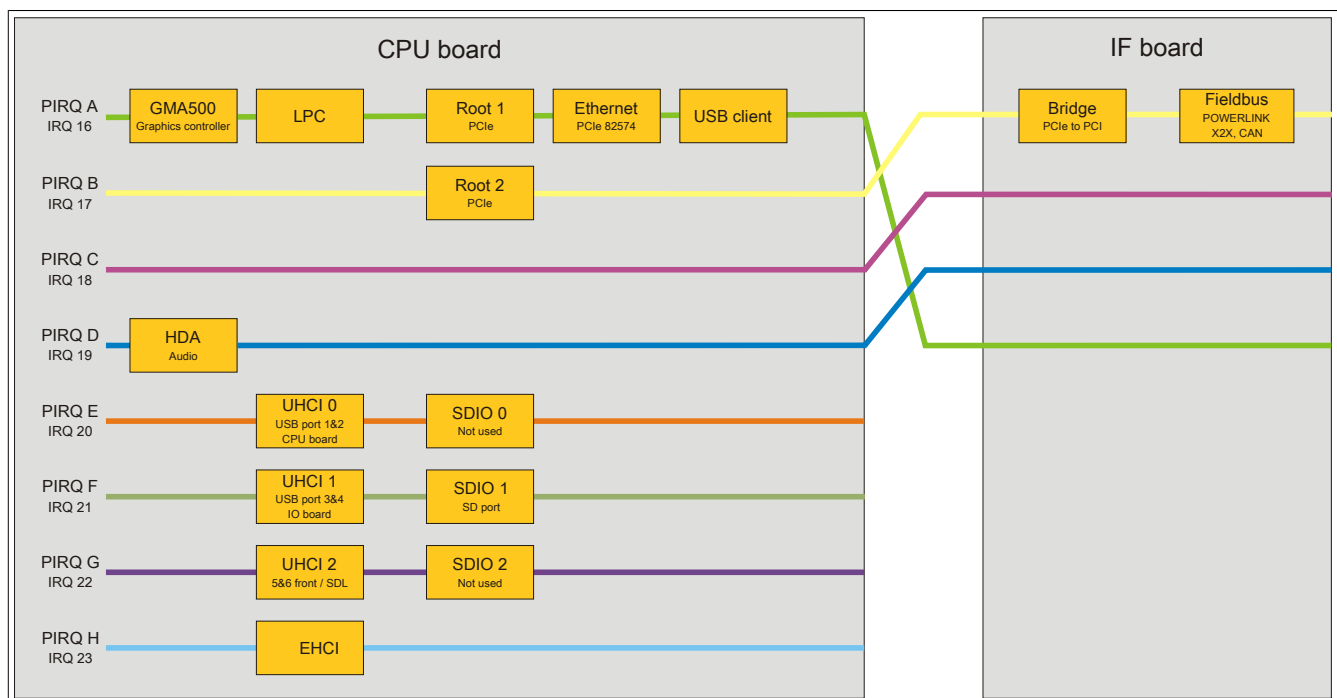


Figure 82: Interrupt Routing with activated APIC -Beginning with BIOS version N0.15

2 Upgrade information

Warning!

The BIOS and firmware on B&R devices must be kept current. New versions can be downloaded from the B&R website (www.br-automation.com).

2.1 BIOS upgrade

Upgrade may be necessary in order to accomplish the following:

- Updating implemented functions or adding newly implemented functions or components to BIOS Setup (information about changes can be found in the Readme file for the BIOS upgrade).

2.1.1 Important information

Information:

Customized BIOS settings are deleted when upgrading BIOS.

Before starting an upgrade, it helps to determine the various software versions.

2.1.1.1 Which BIOS version and firmware are already installed on the device?

This information can be found on the following BIOS Setup page:

- After switching on the device, you can get to the BIOS Setup by pressing "F2".
- The current BIOS and MTCX version can be viewed in the BIOS main menu under "OEM Features".

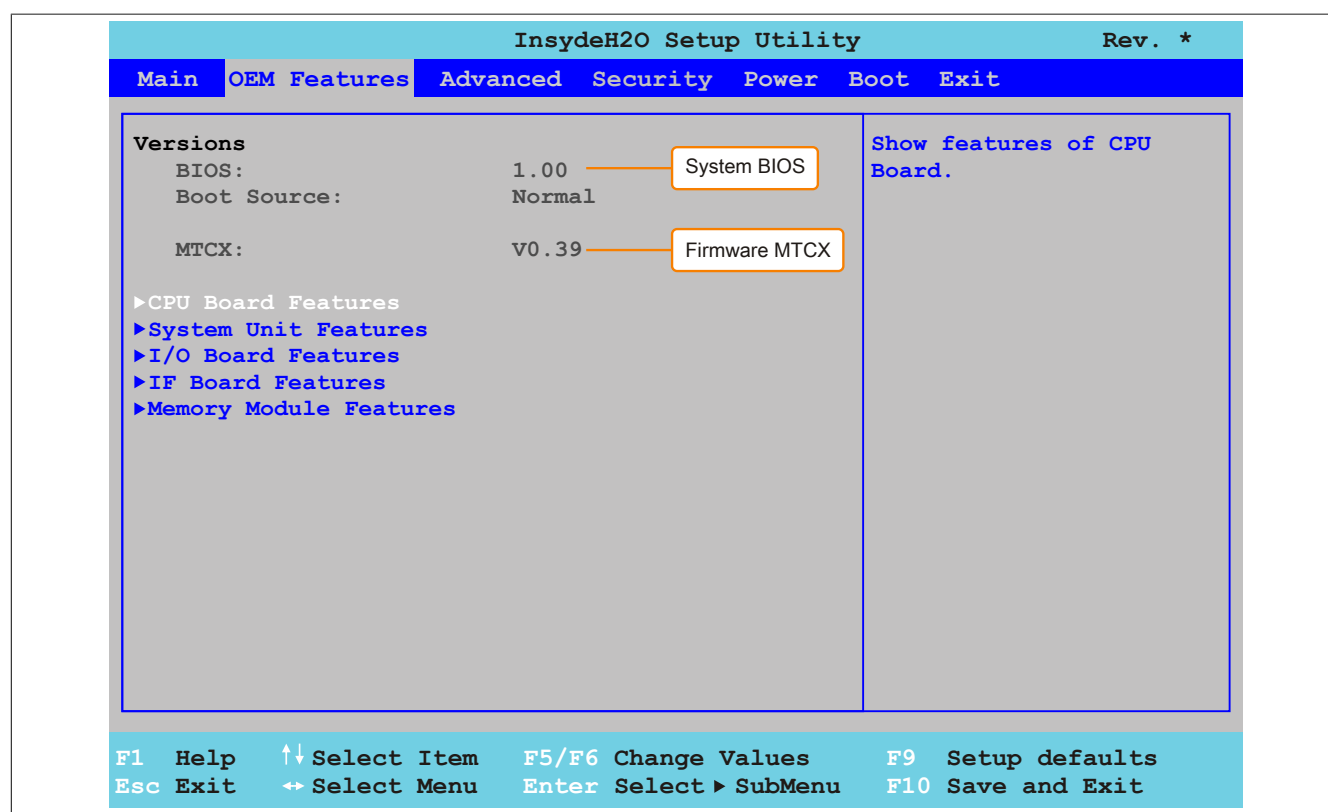


Figure 83: BIOS and MTCX software versions

Information about the BIOS and firmware versions can also be found in the Control Center (Start->Control Panel->Control Center->Versions).

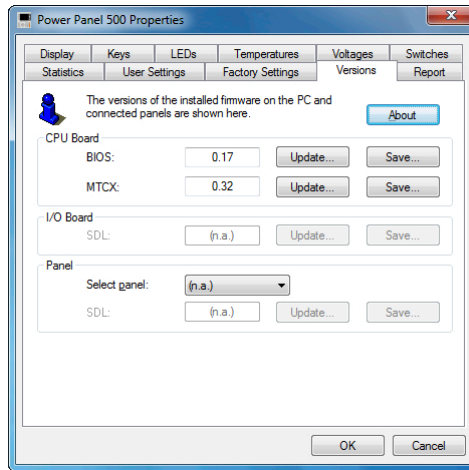


Figure 84: BIOS and MTCX software versions - Control Center

2.1.2 Using the Control Center

1. Download the .zip file from the B&R website (www.br-automation.com).
2. Open the **Control Center** in the Control Panel.
3. Then select the **Versions** tab.
4. Click on **Update** under **CPU board(BIOS)**. This brings up the "Open" dialog box.
5. Enter the name of the BIOS file or select the file under **Filename**.
6. Click on **Open**. This brings up the "Open" dialog box.

The transfer can be canceled by clicking on **Cancel**. Cancel is disabled when the flash memory is being written to. Deleting the data in flash memory can take several seconds depending on the memory block being used. The progress indicator is not updated during this time.

Information:

The system must be restarted for the BIOS to take effect and for the updated version to be displayed. The user is prompted to restart the system when closing the Control Center.

Information:

For more information about saving and updating the BIOS, please refer to the help files for the Control Center.

2.2 Firmware upgrade

The latest firmware upgrade can be directly downloaded from the download area of the B&R website (www.br-automation.com).

2.2.1 Procedure

1. Download the .zip file from the B&R website (www.br-automation.com).
2. Open the **Control Center** in the Control Panel.
3. Select the **Versions** tab.
4. Enter the name of the firmware file or select the file under **Filename**.
5. Click on **Open**. This brings up the "Open" dialog box.

The transfer can be canceled by clicking on **Cancel**. **Cancel** is disabled when the flash memory is being written to.

Warning!

Do not press any panel keys while the firmware is being transferred! This can disrupt the procedure.

Deleting the data in flash memory can take several seconds depending on the memory block being used. The progress indicator is not updated during this time.

Information:

Power to the PC must be shut off and turned back on for the new firmware to take effect and for the updated version to be displayed. The user is prompted to do this when closing the Control Center.

Information:

For more information about saving and updating firmware, please refer to the help documentation for the Control Center.

2.3 Upgrade problems

Potential upgrade problems are listed in the Readme.txt files on the upgrade disks.

3 Windows XP Professional

3.1 Order data

Model number	Short description	Figure
	Windows XP Professional	
5SWWXP.0600-ENG	Microsoft OEM Windows XP Professional Service Pack 3, CD, English. Only available with a B&R device.	
5SWWXP.0600-GER	Microsoft OEM Windows XP Professional Service Pack 3, CD, German. Only available with a device.	
5SWWXP.0600-MUL	Microsoft OEM Windows XP Professional Service Pack 3, CD, multilanguage. Only available with a B&R device.	

Table 169: 5SWWXP.0600-ENG, 5SWWXP.0600-GER, 5SWWXP.0600-MUL - Order data

3.2 Overview

Model number	Edition	Target system	Chipset	Service Pack	Language	Preinstalled	Memory required on the disk	Minimum amount of RAM
5SWWXP.0600-ENG	Professional	APC510 APC511 APC620 APC810 APC820 APC910 PPC700 PPC725 PPC800 PP500	945GME GM45 QM77/HM76 NM10 US15W	SP3	English	Optional	≤ 2.1 GB	128 MB
5SWWXP.0600-GER	Professional	APC510 APC511 APC620 APC810 APC820 APC910 PPC700 PPC725 PPC800 PP500	945GME GM45 QM77/HM76 NM10 US15W	SP3	German	Optional	≤ 2.1 GB	128 MB
5SWWXP.0600-MUL	Professional	APC510 APC511 APC620 APC810 APC820 APC910 PPC700 PPC725 PPC800 PP500	945GME GM45 QM77/HM76 NM10 US15W	SP3	Multilingual	Optional	≤ 2.1 GB	128 MB

3.3 Installation

Upon request, B&R can preinstall the required Windows XP Professional version on the desired mass storage device (e.g. CompactFlash card, etc.). All of the drivers required for operation (graphics, network, etc.) are also installed in this process.

3.4 Drivers

The latest drivers for all approved operating systems can be found in the Download area (Service / Material-related downloads - BIOS / Drivers / Updates) of the B&R website at www.br-automation.com.

Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

4 Windows 7

4.1 General information

Windows® 7 offers a wealth of innovative features and performance improvements. Faster switching to power saving mode, quicker restores, less memory usage and high-speed detection of USB devices are just a few of the advantages provided by Windows® 7. Both English and German are available in Windows® 7 Professional, while Windows® 7 Ultimate supports up to 35 different languages (up to 36 languages in Service Pack 1). Product activation is not necessary on B&R PCs, which is a huge advantage for simple logistical procedures relating to machine automation.

All of the Windows® operating systems offered by B&R are from the Microsoft Embedded division. This guarantees much longer availability, especially compared to products offered on the consumer market.

4.2 Order data

Model number	Short description	Figure
	Windows 7 Professional/Ultimate	
5SWWI7.0100-ENG	Microsoft OEM Windows 7 Professional 32-bit, DVD, English. Only available with a new device.	
5SWWI7.1100-ENG	Microsoft OEM Windows 7 Professional 32-bit, Service Pack 1, DVD, English. Only available with a new device.	
5SWWI7.0100-GER	Microsoft OEM Windows 7 Professional 32-bit, DVD, German. Only available with a new device.	
5SWWI7.1100-GER	Microsoft OEM Windows 7 Professional 32-bit, Service Pack 1, DVD, German. Only available with a new device.	
5SWWI7.0300-MUL	Microsoft OEM Windows 7 Ultimate 32-bit, DVD, multilanguage. Only available with a new device.	
5SWWI7.1300-MUL	Microsoft OEM Windows 7 Ultimate 32-bit, Service Pack 1, DVD, multilanguage. Only available with a new device.	

Table 170: 5SWWI7.0100-ENG, 5SWWI7.1100-ENG, 5SWWI7.0100-GER, 5SWWI7.1100-GER, 5SWWI7.0300-MUL, 5SWWI7.1300-MUL - Order data

4.3 Overview

Model number	Edition	Target system	Chipset	Service Pack	Architecture	Language	Preinstalled	Minimum size of the disk	Minimum amount of RAM
5SWWI7.0100-ENG	Professional	APC510 APC511 APC810 APC910 PPC800 PP500	945GME GM45 QM77/HM76 US15W		32-bit	English	Optional	16 GB	1 GB
5SWWI7.1100-ENG	Professional	APC510 APC511 APC810 APC910 PPC800 PP500	945GME GM45 QM77/HM76 NM10 US15W	SP1	32-bit	English	Optional	16 GB	1 GB
5SWWI7.0100-GER	Professional	APC510 APC511 APC810 APC910 PPC800 PP500	945GME GM45 QM77/HM76 US15W		32-bit	German	Optional	16 GB	1 GB
5SWWI7.1100-GER	Professional	APC510 APC511 APC810 APC910 PPC800 PP500	945GME GM45 QM77/HM76 NM10 US15W	SP1	32-bit	German	Optional	16 GB	1 GB
5SWWI7.0300-MUL	Ultimate	APC510 APC511 APC810 APC910 PPC800 PP500	945GME GM45 QM77/HM76 US15W		32-bit	Multilingual	Optional	16 GB ¹⁾	1 GB
5SWWI7.1300-MUL	Ultimate	APC510 APC511 APC810 APC910 PPC800 PP500	945GME GM45 QM77/HM76 NM10 US15W	SP1	32-bit	Multilingual	Optional	16 GB ¹⁾	1 GB

1) The memory space needed for additional language packs is not included in the minimum size specified for the data storage medium.

4.4 Installation

Upon request, B&R can preinstall the required Windows 7 version on the desired mass storage device (e.g. CompactFlash card, etc.). All of the drivers required for operation (graphics, network, etc.) are also installed in this process.

4.5 Drivers

The latest drivers for all approved operating systems can be found in the Download area (Service / Material-related downloads - BIOS / Drivers / Updates) of the B&R website at www.br-automation.com.

Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

4.6 Special considerations, limitations

- Windows 7 does not contain a Beep.sys file, which means that an audible signal is no longer sounded (e.g. when pressing a key).
- There is currently no support for the Windows 7 system rating (although this does not apply to PP500, APC510, APC511, APC910 or PPC800 devices with an NM10 chipset).

5 Windows Embedded Standard 2009

5.1 General information

Windows® Embedded Standard 2009 is the modular version of Windows® XP Professional. It is used if XP applications should be executed with a minimal operating system size. Together with CompactFlash memory, Windows® Embedded Standard 2009 makes it possible to use the Microsoft desktop operating system in rough environmental conditions. In addition to the familiar features included in Windows® XP Professional, Windows® Embedded Standard 2009 has been improved with regard to dependability by adding a write filter for individual memory partitions. By protecting individual partitions such as the boot partition, the PC system can be started without any problems, even after an unexpected power failure. B&R offers complete images for industrial PCs, Power Panel and Mobile Panel devices to make the transition to Windows® Embedded Standard 2009 as easy as possible. In addition to Windows® Embedded Standard 2009, the standard Windows® XP Professional operating system is also available in English, German and a multilingual version.

Windows® Embedded Standard 2009 is based on the same binary files as Windows® XP Professional with Service Pack 3 and is optimally tailored to the hardware being used. In other words, only the functions and modules required by the respective device are included. Windows® Embedded Standard 2009 is also based on the same reliable code as Windows® XP Professional with SP3. It provides industry with leading reliability, security and performance improvements as well as the latest technology for web browsing and extensive device support.

5.2 Order data

Model number	Short description	Figure
	Windows Embedded Standard 2009	
5SWWXP.0737-ENG	Microsoft OEM Windows Embedded Standard 2009, English; for PP500; please order CompactFlash separately (minimum 1 GB).	
	Required accessories	
	CompactFlash	
5CFCRD.016G-06	CompactFlash 16 GB B&R (SLC)	
5CFCRD.032G-06	CompactFlash 32 GB B&R (SLC)	
5CFCRD.1024-06	CompactFlash 1 GB B&R (SLC)	
5CFCRD.2048-06	CompactFlash 2 GB B&R (SLC)	
5CFCRD.4096-06	CompactFlash 4 GB B&R (SLC)	
5CFCRD.8192-06	CompactFlash 8 GB B&R (SLC)	

Table 171: 5SWWXP.0737-ENG - Order data

5.3 Overview

Model number	Target system	Chipset	Language	Preinstalled	Minimum size of the disk	Minimum amount of RAM
5SWWXP.0737-ENG	APC510	US15W	English	Yes	1 GB	256 MB

5.4 Features with WES2009 (Windows Embedded Standard 2009)

The feature list shows the most important device functions in Windows XP Embedded 2009.

Function	Present
Enhanced Write Filter (EWF)	✓
File-Based Write Filter (FBWF)	✓
Page file	Configurable
Administrator accounts	✓
User accounts	Configurable
Explorer shell	✓
Registry filter	✓
Internet Explorer 8.0	✓
Internet information service (IIS)	-
Terminal service	✓
Windows Firewall	✓
MSN Explorer	-
Outlook Express	-
Administrative Tools	✓
Remote Desktop	✓
Remote Assistance	-
.NET Framework	-
ASP.NET	-
OpenGL support	✓

Table 172: Device functions in Windows Embedded Standard 2009

Function	Present
Local network bridge	✓
Codepages / User locales / Keyboards	✓
Disk Management Service	✓
Windows Installer Service	✓
Class Installer	✓
CoDevice Installer	✓
Media Player 6.4	✓
DirectX 9.0c	✓
Accessories	✓
Number of fonts	89

Table 172: Device functions in Windows Embedded Standard 2009

5.5 Touch screen driver

The touch screen driver is installed automatically during Windows Embedded Standard 2009 setup. If an Automation Panel 800/900 is connected later on, the additional touch screen interface needs to be selected in the touch screen settings in the Windows Control Panel. It is important that both the Enhanced Write Filter (EWF) and the File Based Write Filter (FBWF) are disabled for this.

Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

5.6 Installation

Upon request, Windows Embedded Standard 2009 can be preinstalled at B&R Austria on a suitable CompactFlash card (min. 1GB). The system is then automatically configured when it is switched on for the first time. This procedure takes approximately 10 minutes, with the device being rebooted a number of times.

5.7 Drivers

All drivers required for operation are preinstalled along with the operating system. If an older version of the driver is still being used, the latest version can be downloaded and installed from the B&R website (www.br-automation.com). It is important that Enhanced Write Filter (EWF) is disabled for this.

5.7.1 Touch screen driver

The touch screen driver is installed automatically during Windows Embedded Standard 2009 setup. If an Automation Panel 800/900 is connected later on, the additional touch screen interface needs to be selected in the touch screen settings in the Windows Control Panel. It is important that both the Enhanced Write Filter (EWF) and the File Based Write Filter (FBWF) are disabled for this.

Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

6 Windows Embedded Standard 7

6.1 General information

The successor to Windows® XP Embedded is Windows® Embedded Standard 7. As with previous versions, this embedded operating system offers full system support for B&R Industrial PCs. In addition to brand new features that are also included in Windows® 7 Professional, Windows® Embedded Standard 7 includes embedded components such as Enhanced Write Filter, File-Based Write Filter, Registry Filter and USB Boot. Windows® Embedded Standard 7 is available in two different versions. The main difference between them has to do with multilingual support. Windows® Embedded Standard 7 is only available in a single language, whereas Windows® Embedded Standard 7 Premium supports the installation of several languages simultaneously.

With Windows® Embedded Standard 7, Microsoft has made substantial improvements in the area of security. The AppLocker program, available in the premium version, can prevent the execution of unknown or potentially undesired applications that are being installed over a network or from drives that are directly connected. A tiered approach allows the differentiation between scripts (.ps1, .bat, .cmd, .vbs and .js), installation files (.msi, .msp) and libraries (.dll, .ocx). AppLocker can also be configured to record undesired activity and display it in the Event Viewer. Windows® Embedded Standard 7 is available in both a 32-bit and 64-bit version.⁴⁾ This ensures that even the most demanding applications have the level of support they need.

6.2 Order data

Model number	Short description	Figure
	Windows Embedded Standard 7	
5SWWI7.0537-ENG	Microsoft OEM Windows Embedded Standard 7 32-bit, English; for APC510; please order CompactFlash separately (minimum 8 GB).	
5SWWI7.1537-ENG	Microsoft OEM Windows Embedded Standard 7 32-bit, Service Pack 1, English; for APC510; please order CompactFlash separately (minimum 16 GB).	
5SWWI7.0737-MUL	Microsoft OEM Windows Embedded Standard 7 Premium 32-bit, multilanguage; for APC510; please order CompactFlash separately (minimum 8 GB).	
5SWWI7.1737-MUL	Microsoft OEM Windows Embedded Standard 7 Premium 32-bit, Service Pack 1, multilanguage; for APC510; please order CompactFlash separately (minimum 16 GB).	
	Required accessories	
	CompactFlash	
5CFCRD.016G-06	CompactFlash 16 GB B&R (SLC)	
5CFCRD.032G-06	CompactFlash 32 GB B&R (SLC)	
5CFCRD.8192-06	CompactFlash 8 GB B&R (SLC)	
	Optional accessories	
	Windows Embedded Standard 7	
5SWWI7.0900-MUL	Microsoft OEM Windows Embedded Standard 7 32-bit, Language Pack DVD	
5SWWI7.1900-MUL	Microsoft OEM Windows Embedded Standard 7 32-bit, Service Pack 1, Language Pack DVD	

Table 173: 5SWWI7.0537-ENG, 5SWWI7.1537-ENG, 5SWWI7.0737-MUL, 5SWWI7.1737-MUL - Order data

6.3 Overview

Model number	Edition	Target system	Chipset	Service Pack	Architecture	Language	Preinstalled	Minimum size of the disk	Minimum amount of RAM
5SWWI7.0537-ENG	Embedded	APC510	US15W		32-bit	English	Optional	8 GB	1 GB
5SWWI7.1537-ENG	Embedded	APC510	US15W	SP1	32-bit	English	Optional	16 GB	1 GB
5SWWI7.0737-MUL	Premium	APC510	US15W		32-bit	Multilingual	Optional	8 GB ¹⁾	1 GB
5SWWI7.1737-MUL	Premium	APC510	US15W	SP1	32-bit	Multilingual	Optional	16 GB ¹⁾	1 GB

1) The memory space needed for additional language packs is not included in the minimum size specified for the data storage medium.

4) 64-bit versions are not supported by all systems

6.4 Features with WES7 (Windows Embedded Standard 7)

The feature list displays the essential device functions and differences in Windows Embedded Standard 7 and Windows Embedded Standard 7 Premium.

Function	Windows Embedded Standard 7	Windows Embedded Standard 7 Premium
Enhanced Write Filter (EWF)	✓	✓
File-Based Write Filter (FBWF)	✓	✓
Administrator accounts	✓	✓
User accounts	Configurable	Configurable
Windows Explorer shell	✓	✓
Registry filter	✓	✓
Internet Explorer 8.0	✓	✓
Internet Information Service (IIS) 7.0	✓	✓
Anti-malware (Windows Defender)	-	✓
Add-ons (Snipping Tool, Sticky Notes)	-	✓
Windows Firewall	✓	✓
.NET Framework 3.5	✓	✓
Remote Desktop Protocol 7.0	✓	✓
File Compression Utility	✓	✓
Windows Installer Service	✓	✓
Windows XP Mode	-	-
Media Player 12	✓	✓
DirectX	✓	✓
Multilingual user interface packs in the same image	-	✓
International components and language services	✓	✓
Language pack setup	✓	✓
Windows Update	Configurable	Configurable
Windows PowerShell 2.0	✓	✓
BitLocker	-	✓
AppLocker	-	✓
Tablet PC support	-	✓
Windows Touch	-	✓
Boot from USB flash drive	✓	✓
Accessories	✓	✓
Page file	Configurable	Configurable
Number of fonts	134	134

Table 174: Device functions in Windows Embedded Standard 7

6.5 Installation

Upon request, Windows Embedded Standard 7 can be preinstalled at B&R Austria on a suitable CompactFlash card (min. 8 GB). The system is then automatically configured when it is switched on for the first time. This procedure takes approximately 30 minutes, with the device being rebooted a number of times.

6.6 Drivers

All drivers required for operation are preinstalled along with the operating system. If an older version of the driver is still being used, the latest version can be downloaded and installed from the B&R website (www.br-automation.com). It is important that Enhanced Write Filter (EWF) is disabled for this.

6.6.1 Touch screen driver

A touch screen driver will be installed automatically if a touch controller is detected during the Windows Embedded Standard 7 installation. If a touch controller is not detected during Windows Embedded Standard 7 installation, or if an Automation Panel 800/900 is connected later on, then the touch screen driver needs to be installed manually or the additional touch screen interface must be selected in the touch screen settings in the Windows Control Panel. The driver can be downloaded from the Download area of the B&R website (www.br-automation.com). It is important that both the Enhanced Write Filter (EWF) and the File Based Write Filter (FBWF) are disabled for this.

Information:

Required drivers can only be downloaded from the B&R website, not from manufacturer websites.

7 Windows CE

7.1 General information

B&R Windows CE is an operating system which is optimally tailored to B&R's devices. It includes only the functions and modules which are required by each device. This makes this operating system extremely robust and stable. A further advantage of B&R Windows CE compared to other operating systems are the low licensing costs.

7.2 Order data

Model number	Short description	Figure
5SWWCE.0837-ENG	Microsoft OEM Windows CE 6.0 Professional, English; for APC510; please order CompactFlash separately (minimum 128 MB).	
	Required accessories	
	CompactFlash	
5CFCRD.0128-03	CompactFlash 128 MB Western Digital (SLC)	
5CFCRD.016G-06	CompactFlash 16 GB B&R (SLC)	
5CFCRD.0256-03	CompactFlash 256 MB Western Digital (SLC)	
5CFCRD.0512-03	CompactFlash 512 MB Western Digital (SLC)	
5CFCRD.1024-03	CompactFlash 1 GB Western Digital (SLC)	
5CFCRD.1024-06	CompactFlash 1 GB B&R (SLC)	
5CFCRD.2048-03	CompactFlash 2 GB Western Digital (SLC)	
5CFCRD.2048-06	CompactFlash 2 GB B&R (SLC)	
5CFCRD.4096-03	CompactFlash 4 GB Western Digital (SLC)	
5CFCRD.4096-06	CompactFlash 4 GB B&R (SLC)	
5CFCRD.8192-03	CompactFlash 8 GB Western Digital (SLC)	
5CFCRD.8192-06	CompactFlash 8 GB B&R (SLC)	

Table 175: 5SWWCE.0837-ENG - Order data

7.3 Overview

Model number	Target system	Chipset	Language	Preinstalled	Minimum size of the disk	Minimum amount of RAM
5SWWCE.0837-ENG	APC510	US15W	English	Yes	128 MB	128 MB

7.4 Windows CE 6.0 features

Detailed information about Windows CE for B&R devices is available in the Downloads section of the B&R website (www.br-automation.com).

Features	Windows CE 6.0
Supported screen resolutions	WVGA (TFT), VGA (TFT), SVGA (TFT), XGA (TFT)
Chipset	Intel US15W
Color depth	16-bit or 65,536 colors ¹⁾
Graphics card driver	Intel(R) embedded graphics driver
Main memory	Automatic detection and use of up to 512 MB RAM
Boot time / Startup time	Approx. 25 seconds
Screen rotation	Not supported
Web browser	Internet Explorer
.NET	Compact Framework
Image size	Approx. 40 MB ²⁾ , uncompressed
Custom keys	Supported
PVI	Supported
Automation Device Interface	Supported
Remote Desktop Protocol for thin clients	Supported
B&R VNC Viewer	Supported
B&R Task Manager	Supported
B&R Picture Viewer	Supported
Compatible with zenOn	Yes
Compatible with Wonderware	No
Serial interfaces for any use	2
DirectX	No
Audio ports	"Line OUT" and "MIC" are supported. "Line IN" is not supported.

Table 176: Windows CE 6.0 features

1) The color depth depends on the display used.

2) Use the function "Compress Windows CE Image" in the B&R Embedded OS Installer to reduce the image size.

7.5 Requirements

The device must fulfill the following criteria to be able run the Windows CE operating system.

- At least 128 MB main memory
- At least one 128 MB CompactFlash card (size should be specified when ordered)

7.6 Installation

Windows CE is usually preinstalled at the B&R plant.

7.7 B&R Embedded OS Installer

The B&R Embedded OS Installer allows you to install existing B&R Windows CE images. The 4 files (NK.BIN, BLDR, LOGOXRES.BMP, and LOGOQVGA.BMP) must be provided from an already functioning B&R Windows CE installation.

The B&R Embedded OS installer is available in the Downloads section of the B&R website (www.br-automation.com). Further information is available in the online help for the B&R Embedded OS Installer.

8 Automation Runtime

8.1 General information

A integral component of Automation Studio is the real-time operating system. This real-time operating system makes up the software kernel which allows applications to run on a target system.

- Guaranteed highest possible performance for the hardware being used
- Runs on all B&R target systems
- Makes the application hardware-independent
- Applications can be easily ported between B&R target systems
- Cyclic runtime system guarantees deterministic behavior
- Multitasking according to deterministic runtime rules
- Configure priorities, time classes, and jitter tolerance
- Up to eight different time classes with any subprograms
- Guaranteed response to time and jitter tolerance violations
- Exception handling
- Configurable jitter tolerance in all task classes
- Supports all relevant programming language such as IEC 61131-3 and ANSI C
- Extensive function library conforming to IEC 61131-3 as well as the expanded Automation library
- Access to all networks and bus systems via function calls or the Automation Studio configuration

B&R Automation Runtime is fully embedded in the corresponding target system (this is the hardware where Automation Runtime is installed). It allows application programs to access I/O systems (e.g. via fieldbus) and other devices (interfaces, networks, etc.).

8.2 Order data

Model number	Short description	Figure
	Automation Runtime	
1A4600.10-5	B&R Automation Runtime ARwin, incl. License Label	
1A4601.06-5	B&R Automation Runtime ARemb, incl. License Label	
1A4601.06-T	B&R Automation Runtime ARemb Terminal, incl. License Label	

Table 177: 1A4600.10-5, 1A4601.06-5, 1A4601.06-T - Order data

8.3 Automation Runtime Windows (ARwin)

The system is supported by ARwin with an AS 3.0.90 / AR 4.00 upgrade.

Information:

Audio output under ARwin supported with AR 4.01 and higher.

8.4 Automation Runtime Embedded (ARemb)

The system is supported by ARemb with an AS 3.0.90 / AR 4.00 upgrade.

Information:

Audio output under ARemb supported with AR 4.01 and higher.

9 B&R Automation Device Interface (ADI) - Control Center

The ADI (Automation Device Interface) enables access to specific functions on B&R devices. Settings for devices can be read and configured using the B&R Control Center applet in the Control Panel.

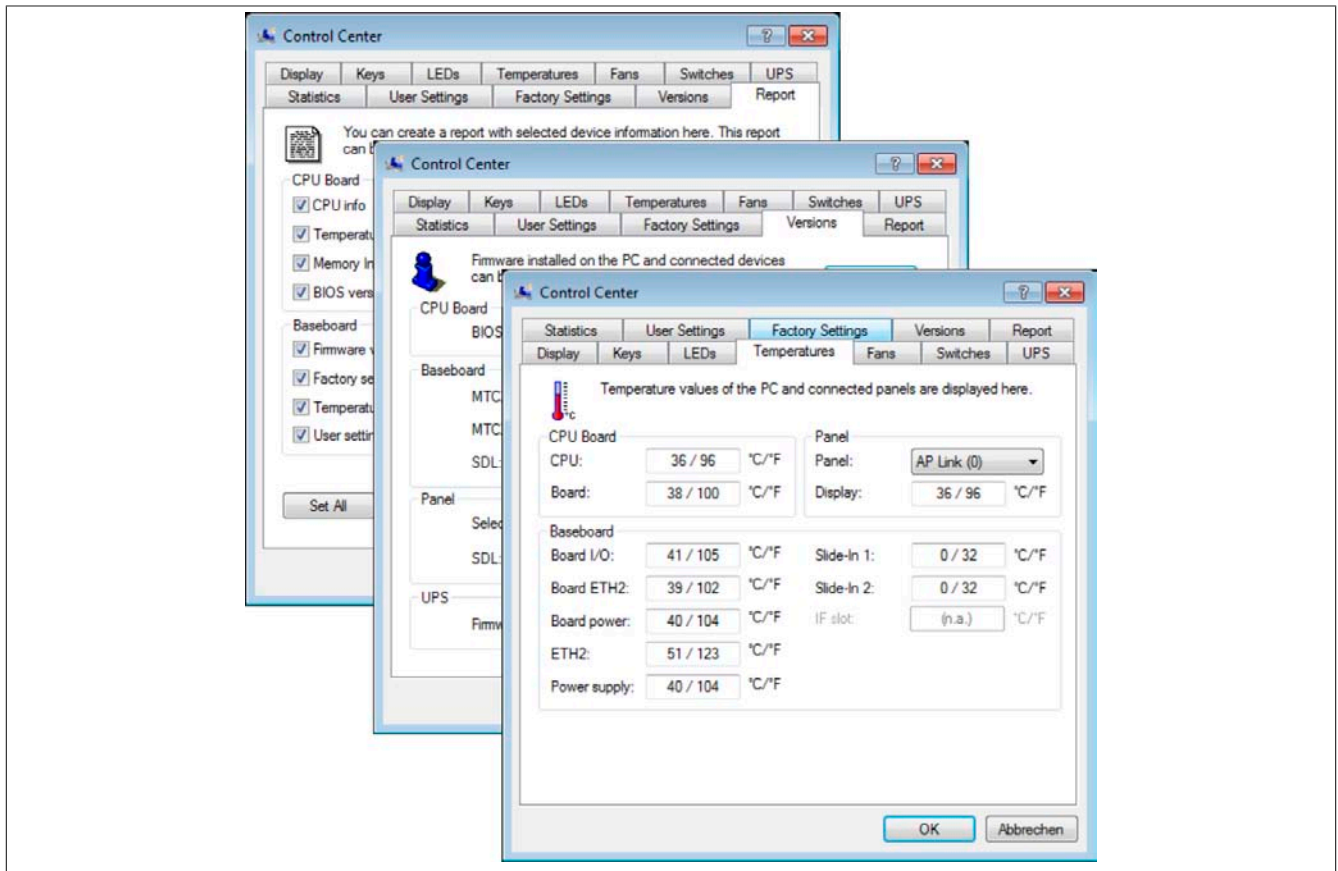


Figure 85: ADI Control Center screenshots - Examples

Information:

The temperature and voltage values (e.g. CPU temperature, core voltage, battery voltage) displayed in the corresponding ADI window represent uncalibrated values for informational purposes. They cannot be used to draw any conclusions about hardware alarms or error conditions. The hardware components used have automatic diagnostic functions that can be applied in the event of error.

9.1 Functions

Information:

The functions provided by the Automation Device Interface (ADI) - Control Center vary according to the device series.

- Changing display-specific parameters
- Reading device-specific keys
- Updating the key configuration
- Enabling device-specific LEDs on a membrane keypad
- Reading and calibrating input devices (e.g. key switches, handwheels, joysticks, potentiometers)
- Reading temperatures, fan speeds, statistical data and switch settings
- Read the operating hours (power on hours)
- Reading user and factory settings
- Reading software versions
- Updating and backing up BIOS and firmware
- Creating reports about the current system (support assistance)
- Setting the SDL equalizer value when adjusting SDL cables
- Changing the user serial ID

Supports the following systems:

- Automation PC 510
- Automation PC 511
- Automation PC 620
- Automation PC 810
- Automation PC 820
- Automation PC 910
- Panel PC 300
- Panel PC 700
- Panel PC 725
- Panel PC 800
- Power Panel 100/200
- Power Panel 300/400
- Power Panel 500
- Mobile Panel 40/50
- Mobile Panel 100/200
- Connected Automation Panel 800
- Connected Automation Panel 900

9.2 Installation

A detailed description of the Control Center can be found in the integrated online help documentation. The B&R Automation Device Interface (ADI) driver (also contains Control Center) is available in the Downloads section of the B&R website (www.br-automation.com).

1. Download and unzip the .zip archive
2. Close all applications-
3. Run the Setup.exe file (e.g. double-click on it in Explorer).

Information:

The ADI driver is already included in B&R images of embedded operating systems.

If a more current ADI driver version exists (see the Downloads section of the B&R website), it can be installed later. It is important that Enhanced Write Filter (EWF) is disabled for this.

10 B&R Automation Device Interface (ADI) Development Kit

This software can be used to access B&R Automation Device Interface (ADI) functions directly from Windows applications created in one of the following development environments:

- Microsoft Visual C++ 6.0
- Microsoft Visual Basic 6.0
- Microsoft Embedded Visual C++ 4.0
- Microsoft Visual Studio 2005 (or newer)

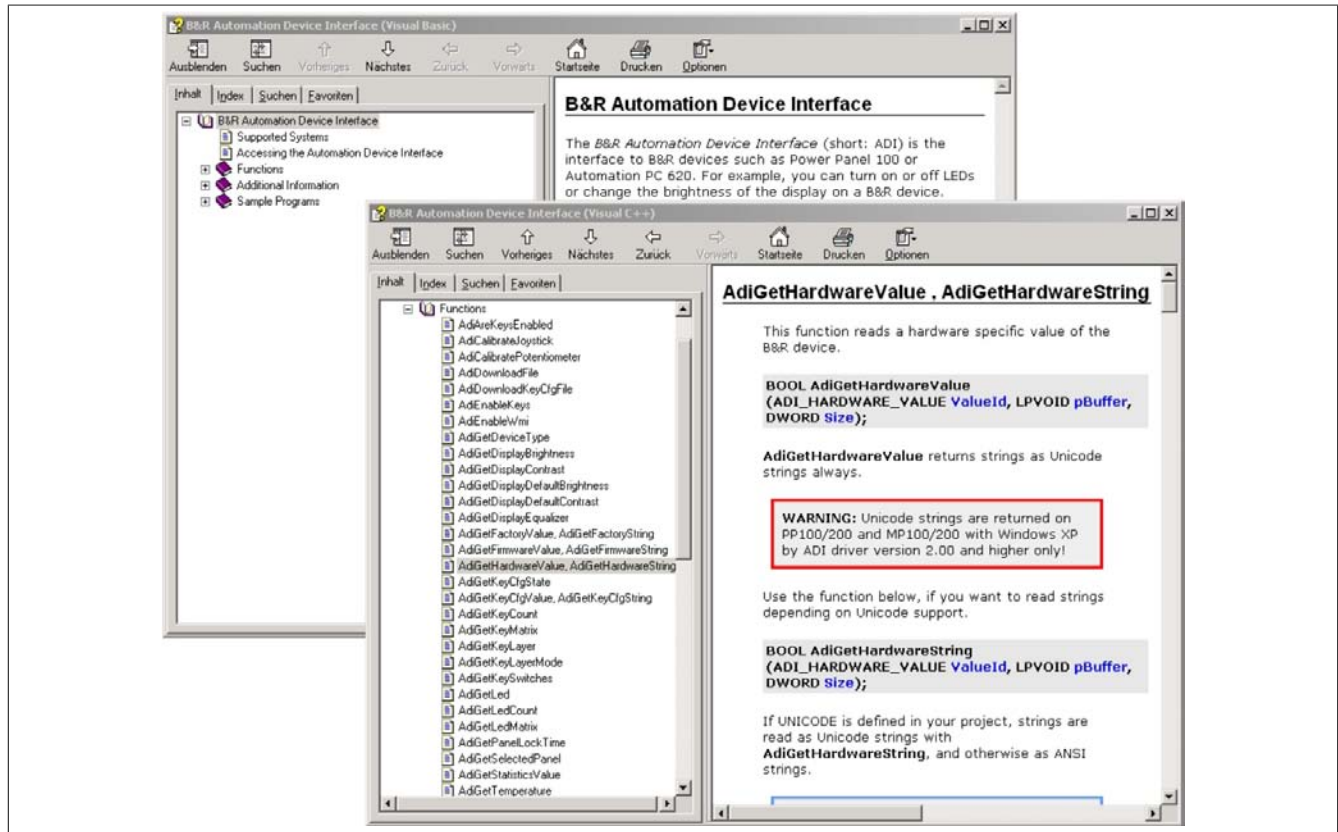


Figure 86: ADI Development Kit screenshots (version 3.40)

Features:

- One Microsoft Visual Basic module with ADI function declarations
- Header files and import libraries for Microsoft Visual C++
- Help files for Visual Basic and Visual C++
- Sample projects for Visual Basic and Visual C++
- ADI DLL (for application testing if no ADI driver is installed)

Supports the following systems (version 3.40 and higher):

- Automation PC 510
- Automation PC 511
- Automation PC 620
- Automation PC 810
- Automation PC 820
- Automation PC 910
- Panel PC 300
- Panel PC 700
- Panel PC 800
- Power Panel 100/200
- Power Panel 300/400
- Power Panel 500
- Mobile Panel 40/50

- Mobile Panel 100/200

The ADI driver installed on the stated product series must be suitable for that device. The ADI driver is already included in B&R images of embedded operating systems.

A detailed description of how to use ADI functions can be found in the online help documentation.

The B&R Automation Device Interface (ADI) development kit can be downloaded for free from the download area on the B&R website (www.br-automation.com).

11 B&R Automation Device Interface (ADI) .NET SDK

This software can be used to access B&R Automation Device Interface (ADI) functions directly from .NET applications created using Microsoft Visual Studio 2005 or later.

Supported programming languages:

- Visual Basic
- Visual C++
- Visual C#

System requirements

- Development system: PC with Windows XP/7 and
 - Microsoft Visual Studio 2005 (or newer)
 - Microsoft .NET Framework 2.0 and/or Microsoft .NET Compact Framework 2.0 (or newer)

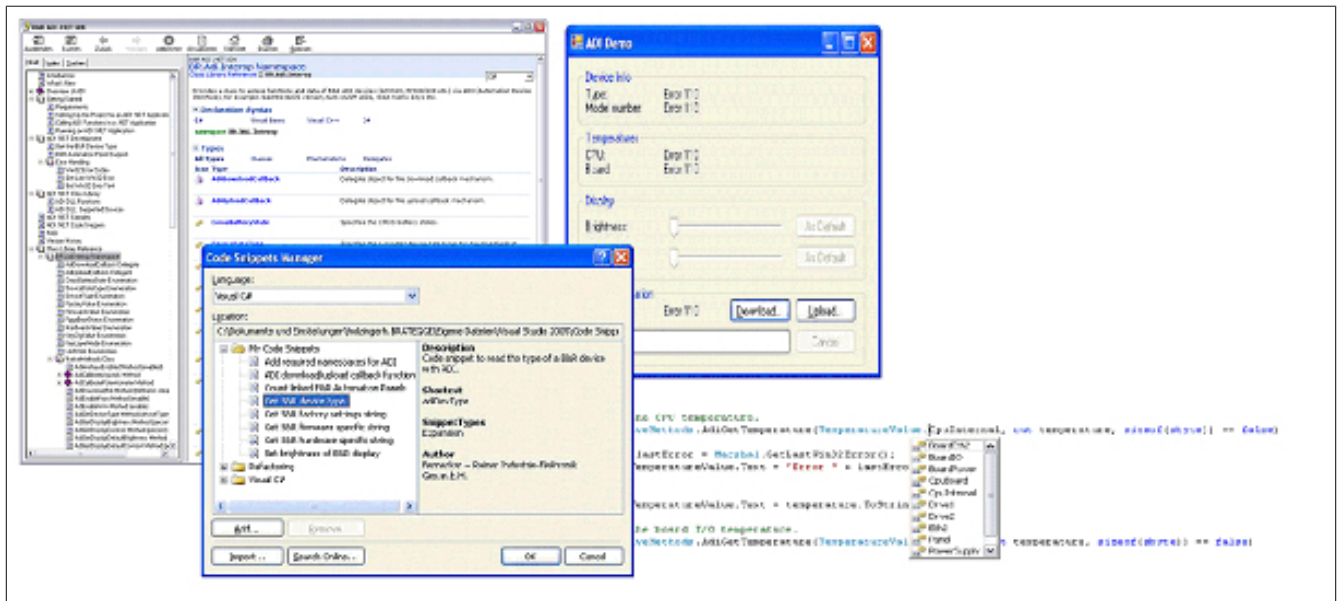


Figure 87: ADI .NET SDK screenshots (version 1.80)

Features (version 1.80 and higher)

- ADI .NET class library
- Help files in HTML Help 1.0 format (.chm file) and MS Help 2.0 format (.HxS file). (Help documentation is in English)
- Sample projects and code snippets for Visual Basic, Visual C++ and Visual C#
- ADI DLL (for application testing if no ADI driver is installed)

Supports the following systems (version 1.80 and higher):

- Automation PC 510
- Automation PC 511
- Automation PC 620
- Automation PC 810
- Automation PC 820
- Automation PC 910
- Panel PC 300
- Panel PC 700
- Panel PC 800
- Power Panel 100/200
- Power Panel 300/400
- Power Panel 500
- Mobile Panel 40/50
- Mobile Panel 100/200

The ADI driver installed on the stated product series must be suitable for that device. The ADI driver is already included in B&R images of embedded operating systems.

A detailed description of how to use ADI functions can be found in the online help documentation.

The ADI .NET SDK is available in the Downloads section of the B&R website (www.br-automation.com).

12 B&R Key Editor

On display devices, it is often necessary to adapt the function keys and LEDs directly to the application software being used. The B&R Key Editor makes it quick and easy to implement a unique configuration for the application.

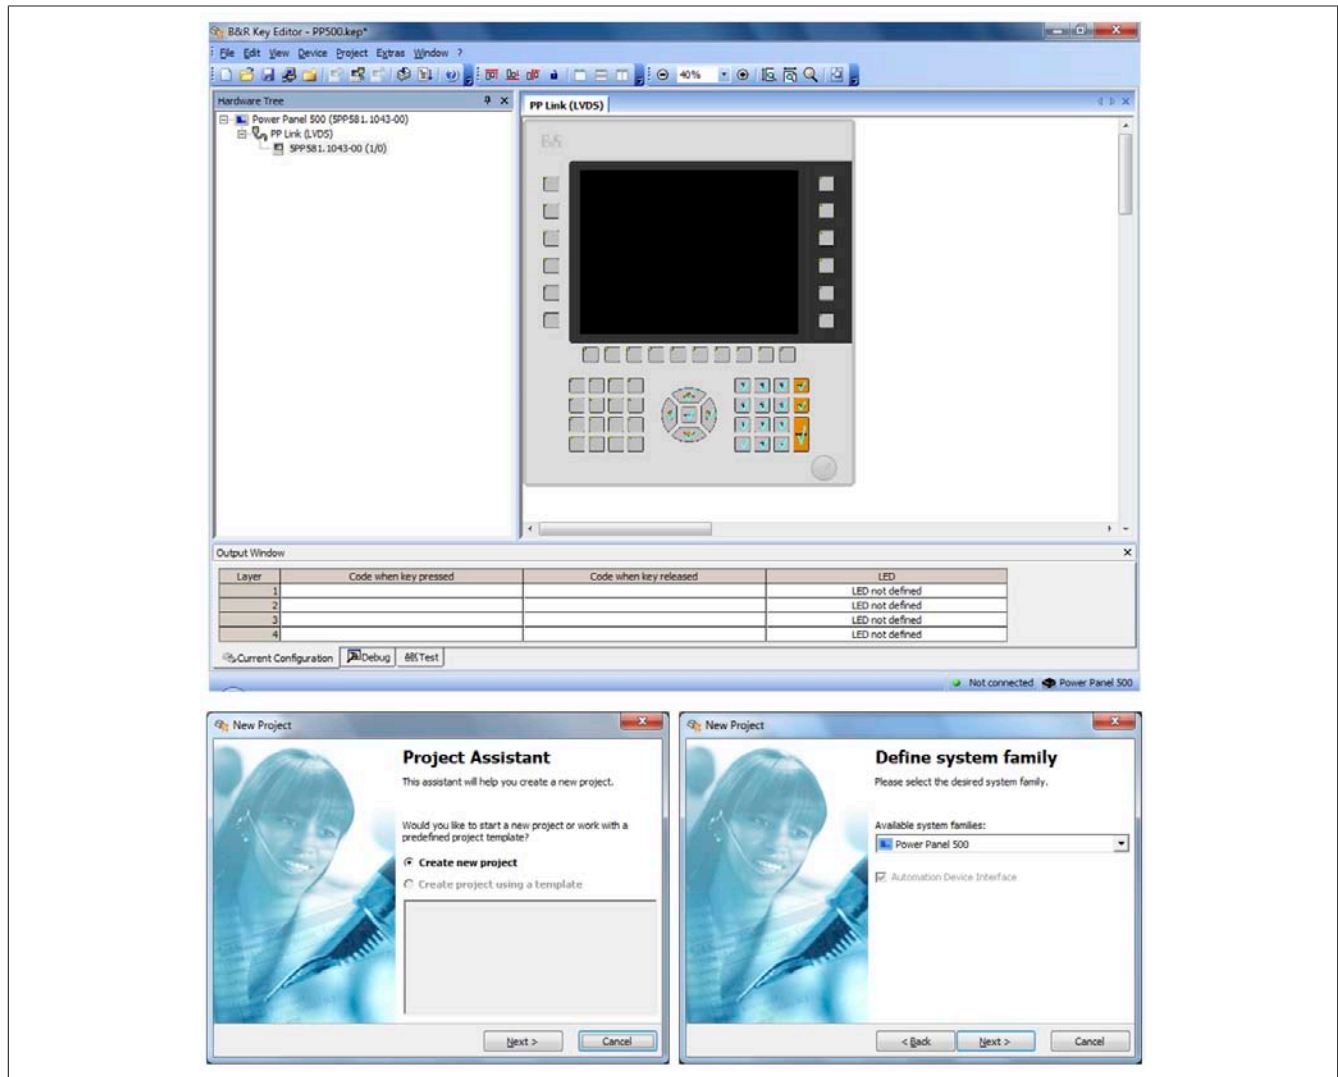


Figure 88: Screenshots of the B&R Key Editor V3.30

Features:

- Configuration of normal keyboard keys (A, B, C, etc.)
- Keyboard shortcuts (CTRL+C, SHIFT+DEL, etc.) using only one key
- Special key functions (change brightness, etc.)
- Assigning functions to LEDs (HDD access, power, etc.)
- 4 assignments possible per key (using layers)
- Configuration of the panel locking time when multiple Automation Panel 900 devices are connected to Automation PC and Panel PC devices.

Supports the following systems (version 3.30):

- Automation PC 510
- Automation PC 511
- Automation PC 620
- Automation PC 810
- Automation PC 820
- Automation PC 910
- Automation Panel 800
- Automation Panel 830
- Automation Panel 900

- IPC2000, IPC2001, IPC2002
- IPC5000, IPC5600
- IPC5000C, IPC5600C
- Mobile Panel 40/50
- Mobile Panel 100/200
- Panel PC 300
- Panel PC 700
- Panel PC 800
- Power Panel 100/200
- Power Panel 300/400
- Power Panel 500

A detailed guide for configuring keys and LEDs can be found in the B&R Key Editor's online help documentation. The B&R Key Editor is available at no cost in the Downloads section of the B&R website (www.br-automation.com). It can also be found on the B&R HMI Drivers & Utilities DVD (model number 5SWHMI.0000-00).

Chapter 5 • Standards and certifications

1 Standards and guidelines

1.1 CE mark



This mark certifies that all harmonized EN standards for the applicable directives have been met for B&R products.

1.2 EMC directive

These devices meet the requirements of EC directive "2004/108/EC Electromagnetic compatibility" and are designed for the following areas:

EN 61131-2:2007	Programmable logic controllers - Part 2: Equipment requirements and tests
EN 61000-6-2:2005	Electromagnetic compatibility (EMC) - part 6-2: Generic standard - Immunity to disturbances in the industrial sector
EN 61000-6-4:2007	Electromagnetic compatibility (EMC) - part 6-4: Generic standards; General emission standard for industrial environments

1.3 Low-voltage directive

These devices satisfy the requirements of EC directive "2006/95/EC Low-voltage directive" and are designed for the following areas:

EN 61131-2:2007	Programmable logic controllers - Part 2: Equipment requirements and tests
EN 60204-1:2006 + A1:2009	Machine safety - electrical equipment on machines - Part 1: General requirements

2 Certifications

Danger!

A fully assembled device can only receive certification if ALL of the individual components it includes have the applicable certifications. If an individual component is being used that DOES NOT have an applicable certification, then the fully assembled device will NOT RECEIVE certification.

B&R products and services comply with applicable standards. This includes international standards from organizations such as ISO, IEC and CENELEC, as well as national standards from organizations such as UL, CSA, FCC, VDE, ÖVE, etc. We are committed to ensuring the reliability of our products in an industrial environment.

Unless otherwise specified, the following certifications apply:

2.1 UL certification



Products with this label have been certified by Underwriters Laboratories and are listed as "Industrial Control Equipment". This mark is valid for the USA and Canada and simplifies the certification of your machines and systems in these areas.

Underwriters Laboratories (UL) in accordance with the UL508 standard - 17th Edition
Canadian (CSA) standard in accordance with C22.2 No. 142-M1987

Chapter 6 • Accessories

The following accessories have successfully completed functional testing at B&R and are approved for use with this device. Nevertheless, it is important to observe any limitations that may apply to the fully assembled device when operated with other individual components. When operating the fully assembled device, the specifications for the individual components must be adhered to.

All components listed in this manual have been subjected to extensive system and compatibility testing and are approved for use. B&R can make no guarantee regarding the functionality of non-approved accessories.

1 Replacement CMOS batteries

1.1 0AC201.91 / 4A0006.00-000

1.1.1 General information

This lithium battery is needed to back BIOS CMOS data and the real-time clock (RTC).

The battery is subject to wear and must be replaced when the battery power is insufficient ("Bad" status).

1.1.2 Order data

Model number	Short description	Figure
	Batteries	
0AC201.91	Lithium batteries 4 pieces, 3 V / 950 mAh button cell Hereby we declare that the Lithium cells contained in this shipment qualify as „partly regulated“. Handle with care. If the package is damaged, inspect cells, repack intact cells and protect cells against short circuits. For emergency information, call RENATA SA at + 41 61 319 28 27	
4A0006.00-000	Lithium battery, 3 V / 950 mAh, button cell	

Table 178: 0AC201.91, 4A0006.00-000 - Order data

1.1.3 Technical data

Warning!

The battery must be replaced by a Type CR2477N Renata battery only. The use of another battery may present a risk of fire or explosion.

The battery may explode if handled improperly. Do not recharge, disassemble or dispose of in fire.

Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the fully assembled device. The data specifications for the fully assembled device take precedence over those of individual components.

Product ID	0AC201.91	4A0006.00-000
General information		
Storage time	Max. 3 years at 30°C	
Certification CE	Yes	
Electrical characteristics		
Capacity	950 mAh	
Self-discharging	<1% per year (at 23°C)	
Voltage range	3 V	
Environmental conditions		
Temperature Storage	-20 to 60°C	

Table 179: 0AC201.91, 4A0006.00-000 - Technical data

Product ID	0AC201.91	4A0006.00-000
Relative humidity		
Operation		0 to 95%
Storage		0 to 95%
Transport		0 to 95%

Table 179: 0AC201.91, 4A0006.00-000 - Technical data

2 Power connectors

2.1 0TB103.9x

2.1.1 General information

The single-row 3-pin terminal block 0TB103 is used to connect the supply voltage.

2.1.2 Order data

Model number	Short description	Figure
	Terminal blocks	
0TB103.9	Connector, 24 VDC, 3-pin female, screw clamps 3.31 mm ² , protected against vibration by the screw flange	
0TB103.91	Connector, 24 VDC, 3-pin female, cage clamps 3.31 mm ² , protected against vibration by the screw flange	

Table 180: 0TB103.9, 0TB103.91 - Order data

2.1.3 Technical data

Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the fully assembled device. The data specifications for the fully assembled device take precedence over those of individual components.

Product ID	0TB103.9		0TB103.91																
General information																			
Certification	Yes																		
CE																			
cULus																			
GL	Yes																		
Terminal block																			
Note	Protected against vibration by the screw flange Rated values according to UL																		
Number of pins	3 (female)																		
Type of terminal clamp	Screw clamps		Cage clamps ²⁾																
Cable type	Only copper wires (no aluminum wires!)																		
Distance between contacts	5.08 mm																		
Connection cross section	<table><tr><td>26 to 14 AWG</td><td></td><td>26 to 12 AWG</td></tr><tr><td></td><td>0.20 to 1.50 mm²</td><td></td></tr><tr><td></td><td>0.20 to 2.50 mm²</td><td></td></tr><tr><td>0.20 to 1.50 mm²</td><td></td><td>0.20 to 2.50 mm²</td></tr><tr><td></td><td>0.20 to 1.50 mm²</td><td></td></tr></table>				26 to 14 AWG		26 to 12 AWG		0.20 to 1.50 mm ²			0.20 to 2.50 mm ²		0.20 to 1.50 mm ²		0.20 to 2.50 mm ²		0.20 to 1.50 mm ²	
26 to 14 AWG						26 to 12 AWG													
					0.20 to 1.50 mm ²														
					0.20 to 2.50 mm ²														
0.20 to 1.50 mm ²						0.20 to 2.50 mm ²													
	0.20 to 1.50 mm ²																		
AWG wire																			
Wire end sleeves with plastic covering																			
Solid wires																			
Fine strand wires																			
With wire end sleeves																			
Fastening torque	0.4 Nm		-																
Electrical characteristics																			
Nominal voltage	300 V																		
Nominal current ¹⁾	10 A / contact																		
Contact resistance	≤ 5 mΩ																		

Table 181: 0TB103.9, 0TB103.91 - Technical data

- 1) The limit data for each I/O module must be taken into consideration.
 2) The terminal block in the cage clamp design cannot be strung together.

3 Interface board connection

3.1 0TB1208.3100

3.1.1 General information

The 2-row 8-pin terminal block TB1208 is used to connect to various Power Panel 500 interface boards.

3.1.2 Order data

Model number	Short description	Figure
	Terminal blocks	
0TB1208.3100	Connector, 8-pin, cage clamp, 1 mm ² , protected against vibration by the screw flange.	

Table 182: 0TB1208.3100 - Order data

3.1.3 Technical data

Product ID	0TB1208.3100
General information	
Certification	
CE	Yes
cULus	Yes
GL	Yes
Terminal block	
Note	Rated values according to UL
Number of pins	8 (female)
Type of terminal clamp	Tension spring connection
Cable type	Only copper wires (no aluminum wires!)
Distance between contacts	3.5 mm
Connection cross section	
AWG wire	28 to 18 AWG
Wire end sleeves with plastic covering	0.13 to 0.34 mm ²
Solid wires	0.20 to 1 mm ²
Fine strand wires	0.20 to 1 mm ²
With wire end sleeves	0.13 to 0.34 mm ²
Electrical characteristics	
Nominal voltage	300 V
Nominal current ¹⁾	10 A / contact

Table 183: 0TB1208.3100 - Technical data

1) The limit data for each I/O module must be taken into consideration.

4 CompactFlash cards

4.1 General information

CompactFlash cards are storage media that are easy to replace. Due to their robustness against environmental influences (e.g. temperature, shock, vibration, etc.), CompactFlash cards are ideal for use as storage media in industrial environments.

4.2 General information

In order to be suited for use in industrial automation, CompactFlash cards must be highly reliable. To make this possible, the following is very important:

- Flash technology used
- Efficient algorithm for maximizing the lifespan
- Good mechanisms for detecting and fixing errors in the flash memory

4.2.1 Flash technology

Currently, CompactFlash cards are available with MLC (Multi Level Cell) and SLC (Single Level Cell) flash blocks. SLC flash memory has a lifespan that is 10 times longer than MLC, which is why only CompactFlash cards with SLC flash blocks are suited for industrial applications.

4.2.2 Wear leveling

Wear leveling is an algorithm that can be used to maximize the lifespan of a CompactFlash card. There are three different algorithms:

- No wear leveling
- Dynamic wear leveling
- Static wear leveling

The basic idea behind wear leveling is to distribute data over a broad area of blocks or cells on the data carrier so that the same areas don't have to be cleared and reprogrammed over and over again.

4.2.2.1 No wear leveling

The earliest CompactFlash cards didn't have an algorithm for maximizing the lifespan. The lifespan of a CompactFlash card was determined only by the guaranteed lifespan of the flash blocks.

4.2.2.2 Dynamic wear leveling

Dynamic wear leveling makes it possible to utilize unused flash blocks when writing to a file.

If the data carrier is 80% full with files, then only 20% can be used for wear leveling.

The lifespan of the CompactFlash card is therefore dependent on the amount of unused flash blocks.

4.2.2.3 Static wear leveling

Static wear leveling also monitors which data is rarely changed. From time to time, the controller then moves this data to blocks that have already been frequently programmed in order to prevent further wear on those cells.

4.2.3 ECC error correction

Bit errors can be caused by inactivity or when a certain cell is operated. Error Correction Coding (ECC) implemented via hardware or software can detect and correct many errors of this type.

4.2.4 S.M.A.R.T. support

Self-Monitoring, Analysis and Reporting Technology (S.M.A.R.T. for short) is an industry standard for mass storage devices that has been introduced to monitor important parameters and quickly detect imminent failures. Critical performance and calibration data is monitored and stored in order to help predict the probability of errors.

4.2.5 Maximum reliability

CompactFlash cards used by B&R use SLC flash blocks and static wear leveling together with a powerful ECC algorithm to provide maximum reliability.

4.3 5CFCRD.xxxx-06

4.3.1 General information

Information:

B&R CompactFlash cards 5CFCRD.xxxx-06 and CompactFlash cards from a different manufacturer cannot be used in the same system at the same time. Due to differences in technology (older vs. newer technologies), problems can occur during system startup that are caused by the different boot times.

see "Known problems / issues" on page 188

Information:

The 5CFCRD.xxxx-06 CompactFlash cards are supported on B&R devices with WinCE version ≥ 6.0 .

4.3.2 Order data

Model number	Short description	Figure
	CompactFlash	
5CFCRD.0512-06	CompactFlash 512 MB B&R (SLC)	
5CFCRD.1024-06	CompactFlash 1 GB B&R (SLC)	
5CFCRD.2048-06	CompactFlash 2 GB B&R (SLC)	
5CFCRD.4096-06	CompactFlash 4 GB B&R (SLC)	
5CFCRD.8192-06	CompactFlash 8 GB B&R (SLC)	
5CFCRD.016G-06	CompactFlash 16 GB B&R (SLC)	
5CFCRD.032G-06	CompactFlash 32 GB B&R (SLC)	

Table 184: 5CFCRD.0512-06, 5CFCRD.1024-06, 5CFCRD.2048-06, 5CFCRD.4096-06, 5CFCRD.8192-06, 5CFCRD.016G-06, 5CFCRD.032G-06 - Order data

4.3.3 Technical data

Caution!

A sudden loss of power may result in data loss! In very rare cases, mass memory may also be damaged. To prevent damage and loss of data, the use of a UPS device is recommended.

Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the fully assembled device. The data specifications for the fully assembled device take precedence over those of individual components.

Product ID	5CFCRD. 0512-06	5CFCRD. 1024-06	5CFCRD. 2048-06	5CFCRD. 4096-06	5CFCRD. 8192-06	5CFCRD. 016G-06	5CFCRD. 032G-06
General information							
Capacity	512 MB	1 GB	2 GB	4 GB	8 GB	16 GB	32 GB
Data retention	10 years						
Data reliability	< 1 unrecoverable error in 10 ¹⁴ bit read accesses						
Lifetime monitoring	Yes						
MTBF	> 3,000,000 hours (at 25°C)						
Maintenance	None						
Supported operating modes	PIO mode 0-6, Multiword DMA mode 0-4, Ultra DMA mode 0-4						
Continuous reading							
Typical	33 MB/s	33 MB/s	33 MB/s	33 MB/s	33 MB/s	36 MB/s	36 MB/s
Maximum	35 MB/s	35 MB/s	35 MB/s	34 MB/s	34 MB/s	37 MB/s	37 MB/s
Continuous writing							
Typical	15 MB/s	15 MB/s	15 MB/s	14 MB/s	14 MB/s	28 MB/s	28 MB/s
Maximum	18 MB/s	18 MB/s	18 MB/s	17 MB/s	17 MB/s	30 MB/s	30 MB/s

Table 185: 5CFCRD.0512-06, 5CFCRD.1024-06, 5CFCRD.2048-06, 5CFCRD.4096-06, 5CFCRD.8192-06, 5CFCRD.016G-06, 5CFCRD.032G-06 - Technical data

Product ID	5CFCRD. 0512-06	5CFCRD. 1024-06	5CFCRD. 2048-06	5CFCRD. 4096-06	5CFCRD. 8192-06	5CFCRD. 016G-06	5CFCRD. 032G-06
Certification							
CE	Yes						
cULus	Yes						
cULus HazLoc Class 1 Division 2	-	-	-	-	-	Yes	-
ATEX Zone 22	-	-	-	-	-	Yes	-
GL	Yes						
Endurance							
Guaranteed data volume							
Guaranteed ¹⁾	50 TB	100 TB	200 TB	400 TB	800 TB	1600 TB	3200 TB
Results for 5 years ¹⁾	27.40 GB/day	54.79 GB/day	109.9 GB/day	219.8 GB/day	438.6 GB/day	876.72 GB/day	1753.44 GB/day
Clear/Write cycles							
Guaranteed	100,000						
SLC flash	Yes						
Wear leveling	Static						
Error correction coding (ECC)	Yes						
S.M.A.R.T. Support	Yes						
Support							
Hardware	PP300/400, PP500, PPC300, PPC700, PPC725, PPC800, APC620, APC810, APC820						
Operating systems							
Windows 7 32-bit	No	No	No	No	No	Yes	Yes
Windows 7 64-bit	No	No	No	No	No	No	Yes
Windows Embedded Standard 7, 32-bit	No	No	No	No	Yes	Yes	Yes
Windows Embedded Standard 7, 64-bit	No	No	No	No	No	Yes	Yes
Windows XP Professional	No	No	No	Yes	Yes	Yes	Yes
Windows XP Embedded				Yes			
Windows Embedded Standard 2009	No	Yes	Yes	Yes	Yes	Yes	Yes
Windows CE 6.0	Yes	Yes	Yes	Yes	Yes	Yes ²⁾	Yes ²⁾
Windows CE 5.0				No			
Software							
PVI Transfer	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011)	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011)	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011)	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011)	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011)	≥ V3.6.8.40 (part of PVI Development Setup ≥ V3.0.0.3020)	≥ V4.0.0.8 (part of PVI Development Setup ≥ V3.0.2.3014)
B&R Embedded OS Installer	≥ V3.10	≥ V3.10	≥ V3.10	≥ V3.10	≥ V3.10	≥ V3.20	≥ V3.21
Environmental conditions							
Temperature							
Operation	0 to 70°C						
Storage	-65 to 150°C						
Transport	-65 to 150°C						
Relative humidity							
Operation	Max. 85% at 85°C						
Storage	Max. 85% at 85°C						
Transport	Max. 85% at 85°C						
Vibration							
Operation	20 g peak, 20 to 2000 Hz, 4 in each direction (JEDEC JESD22, method B103) 5.35 g RMS, 15 min per level (IEC 68-2-6)						
Storage	20 g peak, 20 to 2000 Hz, 4 in each direction (JEDEC JESD22, method B103) 5.35 g RMS, 15 min per level (IEC 68-2-6)						
Transport	20 g peak, 20 to 2000 Hz, 4 in each direction (JEDEC JESD22, method B103) 5.35 g RMS, 15 min per level (IEC 68-2-6)						
Shock							
Operation	1.5 kg peak, 0-5 ms 5x (JEDEC JESD22, B110 method) 30 g, 11 ms 1x (IEC 68-2-27)						
Storage	1.5 kg peak, 0-5 ms 5x (JEDEC JESD22, B110 method) 30 g, 11 ms 1x (IEC 68-2-27)						
Transport	1.5 kg peak, 0-5 ms 5x (JEDEC JESD22, B110 method) 30 g, 11 ms 1x (IEC 68-2-27)						
Altitude							
Operation	Max. 4,572 m						
Mechanical characteristics							
Dimensions							
Width	42.8 ±0.10 mm						
Length	36.4 ±0.15 mm						
Height	3.3 ±0.10 mm						
Weight	10 g						

Table 185: 5CFCRD.0512-06, 5CFCRD.1024-06, 5CFCRD.2048-06, 5CFCRD.4096-06, 5CFCRD.8192-06, 5CFCRD.016G-06, 5CFCRD.032G-06 - Technical data

- 1) Endurance of B&R CFs (with linear written block size ≥ 128 Kb)
2) Not supported by B&R Embedded OS installer.

4.3.4 Temperature humidity diagram

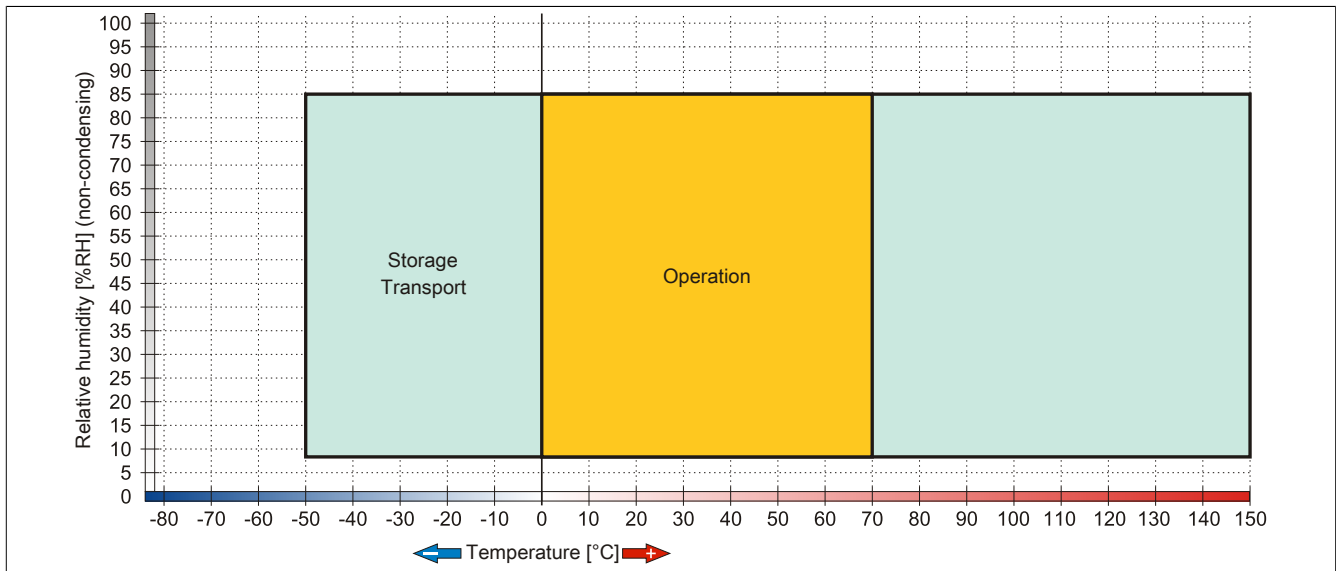


Figure 89: 5CFCRD.xxxx-06 - Temperature humidity diagram for CompactFlash cards

4.3.5 Dimensions

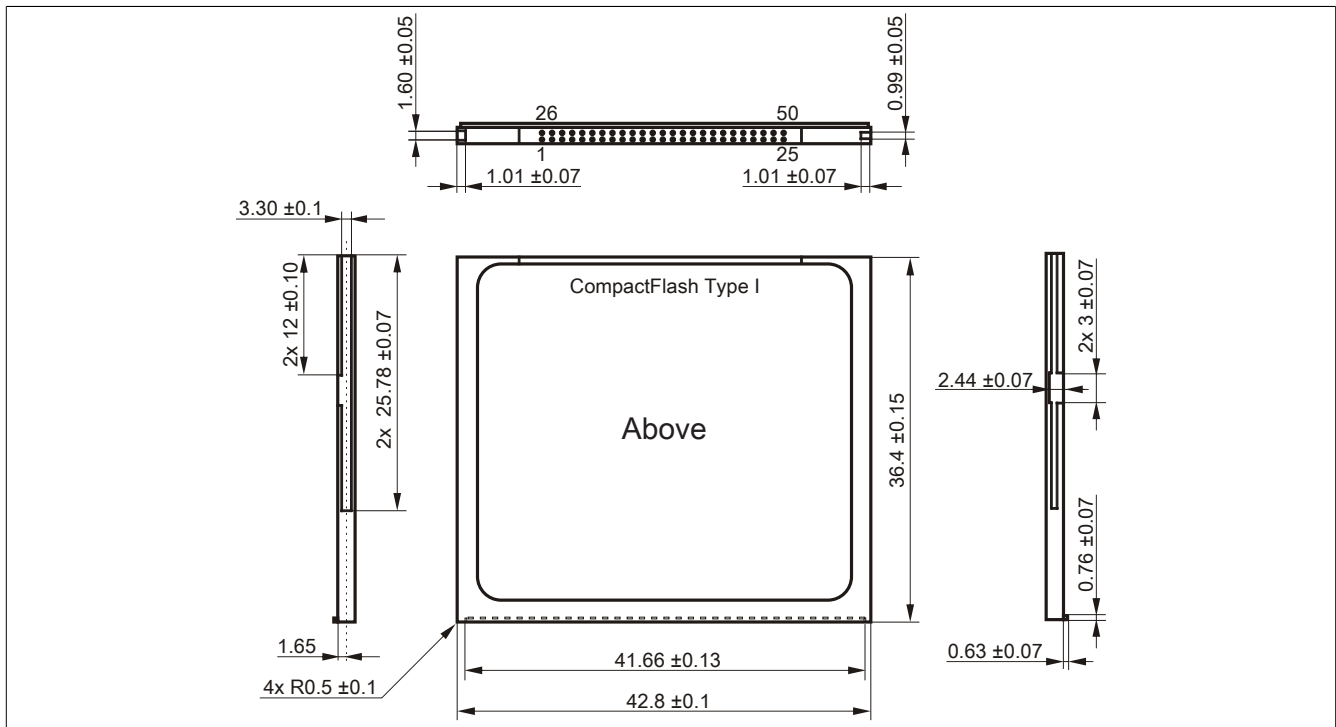


Figure 90: Dimensions - CompactFlash card Type I

4.3.6 Benchmark

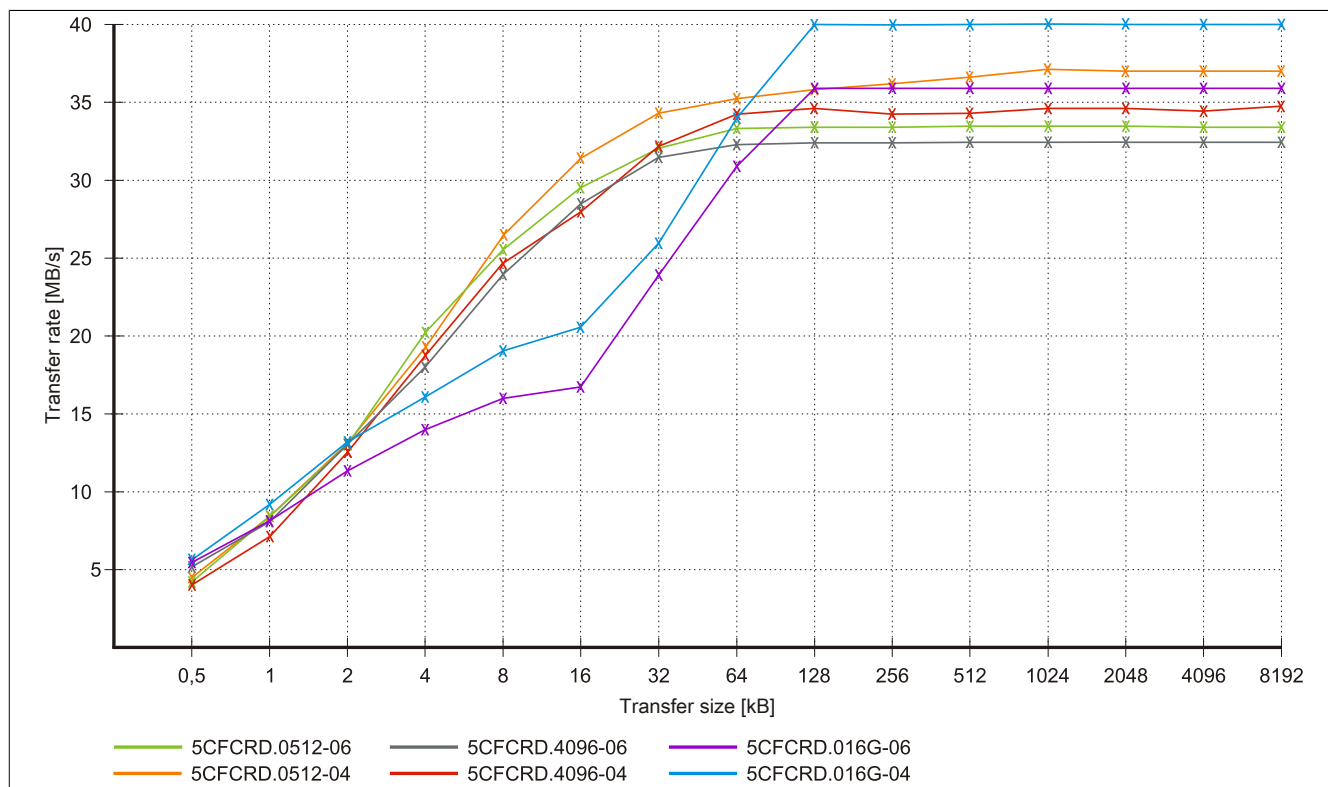


Figure 91: ATTO Disk Benchmark v2.34 comparison when reading - 5CFCRD.xxxx-04 with 5CFCRD.xxxx-06

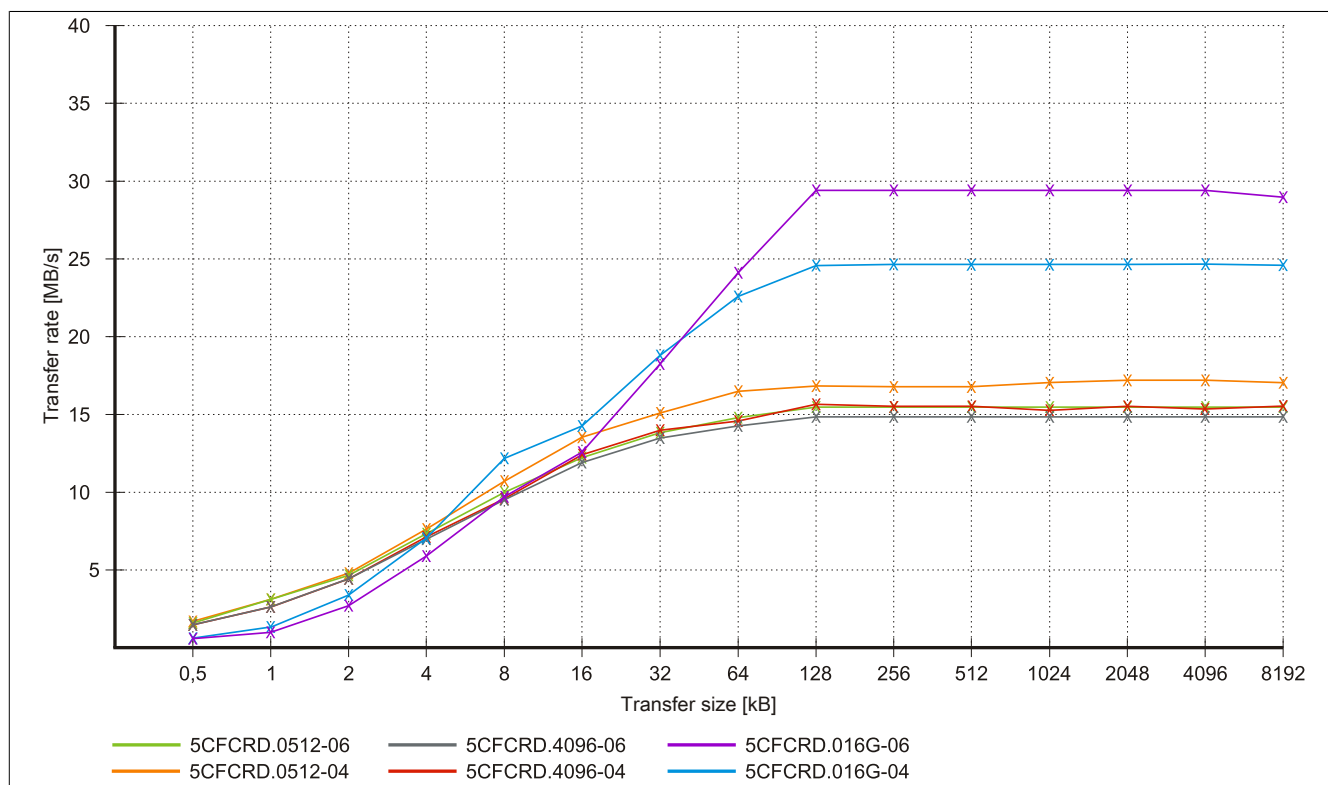


Figure 92: ATTO Disk Benchmark v2.34 comparison when writing - 5CFCRD.xxxx-04 with 5CFCRD.xxxx-06

4.4 5CFCRD.xxxx-03

4.4.1 General information

Information:

Western Digital CompactFlash cards 5CFCRD.xxxx-03 and CompactFlash cards from a different manufacturer cannot be used in the same system at the same time. Due to differences in technology (older vs. newer technologies), problems can occur during system startup that are caused by the different boot times.

see "Known problems / issues" on page 188

Information:

On Windows CE 5.0 devices, 5CFCRD.xxxx-03 CompactFlash cards up to 1GB are supported.

Information:

On CompactFlash cards 5CFCRD.xxxx-03, only the sticker and the description have changed. The technical data has not been changed.

4.4.2 Order data

Model number	Short description	Figure
	CompactFlash	
5CFCRD.0064-03	CompactFlash 64 MB Western Digital (SLC)	
5CFCRD.0128-03	CompactFlash 128 MB Western Digital (SLC)	
5CFCRD.0256-03	CompactFlash 256 MB Western Digital (SLC)	
5CFCRD.0512-03	CompactFlash 512 MB Western Digital (SLC)	
5CFCRD.1024-03	CompactFlash 1 GB Western Digital (SLC)	
5CFCRD.2048-03	CompactFlash 2 GB Western Digital (SLC)	
5CFCRD.4096-03	CompactFlash 4 GB Western Digital (SLC)	
5CFCRD.8192-03	CompactFlash 8 GB Western Digital (SLC)	

Table 186: 5CFCRD.0064-03, 5CFCRD.0128-03, 5CFCRD.0256-03, 5CFCRD.0512-03, 5CFCRD.1024-03, 5CFCRD.2048-03, 5CFCRD.4096-03, 5CFCRD.8192-03 - Order data

4.4.3 Technical data

Caution!

A sudden loss of power may result in data loss! In very rare cases, the mass storage device may also become damaged.

To prevent damage and loss of data, B&R recommends that you use a UPS device.

Information:

The following characteristics, features and limit values only apply to this accessory and can deviate from those specified for the fully assembled device. The data specifications for the fully assembled device take precedence over those of individual components.

Product ID	5CFCRD.0064-03	5CFCRD.0128-03	5CFCRD.0256-03	5CFCRD.0512-03	5CFCRD.1024-03	5CFCRD.2048-03	5CFCRD.4096-03	5CFCRD.8192-03
General information								
Capacity	64 MB	128 MB	256 MB	512 MB	1 GB	2 GB	4 GB	8 GB
Data retention	10 years							
Data reliability	< 1 unrecoverable error in 10 ¹⁴ bit read accesses							
Lifetime monitoring	Yes							
MTBF	> 4,000,000 hours (at 25°C)							



Table 187: 5CFCRD.0064-03, 5CFCRD.0128-03, 5CFCRD.0256-03, 5CFCRD.0512-03, 5CFCRD.1024-03, 5CFCRD.2048-03, 5CFCRD.4096-03, 5CFCRD.8192-03 - Technical data

Product ID	5CFCRD. 0064-03	5CFCRD. 0128-03	5CFCRD. 0256-03	5CFCRD. 0512-03	5CFCRD. 1024-03	5CFCRD. 2048-03	5CFCRD. 4096-03	5CFCRD. 8192-03
Maintenance	None							
Supported operating modes	PIO Mode 0-4, Multiword DMA Mode 0-2							
Continuous reading Typical	8 MB/s							
Continuous writing Typical	6 MB/s							
Certification CE cULus GL	Yes Yes Yes							
Endurance								
Clear/Write cycles Typical	> 2000000							
SLC flash	Yes							
Wear leveling	Static							
Error correction coding (ECC)	Yes							
S.M.A.R.T. Support	No							
Support								
Hardware	MP100/200, PP100/200, PP300/400, PP500, PPC300, PPC700, PPC725, PPC800, Provit 2000, Provit 5000, APC620, APC680, APC810, APC820							
Operating systems Windows 7 32-bit Windows 7 64-bit Windows Embedded Standard 7, 32-bit Windows Embedded Standard 7, 64-bit Windows XP Professional Windows XP Embedded Windows Embedded Standard 2009 Windows CE 6.0 Windows CE 5.0	No No No No No No No Yes Yes Yes Yes Yes							
Software PVI Transfer B&R Embedded OS Installer	≥ V2.57 (part of PVI Development Setup ≥ V2.5.3.3005) ≥ V2.21							
Environmental conditions								
Temperature Operation Storage Transport	0 to 70°C -50 to 100°C -50 to 100°C							
Relative humidity Operation Storage Transport	8 to 95%, non-condensing 8 to 95%, non-condensing 8 to 95%, non-condensing							
Vibration Operation Storage Transport	Max. 16.3 g (159 m/s² 0-peak) Max. 30 g (294 m/s² 0-peak) Max. 30 g (294 m/s² 0-peak)							
Shock Operation Storage Transport	Max. 1000 g (9810 m/s² 0-peak) Max. 3000 g (29430 m/s² 0-peak) Max. 3000 g (29430 m/s² 0-peak)							
Altitude Operation	Max. 24,383 m							
Mechanical characteristics								
Dimensions Width Length Height	42.8 ±0.10 mm 36.4 ±0.15 mm 3.3 ±0.10 mm							
Weight	11.4 g							

Table 187: 5CFCRD.0064-03, 5CFCRD.0128-03, 5CFCRD.0256-03, 5CFCRD.0512-03, 5CFCRD.1024-03, 5CFCRD.2048-03, 5CFCRD.4096-03, 5CFCRD.8192-03 - Technical data

1) Not supported by B&R Embedded OS installer.

4.4.5 Dimensions



4.5 Known problems / issues

The following is a known issue for devices with two CompactFlash slots:

- Using two different types of CompactFlash cards can cause problems in Automation PCs and Panel PCs. This can result in one of the two cards not being detected during system startup. This is caused by varying startup speeds. CompactFlash cards with older technology require significantly more time during system startup than CompactFlash cards with newer technology. This behavior occurs near the limits of the time frame provided for startup. This can occur because the startup time for the CompactFlash cards fluctuates due to the variance of the components being used. Depending on the CompactFlash cards being used, this error may occur never, sometimes or always.

5 USB media drive

5.1 5MD900.USB2-02

5.1.1 General information

The USB media drive features a DVD-R/RW DVD+R/RW drive, a CompactFlash slot and one USB port on both the front and back. It is connected to the USB port on the B&R Industrial PC.

- Desktop or rack-mounted operation (mounting rail brackets)
- Integrated DVD-R/RW DVD+R/RW drive
- Integrated IDE/ATAPI CompactFlash slot (hot pluggable)
- Integrated USB 2.0 connection
- +24 VDC supply (back)
- USB 2.0 connection (back)
- Optional front cover

5.1.2 Order data

Model number	Short description	Figure
	USB accessories	
5MD900.USB2-02	USB 2.0 DVD-R/RW DVD+R/RW drive, CompactFlash slot (Type II), USB connector (Type A on front, Type B on back), 24 VDC, please order 0TB103.9 screw clamp or 0TB103.91 cage clamp separately	
	Required accessories	
	Other	
5SWUTI.0000-00	OEM Nero CD-RW Software, only available with a CD writer.	
	Terminal blocks	
0TB103.9	Connector, 24 VDC, 3-pin female, screw clamps 3.31 mm², protected against vibration by the screw flange	
0TB103.91	Connector, 24 VDC, 3-pin female, cage clamps 3.31 mm², protected against vibration by the screw flange	
	USB cable	
5CAUSB.0018-00	USB 2.0 connecting cable type A - type B, 1.8 m.	
5CAUSB.0050-00	USB 2.0 connecting cable type A - type B, 5 m.	

Table 188: 5MD900.USB2-02 - Order data

5.1.3 Interfaces

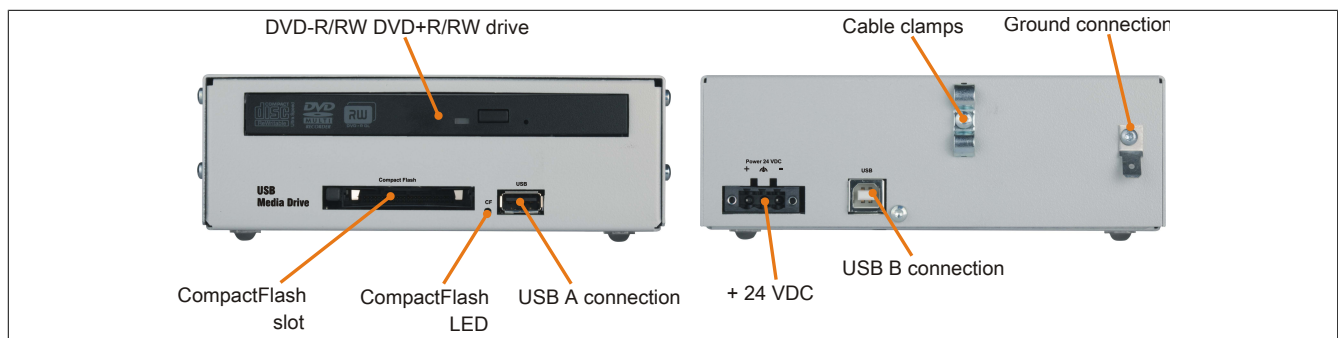


Figure 95: 5MD900.USB2-02 - Interfaces

5.1.4 Technical data

Product ID	5MD900.USB2-02
General information	
Max. cable length	5m (not including hub)
Certification	
CE	Yes
cULus	Yes
Interfaces	
CompactFlash slot 1	
Type	Type I
Connection	IDE/ATAPI
Activity LED	Signals read or write access to an inserted CompactFlash card

Table 189: 5MD900.USB2-02 - Technical data

Product ID	5MD900.USB2-02
USB	
Type	USB 2.0
Design	Type A front Type B back
Transfer rate	Low speed (1.5 Mbit/s), full speed (12 Mbit/s), high speed (480 Mbit/s)
Current load	Max. 500 mA
CD / DVD drive	
Data buffer capacity	2 MB
Data transfer rate	Max. 33.3 MB/s
Speed	Max. 5090 rpm $\pm 1\%$
Noise level	Approx. 45 dBA in a distance of 50 cm (full read access)
Compatible formats	CD-DA, CD-ROM mode 1/mode 2 CD-ROM XA mode 2 (form 1, form 2) Photo CD (single/multi-session), Enhanced CD, CD text DVD-ROM, DVD-R, DVD-RW, DVD-Video DVD-RAM (4.7GB, 2.6GB) DVD+R, DVD+R (double layer), DVD+RW
Laser class	Class 1 laser
Service life	60000 POH (Power-On Hours)
Interface	IDE (ATAPI)
Startup time	
CD	Max. 14 seconds (0 rpm to read access)
DVD	Max. 15 seconds (0 rpm to read access)
Access time	
CD	Typ. 140 ms (24x)
DVD	Typ. 150 ms (8x)
Readable media	
CD	CD/CD-ROM (12 cm, 8 cm), CD-R, CD-RW
DVD	DVD-ROM, DVD-R, DVD-RW, DVD-RAM, DVD+R, DVD+R (double layer), DVD+RW
Writable media	
CD	CD-R, CD-RW
DVD	DVD-R/RW, DVD-RAM (4.7 GB), DVD+R/RW, DVD+R (double layer)
Read speed	
CD	24x
DVD	8x
Write speed	
CD-R	10 to 24x
CD-RW	10 to 24x
DVD+R	3.3 to 8x
DVD+R (dual layer)	2.4 to 4x
DVD+RW	3.3 to 8x
DVD-R	2 to 6x
DVD-R (dual layer)	2 to 4x
DVD-RAM	3 to 5x
DVD-RW	2 to 6x
Write methods	
CD	Disk at once, session at once, packet write, track at once
DVD	Disk at once, incremental, over-write, sequential
Electrical characteristics	
Nominal voltage	24 VDC $\pm 25\%$
Operating conditions	
Protection in accordance with EN 60529	IP65 front side (only with optional front cover), IP20 back side
Environmental conditions	
Temperature ¹⁾	
Operation	5 to 45°C
Storage	-20 to 60°C
Transport	-40 to 60°C
Relative humidity	
Operation	20 to 80%
Storage	5 to 90%
Transport	5 to 95%
Vibration	
Operation	5 to 500 Hz: 0.3 g (2.9 m/s ² 0-peak)
Storage	10 to 100 Hz: 2 g (19.6 m/s ² 0-peak)
Transport	10 to 100 Hz: 2 g (19.6 m/s ² 0-peak)
Shock	
Operation	5 g, 11 ms
Storage	60 g, 11 ms
Transport	60 g, 11 ms
Altitude	
Operation	Max. 3000 m

Table 189: 5MD900.USB2-02 - Technical data

Product ID	5MD900.USB2-02
Mechanical characteristics	
Dimensions	
Width	156 mm
Height	52 mm
Depth	140 mm
Weight	Approx. 1100 g (without front cover)

Table 189: 5MD900.USB2-02 - Technical data

1) Temperature data is for operation at 500 meters. Derating the max. ambient temperature – typically 1°C per 1000 meters (from 500 meters above sea level).

5.1.5 Dimensions

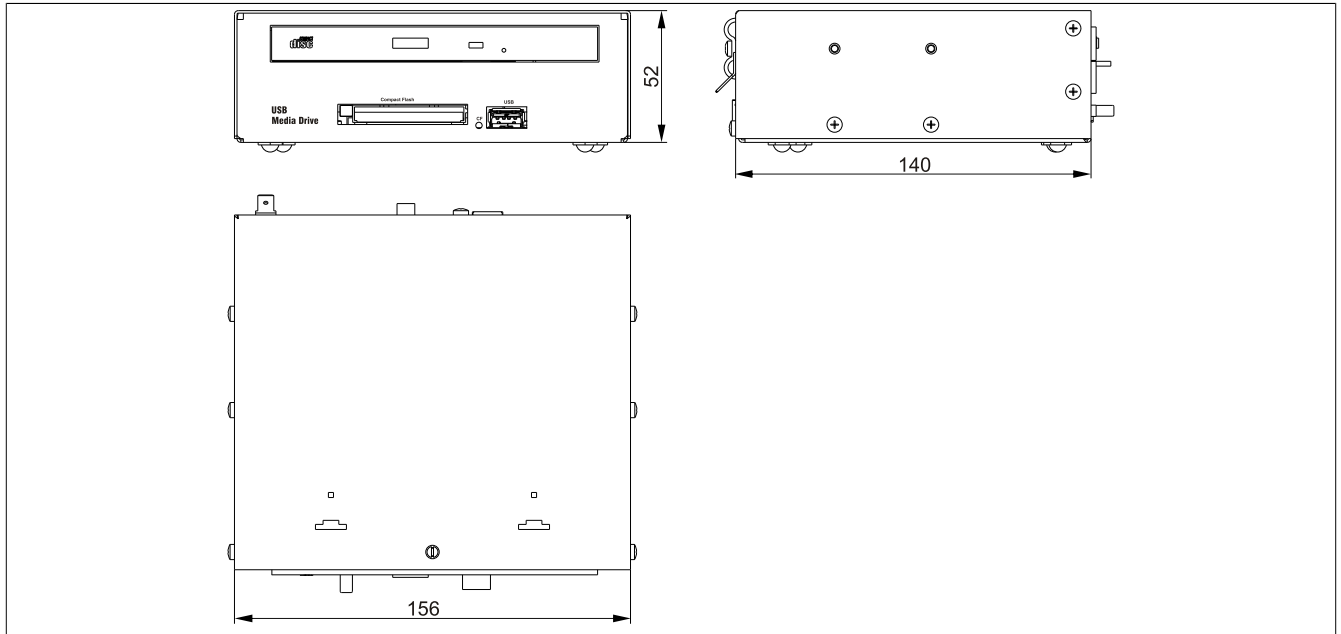


Figure 96: 5MD900.USB2-02 - Dimensions

5.1.6 Dimensions with front cover

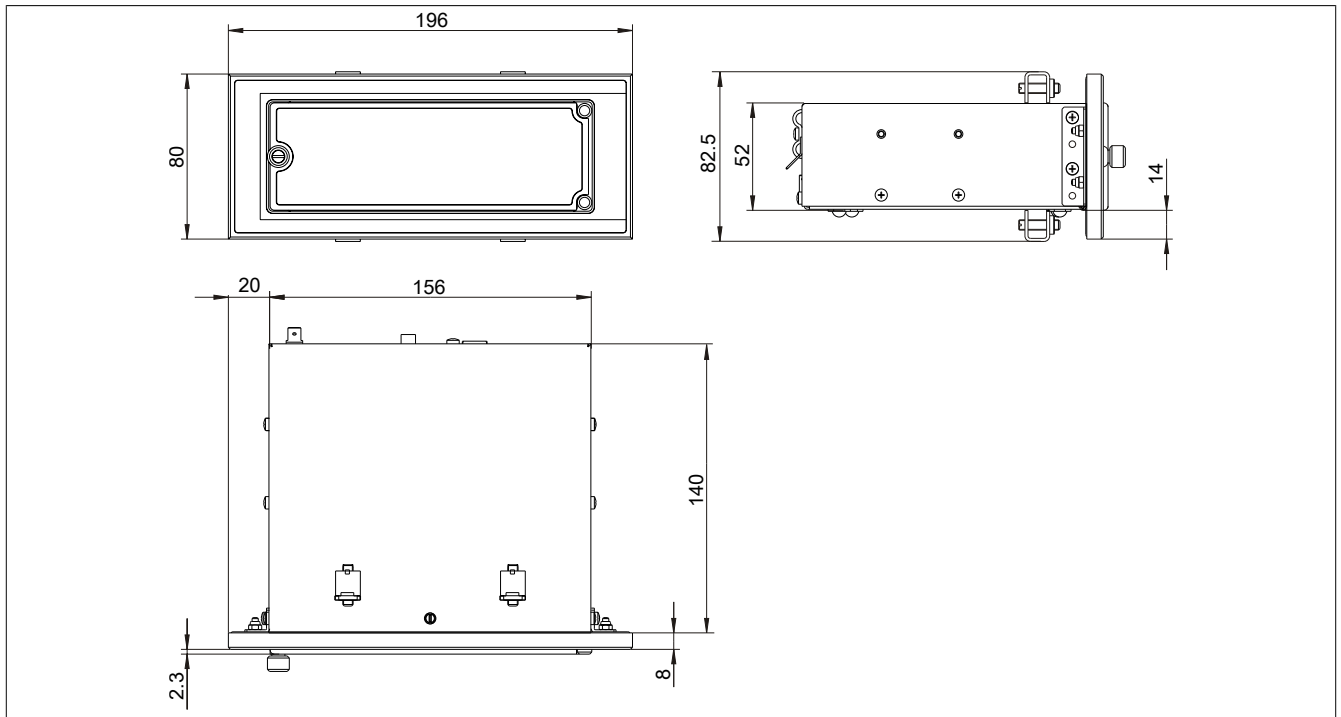


Figure 97: Dimensions - USB media drive with front cover

5.1.7 Cutout installation

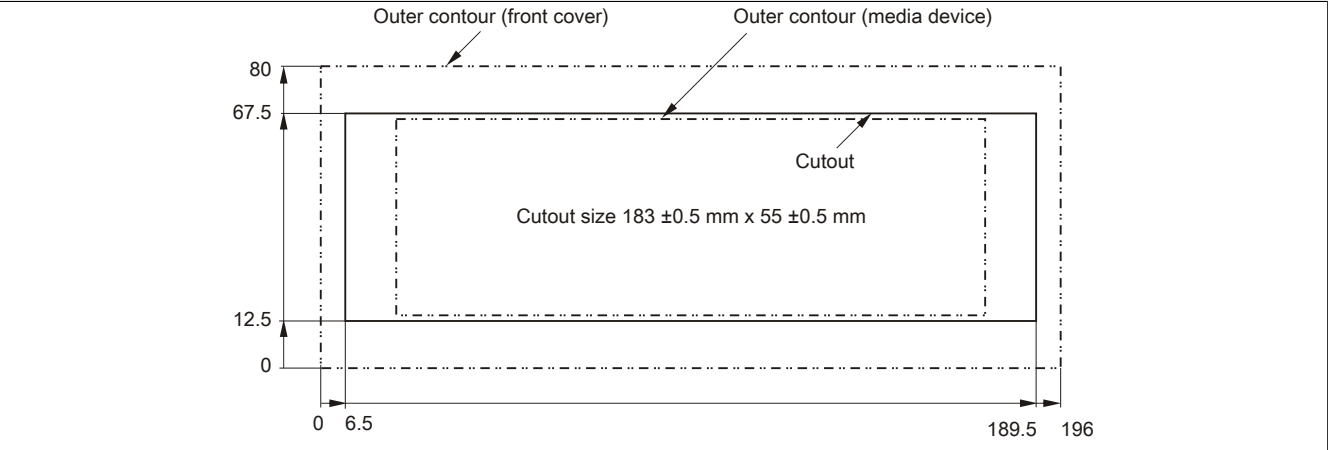


Figure 98: Installation cutout - USB media drive with front cover

5.1.8 Contents of delivery

Quantity	Component
1	USB media drive
2	Mounting rail brackets

Table 190: 5MD900.USB2-02 - Contents of delivery

5.1.9 Installation

The USB media drive can be operated as a desktop device (rubber feet) or as a rack-mounted device (2 mounting rail brackets included).

5.1.9.1 Mounting orientation

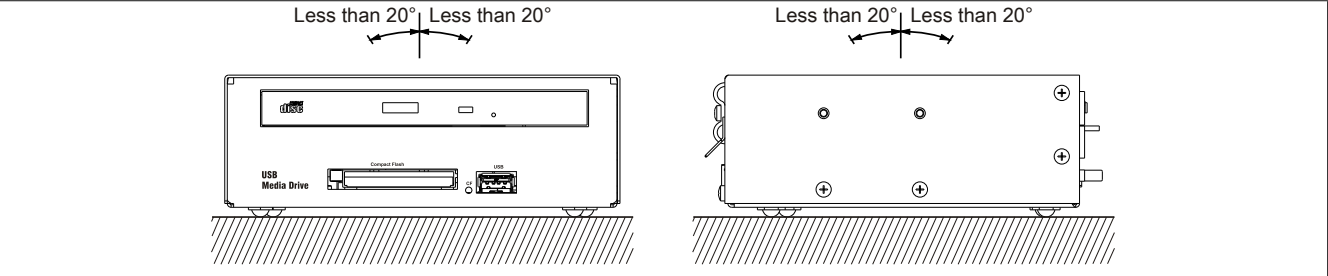


Figure 99: 5MD900.USB2-02 - Mounting orientation

5.2 5A5003.03

5.2.1 General information

This front cover can also be mounted on the front of the USB media drive (model number 5MD900.USB2-00, 5MD900.USB2-01 or 5MD900.USB2-02) to protect the interface.

5.2.2 Order data

Model number	Short description	Figure
	USB accessories	
5A5003.03	Front cover, for remote CD-ROM drive 5A5003.02 and USB 2.0 drive combination 5MD900.USB2-00, 5MD900.USB2-01 and 5MD900.USB2-02.	

Table 191: 5A5003.03 - Order data

5.2.3 Technical data

Product ID	5A5003.03	
General information		
Certification		
CE	Yes	
cULus	Yes	
Mechanical characteristics		
Front		
Panel membrane		
Light background	Similar to Pantone 427CV	
Dimensions		
Width	196 mm	
Height	80 mm	
Depth	8 mm	

Table 192: 5A5003.03 - Technical data

5.2.4 Dimensions

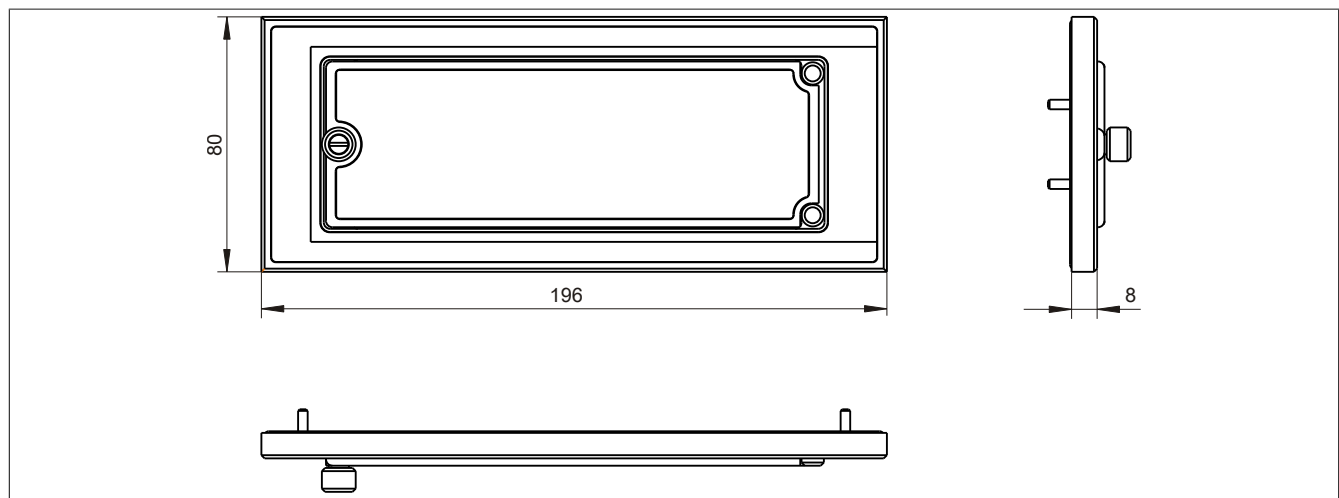


Figure 100: 5A5003.03 - Dimensions

5.2.5 Contents of delivery

Quantity	Component
1	Front cover 5A5003.03 for the USB media drive
4	M3 locknut
4	Cover retaining clip

Table 193: 5A5003.03 - Contents of delivery

5.2.6 Installation

The front cover is attached with 2 mounting rail brackets (included with the USB media drive) and 4 M3 locknuts. The 4 retaining clips provided can be used to mount the USB media drive and front cover as a whole, for example in a control cabinet door.

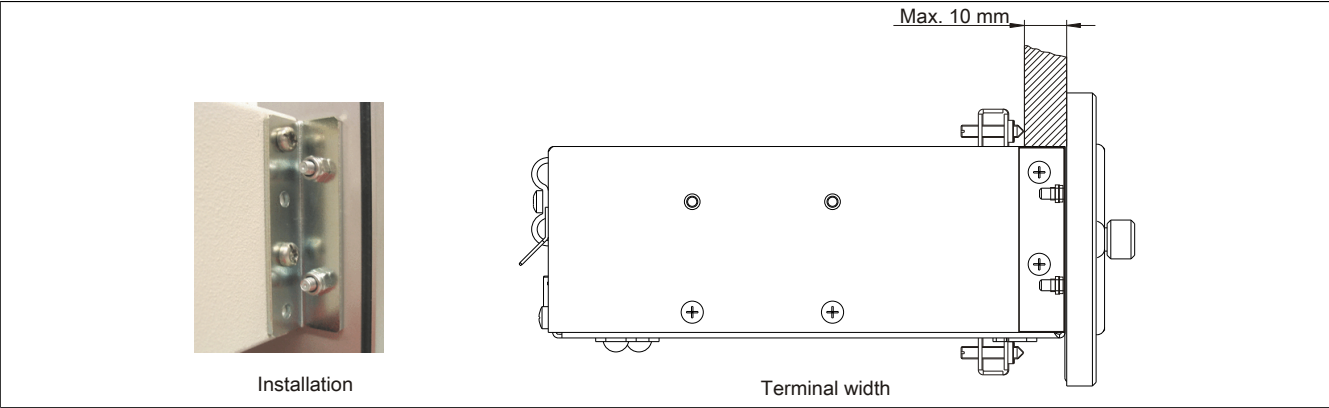


Figure 101: Front cover mounting and installation depth

5.2.6.1 Cutout installation

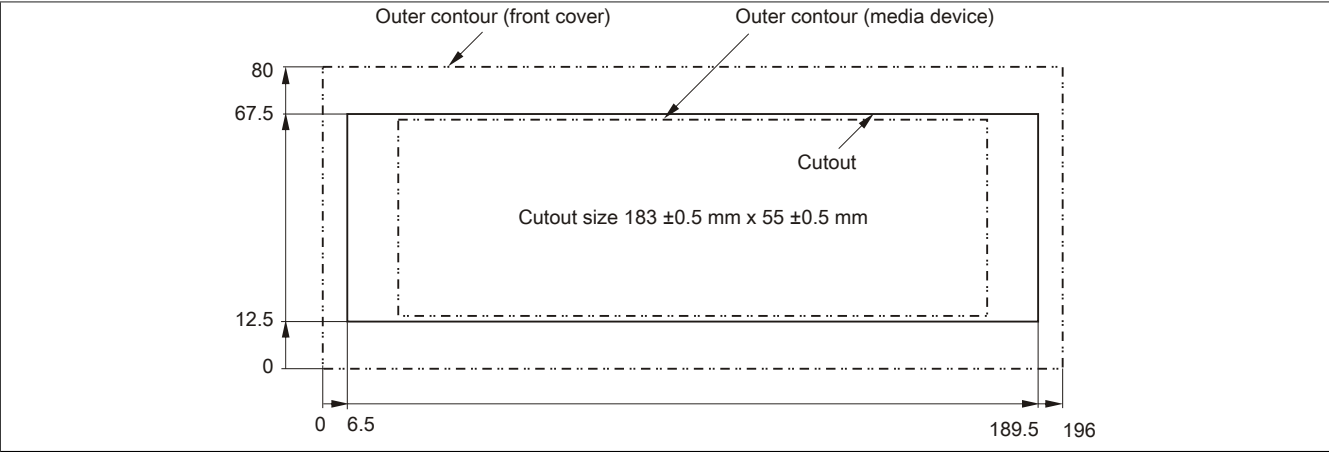


Figure 102: Installation cutout - USB media drive with front cover

6 USB flash drive

6.1 5MMUSB.2048-01

6.1.1 General information

USB flash drives are storage media that are easy to replace. Because of their fast data transfer (USB 2.0), USB flash drives are ideal for use as portable data storage. Without requiring additional drivers ("hot plugging", except in the case of Windows 98SE), the USB flash drive can immediately act as an additional drive where data can be read or written.

Information:

Due to the vast quantity of USB flash drives available on the market as well as their short product life cycle, we reserve the right to supply alternative products at any time. The following measures may therefore be necessary in order to boot from these flash drives as well:

- The flash drive must be reformatted or in some cases even repartitioned (set active partition).
 - The flash drive must be the first bootable device in the BIOS boot order; alternatively, the IDE controllers can be disabled in BIOS. This can be avoided in most cases if the "fdisk /mbr" command is additionally executed on the USB flash drive.
- USB 1.1, USB 2.0
 - High transfer rate
 - High data storage
 - Ambient temperature during operation: 0 to 70°C

6.1.2 Order data

Model number	Short description	Figure
	USB accessories	
5MMUSB.2048-01	USB 2.0 flash drive, 2048 MB, B&R	

Table 194: 5MMUSB.2048-01 - Order data

6.1.3 Technical data

Product ID	5MMUSB.2048-01
General information	
Data retention	>10 years
LEDs	1 LED (green) ¹⁾
MTBF	>3,000,000 hours
Type	USB 1.1, USB 2.0
Maintenance	None
Certification CE	Yes
Interfaces	
USB	
Type	USB 1.1, USB 2.0
Connection	To each USB type A interface
Transfer rate	Low speed (1.5 Mbit/s), full speed (12 Mbit/s), high speed (480 Mbit/s)
Sequential reading	Max. 31 MB/s
Sequential writing	Max. 30 MB/s
Support	
Operating systems	
Windows 7	Yes
Windows XP Professional	Yes
Windows XP Embedded	Yes
Windows ME	Yes
Windows 2000	Yes
Windows CE 5.0	Yes
Windows CE 4.2	Yes
Electrical characteristics	
Power consumption	Max. 500 µA sleep mode, max. 120 mA read/write

Table 195: 5MMUSB.2048-01 - Technical data

Product ID	5MMUSB.2048-01
Environmental conditions	
Temperature	
Operation	0 to 70°C
Storage	-50 to 100°C
Transport	-50 to 100°C
Relative humidity	
Operation	85%, non-condensing
Storage	85%, non-condensing
Transport	85%, non-condensing
Vibration	
Operation	20 to 2000 Hz: 20 g (peak)
Storage	20 to 2000 Hz: 20 g (peak)
Transport	20 to 2000 Hz: 20 g (peak)
Shock	
Operation	max. 1500g (peak)
Storage	max. 1500g (peak)
Transport	max. 1500g (peak)
Altitude	
Operation	Max. 3048 m
Storage	Max. 12192 m
Transport	Max. 12192 m
Mechanical characteristics	
Dimensions	
Width	17.97 mm
Length	67.85 mm
Height	8.35 mm

Table 195: 5MMUSB.2048-01 - Technical data

1) Signals data transfer (send and receive).

6.1.4 Temperature humidity diagram

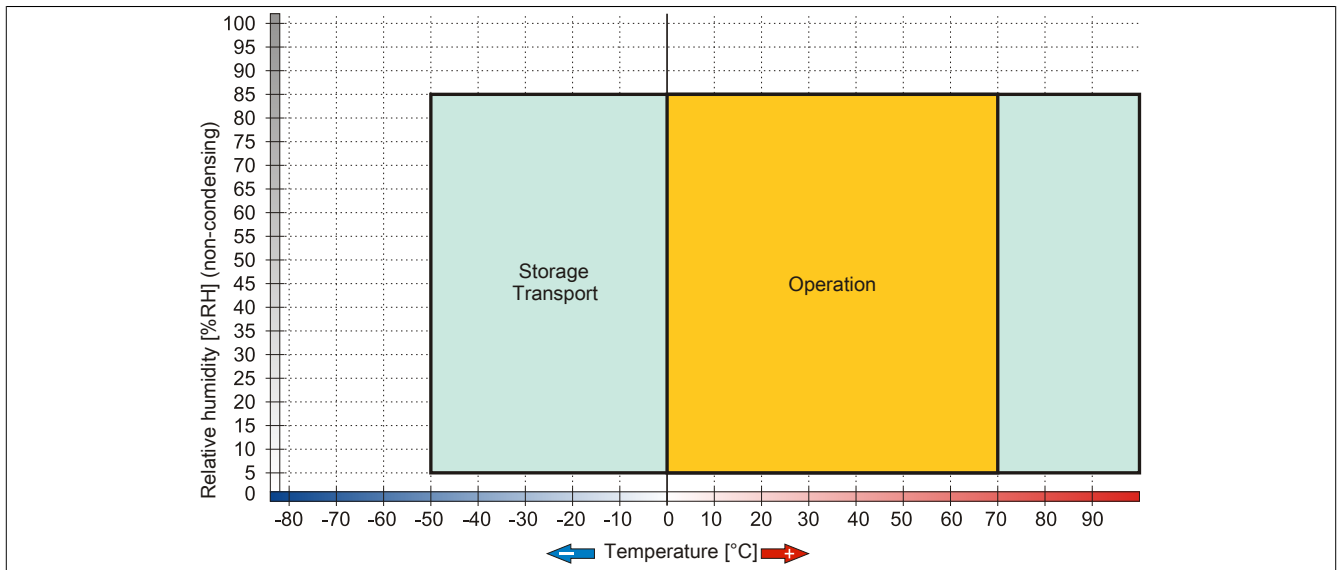


Figure 103: 5MMUSB.2048-01 - Temperature humidity diagram

7 Cables

7.1 DVI cables

7.1.1 5CADVI.0xxx-00

7.1.1.1 General information

5CADVI.0xxx-00 DVI cables are designed to be used for inflexible applications.

Caution!

Power must be turned off before plugging in and unplugging cables.

7.1.1.2 Order data

Model number	Short description	Figure
	DVI cable	
5CADVI.0018-00	DVI-D cable, 1.8 m.	
5CADVI.0050-00	DVI-D cable, 5 m.	
5CADVI.0100-00	DVI-D cable, 10 m.	

Table 196: 5CADVI.0018-00, 5CADVI.0050-00, 5CADVI.0100-00 - Order data

7.1.1.3 Technical data

Product ID	5CADVI.0018-00		5CADVI.0050-00		5CADVI.0100-00	
General information						
Certification		Yes Yes Yes				
CE						
cULus						
GL						
Cable structure						
Wire cross section		AWG 28				
Shield		Individual cable pairs and entire cable				
Cable shielding		Tinned Cu mesh, optical coverage > 86%				
Outer sheathing		PVC Beige AWM STYLE 20276 80°C 30V VW1 DVI DIGITAL SINGLE LINK DER AN				
Material						
Color						
Labeling						
Connector						
Type		2x DVI-D (18+1), male				
Connection cycles		100				
Electrical characteristics						
Conductor resistance		Max. 237 Ω/km				
Insulation resistance		Min. 100 MΩ/km				
Mechanical characteristics						
Dimensions		1.8 m ±50 mm 5 m ±80 mm 10 m ±100 mm Max. 8.5 mm				
Length						
Diameter						
Flex radius		≥ 5x cable diameter (plug - ferrite magnet and ferrite magnet - ferrite magnet)				
Weight		Approx. 260 g		Approx. 460 g		Approx. 790 g

Table 197: 5CADVI.0018-00, 5CADVI.0050-00, 5CADVI.0100-00 - Technical data

7.1.1.4 Flex radius specifications

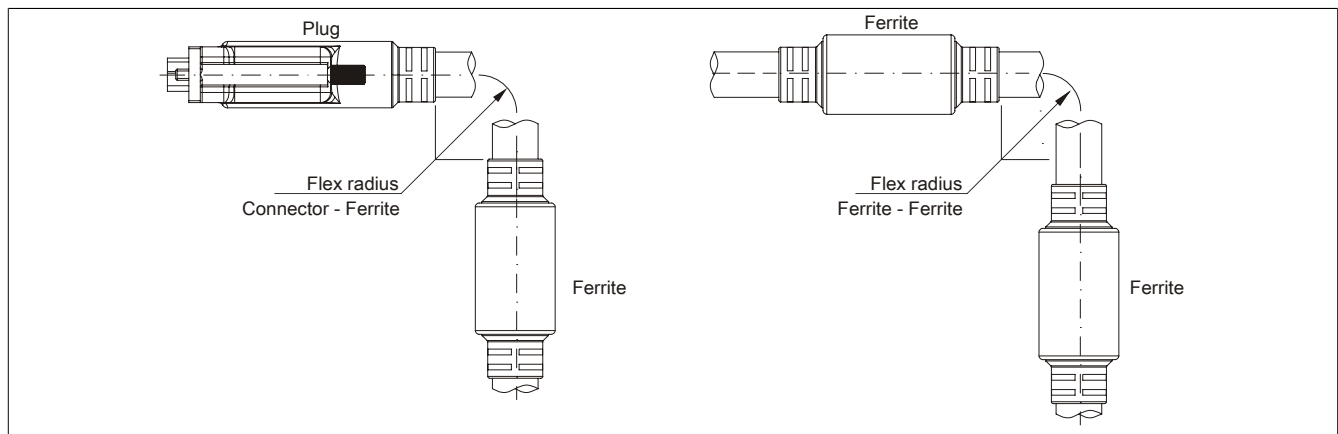


Figure 104: Flex radius specifications

7.1.1.5 Dimensions

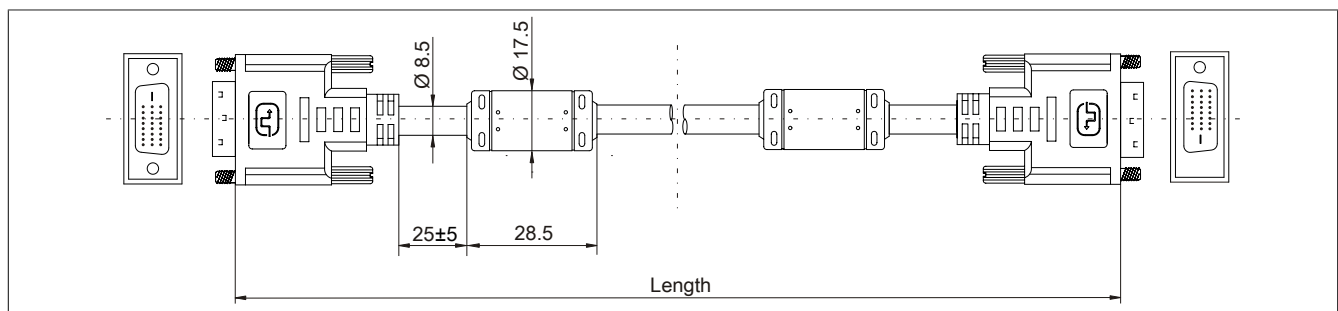


Figure 105: 5CADVI.0xxx-00 - Dimensions

7.1.1.6 Cable pinout

Warning!

If you choose to build a suitable cable yourself, it should be wired according to these specifications. If a self-built cable is used, B&R cannot guarantee that it will function properly. All cables provided by B&R are guaranteed to function properly.

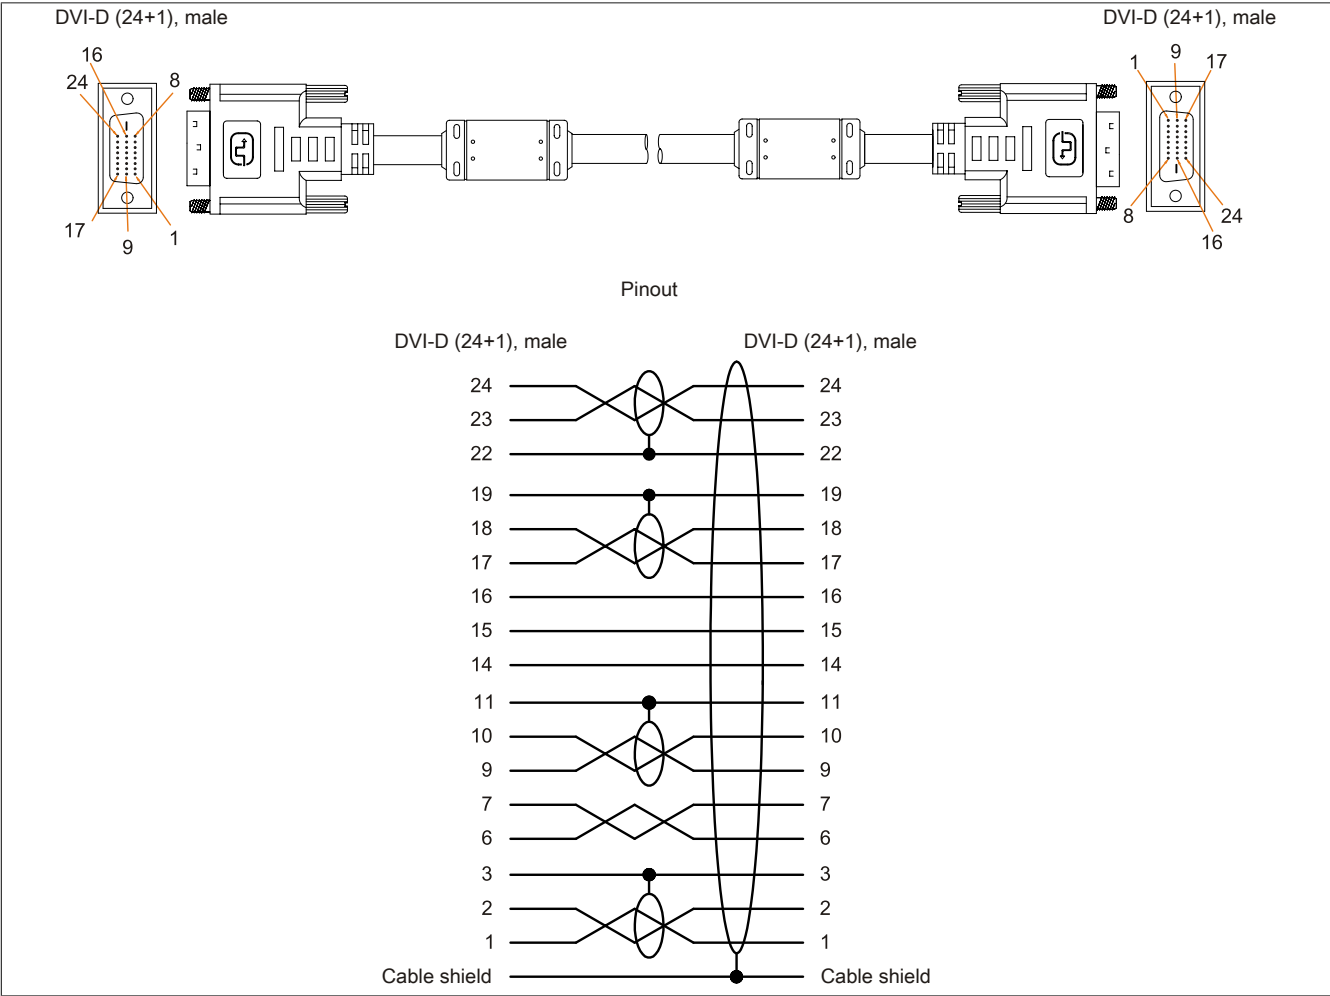


Figure 106: 5CADVI.0xxx-00 - Pinout

7.2 SDL cables

7.2.1 5CASDL.0xxx-00

7.2.1.1 General information

5CASDL.0xxx-00 SDL cables are designed to be used for inflexible applications. Use of the SDL flex cable 5CASDL.0xxx-03 is required for flexible applications (e.g. swing arm systems).

Caution!

Power must be turned off before plugging in and unplugging cables.

7.2.1.2 Order data

Model number	Short description	Figure
	SDL cables	
5CASDL.0018-00	SDL cable, 1.8 m.	
5CASDL.0050-00	SDL cable, 5 m.	
5CASDL.0100-00	SDL cable, 10 m.	
5CASDL.0150-00	SDL cable, 15 m.	
5CASDL.0200-00	SDL cable, 20 m.	
5CASDL.0250-00	SDL cable, 25 m.	
5CASDL.0300-00	SDL cable, 30 m.	

Table 198: 5CASDL.0018-00, 5CASDL.0050-00, 5CASDL.0100-00, 5CASDL.0150-00, 5CASDL.0200-00, 5CASDL.0250-00, 5CASDL.0300-00 - Order data

7.2.1.3 Technical data

Product ID	5CASDL. 0018-00	5CASDL. 0050-00	5CASDL. 0100-00	5CASDL. 0150-00	5CASDL. 0200-00	5CASDL. 0250-00	5CASDL. 0300-00
General information							
Certification	Yes Yes Yes						
CE							
cULus							
GL							
Cable structure							
Wire cross section	AWG 28		AWG 24				
Shield	Individual cable pairs and entire cable						
Cable shielding	Tinned Cu mesh, optical coverage > 85%						
Outer sheathing	PVC Black E74020-C (UL) AWM STYLE 20176 80°C 30V VW-1 DVI DIGITAL LINK						
Material							
Color							
Labeling							
Connector							
Type	2x DVI-D (24+1), male						
Connection cycles	100						
Contacts	Gold plated						
Mechanical protection	Metal cover with crimped stress relief						
Electrical characteristics							
Conductor resistance	- ≤93 Ω/km -						
AWG 24							
AWG 28							
Insulation resistance	Min. 10 MΩ/km						
Mechanical characteristics							
Dimensions	1.8 m ±30 mm 5 m ±30 mm 10 m ±50 mm 15 m ±100 mm 20 m ±100 mm 25 m ±100 mm 30 m ±100 mm Typ. 8.6 ±0.2 mm Max. 9 mm Typ. 11 ±0.2 mm Max. 11.5 mm						
Length							
Diameter							
Flex radius	≥ 5x cable diameter (plug - ferrite magnet and ferrite magnet - ferrite magnet)						
Flexibility	Limited flexibility; valid for ferrite magnet - ferrite magnet (tested 100 cycles with 5x cable diameter, 20 cycles / minute)						
Weight	Approx. 300 g	Approx. 580 g	Approx. 1500 g	Approx. 2250 g	Approx. 2880 g	Approx. 4800 g	Approx. 5520 g

Table 199: 5CASDL.0018-00, 5CASDL.0050-00, 5CASDL.0100-00, 5CASDL.0150-00, 5CASDL.0200-00, 5CASDL.0250-00, 5CASDL.0300-00 - Technical data

7.2.1.4 Flex radius specifications

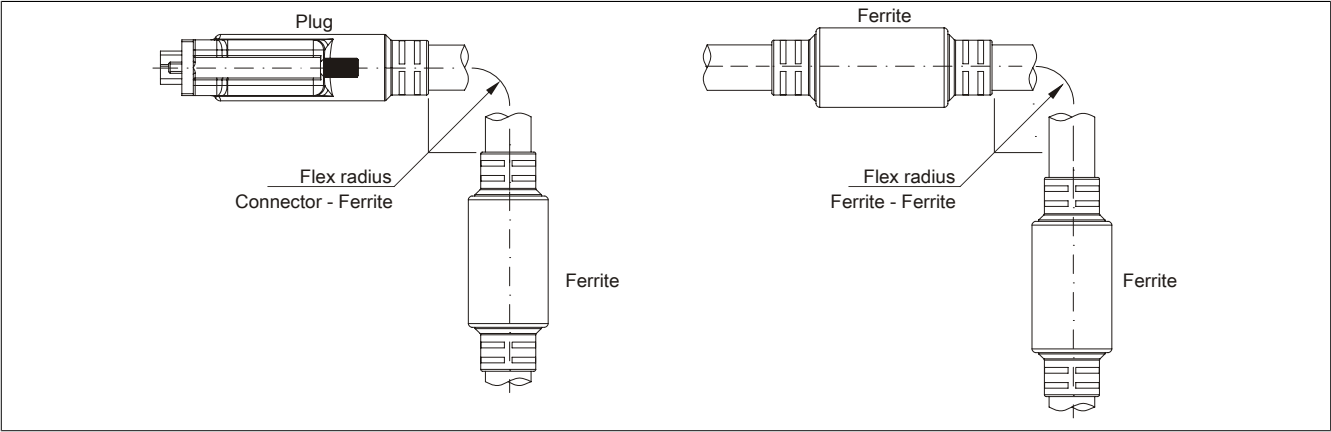


Figure 107: Flex radius specifications

7.2.1.5 Dimensions

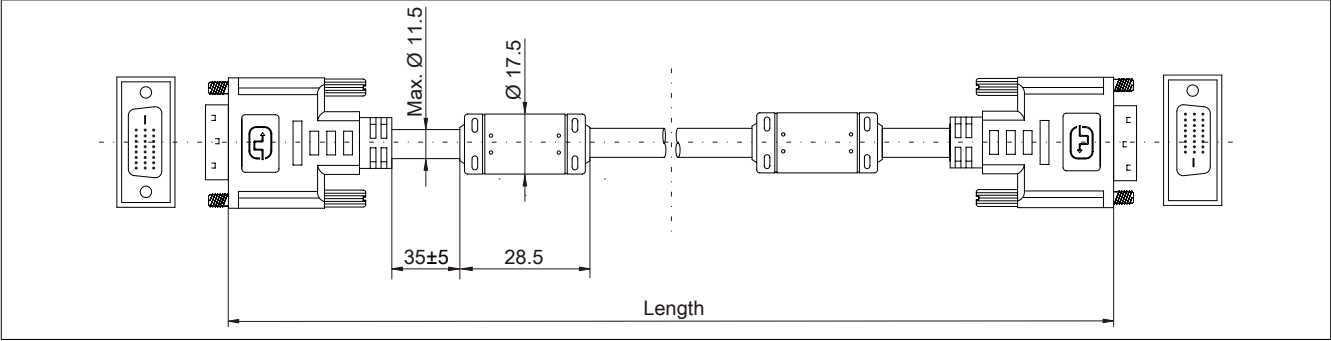


Figure 108: 5CASDL.0xxx-00- Dimensions

7.2.1.6 Cable pinout

Warning!

If you choose to build a suitable cable yourself, it should be wired according to these specifications.

If a self-built cable is used, B&R cannot guarantee that it will function properly. All cables provided by B&R are guaranteed to function properly.

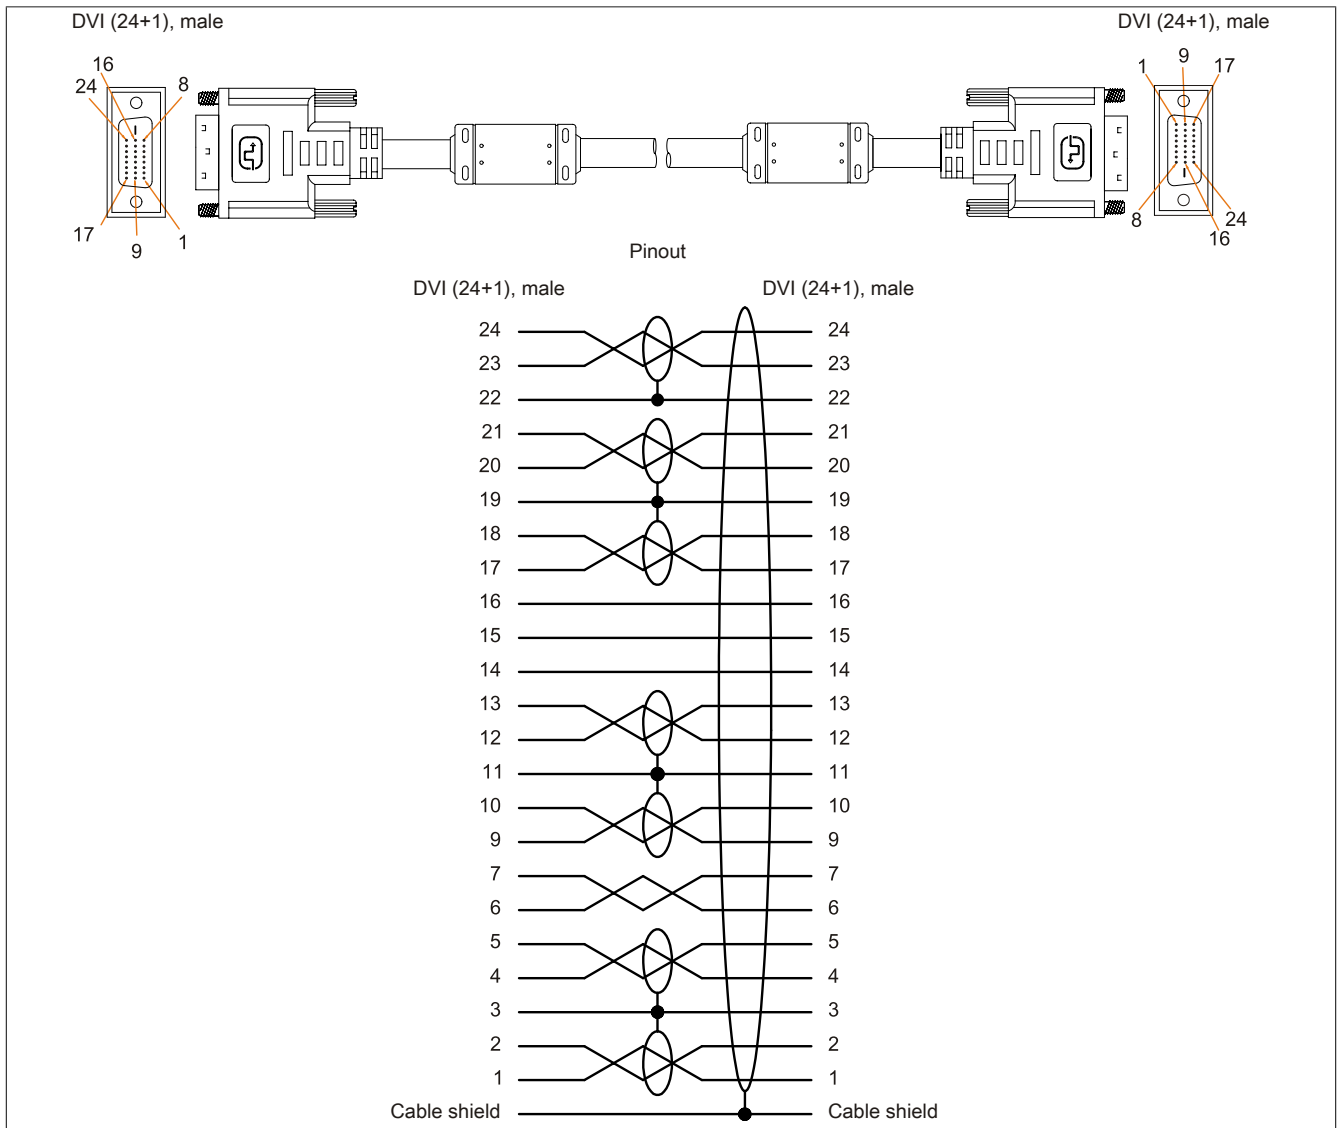


Figure 109: 5CASDL.0xxx-00- Pinout

7.3 SDL cables with 45° connector

7.3.1 5CASDL.0xxx-01

7.3.1.1 General information

5CASDL.0xxx-01 SDL cables with 45° plugs are designed for a fixed layout.

Caution!

Power must be turned off before plugging in and unplugging cables.

7.3.1.2 Order data

Model number	Short description	Figure
	SDL cable - 45° connector	
5CASDL.0018-01	SDL cable; 45° connector, 1.8 m.	
5CASDL.0050-01	SDL cable; 45° connector, 5 m.	
5CASDL.0100-01	SDL cable; 45° connector, 10 m.	
5CASDL.0150-01	SDL cable; 45° connector, 15 m.	

Table 200: 5CASDL.0018-01, 5CASDL.0050-01, 5CASDL.0100-01, 5CASDL.0150-01 - Order data

7.3.1.3 Technical data

Product ID	5CASDL.0018-01	5CASDL.0050-01	5CASDL.0100-01	5CASDL.0150-01
General information				
Certification	Yes Yes Yes			
CE				
cULus				
GL				
Cable structure				
Wire cross section	AWG 28		AWG 24	
Shield	Individual cable pairs and entire cable			
Cable shielding	Tinned Cu mesh, optical coverage > 85%			
Outer sheathing	PVC Black			
Material				
Color				
Connector				
Type	2x DVI-D (24+1), male			
Connection cycles	100			
Contacts	Gold plated			
Mechanical protection	Metal cover with crimped stress relief			
Electrical characteristics				
Conductor resistance	≤93 Ω/km -			
AWG 24				
AWG 28				
Insulation resistance	Min. 10 MΩ/km			
Mechanical characteristics				
Dimensions	1.8 m ±30 mm 5 m ±50 mm 10 m ±100 mm 15 m ±100 mm Max. 9 mm Max. 11.5 mm			
Length				
Diameter				
Flex radius	≥ 5x cable diameter (plug - ferrite magnet and ferrite magnet - ferrite magnet)			
Fixed installation				
Flexibility	Limited flexibility; valid for ferrite magnet - ferrite magnet (tested 100 cycles with 5x cable diameter, 20 cycles / minute)			
Weight	Approx. 300 g	Approx. 590 g	Approx. 2800 g	Approx. 2860 g

Table 201: 5CASDL.0018-01, 5CASDL.0050-01, 5CASDL.0100-01, 5CASDL.0150-01 - Technical data

7.3.1.4 Flex radius specifications

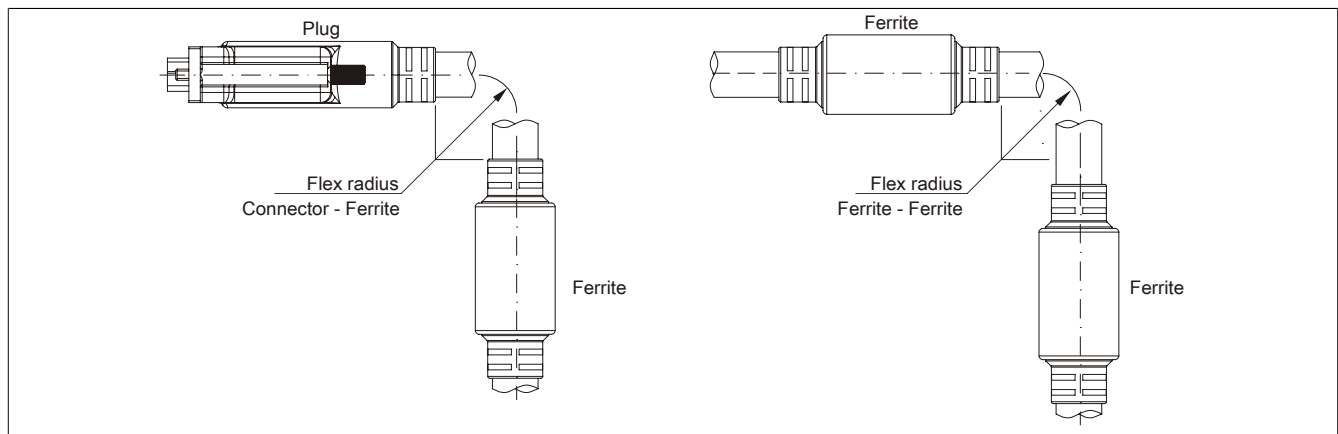


Figure 110: Flex radius specifications

7.3.1.5 Dimensions

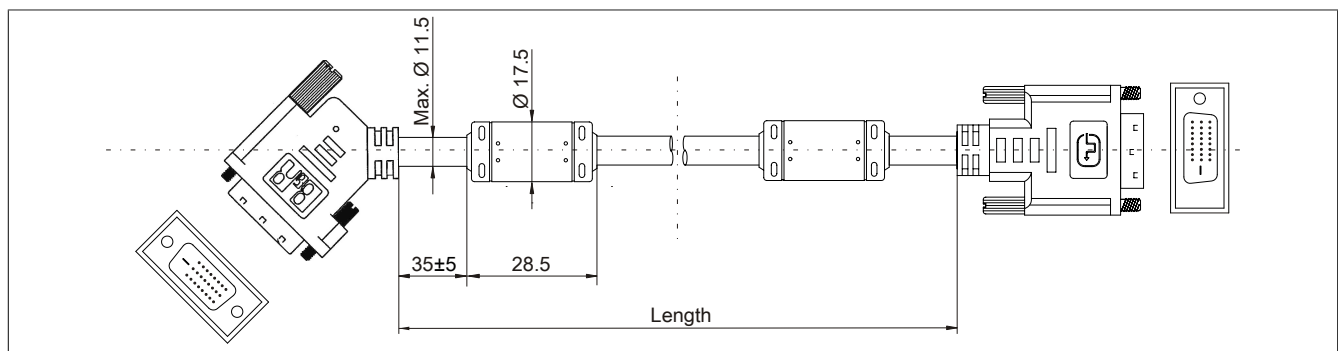


Figure 111: 5CASDL.0xxx-01 - Dimensions

7.3.1.6 Cable pinout

Warning!

If you choose to build a suitable cable yourself, it should be wired according to these specifications. If a self-built cable is used, B&R cannot guarantee that it will function properly. All cables provided by B&R are guaranteed to function properly.

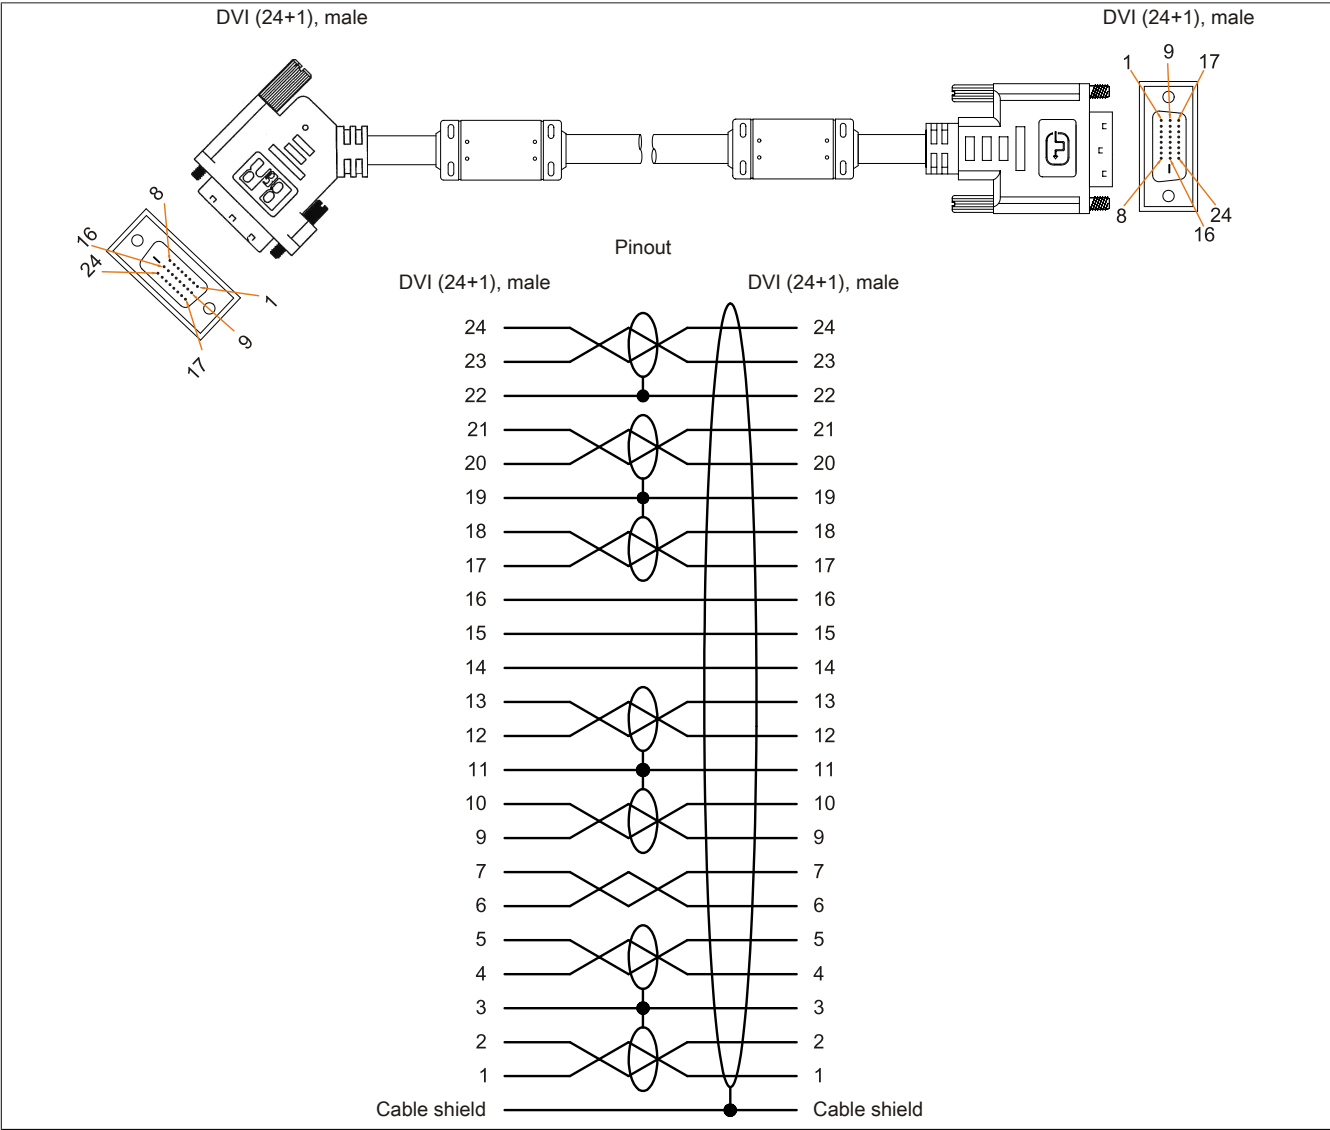


Figure 112: 5CASDL.0xxx-01 - Pinout

7.4 SDL flex cables

7.4.1 5CASDL.0xxx-03

7.4.1.1 General information

5CASDL.0xxx-03 SDL flex cables are designed for use in both inflexible and flexible applications (e.g. swing arm systems).

Caution!

Power must be turned off before plugging in and unplugging cables.

7.4.1.2 Order data

Model number	Short description	Figure
	SDL flex cable	
5CASDL.0018-03	SDL Cable flex, 1.8 m.	
5CASDL.0050-03	SDL cable flex, 5 m.	
5CASDL.0100-03	SDL cable flex, 10 m.	
5CASDL.0150-03	SDL cable flex, 15 m.	
5CASDL.0200-03	SDL cable flex, 20 m.	
5CASDL.0250-03	SDL cable flex, 25 m.	
5CASDL.0300-03	SDL cable flex, 30 m.	

Table 202: 5CASDL.0018-03, 5CASDL.0050-03, 5CASDL.0100-03, 5CASDL.0150-03, 5CASDL.0200-03, 5CASDL.0250-03, 5CASDL.0300-03 - Order data

7.4.1.3 Technical data

Product ID	5CASDL. 0018-03	5CASDL. 0050-03	5CASDL. 0100-03	5CASDL. 0150-03	5CASDL. 0200-03	5CASDL. 0250-03	5CASDL. 0300-03
General information							
Certification	Yes						
CE							
cULus							
GL							
Cable structure							
Wire cross section	AWG 24 (control wires) AWG 26 (DVI, USB, data)						
Properties	Free of halogen and silicon						
Shield	Individual cable pairs and entire cable						
Cable shielding	Aluminum foil clad + tinned copper mesh						
Outer sheathing	Special TMPU - semi gloss Black (B&R) SDL Cable (UL) AWM 20236 80°C 30V E 63216						
Material							
Color							
Labeling							
Connector							
Type	2x DVI-D (24+1), male						
Connection cycles	Min. 200						
Contacts	Gold plated						
Mechanical protection	Metal cover with crimped stress relief						
Electrical characteristics							
Operating voltage	≤ 30 V						
Test voltage	1 kV 0.5 kV						
Wire/Wire							
Wire/Shield							
Wave impedance	100 ±10 Ω						
Conductor resistance	≤95 Ω/km ≤145 Ω/km						
AWG 24							
AWG 26							
Insulation resistance	> 200 MΩ/km						
Operating conditions							
Approbation	UL AWM 20236 80 °C 30 V						
Flame resistant	In accordance with UL758 (cable vertical flame test)						
Oil and hydrolysis resistance	According to VDE 0282-10						

Table 203: 5CASDL.0018-03, 5CASDL.0050-03, 5CASDL.0100-03, 5CASDL.0150-03, 5CASDL.0200-03, 5CASDL.0250-03, 5CASDL.0300-03 - Technical data

Product ID	5CASDL. 0018-03	5CASDL. 0050-03	5CASDL. 0100-03	5CASDL. 0150-03	5CASDL. 0200-03	5CASDL. 0250-03	5CASDL. 0300-03
Environmental conditions							
Temperature							
Storage							
Moving							
Fixed installation							
Mechanical characteristics							
Dimensions	1.8 m ±20 mm 5 m ±45 mm 10 m ±90 mm 15 m ±135 mm 20 m ±180 mm 25 m ±225 mm 30 m ±270 mm Max. 12 mm						
Length							
Diameter							
Flex radius	≥ 6x cable diameter (from plug - ferrite magnet) ≥ 10x cable diameter (from ferrite magnet - ferrite magnet) ≥ 15x cable diameter (from ferrite magnet - ferrite magnet)						
Fixed installation							
Flexible installation							
Flexibility	Flexible; valid for ferrite magnet - ferrite magnet (tested 300,000 cycles with 15x cable diameter, 4800 cycles / hour)						
Drag chain data	300,000 4800 cycles/hour 180 mm; 15x cable diameter 460 mm						
Flex cycles							
Velocity							
Flex radius							
Hub							
Weight	Approx. 460 g	Approx. 1020 g	Approx. 1940 g	Approx. 2840 g	Approx. 3740 g	Approx. 4560 g	Approx. 5590 g
Tension							
During operation							
During installation							

Table 203: 5CASDL.0018-03, 5CASDL.0050-03, 5CASDL.0100-03, 5CASDL.0150-03, 5CASDL.0200-03, 5CASDL.0250-03, 5CASDL.0300-03 - Technical data

7.4.1.4 Flex radius specifications

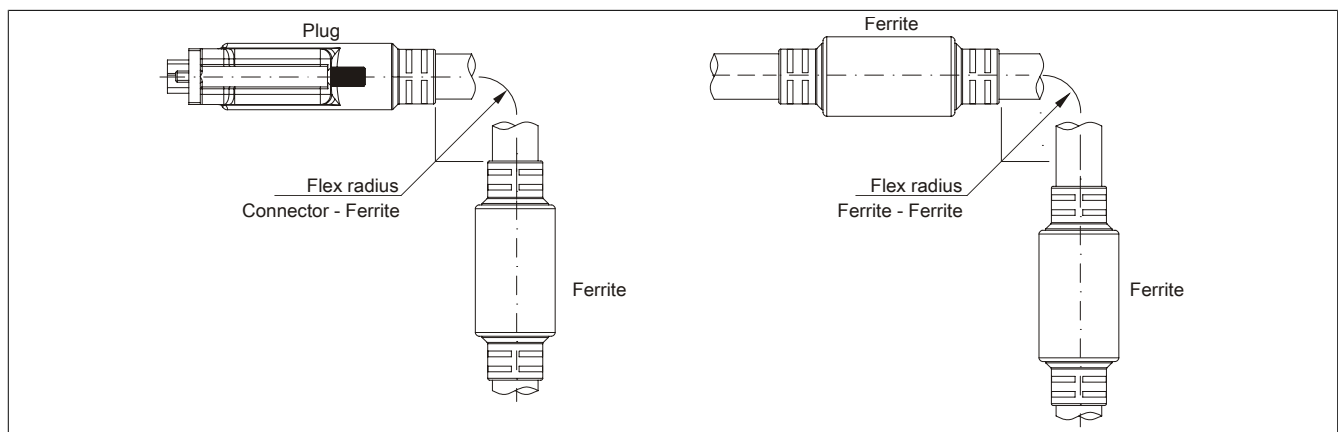


Figure 113: Flex radius specifications

7.4.1.5 Dimensions

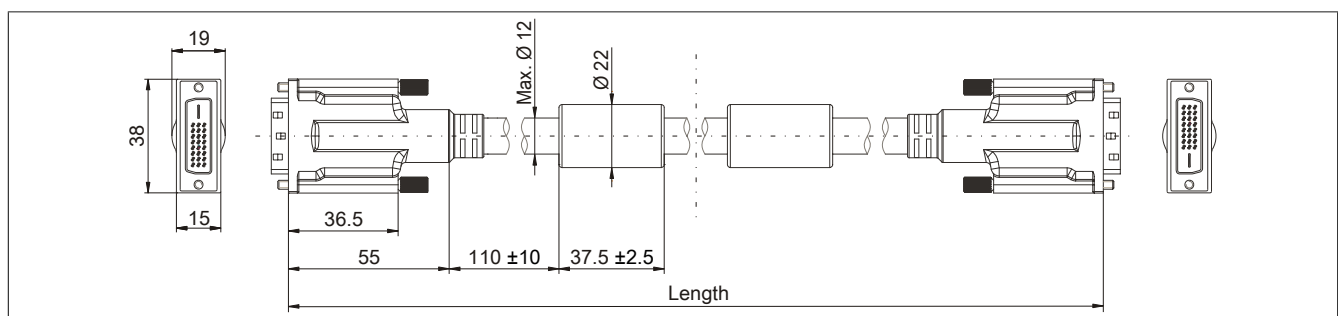


Figure 114: 5CASDL.0xxx-03 - Dimensions

7.4.1.6 Structure

Element	Assignment	Cross section	
DVI	TMDS data 0	26 AWG	
	TMDS data 1	26 AWG	
	TMDS data 2	26 AWG	
	TMDS cycle	26 AWG	
USB	XUSB0	26 AWG	
	XUSB1	26 AWG	
Data	SDL	26 AWG	
	DDC cycle	24 AWG	
	DDC data	24 AWG	
	+5 V	24 AWG	
	Mass	24 AWG	
Control wires	Hot plug detect	24 AWG	
			Control wires - DDC clock - DDC data - +5 V - Ground - Hot Plug detect

Table 204: 5CASDL.0xxx-03 SDL flex cables - Structure

7.4.1.7 Cable pinout

Warning!

If you choose to build a suitable cable yourself, it should be wired according to these specifications.

If a self-built cable is used, B&R cannot guarantee that it will function properly. All cables provided by B&R are guaranteed to function properly.

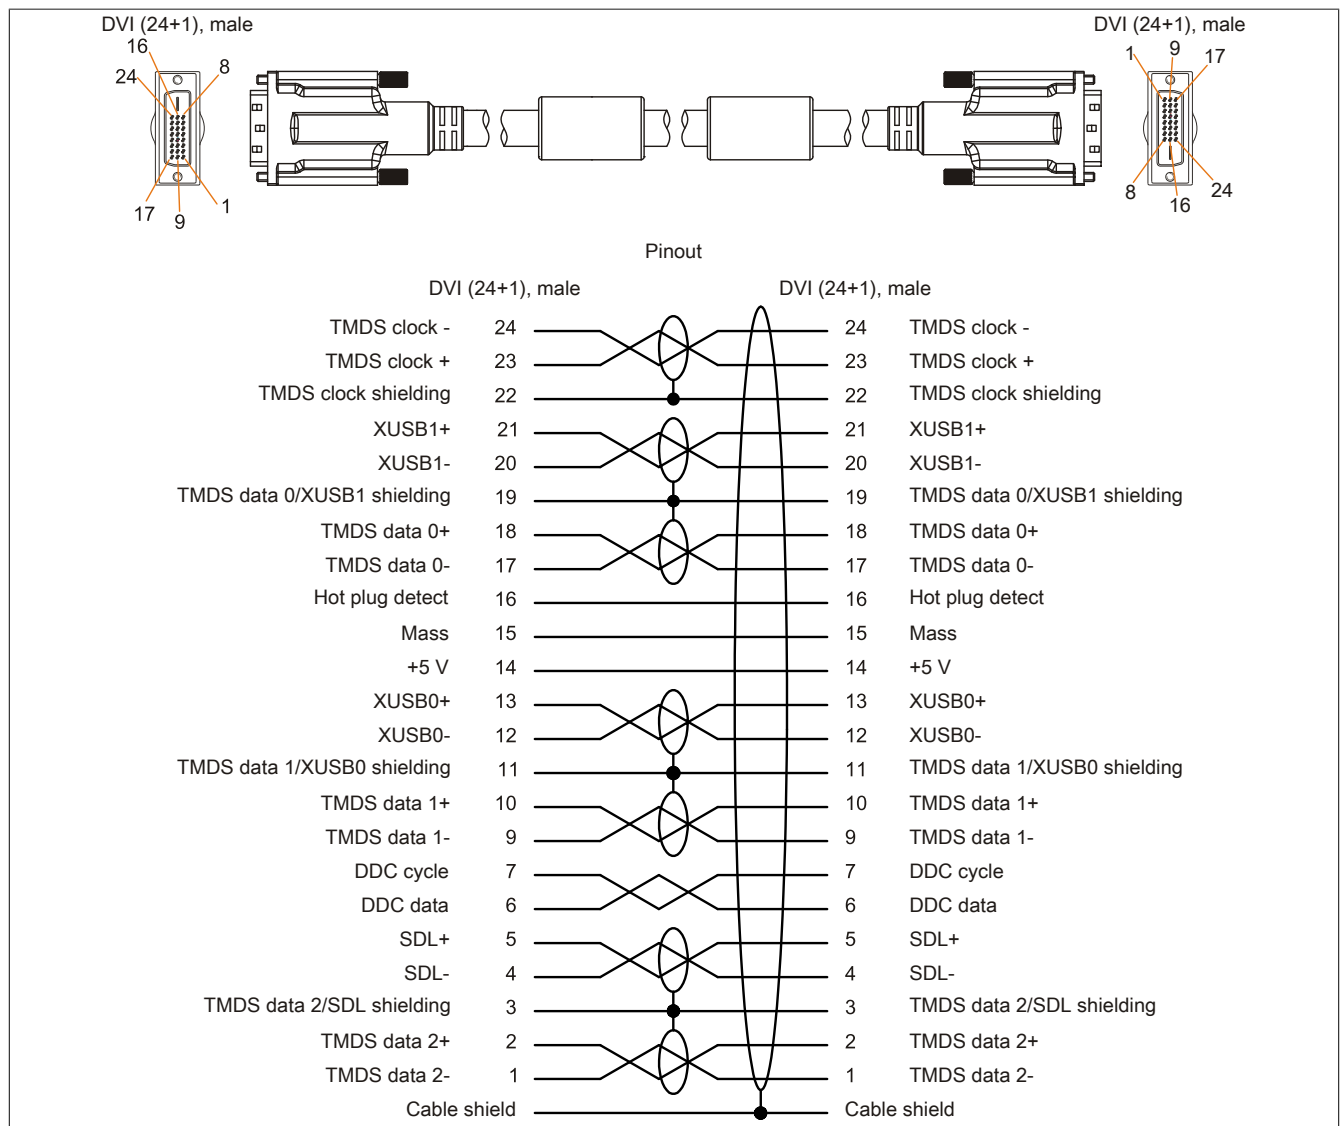


Figure 115: 5CASDL.0xxx-03- Pinout

7.5 SDL flex cables with extender

7.5.1 5CASDL.0xx0-13

7.5.1.1 General information

5CASDL.0xx0-13 SDL flex cables with an extender are designed for use in both inflexible and flexible applications (e.g. swing arm systems).

Caution!

Power must be turned off before plugging in and unplugging cables.

7.5.1.2 Order data


Model number	Short description	Figure
	SDL flex cable	
5CASDL.0300-13	SDL cable flex with extender, 30 m.	
5CASDL.0400-13	SDL cable flex with extender, 40 m.	
5CASDL.0430-13	SDL Cable flex with extender, 43 m.	

Table 205: 5CASDL.0300-13, 5CASDL.0400-13, 5CASDL.0430-13 - Order data

7.5.1.3 Technical data

Product ID	5CASDL.0300-13	5CASDL.0400-13	5CASDL.0430-13
General information			
Certification			
CE	Yes		
cULus	Yes		
GL	Yes		
Cable structure			
Wire cross section	AWG 24 (control wires) AWG 26 (DVI, USB, data)		
Properties	Free of halogen and silicon		
Shield	Individual cable pairs and entire cable		
Cable shielding	Aluminum foil clad + tinned copper mesh		
Outer sheathing			
Material	Special TMPU - semi gloss		
Color	Black		
Labeling	(B&R) SDL cable (UL) AWM 20236 80°C 30V E63216		
Connector			
Type	2x DVI-D (24+1), male		
Connection cycles	Min. 200		
Contacts	Gold plated		
Mechanical protection	Metal cover with crimped stress relief		
Electrical characteristics			
Operating voltage	≤ 30 V		
Test voltage			
Wire/Wire	1 kV		
Wire/Shield	0.5 kV		
Wave impedance	100 ±10 Ω		
Conductor resistance			
AWG 24	≤95 Ω/km		
AWG 26	≤145 Ω/km		
Insulation resistance	> 200 MΩ/km		
Operating conditions			
Approbation	UL AWM 20236 80 °C 30 V		
Flame resistant	In accordance with UL758 (cable vertical flame test)		
Oil and hydrolysis resistance	According to VDE 0282-10		
Environmental conditions			
Temperature			
Storage	-20 to 60°C		
Moving	-5 to 60°C		
Fixed installation	-20 to 60°C		

Table 206: 5CASDL.0300-13, 5CASDL.0400-13, 5CASDL.0430-13 - Technical data

Product ID	5CASDL.0300-13	5CASDL.0400-13	5CASDL.0430-13
Mechanical characteristics			
Dimensions			
Length	30 m ±280 mm	40 m ±380 mm	43 m ±410 mm
Diameter		Max. 12 mm	
Extender box			
Width		35 mm	
Length		125 mm	
Height		18.5 mm	
Flex radius			
Fixed installation		$\geq 6x$ cable diameter (from plug - ferrite magnet) $\geq 10x$ cable diameter (from ferrite magnet - ferrite magnet)	
Flexible installation		$\geq 15x$ cable diameter (from ferrite magnet - ferrite magnet)	
Flexibility		Flexible; valid for ferrite magnet - ferrite magnet (tested 300,000 cycles with 15x cable diameter, 4800 cycles / hour)	
Drag chain data			
Flex cycles		300,000	
Velocity		4800 cycles/hour	
Flex radius		180 mm; 15x cable diameter	
Hub		460 mm	
Weight	Approx. 5430 g	Approx. 7200 g	Approx. 7790 g
Tension			
During operation		≤ 50 N	
During installation		≤ 400 N	

Table 206: 5CASDL.0300-13, 5CASDL.0400-13, 5CASDL.0430-13 - Technical data

7.5.1.4 Flex radius specifications

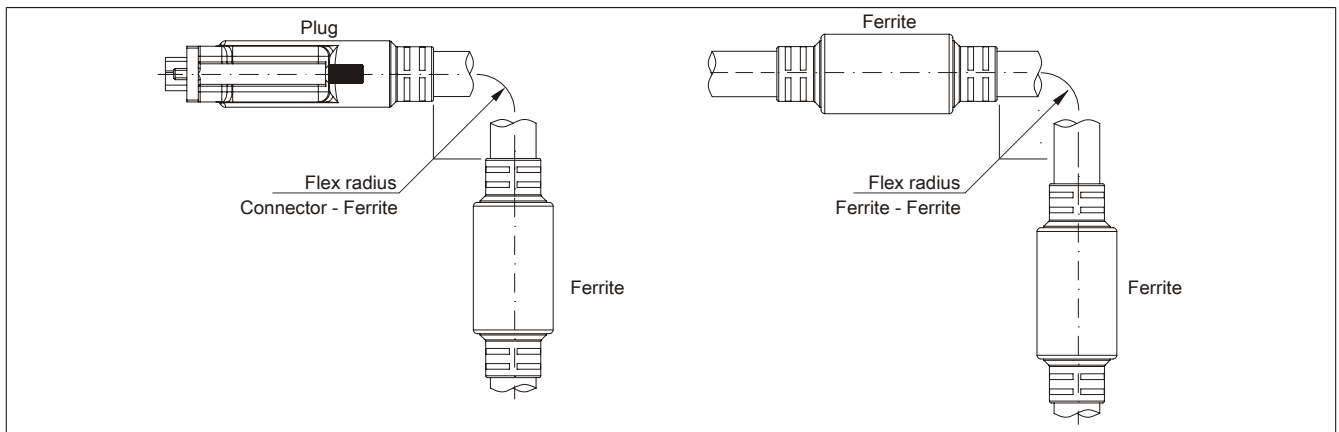


Figure 116: Flex radius specifications

7.5.1.5 Dimensions

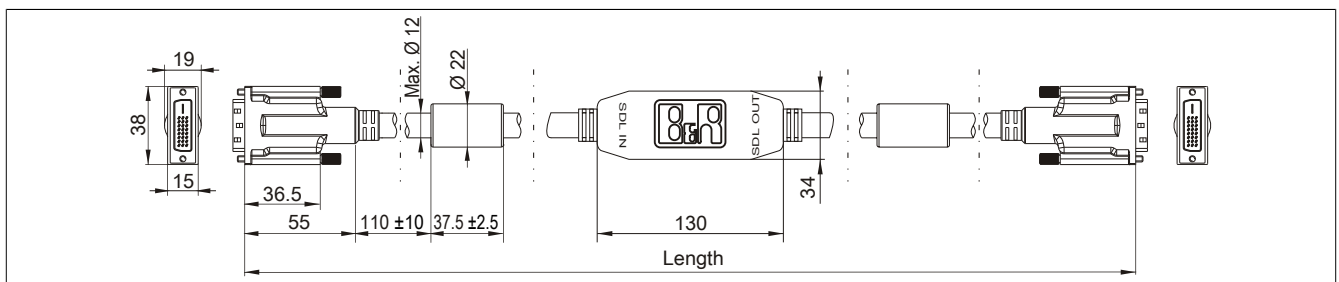


Figure 117: 5CASDL.0xx0-13- Dimensions

7.5.1.6 Cable pinout

Warning!

If you choose to build a suitable cable yourself, it should be wired according to these specifications. If a self-built cable is used, B&R cannot guarantee that it will function properly. All cables provided by B&R are guaranteed to function properly.

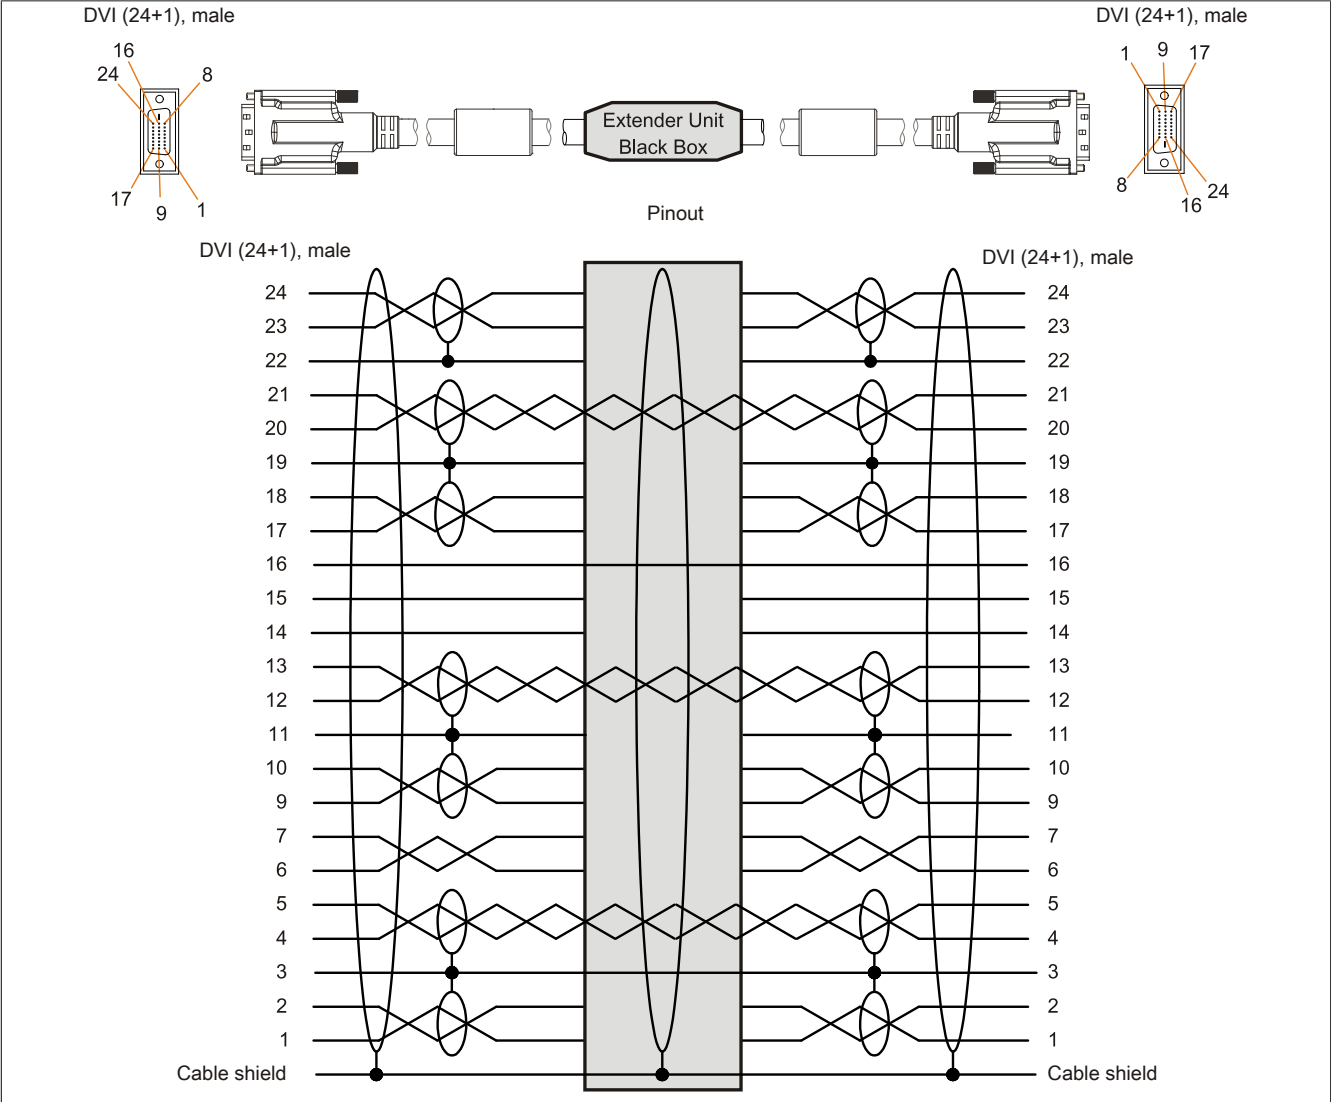


Figure 118: 5CASDL.0xx0-13 - Pinout

7.5.1.7 Cable connection

SDL flex cables with an extender must be connected between the B&R Industrial PC and the Automation Panel display unit in the correct direction. The signal direction is indicated on the extender for this purpose.

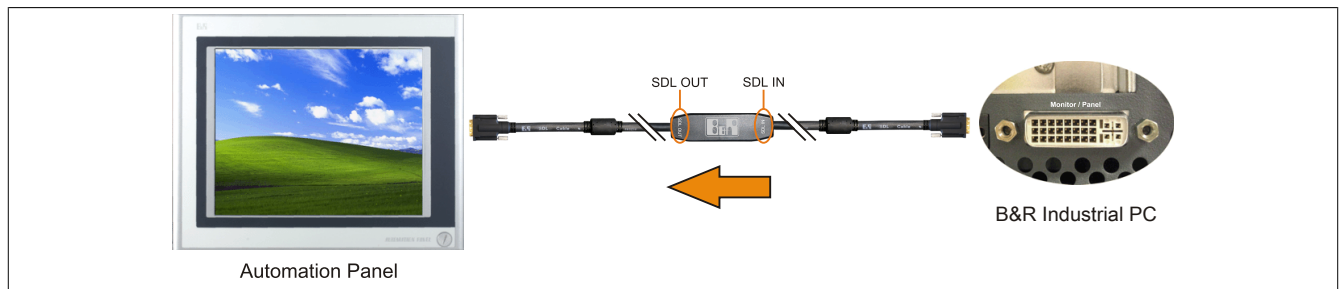


Figure 119: Example of the signal direction for an SDL flex cable with extender

7.6 USB cables

7.6.1 5CAUSB.00xx-00

7.6.1.1 General information

USB cables are designed to achieve USB 2.0 transfer speeds.

7.6.1.2 Order data

Model number	Short description	Figure
	USB cable	
5CAUSB.0018-00	USB 2.0 connecting cable type A - type B, 1.8 m.	
5CAUSB.0050-00	USB 2.0 connecting cable type A - type B, 5 m.	

Table 207: 5CAUSB.0018-00, 5CAUSB.0050-00 - Order data

7.6.1.3 Technical data

Product ID	5CAUSB.0018-00	5CAUSB.0050-00
General information		
Certification		
CE	Yes	
cULus	Yes	
Cable structure		
Wire cross section	AWG 24, 28	
Shield	Entire cable	
Outer sheathing		
Color	Beige	
Connector		
Type	USB type A male and USB type B male	
Mechanical characteristics		
Dimensions		
Length	1.8 m ±30 mm	5 m ±50 mm
Diameter	Max. 5 mm	
Flex radius	Min. 100 mm	

Table 208: 5CAUSB.0018-00, 5CAUSB.0050-00 - Technical data

7.6.1.4 Cable pinout

Warning!

If you choose to build a suitable cable yourself, it should be wired according to these specifications.

If a self-built cable is used, B&R cannot guarantee that it will function properly. All cables provided by B&R are guaranteed to function properly.

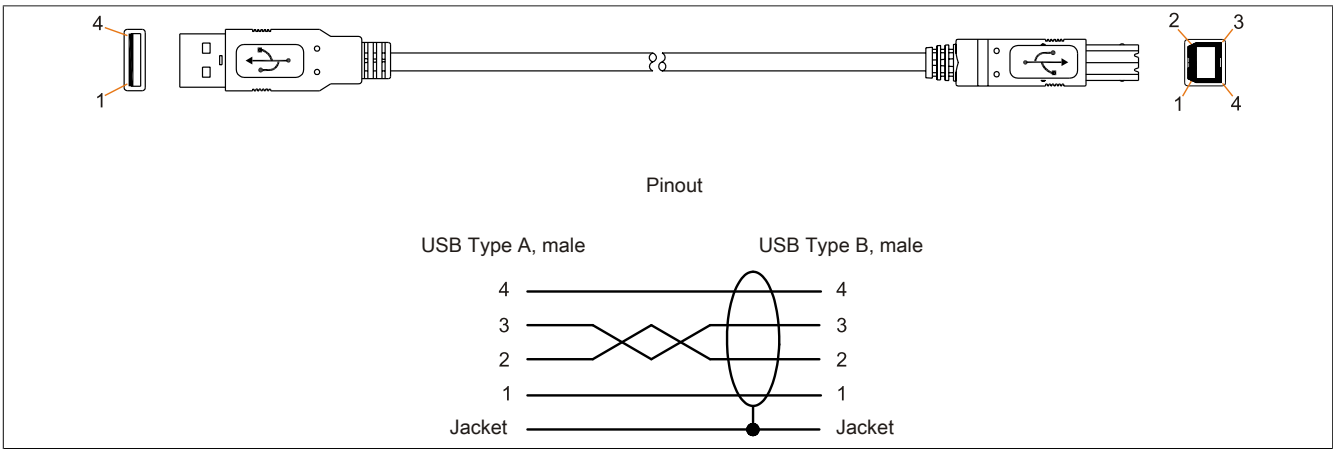


Figure 120: 5CAUSB.00xx-00 USB cables - Pinout

7.7 RS232 cables

7.7.1 9A0014.xx

7.7.1.1 General information

RS232 cables are used as extension cables between two RS232 interfaces.

7.7.1.2 Order data

Model number	Short description	Figure
	RS232 cable	
9A0014.02	RS232 extension cable for remote operating of a display unit with touch screen, 1.8 m.	
9A0014.05	RS232 extension cable for remote operating of a display unit with touch screen, 5 m.	
9A0014.10	RS232 extension cable for remote operating of a display unit with touch screen, 10 m.	

Table 209: 9A0014.02, 9A0014.05, 9A0014.10 - Order data

7.7.1.3 Technical data

Product ID	9A0014.02		9A0014.05	9A0014.10
General information				
Certification CE	Yes			
Cable structure				
Wire cross section	AWG 26			
Shield	Entire cable			
Outer sheathing Color	Beige			
Connector				
Type	9-pin DSUB socket, male / female			
Mechanical characteristics				
Dimensions Length Diameter	1.8 m ±50 mm	5 m ±80 mm Max. 5 mm	10 m ±100 mm	
Flex radius	Min. 70 mm			

Table 210: 9A0014.02, 9A0014.05, 9A0014.10 - Technical data

7.7.1.4 Cable pinout

Warning!

If you choose to build a suitable cable yourself, it should be wired according to these specifications. If a self-built cable is used, B&R cannot guarantee that it will function properly. All cables provided by B&R are guaranteed to function properly.

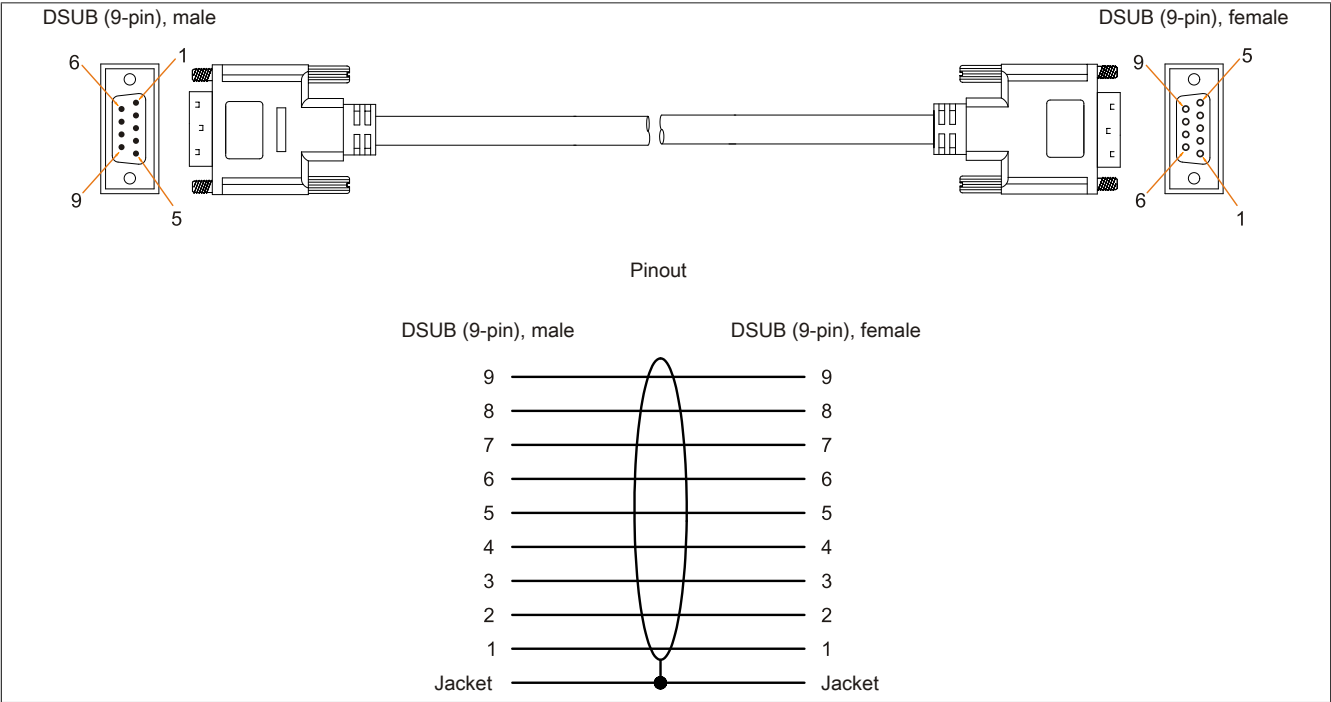


Figure 121: 9A0014.xx - RS232 cable pinout

8 HMI Drivers & Utilities DVD

8.1 5SWHMI.0000-00

8.1.1 General information

This DVD contains drivers, utilities, software upgrades and user's manuals for B&R panel system products (see the "Industrial PCs" or "Visualization and operation" section of the B&R website at www.br-automation.com).

At the time of its creation, the content of the DVD is identical to the files found in the download area of the B&R homepage (under Service – “Material Related Downloads”).

8.1.2 Order data

Model number	Short description	Figure
	Other	
5SWHMI.0000-00	HMI Drivers & Utilities DVD	

Table 211: 5SWHMI.0000-00 - Order data

8.1.3 Contents (V2.10)

BIOS upgrades for the products

- Automation PC 620 / Panel PC 700 CPU Board 815E and 855GME BIOS
- Automation PC 620 / Panel PC 700 CPU Board X855GME BIOS
- Automation PC 620 / Panel PC 700 CPU Board 945GME N270 BIOS
- Automation PC 680
- Automation PC 810 / Automation PC 820 / Panel PC 800 B945GME BIOS
- Automation PC 810 / Panel PC 800 945GME N270 CPU Board BIOS
- Automation PC 810 / Panel PC 800 GM45 CPU Board BIOS
- Provit 2000 product family - IPC2000/2001/2002
- Provit 5000 product family - IPC5000/5600/5000C/5600C
- Power Panel 100 BIOS devices
- Mobile Panel 100 BIOS devices
- Power Panel 100 / Mobile Panel 100 user boot logo
- Power Panel 100 / Mobile Panel 100 REMHOST utility
- Power Panel 300/400 BIOS devices
- Power Panel 300/400 BIOS user boot logo
- Panel PC 310

Drivers for the devices

- Automation Device Interface (ADI)
- Audio
- Chipset
- CD-ROM
- LS120
- Graphics
- Network

- PCI / SATA RAID controller
- Touch screen
- Touchpad
- Interface board

Firmware upgrades

- Automation PC 620 / Panel PC 700 (MTCX, SDLR, SDLT)
- Automation PC 810 (MTCX, SDLR, SDLT)
- Automation PC 820 (MTCX, SDLR, SDLT)
- Mobile Panel 100 (SMCX)
- Panel PC 300 (MTCX)
- Power Panel 100 (aPCI)
- Power Panel 300/400 (aPCI)
- Power Panel 300/400 (MTCX)
- Panel PC 800 (MTCX, SDLR, SDLT)
- UPS firmware

Utilities / Tools

- B&R Embedded OS Installer
- Windows CE Tools
- User boot logo conversion program
- SATA RAID Installation Utility
- Automation Device Interface (ADI)
- CompactFlash lifespan calculator (Silicon Systems)
- Miscellaneous
- MTC utilities
- Key editor
- MTC & Mkey utilities
- Mkey utilities
- UPS configuration software
- ICU ISA configuration
- Intel PCI NIC boot ROM
- Diagnostics programs

Windows

- Windows CE 6.0
- Windows CE 5.0
- Windows CE 4.2
- Windows CE 4.1
- Windows CE Tools
- Windows Embedded Standard 2009
- Thin client
- Windows NT Embedded
- Windows XP Embedded
- VNC viewer

MCAD templates for

- Industrial PCs
- Visualization and operating devices
- Legend strip templates
- Custom designs

ECAD templates for

- Industrial PCs
- Automation PCs
- Automation Panel 900
- Panels (Power Panel)

Documentation for

- Automation PC 620
- Automation PC 680
- Automation PC 810
- Automation PC 820
- Automation Panel 800
- Automation Panel 900
- Panel PC 310
- Panel PC 700
- Panel PC 725
- Panel PC 800
- Power Panel 15/21/35/41
- Power Panel 100/200
- Power Panel 300/400
- Mobile Panel 40/50
- Mobile Panel 100/200
- Mobile Panel connection box
- Provit 2000
- Provit 3030
- Provit 4000
- Provit 5000
- Provit Benchmark
- Provit Mkey
- Windows CE 5.0 Help
- Windows CE 6.0 Help
- Windows NT Embedded application guide
- Windows XP Embedded application guide
- Uninterruptible power supply
- Implementation guides
- B&R Hilscher fieldbus cards (CANopen, DeviceNet, PROFIBUS, PROFINET)

Service tools

- Acrobat Reader 5.0.5 (freeware in German, English and French)
- Power Archiver 6.0 (freeware in German, English and French)
- Internet Explorer 5.0 (German and English)
- Internet Explorer 6.0 (German and English)

Chapter 7 • Maintenance / Service

This chapter describes service/maintenance work that can be carried out by a qualified end user.

1 Changing the battery

The lithium battery buffers the internal real-time clock (RTC) and CMOS data.

Information:

- The product design allows the battery to be changed with the B&R device switched either on or off. In some countries, safety regulations do not allow batteries to be changed while the module is switched on.
- Any BIOS settings that have been made will remain when the battery is changed with the power turned off (stored in non-volatile EEPROM). The date and time must be reset later because this data is lost when the battery is changed.
- The battery should only be changed by qualified personnel.

Warning!

The battery must be replaced by a Type CR2477N Renata battery only. The use of another battery may present a risk of fire or explosion.

The battery may explode if handled improperly. Do not recharge, disassemble or dispose of in fire.

The following replacement lithium batteries are available: 4A0006.00-000 (1 pc.) and 0AC201.91 (4 pcs.).

1.1 Battery status evaluation

The status of the battery is determined immediately after the device is started and subsequently checked by the system every 24 hours. During this measurement, the battery is subjected to a brief load (approximately 1 second) and then evaluated. Once determined, the battery status is displayed in BIOS (under Advanced -> OEM features -> System board features -> Voltage values) and in the B&R Control Center (ADI driver); it can also be read in a customer application using the ADI library.

Battery status	Description
N/A	The hardware or firmware being used is too old and does not support reading the battery status.
GOOD	Data buffering is intact.
BAD	From the point when battery capacity is recognized as insufficient (BAD), data buffering is intact for approximately another 500 hours

Table 212: Battery status

From the point when battery capacity is recognized as insufficient, data buffering is intact for approximately another 500 hours. When replacing the battery, data is buffered for approximately 10 minutes by a gold leaf capacitor.

1.2 Procedure

- Disconnect the power supply to the B&R Industrial PC.
- Touch the housing or ground connection in order to discharge any electrostatic charge from your body.
- Remove the cover from the battery compartment and carefully pull out the battery using the removal strip.

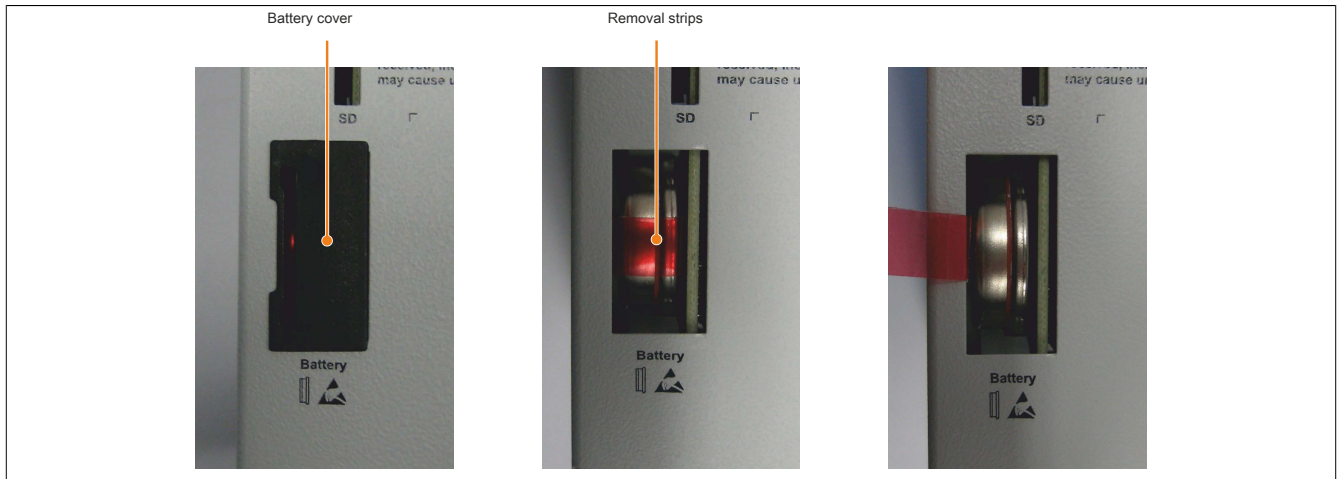


Figure 122: Remove battery

- The battery should not be held by its edges. Insulated tweezers may also be used to insert the battery.

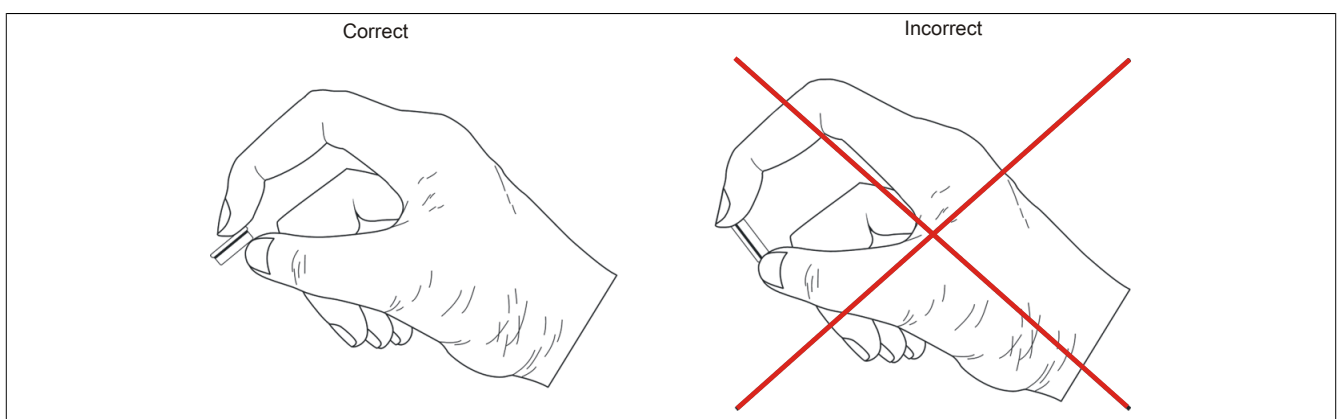


Figure 123: Battery handling

- Insert the new battery with the correct polarity.

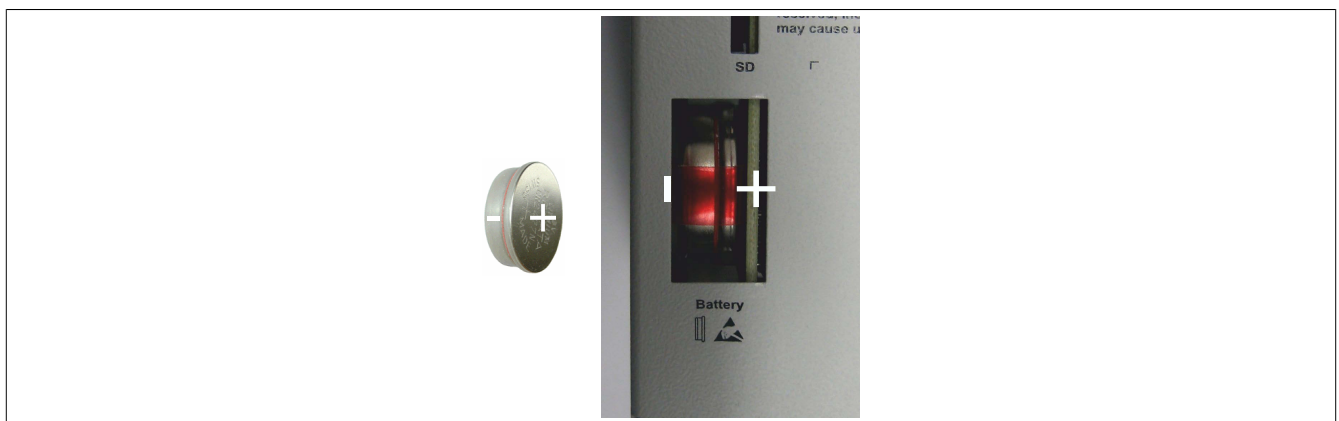


Figure 124: Battery polarity

- To make the next battery change easier, be sure the removal strip is in place when inserting the battery.
- Reconnect the power supply to the B&R Industrial PC (plug in the power cable).
- Reset the date and time in BIOS.

Warning!

Lithium batteries are considered hazardous waste. Used batteries should be disposed of in accordance with applicable local regulations.

2 Replacing a CompactFlash card

Caution!

Power must be turned off before replacing CompactFlash cards.

The CompactFlash card can be replaced quickly and easily by pressing the ejector (see image) with a pointed object such as a pen.

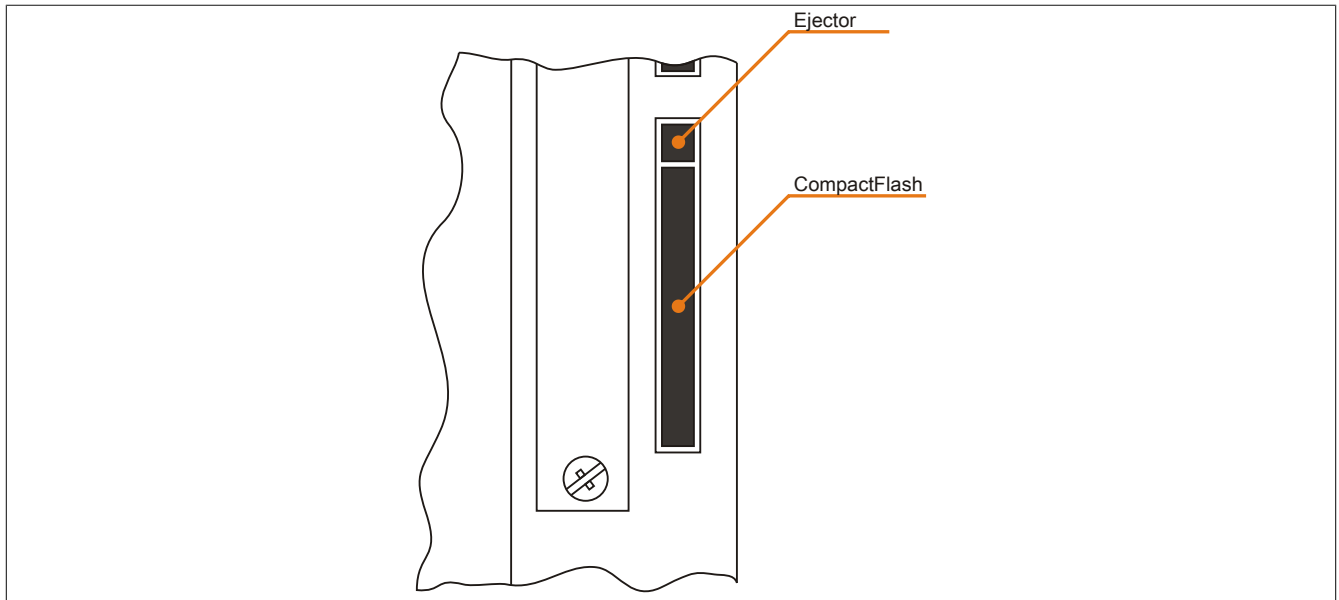


Figure 125: CompactFlash + ejector (sample photo)

Appendix A

1 Maintenance Controller Extended (MTCX)

The MTCX controller (FPGA processor) is located on the CPU board.

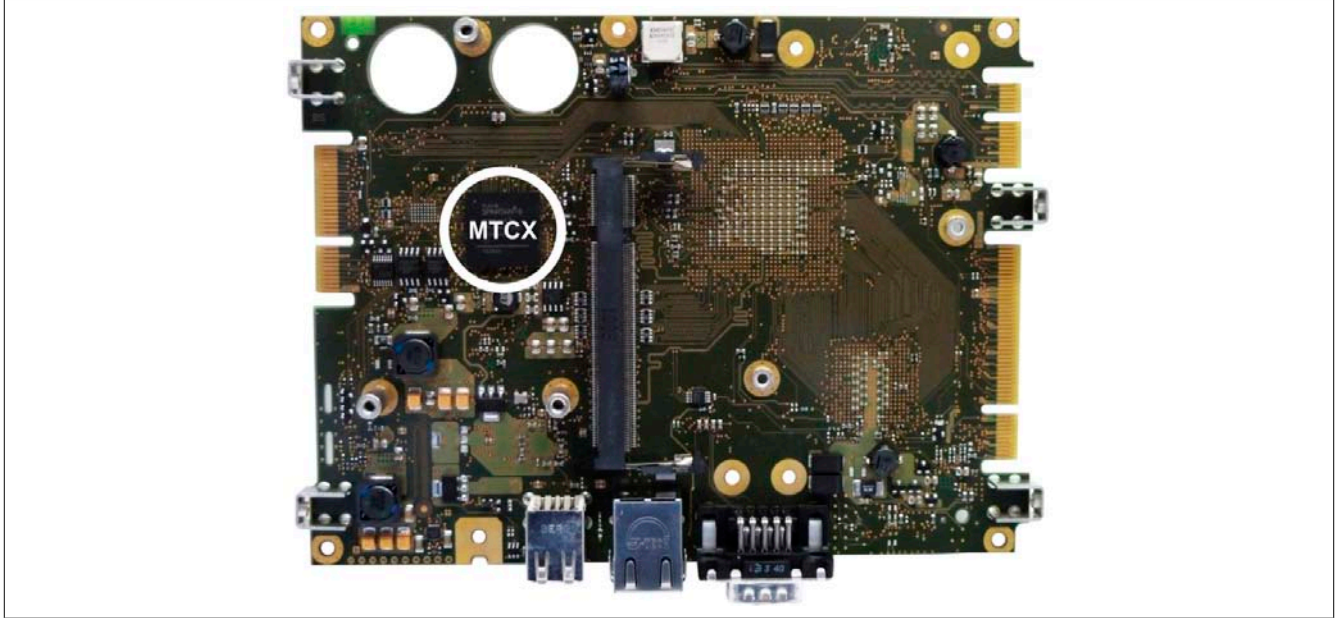


Figure 126: MTCX controller location

The MTCX is responsible for the following monitoring and control functions:

- Power failure logic
- Watchdog handling (NMI and reset handling)
- Temperature monitoring (I/O area, power supply)
- Key and LED handling/coordination
- Advanced desktop operation (keys, USB forwarding)
- Backlight control for display
- Statistical data recording (power cycles - each power on, and power on are recorded - every full hour is counted e.g. 50 minutes no increase)
- Status LEDs (Power, CF, Link, Run)

Extended MTCX functions are available by upgrading firmware ⁵⁾. The version can be read in BIOS ("OEM features" on page 95) or approved Microsoft Windows operating systems via the B&R Control Center.

⁵⁾ Available in the Downloads section of the B&R website (www.br-automation.com).

2 Abbreviations

Abbreviation	Stands for	Description
NC	Normally closed	A normally closed relay contact.
	Not connected	Used in pinout descriptions if a terminal or pin is not connected to a module
ND	Not defined	In data tables, this stands for a value that has not been defined. This may be because a cable manufacturer does not provide certain technical data, for example.
NO	Normally open	A normally open relay contact
TBD	To be defined	Used in technical data tables when certain information is not yet available. The value will be provided later.

Table 213: Abbreviations used in this user's manual

3 Glossary

Address	An address is a character string for identifying a memory location or a memory area, where data is stored and can be retrieved. It is also a symbol (e.g. with numerical controllers) for identifying a function unit for which subsequent geometrical or technological data are determined by the symbol.
Algorithms	According to DIN 19226: Algorithms are a finite series of well-defined regulations. The desired output quantities are created from permitted system input quantities. It describes how something is to be done. A procedure must at least satisfy the following requirements to be valid as an algorithm in a mathematical context. <i>Discreteness</i>: An algorithm is made up of a finite series of steps. <i>Determinacy</i>: Under the same start conditions, it always creates the same end result. <i>Clearness</i>: The series of steps is clearly defined. <i>Finiteness</i>: It ends after a finite number of steps. From a quantity theory perspective, an algorithm is clearly defined by a set of sizes [input, intermediate and output sizes], a set of elementary operations and also by a regulation, which specifies when and in what sequence certain operations should be carried out. From a functional perspective, it transfers a set of input sizes into a set of output sizes. It can be represented in text form in a natural or artificial formal language or using graphic representations [graph, program flow chart, structured chart, Petri Nets etc.].
ANSI	American National Standards Institute > this organization promotes and manages American industrial standards.
APC	Abbreviation for »Automation PC«
Application software	Software, which is not used for operation by the computer itself, but rather when a computer is used to process a concrete application problem. It sets up the system software and uses this for fulfilling individual tasks. Application software can be accommodated in standard software used by a large number of customers in a wide range of industries. Common examples are Word, Excel, PowerPoint, Paint, Matlab etc. Industrial software tailored to the respective problems of a certain industry and individual software created for solving the particular problems of an individual user.
ASCII	American Standard Code for Information Interchange, used worldwide; numbers, letters, special characters and device controller characters are represented as 7-bit binary combinations. Standard ASCII-characters cover 27 = 128 characters in total. An eighth bit is used as a so-called parity bit for error detection when transferring ASCII files. During even parity checking, this bit is set to 0, when the number of '1s' in the remaining seven bits is an even number. Otherwise, it is set to 1. The expanded ASCII character set does not use parity checking. The highest value bit is used here to switch from the standard character set to the expansion. This allows space for special regional characters e.g. umlauts in the German language. www.asciitable.com
Automation	According to Brockhaus: The application of technical means, using specific programs that (either partially or totally) do not require human intervention to perform operations.
Automation Runtime	A uniform runtime system for all B&R automation components.
Failure	Failure according to IEC 61508: A function unit loses the ability to perform a required function. In regards to safety-oriented systems, a distinction is made between dangerous and safe failures. This depends on whether the status of the system failure is considered dangerous or safe. The cause of the failure may be load related or age-related, and therefore a random failure, or related to a flaw inherent in the system. In this case, it is known as a systematic failure.

Figure 1:	Base system configuration.....	17
Figure 2:	Configuration - Software and accessories.....	18
Figure 3:	Temperature sensor locations.....	19
Figure 4:	Supply voltage for system units.....	21
Figure 5:	Overview of interfaces with an inserted I/O board.....	22
Figure 6:	Ground connection.....	23
Figure 7:	5PC510.SX01-00 - Dimensions.....	34
Figure 8:	5PC510.SX01-00 - Drilling template.....	35
Figure 9:	CAN terminating switch.....	50
Figure 10:	CAN terminating switch.....	54
Figure 11:	RS232/422/485 interface - Operation in RS485 mode.....	59
Figure 12:	Serial Interface (COM) terminating resistor.....	60
Figure 13:	5MMHDD.0250-00 - Temperature humidity diagram.....	63
Figure 14:	5MMHDD.0500-00 - Temperature humidity diagram.....	65
Figure 15:	5AC801.SSDI-01 - Temperature humidity diagram.....	67
Figure 16:	5AC801.SSDI-02 - Temperature humidity diagram.....	69
Figure 17:	Mounting plates.....	70
Figure 18:	Mounting orientation 0°.....	71
Figure 19:	Mounting orientation -90° or +90°.....	71
Figure 20:	Mounting orientation 180°.....	72
Figure 21:	Spacing for air circulation.....	73
Figure 22:	Flex radius - Cable connection.....	74
Figure 23:	Grounding concept.....	75
Figure 24:	Settings for Passmark BurnIn Pro V4 with an APC810 2-slot with DVD.....	77
Figure 25:	Test overview of an APC810 2-slot with DVD.....	78
Figure 26:	One Automation Panel 900 via onboard DVI (sample photo).....	81
Figure 27:	One Automation Panel 900 via onboard SDL (sample photo).....	83
Figure 28:	One Automation Panel 800 via onboard SDL (sample photo).....	85
Figure 29:	One AP900 and one AP800 via onboard SDL (sample photo).....	86
Figure 30:	Four Automation Panel 900 units via onboard SDL (sample photo).....	87
Figure 31:	Local connection of USB peripheral devices on the APC510.....	89
Figure 32:	Remote connection of USB peripheral devices to the APC900 via DVI.....	90
Figure 33:	Remote connection of USB peripheral devices to the APC800/900 via SDL.....	90
Figure 34:	Boot screen.....	92
Figure 35:	US15W Main - Menu.....	94
Figure 36:	US15W OEM Features - Menu.....	95
Figure 37:	US15W OEM Features - CPU Board Features.....	96
Figure 38:	US15W OEM features - CPU board features - LPC devices.....	97
Figure 39:	US15W OEM features - CPU board features- Statistical values.....	98
Figure 40:	US15W OEM features - CPU board features- Temperature values.....	99
Figure 41:	US15W OEM Features - CPU Board Features - CPU Board Monitor.....	100
Figure 42:	US15W OEM Features - System Unit Features.....	101
Figure 43:	US15W OEM Features - System Unit Features - LPC Devices.....	102
Figure 44:	US15W OEM features - System unit features- Statistical values.....	103
Figure 45:	US15W OEM features - System unit features- Temperature values.....	104
Figure 46:	US15W OEM Features - I/O Board Features.....	105
Figure 47:	US15W OEM Features - I/O Board Features - LPC Devices.....	106
Figure 48:	US15W OEM Features - I/O Board Features - Statistical Values.....	107
Figure 49:	US15W OEM Features - I/O Board Features - Temperature Values.....	108
Figure 50:	US15W OEM Features - I/O Board Features - Panel Control.....	109
Figure 51:	US15W OEM Features - IF Board Features.....	110
Figure 52:	US15W OEM Features - IF Board Features - Statistical Values.....	111
Figure 53:	US15W OEM Features - Memory Module Features.....	112
Figure 54:	US15W Advanced - Menu.....	113
Figure 55:	US15W Advanced - RAM configuration.....	114
Figure 56:	US15W Advanced - Boot configuration.....	115
Figure 57:	US15W Advanced - Peripheral configuration.....	116

Figure 58:	US15W Advanced - IDE configuration.....	117
Figure 59:	US15W Advanced - IDE Configuration - Channel 1 Master.....	118
Figure 60:	US15W Advanced - IDE Configuration - Channel 1 Slave.....	119
Figure 61:	US15W Advanced - Video configuration.....	120
Figure 62:	US15W Advanced - USB configuration.....	121
Figure 63:	US15W Advanced - SDIO configuration.....	122
Figure 64:	US15W Advanced - ACPI Table/Features Control.....	123
Figure 65:	US15W Advanced - PCI Express Root Port 1.....	124
Figure 66:	US15W Advanced - PCI Express Root Port 2.....	126
Figure 67:	US15W Advanced - Console Redirection.....	128
Figure 68:	US15W Security - Menu.....	130
Figure 69:	US15W Security - Set Supervisor Password.....	131
Figure 70:	US15W Security - Set User Password.....	132
Figure 71:	US15W Power - Menu.....	133
Figure 72:	US15W Power - Advanced - CPU Control.....	134
Figure 73:	US15W Power - Advanced - CPU Control - Thermal Trip Points Settings.....	136
Figure 74:	US15W Power - Platform Power Management.....	137
Figure 75:	US15W Boot - Menu.....	138
Figure 76:	US15W Boot - Legacy.....	139
Figure 77:	US15W Boot - Legacy - Boot Type Order.....	140
Figure 78:	US15W Boot - Legacy - Hard Disk Drive.....	141
Figure 79:	US15W Boot - Legacy - USB.....	141
Figure 80:	US15W Boot - Legacy - Others.....	142
Figure 81:	US15W Exit - Menu.....	143
Figure 82:	Interrupt Routing with activated APIC -Beginning with BIOS version N0.15.....	151
Figure 83:	BIOS and MTCX software versions.....	152
Figure 84:	BIOS and MTCX software versions - Control Center.....	153
Figure 85:	ADI Control Center screenshots - Examples.....	165
Figure 86:	ADI Development Kit screenshots (version 3.40).....	167
Figure 87:	ADI .NET SDK screenshots (version 1.80).....	169
Figure 88:	Screenshots of the B&R Key Editor V3.30.....	171
Figure 89:	5CFCRD.xxxx-06 - Temperature humidity diagram for CompactFlash cards.....	183
Figure 90:	Dimensions - CompactFlash card Type I.....	183
Figure 91:	ATTO Disk Benchmark v2.34 comparison when reading - 5CFCRD.xxxx-04 with 5CFCRD.xxxx-06.....	184
Figure 92:	ATTO Disk Benchmark v2.34 comparison when writing - 5CFCRD.xxxx-04 with 5CFCRD.xxxx-06.....	184
Figure 93:	5CFCRD.xxxx-03 - Temperature humidity diagram for CompactFlash cards.....	187
Figure 94:	Dimensions - CompactFlash card Type I.....	187
Figure 95:	5MD900.USB2-02 - Interfaces.....	189
Figure 96:	5MD900.USB2-02 - Dimensions.....	191
Figure 97:	Dimensions - USB media drive with front cover.....	191
Figure 98:	Installation cutout - USB media drive with front cover.....	192
Figure 99:	5MD900.USB2-02 - Mounting orientation	192
Figure 100:	5A5003.03 - Dimensions.....	193
Figure 101:	Front cover mounting and installation depth.....	194
Figure 102:	Installation cutout - USB media drive with front cover.....	194
Figure 103:	5MMUSB.2048-01 - Temperature humidity diagram.....	196
Figure 104:	Flex radius specifications.....	198
Figure 105:	5CADVI.0xxx-00 - Dimensions.....	198
Figure 106:	5CADVI.0xxx-00 - Pinout.....	199
Figure 107:	Flex radius specifications.....	201
Figure 108:	5CASDL.0xxx-00- Dimensions.....	201
Figure 109:	5CASDL.0xxx-00- Pinout.....	202
Figure 110:	Flex radius specifications.....	204
Figure 111:	5CASDL.0xxx-01 - Dimensions.....	204
Figure 112:	5CASDL.0xxx-01 - Pinout.....	205

Figure 113:	Flex radius specifications.....	207
Figure 114:	5CASDL.0xxx-03 - Dimensions.....	207
Figure 115:	5CASDL.0xxx-03- Pinout.....	208
Figure 116:	Flex radius specifications.....	210
Figure 117:	5CASDL.0xx0-13- Dimensions.....	210
Figure 118:	5CASDL.0xx0-13 - Pinout.....	211
Figure 119:	Example of the signal direction for an SDL flex cable with extender.....	212
Figure 120:	5CAUSB.00xx-00 USB cables - Pinout.....	213
Figure 121:	9A0014.xx - RS232 cable pinout	215
Figure 122:	Remove battery.....	220
Figure 123:	Battery handling.....	220
Figure 124:	Battery polarity.....	220
Figure 125:	CompactFlash + ejector (sample photo).....	221
Figure 126:	MTCX controller location.....	222

Table 1:	Environmentally friendly separation of materials.....	12
Table 2:	Description of the safety notices used in this documentation.....	13
Table 3:	Range of nominal sizes.....	13
Table 4:	Temperature sensor locations.....	19
Table 5:	Overview of humidity specifications for individual components.....	20
Table 6:	Supply voltage connection 24 VDC.....	23
Table 7:	Pinout - COM1.....	24
Table 8:	Ethernet connection (ETH).....	24
Table 9:	USB1, USB2 connections.....	25
Table 10:	Battery.....	26
Table 11:	Battery status.....	26
Table 12:	CompactFlash slot.....	27
Table 13:	SD memory card slot.....	27
Table 14:	Power button.....	28
Table 15:	Reset button.....	28
Table 16:	Status LEDs - Data.....	29
Table 17:	Interface board slot.....	30
Table 18:	5PC510.SX01-00 - Order data.....	31
Table 19:	5PC510.SX01-00 - Technical data.....	32
Table 20:	5PP5CP.US15-00, 5PP5CP.US15-01, 5PP5CP.US15-02 - Order data.....	36
Table 21:	5PP5CP.US15-00, 5PP5CP.US15-01, 5PP5CP.US15-02 - Technical data.....	36
Table 22:	5MMDDR.0512-01, 5MMDDR.1024-01, 5MMDDR.2048-01 - Order data.....	38
Table 23:	5MMDDR.0512-01, 5MMDDR.1024-01, 5MMDDR.2048-01 - Technical data.....	38
Table 24:	5PP5IF.CETH-00 - Order data.....	39
Table 25:	5PP5IF.CETH-00 - Technical data.....	39
Table 26:	5PP5IF.CETH-00 - Ethernet connection.....	40
Table 27:	5PP5IF.CHDA-00 - Order data.....	41
Table 28:	5PP5IF.CHDA-00 - Technical data.....	41
Table 29:	MIC, Line IN, Line OUT.....	41
Table 30:	5PP5IF.FETH-00 - Order data.....	43
Table 31:	5PP5IF.FETH-00 - Technical data.....	43
Table 32:	5PP5IF.FETH-00 - Ethernet connection.....	44
Table 33:	5PP5IF.FPLM-00 - Order data.....	45
Table 34:	5PP5IF.FPLM-00 - Technical data.....	45
Table 35:	POWERLINK interface board, 2-port connection.....	46
Table 36:	Status/Error LED - Ethernet TCP/IP operating mode.....	46
Table 37:	Status/Error LED - POWERLINK V1 operating mode.....	46
Table 38:	Status/Error LED as an Error LED - POWERLINK V2 operating mode.....	47
Table 39:	Status/Error LED as status LED - POWERLINK operating mode.....	47
Table 40:	Status/error LED as error LED - system failure error codes.....	48
Table 41:	5PP5IF.FCAN-00 - Order data.....	49
Table 42:	5PP5IF.FCAN-00 - Technical data.....	49
Table 43:	5PP5IF.FCAN-00 - CAN interface.....	50
Table 44:	5PP5IF.FCAN-00 - Status LEDs.....	50
Table 45:	5PP5IF.FX2X-00 - Order data.....	51
Table 46:	5PP5IF.FX2X-00 - Technical data.....	51
Table 47:	5PP5IF.FX2X-00 - X2X interface.....	52
Table 48:	5PP5IF.FX2X-00 - Status LEDs.....	52
Table 49:	5PP5IF.FXCM-00 - Order data.....	53
Table 50:	5PP5IF.FXCM-00 - Technical data.....	53
Table 51:	5PP5IF.FCAN-00 - CAN interface.....	54
Table 52:	5PP5IF.FX2X-00 - X2X interface.....	54
Table 53:	5PP5IF.FXCM-00 - Status LEDs.....	54
Table 54:	5PP5IO.GMAC-00 - Order data.....	55
Table 55:	5PP5IO.GMAC-00 - Technical data.....	55
Table 56:	Panel connection - DVI, SDL.....	56
Table 57:	Pinout - DVI connection.....	56

Table 58:	Cable lengths and resolutions for SDL transmission.....	57
Table 59:	Pinout - COM2.....	57
Table 60:	RS232/422/485 - I/O address and IRQ.....	57
Table 61:	RS232 - Bus length and transfer rate.....	57
Table 62:	RS232 - Cable requirements.....	58
Table 63:	RS422 - Bus length and transfer rate.....	58
Table 64:	RS422 - Cable requirements.....	58
Table 65:	RS485 - Bus length and transfer rate.....	58
Table 66:	RS485 - Cable requirements.....	58
Table 67:	RS485 - Bus length and transfer rate.....	59
Table 68:	RS485 - Cable requirements.....	59
Table 69:	USB3, USB4 connections.....	60
Table 70:	MIC, Line IN, Line OUT.....	60
Table 71:	Optional SATA connection.....	61
Table 72:	5MMHDD.0250-00 - Order data.....	62
Table 73:	5MMHDD.0250-00 - Technical data.....	62
Table 74:	5MMHDD.0500-00 - Order data.....	64
Table 75:	5MMHDD.0500-00 - Technical data.....	64
Table 76:	5MMSSD.0060-00 - Order data.....	66
Table 77:	5MMSSD.0060-00 - Technical data.....	66
Table 78:	5MMSSD.0180-00 - Order data.....	68
Table 79:	5MMSSD.0180-00 - Technical data.....	68
Table 80:	Evaluation example using an APC810 2-slot.....	79
Table 81:	Selecting the display units.....	80
Table 82:	Link modules.....	81
Table 83:	Cables for DVI configurations.....	81
Table 84:	Possible Automation Panel units, resolutions and segment lengths.....	82
Table 85:	Link modules.....	83
Table 86:	Cables for SDL configurations.....	83
Table 87:	Cable lengths and resolutions for SDL transmission.....	84
Table 88:	Cables for SDL configurations.....	85
Table 89:	Cable lengths and resolutions for SDL transmission.....	85
Table 90:	Link modules.....	86
Table 91:	Link modules.....	87
Table 92:	Cables for SDL configurations.....	87
Table 93:	Cable lengths and resolutions for SDL transmission.....	88
Table 94:	BIOS-relevant keys for POST.....	93
Table 95:	BIOS-relevant keys.....	93
Table 96:	US15W - Main menu setting options.....	94
Table 97:	US15W OEM Features - Menu setting options.....	95
Table 98:	US15W OEM Features - CPU Board Features setting options.....	96
Table 99:	US15W OEM Features - CPU Board Features - LPC Devices setting options.....	97
Table 100:	US15W OEM Features - CPU Board Features - Statistical Values setting options.....	98
Table 101:	US15W OEM Features - CPU Board Features - Temperature Values setting options.....	99
Table 102:	US15W OEM Features - CPU Board Features - CPU Board Monitor setting options.....	100
Table 103:	US15W OEM Features - System Unit Features setting options.....	101
Table 104:	US15W OEM Features - System Unit Features - LPC Devices setting options.....	102
Table 105:	US15W OEM Features - System Unit Features - Statistical Values setting options.....	103
Table 106:	US15W OEM Features - System Unit Features - Temperature Values setting options.....	104
Table 107:	US15W OEM Features - I/O Board Features setting options.....	105
Table 108:	US15W OEM Features - I/O Board Features - LPC Devices setting options.....	106
Table 109:	US15W OEM Features - I/O Board Features - Statistical Values setting options.....	107
Table 110:	US15W OEM Features - I/O Board Features - Temperature Values setting options.....	108
Table 111:	US15W OEM Features - I/O Board Features - Panel Control setting options.....	109
Table 112:	US15W OEM Features - IF Board Features setting options.....	110
Table 113:	US15W OEM Features - IF Board Features - Statistical Values setting options.....	111
Table 114:	US15W OEM Features - Memory Module Features setting options.....	112

Table 115:	US15W Advanced - Menu setting options.....	113
Table 116:	US15W Advanced - RAM Configuration setting options.....	114
Table 117:	US15W Advanced - Boot Configuration setting options.....	115
Table 118:	US15W Advanced - Peripheral Configuration setting options.....	116
Table 119:	US15W Advanced - IDE Configuration setting options.....	117
Table 120:	US15W Advanced - IDE Configuration - Channel 1 Master setting options.....	118
Table 121:	US15W Advanced - IDE Configuration - Channel 1 Slave setting options.....	119
Table 122:	US15W Advanced - Video Configuration setting options.....	120
Table 123:	US15W Advanced - USB Configuration setting options.....	121
Table 124:	US15W Advanced - SDIO Configuration setting options.....	122
Table 125:	US15W Advanced - ACPI Table/Features Control setting options.....	123
Table 126:	US15W Advanced - PCI Express Root Port 1 setting options.....	124
Table 127:	US15W Advanced - PCI Express Root Port 2 setting options.....	126
Table 128:	US15W Advanced - Console Redirection setting options.....	128
Table 129:	US15W Security - Menu setting options.....	130
Table 130:	US15W Security - Set Supervisor Password setting options.....	131
Table 131:	US15W Security - Set User Password - Setting options.....	132
Table 132:	US15W Power - Menu setting options.....	133
Table 133:	US15W Power - Advanced CPU Control setting options.....	134
Table 134:	US15W Power - Advanced CPU Control - Thermal Trip Points Settings options.....	136
Table 135:	US15W Power - Platform Power Management setting options.....	137
Table 136:	US15W Boot - Menu setting options.....	138
Table 137:	US15W Boot - Legacy setting options.....	139
Table 138:	US15W Boot - Legacy - Boot Type Order setting options.....	140
Table 139:	US15W Boot - Legacy - Hard Disk Drive setting options.....	141
Table 140:	US15W Boot - Legacy - USB setting options.....	142
Table 141:	US15W Boot - Legacy - Others setting options.....	142
Table 142:	US15W Exit - Menu setting options.....	143
Table 143:	US15W - Main profile setting overview.....	144
Table 144:	US15W - OEM Features profile setting overview.....	144
Table 145:	US15W - CPU Board Features profile setting overview.....	144
Table 146:	US15W - System Unit Features profile setting overview.....	145
Table 147:	US15W - I/O Board Features profile setting overview.....	145
Table 148:	US15W - IF Board Features profile setting overview.....	145
Table 149:	US15W - Memory Module Features profile setting overview.....	146
Table 150:	US15W - Overview of RAM configuration profile settings.....	146
Table 151:	US15W - Overview of boot configuration profile settings.....	146
Table 152:	US15W - Overview of peripheral configuration profile settings.....	146
Table 153:	US15W - Overview of IDE configuration profile settings.....	146
Table 154:	US15W - Overview of Video configuration profile settings.....	147
Table 155:	US15W - Overview of USB configuration profile settings.....	147
Table 156:	US15W - Overview of SDIO configuration profile settings.....	147
Table 157:	US15W - ACPI Table/Features Control profile setting overview.....	147
Table 158:	US15W - PCI Express Root Port 1 profile setting overview.....	147
Table 159:	US15W - PCI Express Root Port 2 profile setting overview.....	148
Table 160:	US15W - Console Redirection - profile setting overview.....	148
Table 161:	US15W - Power profile setting overview.....	148
Table 162:	US15W - Advanced CPU Control profile setting overview.....	148
Table 163:	US15W - Platform Power Management profile setting overview.....	149
Table 164:	US15W - Boot profile setting overview.....	149
Table 165:	RAM address assignment.....	150
Table 166:	I/O address assignment.....	150
Table 167:	IRQ interrupt assignments in PIC mode.....	150
Table 168:	IRQ interrupt assignments in APIC mode.....	151
Table 169:	5SWWXP.0600-ENG, 5SWWXP.0600-GER, 5SWWXP.0600-MUL - Order data.....	155
Table 170:	5SWWI7.0100-ENG, 5SWWI7.1100-ENG, 5SWWI7.0100-GER, 5SWWI7.1100-GER, 5SWWI7.0300-MUL, 5SWWI7.1300-MUL - Order data.....	156

Table 171:	5SWWXP.0737-ENG - Order data.....	158
Table 172:	Device functions in Windows Embedded Standard 2009.....	158
Table 173:	5SWWI7.0537-ENG, 5SWWI7.1537-ENG, 5SWWI7.0737-MUL, 5SWWI7.1737-MUL - Order data.....	160
Table 174:	Device functions in Windows Embedded Standard 7.....	161
Table 175:	5SWWCE.0837-ENG - Order data.....	162
Table 176:	Windows CE 6.0 features.....	162
Table 177:	1A4600.10-5, 1A4601.06-5, 1A4601.06-T - Order data.....	164
Table 178:	0AC201.91, 4A0006.00-000 - Order data.....	175
Table 179:	0AC201.91, 4A0006.00-000 - Technical data.....	175
Table 180:	0TB103.9, 0TB103.91 - Order data.....	177
Table 181:	0TB103.9, 0TB103.91 - Technical data.....	177
Table 182:	0TB1208.3100 - Order data.....	178
Table 183:	0TB1208.3100 - Technical data.....	178
Table 184:	5CFCRD.0512-06, 5CFCRD.1024-06, 5CFCRD.2048-06, 5CFCRD.4096-06, 5CFCRD.8192-06, 5CFCRD.016G-06, 5CFCRD.032G-06 - Order data.....	181
Table 185:	5CFCRD.0512-06, 5CFCRD.1024-06, 5CFCRD.2048-06, 5CFCRD.4096-06, 5CFCRD.8192-06, 5CFCRD.016G-06, 5CFCRD.032G-06 - Technical data.....	181
Table 186:	5CFCRD.0064-03, 5CFCRD.0128-03, 5CFCRD.0256-03, 5CFCRD.0512-03, 5CFCRD.1024-03, 5CFCRD.2048-03, 5CFCRD.4096-03, 5CFCRD.8192-03 - Order data.....	185
Table 187:	5CFCRD.0064-03, 5CFCRD.0128-03, 5CFCRD.0256-03, 5CFCRD.0512-03, 5CFCRD.1024-03, 5CFCRD.2048-03, 5CFCRD.4096-03, 5CFCRD.8192-03 - Technical data.....	185
Table 188:	5MD900.USB2-02 - Order data.....	189
Table 189:	5MD900.USB2-02 - Technical data.....	189
Table 190:	5MD900.USB2-02 - Contents of delivery.....	192
Table 191:	5A5003.03 - Order data.....	193
Table 192:	5A5003.03 - Technical data.....	193
Table 193:	5A5003.03 - Contents of delivery.....	193
Table 194:	5MMUSB.2048-01 - Order data.....	195
Table 195:	5MMUSB.2048-01 - Technical data.....	195
Table 196:	5CADVI.0018-00, 5CADVI.0050-00, 5CADVI.0100-00 - Order data.....	197
Table 197:	5CADVI.0018-00, 5CADVI.0050-00, 5CADVI.0100-00 - Technical data.....	197
Table 198:	5CASDL.0018-00, 5CASDL.0050-00, 5CASDL.0100-00, 5CASDL.0150-00, 5CASDL.0200-00, 5CASDL.0250-00, 5CASDL.0300-00 - Order data.....	200
Table 199:	5CASDL.0018-00, 5CASDL.0050-00, 5CASDL.0100-00, 5CASDL.0150-00, 5CASDL.0200-00, 5CASDL.0250-00, 5CASDL.0300-00 - Technical data.....	200
Table 200:	5CASDL.0018-01, 5CASDL.0050-01, 5CASDL.0100-01, 5CASDL.0150-01 - Order data.....	203
Table 201:	5CASDL.0018-01, 5CASDL.0050-01, 5CASDL.0100-01, 5CASDL.0150-01 - Technical data.....	203
Table 202:	5CASDL.0018-03, 5CASDL.0050-03, 5CASDL.0100-03, 5CASDL.0150-03, 5CASDL.0200-03, 5CASDL.0250-03, 5CASDL.0300-03 - Order data.....	206
Table 203:	5CASDL.0018-03, 5CASDL.0050-03, 5CASDL.0100-03, 5CASDL.0150-03, 5CASDL.0200-03, 5CASDL.0250-03, 5CASDL.0300-03 - Technical data.....	206
Table 204:	5CASDL.0xxx-03 SDL flex cables - Structure.....	208
Table 205:	5CASDL.0300-13, 5CASDL.0400-13, 5CASDL.0430-13 - Order data.....	209
Table 206:	5CASDL.0300-13, 5CASDL.0400-13, 5CASDL.0430-13 - Technical data.....	209
Table 207:	5CAUSB.0018-00, 5CAUSB.0050-00 - Order data.....	213
Table 208:	5CAUSB.0018-00, 5CAUSB.0050-00 - Technical data.....	213
Table 209:	9A0014.02, 9A0014.05, 9A0014.10 - Order data.....	214
Table 210:	9A0014.02, 9A0014.05, 9A0014.10 - Technical data.....	214
Table 211:	5SWHMI.0000-00 - Order data.....	216
Table 212:	Battery status.....	219
Table 213:	Abbreviations used in this user's manual.....	223

0AC201.91.....	175
0TB103.9.....	177
0TB103.91.....	177
0TB1208.3100.....	178
1A4600.10-5.....	164
1A4601.06-5.....	164
1A4601.06-T.....	164
4A0006.00-000.....	175
5A5003.03.....	193
5CADVI.0018-00.....	197
5CADVI.0050-00.....	197
5CADVI.0100-00.....	197
5CASDL.0018-00.....	200
5CASDL.0018-01.....	203
5CASDL.0018-03.....	206
5CASDL.0050-00.....	200
5CASDL.0050-01.....	203
5CASDL.0050-03.....	206
5CASDL.0100-00.....	200
5CASDL.0100-01.....	203
5CASDL.0100-03.....	206
5CASDL.0150-00.....	200
5CASDL.0150-01.....	203
5CASDL.0150-03.....	206
5CASDL.0200-00.....	200
5CASDL.0200-03.....	206
5CASDL.0250-00.....	200
5CASDL.0250-03.....	206
5CASDL.0300-00.....	200
5CASDL.0300-03.....	206
5CASDL.0300-13.....	209
5CASDL.0400-13.....	209
5CASDL.0430-13.....	209
5CAUSB.0018-00.....	213
5CAUSB.0050-00.....	213
5CFCRD.0064-03.....	185
5CFCRD.0128-03.....	185
5CFCRD.016G-06.....	181
5CFCRD.0256-03.....	185
5CFCRD.032G-06.....	181
5CFCRD.0512-03.....	185
5CFCRD.0512-06.....	181
5CFCRD.1024-03.....	185
5CFCRD.1024-06.....	181
5CFCRD.2048-03.....	185
5CFCRD.2048-06.....	181
5CFCRD.4096-03.....	185
5CFCRD.4096-06.....	181
5CFCRD.8192-03.....	185
5CFCRD.8192-06.....	181
5MD900.USB2-02.....	189
5MMDDR.0512-01.....	38
5MMDDR.1024-01.....	38
5MMDDR.2048-01.....	38
5MMHDD.0250-00.....	62
5MMHDD.0500-00.....	64
5MMSSD.0060-00.....	66
5MMSSD.0180-00.....	68
5MMUSB.2048-01.....	195
5PC510.SX01-00.....	31
5PP5CP.US15-00.....	36
5PP5CP.US15-01.....	36

5PP5CP.US15-02.....	36
5PP5IF.CETH-00.....	39
5PP5IF.CHDA-00.....	41
5PP5IF.FCAN-00.....	49
5PP5IF.FETH-00.....	43
5PP5IF.FPLM-00.....	45
5PP5IF.FX2X-00.....	51
5PP5IF.FXCM-00.....	53
5PP5IO.GMAC-00.....	55
5SWHMI.0000-00.....	216
5SWWCE.0837-ENG.....	162
5SWWI7.0100-ENG.....	156
5SWWI7.0100-GER.....	156
5SWWI7.0300-MUL.....	156
5SWWI7.0537-ENG.....	160
5SWWI7.0737-MUL.....	160
5SWWI7.1100-ENG.....	156
5SWWI7.1100-GER.....	156
5SWWI7.1300-MUL.....	156
5SWWI7.1537-ENG.....	160
5SWWI7.1737-MUL.....	160
5SWWXP.0600-ENG.....	155
5SWWXP.0600-GER.....	155
5SWWXP.0600-MUL.....	155
5SWWXP.0737-ENG.....	158
9A0014.02.....	214
9A0014.05.....	214
9A0014.10.....	214

A

Accessories.....	175
ACPI.....	150, 151
ADI.....	165
.NET SDK.....	169
Development Kit.....	167
air circulation.....	73
ambient temperature.....	71
ARemb.....	164
ARwin.....	134, 164
Automation Runtime.....	164
Automation Runtime Embedded.....	164
Automation Runtime Windows.....	164

B

B&R Automation Device Interface.....	165
B&R Control Center.....	165
B&R Embedded OS Installer.....	163
B&R Key Editor.....	171
backup BIOS.....	95
Battery.....	26
Battery status evaluation.....	26, 219
BIOS	
ACPI table/features control.....	123
Advanced.....	113
Advanced CPU control.....	134
Boot.....	138
Boot configuration.....	115
Boot type order.....	140
Channel 1 master.....	118
Channel 1 slave.....	119
Console redirection.....	127
CPU board features.....	96
CPU board monitor.....	100
Exit.....	143
Hard disk drive.....	141
I/O board features.....	105
IDE configuration.....	117
IF board features.....	110
Legacy.....	139
LPC devices.....	97, 102, 106
Main.....	94
Memory module features.....	112
OEM features.....	95
Other.....	142
Panel control.....	109
PCI Express root port 1.....	123
PCI Express root port 2.....	126
Peripheral configuration.....	116
Platform power management.....	137
Power.....	133
RAM configuration.....	114
SDIO configuration.....	122
Security.....	130
Set supervisor password.....	131
Set user password.....	132
Statistical values.....	98, 103, 107, 111
System unit features.....	101
Temperature values.....	99, 104, 108
Thermal trip points settings.....	136

USB.....	141
USB configuration.....	121
Video configuration.....	120
BIOS default settings.....	144
BIOS setup.....	91
BIOS setup keys.....	93
BIOS upgrade.....	152
Blink code.....	29
Boot order.....	138

C

Cable connections.....	74
Cables.....	197
DVI cables.....	197
SDL cables.....	200
SDL cables with 45° connector.....	203
SDL flex cables.....	206
SDL flex cables with extender.....	209
USB cables.....	213
CAN interface.....	50, 54
CAN master interface.....	49, 53
CAN terminating switch.....	50, 54
CE mark.....	173
Certifications.....	174
UL.....	174
Changing the battery.....	219
climate-controlled chamber.....	79
COM1.....	24
COM2.....	57
CompactFlash.....	27
CompactFlash cards.....	179
Control Center.....	76, 165
Creating reports.....	165

D

deflect disturbances.....	75
Device interfaces.....	22
Dimensions.....	34
Dimension standards.....	13
Disposal.....	12, 12
Drilling template.....	35
Drives.....	62
DVI.....	56
DVI cables.....	197
Dynamic wear leveling.....	179

E

Electromagnetic compatibility.....	173
EMC directive.....	173
ESD.....	10
Electrical components with a housing.....	10
Electrical components without a housing.....	10
Individual components.....	10
Packaging.....	10
ETH.....	24
Ethernet.....	24
Ethernet interface.....	40, 44
example programs.....	79

F

Firmware upgrade.....	154
Flex radius.....	74
Flex radius specifications.....	74
Fully assembled device.....	19
Functional ground.....	75

G

General tolerance.....	13
Ground connection.....	75
Grounding.....	23
Guidelines.....	13

H

hard disk.....	55
HDA.....	41
HDA sound.....	55
HMI Drivers & Utilities DVD.....	216
Humidity specifications.....	20

I

I/O address assignment.....	150
immunity to disturbances.....	75
implementation guide.....	79
Installation.....	70
Mounting orientations.....	71
Interface board.....	30, 39
CAN interface.....	50, 54
Ethernet interface.....	40, 44
MIC, Line IN, Line OUT.....	41
POWERLINK interface.....	46
Status LEDs.....	50, 52, 54
X2X interface.....	52, 54
Interfaces.....	22
Interrupt assignment.....	150

K

Key Editor.....	171
-----------------	-----

L

LED.....	29
LED indicator.....	29
loopback adapter.....	78
Low-voltage directive.....	173

M

Main memory.....	38
MIC, Line IN, Line OUT.....	41, 60
Mounting orientation	
0°.....	71
180°.....	72
90°.....	71
mounting plates.....	70

O

Operating system	
Windows 7.....	156
Windows CE.....	162
Windows Embedded Standard 2009.....	158
Windows Embedded Standard 7.....	160
Windows XP Professional.....	155

P

Panel connection.....	56
Peripheral USB devices.....	89
Power button.....	28
Power calculation.....	21
Power connectors.....	177
Power failure logic.....	222
Power LED.....	29
POWERLINK.....	45
LED STATUS.....	46
Link LED.....	46
Speed LED.....	46
System failure error codes.....	48
POWERLINK interface.....	46
Power management.....	21
Proper ESD handling.....	10

R

RAM address assignment.....	150
Relative humidity.....	20
Replacing a CompactFlash card.....	221
Reset button.....	28
Resource distribution	
I/O address assignment.....	150
RS232	
Bus length.....	57
Cable type.....	57
RS232 cables.....	214
RS422	
Bus length.....	58
Cable type.....	58
RS485	
Bus length.....	58, 59
Cable type.....	58, 59
RS485 interface.....	59

S

Safety notices.....	10
Environmental conditions.....	11
Environmentally friendly disposal.....	12
Installation.....	11
Intended use.....	10
Operation.....	11
Policies and procedures.....	10
Protection against electrostatic discharge.....	10
Separation of materials.....	12
Transport and storage.....	11
SDL.....	56

SDL cables.....	200
SDL cables with 45° connector.....	203
SDL flex cables.....	206
SDL flex cables with extender.....	209
SDL resolution.....	56, 84, 88
SD memory card slot.....	27
Serial interface.....	24, 57
Smart Display Link.....	56
Smart Display Link/DVI socket.....	55
software versions.....	165
solid-state disk.....	55
spacing.....	73
Standards and guidelines.....	173
Static wear leveling.....	179
Status LEDs.....	29, 50, 52, 54
supply voltage.....	23, 75

T

Temperature evaluation.....	76, 76
Temperature monitoring.....	222
Temperature sensor locations.....	19
Temperature specifications.....	19
Temperature test.....	76
Temperature test instructions.....	76
Temperature test procedure.....	76
terminating resistor.....	50, 54

U

UL certification.....	174
Upgrade	
BIOS.....	152
Firmware.....	154
Upgrade information.....	152
Upgrade problems.....	154
USB.....	25, 60
USB cables.....	213
USB flash drive.....	195
USB media drive.....	189
user serial ID.....	165

W

WES2009.....	158
WES7.....	161
Windows 7.....	156
Windows CE.....	162
Windows CE 6.0 features.....	162
Windows Embedded Standard 2009.....	158
Windows Embedded Standard 7.....	160
Windows XP Professional.....	155

X

X2X interface.....	52, 54
X2X Link master interface.....	51, 53