


Automation PC 511

User's Manual

Version: **1.00 (April 2012)**
Order no.: **MAAPC511-ENG**

All information contained in this manual is current as of its creation/publication. We reserve the right to change the contents of this manual without warning. The information contained herein is believed to be accurate as of the date of publication; however, Bernecker + Rainer Industrie-Elektronik Ges.m.b.H. makes no warranty, expressed or implied, with regard to the products or the documentation contained within this book. Bernecker + Rainer Industrie-Elektronik Ges.m.b.H. shall not be liable in the event of incidental or consequential damages in connection with or arising from the furnishing, performance or use of these products. The software names, hardware names, and trademarks used in this document are registered by the respective companies.

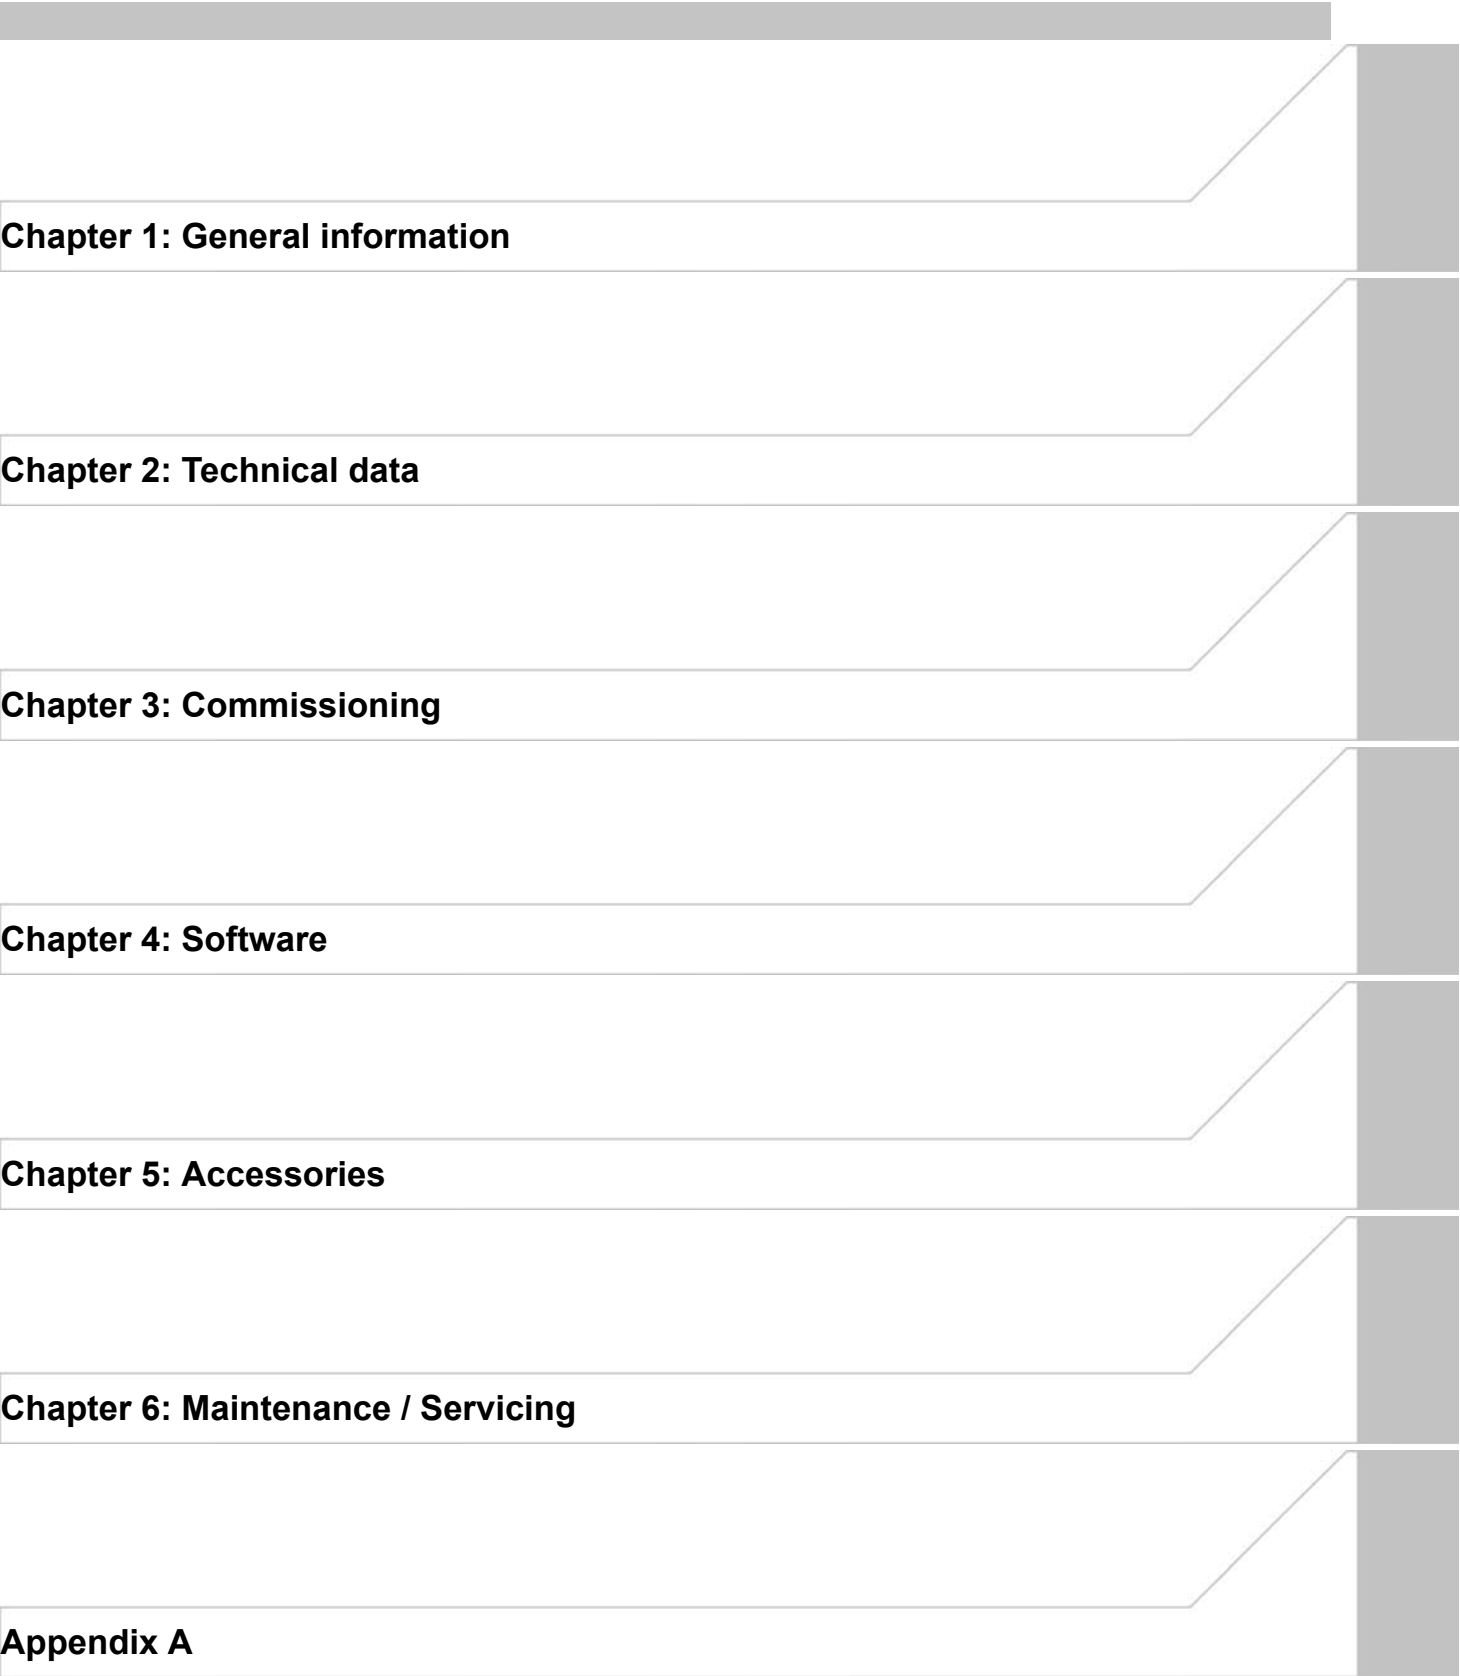

Chapter 1: General information

Chapter 2: Technical data

Chapter 3: Commissioning

Chapter 4: Software

Chapter 5: Accessories

Chapter 6: Maintenance / Servicing

Appendix A

Chapter 1 General information.....	8
1 Manual history.....	8
2 Safety notices.....	9
2.1 Intended use.....	9
2.2 Protection against electrostatic discharge.....	9
2.2.1 Packaging.....	9
2.2.2 Guidelines for proper ESD- Proper handling.....	9
2.3 Policy and procedures.....	9
2.4 Transport and storage.....	10
2.5 Installation.....	10
2.6 Operation.....	10
2.6.1 Protection against touching electrical parts.....	10
2.6.2 Environmental conditions - dust, humidity, aggressive gases.....	10
2.6.3 Programs, viruses, and dangerous programs.....	10
2.7 Environmentally-friendly disposal.....	11
2.7.1 Separation of materials.....	11
3 Organization of safety notices.....	12
4 Guidelines.....	12
5 Overview.....	13
Chapter 2 Technical data.....	15
1 Introduction.....	15
1.1 Features.....	15
1.2 System components / configuration.....	16
1.2.1 Configuration - Basic system.....	16
1.2.2 Configuration software, accessories.....	17
2 Entire device.....	18
2.1 Temperature specifications.....	18
2.1.1 Temperature sensor locations.....	18
2.1.2 Temperature monitoring.....	18
2.2 Humidity specifications.....	19
2.3 Power management.....	20
2.3.1 Block diagram - Supply voltage.....	20
2.4 Device interfaces.....	21
2.4.1 Overview of device interfaces.....	21
2.4.2 Supply voltage +24 VDC.....	22
2.4.3 Serial interface COM.....	23
2.4.4 Ethernet (ETH).....	24
2.4.5 USB ports.....	25
2.4.6 Battery.....	26
2.4.7 CompactFlash Slot.....	27
2.4.8 SD Memory Card Slot.....	27
2.4.9 Power button.....	28
2.4.10 Reset button.....	28
2.4.11 Mode / Node switch.....	28
2.4.12 Status LEDs.....	29
2.4.13 Interface board Insert.....	30
2.4.14 I/O board Insert.....	30
3 Individual components.....	31
3.1 System units.....	31
3.1.1 5PC511.SX01-00.....	31
3.2 US15W - CPU boards.....	36
3.2.1 General information.....	36
3.2.2 Order data.....	36
3.2.3 Technical data.....	36
3.3 Main memory.....	37
3.3.1 Order data.....	37

3.3.2 Technical data.....	37
3.4 Interface Boards.....	38
3.4.1 5PP5IF.CETH-00.....	38
3.4.2 5PP5IF.CHDA-00.....	40
3.4.3 5PP5IF.FETH-00.....	42
3.4.4 5PP5IF.FPLM-00.....	44
3.4.5 5PP5IF.FCAN-00.....	47
3.4.6 5PP5IF.FX2X-00.....	49
3.4.7 5PP5IF.FXCM-00.....	51
3.5 I/O boards.....	53
3.5.1 5PP5IO.GNAC-00.....	53
Chapter 3 Commissioning.....	58
1 Installation.....	58
1.1 Procedure.....	58
1.2 Important mounting information.....	58
1.3 Mounting orientation.....	59
1.3.1 Mounting orientation0°.....	59
1.3.2 Mounting orientation90°.....	59
1.3.3 Mounting orientation90° vertical.....	60
1.3.4 Mounting orientation180°.....	60
1.4 Spacing for air circulation.....	61
2 Cable connections.....	62
3 Grounding concept.....	63
4 Operation with and without I/O board.....	64
4.1 APC511 Operation with I/O board.....	64
4.2 APC511 Operation with I/O board (Headless Option).....	65
Chapter 4 Software.....	66
1 BIOS options.....	66
1.1 General information.....	66
1.2 BIOS setup and start procedure.....	66
1.2.1 BIOS setup keys.....	68
1.3 Main.....	69
1.4 OEM Features.....	70
1.4.1 CPU Board Features.....	71
1.4.2 System Unit Features.....	76
1.4.3 I/O Board Features.....	80
1.4.4 IF Board Features.....	85
1.4.5 Memory Module Features.....	87
1.5 Advanced.....	88
1.5.1 RAM configuration.....	89
1.5.2 Boot Configuration.....	90
1.5.3 Peripheral Configuration.....	91
1.5.4 IDE Configuration.....	92
1.5.5 Video Configuration.....	95
1.5.6 USB Configuration.....	96
1.5.7 SDIO Configuration.....	97
1.5.8 ACPI Table/Features Control.....	98
1.5.9 PCI Express Root Port 1.....	98
1.5.10 PCI Express Root Port 2.....	101
1.5.11 Console Redirection.....	102
1.6 Security.....	105
1.6.1 Set Supervisor Password.....	106
1.6.2 Set User Password.....	107
1.7 Power.....	108
1.7.1 Advanced CPU Control.....	109

1.7.2 Platform Power Management.....	112
1.8 Boot.....	113
1.8.1 Legacy.....	114
1.9 Exit.....	118
1.10 BIOS default settings.....	119
1.10.1 Main.....	119
1.10.2 OEM Features.....	119
1.10.3 Advanced.....	121
1.10.4 Power.....	123
1.10.5 Boot.....	124
1.11 Distribution of resources.....	125
1.11.1 RAM address assignment.....	125
1.11.2 I/O address assignment.....	125
1.11.3 Interrupt assignments in PIC mode.....	125
1.11.4 Interrupt assignments in APIC mode.....	126
2 Upgrade information.....	127
2.1 BIOS upgrade.....	127
2.1.1 What information do I need?.....	127
2.1.2 Using the Control Center.....	128
2.2 Firmware upgrade.....	129
2.2.1 Procedure.....	129
2.3 Upgrade problems.....	129
3 Windows XP Professional.....	130
3.1 Order data.....	130
3.2 Overview.....	130
3.3 Installation.....	130
3.4 Drivers.....	130
4 Windows 7.....	131
4.1 General information.....	131
4.2 Order data.....	131
4.3 Overview.....	131
4.4 Installation.....	131
4.5 Drivers.....	131
4.6 Special considerations, limitations.....	131
5 Windows Embedded Standard 2009.....	132
5.1 General information.....	132
5.2 Order data.....	132
5.3 Overview.....	132
5.4 Features with WES2009 (Windows Embedded Standard 2009).....	132
5.5 Installation.....	133
5.6 Drivers.....	133
5.6.1 Touch screen drivers.....	133
6 Windows Embedded Standard 7.....	134
6.1 General information.....	134
6.2 Order data.....	134
6.3 Overview.....	134
6.4 Features with WES7 (Windows Embedded Standard 7).....	134
6.5 Installation.....	135
6.6 Drivers.....	135
6.6.1 Touch screen drivers.....	135
7 Windows CE.....	136
7.1 General information.....	136
7.2 Order data.....	136
7.3 Overview.....	136
7.4 Windows CE 6.0 features.....	136
7.5 Requirements.....	136
7.6 Installation.....	136

7.7 B&R Embedded OS Installer.....	137
8 Automation Runtime.....	138
8.1 General information.....	138
8.2 Order data.....	138
8.3 Automation Runtime Windows (ARwin).....	138
8.4 Automation Runtime Embedded (ARemb).....	138
9 B&R Automation Device Interface (ADI) - Control Center.....	139
9.1 Functions.....	139
9.2 Installation.....	140
10 B&R Automation Device Interface (ADI) Development Kit.....	141
11 B&R Key Editor.....	143
Chapter 5 Accessories.....	145
1 Replacement CMOS batteries.....	145
1.1 0AC201.91 / 4A0006.00-000.....	145
1.2 General information.....	145
1.3 Order data.....	145
1.4 Technical data.....	145
2 Supply voltage connectors.....	146
2.1 0TB103.9x.....	146
2.1.1 General information.....	146
2.1.2 Order data.....	146
2.1.3 Technical data.....	146
3 Interface board connection.....	147
3.1 0TB1208.3100.....	147
3.1.1 General information.....	147
3.1.2 Order data.....	147
3.1.3 Technical data.....	147
4 CompactFlash cards.....	148
4.1 General information.....	148
4.2 Basics.....	148
4.2.1 Flash technology.....	148
4.2.2 Wear leveling.....	148
4.2.3 ECC error correction.....	148
4.2.4 S.M.A.R.T. Support.....	148
4.2.5 Maximum reliability.....	149
4.3 5CFCRD.xxxx-06.....	150
4.3.1 General information.....	150
4.3.2 Order data.....	150
4.3.3 Technical data.....	150
4.3.4 Temperature humidity diagram.....	152
4.3.5 Dimensions.....	152
4.3.6 Benchmark.....	153
4.4 5CFCRD.xxxx-04.....	154
4.4.1 General information.....	154
4.4.2 Order data.....	154
4.4.3 Technical data.....	154
4.4.4 Temperature humidity diagram.....	156
4.4.5 Dimensions.....	156
4.4.6 Benchmark.....	157
4.5 5CFCRD.xxxx-03.....	158
4.5.1 General information.....	158
4.5.2 Order data.....	158
4.5.3 Technical data.....	158
4.5.4 Temperature humidity diagram.....	160
4.5.5 Dimensions.....	160
4.6 Known problems / issues.....	161

5	USB flash drive.....	162
5.1	5MMUSB.2048-01.....	162
5.1.1	General information.....	162
5.1.2	Order data.....	162
5.1.3	Technical data.....	162
5.1.4	Temperature humidity diagram.....	163
6	Cable.....	164
6.1	DVI cable.....	164
6.1.1	5CADVI.0xxx-00.....	164
6.2	SDL cables.....	167
6.2.1	5CASDL.0xxx-00.....	167
6.3	SDL cable with 45° plug.....	170
6.3.1	5CASDL.0xxx-01.....	170
6.4	SDL flex cable.....	173
6.4.1	5CASDL.0xxx-03.....	173
6.5	SDL flex cable with extender.....	176
6.5.1	5CASDL.0xx0-13.....	176
6.6	USB cable.....	180
6.6.1	5CAUSB.00xx-00.....	180
6.7	RS232 cable.....	181
6.7.1	9A0014.xx.....	181
Chapter 6 Maintenance / Servicing.....		183
1	Changing the battery.....	183
1.1	Battery status evaluation.....	183
1.2	Procedure.....	183
2	Exchanging the CompactFlash card.....	185
Appendix A		186
1	Maintenance Controller Extended (MTCX).....	186
2	Abbreviations.....	187

Chapter 1 • General information

1 Manual history

Version	Date	Change
0.10 Preliminary	26-Aug-11	• First version
1.00	12-Apr-12	• - Chapter Chapter 4 "Software" updated. • - Chapter Chapter 6 "Maintenance / Servicing" updated. • The terminal block 0TB1208.3100 (interface board plug) was updated in Chapter 5 "Accessories". • New CompactFlash cards 5CFCRD.xxxx-06 added to Chapter 5 "Accessories" - CompactFlash cards 5CFCRD.xxxx-04 discontinued. • Drilling template for the system unit corrected. • Interface board 5PP5IF.FETH-00 updated. • Section "Power management" on page 20 added to the chapter "Technical data". • Sections " Mounting orientation" on page 59 and "Spacing for air circulation." on page 61 added to chapter "Commissioning". • Section "Maintenance Controller Extended (MTCX)" on page 186 added to the chapter "".

Table 1: Manual history

2 Safety notices

2.1 Intended use

Programmable logic controllers (PLCs), operating and monitoring devices (industrial PCs, Power Panels, Mobile Panels, etc.), and B&R uninterruptible power supplies have been designed, developed, and manufactured for conventional use in industry. They were not designed, developed and manufactured for any use involving serious risks or hazards that could lead to death, injury, serious physical damage or loss of any kind without the implementation of exceptionally stringent safety precautions. In particular, such risks and hazards include the use of these devices to monitor nuclear reactions in nuclear power plants, as well as flight control systems, flight safety, the control of mass transit systems, medical life support systems and the control of weapons systems.

2.2 Protection against electrostatic discharge

Electrical components that can be damaged by electrostatic discharge (ESD) must be handled accordingly.

2.2.1 Packaging

- **Electrical components with housing**
... do not require special ESD packaging, but must be handled properly (see "Electrical components with housing").
- **Electrical components without housing**
must be protected by ESD-suitable packaging.

2.2.2 Guidelines for proper ESD- Proper handling

Electrical components with housing

- Do not touch the connector contacts on connected cables.
- Do not touch the contact tips on the circuit boards.

Electrical components without housing

The following applies in addition to "Electrical components with housing"

- Any persons handling electrical components or devices that will be installed in the electrical components must be grounded.
- Components can only be touched on the small sides or on the front plate.
- Components should always be stored in a suitable medium (ESD packaging, conductive foam, etc.). Metallic surfaces are not suitable storage surfaces!
- Electrostatic discharges should be avoided on the components (e.g. through charged plastics).
- A minimum distance of 10 cm must be kept from monitors and TV sets.
- Measurement devices and equipment must be grounded.
- Measurement probes on potential-free measurement devices must be discharged on sufficiently grounded surfaces before taking measurements.

Individual components

- ESD protective measures for individual components are thoroughly integrated at B&R (conductive floors, footwear, arm bands, etc.).
- The increased ESD protective measures for individual components are not necessary for our customers for handling B&R products.

2.3 Policy and procedures

Electronic devices are generally not failsafe. In the event of a failure on the programmable control system, operating or monitoring device, or uninterruptible power supply, the user is responsible for ensuring that other devices that may be connected, e.g. motors, are in a secure state.

Both when using programmable logic controllers and when using operating and monitoring devices as control systems in conjunction with a soft PLC (e.g. B&R Automation Runtime or comparable products) or a slot PLC (e.g. B&R LS251 or comparable products), the safety precautions applying to industrial control systems (e.g. the provision of safety devices such as emergency stop circuits, etc.) must be observed in accordance with applicable national and international regulations. The same applies for all other devices connected to the system, such as drives.

All tasks such as installation, commissioning, and maintenance are only permitted to be carried out by qualified personnel. Qualified personnel are persons familiar with transport, mounting, installation, commissioning, and operation of the product who also have the respective qualifications (e.g. IEC 60364). National accident prevention guidelines must be followed.

The safety guidelines, connection descriptions (type plate and documentation), and limit values listed in the technical data are to be read carefully before installation and commissioning and must be observed.

2.4 Transport and storage

During transport and storage, devices must be protected against impermissible stress (mechanical loads, temperature, humidity, aggressive atmospheres, etc.).

2.5 Installation

- Installation must be performed according to the documentation using suitable equipment and tools.
- Devices must be installed by qualified personnel without voltage applied. Before installation, voltage to the control cabinet should be switched off and prevented from being switched on again.
- General safety regulations and nationally applicable accident prevention guidelines must be observed.
- Electrical installation must be carried out according to the relevant guidelines (e.g. line cross section, fuse, protective ground connection).

2.6 Operation

2.6.1 Protection against touching electrical parts

To operate programmable logic controllers, operating and monitoring devices or uninterruptible power supplies, certain components must carry dangerous voltage levels of over 42 VDC. Touching one of these parts can result in a life-threatening electric shock. This could lead to death, severe injury or damage to equipment.

Before turning on the programmable logic controller, the operating and monitoring devices and the uninterruptible power supply, ensure that the housing is properly grounded (PE rail). The ground connection must be established when testing the operating and monitoring devices or the uninterruptible power supply, even when operating them for only a short time.

Before turning the device on, all parts that carry voltage must be securely covered. During operation, all covers must remain closed.

2.6.2 Environmental conditions - dust, humidity, aggressive gases

Use of operating and monitoring devices (e.g. industrial PCs, power panels, mobile panels, etc.) and uninterruptible power supplies in very dusty environments should be avoided. Dust collection on the devices influences their function and, especially in systems with active cooling (fans), sufficient cooling cannot be guaranteed.

The presence of aggressive gases in the environment can also lead to malfunctions. When combined with high temperature and humidity, aggressive gases - e.g. with sulfur, nitrogen and chlorine components - start chemical processes that can damage electronic components very quickly. Signs of the presence of aggressive gases are blackened copper surfaces and cable ends on existing installations.

For operation in dusty or humid conditions, correctly installed (cutout installation) operating and monitoring devices like Automation Panel or Power Panel are protected on the front side. The rear side of all devices must be protected from dust and humidity and must be cleaned at suitable intervals.

2.6.3 Programs, viruses, and dangerous programs

The system is subject to potential danger each time data is exchanged or software is installed from a data medium (e.g. diskette, CD-ROM, USB flash drive, etc.), a network connection, or the Internet. The user is responsible for assessing these dangers, implementing preventative measures such as virus protection programs, firewalls, etc. and obtaining software from reliable sources.

2.7 Environmentally-friendly disposal

All B&R programmable controllers, operating and monitoring devices, and uninterruptible power supplies are designed to inflict as little harm on the environment as possible.

2.7.1 Separation of materials

It is necessary to separate different materials so the device can undergo an environmentally-friendly recycling process.

Component	Disposal
Programmable logic controllers Operating and monitoring devices Uninterruptible power supply Batteries & rechargeable batteries Cables	Electronics recycling
Cardboard box / paper packaging	Paper / cardboard recycling
Plastic packaging	Plastic recycling

Table 2: Environmentally-friendly separation of materials

Disposal must comply with the respective legal regulations.


3 Organization of safety notices

The safety notices in this manual are organized as follows:

Safety notice	Description
Danger!	Disregarding safety regulations and notices can be life-threatening.
Caution!	Disregarding safety regulations and notices can result in severe injury or substantial damage to equipment.
Warning!	Disregarding safety guidelines and notices can result in injury or damage to equipment.
Information:	Important information for preventing errors.

Table 3: Organization of safety notices

4 Guidelines



European dimension standards apply to all dimension diagrams in this document.

All dimensions in mm.

Nominal measurement area	General tolerance according to DIN ISO 2768 medium
Up to 6 mm	± 0.1 mm
for 6 to 30 mm	± 0.2 mm
for 30 to 120 mm	± 0.3 mm
for 120 to 400 mm	± 0.5 mm
for 400 to 1000 mm	± 0.8 mm

Table 4: Nominal measurement areas

5 Overview

Product ID	Short description	on page
5CFCRD.016G-04	CompactFlash 16 GByte B&R	154
5CFCRD.0512-04	CompactFlash 512 MByte B&R	154
5CFCRD.1024-04	CompactFlash 1 GByte B&R	154
5CFCRD.2048-04	CompactFlash 2 GByte B&R	154
5CFCRD.4096-04	CompactFlash 4 GByte B&R	154
5CFCRD.8192-04	CompactFlash 8 GByte B&R	154
5PC511.SX01-00	APC511 System Unit connections for 1x RS232, 2x USB 2.0, 1x Ethernet 10/100/1000; can be expanded with interface board; I/O board (5PP5IO.GNAC-00) and 24 VDC plug for supply voltage (screw clamp: 0TB103.9; cage clamp: 0TB103.91) must be ordered separately.	31
5PP5IF.FETH-00	PP500 interface board; connection for 1x Ethernet 10/100/1000, 512 kB SRAM	42
5SWWCE.0838-ENG	Microsoft OEM Windows CE 6.0 Professional, English; for APC511; please order CompactFlash separately (minimum 128 MB).	136
5SWWI7.0538-ENG	Microsoft OEM Windows Embedded Standard 7 32-bit, English; for APC511; please order CompactFlash separately (minimum 8 GB).	134
5SWWI7.0738-MUL	Microsoft OEM Windows Embedded Standard 7 Premium 32-bit, multilanguage; for APC511; please order CompactFlash separately (minimum 8 GB).	134
5SWWXP.0738-ENG	Microsoft OEM Windows Embedded Standard 2009, English; for APC511; please order CompactFlash separately (minimum 1 GB).	132
Automation Runtime		
1A4600.10-5	B&R Automation Runtime ARwin, incl. License Label	138
1A4601.06-5	B&R Automation Runtime AREmb, incl. License Label	138
1A4601.06-T	B&R Automation Runtime AREmb Terminal, incl. License Label	138
Batteries		
0AC201.91	Lithium batteries 4 pcs., 3 V / 950 mAh button cell We hereby state that the lithium cells contained in this shipment qualify as "partly regulated". Handle with care. If the package is damaged, inspect cells, repack intact cells and protect cells against short circuits. For emergency information, call RENATA SA at + 41 61 319 28 27	145
4A0006.00-000	Lithium battery, 3 V / 950 mAh, button cell	145
CPU boards		
5PP5CP.US15-00	PP500 CPU board Intel Atom Z510, 1100 MHz, 400 MHz FSB, 512 kByte L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 RAM module	36
5PP5CP.US15-01	PP500 CPU board Intel Atom Z520, 1330 MHz, 533 MHz FSB, 512 kByte L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 RAM module	36
5PP5CP.US15-02	PP500 CPU board Intel Atom Z530, 1600 MHz, 533 MHz FSB, 512 kByte L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 RAM module	36
CompactFlash		
5CFCRD.0064-03	CompactFlash 64 MB Western Digital	158
5CFCRD.0128-03	CompactFlash 128 MB Western Digital	158
5CFCRD.016G-06	CompactFlash 16 GByte B&R	150
5CFCRD.0256-03	CompactFlash 256 MB Western Digital	158
5CFCRD.0512-03	CompactFlash 512 MB Western Digital	158
5CFCRD.0512-06	CompactFlash 512 MByte B&R	150
5CFCRD.1024-03	CompactFlash 1 GB Western Digital	158
5CFCRD.1024-06	CompactFlash 1 GByte B&R	150
5CFCRD.2048-03	CompactFlash 2 GB Western Digital	158
5CFCRD.2048-06	CompactFlash 2 GByte B&R	150
5CFCRD.4096-03	CompactFlash 4 GB Western Digital	158
5CFCRD.4096-06	CompactFlash 4 GByte B&R	150
5CFCRD.8192-03	CompactFlash 8 GB Western Digital	158
5CFCRD.8192-06	CompactFlash 8 GByte B&R	150
DVI cables		
5CADVI.0018-00	DVI-D Cable, 1.8 m.	164
5CADVI.0050-00	DVI-D Cable, 5 m.	164
5CADVI.0100-00	DVI-D Cable, 10 m.	164
I/O board		
5PP5IO.GNAC-00	PP500/APC511 I/O board connections for 1x USB 2.0, 1x RS232/422/485, HDA sound, Smart Display Link/ DVI-D.	53
Interface boards		
5PP5IF.CETH-00	PP500 interface board; connection for 1x Ethernet 10/100/1000	38
5PP5IF.CHDA-00	PP500 interface board; connection for 1x MIC, 1x Line IN, 1x Line OUT	40
5PP5IF.FCAN-00	PP500 interface board; connection for 1x CAN master, 512 kB SRAM; order plug separately (cage clamp: 0TB1208.3100)	47
5PP5IF.FPLM-00	PP500 interface board; connections for 2x POWERLINK (with integrated hub); 512 kB SRAM.	44
5PP5IF.FX2X-00	PP500 interface board; connection for 1x X2X master, 512 kB SRAM; order plug separately (cage clamp: 0TB1208.3100)	49
5PP5IF.FXCM-00	PP500 interface board; connection for 1x CAN master, 1x X2X master, 512 kB SRAM; order plug separately (cage clamp 0TB1208.3100).	51
Main memory		
5MMDDR.0512-01	SO-DIMM DDR2 RAM 512 MB PC2-5300	37
5MMDDR.1024-01	SO-DIMM DDR2 RAM 1024 MB PC2-5300	37
5MMDDR.2048-01	SO-DIMM DDR2 RAM 2048 MB PC2-5300	37
RS232 cables		
9A0014.02	RS232 extension cable for remote operating of a display unit with touch screen, 1.8 m.	181
9A0014.05	RS232 extension cable for remote operating of a display unit with touch screen, 5 m.	181
9A0014.10	RS232 extension cable for remote operating of a display unit with touch screen, 10 m.	181

Product ID	Short description	on page
SDL cables		
5CASDL.0018-00	SDL cable, 1.8 m.	167
5CASDL.0050-00	SDL cable, 5 m.	167
5CASDL.0100-00	SDL cable, 10 m.	167
5CASDL.0150-00	SDL cable, 15 m.	167
5CASDL.0200-00	SDL cable, 20 m.	167
5CASDL.0250-00	SDL cable, 25 m.	167
5CASDL.0300-00	SDL cable, 30 m.	167
SDL cables: 45° connectors		
5CASDL.0018-01	SDL cable; 45° connector, 5 m.	170
5CASDL.0050-01	SDL cable; 45° connector, 5 m.	170
5CASDL.0100-01	SDL cable; 45° connector, 10 m.	170
5CASDL.0150-01	SDL cable; 45° connector, 15 m.	170
SDL flex cables		
5CASDL.0018-03	SDL Cable flex, 1.8 m.	173
5CASDL.0050-03	SDL cable flex, 5 m.	173
5CASDL.0100-03	SDL cable flex, 10 m.	173
5CASDL.0150-03	SDL cable flex, 15 m.	173
5CASDL.0200-03	SDL cable flex, 20 m.	173
5CASDL.0250-03	SDL cable flex, 25 m.	173
5CASDL.0300-03	SDL cable flex, 30 m.	173
5CASDL.0300-13	SDL cable with Extender, 30 m.	176
5CASDL.0400-13	SDL cable flex with Extender, 40 m.	176
5CASDL.0430-13	SDL Cable flex with Extender, 43 m.	176
Terminal blocks		
0TB103.9	Connector, 24 VDC, 3-pin female, screw clamps 3.31 mm ² , protected against vibration by the screw flange	146
0TB103.91	Connector, 24 VDC, 3-pin female, cage clamps 3.31 mm ² , protected against vibration by the screw flange	146
0TB1208.3100	Connector, 8-pin, cage clamp, 1 mm ² , protected against vibration by the screw flange.	147
USB accessories		
5MMUSB.2048-01	USB 2.0 flash drive 2048 MB B&R	162
USB cables		
5CAUSB.0018-00	USB 2.0 connecting cable type A - type B, 1.8 m.	180
5CAUSB.0050-00	USB 2.0 connecting cable type A - type B, 5 m.	180
Windows 7		
5SWWI7.0100-ENG	Microsoft OEM Windows 7 Professional 32-bit, DVD, English. Only available with a new device.	131
5SWWI7.0100-GER	Microsoft OEM Windows 7 Professional 32-bit, DVD, German. Only available with a new device.	131
5SWWI7.0300-MUL	Microsoft OEM Windows 7 Ultimate 32-bit, DVD, multilanguage. Only available with a new device.	131
Windows XP Professional		
5SWWXP.0600-ENG	Microsoft OEM Windows XP Professional Service Pack 3, CD, English. Only available with a B&R device.	130
5SWWXP.0600-GER	Microsoft OEM Windows XP Professional Service Pack 3, CD, German. Only available with a device.	130
5SWWXP.0600-MUL	Microsoft OEM Windows XP Professional Service Pack 3, CD, multilanguage. Only available with a B&R device.	130

Chapter 2 • Technical data

1 Introduction

The APC510 and APC511 are the first choice when it comes to running applications where good performance needs to be combined with particularly compact dimensions. These devices are based on Intel Atom processors that are optimized for minimum power dissipation. In the consumer area, this means extended battery life for laptops, but for usage in industrial environments, the strength of Atom processors lies in their ability to reach the upper end of the temperature scale without requiring the use of fans. B&R is able to draw on many years of experience in the area of heat balancing, which even makes it possible to operate selected Core2 Duo processors fan-free. The most important factor when designing the APC510 and APC511 was keeping the dimensions to an absolute minimum, and this meant doing away with the space taken up by fans. Another step that contributes to their compact design is the absence of slots for PCI and PCI Express cards, as well as for standard drives such as DVD. Despite this, these Automation PCs are not limited in terms of modularity and flexibility. A Gigabit Ethernet interface, USB 2.0 ports and serial interfaces are all part of the standard package, as are the sound output (High Definition Audio) and removable external CompactFlash card.

The APC511 is the optimal solution whenever flush mounting is required. With a minimum installation depth of only 63.25 mm, you can have the advantages of a complete PC system even in extremely tight spaces.

1.1 Features

- Intel® Atom™ Z510, Z520 or Z530 processor
- Up to 2 GB SDRAM
- 2x USB 2.0
- 1x RS232
- 1x Ethernet 10/100/1000 MBit/s
- Optional interface and I/O boards
- CompactFlash slot (type I)
- 24 VDC supply voltage
- Operation without fan or heatsink
- BIOS (Insyde)
- Real-time clock, RTC (battery-buffered)

1.2 System components / configuration

The APC511 system can be assembled to meet individual requirements and operating conditions.

The following components are absolutely essential for operation:

- system unit
- CPU board
- Main memory
- Drive (mass memory such as CompactFlash card) for the operating system
- Supply voltage connector (terminal block)

1.2.1 Configuration - Basic system

Configuration - Basic system	
system unit	
A system unit consists of a housing and main board.	 5PC511.SX01-00
CPU board - Main memory	
CPU board	Select 1
	5PP5CP.US15-00 - 1100 MHz 5PP5CP.US15-01 - 1330 MHz 5PP5CP.US15-02 - 1600 MHz
Main memory	Select 1
	 5MMDDR.0512-01 5MMDDR.1024-01 5MMDDR.2048-01

Image 1: Configuration - Basic system

1.2.2 Configuration software, accessories

Configuration - Software, accessories	
system unit A system unit consists of a housing and main board.	 5PC511.SX01-00
Interface board 	Select 1 5PP5IF.CETH-00 - 1x ETH 10/100/100 5PP5IF.CHDA-00 - 1x HDA sound 5PP5IF.FETH-00 - 1x ETH 10/100/100, SRAM 5PP5IF.FPLM-00 - 2x POWERLINK, SRAM 5PP5IF.FCAN-00 - 1x CAN, SRAM 5PP5IF.FX2X-00 - 1x X2X, SRAM 5PP5IF.FXCM-00 - 1x CAN, 1x X2X, SRAM
I/O board 	Select 1  5PP5IO.GNAC-00
CompactFlash 	Select 1  5CFCRD.0512-065CFCRD.4096-06 5CFCRD.1024-065CFCRD.8192-06 5CFCRD.2048-065CFCRD.016G-06
USB accessories 	Select 1  5MMUSB.2048-01
Software 	Select 1  Windows XP 5SWWXP.0600-ENG 5SWWXP.0600-GER 5SWWXP.0600-MUL Windows 7 5SWWI7.0100-ENG 5SWWI7.0100-GER 5SWWI7.0300-MUL Automation Runtime 1A4600.10-5 1A4601.06-5 1A4601.06-T Windows Embedded Standard 2009 5SWWXP.0738-ENG Windows Embedded Standard 7 5SWWI7.0538-ENG 5SWWI7.0738-MUL Windows CE 6.0 5SWWCE.0838-ENG
Terminal blocks 	Select 1 each  Supply voltage connectors 0TB103.9 0TB103.91 Interface board connection 0TB1208.3100

Image 2: Configuration - Software, accessories

2 Entire device

2.1 Temperature specifications

Temperature specifications must account for the permissible temperature range of the system unit as well as the installed components. The respective information can be found in the technical data of the individual components.

The permissible temperature ranges based on the type of installation must also be taken into consideration. For more information about this, please refer to the section "Mounting orientation" on page 59.

Information regarding worst-case conditions

- Thermal Analysis Tool (TAT V2.02) from Intel for simulating 100% processor load
- BurnIn testing tool (BurnIn V4.0 Pro from Passmark Software) to simulate a 100% load on the interface via loop-back adapters (serial interfaces, USB ports)
- Maximum system extension and power consumption

2.1.1 Temperature sensor locations

Sensors indicate temperature values in a variety of locations (USB ports, main memory) in the APC511. The temperatures¹⁾ can be read in BIOS in approved Microsoft Windows operating systems using the B&R Control Center. The ADI driver containing ²⁾, or in Automation Runtime via data points in Automation Studio.

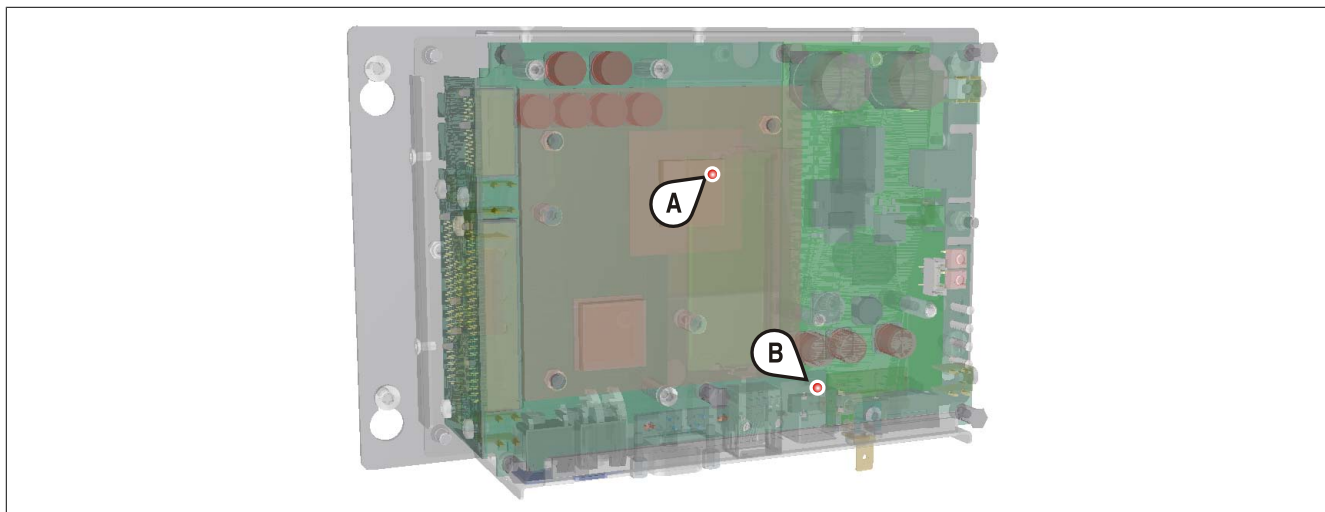


Image 3: Temperature sensor locations

Position	Measurement point for	Measurement	Max. specified
A	CPU	Processor temperature (sensor integrated on the processor).	100°C: 5PP5CP.US15-00, 5PP5CP.US15-01 90°C: 5PP5CP.US15-02
A	Main memory	Ambient temperature of the main memory (sensor integrated in processor).	80°C
B	Interfaces	Temperature of the interfaces (sensor integrated beside USB ports).	80°C
	Interface board	Temperature of an interface board (sensor integrated on the interface board).	dependent on the board
	I/O board	Temperature of an I/O board (sensor integrated on the I/O board).	dependent on the board

Table 5: Temperature sensor locations

2.1.2 Temperature monitoring

Sensors monitor temperature values in various places (CPU, interfaces, interface board, I/O board) in the APC511. The locations of the temperature sensors can be found in the figure "Image 3: Temperature sensor locations" on page 18. The value listed in the table represents the defined maximum temperature³⁾ for this measurement point. An alarm is not triggered when this temperature is exceeded. The temperatures can be read in BIOS or in approved Microsoft Windows operating system and Automation Runtime, using B&R Control Center.

1) The measured temperature approximates the immediate ambient temperature, but can be influenced by neighboring components.

2) the B&R Control Center is available in the Downloads section of the B&R website (www.br-automation.com)

3) The measured temperature approximates the immediate ambient temperature, but can be influenced by neighboring components.

2.2 Humidity specifications

The following table displays the minimum and maximum relative humidity for the individual components that are relevant for the humidity limitations of the entire device. The lowest and highest common values are always used when establishing these limits.

Component		Operation ¹⁾	Storage / Transport ¹⁾
System units		5 to 90%	5 to 95%
US15W - CPU boards		5 to 90%	5 to 95%
Main memory for CPU boards		10 to 90%	5 to 95%
Interface boards	5PP5IF.CETH-00	5 to 90%	5 to 95%
	5PP5IF.CHDA-00	5 to 90%	5 to 95%
	5PP5IF.FETH-00	5 to 90%	5 to 95%
	5PP5IF.FPLM-00	5 to 90%	5 to 95%
	5PP5IF.FCAN-00	5 to 90%	5 to 95%
	5PP5IF.FX2X-00	5 to 90%	5 to 95%
	5PP5IF.FXCM-00	5 to 90%	5 to 95%
I/O board	5PP5IO.GNAC-00	5 to 90%	5 to 95%
Accessories	CompactFlash cards - 5CFCRD.xxxx-06	85%	85%
	CompactFlash cards 5CFCRD.xxxx-04	85%	85%
	CompactFlash cards - 5CFCRD.xxxx-03	8 to 95%	8 to 95%
	Flash drive 5MMUSB.2048-01	10 to 90%	5 to 90%

Table 6: Overview of humidity specifications for individual components

1) Specifications correspond to the relative humidity, non-condensing.

The listed specifications correspond to the relative humidity at an ambient temperature of 30°C. More detailed information about the specific temperature-dependent humidity values can be found in the technical data for the individual components.

2.3 Power management

2.3.1 Block diagram - Supply voltage

The following block diagram presents the simplified structure of the supply voltage for system units.

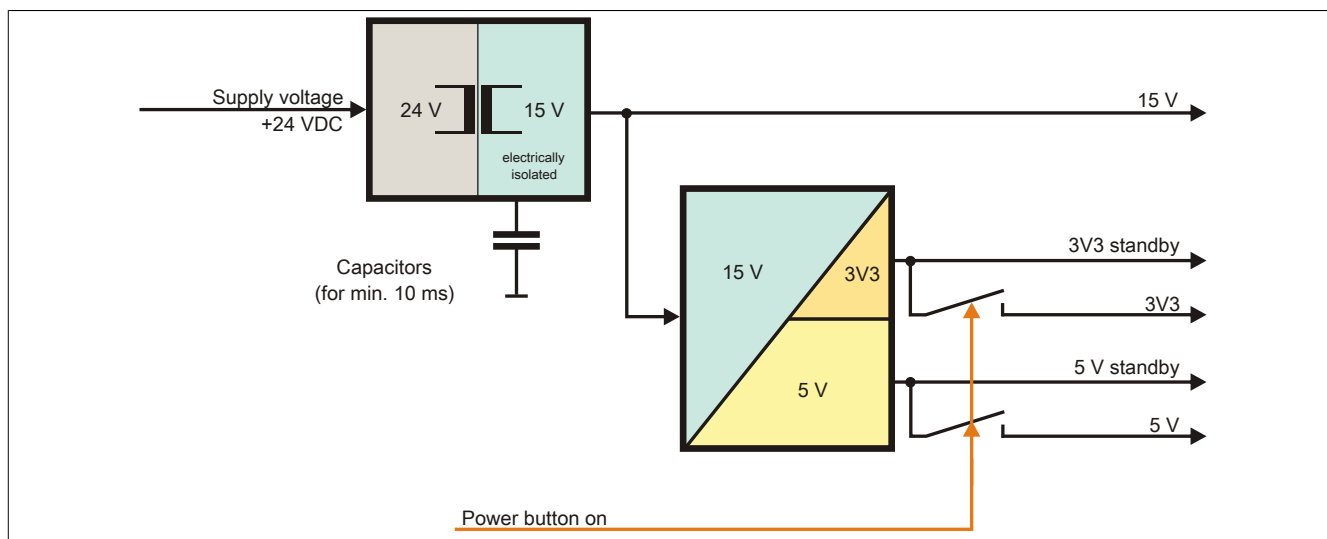


Image 4: Supply voltage for system units

Description

The supply voltage is converted to 15 V with a DC/DC converter. These electrically isolated 15 V feed further DC/DC converters, which generate the remaining voltages.

After the system is turned on (e.g. using the power button), the voltages 3V3 and 5 V are active on the system.

2.4 Device interfaces

2.4.1 Overview of device interfaces

Interfaces for system units with interface and I/O boards

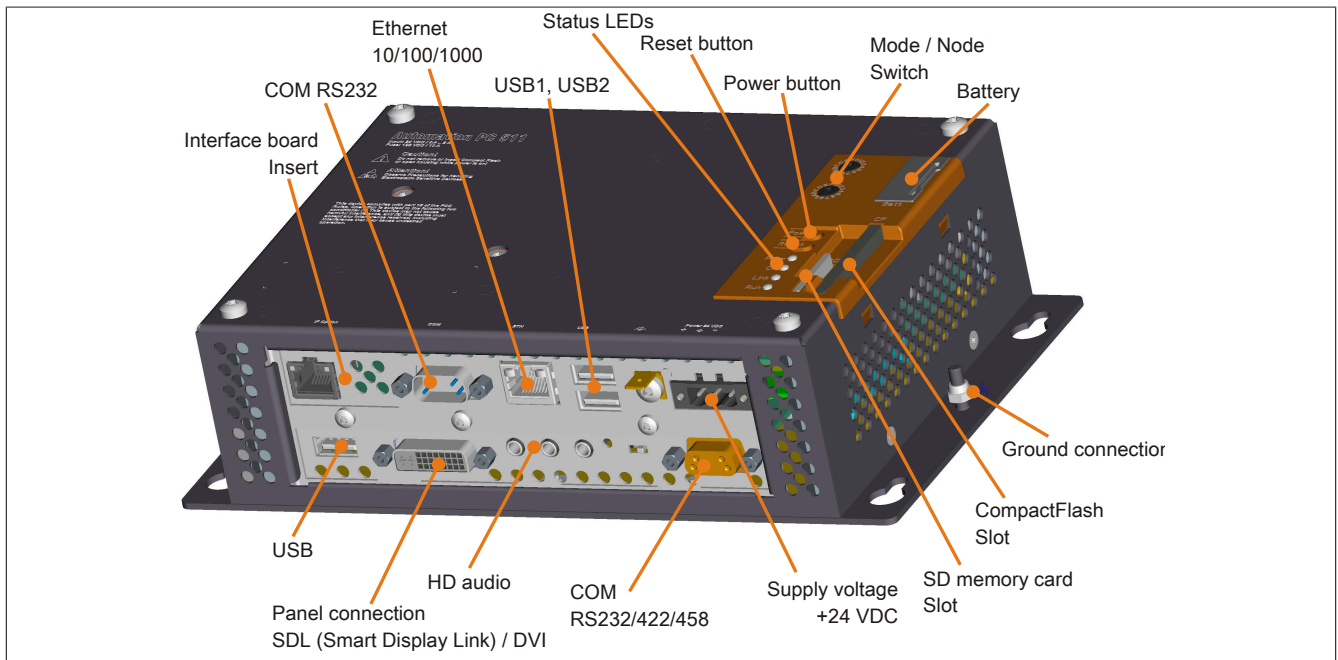


Image 5: Overview of interfaces with interface and I/O boards

Back cover of the system units

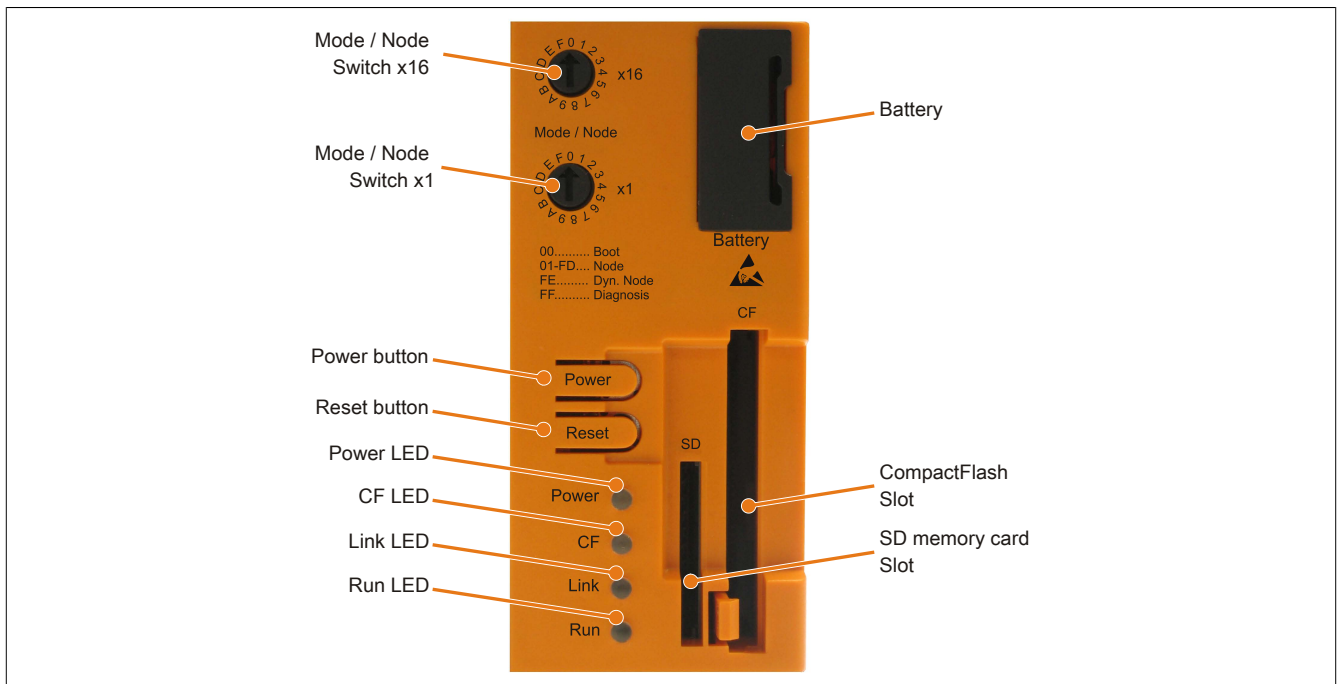


Image 6: Back cover

2.4.2 Supply voltage +24 VDC

The 3-pin socket required for the supply voltage connection is not included in delivery. This can be ordered from B&R using the model number 0TB103.9 (screw clamp) or 0TB103.91 (cage clamp).

The pin assignments can be found either in the following table or printed on the housing. The supply voltage is protected internally by a soldered fuse (10 A, fast-acting), so that the device cannot be damaged if there is an overload (fuse replacement necessary) or if the voltage supply is connected incorrectly (reverse polarity protection - fuse replacement not necessary). The device must be returned to B&R for repairs if the fuse is blown because of an error.

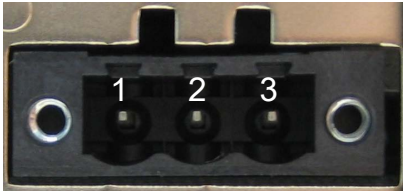
Supply voltage		3-pin, male
Protected against reverse polarity		
Pin	Description	
1	+	
2	Functional ground	
3	-	
Model number	Short description	
Terminal blocks		
0TB103.9	Plug 24 V 5.08 3-pin screw clamp	
0TB103.91	Plug 24 V 5.08 3-pin cage clamp	

Table 7: Supply voltage connection + 24VDC

Ground

Caution!

The pin's connection to the functional ground (pin 2) should be as short as possible (e.g. in the control cabinet). We recommend using the largest possible conductor cross section on the supply plug.

The system units have a ground connection located on the mounting plate.

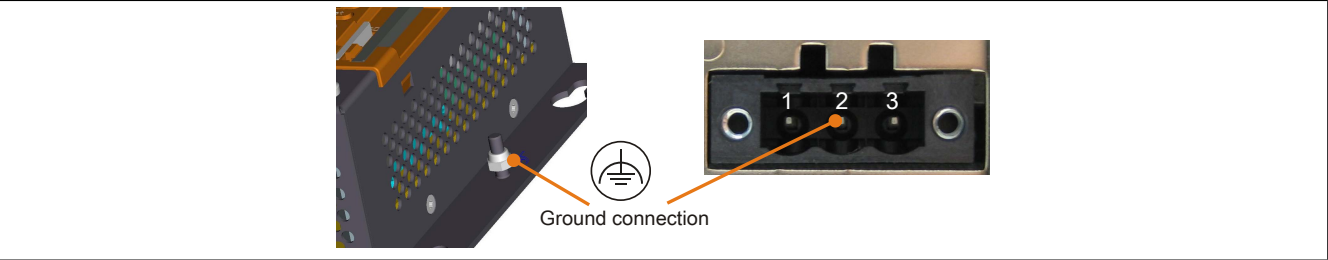


Image 7: Ground connection

The M4 self-locking nut can be used, for example, to fasten a copper strip that is built into the device at a central grounding point in the control cabinet or system. The largest possible conductor cross section should be used (at least 2.5 mm²).

2.4.3 Serial interface COM

Serial interface COM	
RS232	
Type	RS232, modem-capable, not electrically isolated
UART	16550-compatible, 16-byte FIFO
Transfer rate	Max. 115 kBaud
Cable length	Max. 15 meters
Pin	Assignment
1	DCD
2	RXD
3	TXD
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI

9-pin DSUB plug

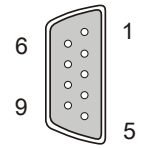


Table 8: Pin assignments - Serial interface (COM)

2.4.4 Ethernet (ETH)

This Ethernet controller is integrated in the CPU board and is fed outwards via the CPU board.

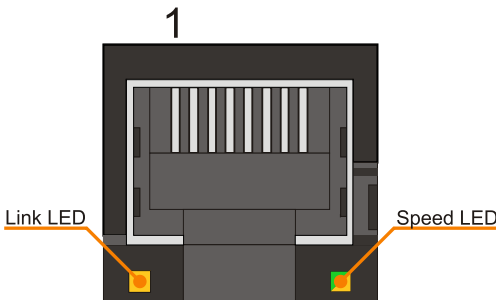
Ethernet connection (ETH)			RJ45 twisted pair (10BaseT/100BaseT), female 
Controller	Intel 82574		
Cabling	S/STP (Cat5e)		
Transfer rate	10/100/1000 Mbit/s ¹⁾		
Cable length	max. 100 m (min. Cat5e)		
Speed LED	On	Off	
Green	100 Mbit/s	10 Mbit/s ²⁾	
Orange	1000 Mbit/s	-	
Link LED	On	Off	
Orange	Link (Ethernet network connection available)	Activity (blinking - data transfer in progress)	

Table 9: Ethernet connection (ETH)

- 1) Switching takes place automatically.
- 2) The 10 Mbit/s transfer speed / connection is only present if the Link LED is simultaneously active.

Driver support

A special driver is necessary for operating the Intel Ethernet controller 82574. The necessary drivers can be downloaded from the download area on the B&R homepage (www.br-automation.com).

Information:

Required drivers can only be downloaded from the B&R homepage, not from manufacturers' pages.

2.4.5 USB ports

PP511 devices have a USB 2.0 (Universal Serial Bus) host controller with multiple USB ports, two of which are on the outside for easy user access.

Warning!

Peripheral USB devices can be connected to the USB interfaces. Due to the vast number of USB devices available on the market, B&R cannot guarantee their performance. B&R does ensure the performance of all USB devices that they provide.

Caution!

Because of the general PC specifications, this interface should be handled with extreme care with regard to EMC, location of cables, etc.

USB1, 2

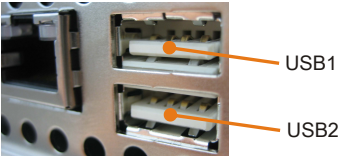
Universal Serial Bus (USB1, USB2) ¹⁾		2x USB Type A, female 
Type	USB 2.0	
Design	Type A	
Transfer rate	Low speed (1.5 Mbit/s), full speed (12 Mbit/s), to high speed (480 Mbit/s)	
Current load ²⁾ USB1, USB2	Max. 1 A	
Cable length	max. 5 m (without hub)	

Table 10: USB1, USB2 port

- 1) The interfaces, etc. available on the device or module were numbered accordingly for easy identification. This numbering can differ from the numbering used by the particular operating system.
- 2) For safety, every USB port is equipped with a maintenance free "USB current-limiting circuit breaker" (max. 500 mA or 1 A).

2.4.6 Battery

The lithium battery located behind the black cover (3 V, 950 mAh) buffers the internal real-time clock (RTC) as well as the data in the SRAM of interface cards. The buffer duration of the battery is at least 4 years (at 50°C, 8.5 µA current requirements of the supplied components and a self discharge of 40%; if an interface board with SRAM is installed, then the service life equals 2½ years). The battery is subject to wear and should be replaced regularly (at least following the specified lifespan).

Battery	
Battery Type Removable Service life	Renata 950 mAh Yes, accessible from the outside 4 years ¹⁾
Model number	Short description
Batteries	
0AC201.91	Lithium batteries, 4 pcs., 3 V / 950 mAh, button cell
4A0006.00-000	Lithium batteries, 1 pcs., 3 V / 950 mAh, button cell



Battery

Battery

Table 11: Battery

- 1) At 50°C, 8.5 µA current requirements of the supplied components and a self discharge of 40%. If an interface board with SRAM is installed, then the service life equals 2½ years.

Battery status evaluation

The battery status is evaluated immediately following start-up of the device and is subsequently checked by the system every 24 hours. The battery is subjected to a brief load (1 second) during the measurement and then evaluated. The evaluated battery status is displayed in the BIOS Setup pages (under OEM Features - CPU Board Features - CPU Board Monitor) and in the B&R Control Center (ADI driver), but can also be read in a customer application via the ADI Library.

Battery status	Meaning
N/A	Hardware, i.e. firmware used is too old and does not support read.
GOOD	Data buffering is guaranteed.
BAD	Data buffering is guaranteed for approx. another 500 hours from the point in time that the battery capacity is determined to be BAD (insufficient).

Table 12: Meaning of battery status

From the point when battery capacity is recognized as insufficient, data buffering is guaranteed for approximately another 500 hours. When changing the battery, data is buffered for approximately another 10 minutes by a gold leaf capacitor.

2.4.7 CompactFlash Slot

This CompactFlash slot is connected to the chipset internally via IDE PATA. Type I CompactFlash cards are supported.

CompactFlash slot	
Connection	PATA Master
CompactFlash Type	Type I
Model number	Short description
	CompactFlash
5CFCRD.0512-06	CompactFlash 512 MB B&R
5CFCRD.1024-06	CompactFlash 1024 MB B&R
5CFCRD.2048-06	CompactFlash 2048 MB B&R
5CFCRD.4096-06	CompactFlash 4096 MB B&R
5CFCRD.8192-06	CompactFlash 8192 MB B&R
5CFCRD.016G-06	CompactFlash 16 GB B&R

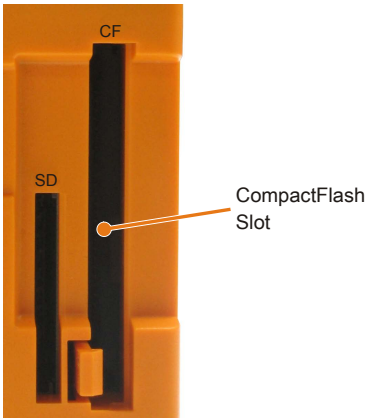


Table 13: CompactFlash slot

Warning!

Turn off power before inserting or removing the CompactFlash card!

2.4.8 SD Memory Card Slot

The SD memory card slot only supports SD memory cards, and not SDHC cards. SD memory cards are only permitted for use as mass memory. It is not possible to boot from an SD card.

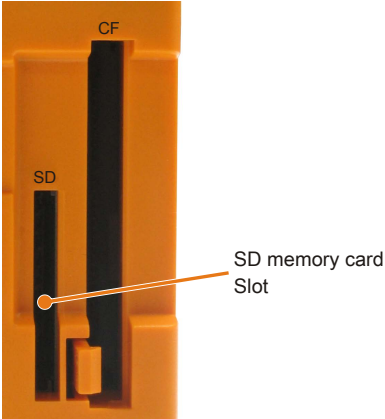
SD Memory Card Slot		

Table 14: SD Memory Card Slot

2.4.9 Power button

The power button has a variety of functions due to full ATX power supply support.

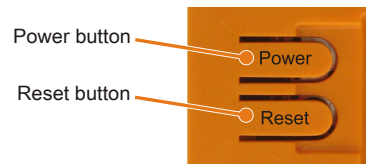
Power button	
The power button acts like the on/off switch on a normal desktop PC with ATX power supply: Press and release ... Switches on the device or shuts down operating system and switches off the device. Press and hold ... ATX power supply switches off without shutting down the device (data could be lost!). Pressing the power button does not reset the MTCX processor.	

Table 15: Power button

2.4.10 Reset button

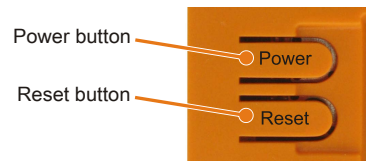
Reset button	
Pushing the reset button triggers a hardware and PCI reset. The device restarts (cold restart). The MTCX processor is not reset when the reset button is pressed.	

Table 16: Reset button

Warning!

A system reset can result in data loss!

2.4.11 Mode / Node switch

On the back of the system units there are two 16-digit hex selection switches. These can be used as operating mode switches. The switch positions 01 to FD are available for any purpose in an application and can be evaluated by the application program.

Mode / Node switch		
Switch position		
x16	x1	Description
0	0	Boot Default switch position - No Terminal Node switch position
0...1	F...D	Node Automation Runtime run mode with node 01-FD (CompactFlash Automation Runtime or terminal operation). Freely available for use in an application, e.g. setting the INA2000 node number for the Ethernet interface.
F	E	Dyn. node Automation Runtime run mode with dynamic node assignment (CompactFlash Automation Runtime or terminal operation). Device addresses can be assigned through the software.
F	F	Diagnostics The device boots in Diagnostics mode. Program sections in User RAM and User FlashPROM are not initialized. After diagnostics mode, the CPU always boots with a cold restart.

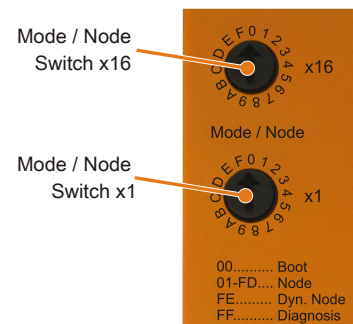


Table 17: Mode / Node switch

2.4.12 Status LEDs

The status LEDs are located on the back of the system unit.

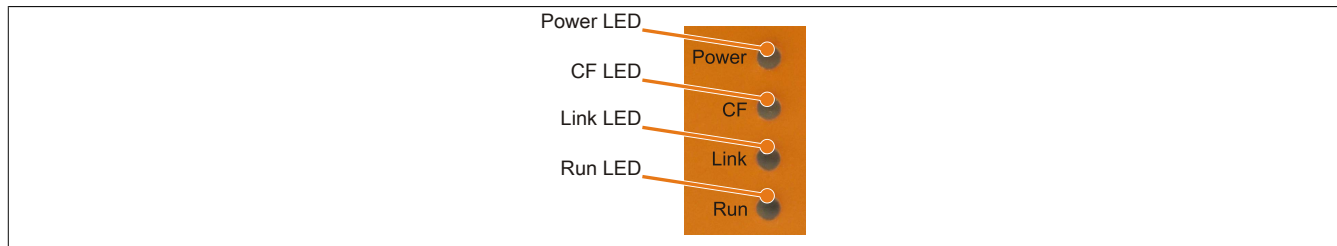


Image 8: Status LEDs

The following timing is used for the status LEDs:

Block size: 250 ms

Repeat interval: 500 ms; 2 boxes represent one interval

LED	Color	Status	Meaning	LED indicator
Power	Green	On	Supply voltage OK	

Table 18: Data - status LEDs

2.4.13 Interface board Insert

Interface board insert	
Model number	Short description
Interface boards	
5PP5IF.CETH-00	PP500 interface board; connection for 1x Ethernet 10/100/1000
5PP5IF.CHDA-00	PP500 interface board; connection for 1x MIC, 1x Line IN, 1x Line OUT
5PP5IF.FETH-00	PP500 interface board; connection for 1x Ethernet 10/100/1000, 512 kB SRAM
5PP5IF.FPLM-00	PP500 interface board; connections for 2x POWERLINK
5PP5IF.FCAN-00	PP500 interface board; connection for 1x CAN master, 512 kB SRAM
5PP5IF.FX2X-00	PP500 interface board; connection for 1x X2X master, 512 kB SRAM
5PP5IF.FXCM-00	PP500 interface board; connection for 1x CAN master, 1x X2X master, 512 kB SRAM

Interface board slot with installed interface board




Table 19: Interface board insert

Information:

Installation and replacement of interface boards **ONLY** possible at the B&R plant.

2.4.14 I/O board Insert

I/O board insert	
Model number	Short description
	I/O board
5PP5IO.GNAC-00	PP500/APC511 I/O board; connections for 1x USB 2.0, 1x RS232/422/485, HDA Sound, Smart Display Link/DVI-D.

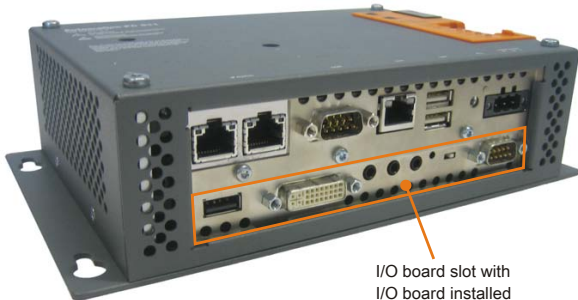

I/O board slot with I/O board installed

Table 20: I/O board insert

Information:

Installation and replacement of I/O boards **ONLY** possible at the B&R plant.

3 Individual components

3.1 System units

3.1.1 5PC511.SX01-00

General information

- Intel® Atom™ technology
- Fan-free operation
- Can be expanded by adding an interface or I/O board
- Shallow installation depth for flat installation

Order data

Model number	Short description	Figure
5PC511.SX01-00	APC511 System Unit connections for 1x RS232, 2x USB 2.0, 1x Ethernet 10/100/1000; can be expanded with interface board; I/O board (5PP5IO.GNAC-00) and 24 VDC plug for supply voltage (screw clamp: 0TB103.9; cage clamp: 0TB103.91) must be ordered separately.	
	Mandatory accessories	
	CPU boards	
5PP5CP.US15-00	PP500 CPU board Intel Atom Z510, 1100 MHz, 400 MHz FSB, 512 kByte L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 RAM module	
5PP5CP.US15-01	PP500 CPU board Intel Atom Z520, 1330 MHz, 533 MHz FSB, 512 kByte L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 RAM module	
5PP5CP.US15-02	PP500 CPU board Intel Atom Z530, 1600 MHz, 533 MHz FSB, 512 kByte L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 RAM module	
	Main memory	
5MMDDR.0512-01	SO-DIMM DDR2 RAM 512 MB PC2-5300	
5MMDDR.1024-01	SO-DIMM DDR2 RAM 1024 MB PC2-5300	
5MMDDR.2048-01	SO-DIMM DDR2 RAM 2048 MB PC2-5300	
	Terminal blocks	
0TB103.9	Connector, 24 VDC, 3-pin female, screw clamps 3.31 mm², protected against vibration by the screw flange	
0TB103.91	Connector, 24 VDC, 3-pin female, cage clamps 3.31 mm², protected against vibration by the screw flange	
	Optional accessories	
5PP5IF.FETH-00	PP500 interface board; connection for 1x Ethernet 10/100/1000, 512 kB SRAM	
	Batteries	
0AC201.91	Lithium batteries 4 pcs., 3 V / 950 mAh button cell We hereby state that the lithium cells contained in this shipment qualify as "partly regulated". Handle with care. If the package is damaged, inspect cells, repack intact cells and protect cells against short circuits. For emergency information, call RENATA SA at + 41 61 319 28 27	
4A0006.00-000	Lithium battery, 3 V / 950 mAh, button cell	
	CompactFlash	
5CFCRD.016G-06	CompactFlash 16 GByte B&R	
5CFCRD.0512-06	CompactFlash 512 MByte B&R	
5CFCRD.1024-06	CompactFlash 1 GByte B&R	
5CFCRD.2048-06	CompactFlash 2 GByte B&R	
5CFCRD.4096-06	CompactFlash 4 GByte B&R	
5CFCRD.8192-06	CompactFlash 8 GByte B&R	
	I/O board	
5PP5IO.GNAC-00	PP500/APC511 I/O board connections for 1x USB 2.0, 1x RS232/422/485, HDA sound, Smart Display Link/DVI-D.	
	Interface boards	
5PP5IF.CETH-00	PP500 interface board; connection for 1x Ethernet 10/100/1000	
5PP5IF.CHDA-00	PP500 interface board; connection for 1x MIC, 1x Line IN, 1x Line OUT	
5PP5IF.FCAN-00	PP500 interface board; connection for 1x CAN master, 512 kB SRAM; order plug separately (cage clamp: 0TB1208.3100)	
5PP5IF.FPLM-00	PP500 interface board; connections for 2x POWERLINK (with integrated hub); 512 kB SRAM.	

Table 21: 5PC511.SX01-00 - Order data

Model number	Short description	Figure
5PP5IF.FX2X-00	PP500 interface board; connection for 1x X2X master, 512 kB SRAM; order plug separately (cage clamp: 0TB1208.3100)	
5PP5IF.FXCM-00	PP500 interface board; connection for 1x CAN master, 1x X2X master, 512 kB SRAM; order plug separately (cage clamp 0TB1208.3100).	
	USB accessories	
5MMUSB.2048-01	USB 2.0 flash drive 2048 MB B&R	

Table 21: 5PC511.SX01-00 - Order data

Technical data

Product ID	5PC511.SX01-00
General information	
Cooling	Fan-free
LEDs	Power, CF, Link, Run
B&R ID code	\$C646
Battery	
Type	Renata 950 mAh
Lifespan	4 years ¹⁾
Removable	Yes, accessible from the outside
Design	Lithium ion
Power button	Yes
Reset button	Yes
Buzzer	Yes
Controllers	
Bootloader	BIOS
Mode/Node switches	2, 16 positions each (back)
Watchdog	MTCX
Power failure logic	
Controllers	MTCX ²⁾
Buffer time	10 ms
Graphics	
Controllers	Intel® Graphics Media Accelerator 500
Memory	
Type	DDR2 SDRAM
Size	Max. 2 GB
Interfaces	
COM1	
Type	RS232, modem-capable, not electrically isolated
Design	9-pin DSUB plug
UART	16550-compatible, 16-byte FIFO
Max. baud rate	115 kbit/s
CompactFlash slot 1	
Amount	1
Type	Type I
SD memory card slot	
Type	SD card
USB	
Amount	2
Type	USB 2.0
Design	Type A
Transfer rate	Low speed (1.5 Mbit/s), full speed (12 Mbit/s), to high speed (480 Mbit/s)
Current load	Max. 1 A per connection
Ethernet	
Amount	1
Controllers	Intel 82574
Design	Shielded RJ45 port
Transfer rate	10/100/1000 Mbit/s
Max. baud rate	1 Gbit/s
Inserts	
Interface board	Yes
I/O board	Yes
Electrical properties	
Rated voltage	24 VDC ±25%
Rated current	1.3 A ³⁾
Starting current	Typ. 3 A, max. 50 A for <300 µs
Power consumption	31 W ⁴⁾
Electrical isolation	Yes
Operating conditions	
EN 60529 protection	IP20 (only with installed CompactFlash card, inserted IF board or optional IF cover)
Environmental conditions	
Temperature	
Operation	0 to 50°C

Table 22: 5PC511.SX01-00 - Technical data

Product ID	5PC511.SX01-00
Storage	-20 to 60°C
Transport	-20 to 60°C
Relative humidity	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Vibration	
Operation (continuous)	2 to 9 Hz: 1.75 mm amplitude / 9 to 200 Hz: 0.5 g
Operation (occasional)	2 to 9 Hz: 3.5 mm amplitude / 9 to 200 Hz: 1 g
Storage	2 to 8 Hz: 7.5 mm amplitude / 8 to 200 Hz: 2 g / 200 to 500 Hz: 4 g
Transport	2 to 8 Hz: 7.5 mm amplitude / 8 to 200 Hz: 2 g / 200 to 500 Hz: 4 g
Shock	
Operation	15 g, 11 ms
Storage	30 g, 15 ms
Transport	30 g, 15 ms
Altitude	
Operation	Max. 3000 m (component-dependent) ⁵⁾
Mechanical characteristics	
Housing	
Material	Galvanized plate, plastic
Paint	Dark gray (similar to Pantone 432CV)
Dimensions	
Width	230 mm
Height	140 mm
Depth	63.25 mm
Weight	Approx. 1500 g

Table 22: 5PC511.SX01-00 - Technical data

- 1) At 50°C, 8.5 µA for the supplied components and a self-discharge of 40%. If an interface board with SRAM is installed, then the service life equals 2½ years.
- 2) Maintenance Controller Extended
- 3) The value specified is valid for a nominal voltage of 24 VDC.
- 4) The specified value applies to a system unit with a CPU board and I/O board, but without an interface board.
- 5) Derating the maximum ambient temperature - typically 1°C per 1000 meters (from 500 meters above sea level).

Dimensions

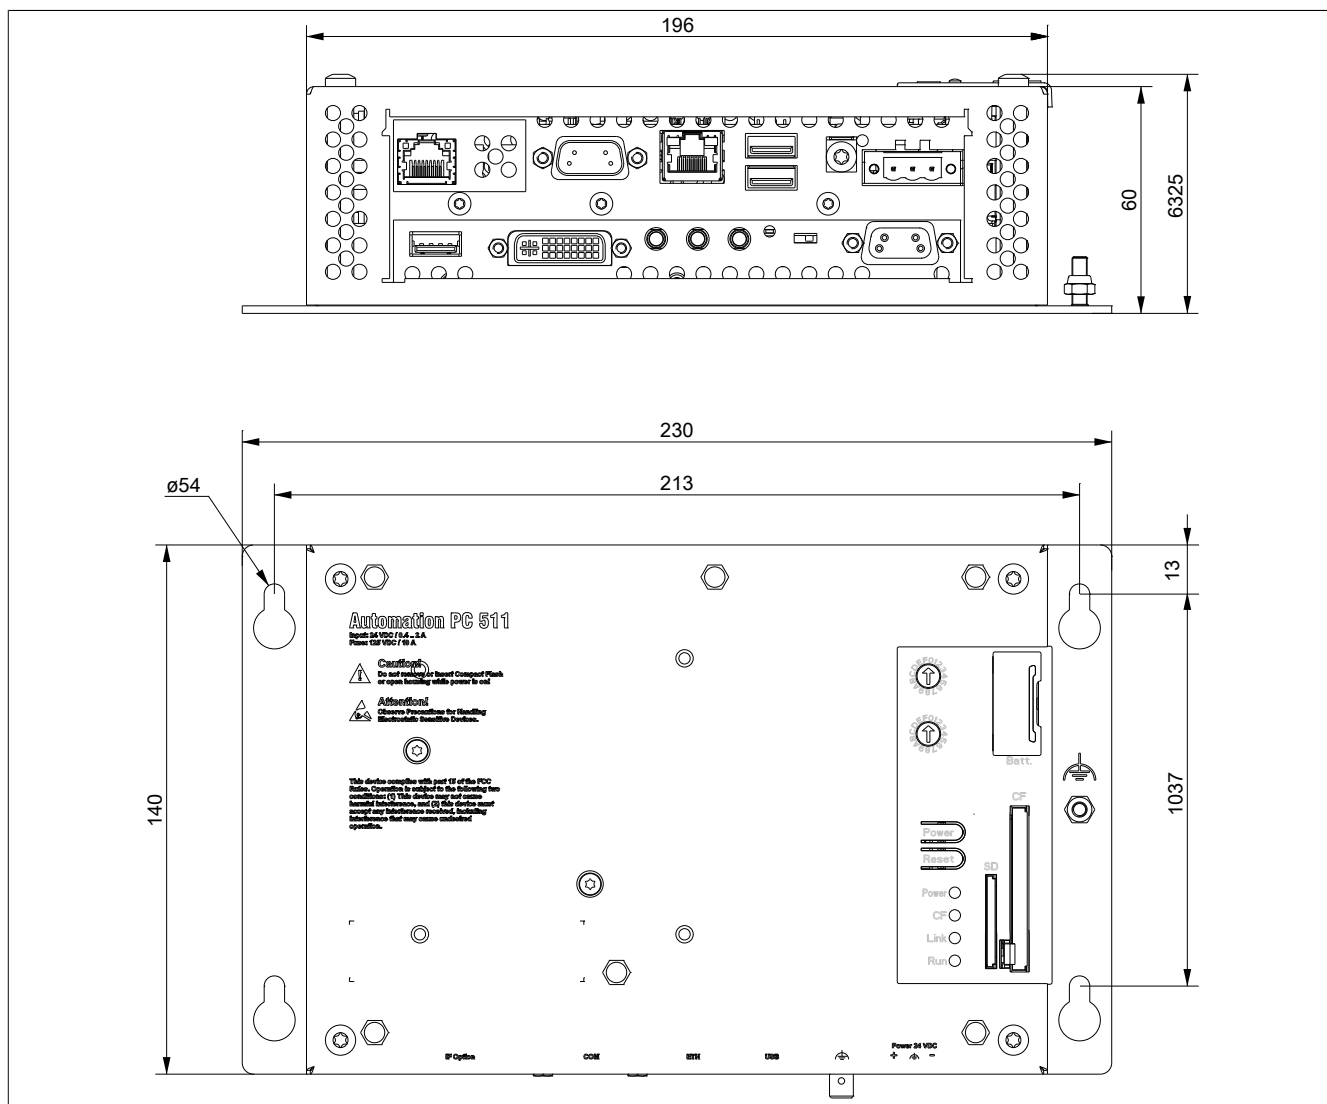


Image 9: 5PC511.SX01-00 - Dimensions

Technical drawing of a rectangular plate with the following specifications:

- Dimensions:**
 - Width: 230
 - Height: 233
- Material and Tolerance:**
 - Material: $\sigma 54$
 - General tolerance according to ISO 2768 medium
- Features:**
 - Four rounded corners with a radius of $R10$.
 - A central rectangular cutout with a width of 225 and a height of 140.
 - Four circular holes, each with a diameter of $\varnothing 12$, located at the corners of the plate.

Automation PC 511 User's Manual V 1.00

3.2 US15W - CPU boards

3.2.1 General information

CPU boards are based on the Intel® US15W chipset and contain one DDR2 memory location for a maximum of 2 GB. Additionally, the Intel® GMA 500 with 128 MB RAM is also integrated.

- Intel® Atom™ technology
- Intel® US15W chipset
- Insyde BIOS
- 1x DDR2 memory socket
- Intel® GMA 500
- Gigabit Ethernet

3.2.2 Order data

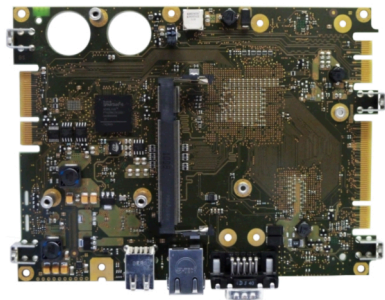
Model number	Short description	Figure
CPU boards		
5PP5CP.US15-00	PP500 CPU board Intel Atom Z510, 1100 MHz, 400 MHz FSB, 512 kByte L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 RAM module	
5PP5CP.US15-01	PP500 CPU board Intel Atom Z520, 1330 MHz, 533 MHz FSB, 512 kByte L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 RAM module	
5PP5CP.US15-02	PP500 CPU board Intel Atom Z530, 1600 MHz, 533 MHz FSB, 512 kByte L2 cache; chipset US15W; 1 socket for SO-DIMM DDR2 RAM module	
Mandatory accessories		
Main memory		
5MMDDR.0512-01	SO-DIMM DDR2 RAM 512 MB PC2-5300	
5MMDDR.1024-01	SO-DIMM DDR2 RAM 1024 MB PC2-5300	
5MMDDR.2048-01	SO-DIMM DDR2 RAM 2048 MB PC2-5300	

Table 23: 5PP5CP.US15-00, 5PP5CP.US15-01, 5PP5CP.US15-02 - Order data

3.2.3 Technical data

Product ID	5PP5CP.US15-00		5PP5CP.US15-01	5PP5CP.US15-02
General information				
Certification types CE	Yes			
Controllers				
Bootloader	BIOS Insyde			
Processor				
Type	Intel® Atom™ Z510	Intel® Atom™ Z520	Intel® Atom™ Z530	
Clock frequency	1100 MHz	1330 MHz	1600 MHz	
Architectures		45 nm		
L1 cache		32 kB		
L2 cache		512 kB		
External bus	400 MHz		533 MHz	
Intel 64 architecture	No			
Expanded command set	Intel® virtualization technology, enhanced SpeedStep technology SSE, SSE2, SSE3			
Chipset	Intel® US15W			
Real-time clock				
Accuracy	At 25°C: typ. 12 ppm (1 seconds) per day ¹⁾			
Battery-buffered	Yes			
Memory socket				
Type	DDR2			
Size	Max. 2 GB			
Graphics				
Controllers	Intel® Graphics Media Accelerator 500			
Memory	Up to 256 MB ²⁾			
Color depth	Max. 32-bit			
Resolution				
DVI	Depends on the system unit used			
Power management	ACPI 3.0			

Table 24: 5PP5CP.US15-00, 5PP5CP.US15-01, 5PP5CP.US15-02 - Technical data

1) At 50 °C, 8.5 µA of the supplied components and a self discharge of 40 %.

2) Allocated in main memory

3.3 Main memory

3.3.1 Order data

Model number	Short description	Figure
	Main memory	
5MMDDR.0512-01	SO-DIMM DDR2 RAM 512 MB PC2-5300	
5MMDDR.1024-01	SO-DIMM DDR2 RAM 1024 MB PC2-5300	
5MMDDR.2048-01	SO-DIMM DDR2 RAM 2048 MB PC2-5300	

Table 25: 5MMDDR.0512-01, 5MMDDR.1024-01, 5MMDDR.2048-01 - Order data

3.3.2 Technical data

Product ID	5MMDDR.0512-01	5MMDDR.1024-01	5MMDDR.2048-01
General information			
Type	SO-DIMM DDR2 SDRAM		
Memory size	512 MB	1 GB	2 GB
Construction	200-pin		
Organization	64M x 64 bit	128M x 64 bit	256M x 64-bit
Speed	DDR2-667 (PC2-5300)		
Certification types CE	Yes		

Table 26: 5MMDDR.0512-01, 5MMDDR.1024-01, 5MMDDR.2048-01 - Technical data

Information:

A main memory module can only be replaced at the B&R plant.

3.4 Interface Boards

Information:

Installation and replacement of interface boards **ONLY** possible at the B&R plant.

3.4.1 5PP5IF.CETH-00

General information

The interface board 5PP5IF.CETH-00 has a 10/100/1000 Mbit/sec network connection as well as 512 kB SRAM and can be used as an additional network interface in a Power Panel 500, Automation PC 510 or Automation PC 511.

- 1 network connection (10/100/1000 Mbit/s)
- Compatible with PP500, APC510, APC511

The interface board can be operated using Automation Runtime in Automation Studio 3.0.90.18 or higher and Automation Runtime D4.01.

Order data

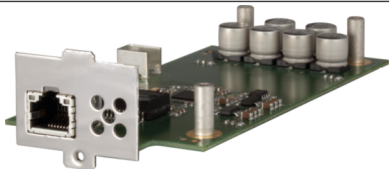
Model number	Short description	Figure
	Interface boards	
5PP5IF.CETH-00	PP500 interface board; connection for 1x Ethernet 10/100/1000	

Table 27: 5PP5IF.CETH-00 - Order data

Technical data

Product ID	5PP5IF.CETH-00
General information	
B&R ID code	\$B4D5
Diagnostics	
Data transfer	Yes, with status LED
Certification types	
CE	Yes
Interfaces	
Ethernet	
Amount	1
Controllers	Intel 82574
Design	Shielded RJ45 port
Transfer rate	10/100/1000 Mbit/s
Cable length	Max. 100 m between two stations (segment length)
Electrical properties	
Power consumption	2 W
Environmental conditions	
Temperature	
Operation	0 to 55°C
Storage	-20 to 60°C
Transport	-20 to 60°C
Relative humidity	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing

Table 28: 5PP5IF.CETH-00 - Technical data

Ethernet interface (ETH)

Ethernet interface		
Controller	Intel 82574	
Cabling	S/STP (Cat5e)	
Transfer rate	10/100/1000 Mbit/s ¹	
Cable length	max. 100 m (min. Cat5e)	
Speed LED	On	Off
Green	100 Mbit/s	10 Mbit/s ²
Orange	1000 Mbit/s	-
Link LED	On	Off
Orange	Link (Ethernet network connection available)	Activity (blinking - data transfer in progress)

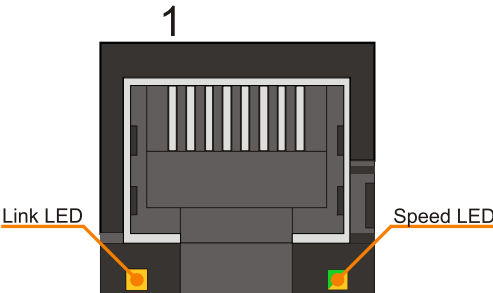


Table 29: 5PP51F.CETH-00 - Ethernet connection

- 1) Switching takes place automatically.
- 2) The 10 Mbit/s transfer speed / connection is only present if the IF slot Link LED is simultaneously active.

A special driver is necessary for operating the Intel Ethernet controller 82574. The necessary drivers can be downloaded from the download area on the B&R homepage (www.br-automation.com).

Information:

Required drivers can only be downloaded from the B&R homepage, not from manufacturers' pages.

3.4.2 5PP5IF.CHDA-00

General information

The interface board 5PP5IF.CHDA-00 has an HDA sound chip with externally accessible MIC, Line IN and Line OUT channels.

- 1x MIC
- 1x Line IN
- 1x Line OUT
- Compatible with PP500, APC510, APC511

The interface board can be run using Automation Runtime in Automation Studio 3.0.90.18 or higher and Automation Runtime A4.01.

Order data

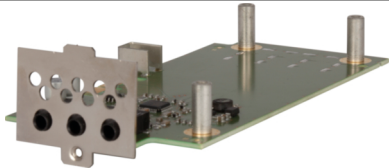
Model number	Short description	Figure
	Interface boards	
5PP5IF.CHDA-00	PP500 interface board; connection for 1x MIC, 1x Line IN, 1x Line OUT	

Table 30: 5PP5IF.CHDA-00 - Order data

Technical data

Product ID	5PP5IF.CHDA-00
General information	
B&R ID code	\$B4D6
Certification types CE	Yes
Interfaces	
Audio Type Controllers Inputs Outputs	HDA sound Realtek ALC 662 Microphone, Line in Line Out
Electrical properties	
Power consumption	2 W
Environmental conditions	
Temperature Operation Storage Transport	0 to 55°C -20 to 60°C -20 to 60°C
Relative humidity Operation Storage Transport	5 to 90%, non-condensing 5 to 95%, non-condensing 5 to 95%, non-condensing

Table 31: 5PP5IF.CHDA-00 - Technical data

MIC, Line IN, Line OUT

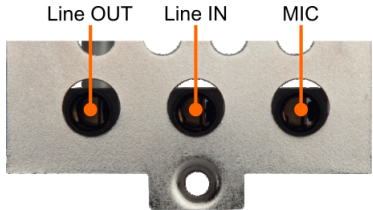
MIC, Line IN, Line OUT	
Controller	Realtek ALC 662
MIC	Connection of a mono microphone with a 3.5 mm stereo (headphone) jack.
Line IN	Stereo Line IN signals supplied via 3.5 mm jack.
Line OUT	Connection of a stereo sound device (e.g. amplifier) via a 3.5 mm jack.
	

Table 32: MIC, Line IN, Line OUT

A special driver is necessary for operating the audio controller. The necessary drivers can be downloaded from the download area on the B&R homepage (www.br-automation.com).

Information:

Required drivers can only be downloaded from the B&R homepage, not from manufacturers' pages.

3.4.3 5PP5IF.FETH-00

General information

The interface board 5PP5IF.FETH-00 has a 10/100/1000 Mbit/sec network connection as well as 512 kB SRAM and can be used as an additional network interface in a Power Panel 500, Automation PC 510 or Automation PC 511.

- 1 network connection (10/100/1000 Mbit/s)
- 512 KB SRAM
- Compatible with PP500, APC510, APC511

The interface board can only be operated using Automation Runtime (in Automation Studio 3.0.90.18 or higher and Automation Runtime D4.01).

Order data

Model number	Short description	Figure
5PP5IF.FETH-00	PP500 interface board; connection for 1x Ethernet 10/100/1000, 512 kB SRAM	

Table 33: 5PP5IF.FETH-00 - Order data

Technical data

Product ID	5PP5IF.FETH-00
General information	
B&R ID code	\$B7C4
Diagnostics Data transfer	Yes, with status LED
Certification types CE	Yes
Controllers	
SRAM Size Battery-buffered	512 kB Yes
Interfaces	
Ethernet Amount Controllers Design Transfer rate Cable length	1 Intel 82574 Shielded RJ45 port 10/100/1000 Mbit/s Max. 100 m between two stations (segment length)
Electrical properties	
Power consumption	4 W
Environmental conditions	
Temperature Operation Storage Transport	0 to 50°C -20 to 60°C -20 to 60°C
Relative humidity Operation Storage Transport	5 to 90%, non-condensing 5 to 95%, non-condensing 5 to 95%, non-condensing

Table 34: 5PP5IF.FETH-00 - Technical data

Ethernet interface (ETH)

Ethernet connection		
Controller	Intel 82574	
Cabling	S/STP (Cat5e)	
Transfer rate	10/100/1000 Mbit/s ¹⁾	
Cable length	max. 100 m (min. Cat5e)	
Speed LED	On	Off
Green	100 Mbit/s	10 Mbit/s ²⁾
Orange	1000 Mbit/s	-
Link LED	On	Off
Orange	Link (Ethernet network connection available)	Activity (blinking - data transfer in progress)

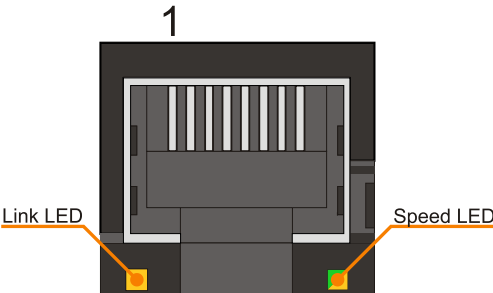


Table 35: 5PP5IF.FETH-00 - Ethernet connection

- 1) Switching takes place automatically.
2) The 10 Mbit/s transfer speed / connection is only present if the IF slot Link LED is simultaneously active.

A special driver is required in order to operate the Intel Ethernet controller 82574. The necessary drivers are available in the Downloads area of the B&R website (www.br-automation.com).

Information:

Required drivers can only be downloaded from the B&R homepage, not from manufacturers' pages.

3.4.4 5PP5IF.FPLM-00

General information

The interface board 5PP5IF.FPLM-00 has two POWERLINK connections and 512 kB SRAM.

The integrated hub allows for the easiest possible implementation of a simple tree structure or optional ring-redundancy without extra effort.

With pollresponse chaining, the module also offers a solution for the highest demands in regard to response time and the shortest cycle times. When combined with the B&R control system, poll response chaining provides ideal performance, particularly for central control tasks.

- 2x POWERLINK V1/V2 connections
- 512 KB SRAM
- Integrated hub for efficient cabling
- Configurable ring redundancy
- Poll response chaining
- Compatible with PP500, APC510, APC511

The interface board can only be operated under Automation Runtime.

Order data

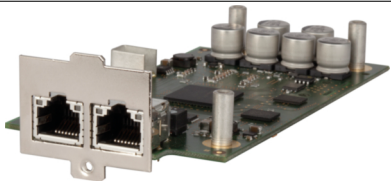
Model number	Short description	Figure
	Interface boards	
5PP5IF.FPLM-00	PP500 interface board; connections for 2x POWERLINK (with integrated hub); 512 kB SRAM.	

Table 36: 5PP5IF.FPLM-00 - Order data

Technical data

Product ID	5PP5IF.FPLM-00
General information	
B&R ID code	\$B4D8
Diagnostics	
Data transfer	Yes, with status LED
Certification types	
CE	Yes
Controllers	
SRAM	
Size	512 kB
Battery-buffered	Yes
Interfaces	
POWERLINK	
Amount	2
Transmission	100 Base-T (ANSI/IEEE 802.3)
Type	Type 4
Design	Internal 2x hub, 2x shielded RJ45 port
Transfer rate	100 Mbit/s
Cable length	Max. 100 m between two stations (segment length)
Electrical properties	
Power consumption	3 W
Environmental conditions	
Temperature	
Operation	0 to 55°C
Storage	-20 to 60°C
Transport	-20 to 60°C
Relative humidity	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing

Table 37: 5PP5IF.FPLM-00 - Technical data

POWERLINK interface

POWERLINK Interface Board 2 connections		
Cabling	S/STP (Cat5e)	
Cable length	max. 100 m (min. Cat5e)	
Speed LED	On	Off
Green / red	see Status / Error LED	
Link LED	On	Off
Yellow	Link (POWERLINK network connection available)	Activity (blinking - data transfer in progress)

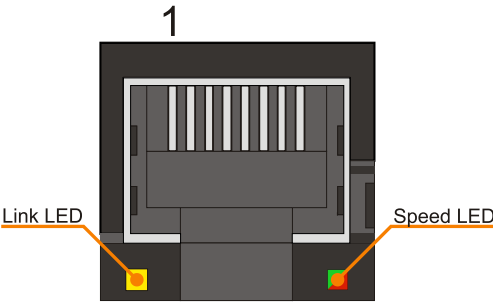


Table 38: POWERLINK Interface Board 2port connection

LED STATUS

The status/error LED is a green/red dual LED. The status LEDs can have different meanings depending on operating mode.

Ethernet TCP/IP mode

The interface can be operated purely as an Ethernet TCP/IP interface.

Green - status	Description
On	The POWERLINK interface is operated purely as an Ethernet TCP/IP interface.

Table 39: Status/Error LED - Ethernet TCP/IP operating mode

POWERLINK V1

Status LED		Status of the POWERLINK station
Green	Red	
On	Off	The POWERLINK station is running with no errors.
Off	On	A fatal system error has occurred. The error type can be read using the PLC logbook. An irreparable problem has occurred. The system cannot properly carry out its tasks. This status can only be changed by resetting the module.
Blinking alternately		The POWERLINK managing node failed. This error code can only occur in controlled node operation.
Off	Blinking	System failure. The red blinking LED signals a certain type of error using a blink code (see section " System failure error codes" on page 46).

Table 40: Status/error LED - POWERLINK V1 operating mode

POWERLINK V2

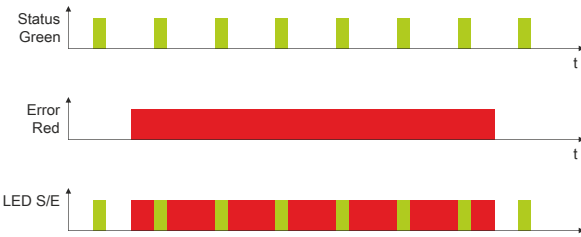
Red - error	Description
On	The POWERLINK interface has encountered an error (failed Ethernet frames, increased number of collisions on the network, etc.). If an error occurs in the following states, then the green LED blinks over the red LED: - BASIC_ETHERNET - PRE_OPERATIONAL_1 - PRE_OPERATIONAL_2 - READY_TO_OPERATE 

Table 41: Status / Error LED as error LED - POWERLINK operating mode

Green - status	Description
Off NOT_ACTIVE	Managing Node (MN) The bus is monitored for POWERLINK frames. If a frame is not received within the configured time window (timeout), the interface goes directly into PRE_OPERATIONAL_1 status (single flash). If, however, POWERLINK communication is detected before this time passes, the interface goes directly into the BASIC_ETHERNET status (flickering). Controlled Node (CN) The bus is monitored for POWERLINK frames. If a frame is not received within the configured time window (timeout), the interface goes directly into BASIC_ETHERNET status (flickering). If, however, POWERLINK communication is detected during this time, the interface goes directly into the PRE_OPERATIONAL_1 status (single flash).
Green flickering (approx. 10 Hz) BASIC_ETHERNET	The interface is in BASIC_ETHERNET status, and is operated purely as an Ethernet TCP/IP interface. Managing Node (MN) This status can only be changed by resetting the interface. Controlled Node (CN) If POWERLINK communication is detected while in this status, the interface goes into the PRE_OPERATIONAL_1 state (single flash).
Single flash (approx. 1 Hz) PRE_OPERATIONAL_1	The interface status is PRE_OPERATIONAL_1. Managing Node (MN) The MN starts the operation of the "reduced cycle". Collisions are allowed on the bus. There is not yet any cyclic communication. Controlled Node (CN) The CN waits until it receives an SoC frame and then switches to PRE_OPERATIONAL_2 status (double flash).
Double flash (approx. 1 Hz) PRE_OPERATIONAL_2	The interface status is PRE_OPERATIONAL_2. Managing Node (MN) The MN begins with the cyclic communication (cyclic input data is not yet evaluated). The CNs are configured in this status. Controlled Node (CN) In this status, the interface is normally configured by the manager. After this, a command changes the status to PRE_OPERATIONAL_3 (triple flash).
Triple flash (approx. 1 Hz) READY_TO_OPERATE	The interface status is READY_TO_OPERATE. Managing Node (MN) Normal cyclic and asynchronous communication. Received PDO data is ignored. Controlled Node (CN) The configuration of the interface is complete. Normal cyclic and asynchronous communication. The PDO data sent corresponds to the PDO mapping used. However, cyclic data is not yet evaluated.
On OPERATIONAL	The interface status is OPERATIONAL.
Blinking (approx. 2.5 Hz) STOPPED	The interface status is STOPPED. Managing Node (MN) This status is not possible for the MN. Controlled Node (CN) No output data is produced and no input data is received. Only the appropriate command from the manager can enter or leave this state.

Table 42: Status/Error LED as status LED - POWERLINK operating mode

System failure error codes

Incorrect configuration or defective hardware can cause a system failure error.

The error is displayed via the red error LED using four switch-on phases. The switch-on phases are either 150 ms or 600 ms long. Error code outputs are repeated cyclically after 2 seconds.

Legend:

- ... 150 ms
- ... 600 ms
- Delay ... 2 sec. delay

Error description	Error code displayed by red status LED
RAM Errors	• • • – Break • • • – Break
Hardware errors	– • • – Break – • • – Break

Table 43: Status/error LED as error LED - system failure error codes

Firmware update

The firmware is a component of Automation Studio. The module is automatically changed to this version.

To update the firmware included in Automation Studio, you must upgrade the hardware (see the Help system under "Project Management - Automation Studio Upgrade").

3.4.5 5PP5IF.FCAN-00

General information

The interface board 5PP5IF.FCAN-00 contains one CAN master interface and 512 kB SRAM.

- 1x CAN master interface
- 512 KB SRAM
- Compatible with PP500, APC510, APC511

The interface board can only be operated under Automation Runtime.

Order data

Model number	Short description	Figure
	Interface boards	
5PP5IF.FCAN-00	PP500 interface board; connection for 1x CAN master, 512 kB SRAM; order plug separately (cage clamp: 0TB1208.3100)	
	Mandatory accessories	
	Terminal blocks	
0TB1208.3100	Connector, 8-pin, cage clamp, 1 mm², protected against vibration by the screw flange.	

Table 44: 5PP5IF.FCAN-00 - Order data

Technical data

Product ID	5PP5IF.FCAN-00
General information	
B&R ID code	\$B4DA
Diagnostics	
Module status	Yes, with status LED
Data transfer	Yes, with status LED
Terminating resistors	Yes, with status LED
Certification types	
CE	Yes
Controllers	
SRAM	
Size	512 kB
Battery-buffered	Yes
Interfaces	
CAN	
Amount	1
Design	8-pin multipoint plug
Transfer rate	Max. 500 kbit/s
Terminating resistors	
Type	Can be enabled and disabled using a sliding switch
Default setting	Disabled
Electrical properties	
Power consumption	3 W
Environmental conditions	
Temperature	
Operation	0 to 55°C
Storage	-20 to 60°C
Transport	-20 to 60°C
Relative humidity	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing

Table 45: 5PP5IF.FCAN-00 - Technical data

CAN interface

CAN bus		
The electrically isolated CAN bus interface is a 8-pin multipoint plug.		8-pin multipoint plug
Transfer rate	Max. 500 kbit/s	
Cable length	Max. 1000 meters	
Pin	CAN bus	
1	-	
2	-	
3	-	

Table 46: 5PP5IF.FCAN-00 - CAN interface

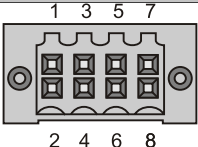
CAN bus		
4	CAN _⊥ (CAN ground)	
5	SHLD (shield)	
6	SHLD (shield)	
7	CAN _L (CAN Low)	
8	CAN _H (CAN High)	

Table 46: 5PP5IF.FCAN-00 - CAN interface

Status LEDs

Status LEDs			
LED	Color	Status	Meaning
CAN	Yellow	On	Sends data
		Off	Receives data
Status LED	Green	On	Interface module is active
	Red	On	CPU starting up
LED TERM	Yellow	On	The terminating resistor is switched on
		Off	The terminating resistor is switched off

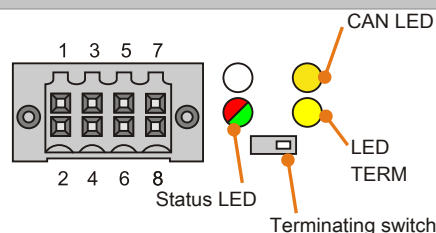


Table 47: 5PP5IF.FCAN-00 - Status LEDs

CAN terminating switch

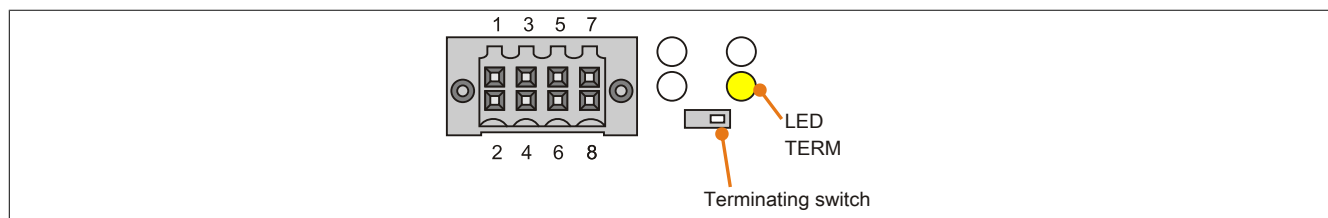


Image 11: CAN terminating switch

A CAN terminating resistor is integrated on the interface board. It is turned on and off with a switch on the front side. An active terminating resistor is indicated by the TERM LED.

Firmware update

The firmware is a component of Automation Studio. The module is automatically changed to this version.

To update the firmware included in Automation Studio, you must upgrade the hardware (see the Help system under "Project Management - Automation Studio Upgrade").

3.4.6 5PP5IF.FX2X-00

General information

The interface board 5PP5IF.FX2X-00 contains one X2X Link master interface and 512 kB SRAM.

- 1x X2X Link master interface
- 512 KB SRAM
- Compatible with PP500, APC510, APC511

The interface board can only be operated under Automation Runtime.

Order data

Model number	Short description	Figure
	Interface boards	
5PP5IF.FX2X-00	PP500 interface board; connection for 1x X2X master, 512 kB SRAM; order plug separately (cage clamp: 0TB1208.3100)	
	Mandatory accessories	
	Terminal blocks	
0TB1208.3100	Connector, 8-pin, cage clamp, 1 mm ² , protected against vibration by the screw flange.	

Table 48: 5PP5IF.FX2X-00 - Order data

Technical data

Product ID	5PP5IF.FX2X-00
General information	
B&R ID code	\$B4D9
Diagnostics	
Module status	Yes, with status LED
Data transfer	Yes, with status LED
Certification types	
CE	Yes
Controllers	
SRAM	
Size	512 kB
Battery-buffered	Yes
Interfaces	
X2X	
Type	X2X Link master
Amount	1
Design	8-pin multipoint plug
Electrical properties	
Power consumption	3 W
Environmental conditions	
Temperature	
Operation	0 to 55°C
Storage	-20 to 60°C
Transport	-20 to 60°C
Relative humidity	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing

Table 49: 5PP5IF.FX2X-00 - Technical data

X2X interface

X2X Link Master connection	
The electrically isolated X2X Link is a 8-pin multipoint plug.	
Pin	X2X Link
1	X2X\
2	X2X
3	X2X _L
4	-
5	SHLD (shield)
6	SHLD (shield)
7	-
8	-

8-pin multipoint plug

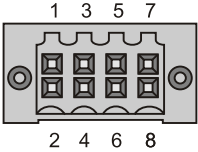


Table 50: 5PP5IF.FX2X-00 - X2X interface

Status LEDs

Status LEDs			
LED	Color	Status	Meaning
X2X	Yellow	On	Sends data
		Off	Receives data
Status LED	Green	On	Interface module is active
	Red	On	CPU starting up

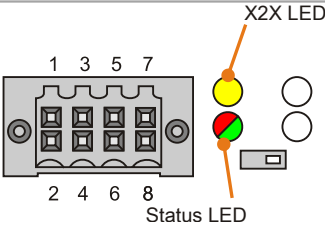


Table 51: 5PP5IF.FX2X-00 - Status LEDs

Firmware update

The firmware is a component of Automation Studio. The module is automatically changed to this version.

To update the firmware included in Automation Studio, you must upgrade the hardware (see the Help system under "Project Management - Automation Studio Upgrade").

3.4.7 5PP5IF.FXCM-00

General information

The interface board 5PP5IF.FXCM-00 has one combined CAN master and one X2X Link master interface and 512 kB SRAM.

- 1x CAN master interface
- 1x X2X master interface
- 512 kB SRAM
- Compatible with PP500, APC510, APC511

The interface board can only be operated under Automation Runtime.

Order data

Model number	Short description	Figure
	Interface boards	
5PP5IF.FXCM-00	PP500 interface board; connection for 1x CAN master, 1x X2X master, 512 kB SRAM; order plug separately (cage clamp 0TB1208.3100).	
	Mandatory accessories	
	Terminal blocks	
0TB1208.3100	Connector, 8-pin, cage clamp, 1 mm ² , protected against vibration by the screw flange.	

Table 52: 5PP5IF.FXCM-00 - Order data

Technical data

Product ID	5PP5IF.FXCM-00
General information	
B&R ID code	\$BB9D
Diagnostics	
Module status	Yes, with status LED
Data transfer	Yes, with status LED
Terminating resistors	Yes, with status LED
Certification types	
CE	Yes
Controllers	
SRAM	
Size	512 kB
Battery-buffered	Yes
Interfaces	
CAN	
Amount	1
Design	8-pin multipoint plug
Transfer rate	Max. 500 kbit/s
Terminating resistors	
Type	Can be enabled and disabled using a sliding switch
Default setting	Disabled
X2X	
Type	X2X Link master
Amount	1
Design	8-pin multipoint plug
Electrical properties	
Power consumption	3 W
Environmental conditions	
Temperature	
Operation	0 to 55°C
Storage	-20 to 60°C
Transport	-20 to 60°C
Relative humidity	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing

Table 53: 5PP5IF.FXCM-00 - Technical data

CAN interface

CAN bus	
The electrically isolated CAN bus interface is a 8-pin multipoint plug.	
Transfer rate	Max. 500 kbit/s
Cable length	Max. 1000 meters
Pin	CAN bus
1	-
2	-
3	-
4	CAN _L (CAN ground)
5	SHLD (shield)
6	SHLD (shield)
7	CAN _L (CAN Low)
8	CAN _H (CAN High)

8-pin multipoint plug

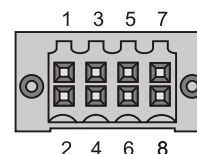


Table 54: 5PP5IF.FCAN-00 - CAN interface

X2X interface

X2X Link Master connection	
The electrically isolated X2X Link is a 8-pin multipoint plug.	
Pin	X2X Link
1	X2X\
2	X2X
3	X2X _L
4	-
5	SHLD (shield)
6	SHLD (shield)
7	-
8	-

8-pin multipoint plug

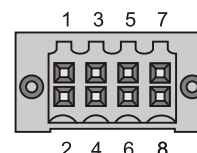


Table 55: 5PP5IF.FX2X-00 - X2X interface

Status LEDs

Status LEDs			
LED	Color	Status	Meaning
X2X	Yellow	On	Sends data
		Off	Receives data
CAN	Yellow	On	Sends data
		Off	Receives data
Status LED	Green	On	Interface module is active
	Red	On	CPU starting up
LED TERM	Yellow	On	The terminating resistor is switched on
		Off	The terminating resistor is switched off

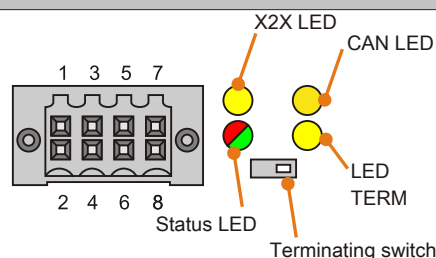


Table 56: 5PP5IF.FXCM-00 - Status LEDs

CAN terminating switch

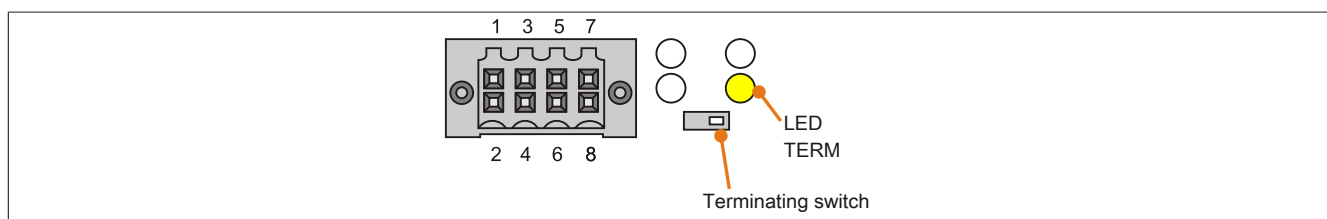


Image 12: CAN terminating switch

A CAN terminating resistor is integrated on the interface board. It is turned on and off with a switch on the front side. An active terminating resistor is indicated by the TERM LED.

Firmware update

The firmware is a component of Automation Studio. The module is automatically changed to this version.

To update the firmware included in Automation Studio, you must upgrade the hardware (see the Help system under "Project Management - Automation Studio Upgrade").

3.5 I/O boards

Information:

Installation and replacement of I/O boards **ONLY** possible at the B&R plant.

3.5.1 5PP5IO.GNAC-00

General information

The I/O board 5PP5IO.GNAC-00 has 1x RS232/422/485 interface, 1x USB 2.0 connection, 1x HDA sound connection and 1x Smart Display Link/DVI socket. The I/O board can be connected to and operated on Power Panel 500 and Automation PC 511 devices with an I/O board slot.

- 1x USB 2.0
- 1x RS232/422/485
- 1x HDA Sound
- 1x Smart Display Link/DVI
- Mounting is compatible with the PP500, APC511

Order data

Model number	Short description	Figure
	I/O board	
5PP5IO.GNAC-00	PP500/APC511 I/O board connections for 1x USB 2.0, 1x RS232/422/485, HDA sound, Smart Display Link/DVI-D.	

Table 57: 5PP5IO.GNAC-00 - Order data

Technical data

Product ID	5PP5IO.GNAC-00
General information	
B&R ID code	\$B4DD
Certification types CE	Yes
Interfaces	
COM1 Type Design UART Max. baud rate	RS232/422/485, electrically isolated 9-pin DSUB plug 16550-compatible, 16-byte FIFO 115 kbit/s
USB Amount Type Design Transfer rate Current load	1 USB 2.0 Type A Low speed (1.5 Mbit/s), full speed (12 Mbit/s), to high speed (480 Mbit/s) Max. 1 A
Panel/Monitor interface Design Type	DVI-I socket SDL/DVI
Audio Type Inputs Outputs	HDA sound Microphone, Line in Line Out
Electrical properties	
Power consumption	7 W
Environmental conditions	
Temperature Operation Storage Transport	0 to 50°C -20 to 60°C -20 to 60°C

Table 58: 5PP5IO.GNAC-00 - Technical data

Product ID	5PP5IO.GNAC-00
Relative humidity	
Operation	5 to 90%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing

Table 58: 5PP5IO.GNAC-00 - Technical data

Panel connection - SDL (Smart Display Link / DVI)

Panel connection - SDL (Smart Display Link / DVI)		
The following overview shows the video signals available on the panel output. For details, see the technical data for the CPU board being used.		
CPU board	Video signals with all system unit variations	
5PP5CP.US15-00	DVI, SDL	
5PP5CP.US15-01	DVI, SDL	
5PP5CP.US15-02	DVI, SDL	




Table 59: Panel connection - DVI, SDL

Serial interface COM

Serial interface COM

	RS232	RS422/485
Type	RS232; not modem capable; electrically isolated	
UART	16550-compatible, 16-byte FIFO	
Transfer rate	Max. 115 kbit/s	
Bus length	Max. 15 m	Max. 1200 m
Pin	Assignments (RS232)	Assignments (RS422)
1	n.c.	TXD\
2	RXD	n.c.
3	TXD	n.c.
4	n.c.	TXD
5	GND	GND
6	n.c.	RXD\
7	RTS	n.c.
8	CTS	n.c.
9	n.c.	RXD

9-pin DSUB socket



9-pin DSUB socket

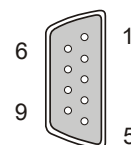


Table 60: Pin assignments - COM

I/O address and IRQ

Resource	Default setting	Additional setting options
I/O address	2E8h	238h, 2F8h, 328h, 338h, 3E8h, 3F8h ¹⁾
IRQ	10	3, 4, 5, 6, 11, 12 ¹⁾

Table 61: RS232/422/485 - I/O address and IRQ

1) If these settings are not already used in the system.

Bus length and cable type RS232

The maximum transfer rate of 115 kBit/s depends on the cable type being used.

Extension	Transfer rate
≤ 15 m	typ. 64 kbit/s
≤ 10 m	typ. 115 kbit/s
≤ 5 m	typ. 115 kbit/s

Table 62: RS232 - Bus length and transfer rate

The material used for the cable should preferably have all or most of the following properties in order to reach an optimal transfer rate.

RS232 cable	Property
Signal lines	
Cable cross section	4x 0.16 mm ² (26AWG), tinned Cu wire
Wire insulation	PE
Conductor resistance	≤ 82 Ω/ km
Stranding	Wires stranded in pairs
Shielding	Paired shield with aluminum foil

Table 63: RS232 - Cable requirements

RS232 cable	Property
Grounding line	
Cable cross section	1x 0,34 mm ² (22AWG/19), tinned Cu wire
Wire insulation	PE
Conductor resistance	≤ 59 Ω/km
Outer sheathing	
Material	PUR mixture
Properties	Halogen free
Cable shielding	From tinned cu wires

Table 63: RS232 - Cable requirements

RS422 - Bus length and cable type

The RTS line must be switched on to activate the sender.

The maximum transfer rate of 115 kBit/s depends on the cable type being used.

Extension	Transfer rate
1200 m	typ. 115 kbit/s

Table 64: RS422 - Bus length and transfer rate

The material used for the cable should preferably have all or most of the following properties in order to reach an optimal transfer rate.

RS422 cable	Property
Signal lines	
Cable cross section	4x 0.25 mm ² (24AWG/19), tinned Cu wire
Wire insulation	PE
Conductor resistance	≤ 82 Ω/km
Stranding	Wires stranded in pairs
Shielding	Paired shield with aluminum foil
Grounding line	
Cable cross section	1x 0,34 mm ² (22AWG/19), tinned Cu wire
Wire insulation	PE
Conductor resistance	≤ 59 Ω/km
Outer sheathing	
Material	PUR mixture
Properties	Halogen free
Cable shielding	From tinned cu wires

Table 65: RS422 - Cable requirements

Operation as RS485 Interface

The pins of the RS422 default interface (1, 4, 6 and 9) should be used for operation. The pins should be connected as shown.

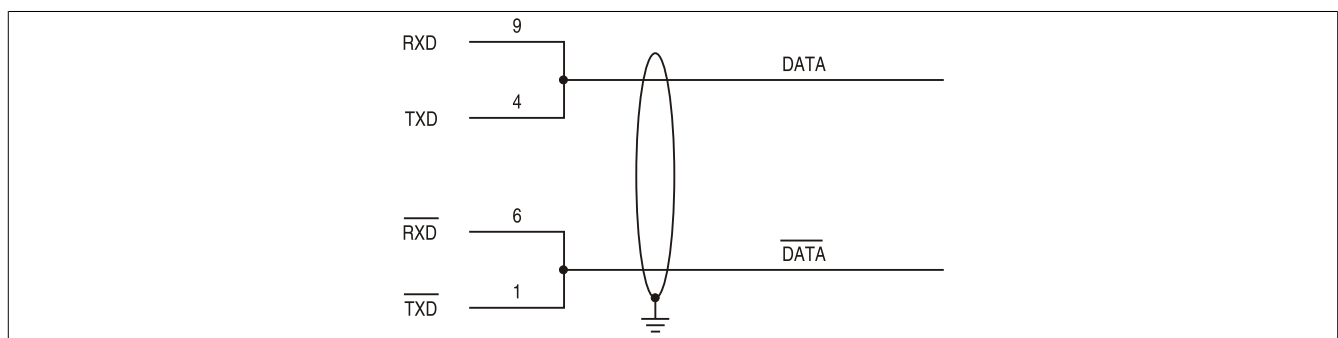


Image 13: RS232/422/485 interface - operated in RS485 mode

The RTS line must be switched each time the driver is sent and received; there is no automatic switch back. This cannot be configured in Windows.

The voltage drop caused by long line lengths can lead to greater potential differences between the bus stations, which can hinder communication. This can be improved by running ground wire with the others.

The line ends of the RS485 interface should (at least for longer line lengths or larger transfer rates) be closed. Normally a passive terminator can be used on the bus ends by connecting each of the signal lines with 120 Ω resistor.

RS485 - Bus length and cable type

The maximum transfer rate of 115 kBit/s depends on the cable type being used.

Extension	Transfer rate
1200 m	typ. 115 kbit/s

Table 66: RS485 - Bus length and transfer rate

The material used for the cable should preferably have all or most of the following properties in order to reach an optimal transfer rate.

RS485 cable	Property
Signal lines	
Cable cross section	4x 0.25 mm ² (24AWG/19), tinned Cu wire
Wire insulation	PE
Conductor resistance	≤ 82 Ω/km
Stranding	Wires stranded in pairs
Shielding	Paired shield with aluminum foil
Grounding line	
Cable cross section	1x 0,34 mm ² (22AWG/19), tinned Cu wire
Wire insulation	PE
Conductor cross section	≤ 59 Ω/km
Outer sheathing	
Material	PUR mixture
Properties	Halogen free
Cable shielding	From tinned cu wires

Table 67: RS485 - Cable requirements

Terminating resistor

There is a terminating resistor for the serial interface integrated directly on the I/O board. It can be enabled and disabled with a switch between the serial interface and the audio port. An active terminating resistor is indicated by a yellow LED.

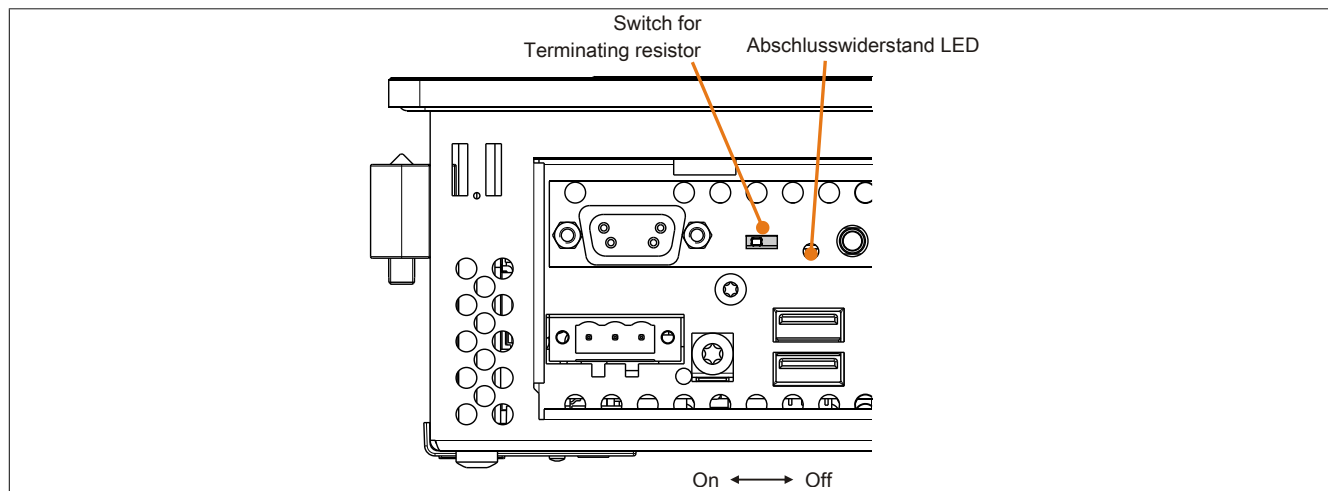


Image 14: Serial interface (COM) terminating resistor

USB port (USB4)

The I/O board has a USB 2.0 (Universal Serial Bus) host controller with multiple USB ports, one of which is on the outside for easy access.

Warning!

Peripheral USB devices can be connected to the USB interfaces. Due to the vast number of USB devices available on the market, B&R cannot guarantee their performance. B&R does ensure the performance of all USB devices that they provide.

Caution!

Because of the general PC specifications, this interface should be handled with extreme care with regard to EMC, location of cables, etc.

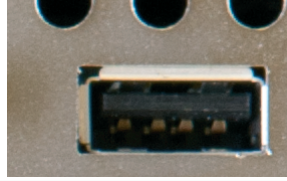
Universal Serial Bus (USB4) ¹⁾		
Transfer rate	Low speed (1.5 Mbit/s), full speed (12 Mbit/s), to high speed (480 Mbit/s)	1x USB type A, female 
Power supply ²⁾ USB4	Max. 1 A	
Cable length	max. 5 m (without hub)	

Table 68: USB4 connection

- 1) The interfaces, etc. available on the I/O board were numbered accordingly for easy identification. This numbering can differ from the numbering used by the particular operating system.
- 2) For safety, every USB port is equipped with a maintenance free "USB current-limiting circuit breaker" (max. 1 A)

MIC, Line IN, Line OUT

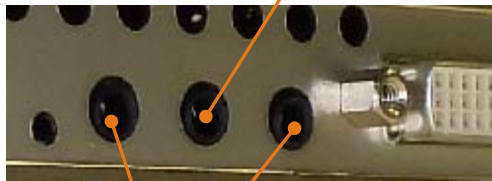
MIC, Line IN, Line OUT		
Controller	Realtek ALC 662	3.5 mm jack, female 
MIC	Connection of a mono microphone with a 3.5 mm stereo (headphone) jack.	
Line IN	Stereo Line IN signals supplied via 3.5 mm jack.	
Line OUT	Connection of a stereo sound device (e.g. amplifier) via a 3.5 mm jack.	

Table 69: MIC, Line IN, Line OUT

A special driver is necessary for operating the audio controller. The necessary drivers can be downloaded from the download area on the B&R homepage (www.br-automation.com).

Information:

Required drivers can only be downloaded from the B&R homepage, not from manufacturers' pages.

Chapter 3 • Commissioning

1 Installation

The devices are installed using the mounting plates found on the housing. The plates are designed for M5 screws.

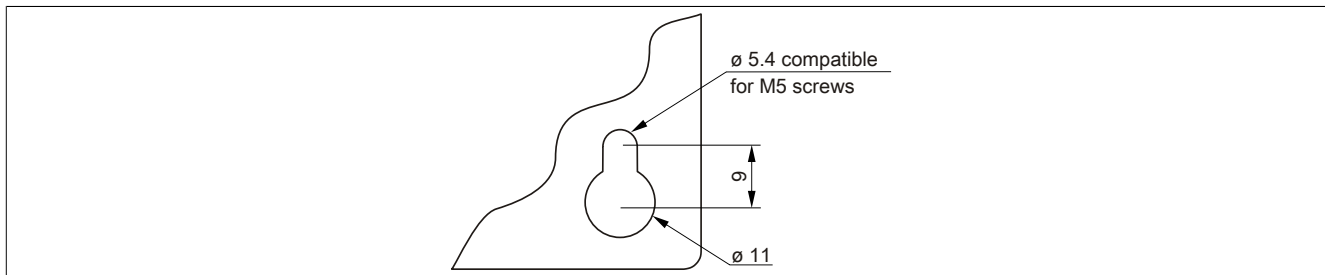


Image 15: Mounting plates

The exact positioning of the mounting holes can be seen in the following drilling templates.

1.1 Procedure

1. Drill the necessary holes in the control cabinet. The exact positioning of the mounting holes can be seen in the drilling templates.
2. Mount the B&R Industrial PC to the control cabinet using M5 screws.

1.2 Important mounting information

- The environmental conditions must be taken into consideration.
- This device must be mounted to a flat surface.
- This device is only certified for operation in closed rooms.
- This device must not be subjected to direct sunlight.
- The ventilation holes must not be covered.
- This device must be mounted in one of the specified approved orientations.
- Be sure the wall or control cabinet can withstand four times the total weight of the device.
- When connecting cables (DVI, SDL, USB, etc.) do not exceed the flex radius.

1.3 Mounting orientation

The following diagrams show the specified mounting orientation for the Automation PC 511 device.

1.3.1 Mounting orientation 0°

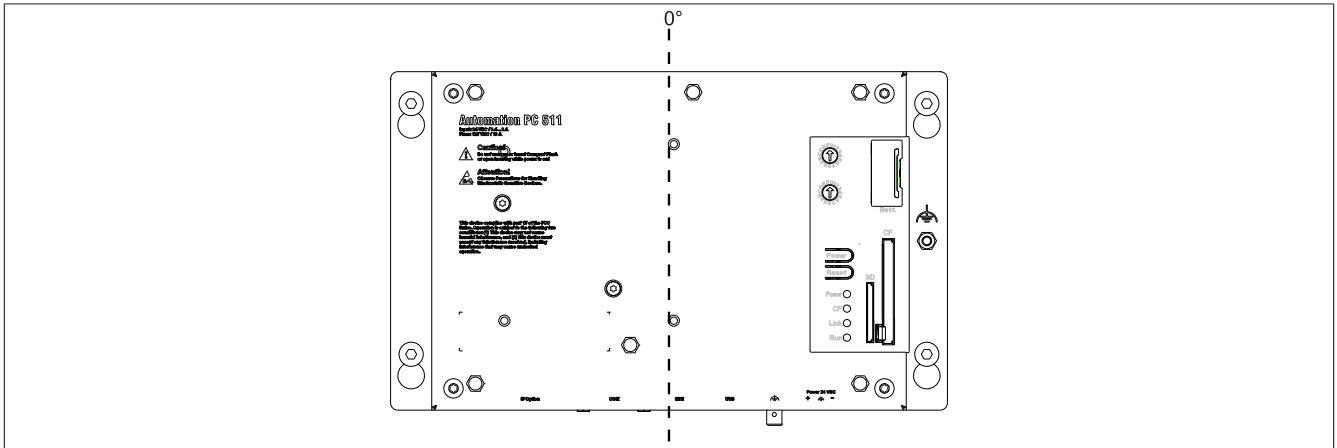


Image 16: Mounting orientation 0°

Mount the device so that the spacing is as indicated in section "Spacing for air circulation." on page 61 in order to facilitate natural air circulation.

1.3.2 Mounting orientation 90°

The maximum ambient temperature specification at a mounting orientation of 90° (horizontal) is 45°C.

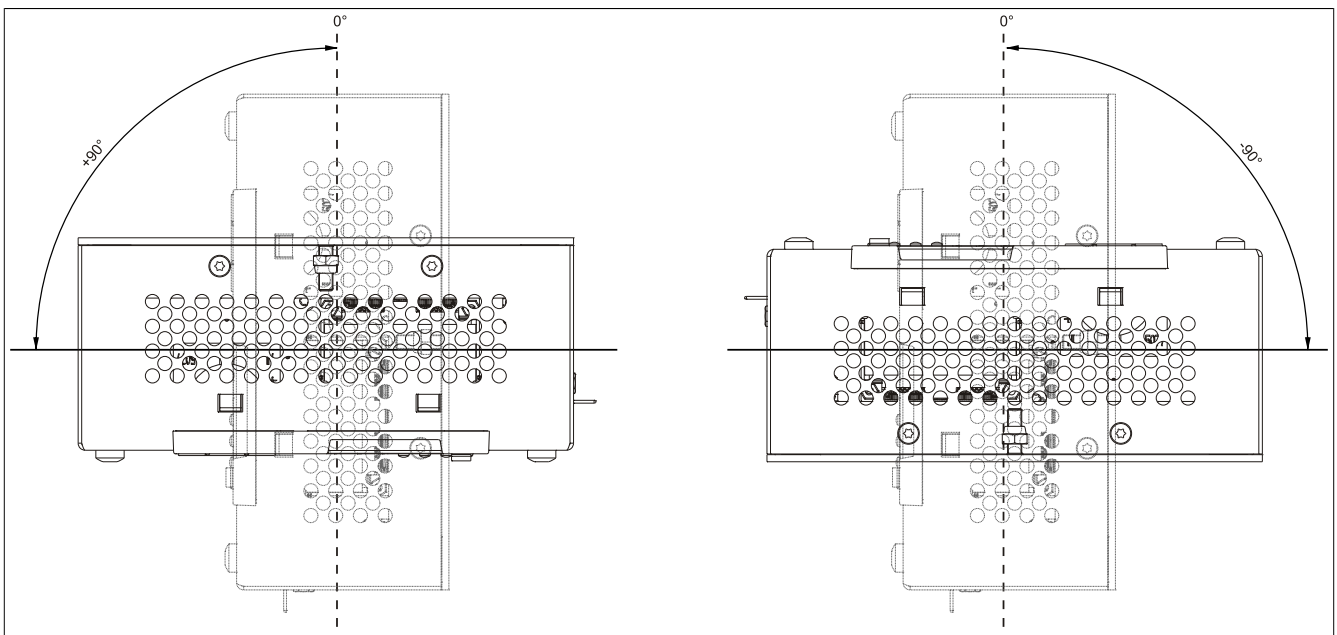


Image 17: Mounting orientation -90° or +90°.

Mount the device so that the spacing is as indicated in section "Spacing for air circulation." on page 61 in order to facilitate natural air circulation.

1.3.3 Mounting orientation 90° vertical

There are no limitations regarding ambient temperature when mounted at 90° vertical.

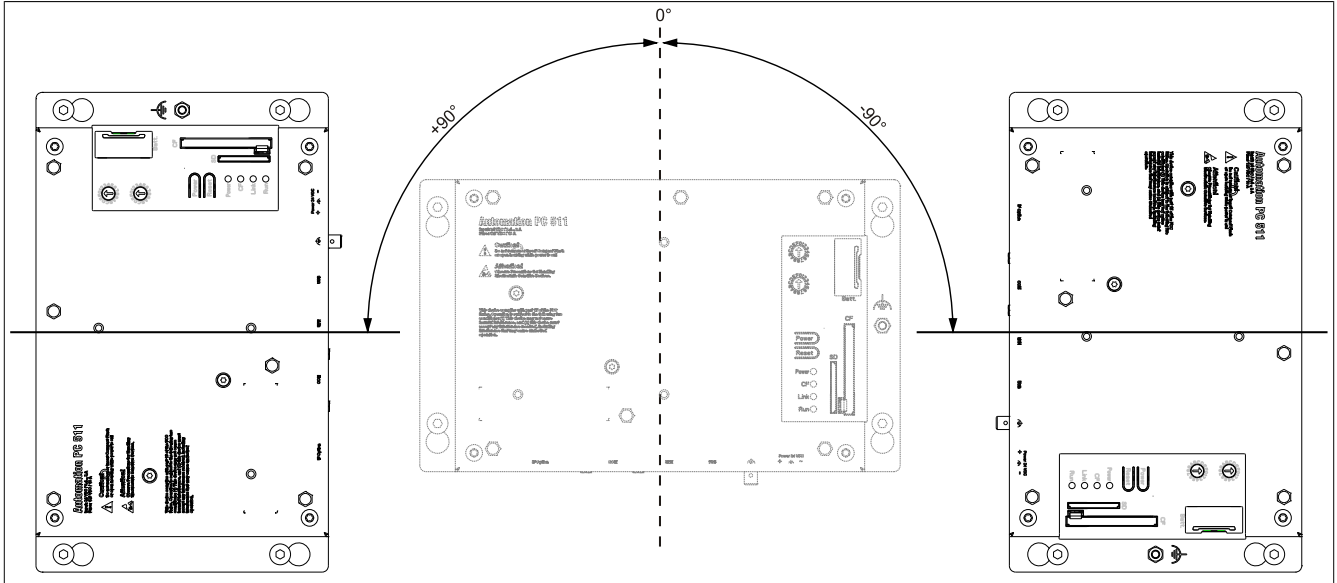


Image 18: Mounting orientation -90° or +90° vertical

Mount the device so that the spacing is as indicated in section "Spacing for air circulation." on page 61 in order to facilitate natural air circulation.

1.3.4 Mounting orientation 180°

There are no limitations regarding ambient temperature when mounted at 180°.

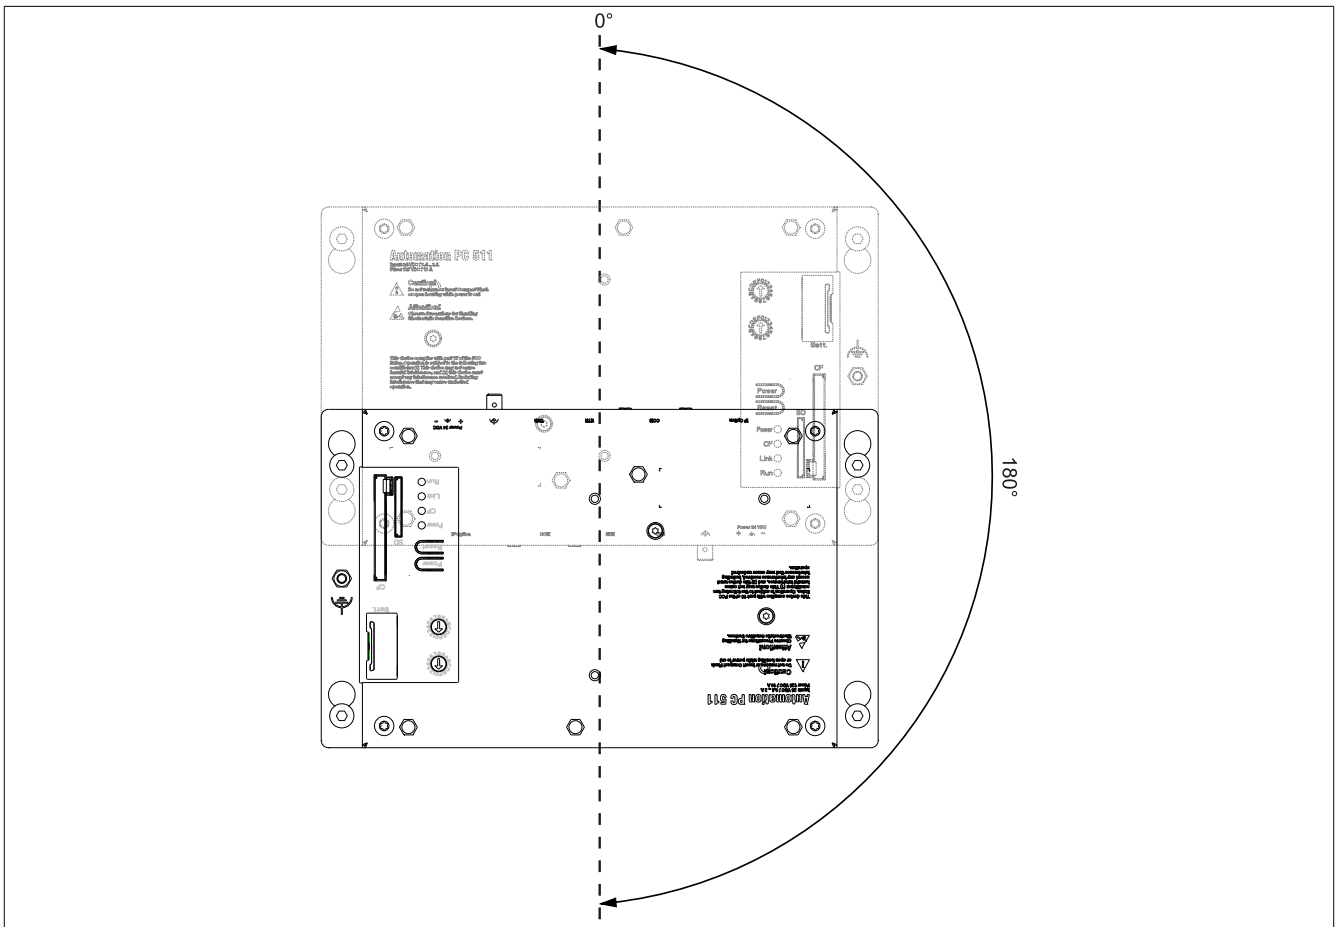


Image 19: Mounting orientation 180°

Mount the device so that the spacing is as indicated in section "Spacing for air circulation." on page 61 in order to facilitate natural air circulation.

1.4 Spacing for air circulation.

To ensure sufficient air circulation, allow the specified amount of space above, below, to the side of and behind the Automation PC 511. The minimum specified spacing is indicated in the following diagrams.

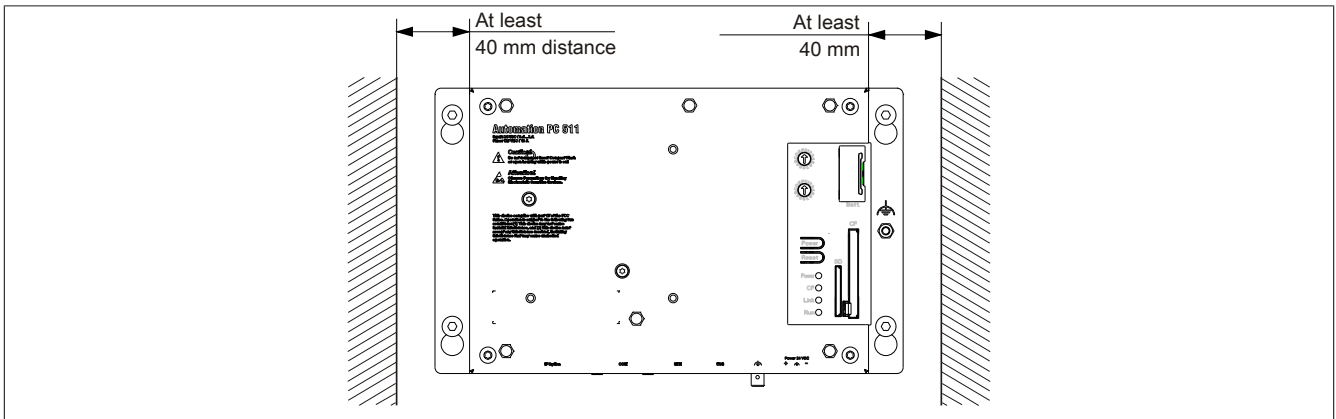


Image 20: Air circulation spacing - Rear view

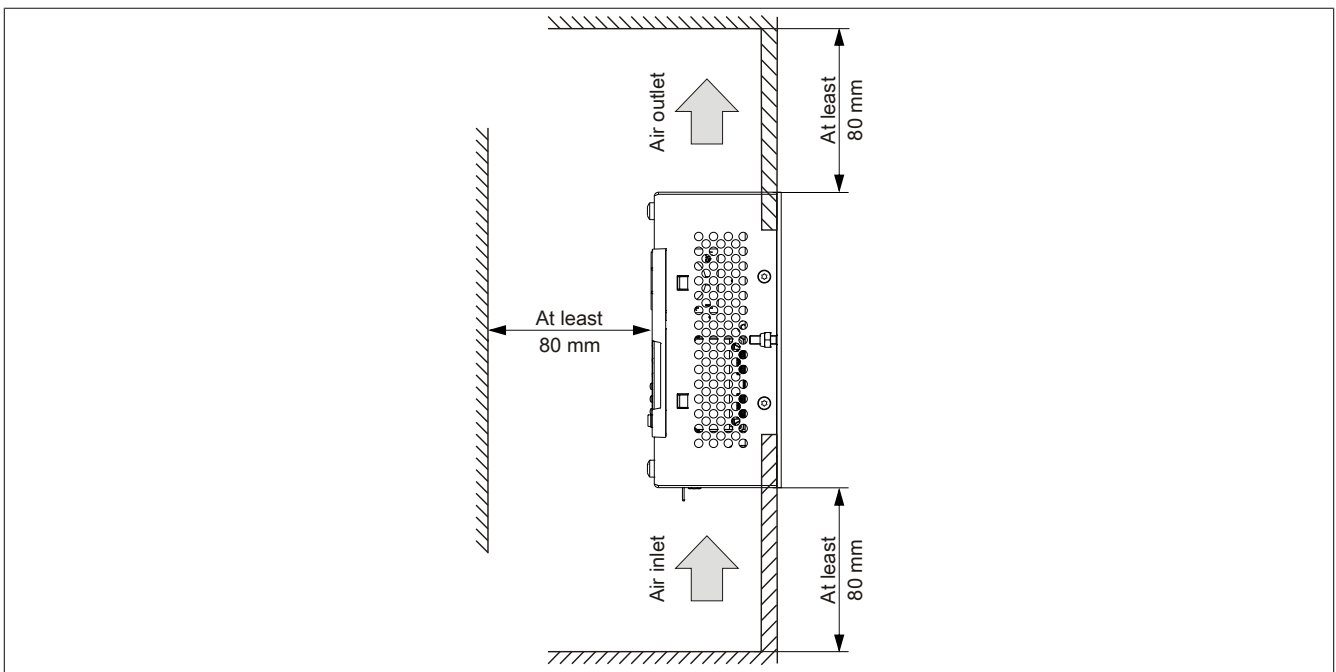


Image 21: Air circulation spacing - Side view

2 Cable connections

When making cable connections and installing cables, it is not permitted to have a Flex radius smaller than the minimum value specified.

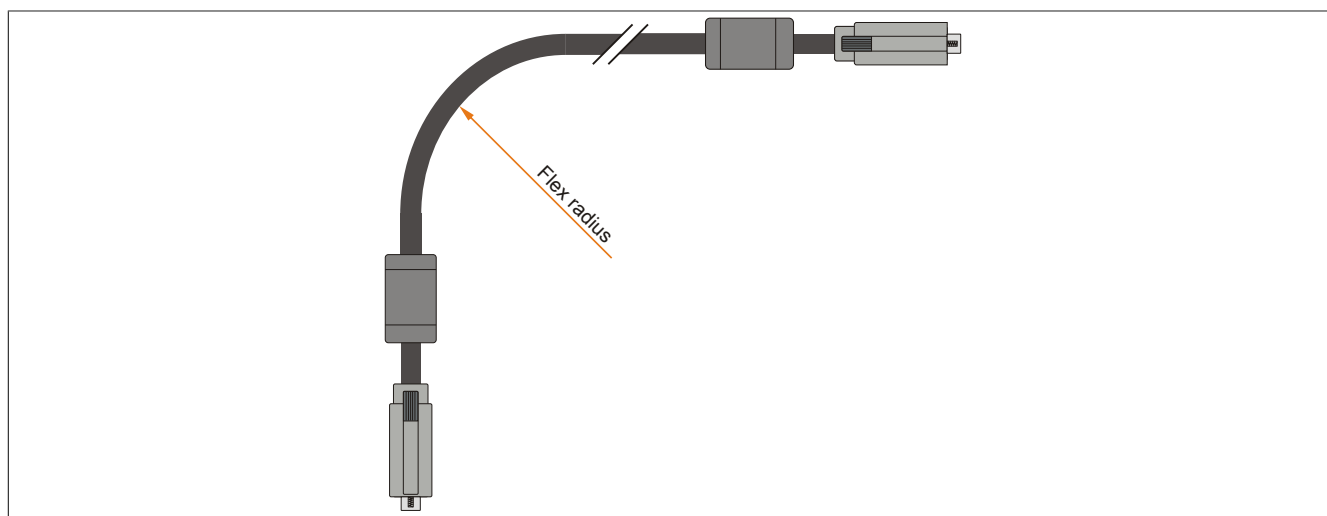


Image 22: Flex radius - Cable connection

Information:

The specified flex radius can be found in the Automation Panel 800 or Automation Panel 900 user's manual, which can be downloaded as a .pdf file from the B&R homepage www.br-automation.com.

3 Grounding concept

The functional ground is a current path with low impedance between isolated circuits and ground, which is not a protective measure, but rather provides e.g. increased immunity to disturbances. It serves only as disturbance dissipation and not as contact protection for persons.

The functional ground on the device has 2 connections:

- Supply voltage
- Ground connection

To guarantee secure dissipation of electric disturbances, the following points should be observed:

- The device should be connected to the ground using the shortest route possible.
- Use cable with a minimum cross section of 2.5 mm^2 per connection.
- Note the line shielding concept, all connected data cables are used as shielded lines.

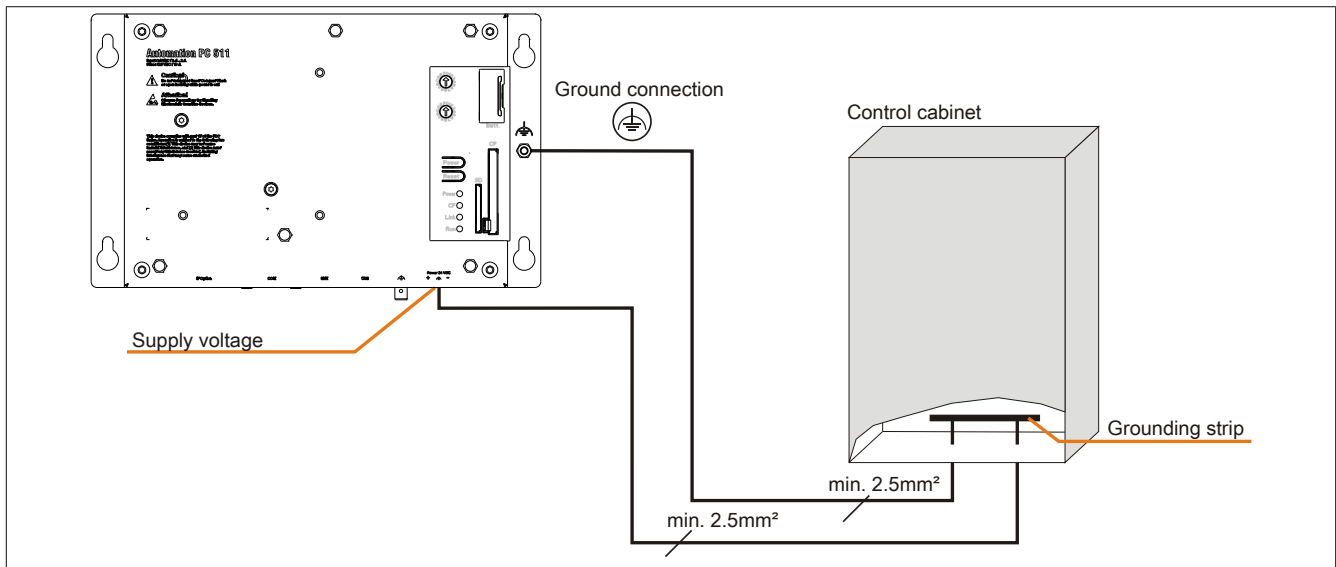


Image 23: Grounding concept

4 Operation with and without I/O board


4.1 APC511 Operation with I/O board

Operating the Automation PC 511 **with** an I/O board enables a panel to be connected to the SDL / panel interface for graphical output. When ordering the system unit, the I/O board must be ordered separately and can only be installed at the B&R plant.

The APC511 can also be connected to a PC via Ethernet for remote operation.

BIOS


Graphics are output on the panel connected to the APC511. In BIOS under Advanced - Video configuration, the option "Remote Panel" is "Disabled" by default.

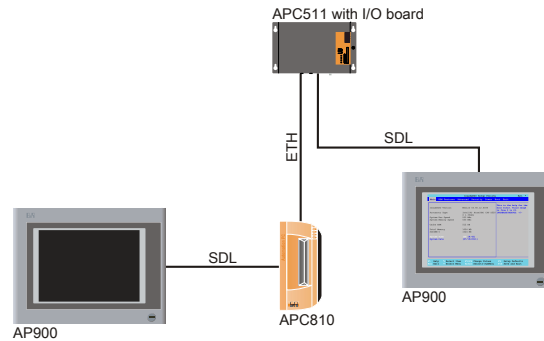

Windows


Initial hardware setup: Automation PC 511 with connected SDL (DVI) panel; second PC with connected panel or integrated display

If an APC511 **with** SDL (DVI) panel is operated remotely by another PC (e.g. remote desktop connection, UltraVNC, TeamViewer, etc), the graphic properties of the panel that is connected to the Automation PC 511 will be detected automatically.

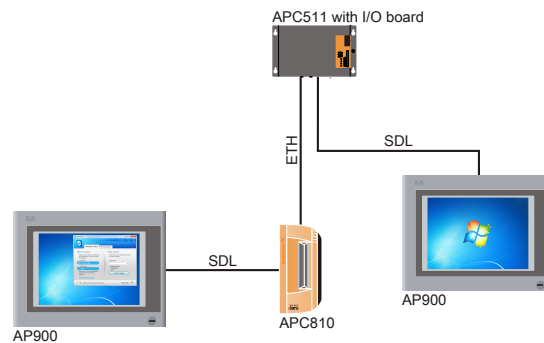

Initial hardware setup: Automation PC 511; second PC with connected panel or integrated display

If an APC511 **without** SDL (DVI) panel is operated remotely by another PC (e.g. remote desktop connection, UltraVNC, TeamViewer, etc), graphics are output on the PC display in only 16 colors because information is not transferred from the Automation PC 511 graphics driver.

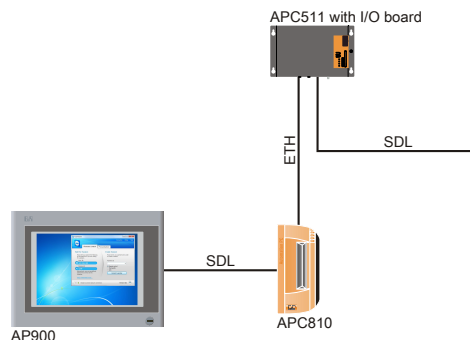

If an APC511 without SDL (DVI) panel is operated remotely by another PC (e.g. remote desktop connection, UltraVNC, TeamViewer, etc), but a panel was connected to the Automation PC 511 the first time it was booted, then the BIOS setting Advanced - Video configuration "Remote Panel" must be manually set to "Enabled".

Information:


If the Automation PC 511 is no longer being operated remotely, then the BIOS setting Advanced - Video configuration "Remote Panel" must be manually set back to "Disabled". If this setting is not made, then the connected panel will remain blank.

4.2 APC511 Operation with I/O board (Headless Option)

Operating the Automation PC 511 **without** I/O board means that a panel cannot be connected for graphical output because the standard Automation PC 511 does not have its own SDL / panel interface. When ordering the system unit, the I/O board must be ordered separately and can only be installed at the B&R plant.

BIOS

To view and configure the BIOS on the Automation PC 511, a second PC must be connected via the APC511's serial interface. The connected PC must be operated using a panel (e.g. an Automation PC 810 with Automation Panel 900) or have its own display (e.g. a Panel PC 800). The Remote Console is enabled when the Mode/Node switch of the Automation PC 511 is set to "00" (default setting). A terminal emulator⁴⁾ can then be used to access the Automation PC 511 BIOS via the serial interface. In BIOS under Advanced - Video configuration, the option "Remote Panel" is "Enabled" by default. No other settings are required.

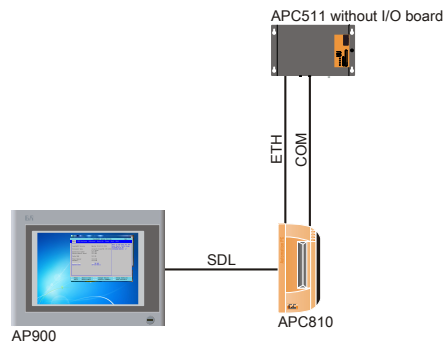


Information:

The default setting must be used the first time the terminal emulator is configured. Information about the BIOS settings can be found under "Console Redirection" on page 102.

Windows

To use and output content on Windows operating systems, the APC511 must be connected to a PC (with connected or integrated display) via the Ethernet port. The Automation PC 511 can then be operated remotely (e.g. remote desktop connection, TeamViewer, UltraVNC).

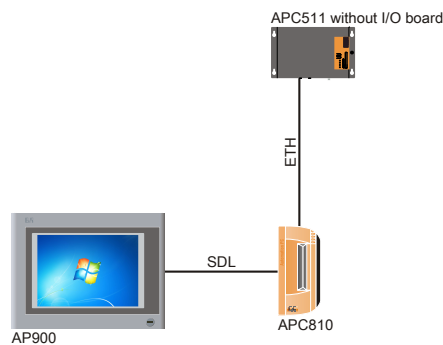

4) such as PuTTY (freeware) or HyperTerminal (not included in Windows since Windows Vista)

Chapter 4 • Software

1 BIOS options

Information:

The following diagrams, BIOS menu items and their descriptions refer to BIOS version 1.00. It is therefore possible that these diagrams and BIOS descriptions do not correspond with the installed BIOS version.

1.1 General information

BIOS stands for "Basic Input Output System". It is the most basic standardized communication between the user and the system (hardware). The BIOS system used in this B&R industrial PC is produced by Insyde.

The BIOS Setup Utility lets you modify basic system configuration settings. These settings are stored in CMOS and in EEPROM (as a backup).

The CMOS data is buffered by a battery (if present), and remains in the B&R industrial PC even when the power is turned off (no 24 VDC supply).

1.2 BIOS setup and start procedure

BIOS is immediately activated when switching on the power supply of the B&R industrial PC or pressing the power button. The system checks if the setup data from the EEPROM is "OK". If the data is "OK", then it is transferred to the CMOS. If the data is "not OK", then the CMOS data is checked for validity. An error message is output if the CMOS data contains errors and the boot procedure can be continued by pressing the <F1> key. To prevent the error message from appearing at each restart, open the BIOS setup by pressing the key and re-save the settings.

BIOS reads the system configuration information in CMOS RAM, checks the system, and configures it using the Power On Self Test (POST).

When these "preliminaries" are finished, BIOS seeks an operating system in the data storage devices available (hard drive, floppy drive, etc.). BIOS launches the operating system and hands over control of system operations to it.

To enter BIOS Setup, the <F2> key must be pressed after the USB controller has been initialized as soon as the following message appears on the monitor (during POST): "Press F2 go to Setup Utility"

Information:

The POST screen is only displayed for a fraction of a second due to optimized boot procedures. It is however, still possible to enter BIOS.

Processor Type : Intel(R) Atom(TM) CPU Z520 @ 1.33GHz

System Memory Speed : 533 MHz

CPUID : 106C2

F2 is pressed. Go to Setup Utility.

Other Device 1 : BR-SSD-C004G-01-0101

Image 24: Boot screen

1.2.1 BIOS setup keys

The following keys are enabled during the POST:

Information:

The key signals from the USB keyboard are only registered after the USB controller has been initialized.

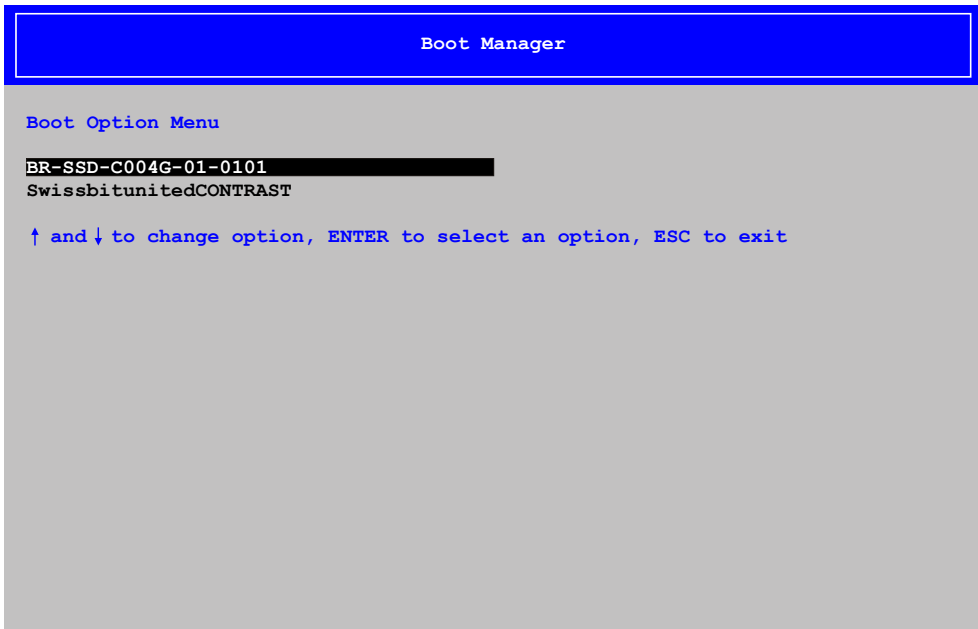
Keys	Function
F2	Enters the BIOS setup menu.
F12	Cues the boot menu. Lists all bootable devices that are connected to the system. Select the device to boot from with cursor ↑, cursor ↓ and <ENTER>. Use the ESC key to exit the boot menu.
	
<Pause>	Pressing the <Pause> key stops the POST. Press any other key to resume the POST.

Table 70: BIOS-relevant keys for POST

The following keys can be used after entering the BIOS setup:

Key	Function
F1	General help.
Cursor ↑	Moves to the previous item.
Cursor ↓	Go to the next item.
Cursor ←	Moves to the previous menu.
Cursor →	Go to the next menu.
F5/F6	Change BIOS settings.
Enter	Changes to the selected menu.
F9	These settings are loaded for all BIOS configurations.
F10	Save and close.
Esc	Exits the submenu.

Table 71: BIOS-relevant keys in the BIOS menu

1.3 Main

Immediately after the <F2> key is pressed during startup, the main BIOS setup menu appears.

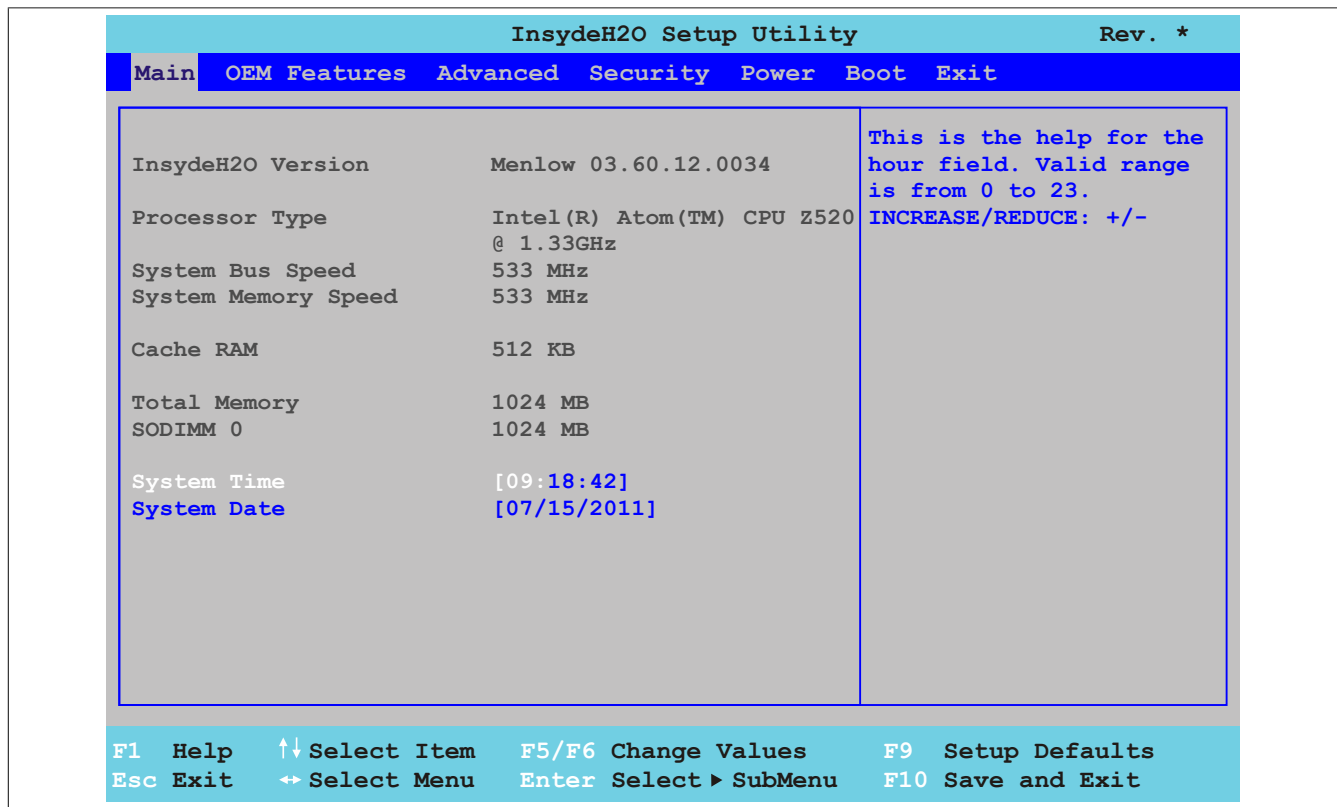


Image 25: US15W Main - Menu

BIOS setting	Meaning	Setting options	Effect
InsydeH2O Version	Displays the BIOS InsydeH2O version.	None	-
Processor type	Displays the processor type.	None	-
System Bus Speed	Displays the System Bus speed		
System Memory Speed	Displays the system memory speed.	None	-
Cache RAM	Displays the Cache RAM in the system.	None	-
Total Memory	Displays the entire system memory size.	None	-
SODIMM 0	Displays the amount of RAM in the SODIMM 0 slot.	None	-
System Time	This is the current system time setting. The time is buffered by a battery (CMOS battery) after the system has been switched off.	Adjustment of the system time	Set the system time in the format Hour:Minute:Second (hh:mm:ss).
System Date	This is the current system date setting. The time is buffered by a battery (CMOS battery) after the system has been switched off.	Changes to the system date	Sets the system date in the format Month:Day:Year (mm:dd:yyyy).

Table 72: US15W Main - Menu setting options

1.4 OEM Features

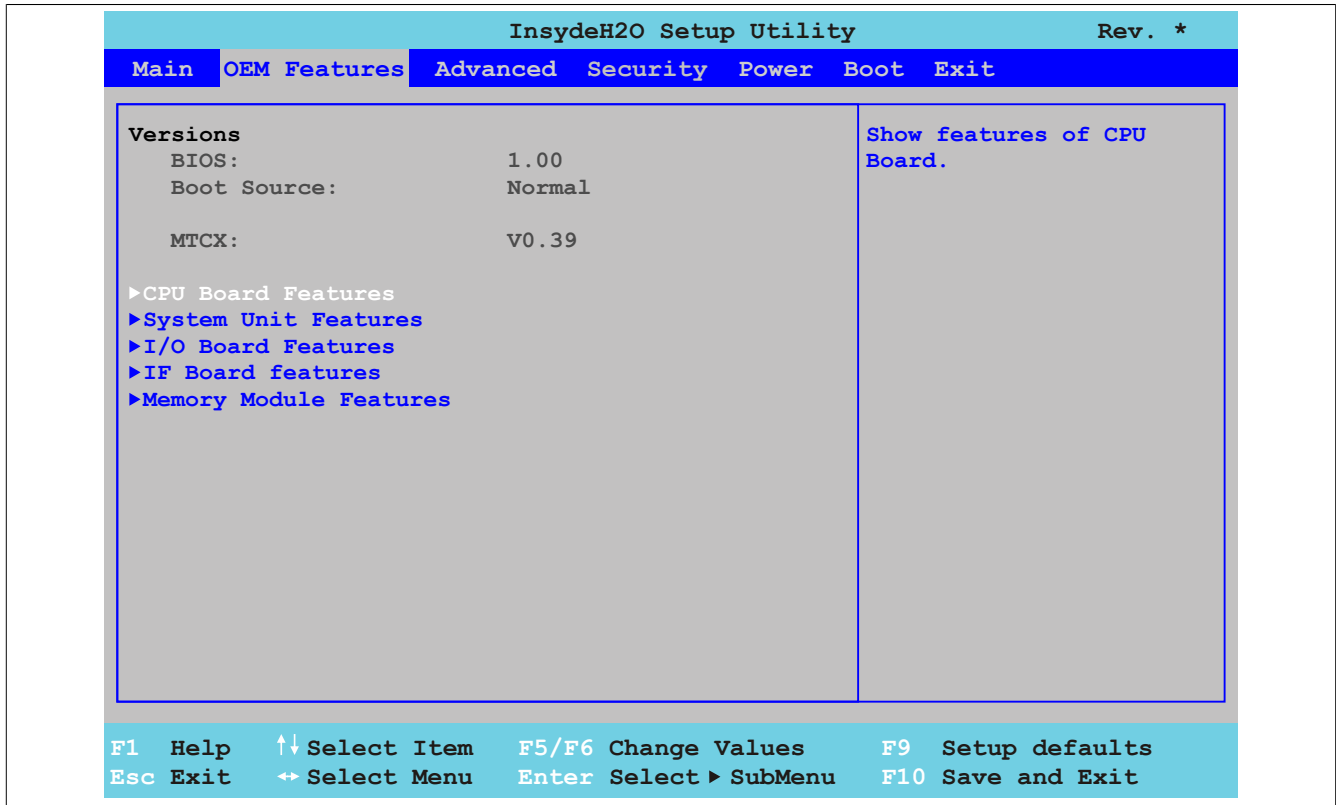


Image 26: US15W OEM Features - Menu

BIOS setting	Meaning	Setting options	Effect
BIOS	Displays the B&R BIOS boot version.	None	-
Boot Source	Displays whether boot source is "normal" BIOS version (Normal) or the Backup BIOS version (Backup)		Information: If a BIOS update failed, then the back-up BIOS will be loaded automatically. The BIOS update can then be attempted again.
MTCX	Displays the MTCX version that is installed.	None	
CPU Board Features	Displays device specific information and setup of device specific values for the CPU board.	Enter	Opens the submenu See " CPU Board Features" on page 71
System Unit Features	Displays device specific information and setup of device specific values for the system unit.	Enter	Opens the submenu See " System Unit Features" on page 76
I/O board features¹⁾	Displays device specific information for the I/O board.	Enter	Opens the submenu See " I/O Board Features" on page 80
IF board features²⁾	Displays device specific information for the IF board.	Enter	Opens the submenu See " IF Board Features" on page 85
Memory Module Features	Displays device specific information for the main memory.	Enter	Opens the submenu See " Memory Module Features" on page 87

Table 73: US15W OEM Features - Menu setting options

- 1) This submenu is only displayed when there is an I/O board connected to the system unit.
 2) This submenu is only displayed when there is an interface board connected to the system unit.

1.4.1 CPU Board Features

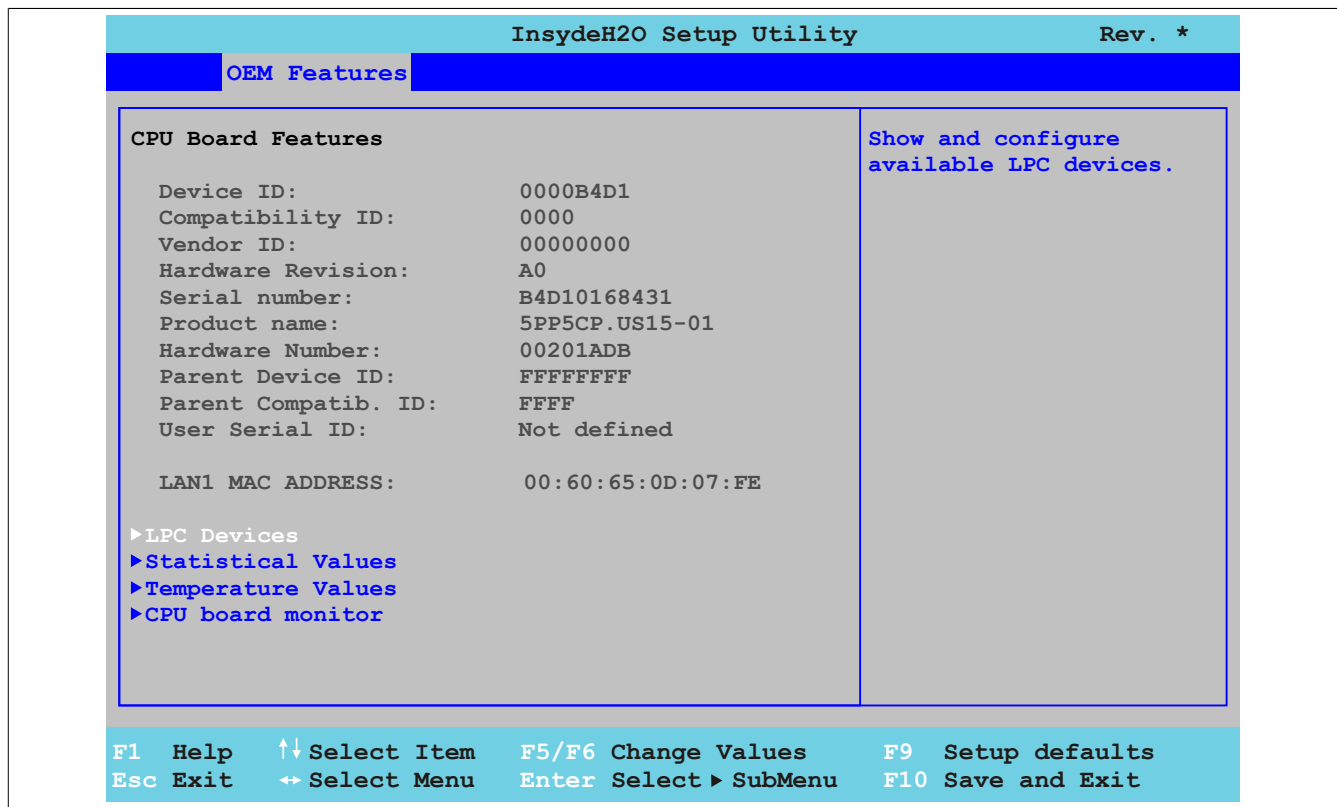


Image 27: US15W OEM Features - CPU Board Features

BIOS setting	Meaning	Setting options	Effect
Device ID	Displays the device ID of the CPU board.	None	-
Compatibility ID	Displays the version of the device within the same B&R device code. This ID is needed for Automation Runtime.	None	-
Vendor ID	Displays the Vendor ID.	None	-
Hardware revision	Displays the CPU board hardware revision.	None	-
Serial number	Displays the B&R serial number.	None	-
Product name	Displays the B&R model number.	None	-
Hardware Number	Displays the CPU board hardware number.	None	-
Parent Device ID	Displays the manufacturer number.	None	-
Parent Compatib. ID	Displays the manufacturer ID.	None	-
User serial ID	Displays the user serial ID. This 8 digit hex value can be freely assigned by the user (e.g. to give the device a unique ID) and can only be changed with using the "B&R Control Center" via the ADI driver.	None	-
LAN1 MAC ADDRESS	Displays the MAC addresses assigned for the ETH interface.	None	-
LPC Devices	Configuration of the LPC Devices.	Enter	Opens the submenu See "LPC Devices" on page 72
Statistical Values	Displays the statistical values.	Enter	Opens the submenu See "Statistical Values" on page 73
Temperature Values	Displays the current temperature values.	Enter	Opens the submenu See "Temperature Values" on page 74
CPU board monitor	Displays the current voltage values on the CPU board being used.	Enter	Opens the submenu See "CPU Board Monitor" on page 75

Table 74: US15W OEM Features - Baseboard Features setting options

LPC Devices

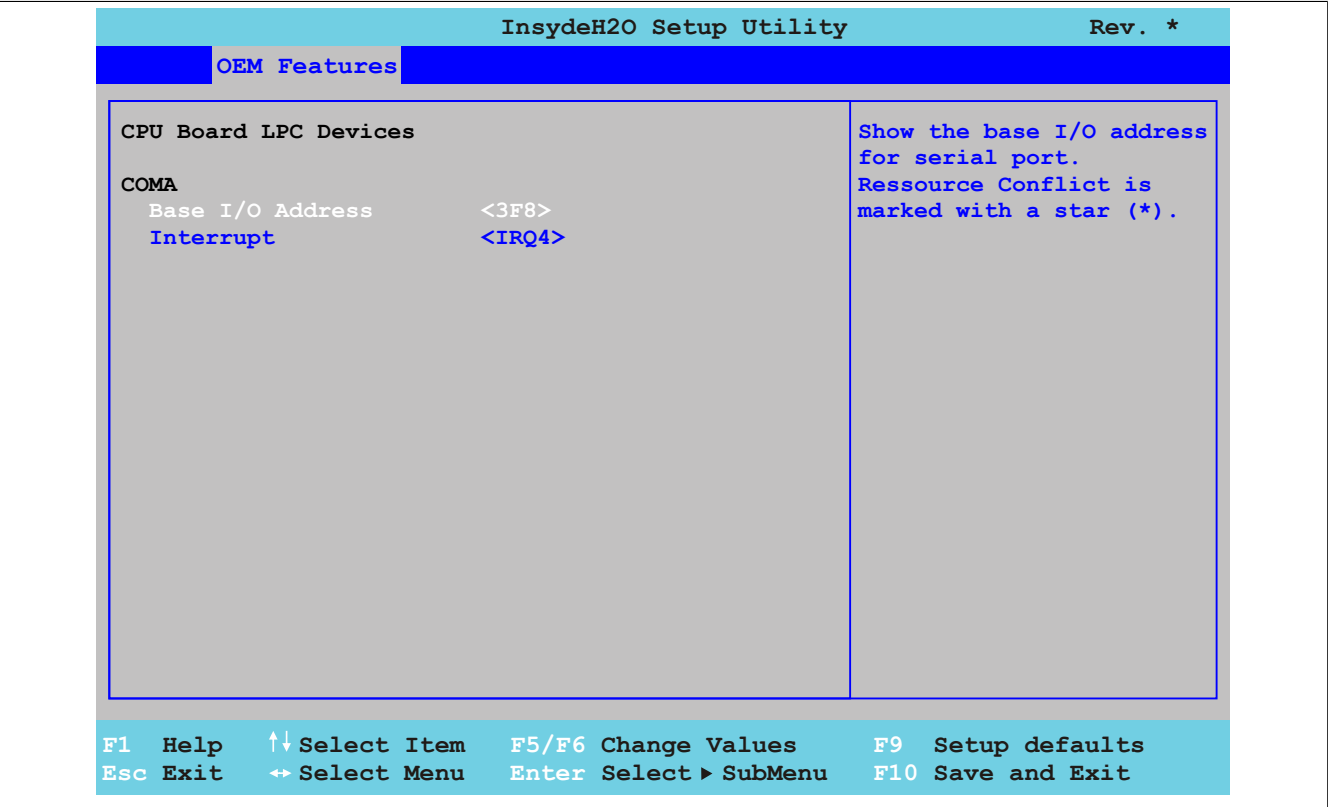


Image 28: US15W OEM Features - CPU Board Features - LPC Devices

BIOS setting	Meaning	Setting options	Effect
COMA	Settings for the COM serial interface in the system.	None	-
Base I/O Address	Selection of the base I/O address for the COM port.	Disabled, 238, 2E8, 2F8, 328, 338, 3E8, 3F8	Disables or assigns the selected base I/O address.
Interrupt	Selection of the interrupt for the COM port.	IRQ3, IRQ4, IRQ5, IRQ6, IRQ10, IRQ11, IRQ12	Selected interrupt is assigned.

Table 75: US15W OEM Features - Baseboard Features - LPC Devices setting options

Information:

A resource conflict can occur regarding the Base I/O address or Interrupt settings, which will cause a warning. In order to make the settings anyways, the setting must first be made on the Base I/O address or Interrupt being that is used.

Statistical Values

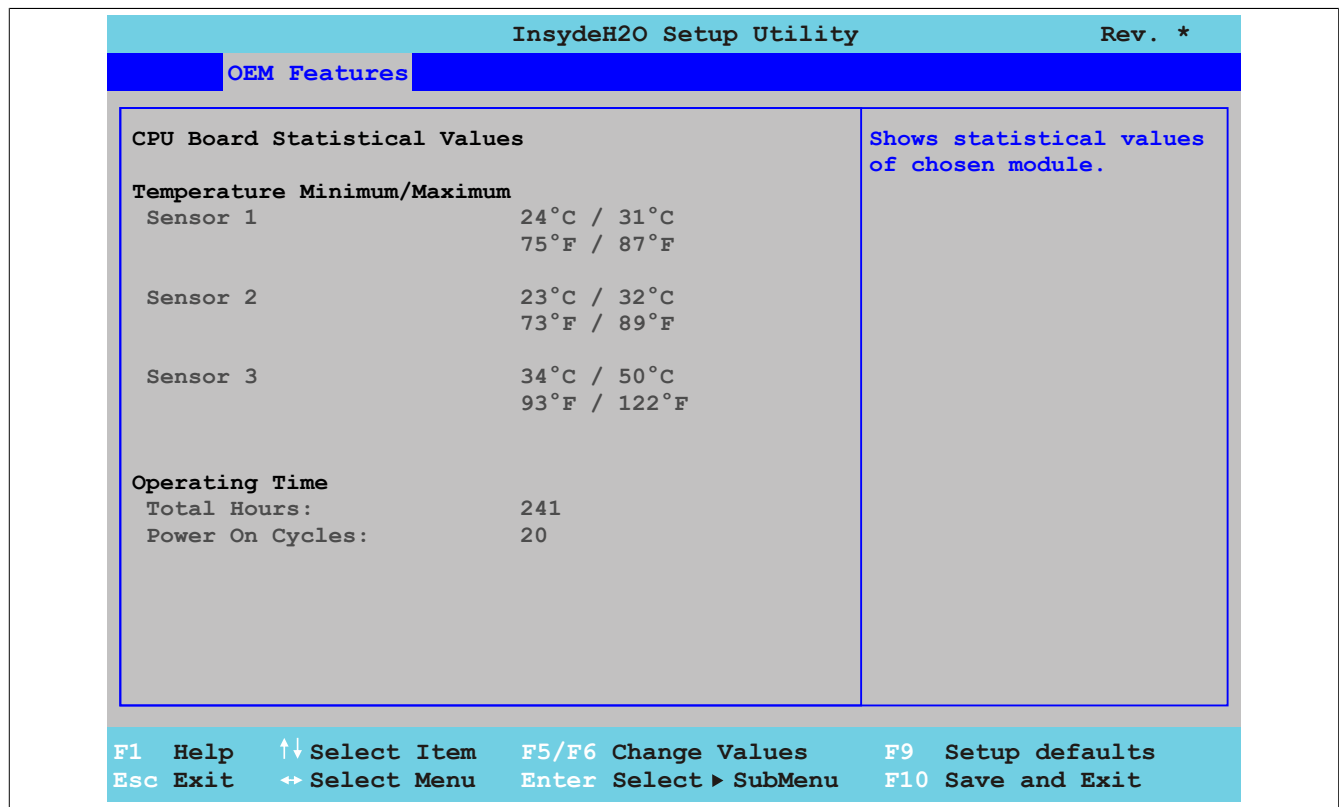


Image 29: US15W OEM Features - CPU Board Features- Statistical Values

BIOS setting	Meaning	Setting options	Effect
Sensor 1	Displays the minimum and maximum temperature of sensor 1 (interfaces) in °C and °F.	None	-
Sensor 2	Displays the minimum and maximum temperature of sensor 2 (CPU) in °C and °F.	None	-
Sensor 3	Displays the minimum and maximum temperature of sensor 3 (main memory) in °C and °F.	None	-
Total Hours	Displays the runtime in whole hours.	None	-
Power on cycles	Displays the Power On Cycles - each restart increases the counter by one.	None	-

Table 76: US15W OEM Features - Baseboard Features - Statistical Values setting options

Temperature Values

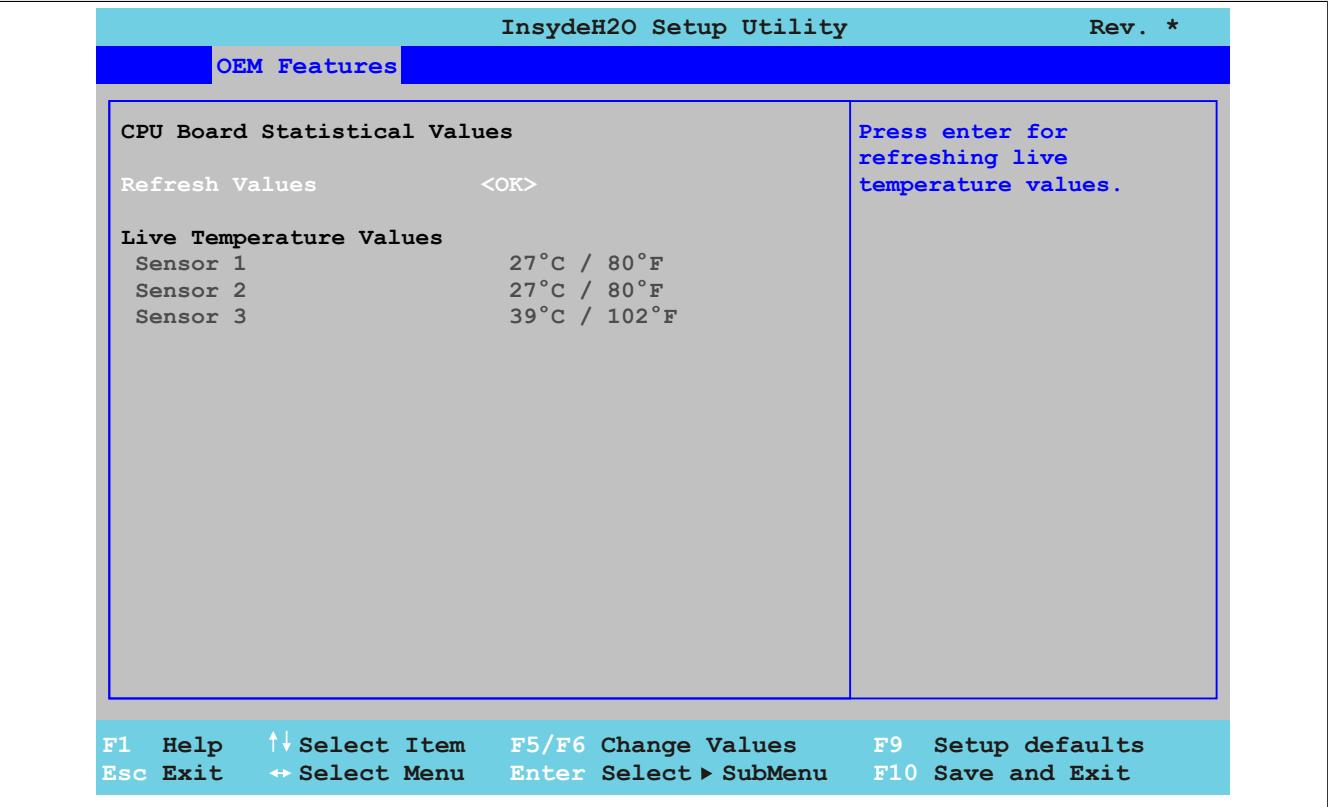


Image 30: US15W OEM Features - CPU Board Features- Temperature Values

BIOS setting	Meaning	Setting options	Effect
Refresh Values	Option for refreshing the temperature values.	OK	Refreshes the temperature values shown below.
Sensor 1	Displays the current temperature of Sensor 1 (interfaces) in °C and °F.	None	-
Sensor 2	Displays the current temperature of sensor 2 (CPU) in °C and °F.	None	-
Sensor 3	Displays the current temperature of sensor 3 (main memory) in °C and °F.	None	-

Table 77: US15W OEM Features - Baseboard Features - Temperature Values setting options

CPU Board Monitor

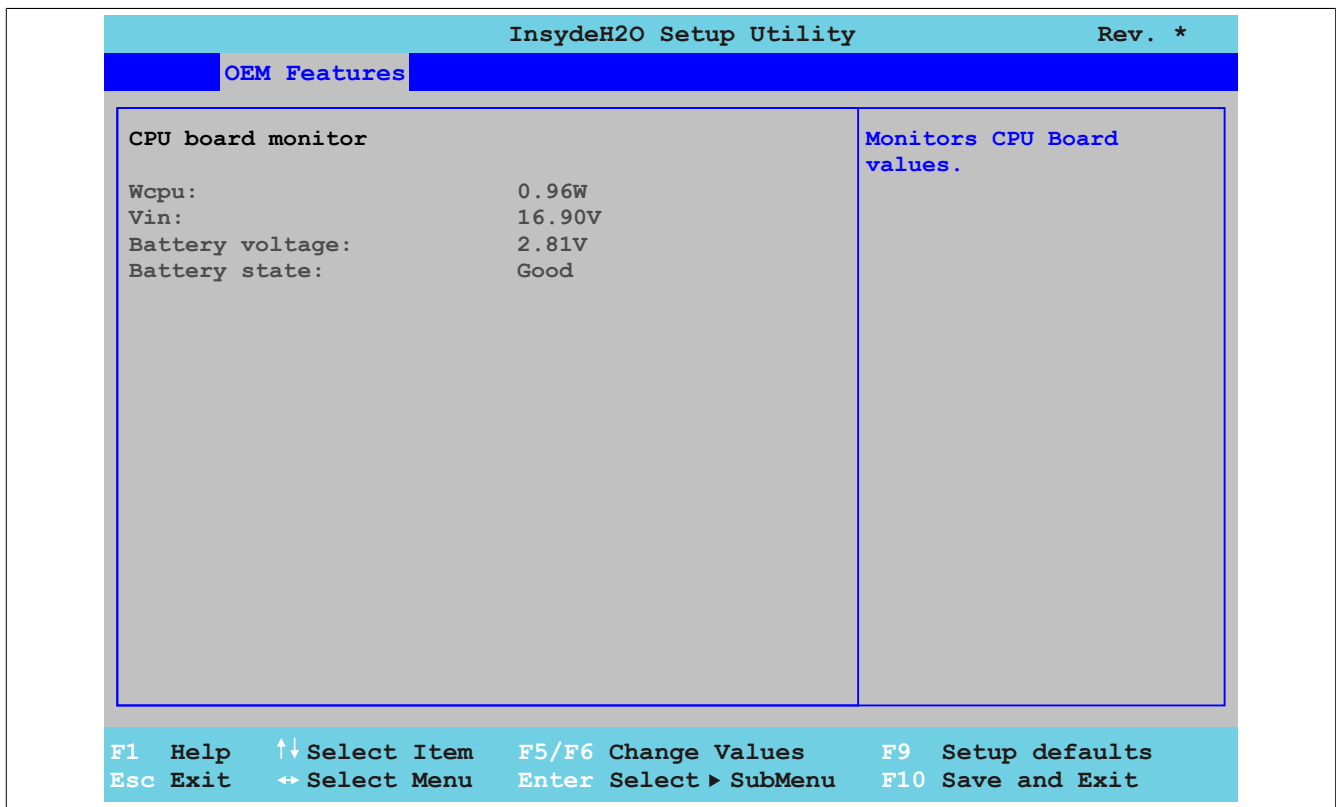


Image 31: US15W OEM Features - CPU Board Features - CPU Board Monitor

BIOS setting	Meaning	Setting options	Effect
Wcpu:	Displays the CPU power consumption in watts.	None	-
Vin:	Displays the current voltage of the power supply in volts.	None	-
Battery voltage:	Displays the battery voltage (in volts).	None	-
Battery state:	Displays the battery status.	None	-

Table 78: US15W OEM Features - Baseboard Features - Baseboard Monitor setting options

1.4.2 System Unit Features

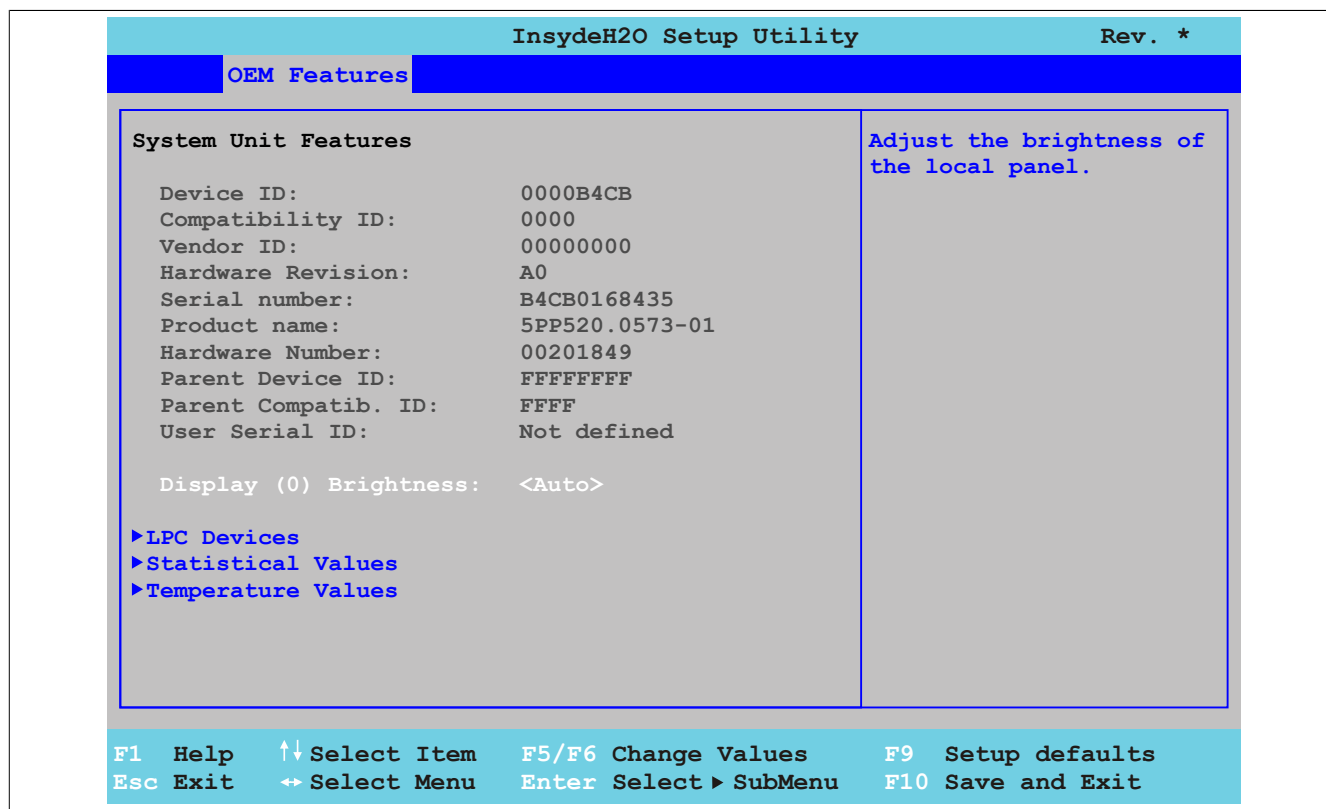


Image 32: US15W OEM Features - System Unit Features

BIOS setting	Meaning	Setting options	Effect
Device ID	Displays the device code of the Power Panel device.	None	-
Compatibility ID	Displays the version of the device within the same B&R device code. This ID is needed for Automation Runtime.	None	-
Vendor ID	Displays the Vendor ID.	None	-
Hardware revision	Displays the system unit hardware revision.	None	-
Serial number	Displays the B&R serial number.	None	-
Product name	Displays the B&R model number.	None	-
Hardware Number	Displays the system unit hardware number.	None	-
Parent Device ID	Displays the manufacturer number.	None	-
Parent Compatib. ID	Displays the manufacturer ID.	None	-
User serial ID	Displays the user serial ID. This 8 digit hex value can be freely assigned by the user (e.g. to give the device a unique ID) and can only be changed with using the "B&R Control Center" via the ADI driver.	None	-
Display (0) Brightness ¹⁾	Option for setting the background lighting of the display.	Auto	The optimal brightness is automatically configured using the factory settings. A brightness value between 100% and 0% is set.
		0%, 10%, 20%, 30%, 40%, 50%, 60%, 70%, 80%, 90%, 100%	Manual setting of the desired brightness within factory settings limits.
LPC Devices	Configuration of the LPC Devices.	Enter	Opens the submenu See "LPC Devices" on page 77
Statistical Values	Displays the statistical values.	Enter	Opens the submenu See "Statistical Values" on page 78
Temperature Values	Displays the current temperature values.	Enter	Opens the submenu See "Temperature Values" on page 79

Table 79: US15W OEM Features - Display Features setting options

1) This setting is only available for PP500 system units.

LPC Devices

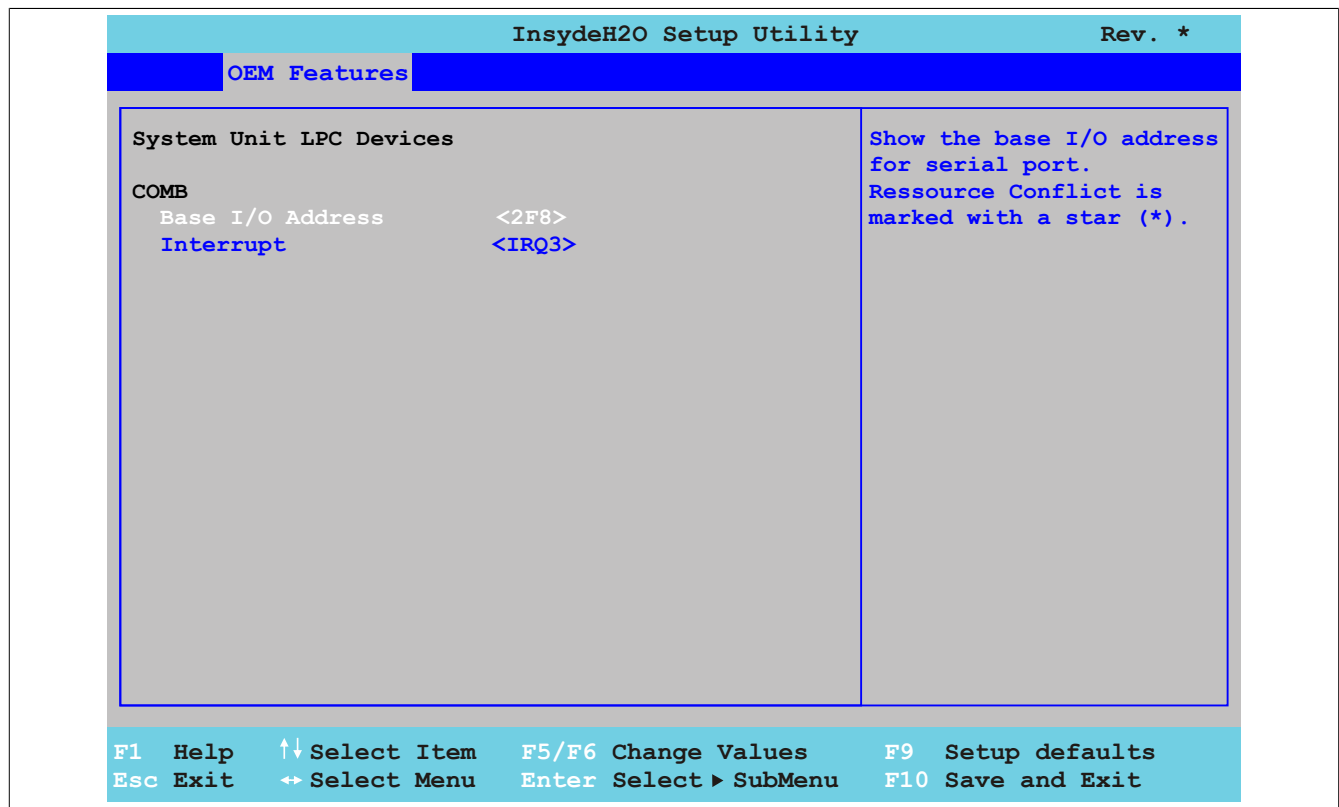


Image 33: US15W OEM Features - System Unit Features - LPC Devices

BIOS setting	Meaning	Setting options	Effect
COMB	Settings for the COM serial interface in the system.	None	-
Base I/O Address	Selection of the base I/O address for the COM port.	Disabled, 238, 2E8, 2F8, 328, 338, 3E8, 3F8	Disables or assigns the selected base I/O address.
Interrupt	Selection of the interrupt for the COM port.	IRQ3, IRQ4, IRQ5, IRQ6, IRQ10, IRQ11, IRQ12	Selected interrupt is assigned.

Table 80: US15W OEM Features - Display Features - LPC Devices setting options

Information:

A resource conflict can occur regarding the Base I/O address or Interrupt settings, which will cause a warning. In order to make the settings anyways, the setting must first be made on the Base I/O address or Interrupt being that is used.

Statistical Values

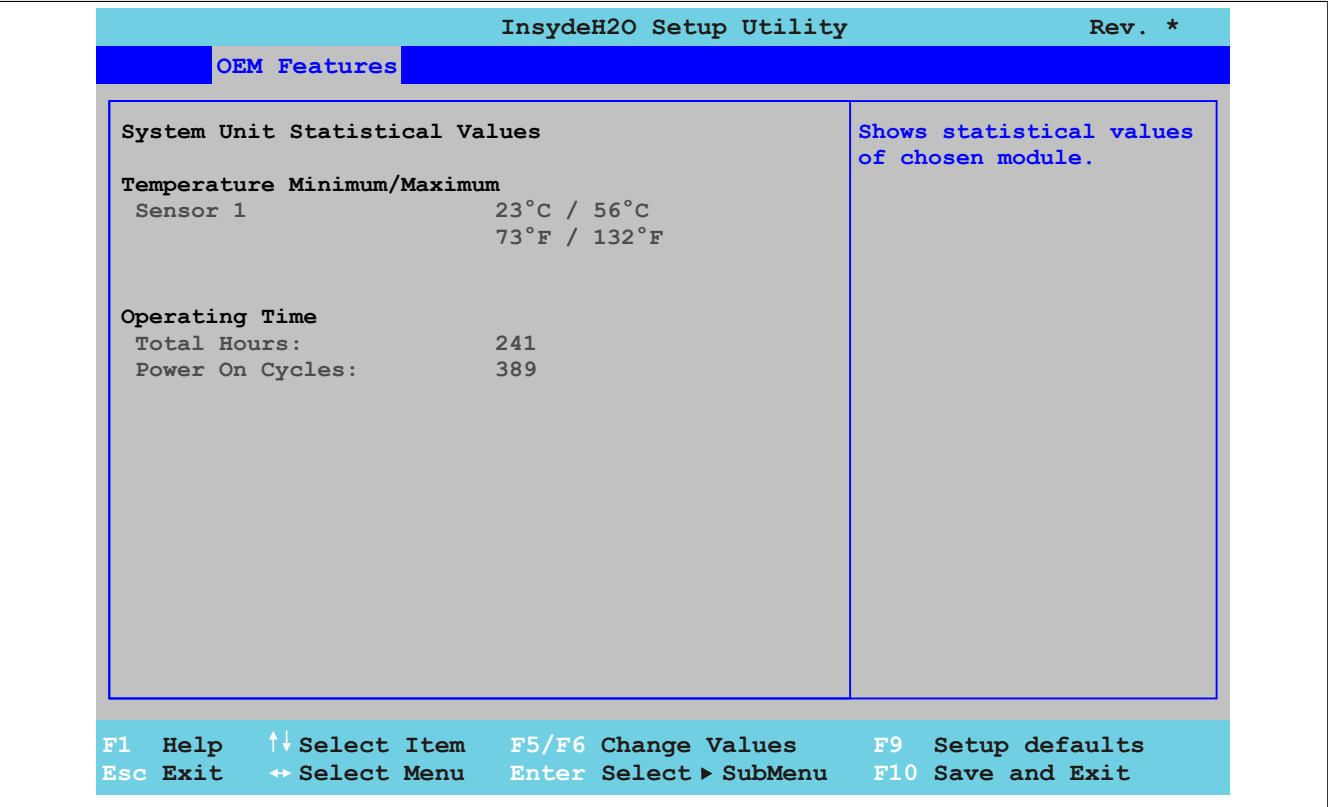


Image 34: US15W OEM Features - System Unit Features- Statistical Values

BIOS setting	Meaning	Setting options	Effect
Sensor 1	Displays the minimum and maximum sensor temperature 1 in °C and °F.	None	-
Total Hours	Displays the runtime in whole hours.	None	-
Power on cycles	Displays the Power On Cycles - each restart increases the counter by one.	None	-

Table 81: US15W OEM Features - Display Features - Statistical Values setting options

Temperature Values

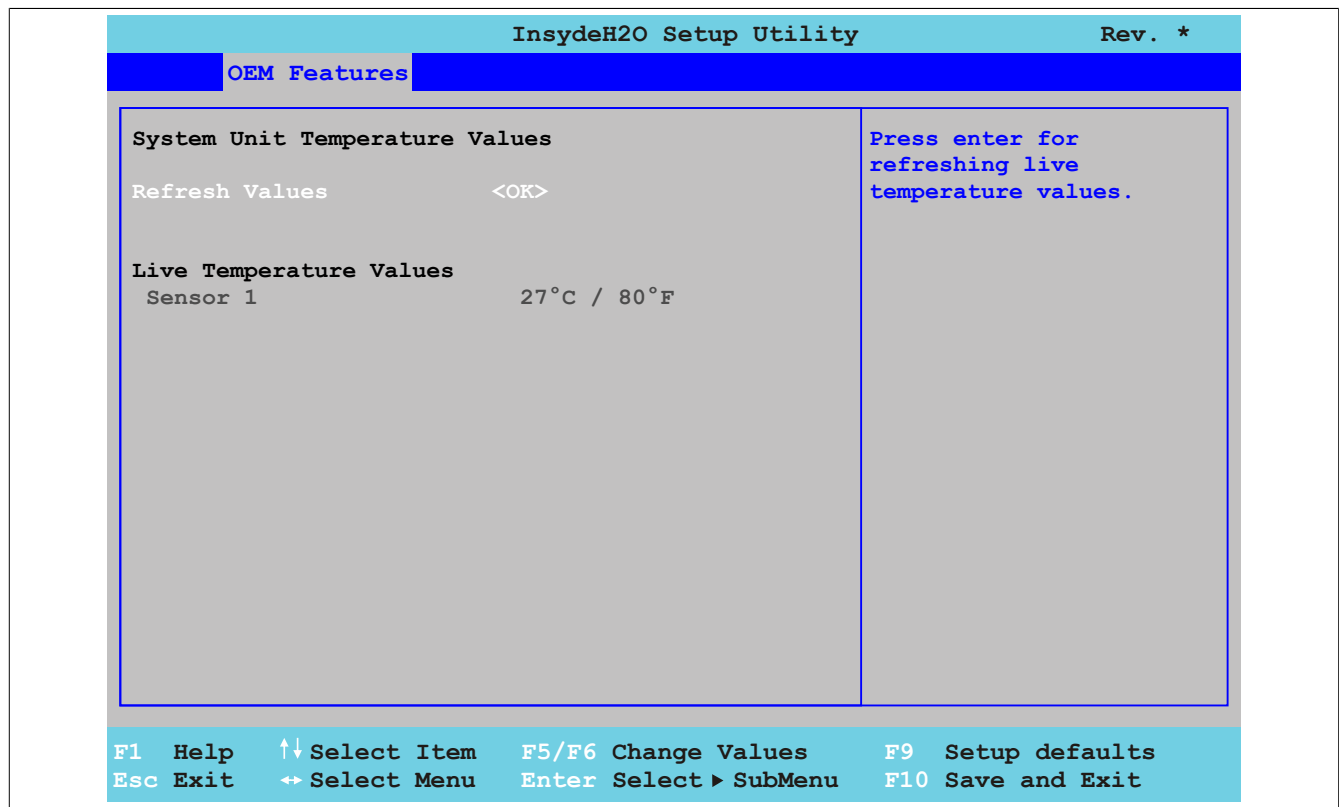


Image 35: US15W OEM Features - System Unit Features- Temperature Values

BIOS setting	Meaning	Setting options	Effect
Refresh Values	Option for refreshing the temperature values.	OK	Refreshes the temperature values shown below.
Sensor 1	Displays the current sensor temperature 1 in °C and °F.	None	-

Table 82: US15W OEM Features - Display Features - Temperature Values setting options

1.4.3 I/O Board Features

Information:

The values and menus shown may vary depending on which I/O board is connected.

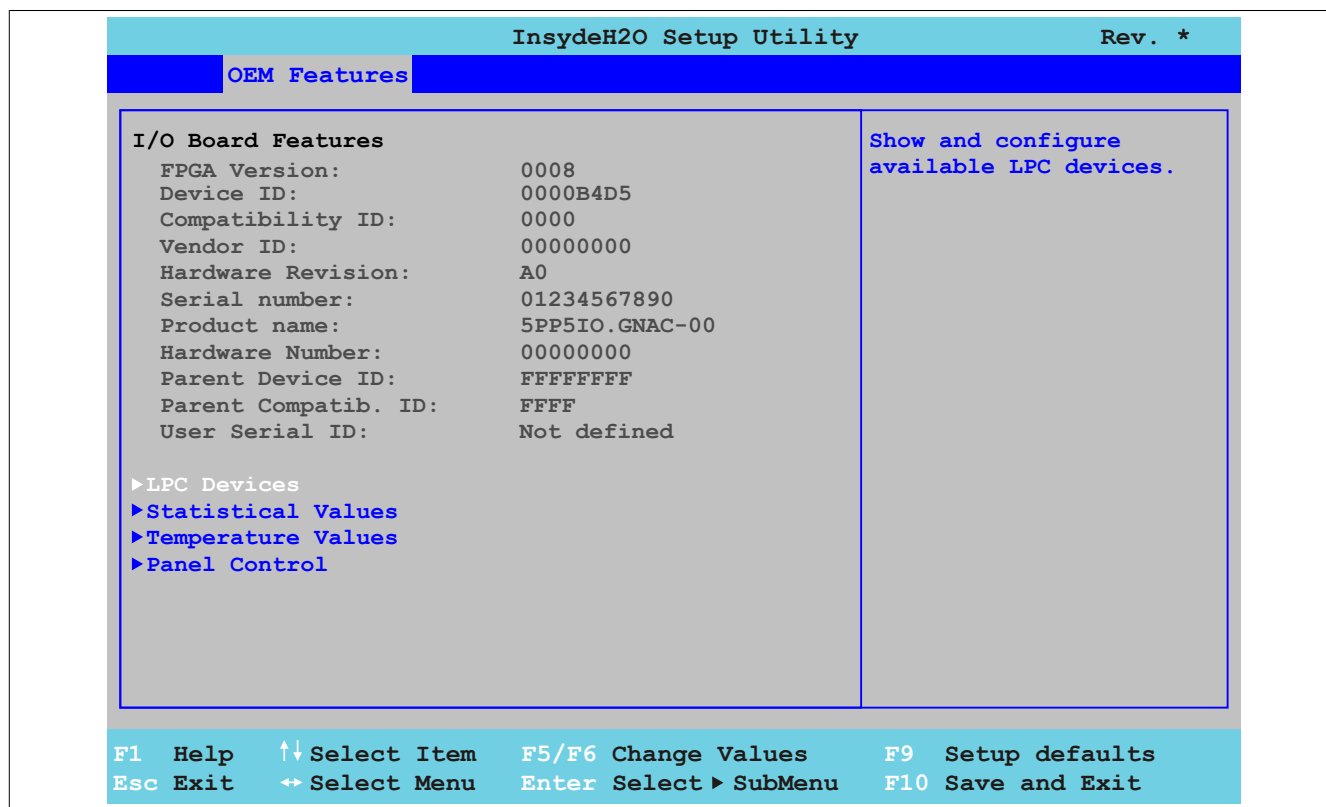


Image 36: US15W OEM Features - I/O Board Features

BIOS setting	Meaning	Setting options	Effect
FPGA Version	Shows the FPGA version of the I/O board.	None	-
Device ID	Displays the device ID of the I/O board.	None	-
Compatibility ID	Displays the version of the device within the same B&R device code. This ID is needed for Automation Runtime.	None	-
Vendor ID	Displays the Vendor ID.	None	-
Hardware revision	Displays the hardware revision of the I/O board.	None	-
Serial number	Displays the B&R serial number.	None	-
Product name	Displays the B&R model number.	None	-
Hardware Number	Displays the hardware number of the I/O board.	None	-
Parent Device ID	Displays the manufacturer number.	None	-
Parent Compatib. ID	Displays the manufacturer ID.	None	-
User serial ID	Displays the user serial ID. This 8 digit hex value can be freely assigned by the user (e.g. to give the device a unique ID) and can only be changed with using the "B&R Control Center" via the ADI driver.	None	-
LPC Devices	Configuration of the LPC Devices.	Enter	Opens the submenu See "LPC Devices" on page 81
Statistical Values	Displays the statistical values.	Enter	Opens the submenu See "Statistical Values" on page 82
Temperature values	Displays the current temperature values.	Enter	Opens the submenu See "Temperature values" on page 83
Panel control	For special setup of connected panels (display units).	Enter	Opens the submenu See "Panel control" on page 84

Table 83: US15W OEM Features - IO Module Features setting options

LPC Devices

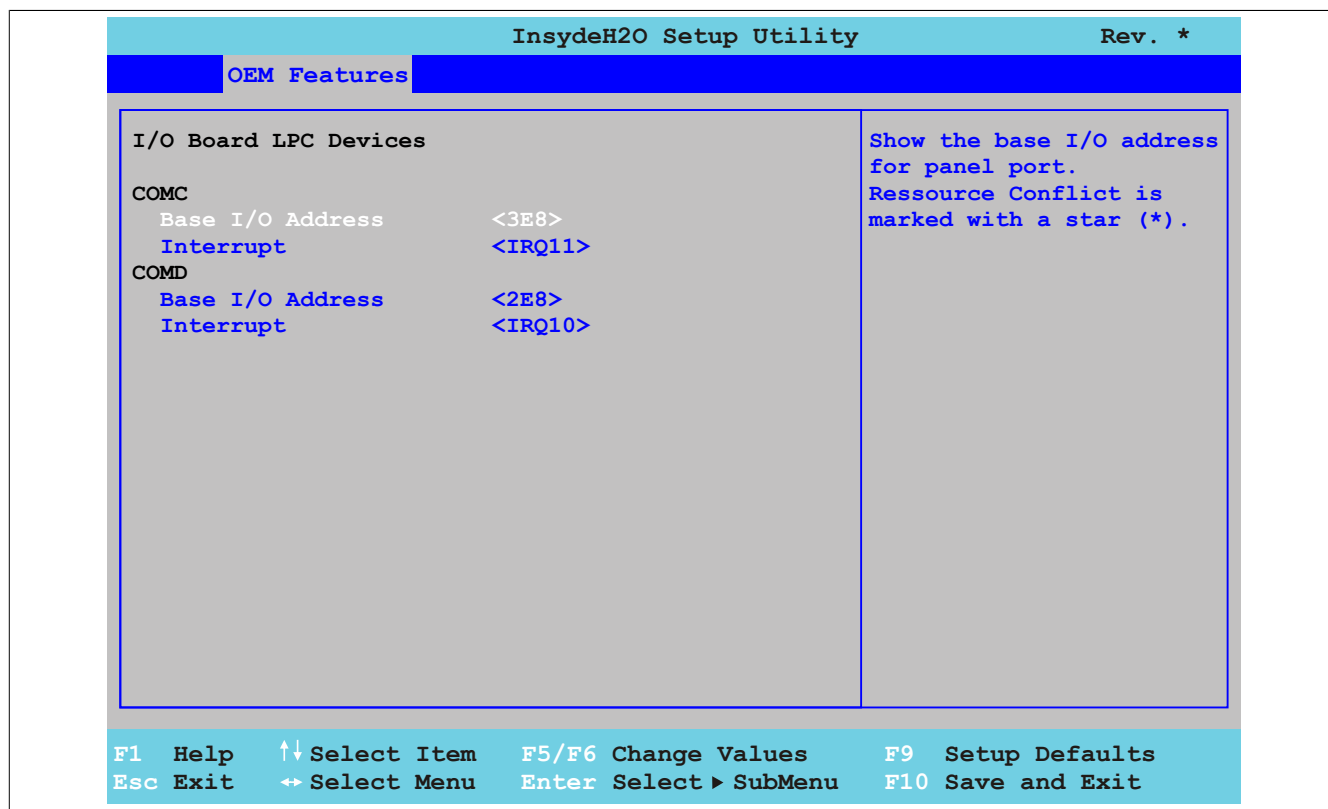


Image 37: US15W OEM Features - I/O Board Features - LPC Devices

BIOS setting	Meaning	Setting options	Effect
COMC	Setting for the panel interface on the I/O board.	None	-
Base I/O Address	Selection of the base I/O address for the COM port.	Disabled, 238, 2E8, 2F8, 328, 338, 3E8, 3F8	Disables or assigns the selected base I/O address.
Interrupt	Selection of the interrupt for the COM port.	IRQ3, IRQ4, IRQ5, IRQ6, IRQ10, IRQ11, IRQ12	Selected interrupt is assigned.
COMD	Setting for the serial interface (COM) on the I/O board.	None	-
Base I/O Address	Selection of the base I/O address for the COM port.	Disabled, 238, 2E8, 2F8, 328, 338, 3E8, 3F8	Disables or assigns the selected base I/O address.
Interrupt	Selection of the interrupt for the COM port.	IRQ3, IRQ4, IRQ5, IRQ6, IRQ10, IRQ11, IRQ12	Selected interrupt is assigned.

Table 84: US15W OEM Features - I/O Board Features - LPC Devices setting options

Information:

A resource conflict can occur regarding the Base I/O address or Interrupt settings, which will cause a warning. In order to make the settings anyways, the setting must first be made on the Base I/O address or Interrupt being that is used.

Statistical Values

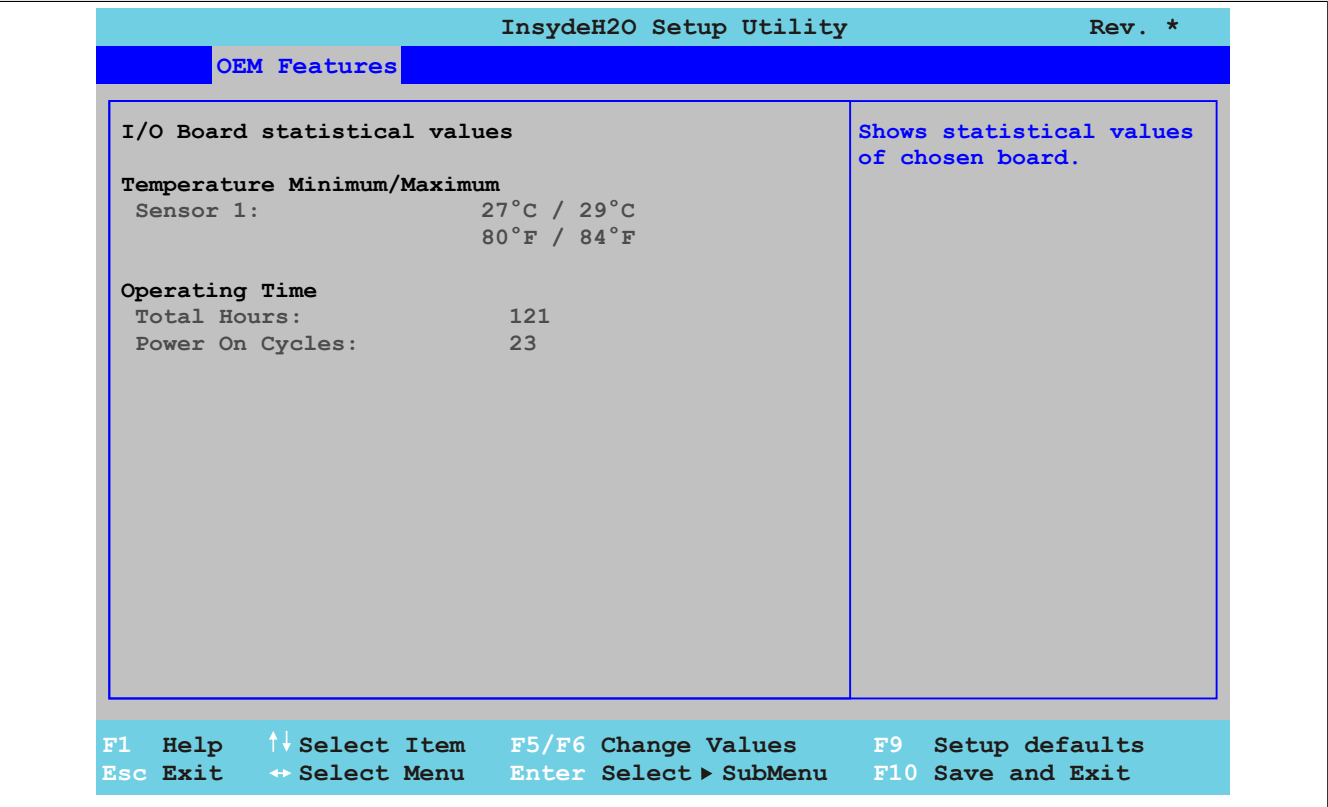


Image 38: US15W OEM Features - I/O Board Features - Statistical Values

BIOS setting	Meaning	Setting options	Effect
Sensor 1	Displays the minimum and maximum sensor temperature 1 in °C and °F.		
Total Hours	Displays the runtime in whole hours.	None	-
Power on cycles	Displays the Power On Cycles - each restart increases the counter by one.	None	-

Table 85: US15W OEM Features - IO Module Features - Statistical Values setting options

Temperature values

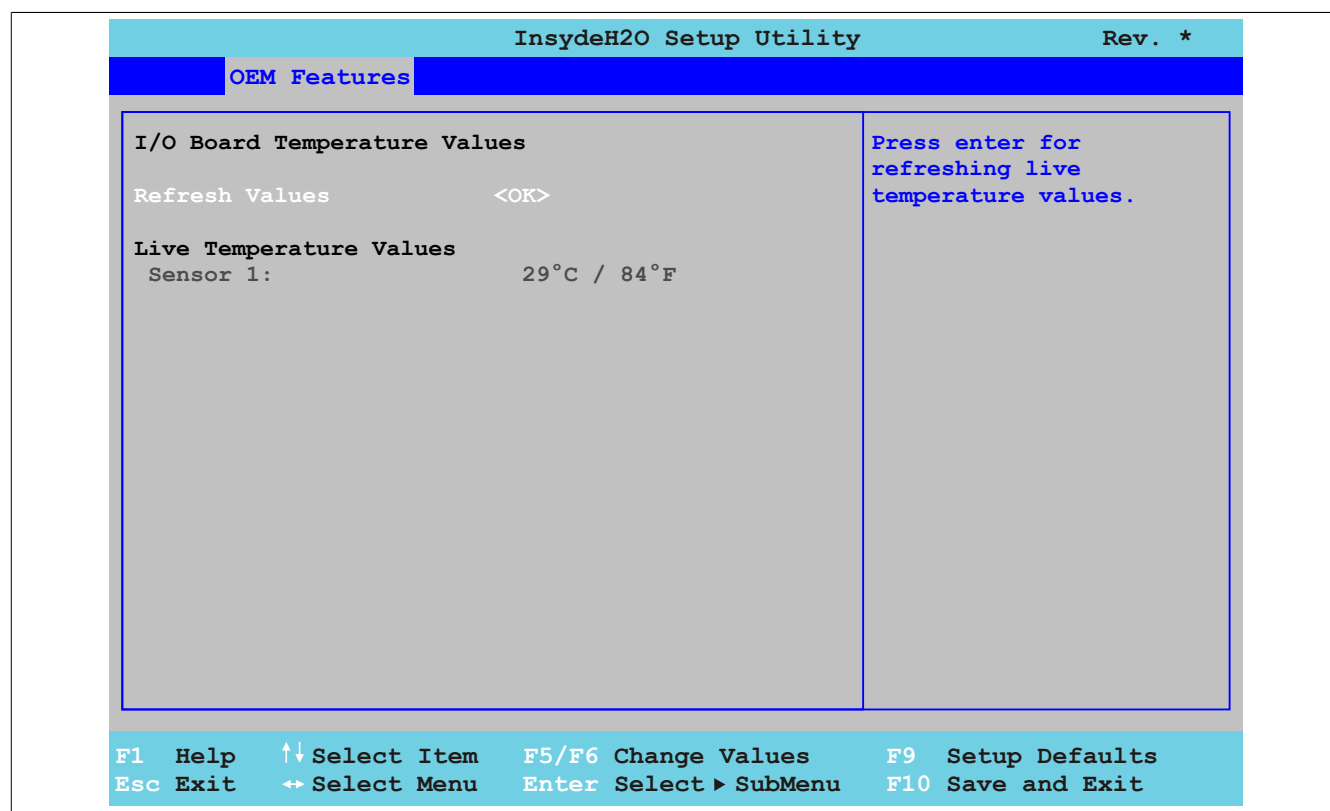


Image 39: US15W OEM Features - I/O Board Features - Temperature Values

BIOS setting	Meaning	Setting options	Effect
Refresh values	Option for refreshing the temperature values.	OK	Refreshes the temperature values shown below.
Sensor 1	Displays the current temperature of Sensor 1 (interfaces) in °C and °F.	None	-

Table 86: US15W OEM Features - I/O Board Features - Temperature Values setting options

Panel control

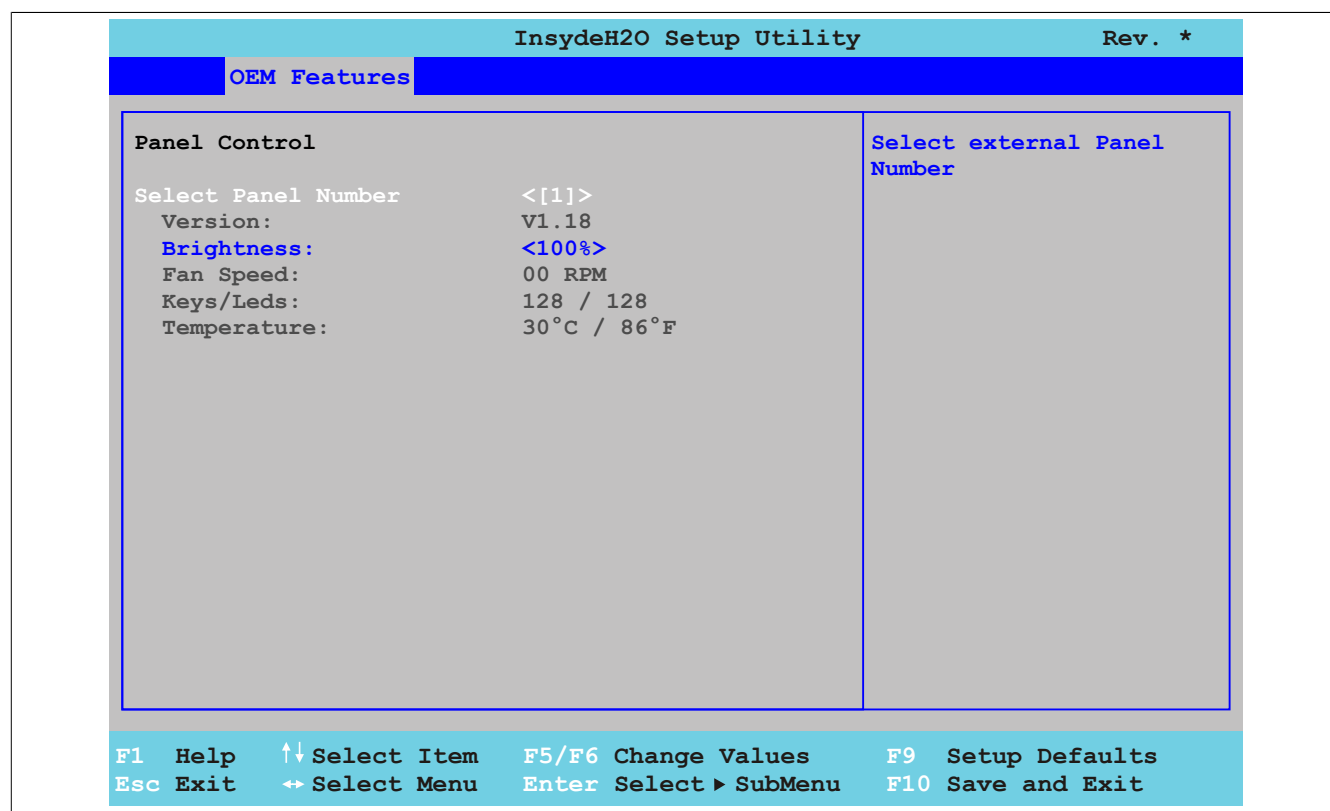


Image 40: US15W OEM Features - I/O Board Features - Panel Control

BIOS setting	Meaning	Setting options	Effect
Select panel number	Selection of the panel number for which the values should be read out and/or changed.	0...15	Selection of panel 0 ... 15.
Version	Displays the firmware version of the SDLR controller.	None	-
Brightness	For setting the brightness of the selected panel.	0%, 10%, 20%, 30%, 40%, 50%, 60%, 70%, 80%, 90%, 100%	For setting the brightness (in %) of the selected panel. Changes take effect after saving and restarting the system (e.g. by pressing <F10>).
Fan Speed	Displays the fan speed of the selected panel.	None	-
Keys/LEDs	Displays the available keys and LEDs on the selected panel.	None	-
Temperature	Displays the selected panel's temperature (in °C and °F).	None	-

Table 87: US15W OEM Features - I/O Board Features - Panel Control setting options

1.4.4 IF Board Features

Information:

The values and menus shown may vary depending on which interface board is connected.

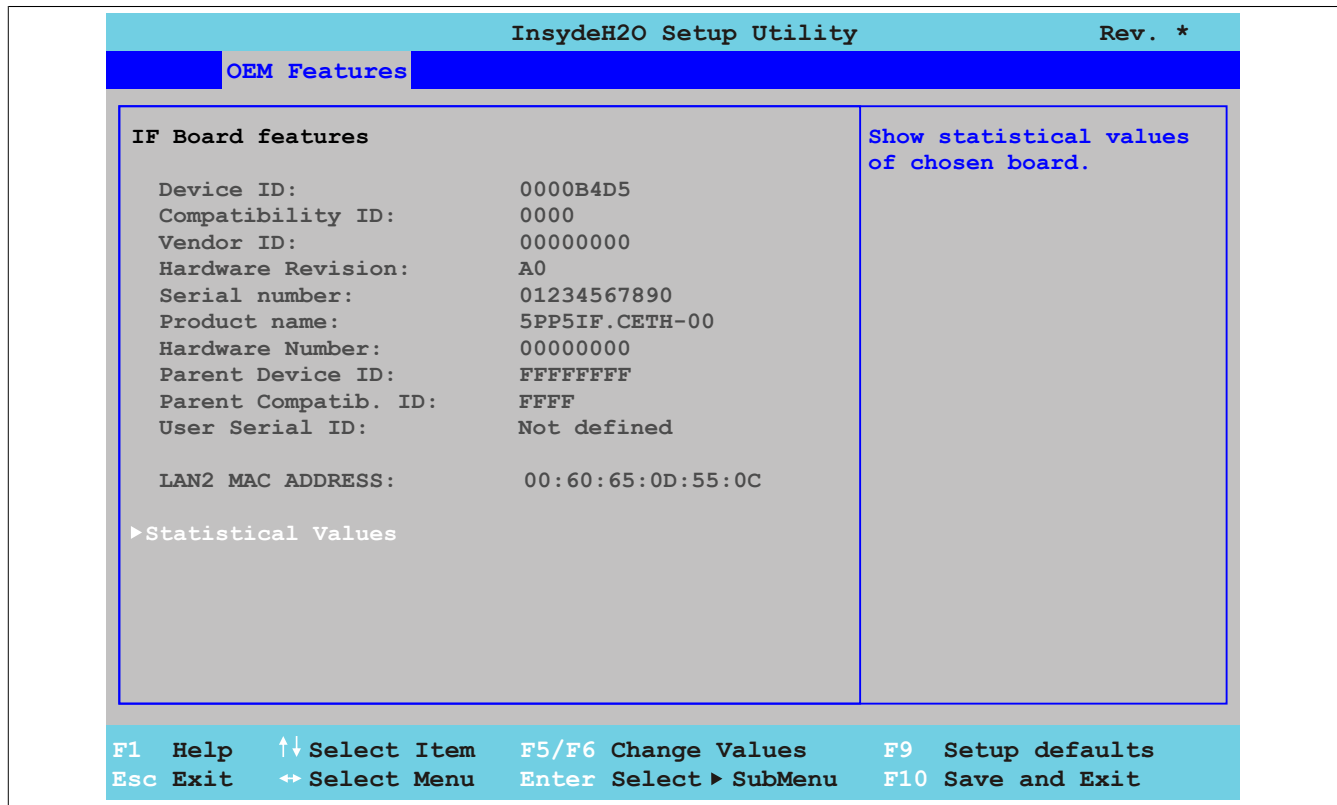


Image 41: US15W OEM Features - IF Board Features

BIOS setting	Meaning	Setting options	Effect
Device ID	Displays the device ID of the IF board.	None	-
Compatibility ID	Displays the version of the device within the same B&R device code. This ID is needed for Automation Runtime.	None	-
Vendor ID	Displays the Vendor ID.	None	-
Hardware revision	Displays the IF board hardware revision.	None	-
Serial number	Displays the B&R serial number.	None	-
Product name	Displays the B&R model number.	None	-
Hardware Number	Displays the IF board hardware number.	None	-
Parent Device ID	Displays the manufacturer number.	None	-
Parent Compatib. ID	Displays the manufacturer ID.	None	-
User serial ID	Displays the user serial ID. This 8 digit hex value can be freely assigned by the user (e.g. to give the device a unique ID) and can only be changed with using the "B&R Control Center" via the ADI driver.	None	-
LAN2 MAC ADDRESS ¹⁾	Displays the MAC addresses assigned for the ETH interface.	None	-
Statistical Values	Displays the statistical values.	Enter	Opens the submenu See "Statistical Values" on page 86

Table 88: US15W OEM Features - IF Module Features setting options

¹⁾ The LAN2 MAC ADDRESS is only displayed with the interface board 5PP5IF.CETH-00.

Statistical Values

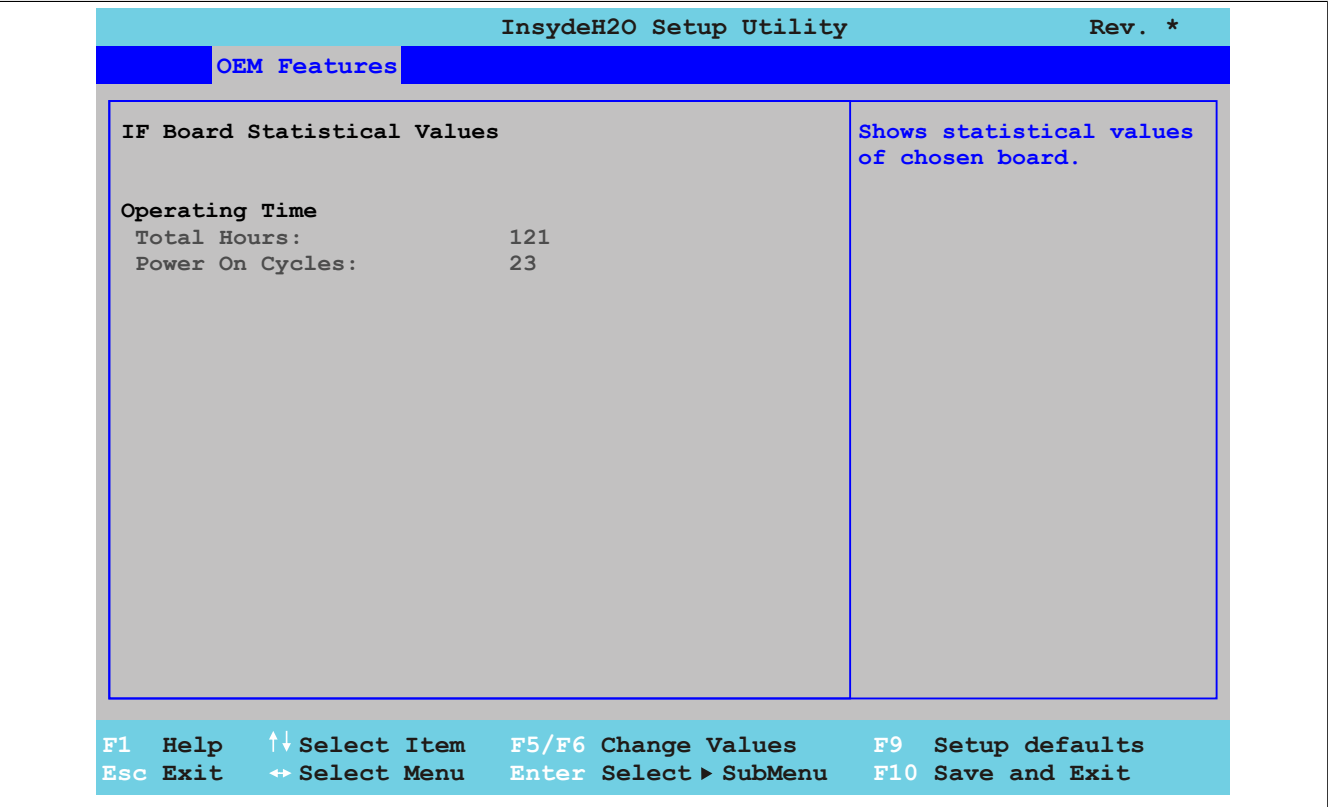


Image 42: US15W OEM Features - IF Board Features - Statistical Values

BIOS setting	Meaning	Setting options	Effect
Total Hours	Displays the runtime in whole hours.	None	-
Power on cycles	Displays the Power On Cycles - each restart in-creases the counter by one.	None	-

Table 89: US15W OEM Features - IF Module Features - Statistical Values setting options

1.4.5 Memory Module Features

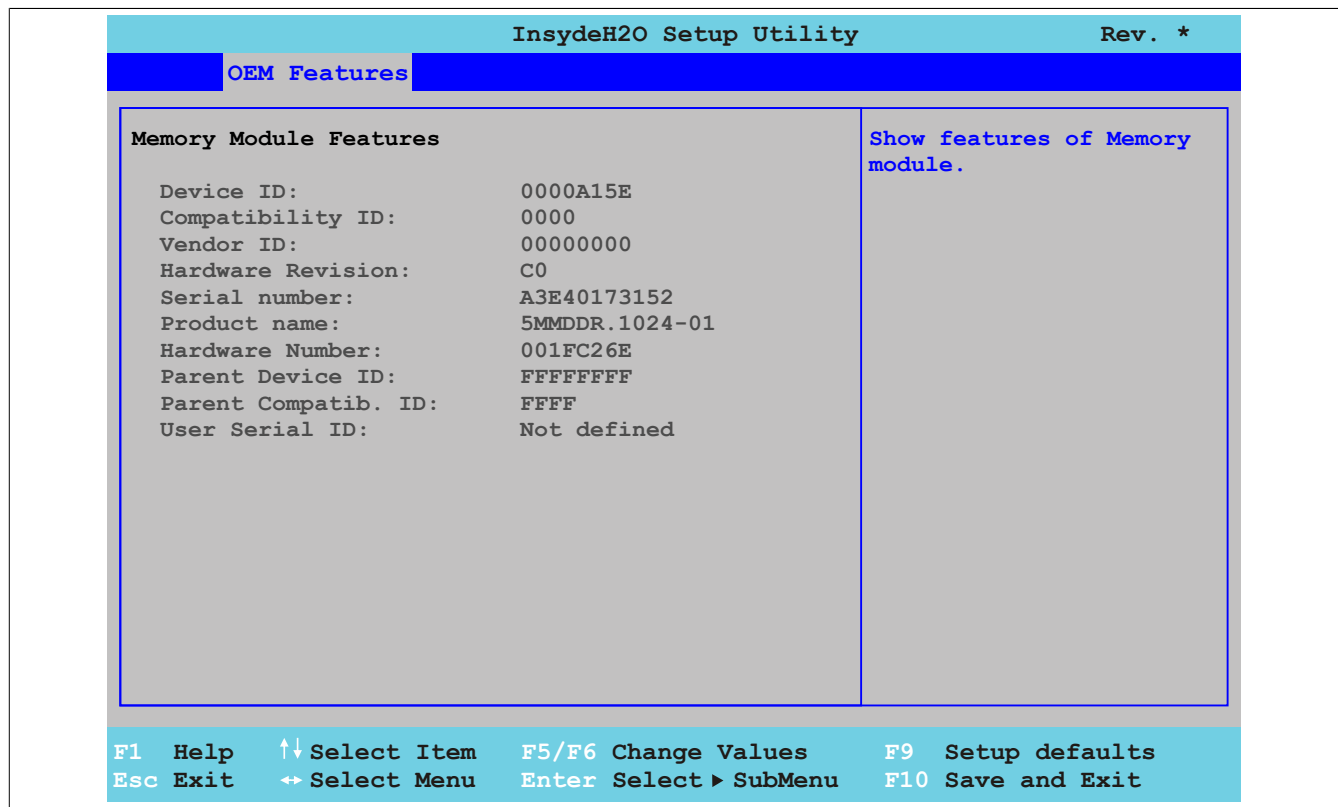


Image 43: US15W OEM Features - Memory Module Features

BIOS setting	Meaning	Setting options	Effect
Device ID	Displays the device ID of the RAM.	None	-
Compatibility ID	Displays the version of the device within the same B&R device code. This ID is needed for Automation Runtime.	None	-
Vendor ID	Displays the Vendor ID.	None	-
Hardware revision	Displays the main memory hardware revision.	None	-
Serial number	Displays the B&R serial number.	None	-
Product name	Displays the B&R model number.	None	-
Hardware Number	Displays the main memory hardware number.	None	-
Parent Device ID	Displays the manufacturer number.	None	-
Parent Compatib. ID	Displays the manufacturer ID.	None	-
User serial ID	Displays the user serial ID. This 8 digit hex value can be freely assigned by the user (e.g. to give the device a unique ID) and can only be changed with using the "B&R Control Center" via the ADI driver.	None	-

Table 90: US15W OEM Features - RAM Features setting options

1.5 Advanced

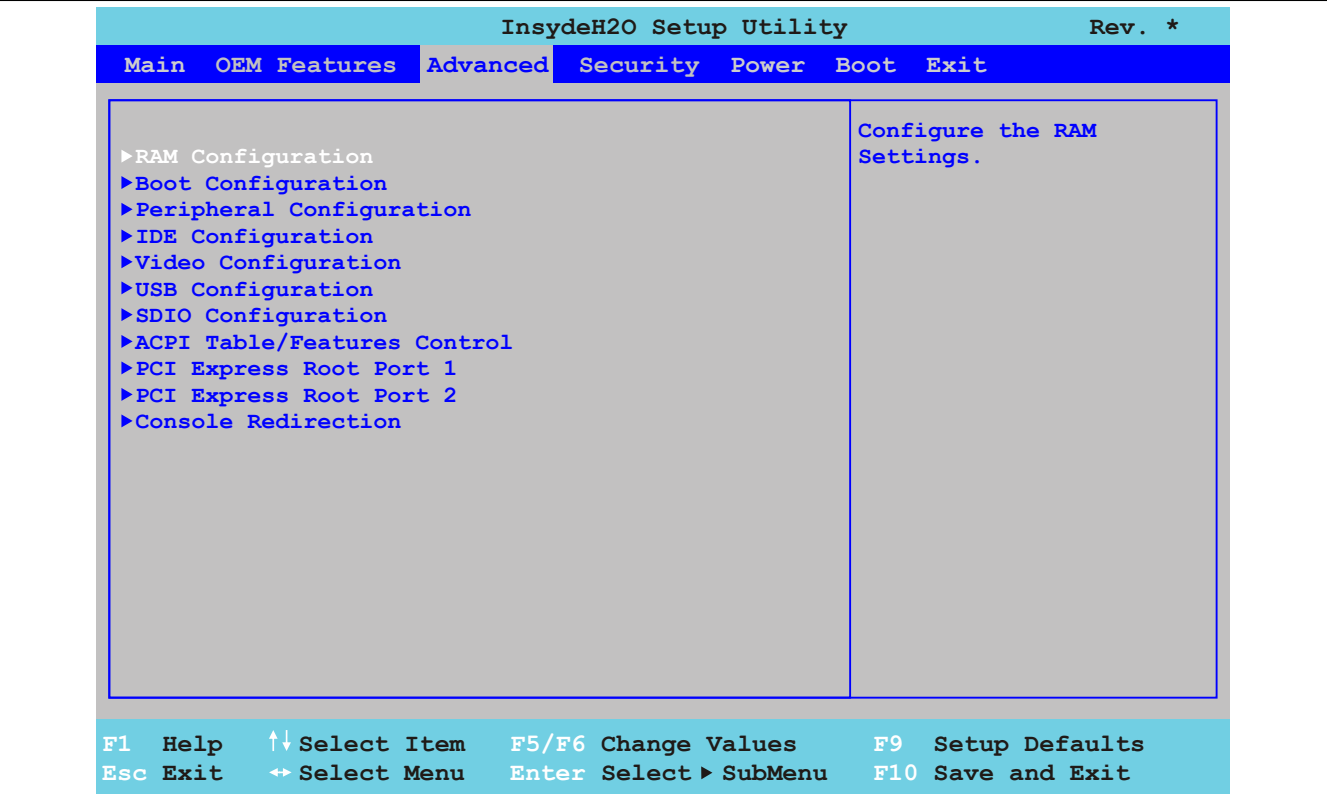


Image 44: US15W Advanced - Menu

BIOS setting	Meaning	Setting options	Effect
RAM Configuration	Configures the RAM settings.	Enter	Opens the submenu See " RAM configuration" on page 89
Boot Configuration	Configures the boot settings.	Enter	Opens the submenu See " Boot Configuration" on page 90
Peripheral Configuration ¹⁾	Configures the peripheral settings.	Enter	Opens the submenu See " Peripheral Configuration" on page 91
IDE Configuration	Configures the IDE functions.	Enter	Opens the submenu See " IDE Configuration" on page 92
Video Configuration	Configures the graphics settings.	Enter	Opens the submenu See " Video Configuration" on page 95
USB configuration	Configures the USB settings.	Enter	Opens the submenu See " USB Configuration" on page 96
SDIO Configuration ¹⁾	Configures the SDIO settings.	Enter	Opens the submenu See " SDIO Configuration" on page 97
ACPI Table/Features Control Configuration	Configures the ACPI Table/Features.	Enter	Opens the submenu See " ACPI Table/Features Control" on page 98
PCI Express Root Port 1	Configures the PCI Express settings on Port 1. Warning! Making settings carelessly can cause instability or device problems. Therefore, it is strongly recommended that these settings only be changed by experienced users.	Enter	Opens the submenu See " PCI Express Root Port 1" on page 98

Table 91: US15W Advanced - Menu setting options

BIOS setting	Meaning	Setting options	Effect
PCI Express Root Port 2	Configures the PCI Express settings on Port 2. Warning! Making settings carelessly can cause instability or device problems. Therefore, it is strongly recommended that these settings only be changed by experienced users.	Enter	Opens the submenu See "PCI Express Root Port 2" on page 101
Console Redirection ³⁾	Remote Console configuration.	Enter	Opens the submenu See "Console Redirection" on page 102

Table 91: US15W Advanced - Menu setting options

- 1) This menu option is only present if there is an Audio connection.
 2) SDIO - Secure Digital Input Output
 3) These settings are only visible to Automation PC 511 system units without I/O board. The node/node switches must be set to "00" (default).

1.5.1 RAM configuration

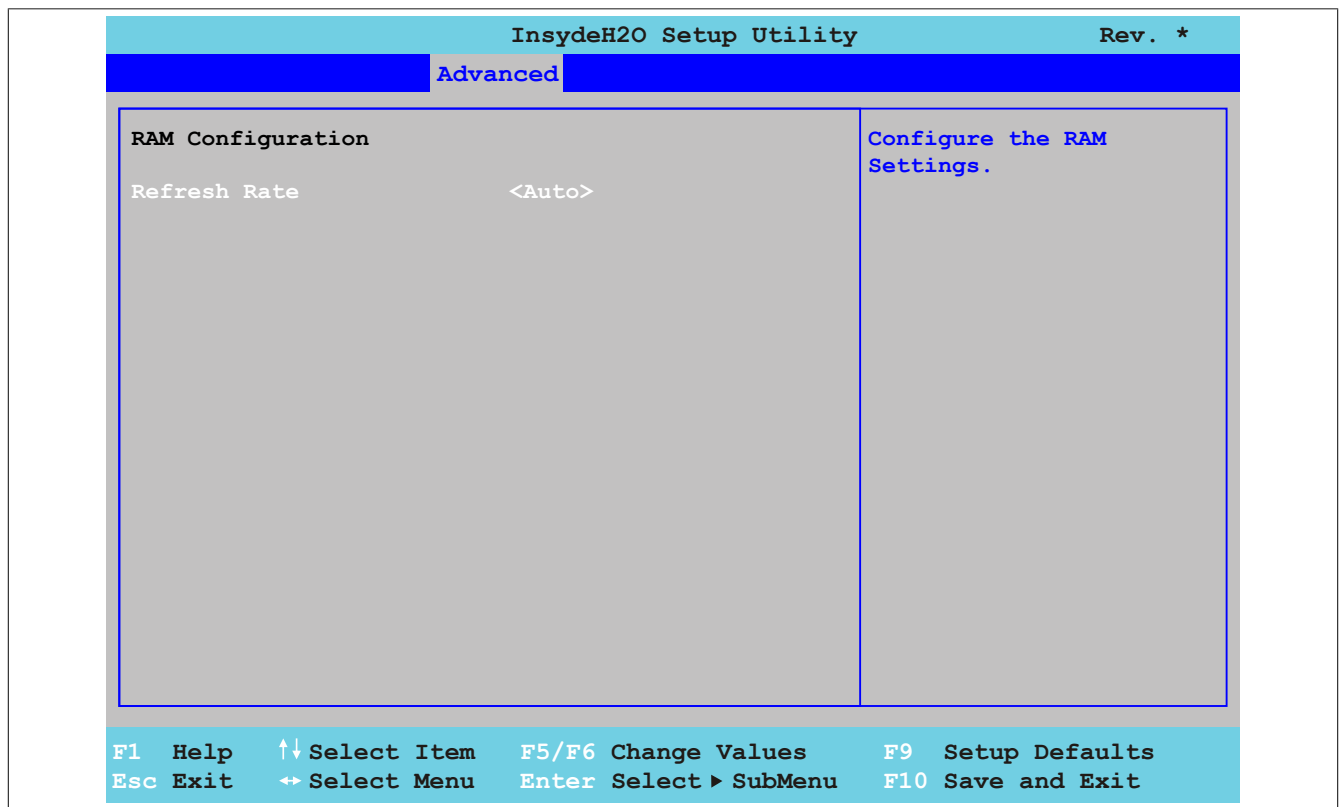


Image 45: US15W Advanced - RAM Configuration

BIOS setting	Meaning	Setting options	Effect
Refresh rate	Option for setting the DRAM refresh rate.	Auto	DRAM Refresh Rate is read from the SPD data of the DRAM module.
		7.8 μ s	Manual setting for the DRAM refresh rate.
		3.9 μ s	Manual setting for the DRAM refresh rate.

Table 92: US15W Advanced - RAM Configuration setting options

1.5.2 Boot Configuration

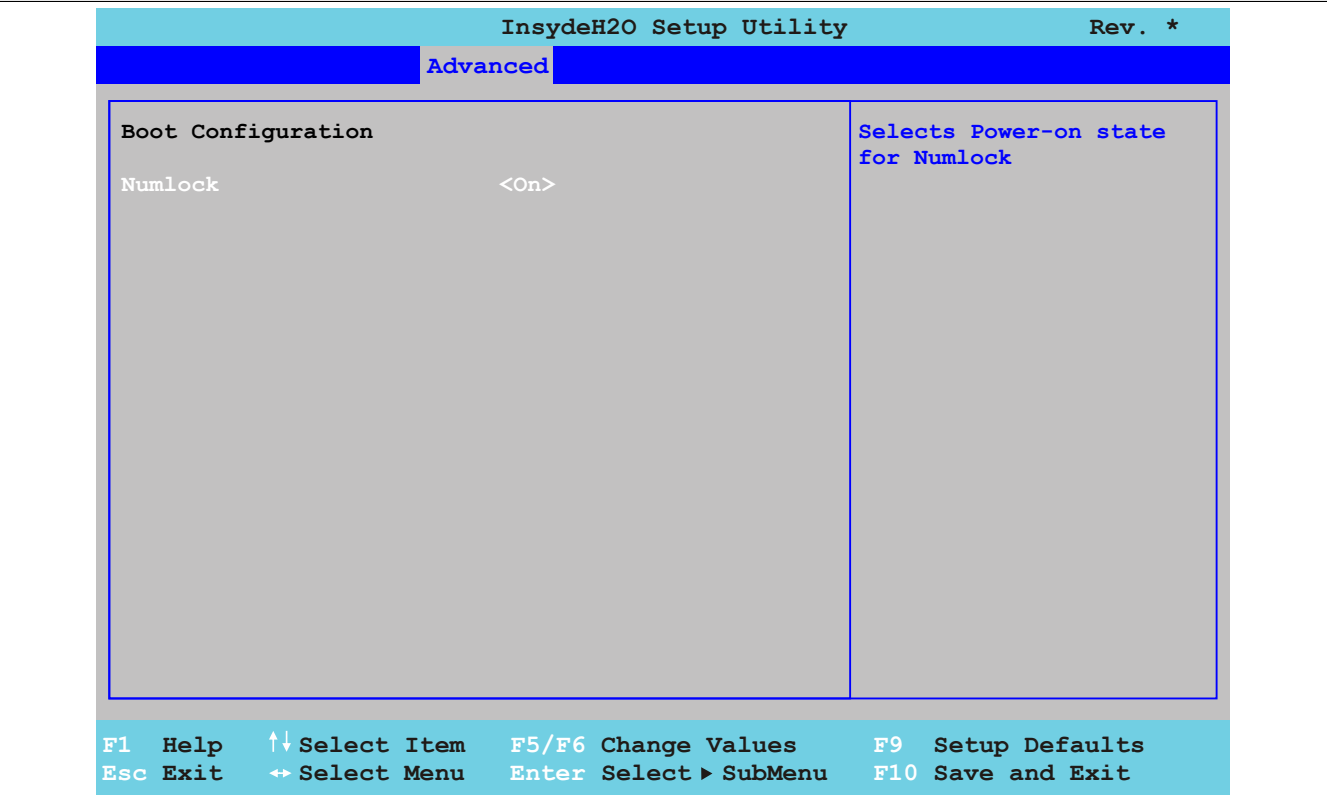


Image 46: US15W Advanced - Boot Configuration

BIOS setting	Meaning	Setting options	Effect
NumLock	With this field you can define the state of the Num-Lock key when booting.	On	Numeric keypad is enabled.
		Off	Only the cursor functions of the numerical keypad are activated.

Table 93: US15W Advanced - Boot Configuration setting options

1.5.3 Peripheral Configuration

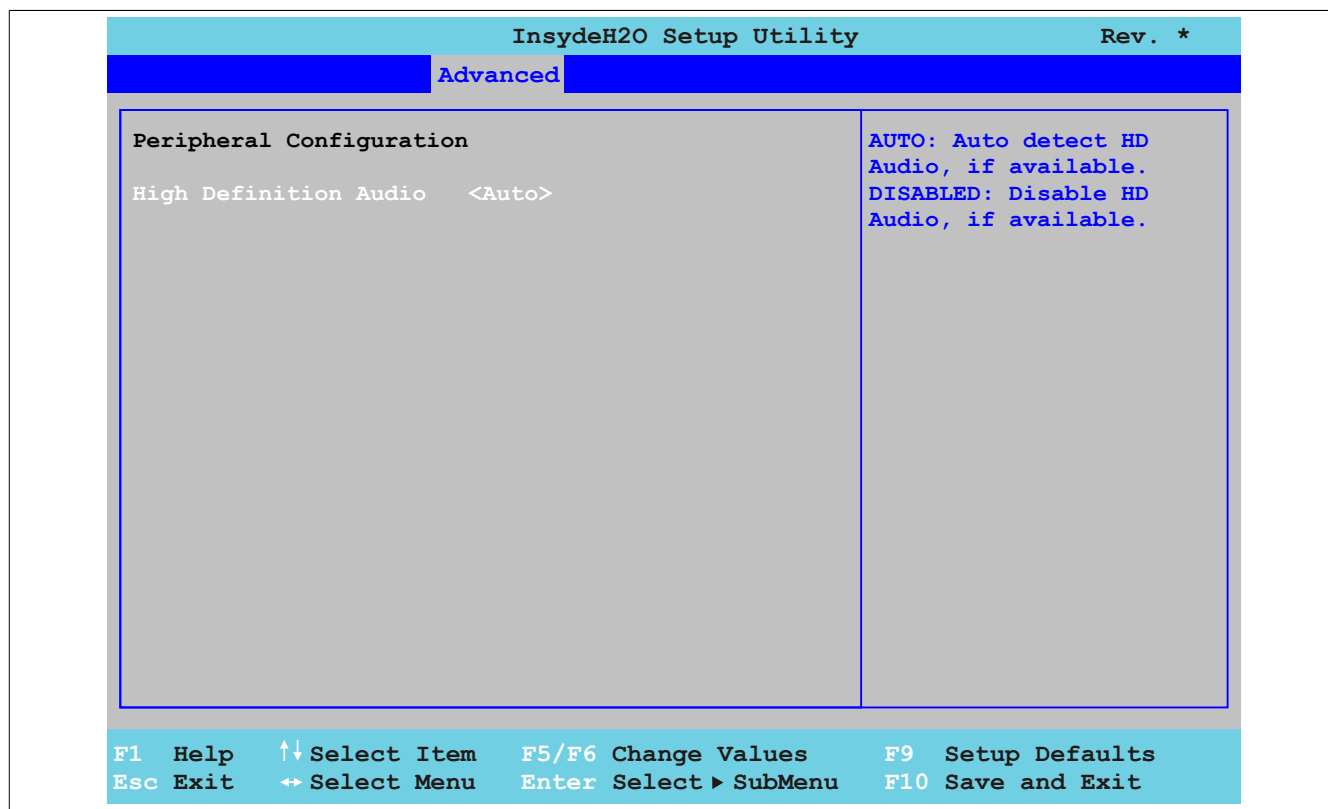


Image 47: US15W Advanced - Peripheral Configuration

BIOS setting	Meaning	Setting options	Effect
High Definition Audio	The audio mode support can be turned on or off here.	Disabled	Disables the audio controller.
		Auto	Enables High Definition Audio (HDA) Sound. The HDA controller automatically detects installed audio devices.

Table 94: US15W Advanced - Peripheral Configuration setting options

Information:

The menu option "Peripheral Configuration" is only shown if there is an Audio connection.

1.5.4 IDE Configuration

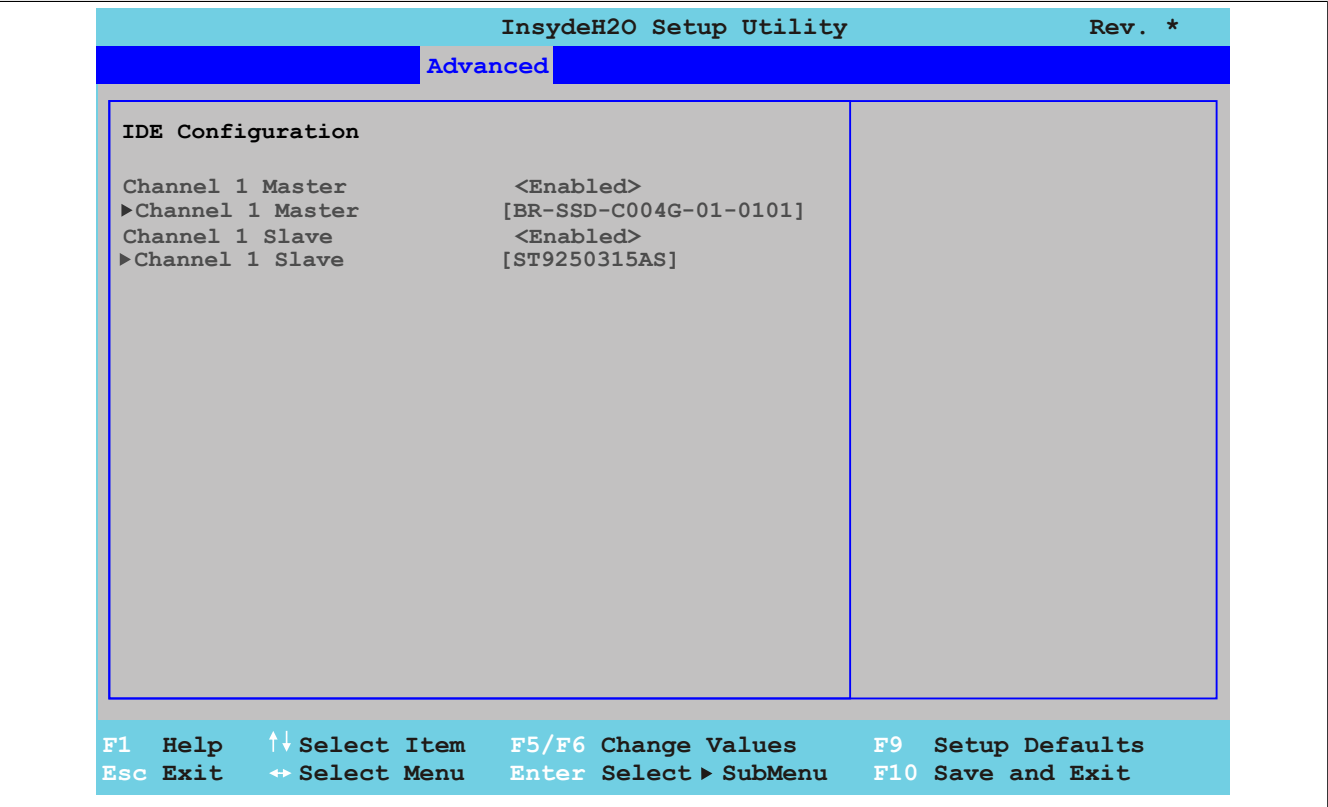


Image 48: US15W Advanced - IDE Configuration

BIOS setting	Meaning	Setting options	Effect
Channel 1 Master	Option to enable/disable the drive connected to the Channel 1 Master.	Disabled	Disables mass memory
		Enabled	Enables mass memory
Channel 1 Master	Displays the drive that is connected to Channel 1 Master.	Enter	Opens the submenu See " Channel 1 Master" on page 93
Channel 1 Slave	Option to enable/disable the drive connected to the Channel 1 Slave.	Disabled	Disables mass memory
		Enabled	Enables mass memory
Channel 1 Slave	Displays the drive that is connected to Channel 1 Slave.	Enter	Opens the submenu See " Channel 1 slave" on page 94

Table 95: US15W Advanced - IDE Configuration setting options

Channel 1 Master

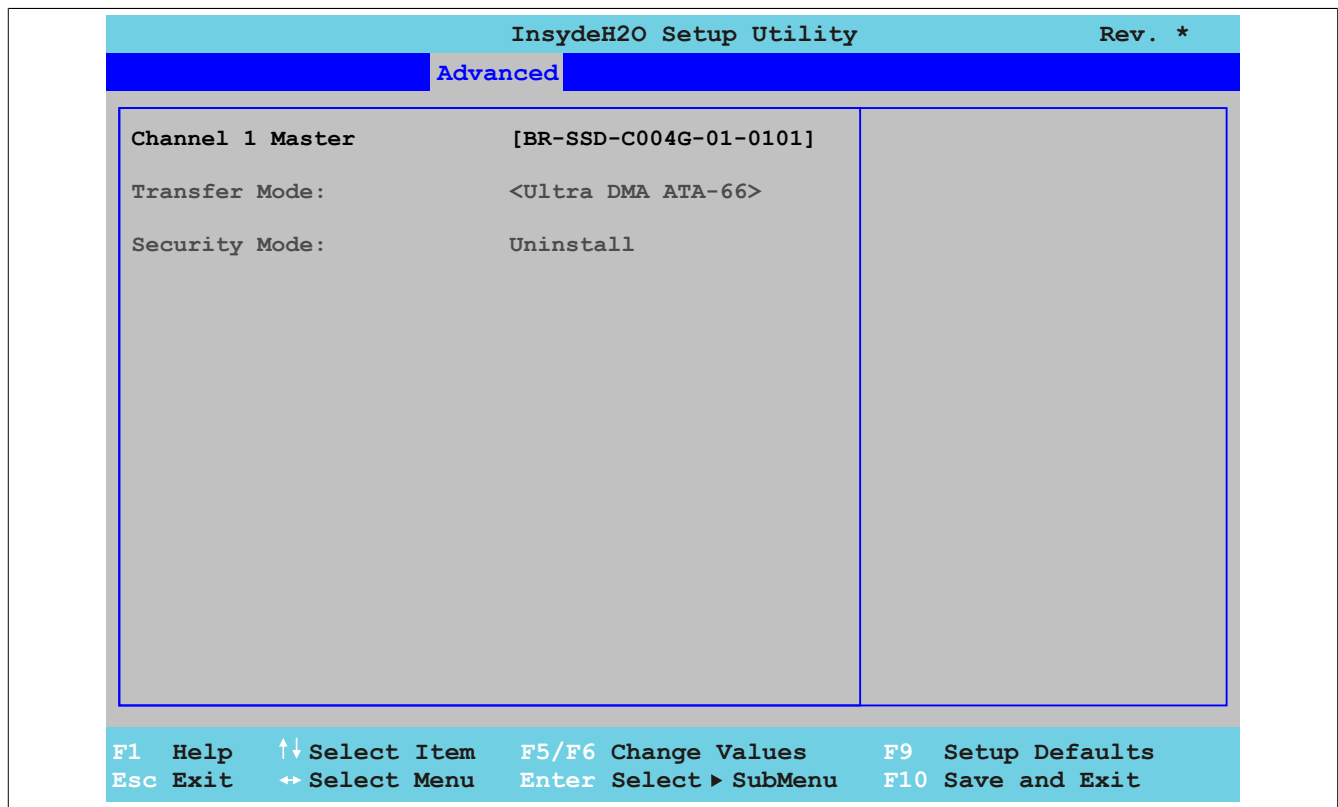


Image 49: US15W Advanced - IDE Configuration - Channel 1 Master

BIOS setting	Meaning	Setting options	Effect
Transfer mode	Displays the communication path between the Channel 1 Master drive and the system memory.	None	-
Security Mode		None	-

Table 96: US15W Advanced - IDE Configuration - Channel 1 Master setting options

Channel 1 slave

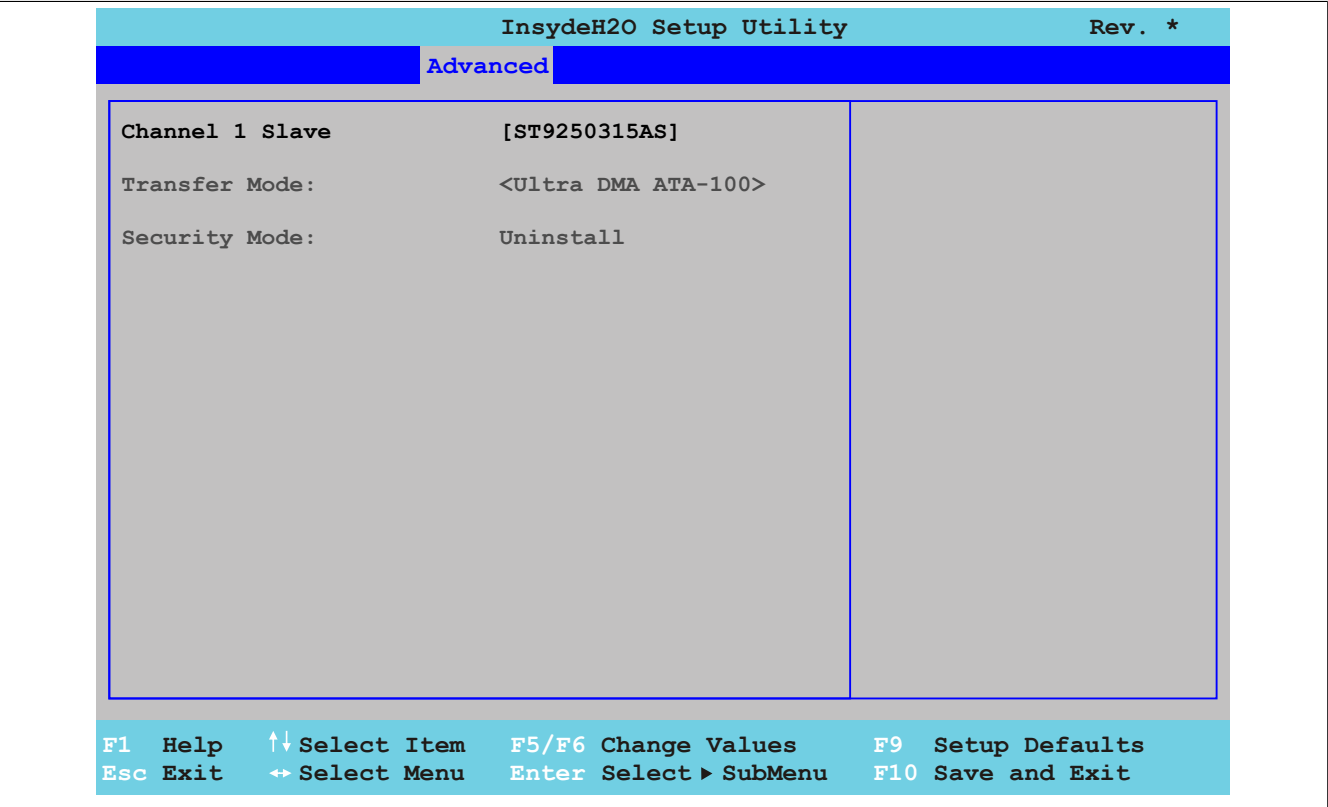


Image 50: US15W Advanced - IDE Configuration - Channel 1 Slave

BIOS setting	Meaning	Setting options	Effect
Transfer mode	Displays the communication path between the Channel 1 Slave drive and the system memory.	None	-
Security Mode		None	-

Table 97: US15W Advanced - IDE Configuration - Channel 1 Slave setting options

1.5.5 Video Configuration

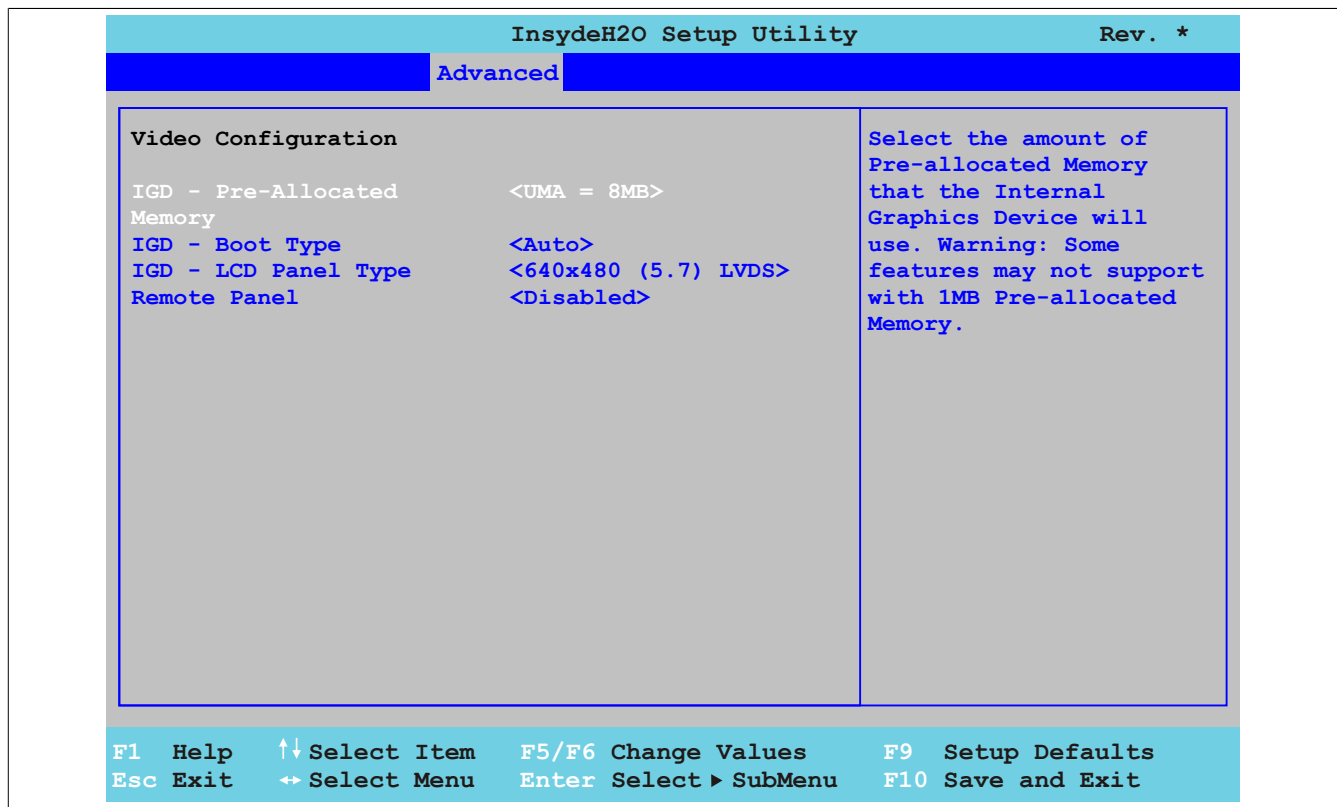


Image 51: US15W Advanced - Video Configuration

BIOS setting	Meaning	Setting options	Effect
IGD - Pre-allocated memory	Option for setting the memory size that can be used for the internal graphics controller. Information: Some functions are not supported with the setting "UMA = 1MB".	UMA = 1MB	1 MByte main memory provided.
		UMA = 4MB	4 MByte main memory provided.
		UMA = 8MB	8 MByte main memory provided.
IGD - Boot Type	Option to define the enabled panel during the POST.	Auto	One of the panels listed under "IGD - LCD Panel Type" will be automatically selected.
		LFP(LVDS)	The POST is shown on the display of the Power Panel 500 (LFP = Local Flat Panel).
		EFP(SDL or DVI)	The POST is shown on an external panel (EFP = External Flat Panel).
IGD - LCD Panel Type ¹⁾	Option for setting the display resolution. Information: If the display setting is present in the EPROM data, then this setting has no effect on the display resolution because the EPROM data is loaded each time the system is restarted and the BIOS setting is overwritten.	640x480 (5.7) LVDS	Resolution at 640 x 480 pixels (for 5.7" display)
		800x480 (7.0) LVDS	Resolution at 800 x 480 pixels (for 7" display)
		800x600 (8.4) LVDS	Resolution at 800 x 600 pixels (for 8.4" display)
		640x480 (10.4) LVDS	Resolution at 640 x 480 pixels (for 10.4" display)
		800x600 (12.0) LVDS	Resolution at 800 x 600 pixels (for 12.0" display)
Remote Panel ²⁾	Option to control the device remotely (with no display connected) from another PC via the Ethernet interface. This makes it possible to make BIOS settings.	Enabled	Enables this function.
		Disabled	Disables this function.

Table 98: US15W Advanced - Video Configuration setting options

- 1) This setting is only available for PP500 system units.
- 2) This setting is hidden unless an I/O board is installed. This option does not appear if a display is connected or integrated. On APC511 system units it is also shown even if no I/O board is installed.

1.5.6 USB Configuration

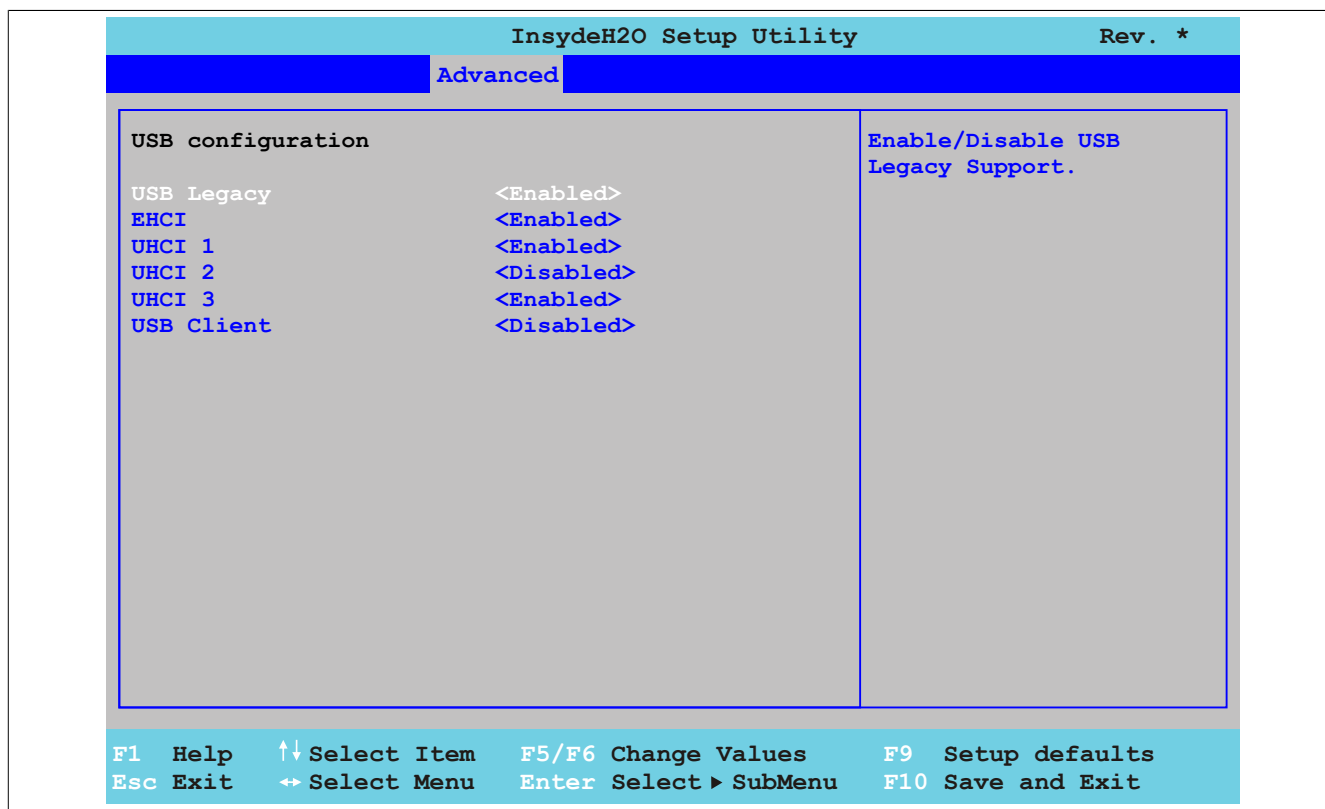


Image 52: US15W Advanced - USB Configuration

BIOS setting	Meaning	Setting options	Effect
USB Legacy	Legacy USB support can be enabled/disabled here. USB ports do not function during startup. USB is supported again after the operating system has started. A USB keyboard is still recognized during the POST.	Enabled	Enables this function.
		Disabled	Disables this function.
EHCI	The support for the operating system can be set up without the fully automatic EHCI function.	Enabled	Enables USB support. USB 2.0 support is enabled as soon as a USB 2.0 device is connected to the interface.
		Disabled	Disables USB 2.0 support.
UHCI 1	Configuration of the USB UHCI controller 1 for USB port 2 and 3.	Enabled	Enables USB support.
		Disabled	Deactivates the USB support.
Warning! If this setting is <i>Disabled</i>, then the settings <i>UHCI 2</i> and <i>UHCI 3</i> will be set to <i>Disabled</i> and all USB ports will be disabled. As a result, it will no longer be possible to enter BIOS. However, if UHCI 1 has been disabled, then you can use the Backup BIOS to once again enter BIOS. For more information, see " OEM Features" on page 70			
UHCI 2 ¹⁾	Configuration of the USB UHCI controller 2 for USB ports on the I/O board.	Enabled	Enables USB support.
		Disabled	Deactivates the USB support.
UHCI 3 ¹⁾	Configuration of the USB UHCI controller 3 for USB port 3.	Enabled	Enables USB support.
		Disabled	Deactivates the USB support.
USB client	Setting for USB Client support.	Enabled	Enables USB Client support.
		Disabled	Disables USB Client support.

Table 99: US15W Advanced - USB Configuration setting options

1) These settings are only possible if *UHCI 1* is set to *Enabled*.

1.5.7 SDIO Configuration

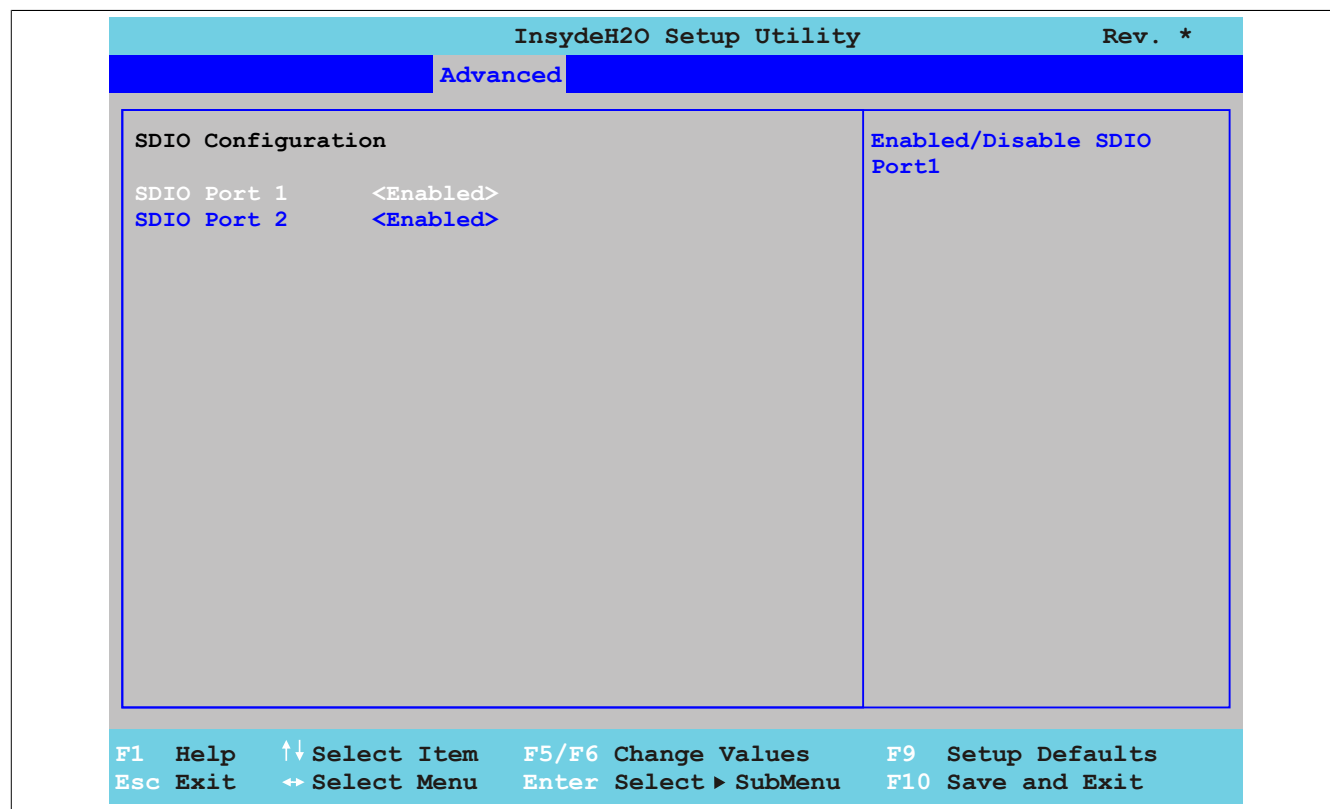


Image 53: US15W Advanced - SDIO Configuration

BIOS setting	Meaning	Setting options	Effect
SDIO Port 1	SDIO Port 1 (Secure Digital Input Output - SD Memory Card Slot) can be enabled/ disabled here.	Enabled	Enables this function.
		Disabled	Disables this function.
SDIO Port 2	SDIO Port 2 (Secure Digital Input Output - SD Memory Card Slot) can be enabled/ disabled here.	Enabled	Enables this function.
		Disabled	Disables this function.

Table 100: US15W Advanced - SDIO Configuration setting options

1.5.8 ACPI Table/Features Control

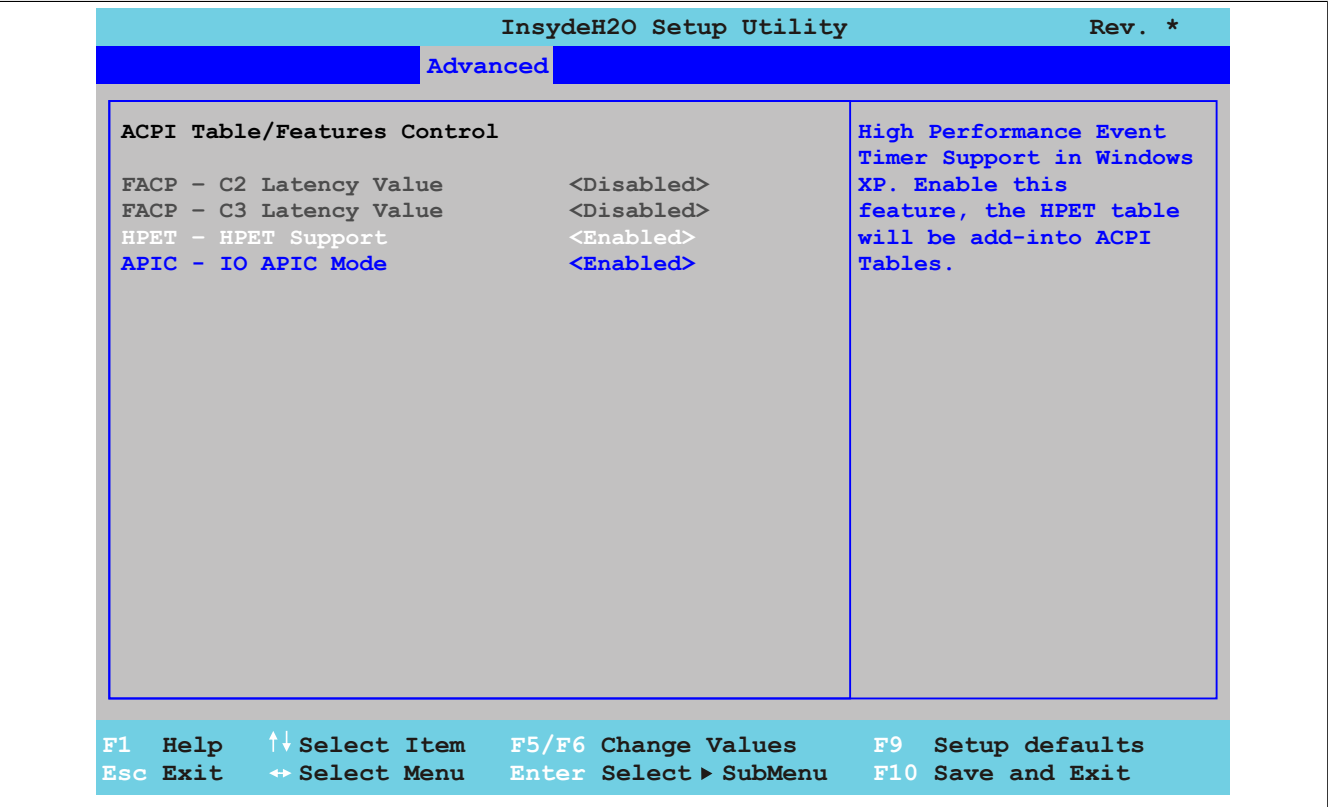


Image 54: US15W Advanced - ACPI Table/Features Control

BIOS setting	Meaning	Setting options	Effect
FACP – C2 Latency Value ¹⁾	Option for setting a latency period in the C2 state.	Enabled	Enables this function. A latency of 1 μs is set (i.e. the C2 state will be entered within 1 μs and exited again within 1 μs).
		Disabled	Disables this function.
FACP – C3 Latency Value ¹⁾	Option for setting a latency period in the C3 state.	Enabled	Enables this function. A latency of 85 μs is set (i.e. the C3 state will be entered within 85 μs and exited again within 85 μs).
		Disabled	Disables this function.
HPET – HPET Support	The HPET is a timer inside the PC. It is able to trigger an interrupt with a high degree of accuracy, which allows other programs to better synchronize a variety of applications.	Enabled	Enables this function. This function is recommended for multimedia applications.
		Disabled	Disables this function.
APIC - I/O APIC mode	This option controls the support of the advanced programmable interrupt controller in the processor.	Enabled	Enables this function.
		Disabled	Disables this function.

Warning!
Windows XP will not be started if this setting is disabled.

Table 101: US15W Advanced - ACPI Table/Features Control setting options

1) These settings are only possible if *C-States* is set to *Enabled* in the menu item *Power - Advanced CPU Control*.

1.5.9 PCI Express Root Port 1

Warning!

Making settings carelessly can cause instability or device problems. Therefore, it is strongly recommended that these settings only be changed by experienced users.

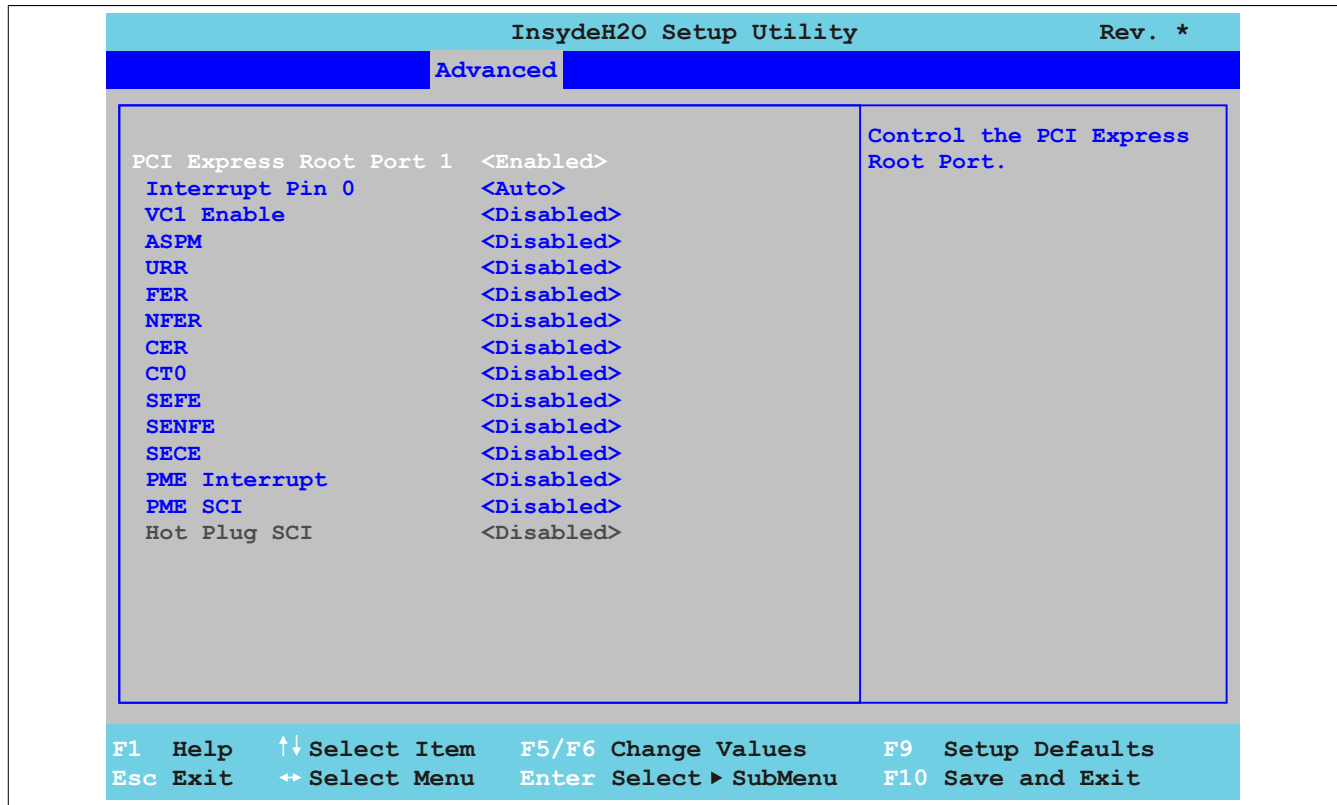


Image 55: US15W Advanced - PCI Express Root Port 1

BIOS setting	Meaning	Setting options	Effect
PCI Express Root Port 1	This option is used to enable/disable PCI Express Root Port 1.	Enabled	PCI Express Root Port 1 enabled.
		Disabled	PCI Express Root Port 1 and 2 disabled.
Interrupt pin 0		Auto	IRQ enabled for Root Port 1.
		Disabled	IRQ disabled for Root Port 1.
VC1 Enable	Virtual Channel 1	Auto	Setting the mapping via the BIOS setting "VC1/TC Mapping".
		Disabled	Disables this function. The TC0 Traffic class is automatically used and mapped to the VC0 Virtual Channel.
VC1/TC Mapping ¹⁾	This option is used to define which traffic will be mapped to which Virtual Channel.	TC0	TBD
		TC1	The TC1 traffic class is mapped manually to the VC1 Virtual Channel.
		TC2	The TC2 traffic class is mapped manually to the VC1 Virtual Channel.
		TC3	The TC3 traffic class is mapped manually to the VC1 Virtual Channel.
		TC4	The TC4 traffic class is mapped manually to the VC1 Virtual Channel.
		TC5	The TC5 traffic class is mapped manually to the VC1 Virtual Channel.
		TC6	The TC6 traffic class is mapped manually to the VC1 Virtual Channel.
		TC7	The TC7 traffic class is mapped manually to the VC1 Virtual Channel.
ASPM	<i>Active State Power Management</i> Option for setting a power saving function (L0s/L1) for PCIe links if they do not require full power.	Enabled	Enables this function.
		Disabled	Disables this function.
Automatic ASPM ²⁾	Option for configuring automatic or manual assignment of the ASPM.	Auto	Automatic assignment by the BIOS and operating system.
		Manual	Setting for assignment under the BIOS setting "ASPM L0s" and "ASPM L1".
ASPM L0s ³⁾	Option for setting the L0 power saving function.	Disabled	Disables this function.
		Root Port Only	Enables the power saving function for the Root port.
		Endpoint Port Only	Enables the power saving function for the Endpoint port.
		Root&Endpoint Ports	Enables the power saving function for the Root and Endpoint ports.
ASPM L1 ³⁾	Option for setting the L1 power saving function. Power consumption is lower than with L0, but the exit latency higher.	Enabled	Enables this function.
		Disabled	Disables this function.
URR	<i>Unsupported Request (UR) Reporting</i>	Enabled	Enables this function.

Table 102: US15W Advanced - PCI Express Root Port 1 setting options

BIOS setting	Meaning	Setting options	Effect
	Option for reporting unsupported requests. Logging of error messages received by the Root Port is controlled exclusively by the Root Control Register.	Disabled	Disables this function.
FER	Fatal Error Reporting Option for reporting fatal errors. All of the functions in a multifunction device will be monitored. The report for the Root Port takes place internally inside the Root Complex.	Enabled	Enables this function.
		Disabled	Disables this function.
NFER	Non-Fatal Error Reporting Option for reporting non-fatal errors. All of the functions in a multifunction device will be monitored. The report for the Root Port takes place internally inside the Root Complex.	Enabled	Enables this function.
		Disabled	Disables this function.
CER	Correctable Error Reporting Option for reporting non-fatal errors. All of the functions in a multifunction device will be monitored. The report for the Root Port takes place internally inside the Root Complex.	Enabled	Enables this function.
		Disabled	Disables this function.
CT0	PCI Express Completion Timer T0 This option is used to enable/disable PCI Express Completion Timer. Information: If the system detected an ROB (Processor Reorder Buffer) Timeout, then this setting should be set to Enabled.	Enabled	Enables this function.
		Disabled	Disables this function.
SEFE	System Error on Fatal Error Option for generating a System Error, if a fatal error is registered by a device on the Root Port or on the Root Port itself.	Enabled	Enables this function.
		Disabled	Disables this function.
SEFE	System Error on Non-Fatal Error Option for generating a System Error, if a non-fatal error is registered by a device on the Root Port or on the Root Port itself.	Enabled	Enables this function.
		Disabled	Disables this function.
SECE	System Error on Correctable Error Option for generating a System Error, if a correctable error is registered by a device on the Root Port or on the Root Port itself.	Enabled	Enables this function.
		Disabled	Disables this function.
PME Interrupt	Power Management Event Interrupt Option for generating a PME Interrupt. An Interrupt is generated when a PME Message is received from a PCIe device.	Enabled	Enables this function. A PME Interrupt is generated when a PME message is received.
		Disabled	Disables this function.
PME SCI	Option for generating an SCI if Power Management is detected.	Enabled	Enables this function. The Root Port is enabled to generate SCI if Power Management is detected.
		Disabled	Disables this function.
Hot Plug SCI	Option for generating an SCI if a Hot-Plug is detected.	Enabled	Enables this function. The Root Port is enabled to generate SCI if a Hot-Plug is detected.
		Disabled	Disables this function.

Table 102: US15W Advanced - PCI Express Root Port 1 setting options

- 1) These settings are only possible if *VC1 Enable* is set to *Auto*.
- 2) These settings are only possible if *ASPM* is set to *Enabled*.
- 3) These settings are only possible if *Automatic ASPM* is set to *Manual*.

1.5.10 PCI Express Root Port 2

Warning!

Making settings carelessly can cause instability or device problems. Therefore, it is strongly recommended that these settings only be changed by experienced users.

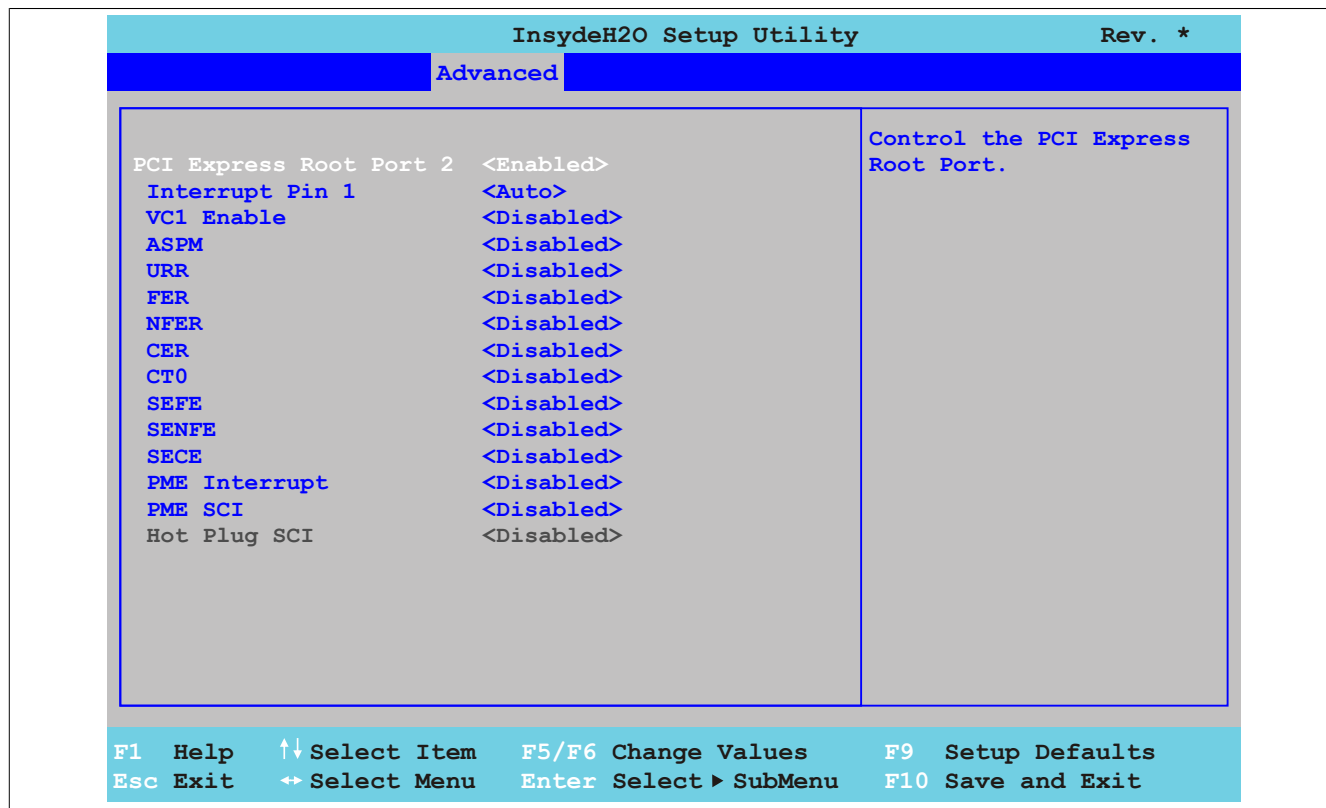


Image 56: US15W Advanced - PCI Express Root Port 2

BIOS setting	Meaning	Setting options	Effect
PCI Express Root Port 2	This option is used to enable/disable PCI Express Root Port 2.	Enabled	PCI Express Root Port 2 enabled.
		Disabled	PCI Express Root Port 2 disabled.
Interrupt pin 1	Information: This function is disabled by default when using ARwin and/or a fieldbus card. The function must be disabled in order to use a fieldbus card.	Auto	IRQ enabled for Root Port 2.
		Disabled	IRQ disabled for Root Port 2.
VC1 Enable	Virtual Channel 1	Auto	Setting the mapping via the BIOS setting "VC1/TC Mapping".
		Disabled	Disables this function. The TC0 Traffic class is automatically used and mapped to the VC0 Virtual Channel.
VC1/TC Mapping ¹⁾	This option is used to define which traffic will be mapped to which Virtual Channel.	TC0	TBD
		TC1	The TC1 traffic class is mapped manually to the VC1 Virtual Channel.
		TC2	The TC2 traffic class is mapped manually to the VC1 Virtual Channel.
		TC3	The TC3 traffic class is mapped manually to the VC1 Virtual Channel.
		TC4	The TC4 traffic class is mapped manually to the VC1 Virtual Channel.
		TC5	The TC5 traffic class is mapped manually to the VC1 Virtual Channel.
		TC6	The TC6 traffic class is mapped manually to the VC1 Virtual Channel.
		TC7	The TC7 traffic class is mapped manually to the VC1 Virtual Channel.
ASPM	Active State Power Management Option for setting a power saving function (L0s/L1) for PCIe links if they do not require full power.	Enabled	Enables this function.
		Disabled	Disables this function.
Automatic ASPM ²⁾	Option for configuring automatic or manual assignment of the ASPM.	Auto	Automatic assignment by the BIOS and operating system.

Table 103: US15W Advanced - PCI Express Root Port 2 setting options

BIOS setting	Meaning	Setting options	Effect
		Manual	Setting for assignment under the BIOS setting "ASPM L0s" and "ASPM L1".
ASPM L0s ³⁾	Option for setting the L0 power saving function.	Disabled	Disables this function.
		Root Port Only	Enables the power saving function for the Root port.
		Endpoint Port Only	Enables the power saving function for the Endpoint port.
		Root&Endpoint Ports	Enables the power saving function for the Root and Endpoint ports.
ASPM L1 ³⁾	Option for setting the L1 power saving function. Power consumption is lower than with L0, but the exit latency higher.	Enabled	Enables this function.
		Disabled	Disables this function.
URR	<i>Unsupported Request (UR) Reporting</i> Option for reporting unsupported requests. Logging of error messages received by the Root Port is controlled exclusively by the Root Control Register.	Enabled	Enables this function.
		Disabled	Disables this function.
FER	<i>Fatal Error Reporting</i> Option for reporting fatal errors. All of the functions in a multifunction device will be monitored. The report for the Root Port takes place internally inside the Root Complex.	Enabled	Enables this function.
		Disabled	Disables this function.
NFER	<i>Non-Fatal Error Reporting</i> Option for reporting non-fatal errors. All of the functions in a multifunction device will be monitored. The report for the Root Port takes place internally inside the Root Complex.	Enabled	Enables this function.
		Disabled	Disables this function.
CER	<i>Correctable Error Reporting</i> Option for reporting non-fatal errors. All of the functions in a multifunction device will be monitored. The report for the Root Port takes place internally inside the Root Complex.	Enabled	Enables this function.
		Disabled	Disables this function.
CT0	<i>PCI Express Completion Timer T0</i> This option is used to enable/disable PCI Express Completion Timer.	Enabled	Enables this function.
		Disabled	Disables this function.
	Information: If the system detected an ROB (Processor Reorder Buffer) Timeout, then this setting should be set to Enabled.		
SEFE	<i>System Error on Fatal Error</i> Option for generating a System Error, if a fatal error is registered by a device on the Root Port or on the Root Port itself.	Enabled	Enables this function.
		Disabled	Disables this function.
SENE	<i>System Error on Non-Fatal Error</i> Option for generating a System Error, if a non-fatal error is registered by a device on the Root Port or on the Root Port itself.	Enabled	Enables this function.
		Disabled	Disables this function.
SECE	<i>System Error on Correctable Error</i> Option for generating a System Error, if a correctable error is registered by a device on the Root Port or on the Root Port itself.	Enabled	Enables this function.
		Disabled	Disables this function.
PME Interrupt	<i>Power Management Event Interrupt</i> Option for generating a PME Interrupt. An Interrupt is generated when a PME Message is received from a PCIe device.	Enabled	Enables this function. A PME Interrupt is generated when a PME message is received.
		Disabled	Disables this function.
PME SCI	Option for generating an SCI if Power Management is detected.	Enabled	Enables this function. The Root Port is enabled to generate SCI if Power Management is detected.
		Disabled	Disables this function.
Hot Plug SCI	Option for generating an SCI if a Hot-Plug is detected.	Enabled	Enables this function. The Root Port is enabled to generate SCI if a Hot-Plug is detected.
		Disabled	Disables this function.

Table 103: US15W Advanced - PCI Express Root Port 2 setting options

- 1) These settings are only possible if *VC1 Enable* is set to *Auto*.
 2) These settings are only possible if *ASPM* is set to *Enabled*.
 3) These settings are only possible if *Automatic ASPM* is set to *Manual*.

1.5.11 Console Redirection

Information:

These settings are only visible to Automation PC 511 system units without I/O board. The node/node switches must be set to "00" (default).

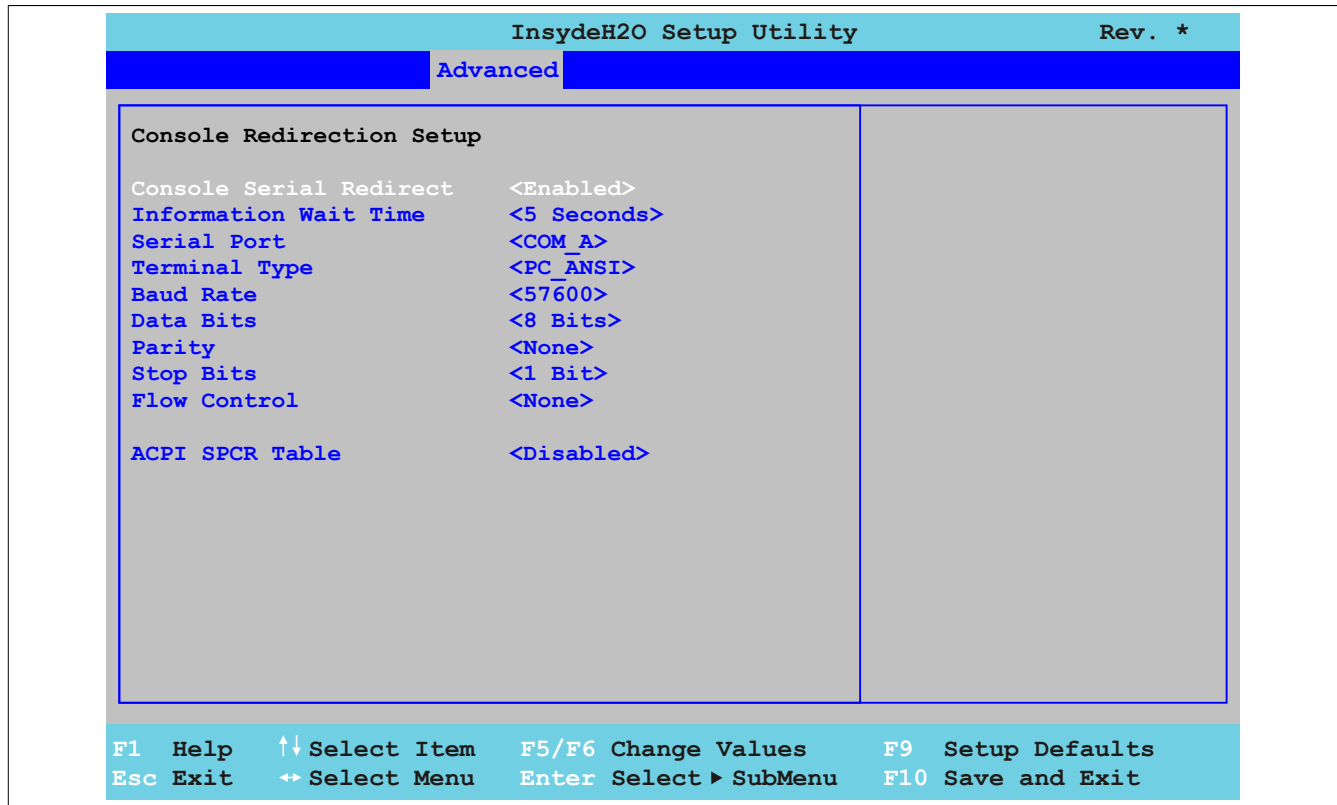


Image 57: US15W Advanced - Console Redirection

BIOS setting	Meaning	Setting options	Effect
Console Serial Redirect	Option for setting the remote console. The Remote Console enables you to access the BIOS setup via the serial interface using a terminal emulator (PuTTY or HyperTerminal).	Enabled	Enables this function.
		Disabled	Disables this function.
	Information: This setting is automatically enabled when using an APC511 without I/O board and the mode/node switch position "00" (default).		
Information Wait Time	Option for setting the amount of time for the Remote Console to wait before accessing the BIOS for the first time.	0 Seconds, 2 Seconds, 5 Seconds, 10 Seconds, 30 Seconds	The Remote Console waits x seconds before accessing the BIOS for the first time.
Serial port	Option for setting the serial interface.	COM_A	Access via the COMA serial interface.
		COM_B	Access via the COMB serial interface.
		COM_C	Access via the COMC serial interface.
		COM_D	Access via the COMD serial interface.
		All Ports	TBD
Terminal type	Option for setting the keyboard input.	VT_100	Disables the VT100 convention (ASCII character set).
		VT_100+	Enables the VT100+ convention (ASCII character set and support for color, function keys, etc).
		VT_UTF8	Enables the VT-UTF8 convention (uses UTF8-coding, to assign Unicode characters one or more bytes).
		PC_ANSI	Enables the PC ANSI convention (extended ASCII character set).
Baud rate	Option for setting the transfer rate of the serial interface (bits per second).	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200	A transfer rate of x bit is enabled.
Data bits	Option for setting the character length (data bits) to use for serial communication.	7 bits	Character length with 7 bits
Parity	Option for setting the parity bit to use for serial communication.	8 bits	Character length with 8 bits
		None	No parity bit used.
		Even	An even number of parity bits is used.
Stop bits	Option for setting the stop bits to use for serial communication.	Odd	An odd number of parity bits is used.
		1-bit	1 bit is used as stop bit.
		2-bit	2 bits are used as stop bit.
Flow control	Option for configuring the data flow control.	None	Data flow control not enabled.

Table 104: US15W Advanced - Console Redirection setting options

BIOS setting	Meaning	Setting options	Effect
ACPI SPCR Table	Option for setting ACPI Serial Port Console Redirection (SPCR).	RTS/CTS	Hardware handshake enabled.
		XON/XOFF	Software handshake enabled.
		Enabled	Enables this function.
		Disabled	Disables this function.

Table 104: US15W Advanced - Console Redirection setting options

1.6 Security

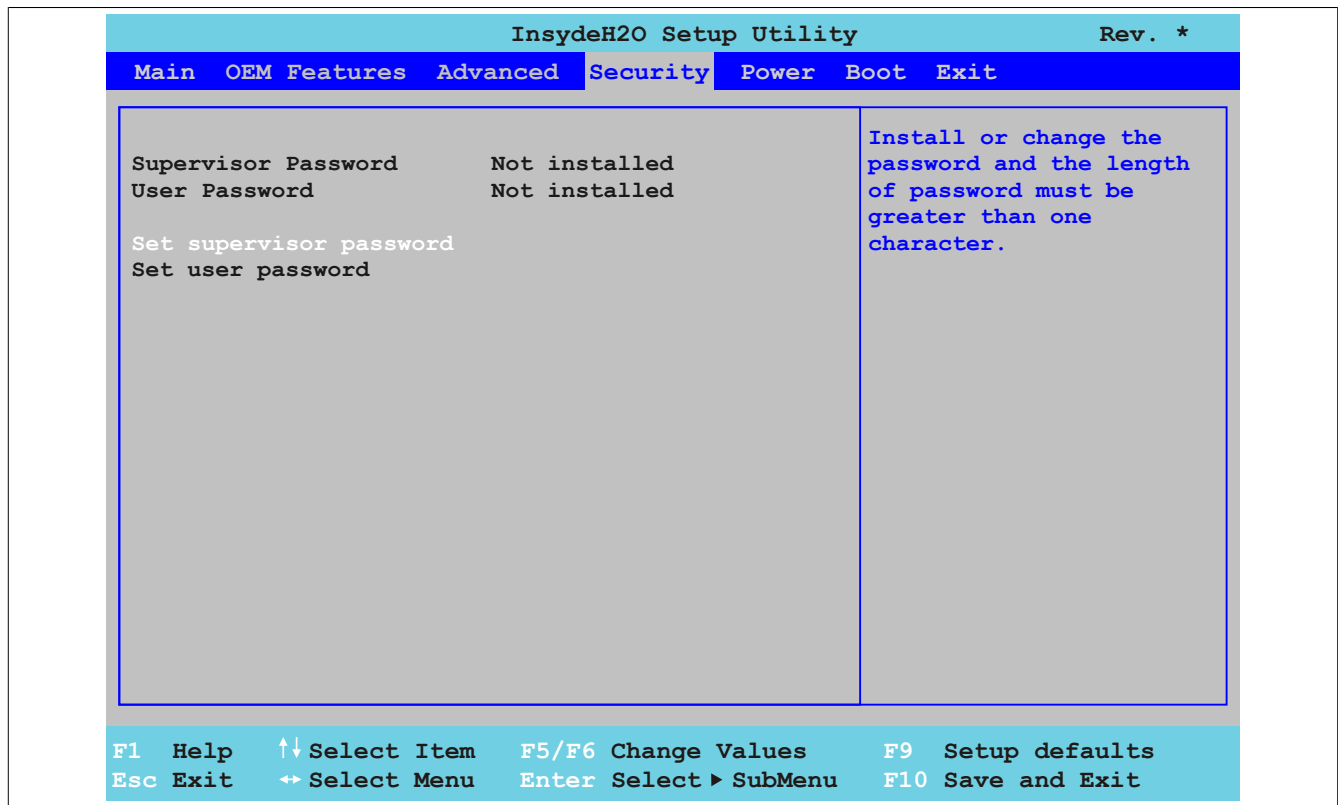


Image 58: US15W Security - Menu

BIOS setting	Meaning	Setting options	Effect
Supervisor Password	Displays whether or not a supervisor password has been set.	None	-
User Password	Displays whether or not a user password has been set.	None	-
Set supervisor password	Option for entering/changing a supervisor password. A supervisor password is necessary to edit all BIOS settings.	Enter	Enter password.
Set user password	Option for entering/changing a user password. A user password allows the user to edit only certain BIOS settings.	Enter	Enter password.

Table 105: US15W Security - Menu setting options

1.6.1 Set Supervisor Password

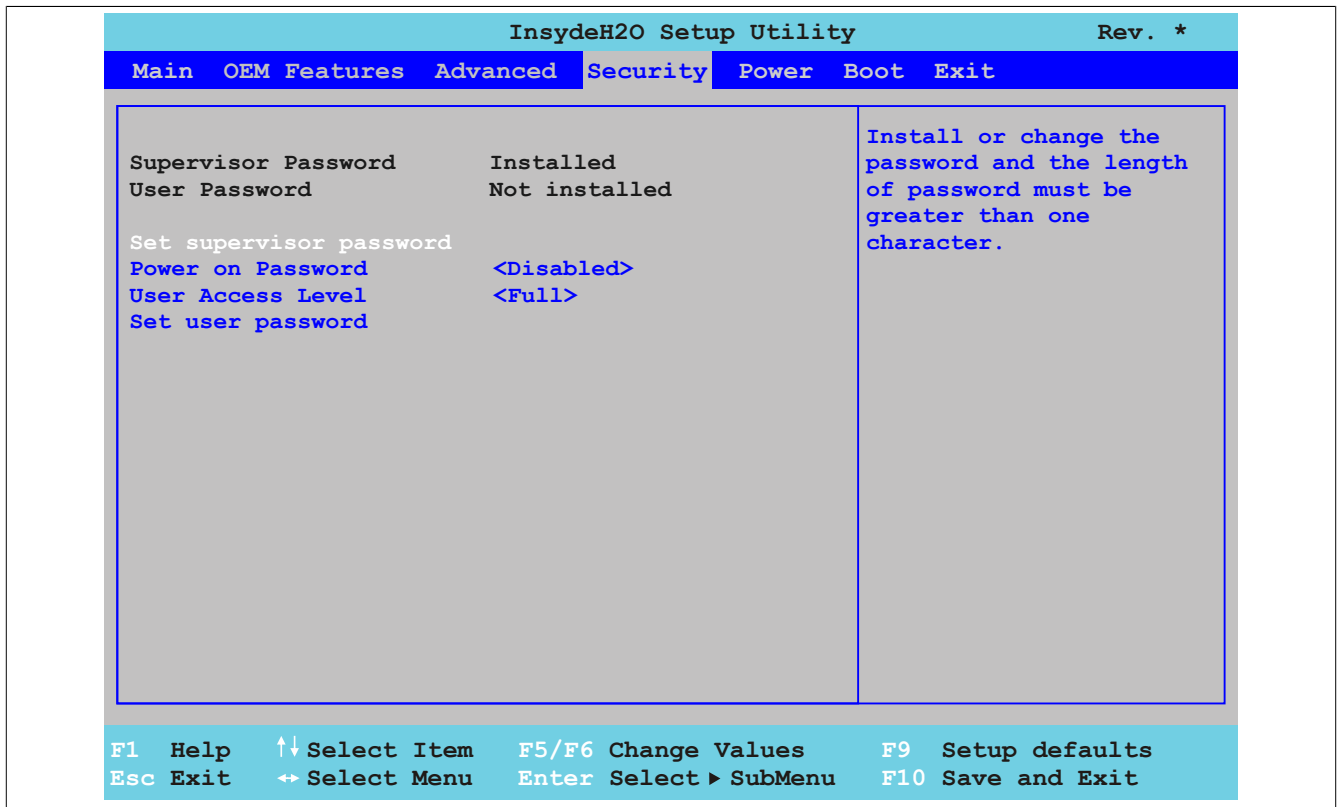


Image 59: US15W Security - Set Supervisor Password

BIOS setting	Meaning	Setting options	Effect
Supervisor Password	Displays whether or not a supervisor password has been set.	None	-
User Password	Displays whether or not a user password has been set.	None	-
Set supervisor password	Option for entering/changing a supervisor password. A supervisor password is necessary to edit all BIOS settings.	Enter	Enter password.
Power on Password	Entering BIOS or starting the operating system requires a password to be entered.	Enabled	POST requires the Supervisor Password to be entered.
		Disabled	Entering BIOS requires the Supervisor Password to be entered, but the operating system can be started without a password.
User Access Level	Assigning editing permissions in BIOS. These settings are only relevant if a user password has been created.	View Only	User can only view BIOS settings (cannot make any changes).
		Limited	User can view all BIOS settings, but only make some changes. Settings that the user can change: Main - System Time, Main - System Date, Advanced - Boot Configuration - Numlock
		Full	User has full access to BIOS and can make any changes.

Table 106: US15W Security - Set Supervisor Password setting options

1.6.2 Set User Password

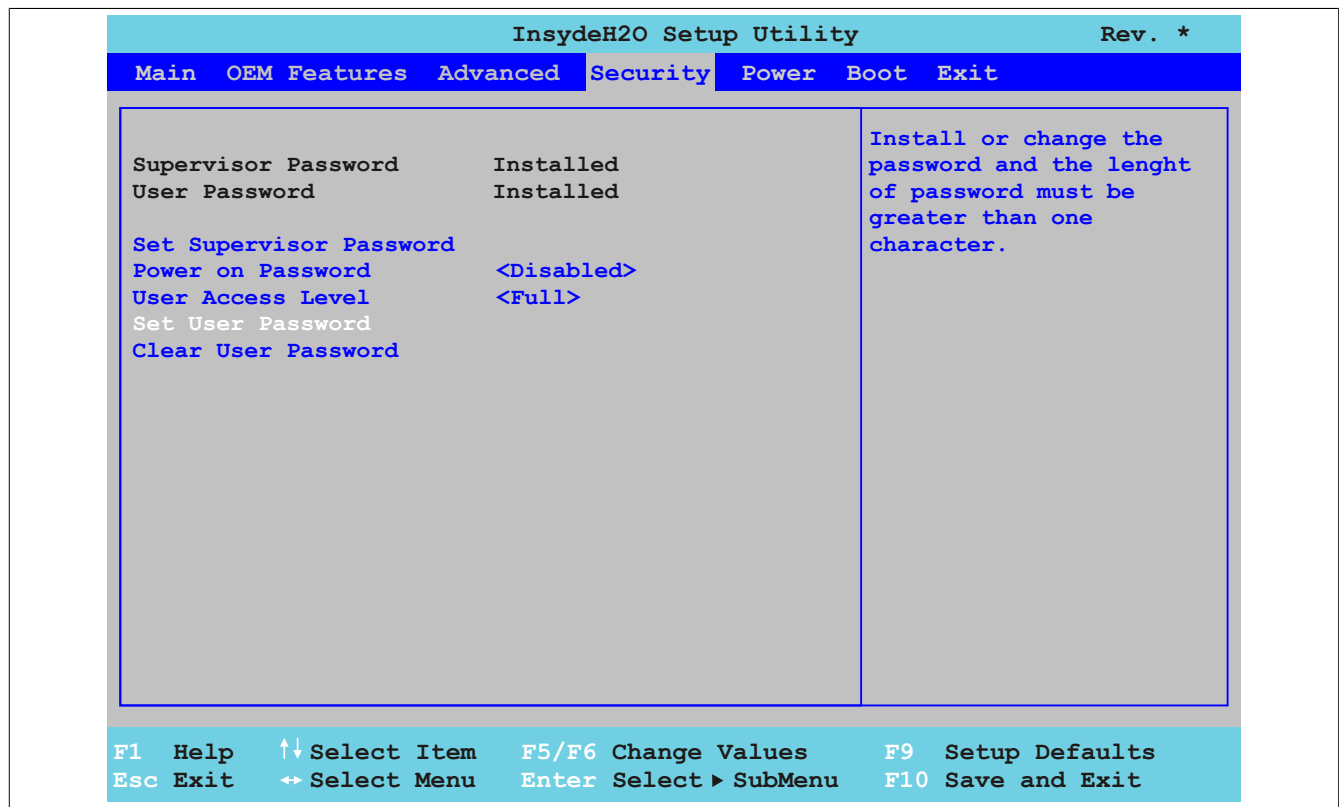


Image 60: US15W Security - Set User Password

BIOS setting	Meaning	Setting options	Effect
Supervisor Password	Displays whether or not a supervisor password has been set.	None	-
User Password	Displays whether or not a user password has been set.	None	-
Set User Password	Option for entering/changing a user password. A user password allows the user to edit only certain BIOS settings.	Enter	Enter password.
Clear User Password ¹⁾	Option for clearing the user password.		Clears user password.

Table 107: US15W Security - Set User Password - Setting options

1) This setting is only shown if *Set User Password* was used to create a user password.

1.7 Power

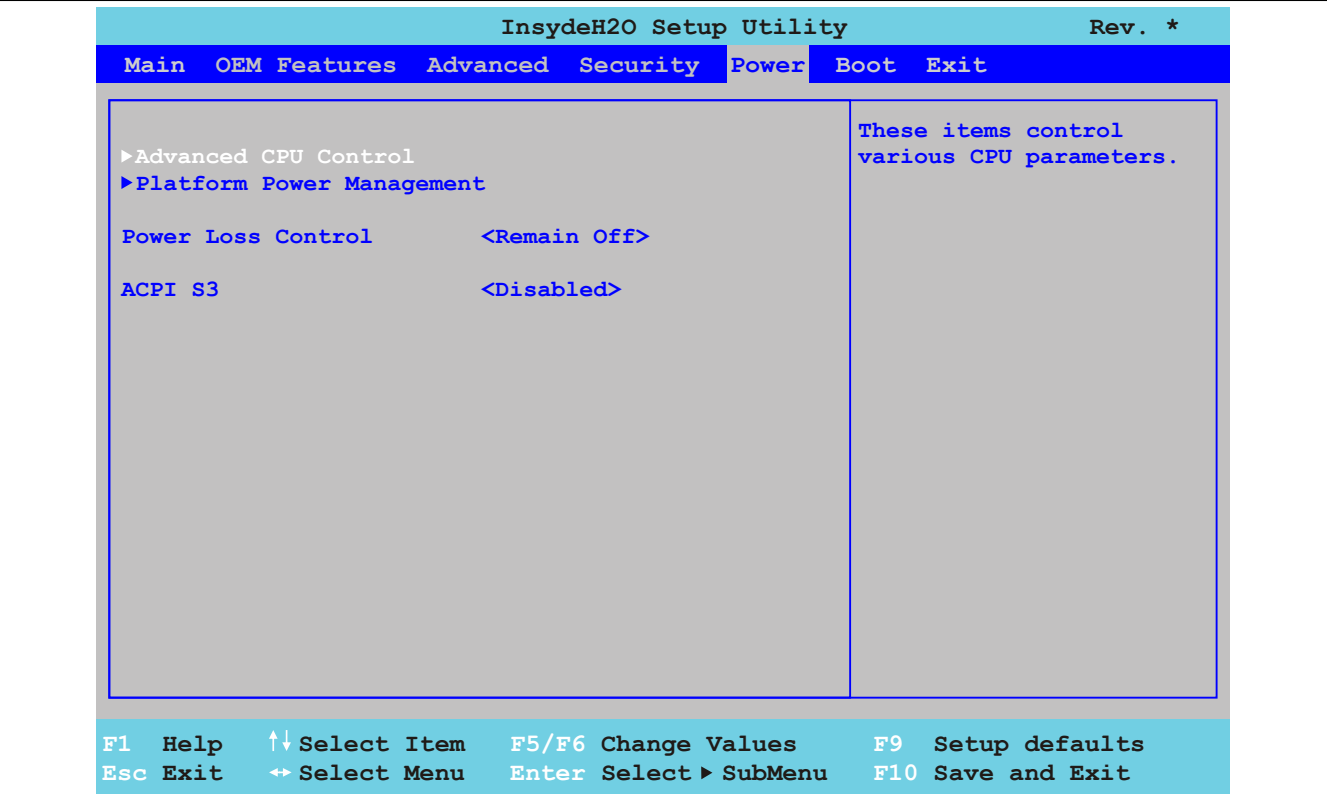


Image 61: US15W Power - Menu

BIOS setting	Meaning	Setting options	Effect
Advanced CPU Control	Configuration of the Advanced CPU Control settings.	None	Opens the submenu See " Advanced CPU Control" on page 109
Platform Power Management	Configuration of the Platform Power Management settings.	None	Opens the submenu See " Platform Power Management" on page 112
Power Loss Control	This option determines what should occur after a power failure.	Remain Off	Device remains off.
		Turn On	The device turns back on.
ACPI S3		Enabled	Enables this function.
	This option is used to determine whether or not the operating system should be written to the RAM, in which case only the RAM should be supplied with power.	Disabled	Disables the function

Table 108: US15W Power - Menu setting options

1.7.1 Advanced CPU Control

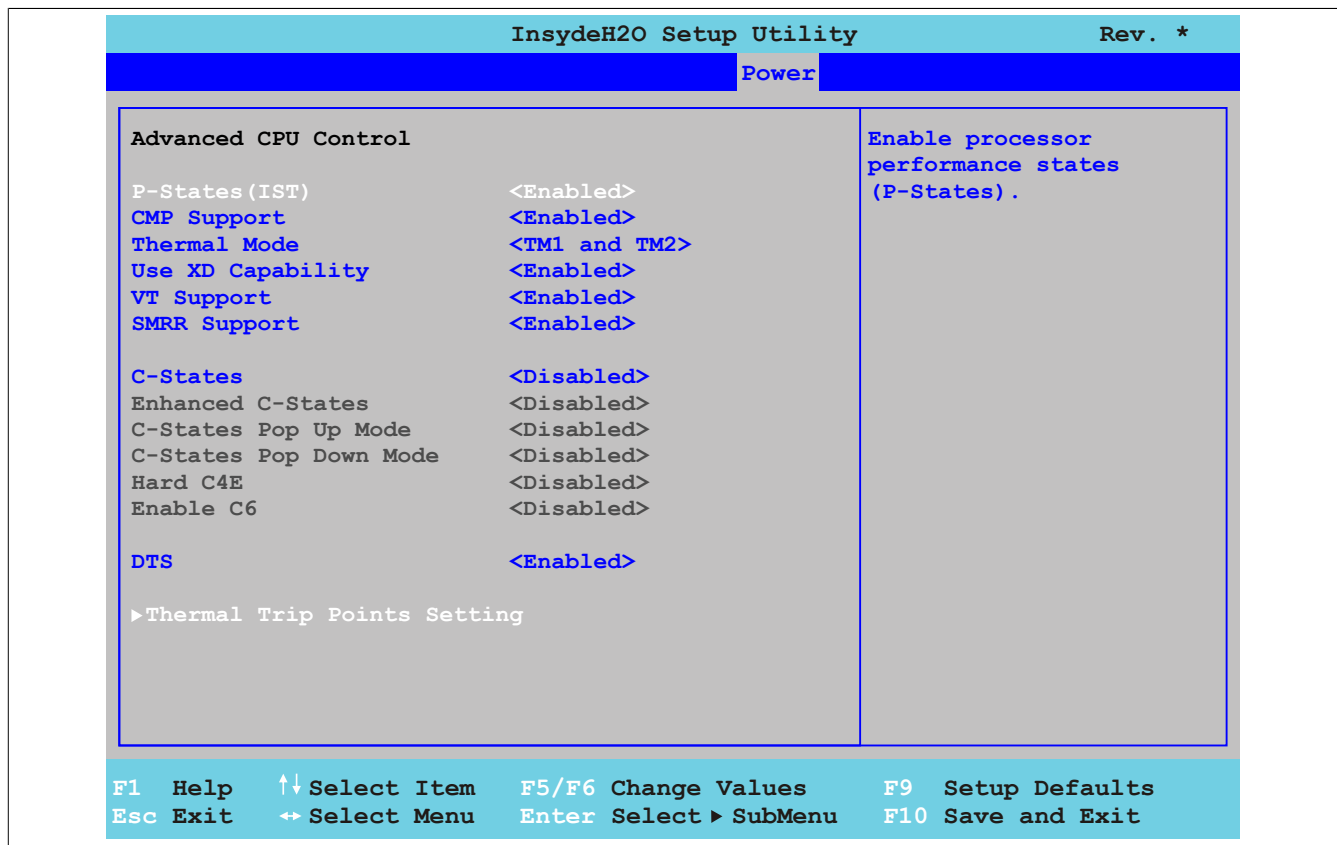


Image 62: US15W Power - Advanced - CPU Control

BIOS setting	Meaning	Setting options	Effect
P-States(IST)	Option for controlling the Intel(R) SpeedStep(TM) technology. The processor clock speed is increased or decreased according to the amount of calculations that must be made. As a result, the power consumption depends largely on the processor load.	Enabled	The processor speed is regulated by the operating system.
		Disabled	Disables SpeedStep technology.
CMP Support	This option supports the use of multiple CPUs (CMP=core multi-processing). Information: In order to use ARwin, CMP Support must be switched off to avoid runtime violations.	Enabled	Enables this function.
		Disabled	Disables this function.
Thermal Mode ¹⁾	Option for configuring the temperature monitoring. Information: To operate the processor within the specified values, we recommend not changing the default setting (TM1 and TM2).	Disabled	Temperature monitoring disabled.
		TM1	Intel Thermal Mode 1 enabled. If the CPU reaches excessive temperatures, the processor speed will be reduced by 50%.
		TM2	Intel Thermal Mode 2 enabled. If the CPU reaches excessive temperatures, the Intel SpeedStep technology will be activated.
		TM1 and TM2	Intel Thermal Mode 1 and 2 enabled. If the CPU reaches excessive temperatures, TM1 reduces the processor speed by 50% and TM2 activates the Intel SpeedStep technology.
Use XD Capability	This option is a safety feature that protects specific data regions of the system memory from potentially damaging code.	Enabled	Enables this function.
		Disabled	Disables this function.
VT Support	Option for activating or deactivating a virtual machine. Information: You must restart in order to apply changes made to this setting.	Enabled	If the function is enabled, a virtual machine can use the additional hardware capacity.
		Disabled	Disables this function.

Table 109: US15W Power - Advanced CPU Control setting options

BIOS setting	Meaning	Setting options	Effect
SMRR Support	The SMRR (System Management Range Register) limits cacheable references of addresses in SMRAM in order to keep the code running in SMM (System Management Mode). In some circumstances, an intruder who is logged on as administrator could configure the Intel processor to gain access to the SMM. Implementation of SMRR reduces this risk of unauthorized access.	Enabled	Enables this function.
		Disabled	Disables this function.
C-States	This setting allows the operating system to set processor clock rates on its own, thereby saving energy.	Enabled	Enables this function. The processors are run at different frequencies, thereby saving energy.
		Disabled	Disables this function. Both processors are run at the same frequency.
Enhanced C-States ²⁾	This setting allows the operating system to set processor clock rates on its own, thereby saving energy.	Enabled	Enables this function.
		Disabled	Disables this function.
C-State Pop Up Mode	This setting makes it possible to detect Bus Master requests and to assign processor clock frequencies. This can be done to save energy.	Enabled	If ICH receives a Bus Master request, then the system changes from C3/C4 state to C2 state and the Bus Master is automatically activated.
		Disabled	Bus Master data transfer is a Break Event and ICH will attempt to return to the C0 state.
C-State Pop Down Mode ³⁾	This setting makes it possible to detect Bus Master requests and to assign processor clock frequencies. This can be done to save energy.	Enabled	If ICH does not receive a Bus Master request, then the system will be set back to C3/C4 state.
		Disabled	ICH will not attempt to automatically return to C3/C4 state.
Hard C4E ⁴⁾	Power Management for the Intel Atom processor - Enhanced C4 support.	Enabled	Enables this function. CPU voltage is reduced and the Memory Cache is turned off.
		Disabled	Disables this function.
Enable C6	Power Management for the Intel Atom processor - C6 support.	Enabled	Enables this function. The internal CPU voltage is reduced (can also be 0 V).
		Disabled	Disables this function.
DTS	Option for enabling or disabling the CPU Digital Thermal Sensor function.	Enabled	Enables this function.
		Disabled	Disables this function.
Thermal Trip Points Setting ⁵⁾	Configuration of the Thermal Trip Points settings.	Enter	Opens the submenu See " Thermal Trip Points Settings" on page 111

Table 109: US15W Power - Advanced CPU Control setting options

- 1) These settings are only possible if *P-States(IST)* is set to *Enabled*.
- 2) These settings are only possible if *C-States* is set to *Enabled*.
- 3) These settings are only possible if *C-States Pop Up Mode* is set to *Enabled*.
- 4) These settings are only possible if *Enhanced C-States* is set to *Enabled*.
- 5) These settings are only possible if *DTS* is set to *Enabled*.

Thermal Trip Points Settings

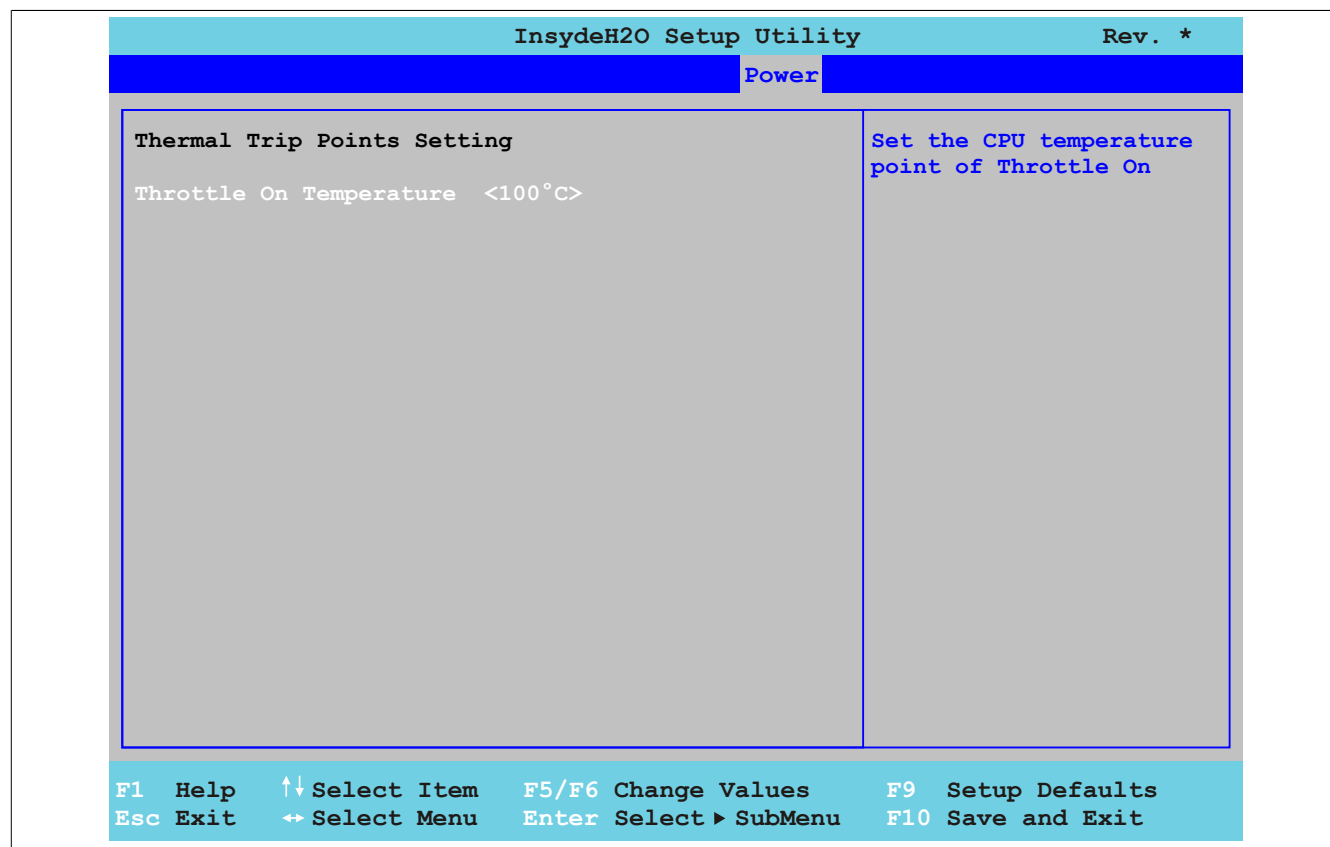


Image 63: US15W Power - Advanced - CPU Control - Thermal Trip Points Settings

BIOS setting	Meaning	Setting options	Effect
Throttle On Temperature	With this function, a temperature can be set at which the operating system throttles the system.	40°C, 45°C, 50°C, 55°C, 60°C, 65°C, 70°C, 75°C, 80°C, 85°C, 90°C, 95°C, 100°C	Temperature setting for the thermal trip point. Can be set in 5 degree increments.

Table 110: US15W Power - Advanced CPU Control - Thermal Trip Points Settings options

1.7.2 Platform Power Management

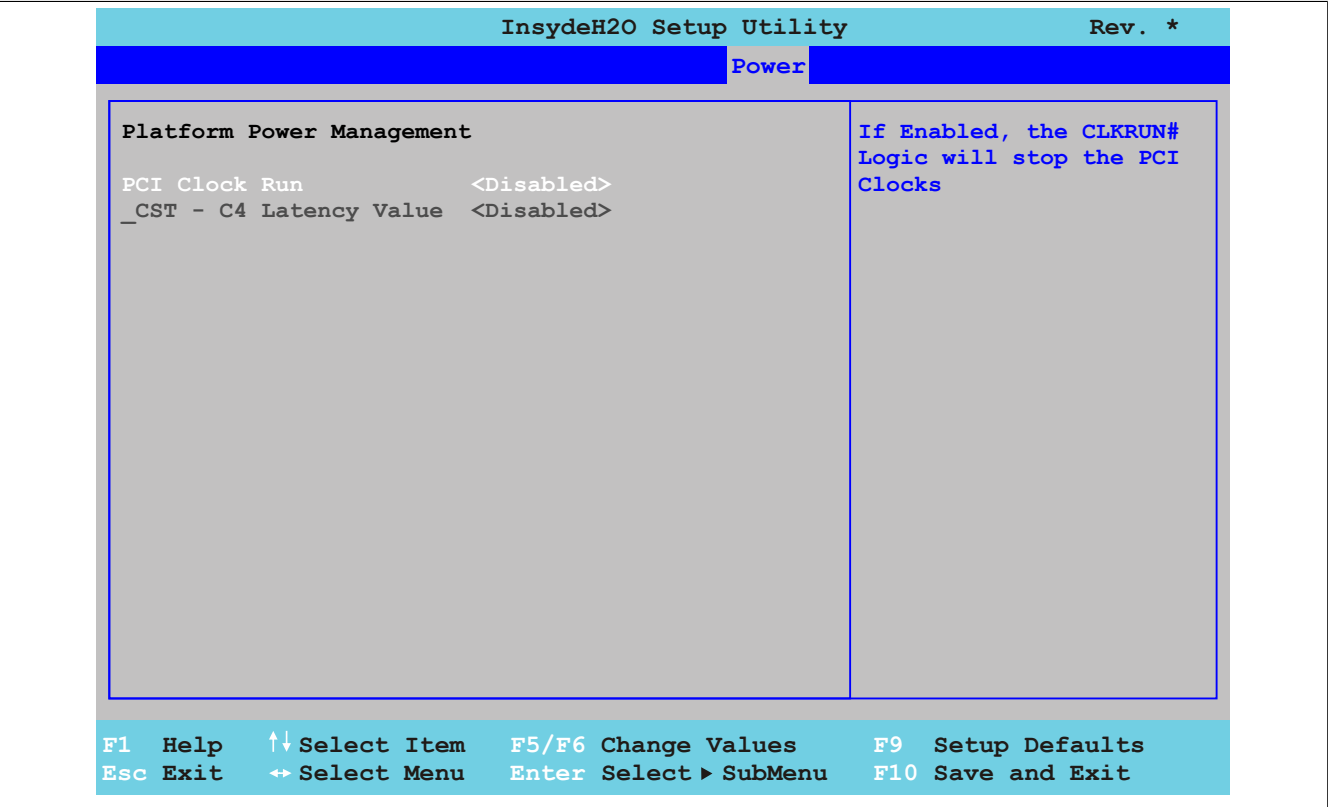


Image 64: US15W Power - Platform Power Management

BIOS setting	Meaning	Setting options	Effect
PCI Clock Run	Option for enabling / disabling the PCI Clocks to save energy.	Enabled	Enables this function.
		Disabled	Disables this function.
_CST - C4 Latency Value ¹⁾	Option for enabling / disabling the latency period for C4 C-States in the ACPI _CST object.	Enabled	Enables this function.
		Disabled	Disables this function.
	Information: For more detailed information about this setting, see the ACPI specification (www.acpi.info).		
C4 on C3 - Deeper Sleep ²⁾	Fine-tunes the power saving function on an ACPI operating system.	Enabled	Processor is needed in C4 if the operating system is initiated in a C3 state.
		Disabled	Disables this function.

Table 111: US15W Power - Platform Power Management setting options

- 1) These settings are only possible if *C-States* is set to *Enabled* in the menu item *Advanced CPU Control*.
2) These settings are only possible if *_CST - C4 Latency Value* is set to *Enabled*.

1.8 Boot

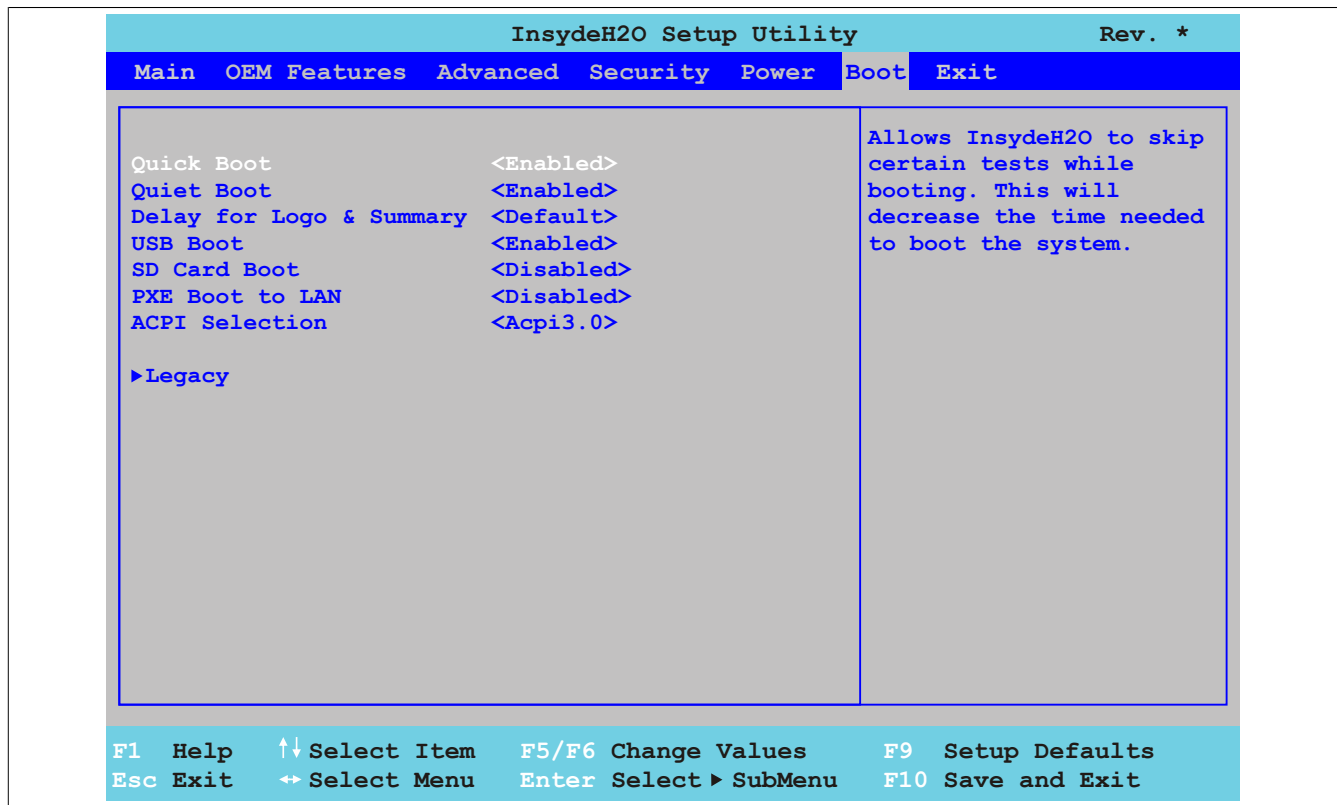


Image 65: US15W Boot - Menu

BIOS setting	Meaning	Setting options	Effect
Quick Boot	This function reduces the boot time by skipping some POST tests.	Enabled	Enables this function.
		Disabled	Disables this function.
Quiet Boot	Determines if POST message or OEM logo (default = black background) is displayed.	Enabled	OEM logo display instead of POST message.
		Disabled	POST message display.
Delay for Logo & Summary	Option for setting the display duration of the logo and summary screen.	Default	The display duration is minimized for a quick boot procedure.
		1 Sec., 1.5 Sec., 2 Sec., 2.5 Sec., 3 Sec., 4 Sec., 5 Sec., 10 Sec., 20 Sec.	A display duration of x seconds can be defined.
USB Boot	This function can be used to enable / disable the option of booting from USB devices.	Enabled	Enables this function.
		Disabled	Disables this function.
SD Card Boot	This function can be used to enable / disable the option of booting from SD cards. Warning! SD memory cards are only permitted for use as mass memory. It is not possible to boot from an SD card.	Enabled	Enables this function.
		Disabled	Disables this function.
PXE Boot to LAN	This function can be used to enable / disable the option of booting from LAN (ETH).	Enabled	Enables this function.
		Disabled	Disables this function.
ACPI Selection	Option for setting the power option specifications to be supported. The ACPI functions must be supported by the drivers and operating systems being used.	Acpi 1.0B	ACPI functions in accordance with v1.0B
		Acpi 3.0	ACPI functions in accordance with v3.0
		Acpi 4.0	ACPI functions in accordance with v4.0
Legacy	Configuration and display of the Boot sequence.	Enter	Opens the submenu See "Legacy" on page 114

Table 112: US15W Boot - Menu setting options

1.8.1 Legacy

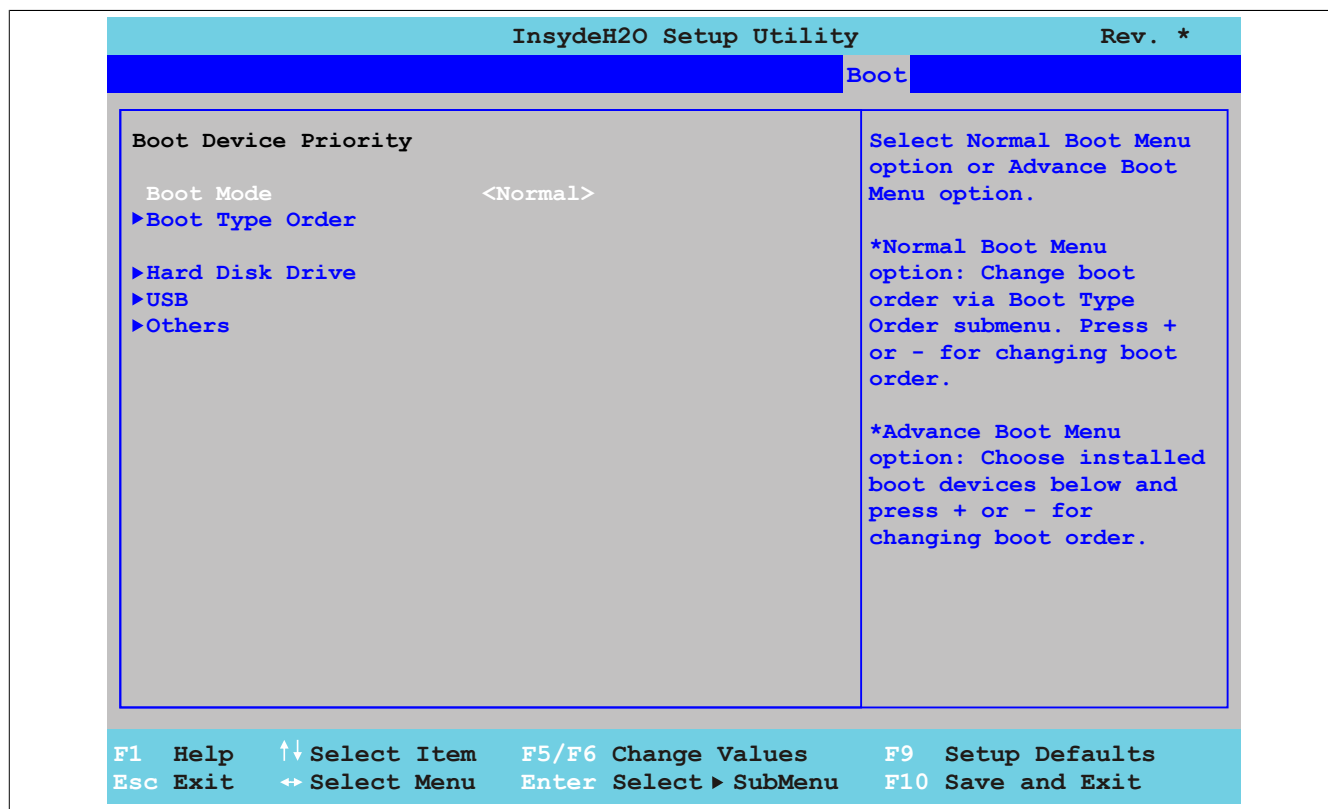


Image 66: US15W Boot - Legacy

BIOS setting	Meaning	Setting options	Effect
Boot mode	Boot mode configuration.	Normal	Displays the submenus for changing the boot sequence settings.
		Advanced	Displays only the product names of the bootable connected devices. The boot sequence can be defined right here.
Boot Type Order¹⁾	Configuration of Boot Type Order settings.	Enter	Opens the submenu See " Boot Type Order" on page 115
Hard Disk Drive¹⁾²⁾	Displays the inserted CompactFlash cards.	Enter	Opens the submenu See " Hard Disk Drive" on page 116
USB¹⁾³⁾	Displays connected USB flash drives.	Enter	Opens the submenu See " USB" on page 116
Others¹⁾⁴⁾	Displays the CPU Boards / Baseboards for PXE Boot with the onboard Ethernet interfaces.	Enter	Opens the submenu See " Others" on page 117

Table 113: US15W Boot - Legacy setting options

- 1) These submenus are only shown if *Normal Boot Mode* is set to *Normal*.
- 2) Only shown if a CompactFlash card is connected.
- 3) Only shown if a USB flash drive is connected.
- 4) Only shown if *PXE Boot to LAN* is set to *Enabled* in the boot menu.

Boot Type Order

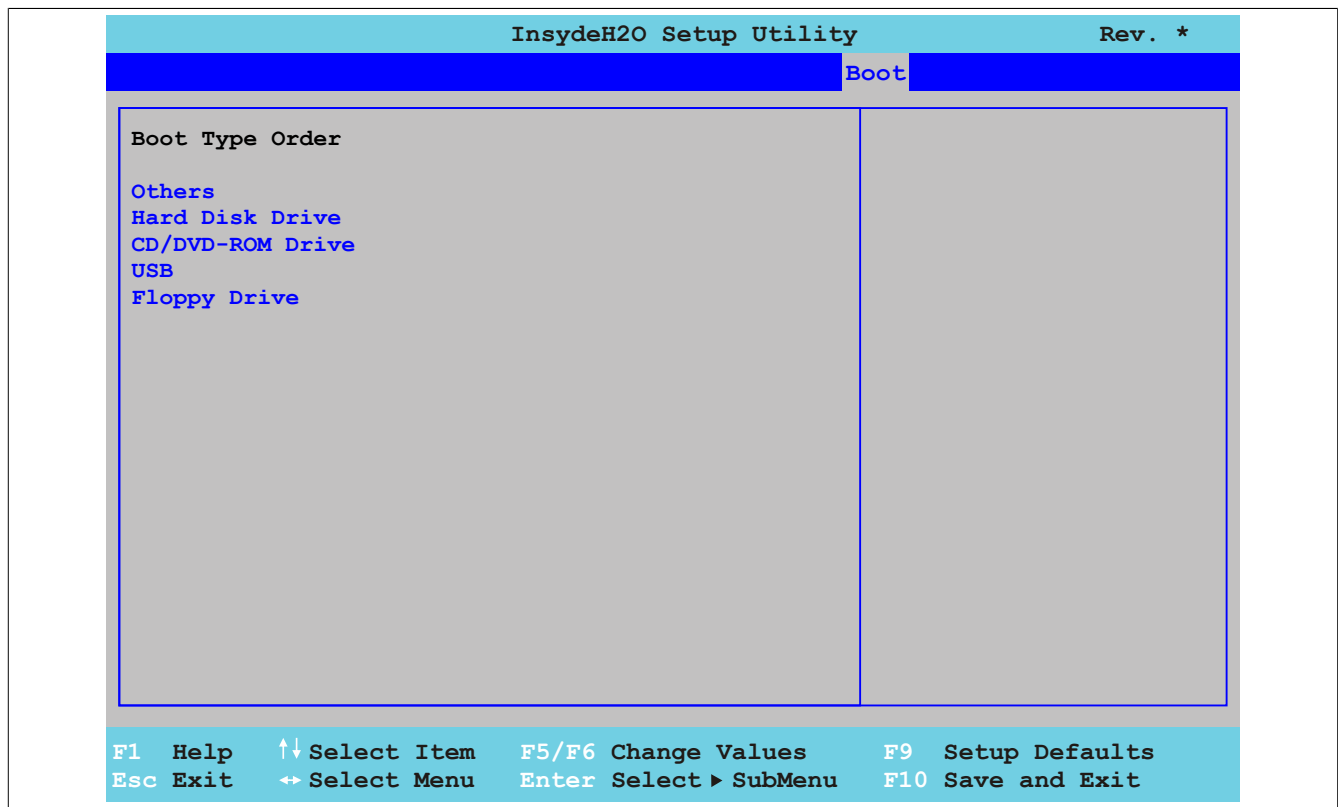


Image 67: US15W Boot - Legacy - Boot Type Order

BIOS setting	Meaning	Setting options	Effect
Others	The boot drives can be set using this option.	Others	Select the desired sequence.
Hard Disk Drive		Hard Disk Drive	
CD/DVD ROM drive		CD/DVD ROM drive	
USB		USB	
Floppy Drive		Floppy Drive	

Table 114: US15W Boot - Legacy - Boot Type Order setting options

Hard Disk Drive

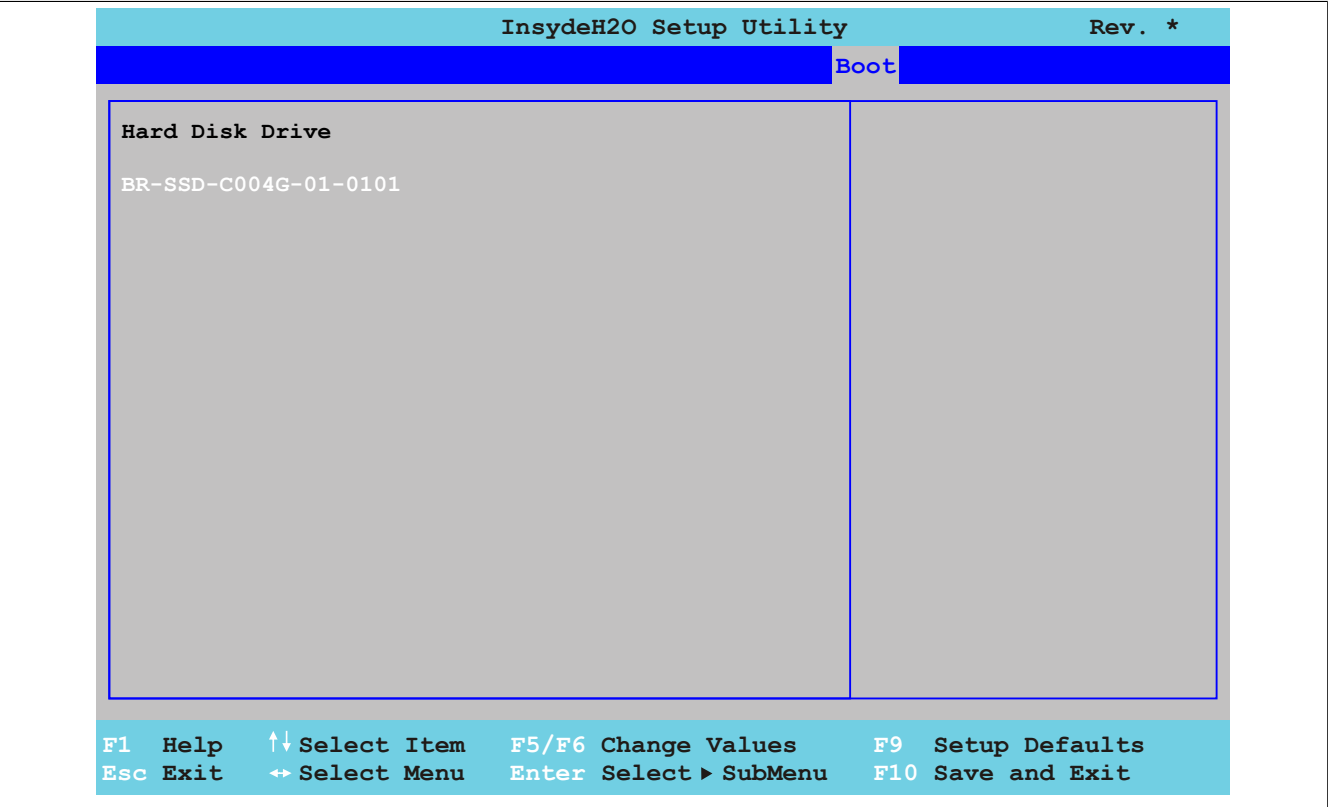


Image 68: US15W Boot - Legacy - Hard Disk Drive

BIOS setting	Meaning	Setting options	Effect
	Displays the inserted CompactFlash cards.	None	-

Table 115: US15W Boot - Legacy - Hard Disk Drive setting options

USB

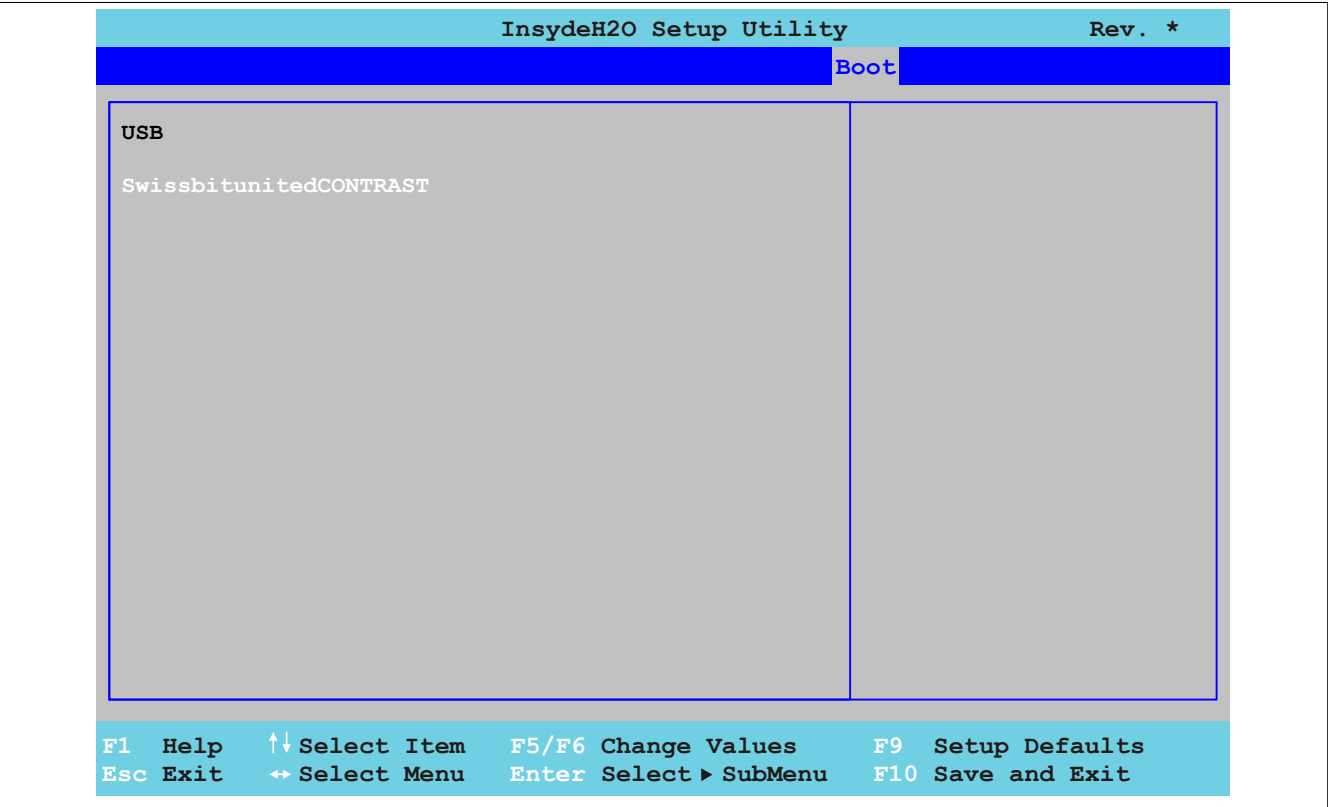


Image 69: US15W Boot - Legacy - USB

BIOS setting	Meaning	Setting options	Effect
	Displays connected USB flash drives.	None	-

Table 116: US15W Boot - Legacy - USB setting options

Others

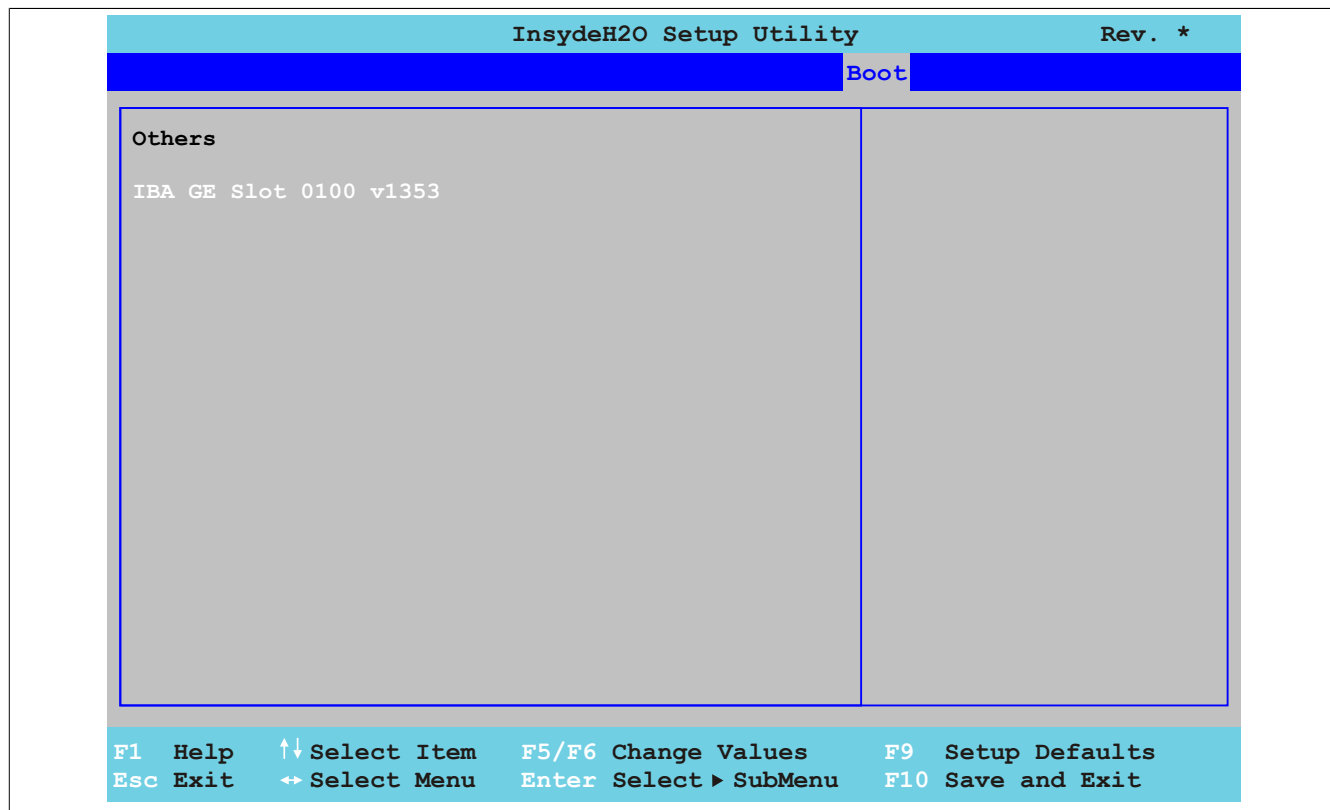


Image 70: US15W Boot - Legacy - Others

BIOS setting	Meaning	Setting options	Effect
-	Displays the CPU Boards / Baseboards for PXE Boot with the onboard Ethernet interfaces.	None	-

Table 117: US15W Boot - Legacy - Others setting options

1.9 Exit

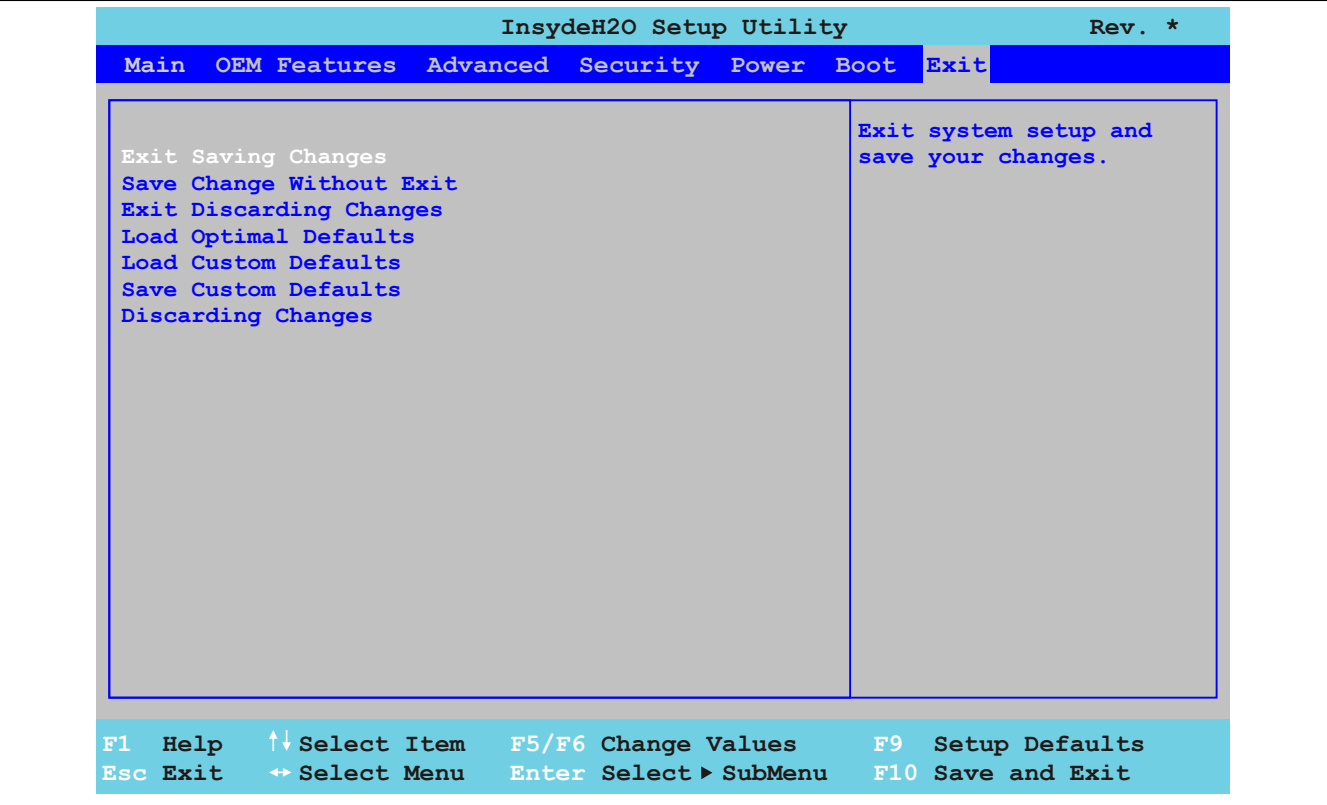


Image 71: US15W Exit - Menu

BIOS setting	Meaning	Setting options	Effect
Exit saving changes	BIOS setup is closed with this item. Changes made are saved in CMOS after confirmation, and the system is rebooted.	OK / Cancel	
Save Change Without Exit	After this is confirmed, any changes that have been made will be saved to the CMOS.	OK / Cancel	
Exit discarding changes	With this item you can close BIOS setup without saving the changes made. The system is then re-booted.	OK / Cancel	
Load Optimal Defaults	This item loads the CMOS default values, which are defined by the Mode / Node switch settings. These settings are loaded for all BIOS configurations.	OK / Cancel	
Load Custom Defaults	This item loads the CMOS values, which are defined by the Mode / Node switch settings. These settings are loaded for all BIOS configurations.	OK / Cancel	
Save Custom Defaults	This saves defined CMOS vales. These settings are saved for all BIOS configurations.	OK / Cancel	
Discarding Changes	In the event that settings were made which the user can no longer remember, changes can be reset as long as they haven't been saved.	OK / Cancel	

Table 118: US15W Exit - Menu setting options

1.10 BIOS default settings

If the function "load setup defaults" is chosen in the main BIOS setup menu, or if exit is selected (or <F9> is pressed) in the individual setup screens, the following BIOS settings are the optimized values that will be used.

1.10.1 Main

Setting / View	Profile 0	My setting
InsydeH2O Version	-	
Processor Type	-	
System Bus Speed	-	
System Memory Speed	-	
Cache RAM	-	
Total Memory	-	
SODIMM 0	-	
System Time	-	
System Date	-	

Table 119: US15W - Main profile setting overview

1.10.2 OEM Features

Setting / View	Profile 0	My setting
BIOS	-	
Boot Source	-	
MTCX	-	

Table 120: US15W - OEM Features profile setting overview

CPU Board Features

Setting / View	Profile 0	My setting
Device ID	-	
Compatibility ID	-	
Vendor ID	-	
Hardware revision	-	
Serial number	-	
Product name	-	
Hardware Number	-	
Parent Device ID	-	
Parent Compatib. ID	-	
User Serial ID	-	
LAN1 MAC ADDRESS	-	
LPC Devices		
COMA	-	
Base I/O Address	3F8	
Interrupt	IRQ4	
Statistical Values		
Sensor 1	-	
Sensor 2	-	
Sensor 3	-	
Total Hours	-	
Power On Cycles	-	
Temperature Values		
Refresh Values	-	
Sensor 1	-	
Sensor 2	-	
Sensor 3	-	
Temperature Values		
Wcpu	-	
Vin	-	
Battery voltage	-	
Battery state	-	

Table 121: US15W - CPU Board Features profile setting overview

System Unit Features

Setting / View	Profile 0	My setting
Device ID	-	
Compatibility ID	-	
Vendor ID	-	
Hardware revision	-	
Serial number	-	
Product name	-	
Hardware Number	-	
Parent Device ID	-	
Parent Compatib. ID	-	
User Serial ID	-	
Display (0) Brightness	Auto	
LPC Devices		
COMB	-	
Base I/O Address	2F8	
Interrupt	IRQ3	
Statistical Values		
Sensor 1	-	
Total Hours	-	
Power on cycles	-	
Temperature Values		
Refresh Values	-	
Sensor 1	-	

Table 122: US15W - System Unit Features profile setting overview

I/O Board Features

Setting / View	Profile 0	My setting
FPGA Version	-	
Device ID	-	
Compatibility ID	-	
Vendor ID	-	
Hardware revision	-	
Serial number	-	
Product name	-	
Hardware Number	-	
Parent Device ID	-	
Parent Compatib. ID	-	
User serial ID	-	
I/O board – LPC devices		
COMC		
Base I/O Address	3E8	
Interrupt	IRQ11	
COMD		
Base I/O Address	2E8	
Interrupt	IRQ10	
Statistical values		
Sensor 1	-	
Total Hours	-	
Power on cycles	-	
Refresh values		
Sensor 1	-	
Panel control		
Select panel number	1	
Version	-	
Brightness	100%	
Fan Speed	-	
Keys/LEDs	-	
Temperature	-	

Table 123: US15W - I/O Board Features profile setting overview

IF board features

Setting / View	Profile 0	My setting
Device ID	-	
Compatibility ID	-	
Vendor ID	-	
Hardware revision	-	

Table 124: US15W - IF Board Features profile setting overview

Setting / View	Profile 0	My setting
Serial number	-	
Product name	-	
Hardware Number	-	
Parent Device ID	-	
Parent Compatib. ID	-	
User Serial ID	-	
LAN2 MAC ADDRESS	-	
Statistical Values		
Total Hours	-	
Power on cycles	-	

Table 124: US15W - IF Board Features profile setting overview

Memory Module Features

Setting / View	Profile 0	My setting
Device ID	-	
Compatibility ID	-	
Vendor ID	-	
Hardware revision	-	
Serial number	-	
Product name	-	
Hardware Number	-	
Parent Device ID	-	
Parent Compatib. ID	-	
User Serial ID	-	

Table 125: US15W - Memory Module Features profile setting overview

1.10.3 Advanced

RAM Configuration

Setting / View	Profile 0	My setting
Refresh rate	Auto	

Table 126: US15W - RAM Configuration profile setting overview

Boot Configuration

Setting / View	Profile 0	My setting
NumLock	On	

Table 127: US15W - Boot Configuration profile setting overview

Peripheral Configuration

Setting / View	Profile 0	My setting
High Definition Audio ¹⁾	Auto	

Table 128: US15W - Peripheral Configuration profile setting overview

1) This menu option is only present if there is an Audio connection.

IDE Configuration

Setting / View	Profile 0	My setting
Channel 1 Master	Enabled ¹⁾	
Channel 1 Master		
Transfer mode	-	
Security Mode	-	
Channel 1 Slave	Enabled ¹⁾	
Channel 1 Slave		
Transfer mode	-	
Security Mode	-	

Table 129: US15W - IDE Configuration profile setting overview

1) Only with drive installed.

Video Configuration

Setting / View	Profile 0	My setting
IGD - Pre-allocated memory	UMA = 8MB	
IGD - Boot Type	Auto	
IGD - LCD Panel Type ¹⁾	640x480 (5.7) LVDS	
Remote Panel	Disabled ²⁾	

Table 130: US15W - Video Configuration profile setting overview

- 1) This setting is only available for PP500 system units.
 2) On APC511 system units with no I/O board, this option is enabled by default.

USB configuration

Setting / View	Profile 0	My setting
USB Legacy	Enabled	
EHCI	Enabled	
UHCI 1	Enabled	
UHCI 2	If an I/O board is not connected: Disabled If an I/O board is connected: Enabled	
UHCI 3	Enabled	
USB client	Disabled	

Table 131: US15W - USB Configuration profile setting overview

SDIO Configuration

Setting / View	Profile 0	My setting
SDIO Port 1	Enabled	
SDIO Port 2	Enabled	

Table 132: US15W - SDIO Configuration profile setting overview

ACPI Table/Features Control

Setting / View	Profile 0	My setting
FACP - C2 Latency Value	Disabled	
FACP - C3 Latency Value	Disabled	
HPET - HPET support	Enabled	
APIC - I/O APIC mode	Enabled	

Table 133: US15W - ACPI Table/Features Control profile setting overview

PCI Express Root Port 1

Setting / View	Profile 0	My setting
PCI Express Root Port 1	Enabled	
Interrupt pin 0	Auto	
VC1 Enable	Disabled	
VC1/TC Mapping	Disabled	
ASPM	Disabled	
Automatic ASPM	Disabled	
ASPM L0s	Disabled	
ASPM L1s	Disabled	
URR	Disabled	
FER	Disabled	
NFER	Disabled	
CER	Disabled	
CT0	Disabled	
SEFE	Disabled	
SENF	Disabled	
SECE	Disabled	
PME Interrupt	Disabled	
PME SCI	Disabled	
Hot Plug SCI	Disabled	

Table 134: US15W - PCI Express Root Port 1 profile setting overview

PCI Express Root Port 2

Setting / View	Profile 0	My setting
PCI Express Root Port 2	Enabled	
Interrupt pin 1	If a fieldbus card is not connected: Auto If a fieldbus card is connected: Disabled	
VC1 Enable	Disabled	
VC1/TC Mapping	Disabled	
ASPM	Disabled	
Automatic ASPM	Disabled	
ASPM L0s	Disabled	
ASPM L1s	Disabled	
URR	Disabled	
FER	Disabled	
NFER	Disabled	
CER	Disabled	
CT0	Disabled	
SEFE	Disabled	
SENF	Disabled	
SECE	Disabled	
PME Interrupt	Disabled	
PME SCI	Disabled	
Hot Plug SCI	Disabled	

Table 135: US15W - PCI Express Root Port 2 profile setting overview

Console Redirection

Setting / View	Profile 0	My setting
Console Serial Redirect	Enabled	
Information Wait Time	5 seconds	
Serial port	COM_A	
Terminal type	PC_ANSI	
Baud rate	57600	
Data bits	8 bits	
Parity	None	
Stop bits	1-bit	
Flow control	None	
ACPI SPCR Table	Disabled	

Table 136: US15W - Console Redirection - profile setting overview

1.10.4 Power

Setting / View	Profile 0	My setting
Power Loss Control	Read from the EEPROM data	
ACPI S3	Disabled	

Table 137: US15W - Power profile setting overview

Advanced CPU Control

Setting / View	Profile 0	My setting
P-States(IST)	Enabled	
CMP Support	Enabled	
Thermal Mode	TM1 and TM2	
Use XD Capability	Enabled	
VT Support	Enabled	
SMRR Support	Enabled	
C-States	Disabled	
Enhanced C-States	Disabled	
C-States Pop Up Mode	Disabled	
C-States Pop Down Mode	Disabled	
Hard C4E	Disabled	
Enable C6	Disabled	
DTS	Enabled	
Thermal Trip Point Settings		
Throttle On Temperature	100°C	

Table 138: US15W - Advanced CPU Control profile setting overview

Platform Power Management

Setting / View	Profile 0	My setting
PCI Clock Run	Disabled	
_CST - C4 Latency Value	Disabled	
C4 on C3 - Deeper Sleep	Disabled	

Table 139: US15W - Platform Power Management profile setting overview

1.10.5 Boot

Setting / View	Profile 0	My setting
Quick Boot	Enabled	
Quiet Boot	Enabled	
Delay for Logo & Summary	Default	
USB Boot	Enabled	
SD Card Boot	Disabled	
PXE Boot to LAN	Disabled	
ACPI Selection	Acpi3.0	

Table 140: US15W - Boot profile setting overview

1.11 Distribution of resources

1.11.1 RAM address assignment

RAM address	Address in Hex	Resource
(TOM - FB ¹⁾) – TOM ²⁾	N.A.	ACPI reclaim, MPS and NVS area ³⁾
(TOM - FB - TSEG ⁴⁾) – (TOM - FB)	N.A.	VGA frame buffer ⁵⁾
1024 kB – (TOM - 8 MB - 192 kB)	100000h - N.A.	Extended memory
896kB – 1024 kB	0E0000h - 0FFFFFFh	Runtime BIOS
832kB – 896 kB	0D0000h - 0DFFFFh	Upper memory
640 kB – 832 kB	0A0000h - 0CFFFFh	Video memory and BIOS
639 kB – 640 kB	09FC00h - 09FFFFh	Extended BIOS data
0 – 639 kB	000000h - 09FC00h	Conventional memory

Table 141: RAM address assignment

- 1) FB - VGA frame buffer
- 2) TOM - Top of memory: max. installed DRAM
- 3) Only if ACPI Aware OS is set to "YES" in the setup.
- 4) TSEG - Intended internally for SMI handling in system BIOS.
- 5) The VGA frame buffer can be reduced to 1 MB in the setup.

1.11.2 I/O address assignment

I/O address	Resource
0000h - 00FFh	Motherboard resources
01F0h - 01F7h	Primary IDE channel
03B0h - 03DFh	Video system
03F6h - 03F6h	Primary IDE channel command port
03F7h - 03F7h	Primary IDE channel status port
03F8h - 03FFh	COM1
0480h - 04BFh	Motherboard resources
04D0h - 04D1h	Motherboard resources
0800h - 087Fh	Motherboard resources
0CF8h - 0CFBh	PCI config address register
0CFCh - 0CFFh	PCI config data register
0D00h - FFFFh	PCI / PCI Express bus ¹⁾
4100h - 417Fh	MTCX
FF00h - FF07h	IDE bus master register

Table 142: I/O address assignment

- 1) The BIOS assigns the PCI and PCI Express Bus I/O resources from FFF0h downward. Devices that are not compatible with PnP/PCI/PCI Express cannot use the I/O resources in this area.

1.11.3 Interrupt assignments in PIC mode

IRQ	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	NMI	NONE
System timer	•																	
Keyboard		•																
IRQ cascade			•															
COM1 (Serial port A)				○	•	○	○				○	○	○					
COM2 (Serial port B)				•	○	○	○				○	○	○					
ACPI ¹⁾										•								
Real-time clock									•									
Coprocessor (FPU)														•				
Primary IDE channel															•			
Secondary IDE channel																•		

Table 143: IRQ interrupt assignments PIC Mode

- 1) Advanced Configuration and Power Interface.

- ... Default setting
- ... Optional setting

1.11.4 Interrupt assignments in APIC mode

A total of 23 IRQs are available in the APIC mode (**A**dvanced **P**rogrammable **I**nterrupt **C**ontroller). The activation of this option is only effective if it takes place before the operating system is activated.

IRQ	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	NMI	NONE
System timer	•																									
Keyboard		•																								
IRQ cascade			•																							
COM1 (Serial port A)				○	•	○	○				○	○	○													
COM2 (Serial port B)				•	○	○	○				○	○	○													
ACPI ¹⁾									•																	
Real-time clock								•																		
Coprocessor (FPU)														•												
Primary IDE channel															•											
Secondary IDE channel																•										
PIRQ A ²⁾																	•									
PIRQ B ³⁾																		•								
PIRQ C ⁴⁾																			•							
PIRQ D ⁵⁾																				•						
PIRQ E ⁶⁾																					•					
PIRQ F ⁷⁾																						•				
PIRQ G ⁸⁾																							•			
PIRQ H ⁹⁾																								•		

Table 144: IRQ interrupt assignments in APIC mode

- 1) Advanced Configuration and Power Interface.
- 2) PIRQ A: for IF board; GMA500 graphics controller, LPC, root port 1, Ethernet controller, USB client
- 3) PIRQ B: for IF board; root port 2
- 4) PIRQ C: for IF board
- 5) PIRQ D: for IF board; HDA audio
- 6) PIRQ E: UHCI host controller 0, SDIO 0 controller
- 7) PIRQ F: UHCI host controller 1, SDIO 1 controller
- 8) PIRQ G: UHCI host controller 2, SDIO 2 controller
- 9) PIRQ H: EHCI host controller

- ... Standard setting
- ... Optional setting

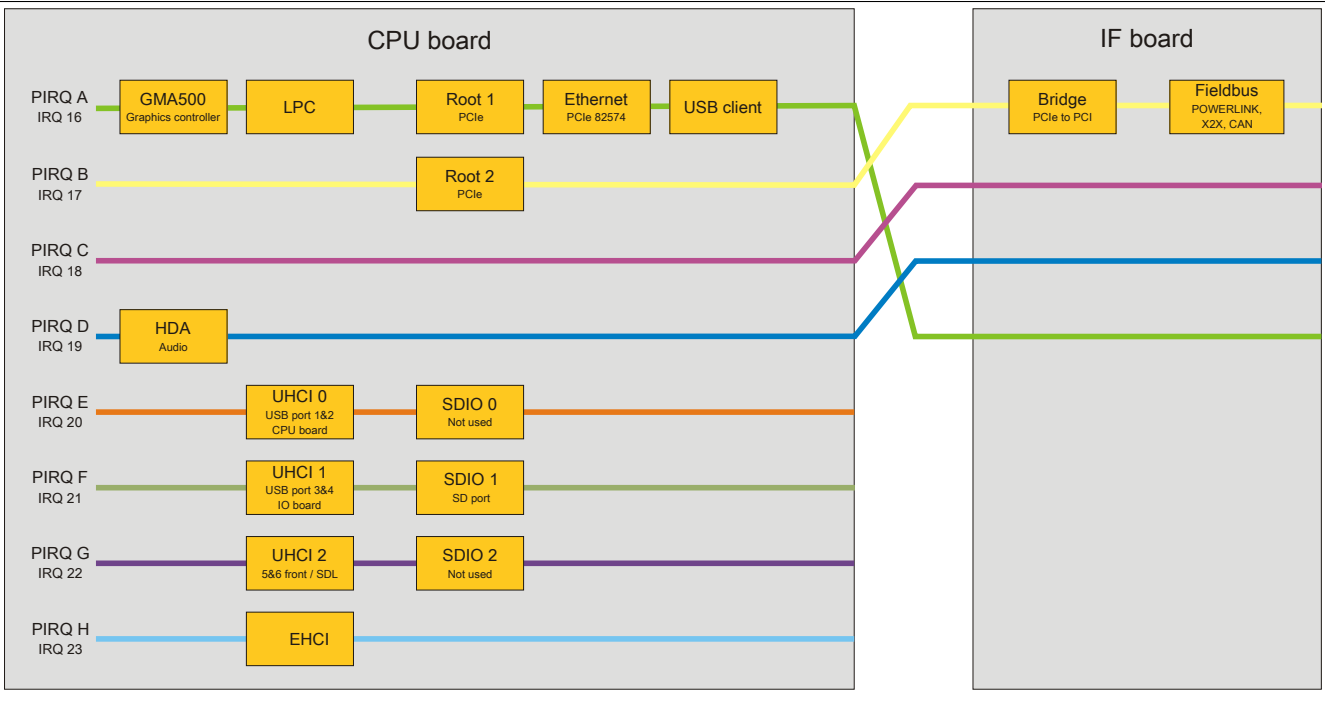


Image 72: Interrupt routing with activated APIC -BIOS version N0.15 and higher

2 Upgrade information

Warning!

The BIOS and firmware on B&R devices must be kept up to date. New versions can be downloaded from the B&R website (www.br-automation.com)

2.1 BIOS upgrade

An upgrade might be necessary for the following reason:

- To update implemented functions or to add newly implemented functions or components to the BIOS setup (information about changes can be found in the Readme files of the BIOS upgrade).

2.1.1 What information do I need?

Information:

Individually saved BIOS settings are deleted when upgrading the BIOS.

Before you begin the upgrade, it helps to determine the various software versions.

Which BIOS version and firmware are already installed on the device?

This information can be found on the following BIOS setup page:

- After switching on the device, you can get to the BIOS Setup by pressing "F2".
- The current BIOS and MTCX version can be viewed in the BIOS main menu under "OEM Features".

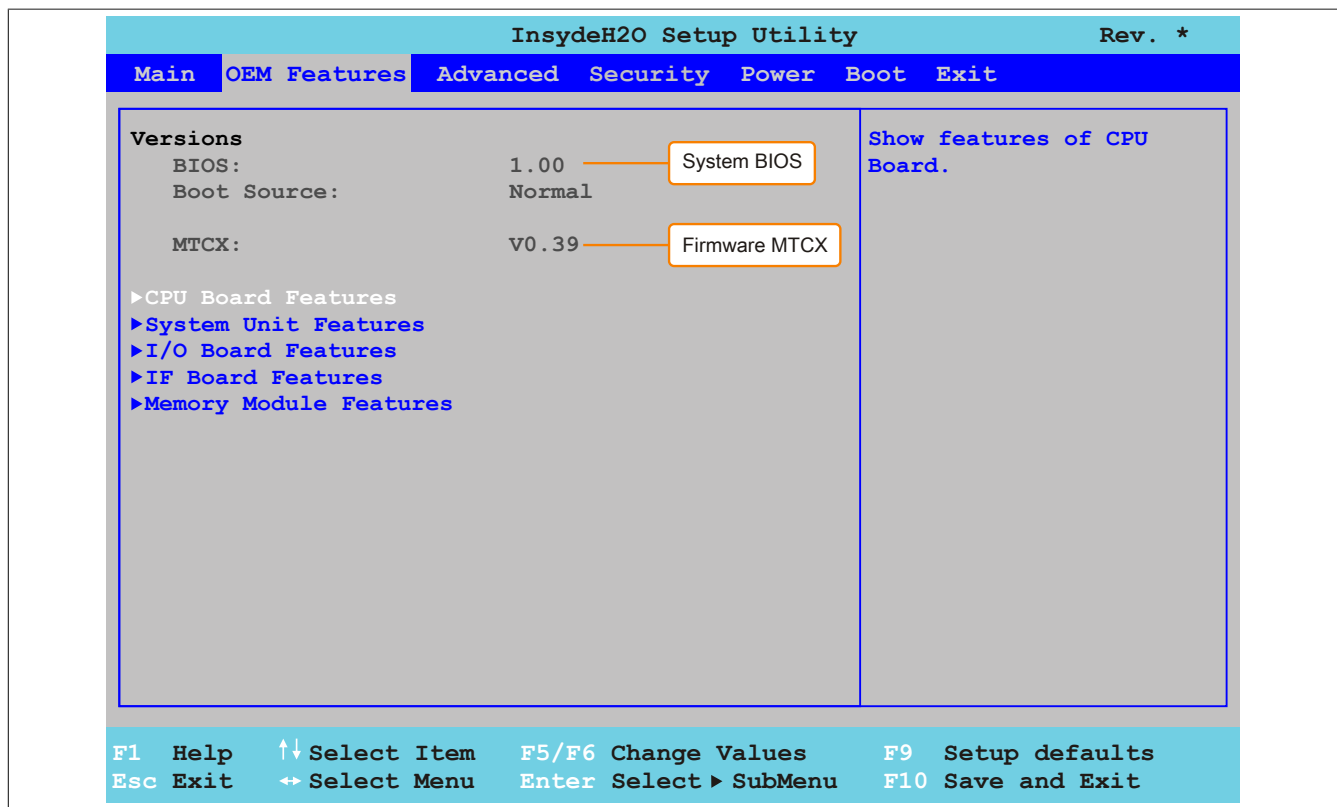


Image 73: BIOS and MTCX software versions

Information about the BIOS and Firmware versions can also be found in the Control Center (Start->Control Panel->Control Center->Versions).

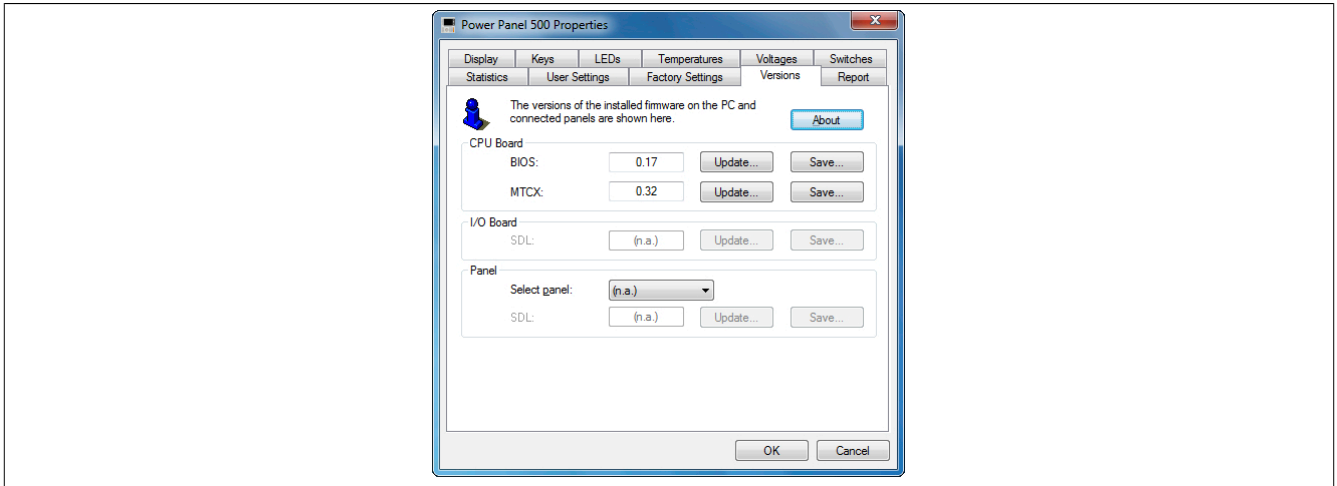


Image 74: BIOS and MTCX software versions - Control Center

2.1.2 Using the Control Center

1. Download the zip file from the B&R homepage (www.br-automation.com).
2. Go to Control Panel and **open the Control Center**.
3. Open the **Versions tab**.
4. Go to **CPU board**, BIOS **and** click on **update**. The dialog 'Open' is opened.
5. Go to **file name** and enter the name of the BIOS file or select a file.
6. Click **on open**. The dialog 'Open' is opened.

The transfer can be canceled by clicking on **Cancel** in the Download dialog box. Cancel is disabled when the flash memory is being written to.

Deleting the data in flash memory can take several seconds depending on the memory block being used. The progress indicator is not updated during this time.

Information:

The system must be restarted for the BIOS to take effect and for the updated version to be displayed. The user is prompted to restart the system when closing the Control Center.

Information:

For more information about saving and updating the BIOS, please refer to the help files for the Control Center.

2.2 Firmware upgrade

Current "PP500/APC510/APC511 Firmware Upgrade" software can be downloaded directly from the service portal on the B&R website (www.br-automation.com).

2.2.1 Procedure

1. Download the zip file from the B&R website (www.br-automation.com).
2. Open the **Control Center** in the Control Panel.
3. Then select the **Versions** tab.
4. Under **CPU Board** click on **Update** for **MTCX**. This brings up the "Open" dialog box.
5. Enter the **file name** of the firmware file or select a file.
6. Click on **Open**. This brings up the "Open" dialog box.

The transfer can be aborted by clicking on **Cancel** in the Download dialog box. **Cancel** is disabled when the flash memory is being written to.

Warning!

Do not press any panel keys while the firmware is being transferred! This can disrupt the procedure.

Deleting the data in flash memory can take several seconds depending on the memory block being used. The progress indicator is not updated during this time.

Information:

Power to the PC must be shut off and turned back on for the new firmware to become effective and for the updated version to be displayed. The user is prompted to do this when closing the Control Center.

Information:

For more information about saving and updating the firmware, please refer to the help files for the Control Center.

2.3 Upgrade problems

Potential upgrade problems are listed in the Liesmich.txt or Readme.txt files on the upgrade disks.

3 Windows XP Professional

3.1 Order data

Model number	Short description	Figure
	Windows XP Professional	
5SWWXP.0600-ENG	Microsoft OEM Windows XP Professional Service Pack 3, CD, English. Only available with a B&R device.	
5SWWXP.0600-GER	Microsoft OEM Windows XP Professional Service Pack 3, CD, German. Only available with a device.	
5SWWXP.0600-MUL	Microsoft OEM Windows XP Professional Service Pack 3, CD, multilanguage. Only available with a B&R device.	
	Mandatory accessories	
	CompactFlash	
5CFCRD.016G-06	CompactFlash 16 GByte B&R	
5CFCRD.4096-03	CompactFlash 4 GB Western Digital	
5CFCRD.4096-06	CompactFlash 4 GByte B&R	
5CFCRD.8192-03	CompactFlash 8 GB Western Digital	
5CFCRD.8192-06	CompactFlash 8 GByte B&R	

Table 145: 5SWWXP.0600-ENG, 5SWWXP.0600-GER, 5SWWXP.0600-MUL - Order data

3.2 Overview

Model number	Type	Target system	CPU board	Preinstalled	Memory required on CF/HDD	Minimum amount of RAM
5SWWXP.0600-ENG	WinXP Pro SP3 CD	APC510 APC511 APC620 APC810 APC820 PPC700 PPC725 PPC800 PP500		Optional	≤ 2.1 GB	128 MB
5SWWXP.0600-GER	WinXP Pro SP3 CD	APC510 APC511 APC620 APC810 APC820 PPC700 PPC725 PPC800 PP500		Optional	≤ 2.1 GB	128 MB
5SWWXP.0600-MUL	WinXP Pro SP3 CD	APC510 APC511 APC620 APC810 APC820 PPC700 PPC725 PPC800 PP500		Optional	≤ 2.1 GB	128 MB

3.3 Installation

Upon request, B&R can pre-install the required Windows XP Professional version on the desired mass memory (e.g. CompactFlash card, etc.). All of the drivers required for operation (graphics, network, etc.) are also installed when doing so.

3.4 Drivers

The latest drivers for all released operating systems can be found in the Download area of the B&R website (www.br-automation.com).

Information:

Required drivers can only be downloaded from the B&R homepage, not from manufacturers' pages.

4 Windows 7

4.1 General information

Windows® 7 offers a wealth of innovative features and performance improvements. Faster switching to power saving mode, quicker restores, less memory usage and high-speed detection of USB devices are just a few of the advantages provided by Windows® 7. Both German and English are available in Windows® 7 Professional, while Windows® 7 Ultimate supports up to 35 different languages. Product activation is not necessary on B&R PCs, which is a huge advantage for simple logistical procedures relating to machine automation.

All of the Windows® operating systems offered by B&R are from the Microsoft Embedded division. This guarantees much longer availability, especially when compared to products offered on the consumer market.

4.2 Order data

Model number	Short description	Figure
	Windows 7	
5SWWI7.0100-ENG	Microsoft OEM Windows 7 Professional 32-bit, DVD, English. Only available with a new device.	
5SWWI7.0100-GER	Microsoft OEM Windows 7 Professional 32-bit, DVD, German. Only available with a new device.	
5SWWI7.0300-MUL	Microsoft OEM Windows 7 Ultimate 32-bit, DVD, multilanguage. Only available with a new device.	

Table 146: 5SWWI7.0100-ENG, 5SWWI7.0100-GER, 5SWWI7.0300-MUL - Order data

4.3 Overview

Model number	Edition	Target system	Chipset	Architectures	Language	Preinstalled	Minimum size of CF/HDD	Minimum amount of RAM
5SWWI7.0100-ENG	Professional	APC510 APC511 APC810 PPC800 PP500	945GME GM45 US15W	32-bit	English	Optional	16 GB	1 GB
5SWWI7.0100-GER	Professional	APC510 APC511 APC810 PPC800 PP500	945GME GM45 US15W	32-bit	German	Optional	16 GB	1 GB
5SWWI7.0300-MUL	Ultimate	APC510 APC511 APC810 PPC800 PP500	945GME GM45 US15W	32-bit	Multilanguage	Optional	16 GB	1 GB

4.4 Installation

Upon request, B&R can pre-install the required Windows 7 version on the desired mass memory (e.g. Compact-Flash card, etc.). All of the drivers required for operation (graphics, network, etc.) are also installed when doing so.

4.5 Drivers

The latest drivers for all released operating systems can be found in the Download area of the B&R website (www.br-automation.com).

Information:

Required drivers can only be downloaded from the B&R homepage, not from manufacturers' pages.

4.6 Special considerations, limitations

- Windows 7 does not contain a Beep.sys file, which means that audible signal is no longer played (i.e. when touching a key or button).
- Windows 7 system classification is not currently supported (does not apply to PP500, APC510 and APC511 devices).

5 Windows Embedded Standard 2009

5.1 General information

Windows® Embedded Standard 2009 is the modular version of Windows® XP Professional. It's used if XP applications require a smaller operating system size to run. Together with CompactFlash memory, Windows® Embedded Standard 2009 makes it possible to use the Microsoft desktop operating system in rough environmental conditions. In addition to the familiar features included in Windows® XP Professional, Windows® Embedded Standard 2009 has been improved with regard to dependability by adding a write filter for individual memory partitions. By protecting individual partitions such as the boot partition, the PC system can be started without any problems, even after an unexpected power failure. B&R offers complete images for industrial PCs, Power Panel and Mobile Panel devices to make the transition to Windows® Embedded Standard 2009 as easy as possible. In addition to Windows® Embedded Standard 2009, the standard Windows® XP Professional operating system is also available in English, German and multilingual.

Windows® Embedded Standard 2009 is based on the same binary files as Windows® XP Professional with Service Pack 3 and is optimally tailored to the hardware being used. In other words, only the functions and modules required by the respective device are included. Windows® Embedded Standard 2009 is also based on the same reliable code as Windows® XP Professional with SP3. It provides industry with leading reliability, improvements in security and performance, and the latest technology for Web browsing and extensive device support.

5.2 Order data

Model number	Short description	Figure
5SWWXP.0738-ENG	Microsoft OEM Windows Embedded Standard 2009, English; for APC511; please order CompactFlash separately (minimum 1 GB).	

Table 147: 5SWWXP.0738-ENG - Order data

5.3 Overview

Model number	Type	Target system	Chipset	Language	Preinstalled	Minimum size of CF/HDD	Minimum amount of RAM
5SWWXP.0738-ENG	WES2009 APC511 US15W	APC511	US15W	English	Yes	1 GB	256 MB

5.4 Features with WES2009 (Windows Embedded Standard 2009)

The feature list shows the most important device functions in Windows Embedded Standard 2009.

Function	Present
Enhanced Write Filter (EWF)	✓
File Based Write Filter (FBWF)	✓
Page file	Configurable
Administrator account	✓
User account	Configurable
Explorer shell	✓
Registry filter	✓
Internet Explorer 8.0	✓
Internet information service (IIS)	-
Terminal service	✓
Windows Firewall	✓
MSN Explorer	-
Outlook Express	-
Administrative Tools	✓
Remote Desktop	✓
Remote Assistance	-
.NET Framework	-
ASP.NET	-
OpenGL support	✓
Local Network Bridge	✓
Codepages/User Locale/Keyboard	✓
Disk Management Service	✓
Windows Installer Service	✓
Class Installer	✓
CoDevice Installer	✓

Table 148: Device functions in Windows Embedded Standard 2009

Function	Present
Media Player 6.4	✓
DirectX 9.0c	✓
Accessories	✓
Number of fonts	89

Table 148: Device functions in Windows Embedded Standard 2009

5.5 Installation

Upon request, Windows Embedded Standard 2009 can be preinstalled at B&R Austria on a suitable CompactFlash card (min. 1GB). The system is then automatically configured when it is switched on for the first time. This procedure takes approximately 10 minutes, and the device will be rebooted a number of times.

5.6 Drivers

All drivers required for operation are preinstalled on the operating system. If an older version of the driver is installed, the latest version can be downloaded from the B&R website (www.br-automation.com) and installed. Be sure to check whether the "Enhanced Write Filter (EWF)" is enabled.

5.6.1 Touch screen drivers

The touch screen driver is installed automatically during Windows Embedded Standard 2009 setup. If an Automation Panel 800/900 is connected later on, the additional touch screen interface needs to be selected in the touch screen settings in the Windows Control Panel. When doing so, be sure that the Enhanced Write Filter (EWF) or File Based Write Filter (FBWF) are not enabled.

Information:

Required drivers can only be downloaded from the B&R homepage, not from manufacturers' pages.

6 Windows Embedded Standard 7

6.1 General information

The successor to Windows® XP Embedded has been given the name Windows® Embedded Standard 7. As with previous versions, this embedded operating system offers full system support of Automation PC 810, Panel PC 800 and Power Panel 500 devices. In addition to brand new features that are also included in Windows® 7 Professional, Windows® Embedded Standard 7 includes components such as Enhanced Write Filter, File-Based Write Filter, Registry Filter and USB Boot. Windows® Embedded Standard 7 is available in two different versions. The main difference between them has to do with multilingual support. Windows® Embedded Standard 7 is only available in a single language, whereas Windows® Embedded Standard 7 Premium supports the installation of several languages simultaneously.

With Windows® Embedded Standard 7, Microsoft has also made substantial improvements in the area of security. The AppLocker program, available in the premium version, can prevent the execution of unknown or potentially unwanted applications that should be installed over a network or from drives that are directly connected. A tiered approach allows the differentiation between scripts (.ps1, .bat, .cmd, .vbs and .js), installer files (.msi, .msp) and libraries (.dll, .ocx). AppLocker can also be configured to record undesired activity and display it in the Event Viewer. Windows® Embedded Standard 7 is available in both 32-bit and 64-bit versions. This also provides support for challenging 64-bit applications.

6.2 Order data

Model number	Short description	Figure
5SWWI7.0538-ENG	Microsoft OEM Windows Embedded Standard 7 32-bit, English; for APC511; please order CompactFlash separately (minimum 8 GB).	 Windows Embedded Standard 7
5SWWI7.0738-MUL	Microsoft OEM Windows Embedded Standard 7 Premium 32-bit, multilanguage; for APC511; please order CompactFlash separately (minimum 8 GB).	

Table 149: 5SWWI7.0538-ENG, 5SWWI7.0738-MUL - Order data

6.3 Overview

Model number	Edition	Target sys-tem	Chipset	Architectures	Language	Preinstalled	Minimum size of CF/HDD	Minimum amount of RAM
5SWWI7.0538-ENG	Embedded	APC511	US15W	32-bit	English	Optional	8 GB	1 GB
5SWWI7.0738-MUL	Premium	APC511	US15W	32-bit	Multilanguage	Optional	8 GB	1 GB

6.4 Features with WES7 (Windows Embedded Standard 7)

The feature list displays the essential device functions and differences in Windows Embedded Standard 7 and Windows Embedded Standard 7 Premium.

Function	Windows Embedded Standard 7	Windows Embedded Standard 7 Premium
Enhanced Write Filter (EWF)	✓	✓
File Based Write Filter (FBWF)	✓	✓
Administrator account	✓	✓
User account	Configurable	Configurable
Windows Explorer Shell	✓	✓
Registry filter	✓	✓
Internet Explorer 8.0	✓	✓
Internet Information Service (IIS) 7.0	✓	✓
AntiMalware (Windows Defender)	-	✓
Add-ons (Snipping tool, Sticky Notes)	-	✓
Windows Firewall	✓	✓
.NET Framework 3.5	✓	✓
Remote Desktop Protocol 7.0	✓	✓
File Compression Utility	✓	✓
Windows Installer Service	✓	✓
Windows XP Mode	-	-
Media Player 12	✓	✓
DirectX	✓	✓
Multilingual User Interface Packs in the same image	-	✓
International Components and Language Services	✓	✓
Language Pack Setup	✓	✓
Windows Update	Configurable	Configurable

Table 150: Device functions in Windows Embedded Standard 7

Function	Windows Embedded Standard 7	Windows Embedded Standard 7 Premium
Windows PowerShell 2.0	✓	✓
BitLocker	-	✓
AppLocker	-	✓
Tablet PC Support	-	✓
Windows Touch	-	✓
Boot from USB Stick	✓	✓
Accessories	✓	✓
Page file	Configurable	Configurable
Number of fonts	134	134

Table 150: Device functions in Windows Embedded Standard 7

6.5 Installation

Upon request, Windows Embedded Standard 7 can be preinstalled at B&R Austria on a suitable CompactFlash card (min. 8 GB). The system is then automatically configured when it is switched on for the first time. This procedure takes approximately 30 minutes, and the device will be rebooted a number of times.

6.6 Drivers

All drivers required for operation are preinstalled on the operating system. If an older version of the driver is installed, the latest version can be downloaded from the B&R website (www.br-automation.com) and installed. Be sure to check whether the Enhanced Write Filter (EWF) is enabled.

6.6.1 Touch screen drivers

A touch screen driver will be automatically installed if a touch controller is detected during the Windows Embedded Standard 7 setup. If a touch controller is not detected during Windows Embedded Standard 7 setup, or if an Automation Panel 800/900 is connected later on, the touch screen driver needs to be installed or the additional touch screen interface needs to be selected in the touch screen settings in the Windows Control Panel. The driver is available in the Download area of the B&R website (www.br-automation.com). When doing so, be sure that the Enhanced Write Filter (EWF) or File Based Write Filter (FBWF) are not enabled.

Information:

Required drivers can only be downloaded from the B&R homepage, not from manufacturers' pages.

7 Windows CE

7.1 General information

B&R Windows CE is an operating system which is optimally tailored to B&R's devices. It includes only the functions and modules which are required by each device. This makes this operating system extremely robust and stable. A further advantage of B&R Windows CE compared to other operating systems are the low licensing costs.

7.2 Order data

Model number	Short description	Figure
5SWWCE.0838-ENG	Microsoft OEM Windows CE 6.0 Professional, English; for APC511; please order CompactFlash separately (minimum 128 MB).	

Table 151: 5SWWCE.0838-ENG - Order data

7.3 Overview

Model number	Type	Target system	Chipset	Language	Preinstalled	Minimum size of CF/HDD	Minimum amount of RAM
5SWWCE.0838-ENG	WinCE6.0 Pro APC511 US15W	APC511	US15W	English	Yes	128 MB	128 MB

7.4 Windows CE 6.0 features

Detailed information about Windows CE for B&R devices is available in the Downloads area of the B&R website (www.br-automation.com).

Features	Windows CE 6.0
Supported screen resolutions	WVGA (TFT), VGA (TFT), SVGA (TFT), XGA (TFT)
Chipset	Intel US15W
Color depth	16-bit or 65,536 colors ¹⁾
Graphics card driver	Intel(R) embedded graphics driver
Main memory	Automatic detection and use of up to 512 MB RAM
Boot time / Startup time	Approx. 25 seconds
Screen rotation	not supported
Web browser	Internet Explorer
.NET	Compact Framework 3.5
Image size	Approx. 40 MB ²⁾ , uncompressed
Custom keys	Supported
PVI	Supported
Automation Device Interface	Supported
Remote Desktop Protocol for thin clients	Supported
B&R VNC Viewer	Supported
B&R Task Manager	Supported
B&R Picture Viewer	Supported
Compatible with zenOn	Yes
Compatible with Wonderware	No
Serial interfaces for any use	2
DirectX	No
Audio ports	"Line OUT" and "Line IN" are supported. "MIC" is not supported

Table 152: Windows CE 6.0 features

1) The color depth depends on the display used.

2) Use the function "Compress Windows CE Image" in the B&R Embedded OS Installer to reduce the image size.

7.5 Requirements

The device must fulfill the following criteria to be able run the Windows CE operating system.

- At least 128 MB main memory
- At least one 128 MB CompactFlash card (size should be specified when ordered)

7.6 Installation

Windows CE is usually preinstalled at the B&R plant.

7.7 B&R Embedded OS Installer

The B&R Embedded OS Installer allows you to install existing B&R Windows CE images. The 4 files (NK.BIN, BLDR, LOGOXRES.BMP, and LOGOQVGA.BMP) must be provided from an already functioning B&R Windows CE installation.

The B&R Embedded OS Installer is available in the Downloads section of the B&R website (www.br-automation.com). Further information is available in the online help for the B&R Embedded OS Installer.

8 Automation Runtime

8.1 General information

A integral component of Automation Studio is the real-time operating system. This real-time operating system makes up the software kernel which allows applications to run on a target system.

- Guaranteed highest possible performance for the hardware being used
- Runs on all B&R target systems
- Makes the application hardware-independent
- Applications can be easily ported between B&R target systems
- Cyclic runtime system guarantees deterministic behavior
- Multitasking according to deterministic runtime rules
- Configure priorities, time classes, and jitter tolerance
- Up to eight different time classes with any subprograms
- Guaranteed response to time violations and exceeding jitter tolerances
- Exception handling
- Configurable jitter tolerance in all task classes
- Supports all relevant programming language such as IEC 61131-3 and ANSI C
- Extensive function library conforming to IEC 61131-3 as well as the expanded Automation library
- Access to all networks and bus systems via function calls or the Automation Studio configuration

B&R Automation Runtime™ is fully embedded in the corresponding target system (this is the hardware where Automation Runtime™ is installed). It allows application programs to access I/O systems (e.g. via fieldbus) and other devices (interfaces, networks, etc.).

8.2 Order data

Model number	Short description	Figure
	Automation Runtime	
1A4600.10-5	B&R Automation Runtime ARwin, incl. License Label	
1A4601.06-5	B&R Automation Runtime ARemb, incl. License Label	
1A4601.06-T	B&R Automation Runtime ARemb Terminal, incl. License Label	

Table 153: 1A4600.10-5, 1A4601.06-5, 1A4601.06-T - Order data

8.3 Automation Runtime Windows (ARwin)

The system is supported by ARwin with an AS 3.0.90 / AR 4.00 upgrade.

8.4 Automation Runtime Embedded (ARemb)

The system is supported by ARemb with an AS 3.0.90 / AR 4.00 upgrade.

9 B&R Automation Device Interface (ADI) - Control Center

The ADI (Automation Device Interface) enables access to specific functions of B&R devices. Settings for this device can be read and edited using the B&R Control Center applet in the control panel.

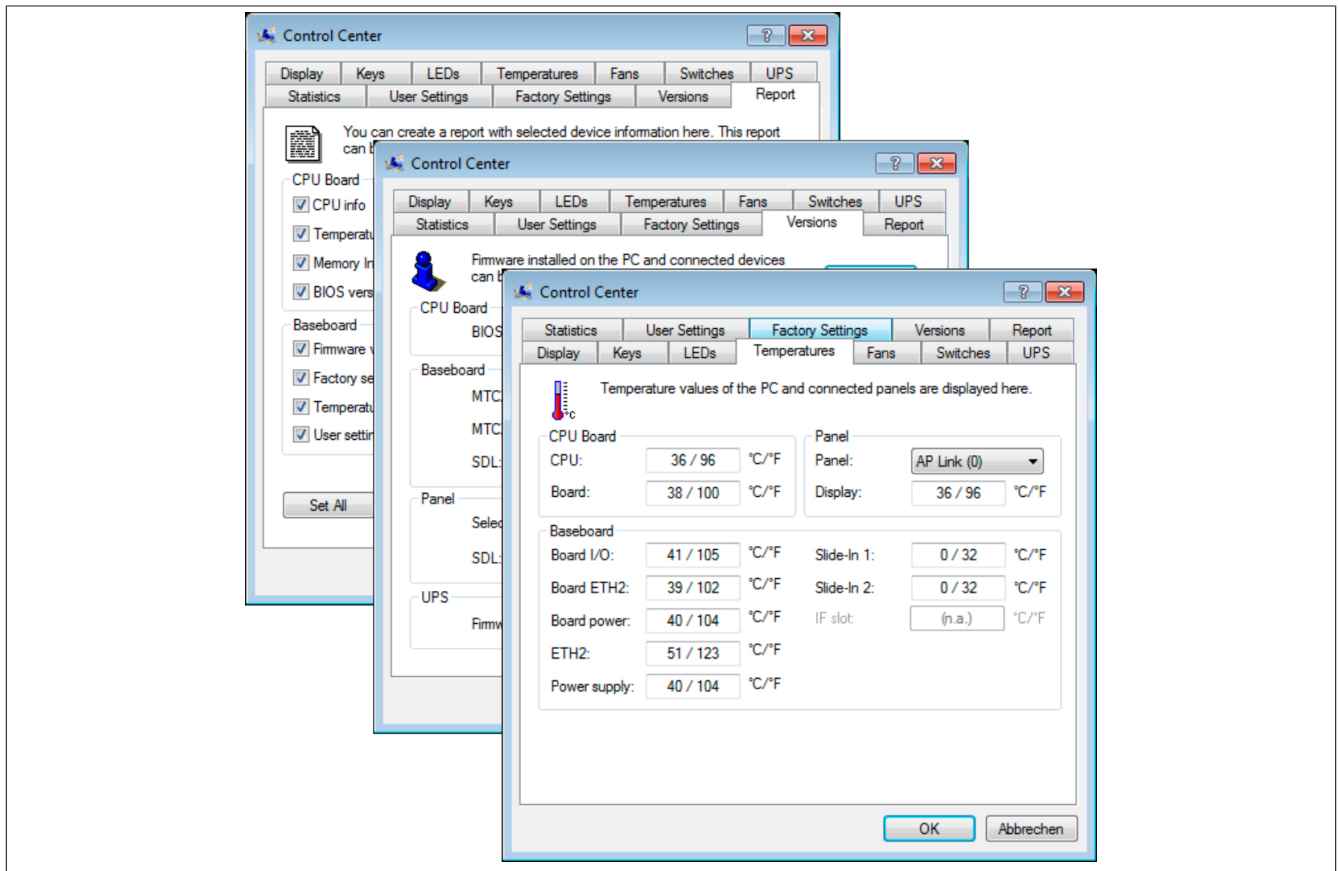


Image 75: ADI Control Center screenshots - Examples (symbol photo)

Information:

The displayed temperature and voltage values (e.g. CPU temperature, core voltage, battery voltage) on the corresponding ADI page represent uncalibrated information values. These cannot be used to draw any conclusions about any hardware alarms or error conditions. The hardware components used have automatic diagnostics functions that can be applied in the event of error.

9.1 Functions

Information:

The functions provided by the Automation Device Interface (ADI) - Control Center vary according to device series.

- Changing display-specific parameters
- Reading of device-specific keys
- Updating the key configuration
- Activation of device specific LEDs on a foil keypad
- Read or calibrate the entry devices (e.g. key switch, handwheel, joystick, potentiometer)
- Reading temperatures, fan speeds, statistical data, and switch settings
- Read the operating hours (power on hours)
- Reading user settings and factory settings
- Reading Software versions
- Updating and securing BIOS and firmware
- Creating reports about the current system (support assistance)
- Setting the SDL equalizer value for the SDL cable adjustment
- Changing the User serial ID

Supports following systems:

- Automation PC 510
- Automation PC 511
- Automation PC 620
- Automation PC 810
- Automation PC 820
- Panel PC 700
- Panel PC 725
- Panel PC 800
- Power Panel 100/200
- Power Panel 300/400
- Power Panel 500
- Mobile Panel 40/50
- Mobile Panel 100/200
- Connected Automation Panel 800
- Connected Automation Panel 900

9.2 Installation

A detailed description of the Control Center can be found in the integrated online help. The B&R Automation Device Interface (ADI) driver (also contains Control Center) can be downloaded for free from the download area on the B&R homepage (www.br-automation.com).

1. Download and unzip the ZIP archive
2. Close all applications
3. Run the Setup.exe file (e.g. double-click on it in Explorer).

Information:


The ADI driver is already included in the B&R images of embedded operating systems.

If a more current ADI driver version exists (see the B&R homepage download area), it can be installed later. A potentially activated "Enhanced Write Filter (EWF)" must be taken into consideration when installing.

10 B&R Automation Device Interface (ADI) Development Kit

This software can be used to activate functions in the B&R Automation Device Interface (ADI) from Windows applications, which were created using a development environment such as one of the following.

- Microsoft Visual C++ 6.0
- Microsoft Visual Basic 6.0
- Microsoft eMbedded Visual C++ 4.0
- Microsoft Visual Studio 2005 (or newer)

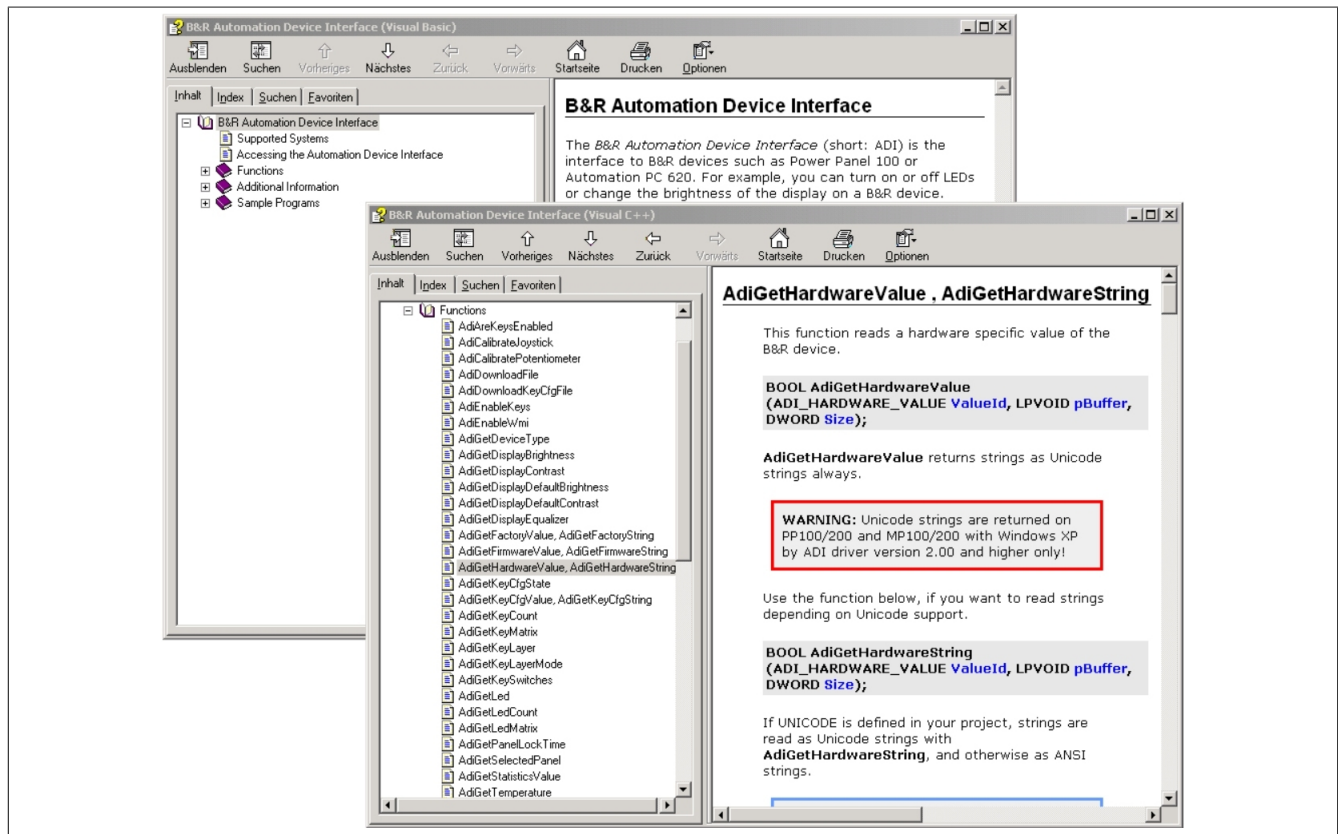

Features:

- One Microsoft Visual Basic module with declarations for the ADI functions
- Header files and import libraries for Microsoft Visual C++
- Help files for Visual Basic and Visual C++
- Sample projects for Visual Basic and Visual C++
- ADI DLL (for testing the applications, if no ADI drive is installed)

Supports following systems (Version 3.10 and higher):

- Automation PC 510
- Automation PC 511
- Automation PC 620
- Automation PC 810
- Automation PC 820
- Mobile Panel 40/50
- Mobile Panel 100/200
- Panel PC 300
- Panel PC 700
- Panel PC 800
- Power Panel 100/200
- Power Panel 300/400
- Power Panel 500


The ADI driver suitable for the device must be installed on the stated product series. The ADI driver is already included in the B&R images of embedded operating systems.

A detailed description of using the ADI functions can be found in the integrated online help.

The B&R Automation Device Interface (ADI) development kit can be downloaded for free from the download area on the B&R homepage (www.br-automation.com).

11 B&R Key Editor

On display units, it is often necessary to adjust the function keys and LEDs for the application software being used. The B&R Key Editor makes it quick and easy to adapt the application to a unique configuration.

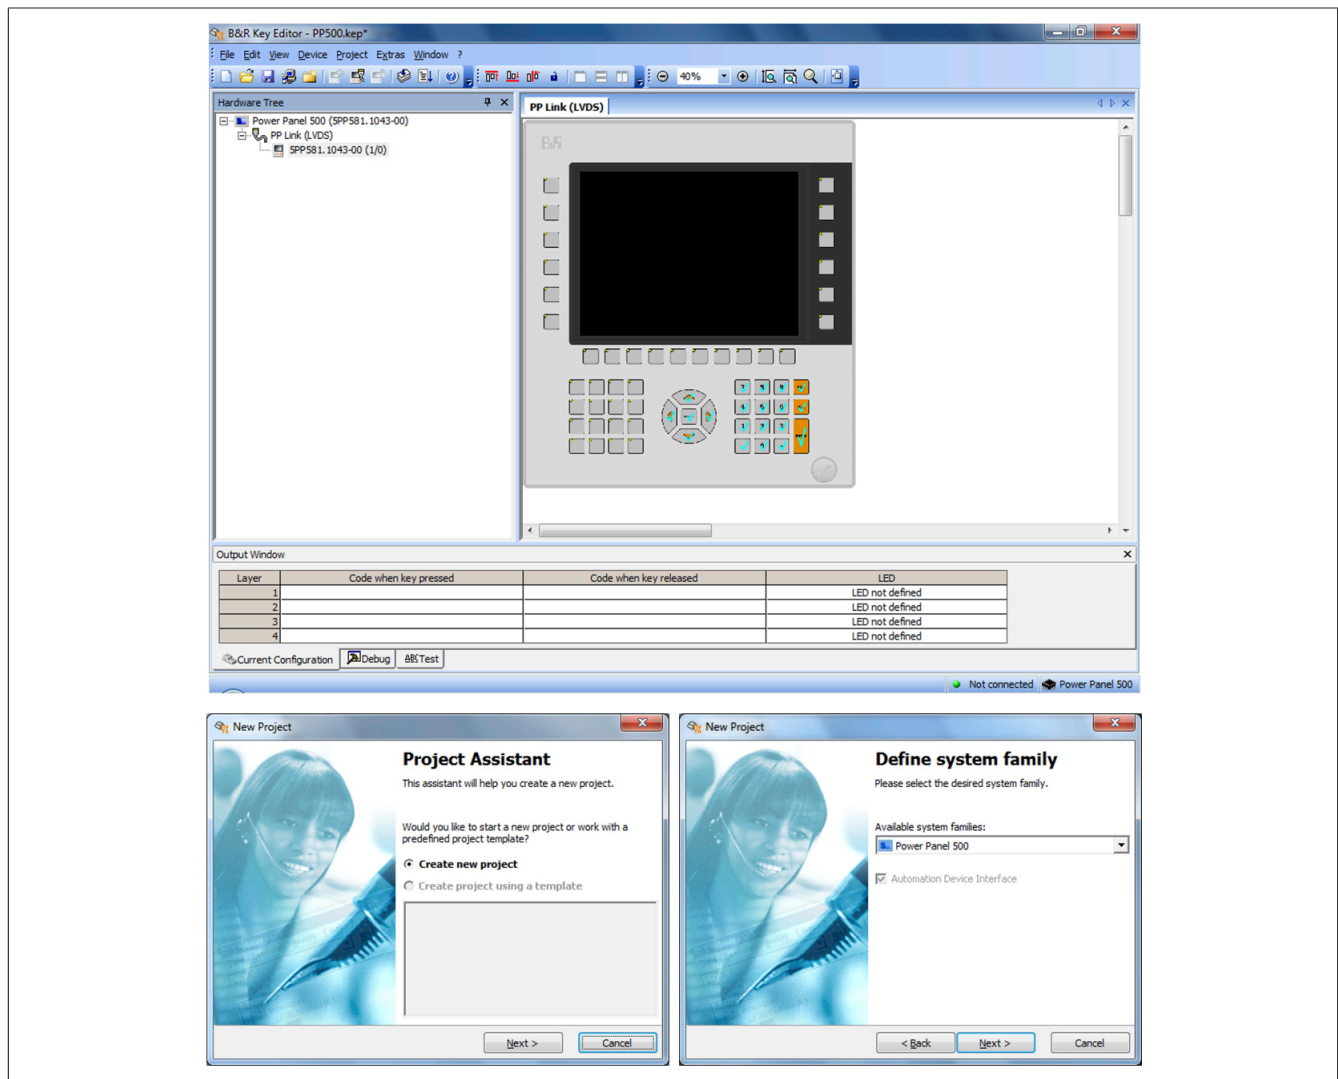

Features:

- Configuration of normal keys like on a keyboard (A, B, C, etc.)
- Keyboard shortcuts (CTRL+C, SHIFT+DEL, etc.) on one key
- Special key functions (change brightness, etc.)
- Assign functions to LEDs (HDD access, power, etc.)
- 4 assignments per key possible (using layer function)
- Configuration of panel locking time when multiple Automation Panel 900 devices are connected to Automation PC and Panel PC devices

Supports following systems (Version 3.20):

- Automation PC 510
- Automation PC 511
- Automation PC 620
- Automation PC 810
- Automation PC 820
- Automation Panel 800
- Automation Panel 900
- IPC2000, IPC2001, IPC2002
- IPC5000, IPC5600
- IPC5000C, IPC5600C

- Mobile Panel 40/50
- Mobile Panel 100/200
- Panel PC 300
- Panel PC 700
- Panel PC 800
- Power Panel 100/200
- Power Panel 300/400
- Power Panel 500

A detailed guide for configuring keys and LEDs can be found in the B&R Key Editor's online help. The B&R Key Editor can be downloaded for free from the download area on the B&R homepage (www.br-automation.com). Additionally, it can also be found on the B&R HMI Drivers & Utilities DVD (model number 5SWHMI.0000-00).

Chapter 5 • Accessories

The following accessories have passed B&R's functional testing and are approved for use with this device. However, it is important to observe any limitations that apply to the overall device when operated with different components. When operating the overall device, all of the specifications for the individual components must be adhered to.

All components listed in this manual have been subjected to extensive system and compatibility testing and are approved for use. B&R can make no guarantee regarding the functionality of non-approved accessories.

1 Replacement CMOS batteries

1.1 0AC201.91 / 4A0006.00-000

1.2 General information

The lithium battery is needed for buffering the BIOS CMOS data and real-time clock (RTC).

The battery is subject to wear and must be replaced when the battery power ("Bad" status) is insufficient.

1.3 Order data

Image not found for 0AC201.91-0AC201.9!	
Model number	Short description
	Batteries
0AC201.91	Lithium batteries 4 pcs., 3 V / 950 mAh button cell We hereby state that the lithium cells contained in this shipment qualify as "partly regulated". Handle with care. If the package is damaged, inspect cells, repack intact cells and protect cells against short circuits. For emergency information, call RENATA SA at + 41 61 319 28 27
4A0006.00-000	Lithium battery, 3 V / 950 mAh, button cell

Table 154: 0AC201.91, 4A0006.00-000 - Order data

1.4 Technical data

Warning!

Replace battery with Renata, type CR2477N only. Use of another battery may present a risk of fire or explosion.

Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.

Information:

The following characteristics, features and limit values only apply to this accessory and can deviate those specified for the entire device. For the entire device where this accessory is installed, refer to the data provided specifically for the entire device.

Product ID	0AC201.91	4A0006.00-000
General information		
Storage time	Max. 3 years at 30°C	
Electrical properties		
Capacity	950 mAh	
Self discharging	<1% per year (at 23°C)	
Voltage range	3V	
Environmental conditions		
Temperature		
Storage	-20 to 60°C	
Relative humidity		
Operation	0 to 95%	
Storage	0 to 95%	
Transport	0 to 95%	

Table 155: 0AC201.91, 4A0006.00-000 - Technical data

2 Supply voltage connectors

2.1 0TB103.9x

2.1.1 General information

The single row 3-pin terminal block TB103 is used to connect the supply voltage.

2.1.2 Order data

Model number	Short description	Figure
	Terminal blocks	
0TB103.9	Connector, 24 VDC, 3-pin female, screw clamps 3.31 mm ² , protected against vibration by the screw flange	
0TB103.91	Connector, 24 VDC, 3-pin female, cage clamps 3.31 mm ² , protected against vibration by the screw flange	

Table 156: 0TB103.9, 0TB103.91 - Order data

2.1.3 Technical data

Information:

The following characteristics, features and limit values only apply to this accessory and can deviate those specified for the entire device. For the entire device where this accessory is installed, refer to the data provided specifically for the entire device.

Product ID	0TB103.9	0TB103.91
Terminal block		
Note	Protected against vibration by the screw flange Rated values according to UL	
Number of pins	3 (female)	
Type of terminal	Screw clamps	Cage clamps ²⁾
Cable type	Copper wires only (no aluminum wires!)	
Distance between contacts	5.08 mm	
Connection cross section		
AWG wire	26 to 12 AWG	
Wire tip sleeves with plastic covering	0.20 to 1.50 mm ²	
Solid wire line	0.20 to 2.50 mm ²	
Fine wire line	0.20 to 1.50 mm ²	0.20 to 2.50 mm ²
With wire tip sleeves	0.20 to 1.50 mm ²	
Mounting torque	0.4 Nm	-
Electrical properties		
Rated voltage	300 V	
Rated current ¹⁾	10 A / contact	
Contact resistance	≤ 5 mΩ	

Table 157: 0TB103.9, 0TB103.91 - Technical data

- 1) Please take the respective limit data for the I/O modules into consideration!
- 2) The terminal block in the cage clamp design cannot be strung together.

3 Interface board connection

3.1 0TB1208.3100

3.1.1 General information

The 2-row 8-pin terminal block TB1208 is used to connect to various Power Panel 500 interface boards.

3.1.2 Order data

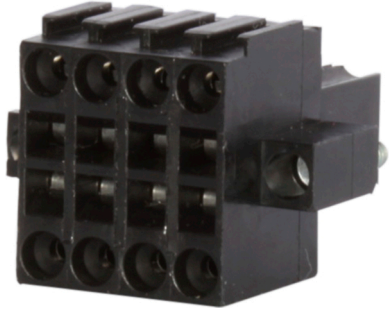
Model number	Short description	Figure
	Terminal blocks	
0TB1208.3100	Connector, 8-pin, cage clamp, 1 mm ² , protected against vibration by the screw flange.	

Table 158: 0TB1208.3100 - Order data

3.1.3 Technical data

Product ID	0TB1208.3100
Terminal block	
Note	Rated values according to UL
Number of pins	8 (female)
Type of terminal	Tension spring connection
Cable type	Copper wires only (no aluminum wires!)
Distance between contacts	3.5 mm
Connection cross section	
AWG wire	28 to 18 AWG
Wire tip sleeves with plastic covering	0.13 to 0.34 mm ²
Solid wire line	0.20 to 1 mm ²
Fine wire line	0.20 to 1 mm ²
With wire tip sleeves	0.13 to 0.34 mm ²
Electrical properties	
Rated voltage	300 V
Rated current ¹⁾	10 A / contact

Table 159: 0TB1208.3100 - Technical data

1) Please take the respective limit data for the I/O modules into consideration!

4 CompactFlash cards

4.1 General information

CompactFlash cards are easy-to-exchange storage media. Due to their robustness against environmental influences (e.g. temperature, shock, vibration, etc.), CompactFlash cards are ideal for use as storage media in industrial environments.

4.2 Basics

In order to be suited for use in industrial automation, CompactFlash cards must be highly reliable. To make this possible, the following is very important:

- Flash technology used
- Efficient algorithm for maximizing the lifespan
- Good mechanisms for detecting and fixing errors in the Flash memory

4.2.1 Flash technology

Currently, CompactFlash cards are available with MLC (Multi Level Cell) and SLC (Single Level Cell) flash blocks. SLC flash memory has a lifespan that is 10 times longer than MLC, which is why only CompactFlash cards with SLC flash blocks are suited for industrial applications.

4.2.2 Wear leveling

Wear leveling is an algorithm that can be used to maximize the lifespan of a CompactFlash card. There are three different algorithms:

- No Wear Leveling
- Dynamic Wear Leveling
- Static wear leveling

The basic idea behind wear leveling is to distribute data over a broad area of blocks or cells on the data carrier so that the same areas don't have to be cleared and reprogrammed over and over again.

No Wear Leveling

The earliest CompactFlash cards didn't have an algorithm for maximizing the lifespan. The lifespan of a CompactFlash card was determined only by the guaranteed lifespan of the flash blocks.

Dynamic Wear Leveling

Dynamic wear leveling makes it possible to utilize unused flash blocks when writing to a file.

If the data carrier is 80% full with files, then only 20% can be used for wear leveling.

The lifespan of the CompactFlash card is therefore dependent on the amount of unused flash blocks.

Static wear leveling

Static wear leveling also monitors which data is rarely changed. From time to time, the controller then moves this data to blocks that have already been frequently programmed in order to prevent further wear on those cells.

4.2.3 ECC error correction

Bit errors can be caused by inactivity or when a certain cell is operated. Error Correction Coding (ECC) implemented via hardware or software can detect and correct many errors of this type.

4.2.4 S.M.A.R.T. Support

Self-Monitoring, Analysis and Reporting Technology (S.M.A.R.T. for short) is an industry standard for mass memory that has been introduced to monitor important parameters and quickly detect imminent failures. Critical performance and calibration data is monitored and stored in order to help predict the probability of errors.

4.2.5 Maximum reliability

CompactFlash cards used by B&R use SLC flash blocks and static wear leveling together with a powerful ECC algorithm to provide maximum reliability.

4.3 5CFCRD.xxxx-06

4.3.1 General information

Information:

B&R CompactFlash cards 5CFCRD.xxxx-06 and CompactFlash cards from a different manufacturer cannot be used in the same system at the same time. Due to differences in technology (older vs. newer technologies), problems can occur during system startup that are caused by the different boot times.

see "Known problems / issues" on page 161

Information:

The 5CFCRD.xxxx-06 CompactFlash cards are supported on B&R devices with WinCE version ≥ 6.0 or higher.

4.3.2 Order data

Model number	Short description	Figure
	CompactFlash	
5CFCRD.0512-06	CompactFlash 512 MByte B&R	
5CFCRD.1024-06	CompactFlash 1 GByte B&R	
5CFCRD.2048-06	CompactFlash 2 GByte B&R	
5CFCRD.4096-06	CompactFlash 4 GByte B&R	
5CFCRD.8192-06	CompactFlash 8 GByte B&R	
5CFCRD.016G-06	CompactFlash 16 GByte B&R	

Table 160: 5CFCRD.0512-06, 5CFCRD.1024-06, 5CFCRD.2048-06, 5CFCRD.4096-06, 5CFCRD.8192-06, 5CFCRD.016G-06 - Order data

4.3.3 Technical data

Caution!

A sudden loss of power can cause data to be lost! In very rare cases, the mass memory may also become damaged.

To prevent damage and loss of data, it is recommended to use a UPS device.

Information:

The following characteristics, features and limit values only apply to this accessory and can deviate those specified for the entire device. For the entire device where this accessory is installed, refer to the data provided specifically for the entire device.

Product ID	5CFCRD.0512-06	5CFCRD.1024-06	5CFCRD.2048-06	5CFCRD.4096-06	5CFCRD.8192-06	5CFCRD.016G-06
General information						
Capacity	512 MB	1 GB	2 GB	4 GB	8 GB	16 GB
Data retention	10 years					
Data reliability	< 1 unrecoverable error in 10¹⁴ bit read accesses					
Lifetime monitoring	Yes					
MTBF	> 3,000,000 hours (at 25°C)					
Maintenance	None					
Supported operating modes	PIO mode 0-6, Multiword DMA mode 0-4, Ultra DMA mode 0-4					
Continuous reading						
Typical	33 MB/s					36 MB/s
Maximum	35 MB/s			34 MB/s		37 MB/s
Continuous writing						
Typical	15 MB/s			14 MB/s		28 MB/s
Maximum	18 MB/s			17 MB/s		30 MB/s

Table 161: 5CFCRD.0512-06, 5CFCRD.1024-06, 5CFCRD.2048-06, 5CFCRD.4096-06, 5CFCRD.8192-06, 5CFCRD.016G-06 - Technical data

Product ID	5CFCRD.0512-06	5CFCRD.1024-06	5CFCRD.2048-06	5CFCRD.4096-06	5CFCRD.8192-06	5CFCRD.016G-06
Certification types CE	Yes					
Endurance						
Guaranteed amount of data Guaranteed ¹⁾ Results in 5 years ¹⁾	50 TB 27.40 GB/day	100 TB 54.79 GB/day	200 TB 109.9 GB/day	400 TB 219.8 GB/day	800 TB 438.6 GB/day	1600 TB 876.72 GB/day
Clear/write cycles Guaranteed	100,000					
SLC-Flash	Yes					
Wear leveling	Static					
Error Correction Coding (ECC)	Yes					
S.M.A.R.T. Support	Yes					
Support						
Hardware	PP300/400, PP500, PPC300, PPC700, PPC725, PPC800, APC620, APC810, APC820					
Operating systems Windows 7 32-bit Windows 7 64-bit Windows Embedded Standard 7, 32-bit Windows Embedded Standard 7, 64-bit Windows XP Professional Windows XP Embedded Windows Embedded Standard 2009 Windows CE 6.0 Windows CE 5.0	No No No No No Yes No Yes Yes Yes ²⁾					
Software PVI Transfer Tool B&R Embedded OS Installer	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011) ≥ V3.10 No ≥ V3.20					
Environmental conditions						
Temperature Operation Storage Transport	0 to 70°C -65 to 150°C -65 to 150°C					
Relative humidity Operation Storage Transport	Max. 85% at 85°C Max. 85% at 85°C Max. 85% at 85°C					
Vibration Operation Storage Transport	20 g peak, 20 to 2000 Hz, 4 in each direction (JEDEC JESD22, method B103) 5.35 g RMS, 15 min per level (IEC 68-2-6) 20 g peak, 20 to 2000 Hz, 4 in each direction (JEDEC JESD22, method B103) 5.35 g RMS, 15 min per level (IEC 68-2-6) 20 g peak, 20 to 2000 Hz, 4 in each direction (JEDEC JESD22, method B103) 5.35 g RMS, 15 min per level (IEC 68-2-6)					
Shock Operation Storage Transport	1.5 kg peak, 0-5 ms 5x (JEDEC JESD22, B110 method) 30 g, 11 ms 1x (IEC 68-2-27) 1.5 kg peak, 0-5 ms 5x (JEDEC JESD22, B110 method) 30 g, 11 ms 1x (IEC 68-2-27) 1.5 kg peak, 0-5 ms 5x (JEDEC JESD22, B110 method) 30 g, 11 ms 1x (IEC 68-2-27)					
Altitude Operation	Max. 4.572 m					
Mechanical characteristics						
Dimensions Width Length Height	42.8 ± 0.10 mm 36.4 ± 0.15 mm 3.3 ± 0.10 mm					
Weight	10 g					

Table 161: 5CFCRD.0512-06, 5CFCRD.1024-06, 5CFCRD.2048-06,
5CFCRD.4096-06, 5CFCRD.8192-06, 5CFCRD.016G-06 - Technical data

- 1) Endurance of B&R CFs (with linear written block size ≥ 128 kB)
2) Not supported by B&R Embedded OS installer.

4.3.4 Temperature humidity diagram

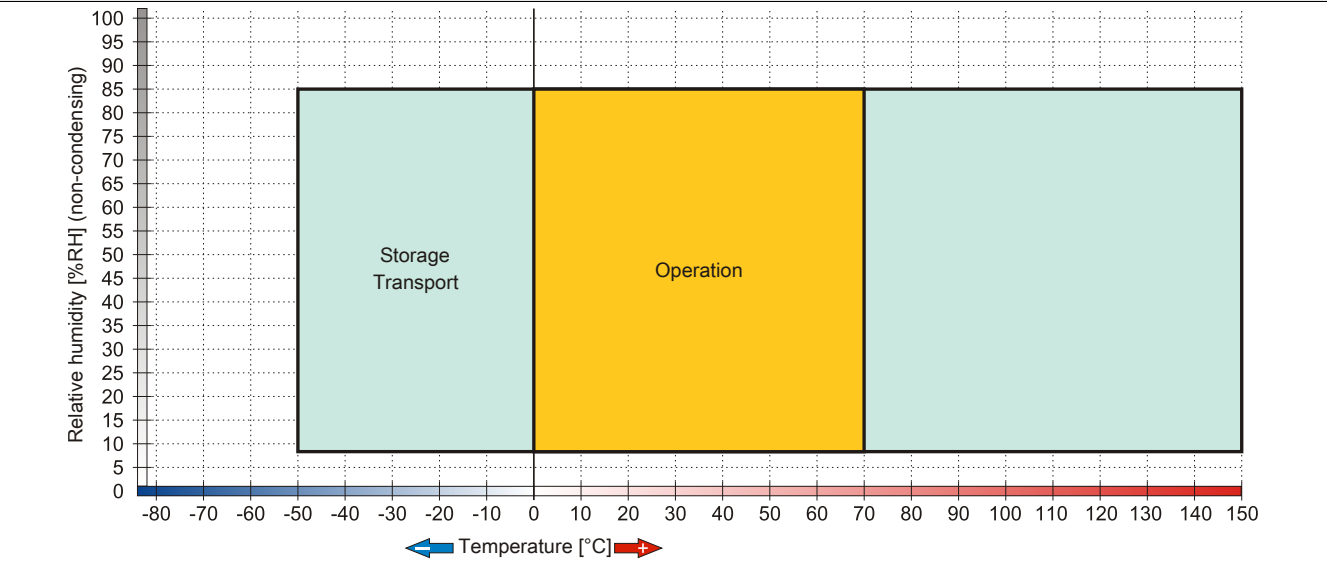


Image 76: 5CFCRD.xxxx-06 - Temperature humidity diagram for CompactFlash cards

4.3.5 Dimensions

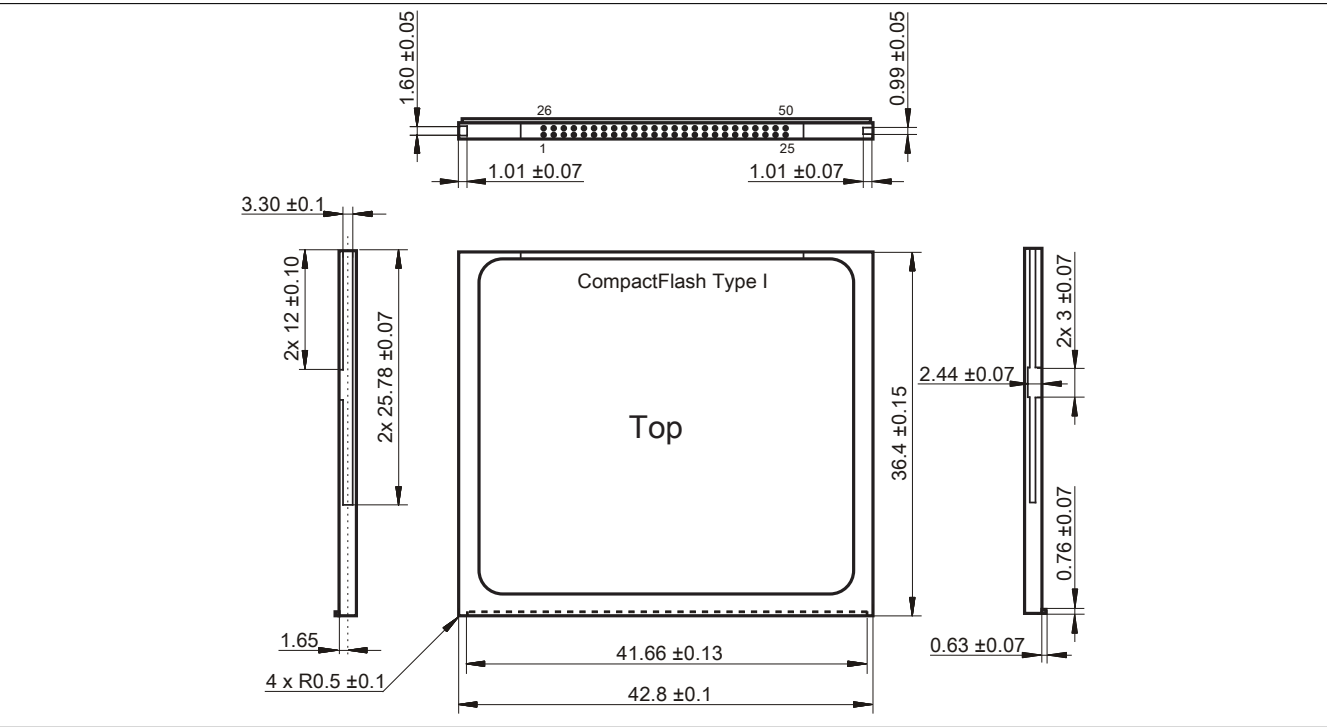


Image 77: Dimensions - CompactFlash card Type I

4.3.6 Benchmark

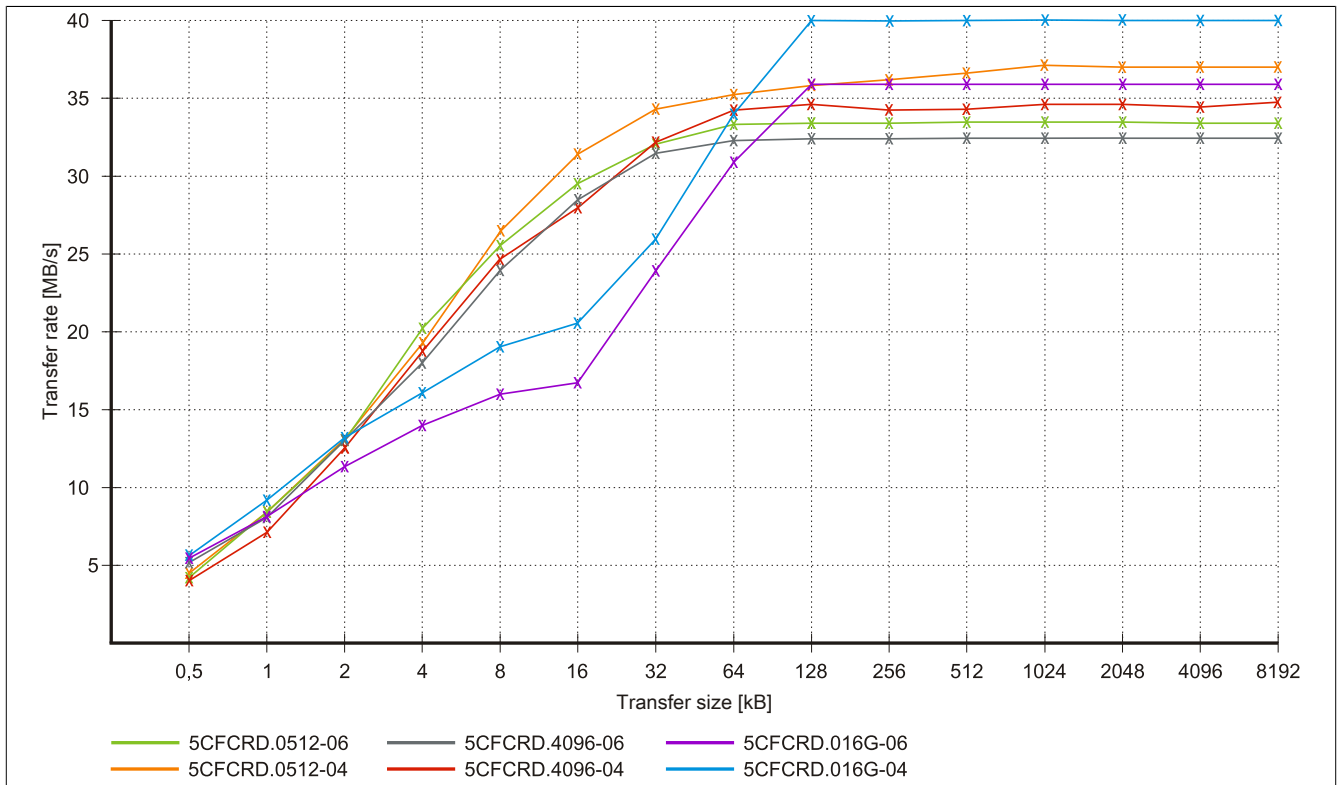


Image 78: ATTO Disk Benchmark v2.34 comparison when reading - 5CFCRD.xxxx-04 with 5CFCRD.xxxx-06

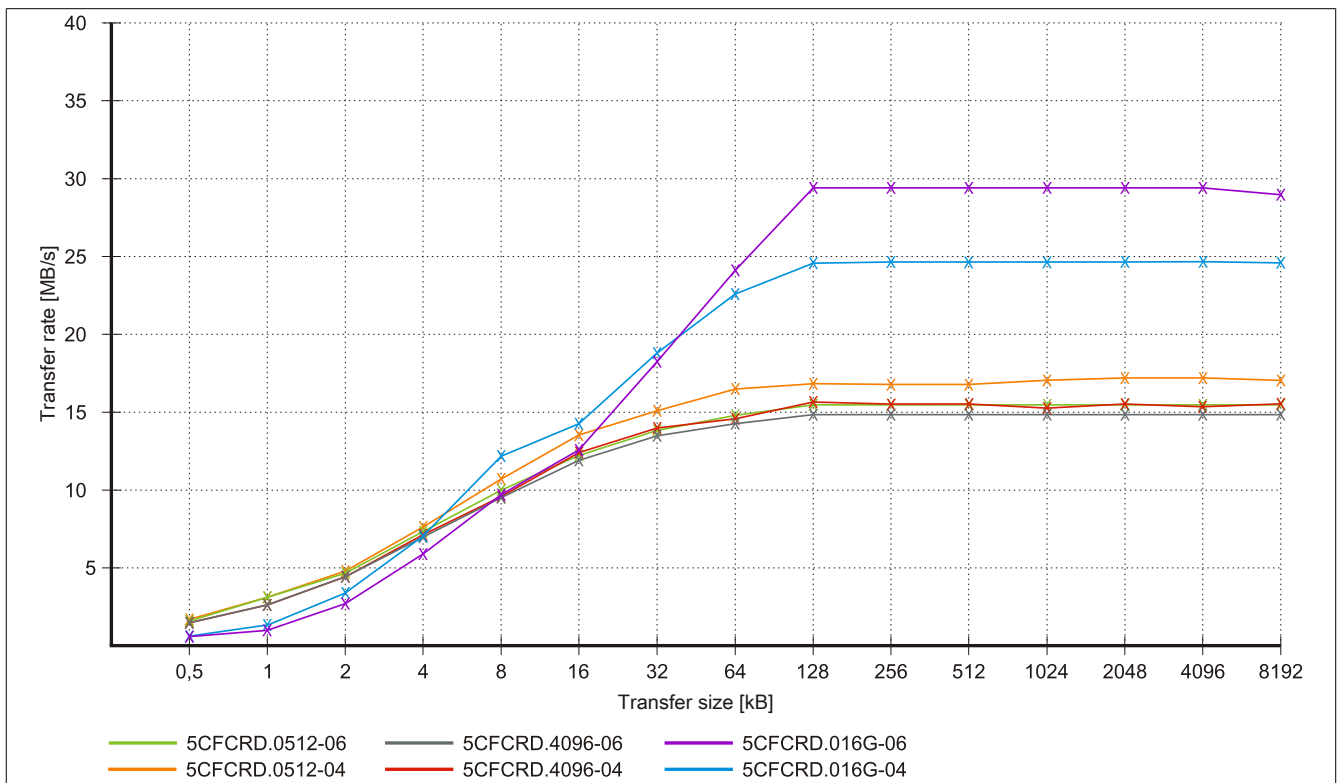


Image 79: ATTO Disk Benchmark v2.34 comparison when writing - 5CFCRD.xxxx-04 with 5CFCRD.xxxx-06

4.4 5CFCRD.xxxx-04

4.4.1 General information

Information:

B&R CompactFlash cards 5CFCRD.xxxx-04 and CompactFlash cards from a different manufacturer cannot be used in the same system at the same time. Due to differences in technology (older vs. newer technologies), problems can occur during system startup that are caused by the different boot times.

see "Known problems / issues" on page 161

Information:

The 5CFCRD.xxxx-04 CompactFlash cards are supported on B&R devices with WinCE version ≥ 6.0 or higher.

4.4.2 Order data

Image not found for 5CFCRD.0512-04-5CFCRD.1024-04-5CFCRD.2048-04-5CFCRD.4096-04-5CFCRD.8192-04-5CFCRD.016G-04!	
Model number	Short description
5CFCRD.0512-04	CompactFlash 512 MByte B&R
5CFCRD.1024-04	CompactFlash 1 GByte B&R
5CFCRD.2048-04	CompactFlash 2 GByte B&R
5CFCRD.4096-04	CompactFlash 4 GByte B&R
5CFCRD.8192-04	CompactFlash 8 GByte B&R
5CFCRD.016G-04	CompactFlash 16 GByte B&R

Table 162: 5CFCRD.0512-04, 5CFCRD.1024-04, 5CFCRD.2048-04, 5CFCRD.4096-04, 5CFCRD.8192-04, 5CFCRD.016G-04 - Order data

4.4.3 Technical data

Caution!

A sudden loss of power can cause data to be lost! In very rare cases, the mass memory may also become damaged.

To prevent damage and loss of data, it is recommended to use a UPS device.

Information:

The following characteristics, features and limit values only apply to this accessory and can deviate those specified for the entire device. For the entire device where this accessory is installed, refer to the data provided specifically for the entire device.

Product ID	5CFCRD.0512-04	5CFCRD.1024-04	5CFCRD.2048-04	5CFCRD.4096-04	5CFCRD.8192-04	5CFCRD.016G-04
General information						
Capacity	512 MB	1 GB	2 GB	4 GB	8 GB	16 GB
Data retention	10 years					
Data reliability	< 1 unrecoverable error in 10¹⁴ bit read accesses					
Lifetime monitoring	Yes					
MTBF	> 3,000,000 hours (at 25°C)					
Maintenance	None					
Supported operating modes	PIO mode 0-6, Multiword DMA mode 0-4, Ultra DMA mode 0-4					
Continuous reading						
Typical	35 MB/s (240X) ¹⁾		33 MB/s (220X) ¹⁾		27 MB/s (180X) ¹⁾	36 MB/s (240X) ¹⁾
Maximum	37 MB/s (260X) ¹⁾		34 MB/s (226X) ¹⁾		28 MB/s (186X) ¹⁾	37 MB/s (247X) ¹⁾
Continuous writing						
Typical	17 MB/s (110X)		16 MB/s (106X)		15 MB/s (100X)	18 MB/s (120X)
Maximum	20 MB/s (133X)		18 MB/s (120X)		17 MB/s (110X)	19 MB/s (126X)
Certification types						
CE	Yes					
Endurance						
Guaranteed amount of data						

Table 163: 5CFCRD.0512-04, 5CFCRD.1024-04, 5CFCRD.2048-04, 5CFCRD.4096-04, 5CFCRD.8192-04, 5CFCRD.016G-04 - Technical data

Product ID	5CFCRD.0512-04	5CFCRD.1024-04	5CFCRD.2048-04	5CFCRD.4096-04	5CFCRD.8192-04	5CFCRD.016G-04
Guaranteed ²⁾ Results in 5 years ²⁾	50 TB 27.40 GB/day	100 TB 54.79 GB/day	200 TB 109.9 GB/day	400 TB 219.8 GB/day	800 TB 438.6 GB/day	1600 TB 876.72 GB/day
Clear/write cycles Typical ³⁾ Guaranteed	2,000,000 100,000					
SLC-Flash	Yes					
Wear leveling	Static					
Error Correction Coding (ECC)	Yes					
S.M.A.R.T. Support	No					
Support						
Hardware	PP300/400, PP500, PPC300, PPC700, PPC725, PPC800, APC620, APC810, APC820					
Operating systems						
Windows 7 32-bit	No					Yes
Windows 7 64-bit	No					
Windows Embedded Standard 7, 32-bit	No					Yes
Windows Embedded Standard 7, 64-bit	No					Yes
Windows XP Professional	No					Yes
Windows XP Embedded	Yes					
Windows Embedded Standard 2009	No	Yes				
Windows CE 6.0	Yes					
Windows CE 5.0	No					Yes ⁴⁾
Software						
PVI Transfer Tool	≥ V3.2.3.8 (part of PVI Development Setup ≥ V2.06.00.3011)					No
B&R Embedded OS Installer	≥ V3.10					≥ V3.20
Environmental conditions						
Temperature						
Operation	0 to 70°C					
Storage	-65 to 150°C					
Transport	-65 to 150°C					
Relative humidity						
Operation	Max. 85% at 85°C					
Storage	Max. 85% at 85°C					
Transport	Max. 85% at 85°C					
Vibration						
Operation	20 g peak, 20 to 2000 Hz, 4 in each direction (JEDEC JESD22, method B103) 5.35 g RMS, 15 min per level (IEC 68-2-6)					
Storage	20 g peak, 20 to 2000 Hz, 4 in each direction (JEDEC JESD22, method B103) 5.35 g RMS, 15 min per level (IEC 68-2-6)					
Transport	20 g peak, 20 to 2000 Hz, 4 in each direction (JEDEC JESD22, method B103) 5.35 g RMS, 15 min per level (IEC 68-2-6)					
Shock						
Operation	1.5 kg peak, 0-5 ms 5x (JEDEC JESD22, B110 method) 30 g, 11 ms 1x (IEC 68-2-27)					
Storage	1.5 kg peak, 0-5 ms 5x (JEDEC JESD22, B110 method) 30 g, 11 ms 1x (IEC 68-2-27)					
Transport	1.5 kg peak, 0-5 ms 5x (JEDEC JESD22, B110 method) 30 g, 11 ms 1x (IEC 68-2-27)					
Altitude						
Operation	Max. 4.572 m					
Mechanical characteristics						
Dimensions						
Width	42.8 ± 0.10 mm					
Length	36.4 ± 0.15 mm					
Height	3.3 ± 0.10 mm					
Weight	10 g					

Table 163: 5CFCRD.0512-04, 5CFCRD.1024-04, 5CFCRD.2048-04,
5CFCRD.4096-04, 5CFCRD.8192-04, 5CFCRD.016G-04 - Technical data

- Speed specification with 1X = 150 kB/s. All specifications refer to the Samsung Flash chips, CompactFlash cards in UDMA mode 4, 30 ns cycle time in True-IDE mode with sequential write/read test.
- Endurance of B&R CFs (with linear written block size ≥ 128 kB)
- Depending on the average file size.
- Not supported by B&R Embedded OS installer.

4.4.4 Temperature humidity diagram

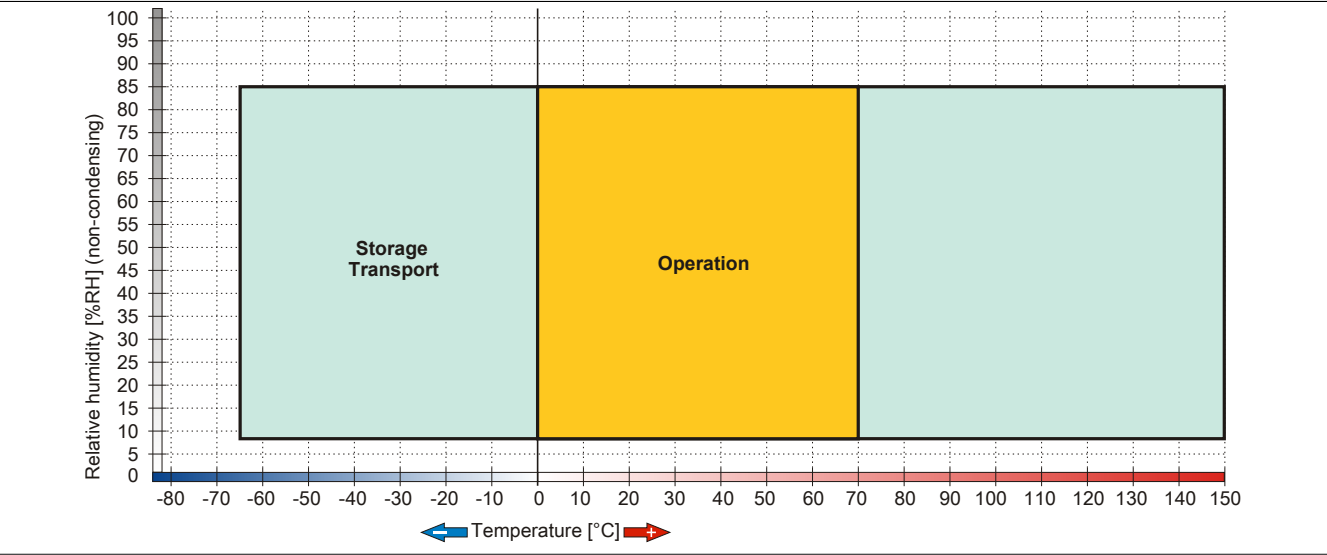


Image 80: 5CFCRD.xxxx-04 - Temperature humidity diagram for CompactFlash cards

4.4.5 Dimensions

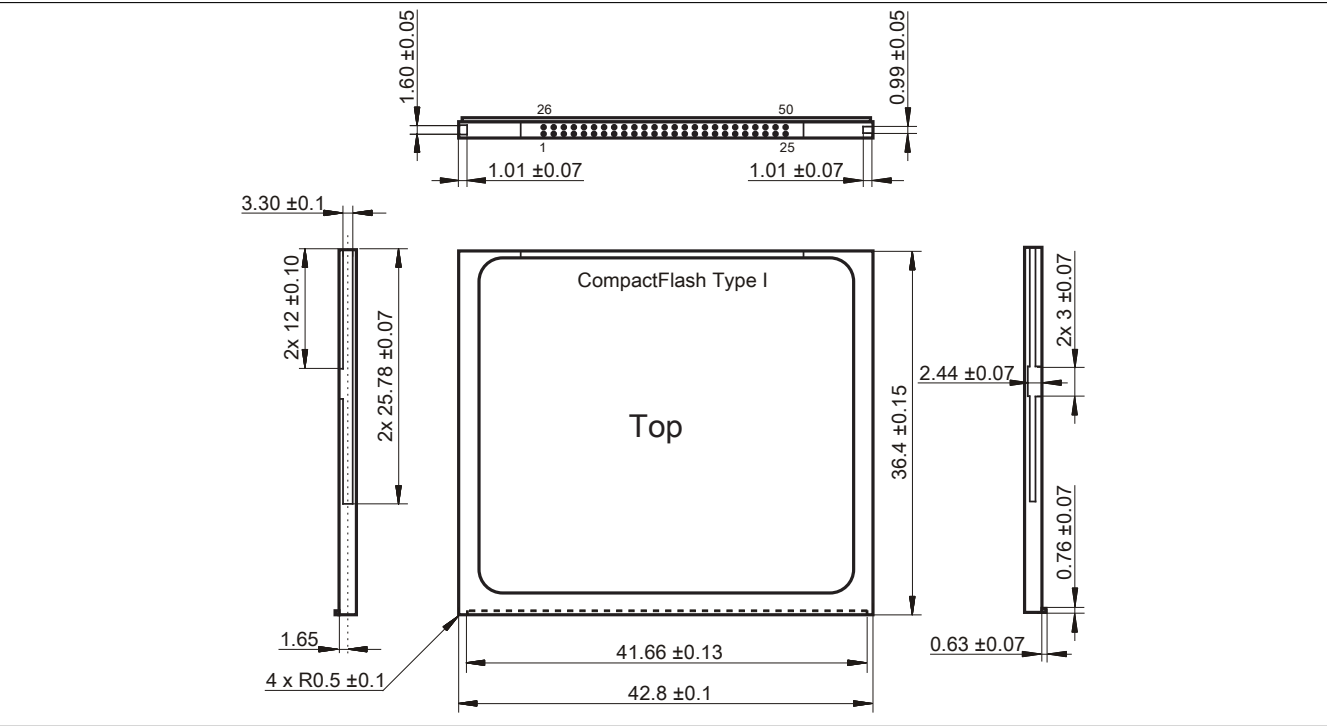


Image 81: Dimensions - CompactFlash card Type I

4.4.6 Benchmark

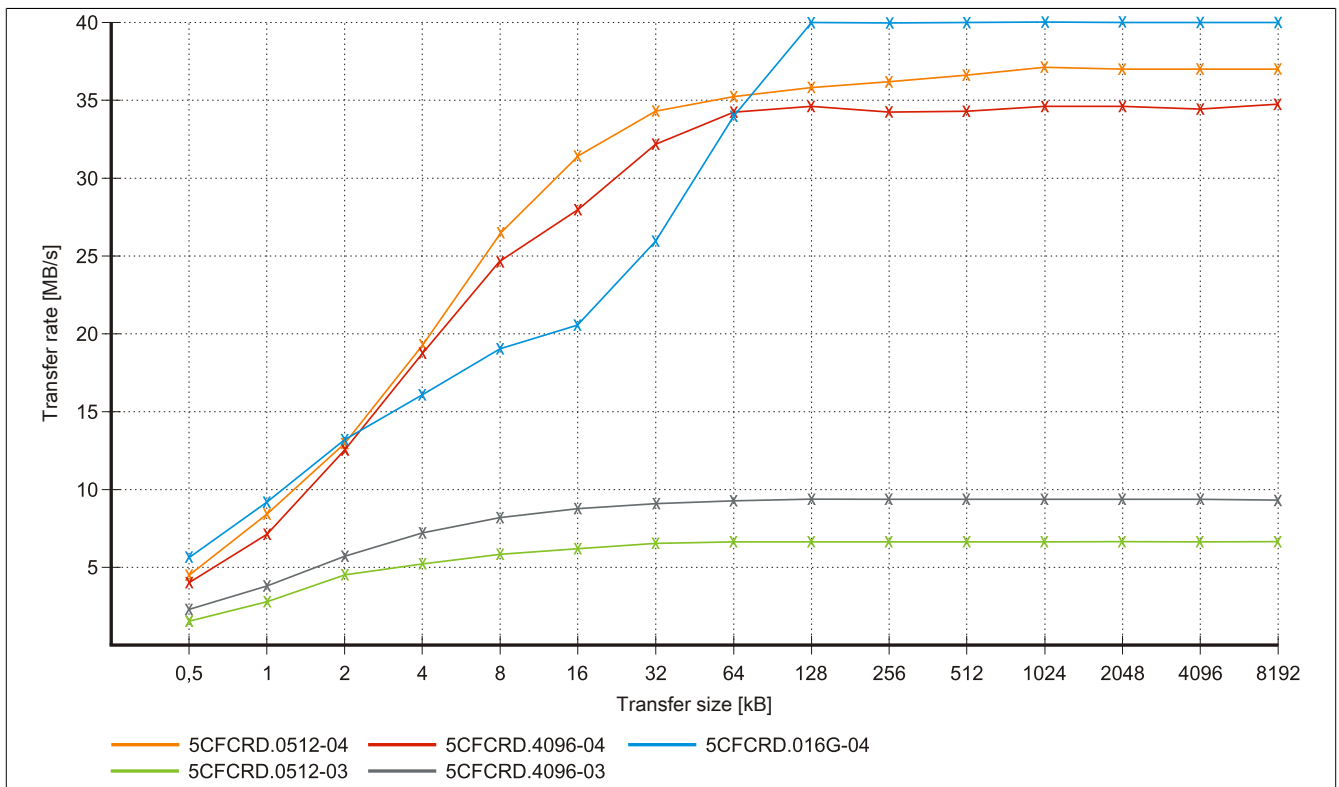


Image 82: ATTO disk benchmark v2.34 comparison (reading)

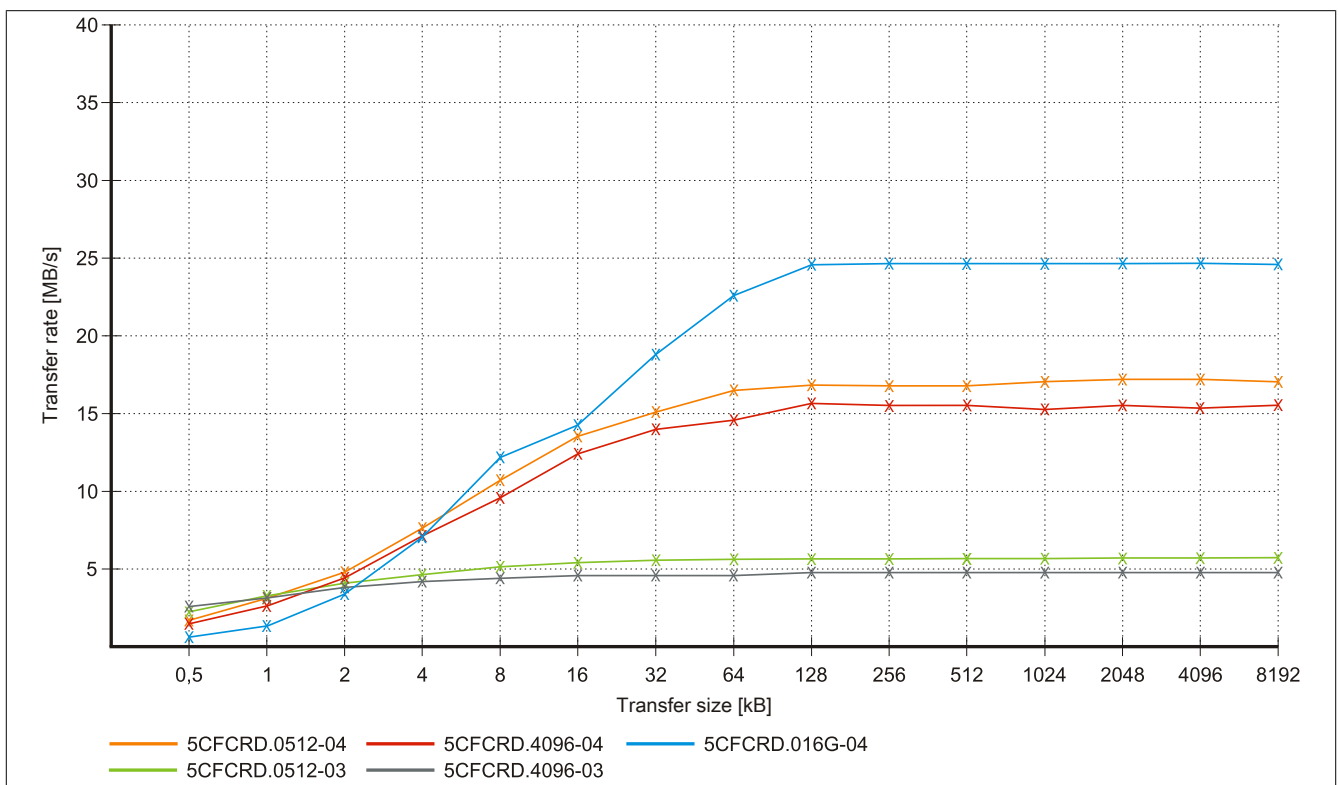


Image 83: ATTO disk benchmark v2.34 comparison (writing)

4.5 5CFCRD.xxxx-03

4.5.1 General information

Information:

Western Digital CompactFlash cards 5CFCRD.xxxx-03 and CompactFlash cards from a different manufacturer cannot be used in the same system at the same time. Due to differences in technology (older vs. newer technologies), problems can occur during system startup that are caused by the different boot times.

see "Known problems / issues" on page 161

Information:

On Windows CE 5.0 devices, 5CFCRD.xxxx-03 CompactFlash cards up to 1GB are supported.

Information:

On CompactFlash cards 5CFCRD.xxxx-03, only the sticker and the description have changed. The technical data has not been changed.

4.5.2 Order data

Image not found for 5CFCRD.0064-03-5CFCRD.0064-03-5CFCRD.0064-03-5CFCRD.0064-03-5CFCRD.0064-03-5CFCRD.0064-03-5CFCRD.0064-03!	
Model number	Short description
	CompactFlash
5CFCRD.0064-03	CompactFlash 64 MB Western Digital
5CFCRD.0128-03	CompactFlash 128 MB Western Digital
5CFCRD.0256-03	CompactFlash 256 MB Western Digital
5CFCRD.0512-03	CompactFlash 512 MB Western Digital
5CFCRD.1024-03	CompactFlash 1 GB Western Digital
5CFCRD.2048-03	CompactFlash 2 GB Western Digital
5CFCRD.4096-03	CompactFlash 4 GB Western Digital
5CFCRD.8192-03	CompactFlash 8 GB Western Digital

Table 164: 5CFCRD.0064-03, 5CFCRD.0128-03, 5CFCRD.0256-03, 5CFCRD.0512-03, 5CFCRD.1024-03, 5CFCRD.2048-03, 5CFCRD.4096-03, 5CFCRD.8192-03 - Order data

4.5.3 Technical data

Caution!

A sudden loss of power can cause data to be lost! In very rare cases, the mass memory may also become damaged.

To prevent damage and loss of data, B&R recommends that you use a UPS device.

Information:

The following characteristics, features and limit values only apply to this accessory and can deviate those specified for the entire device. For the entire device where this accessory is installed, refer to the data provided specifically for the entire device.

Product ID	5CFCRD. 0064-03	5CFCRD. 0128-03	5CFCRD. 0256-03	5CFCRD. 0512-03	5CFCRD. 1024-03	5CFCRD. 2048-03	5CFCRD. 4096-03	5CFCRD. 8192-03
General information								
Capacity	64 MB	128 MB	256 MB	512 MB	1 GB	2 GB	4 GB	8 GB
Data retention	10 years							
Data reliability	< 1 unrecoverable error in 10¹⁴ bit read accesses							
Lifetime monitoring	Yes							
MTBF	> 4,000,000 hours (at 25°C)							
Maintenance	None							
Supported operating modes	PIO mode 0-4, Multiword DMA mode 0-2							
Continuous reading Typical	8 MB/s							

Table 165: 5CFCRD.0064-03, 5CFCRD.0128-03, 5CFCRD.0256-03, 5CFCRD.0512-03, 5CFCRD.1024-03, 5CFCRD.2048-03, 5CFCRD.4096-03, 5CFCRD.8192-03 - Technical data

Product ID	5CFCRD. 0064-03	5CFCRD. 0128-03	5CFCRD. 0256-03	5CFCRD. 0512-03	5CFCRD. 1024-03	5CFCRD. 2048-03	5CFCRD. 4096-03	5CFCRD. 8192-03
Continuous writing Typical	6 MB/s							
Certification types CE	Yes							
Endurance								
Clear/write cycles Typical	> 2.000.000							
SLC-Flash	Yes							
Wear leveling	Static							
Error Correction Coding (ECC)	Yes							
S.M.A.R.T. Support	No							
Support								
Hardware	MP100/200, PP100/200, PP300/400, PP500, PPC300, PPC700, PPC725, PPC800, Provit 2000, Provit 5000, APC620, APC680, APC810, APC820							
Operating systems Windows 7 32-bit Windows 7 64-bit Windows Embedded Standard 7, 32-bit Windows Embedded Standard 7, 64-bit Windows XP Professional Windows XP Embedded Windows Embedded Standard 2009 Windows CE 6.0 Windows CE 5.0	No No No No No No No Yes Yes ¹⁾							
Software PVI Transfer Tool B&R Embedded OS Installer	≥ V2.57 (part of PVI Development Setup ≥ V2.5.3.3005) ≥ V2.21							
Environmental conditions								
Temperature Operation Storage Transport	0 to 70°C -50 to 100°C -50 to 100°C							
Relative humidity Operation Storage Transport	8 to 95%, non-condensing 8 to 95%, non-condensing 8 to 95%, non-condensing							
Vibration Operation Storage Transport	Max. 16.3 g (159 m/s² 0-peak) Max. 30 g (294 m/s² 0-peak) Max. 30 g (294 m/s² 0-peak)							
Shock Operation Storage Transport	Max. 1000 g (9810 m/s² 0-peak) Max. 3000 g (29430 m/s² 0-peak) Max. 3000 g (29430 m/s² 0-peak)							
Altitude Operation	Max. 24.383 m							
Mechanical characteristics								
Dimensions Width Length Height	42.8 ± 0.10 mm 36.4 ± 0.15 mm 3.3 ± 0.10 mm							
Weight	11.4 g							

Table 165: 5CFCRD.0064-03, 5CFCRD.0128-03, 5CFCRD.0256-03, 5CFCRD.0512-03, 5CFCRD.1024-03, 5CFCRD.2048-03, 5CFCRD.4096-03, 5CFCRD.8192-03 - Technical data

1) Not supported by B&R Embedded OS installer.

4.5.4 Temperature humidity diagram

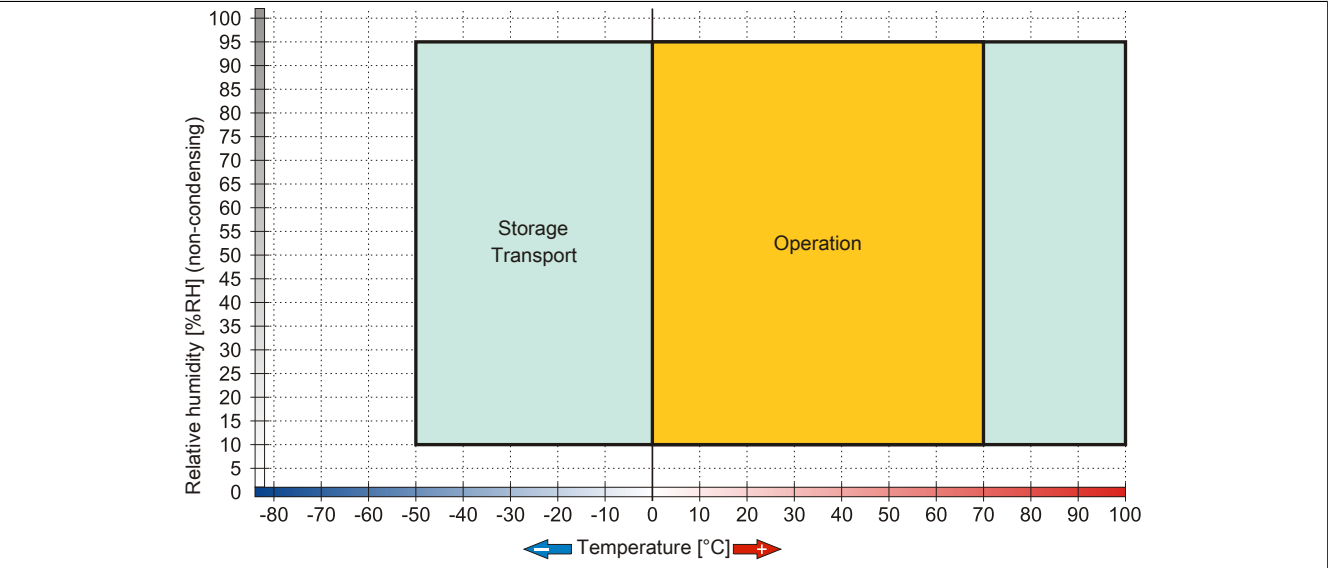


Image 84: 5CFCRD.xxxx-03 - Temperature humidity diagram for CompactFlash cards

4.5.5 Dimensions

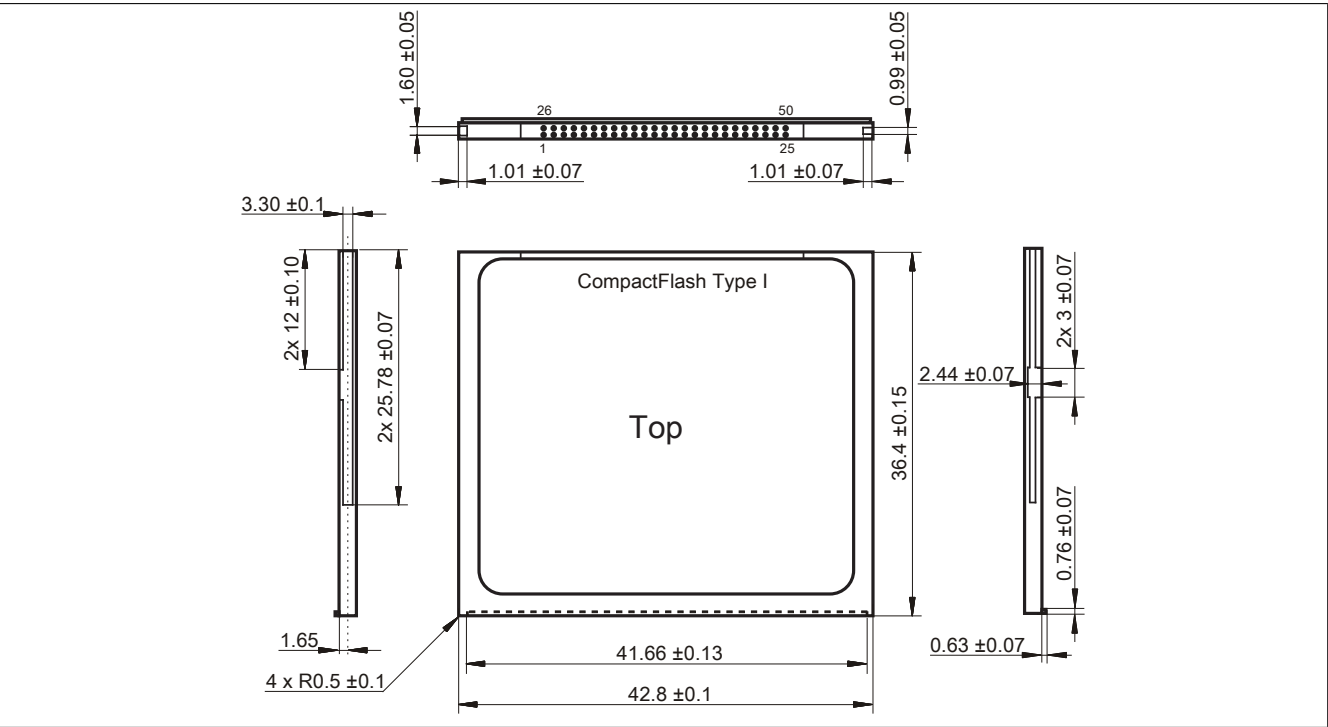


Image 85: Dimensions - CompactFlash card Type I

4.6 Known problems / issues

The following issue for devices with two CompactFlash slots is known:

- Using two different types of CompactFlash cards can cause problems in Automation PCs and Panel PCs. This can result in one of the two cards not being detected during system startup. This is caused by varying startup speeds. CompactFlash cards with older technology require significantly more time during system startup than CompactFlash cards with newer technology. This behavior occurs near the limits of the time frame provided for startup. The problem described above can occur because the startup time for the CompactFlash cards fluctuates due to the variance of the components being used. Depending on the CompactFlash cards being used, this error might never, sometimes or always occur.

5 USB flash drive

5.1 5MMUSB.2048-01

5.1.1 General information

USB flash drives are easy-to-exchange storage media. Because of the fast data transfer (USB 2.0), the USB flash drives are ideal for use as a portable memory medium. Without requiring additional drivers ("Hot Plug & Play" - except with Windows 98SE), the USB flash drive can immediately act as an additional drive where data can be read or written.

Information:

We reserve the right to supply alternative products due to the vast quantity of flash drives available on the market and their corresponding short product lifecycle. Therefore, the following measures might be necessary in order to boot from these flash drives:

- The flash drive must be reformatted or in some cases even re-partitioned (set active partition).
 - The flash drive must be at the top of the BIOS boot order, or alternatively the IDE controllers can also be deactivated in the BIOS. This can be avoided in most cases if a "fdisk /mbr" command is also executed on the USB flash drive.
- USB 1.1, USB 2.0
 - High transfer rate
 - High data storage
 - Ambient temperature during operation: 0 to 70°C

5.1.2 Order data

Model number	Short description	Figure
	USB accessories	
5MMUSB.2048-01	USB 2.0 flash drive 2048 MB B&R	

Table 166: 5MMUSB.2048-01 - Order data

5.1.3 Technical data

Product ID	5MMUSB.2048-01
General information	
Data retention	> 10 years
LEDs	1 LED (green), signals data transfer (send and receive) ¹⁾
MTBF	> 3,000,000 hours
Type	USB 1.1, USB 2.0
Maintenance	None
Certification types CE	Yes
Interfaces	
USB	
Type	USB 1.1, USB 2.0
Connection	To each USB type A interface
Transfer rate	Low speed (1.5 Mbit/s), full speed (12 Mbit/s), to high speed (480 Mbit/s)
Sequential reading	Max. 31 MB/s
Sequential writing	Max. 30 MB/s
Support	
Operating systems	
Windows 7	Yes
Windows XP Professional	Yes
Windows XP Embedded	Yes
Windows ME	Yes
Windows 2000	Yes
Windows CE 5.0	Yes
Windows CE 4.2	Yes
Electrical properties	
Current requirements	Max. 500 µA sleep mode, max. 120 mA read/write
Environmental conditions	
Temperature	

Table 167: 5MMUSB.2048-01 - Technical data

Product ID	5MMUSB.2048-01
Operation	0 to 70°C
Storage	-50 to 100°C
Transport	-50 to 100°C
Relative humidity	
Operation	85%, non-condensing
Storage	85%, non-condensing
Transport	85%, non-condensing
Vibration	
Operation	20 to 2000 Hz: 20 g (peak)
Storage	20 to 2000 Hz: 20 g (peak)
Transport	20 to 2000 Hz: 20 g (peak)
Shock	
Operation	Max. 1500 g (peak)
Storage	Max. 1500 g (peak)
Transport	Max. 1500 g (peak)
Altitude	
Operation	Max. 3048 m
Storage	Max. 12192 m
Transport	Max. 12192 m
Mechanical characteristics	
Dimensions	
Width	17.97 mm
Length	67.85 mm
Height	8.35 mm

Table 167: 5MMUSB.2048-01 - Technical data

1) Signals data transfer (send and receive).

5.1.4 Temperature humidity diagram

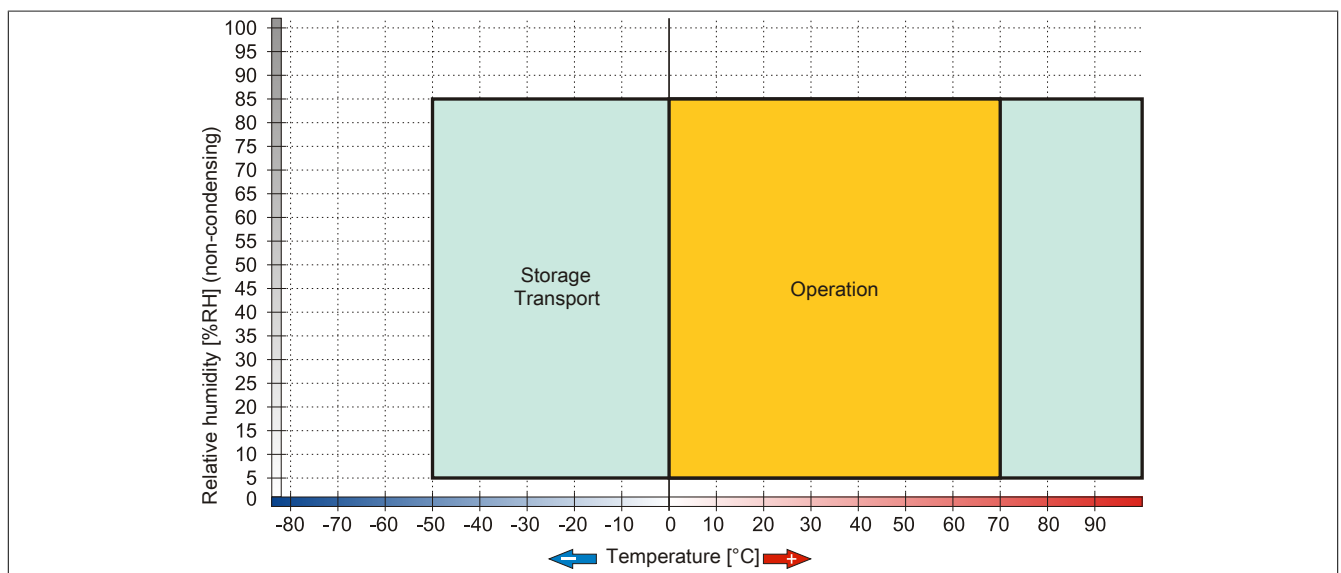


Image 86: 5MMUSB.2048-01 - Temperature humidity diagram

6 Cable

6.1 DVI cable

6.1.1 5CADVI.0xxx-00

General information

The DVI cables 5CADVI.0xxx-00 are designed for fixed layout.

Caution!

Cable can only be plugged in and unplugged when the device is turned off.

Order data

Image not found for 5CADVI.0018-00-5CADVI.0018-00-5CADVI.0018-00!	
Model number	Short description
	DVI cables
5CADVI.0018-00	DVI-D Cable, 1.8 m.
5CADVI.0050-00	DVI-D Cable, 5 m.
5CADVI.0100-00	DVI-D Cable, 10 m.

Table 168: 5CADVI.0018-00, 5CADVI.0050-00, 5CADVI.0100-00 - Order data

Technical data

Product ID	5CADVI.0018-00	5CADVI.0050-00	5CADVI.0100-00
General information			
Certification types CE c-UL-us	Yes Yes		
Cable structure			
Wire cross section	AWG 28		
Shield	Individual cable pairs and entire cable		
Cable shielding	Tinned CU mesh, optical coverage >86%		Tinned Cu mesh, optical coverage >86%
Outer sheathing Material Color Labeling	PVC Beige AWM STYLE 20276 80°C 30V VW1 DVI DIGITAL SINGLE LINK DER AN		
Connector			
Type	2x DVI-D (18+1), male		
Connection cycles	100		
Electrical properties			
Conductor resistance	Max. 237 Ω/km		
Insulation resistance	Min. 100 MΩ/km		
Mechanical characteristics			
Dimensions Length Diameter	1.8 m ±50 mm	5 m ± 80 mm Max. 8.5 mm	10 m ±100 mm
Flex radius	≥ 5x cable diameter (plug - ferrite magnet and ferrite magnet - ferrite magnet)		
Weight	Approx. 260 g	Approx. 460 g	Approx. 790 g

Table 169: 5CADVI.0018-00, 5CADVI.0050-00, 5CADVI.0100-00 - Technical data

Flex radius specification

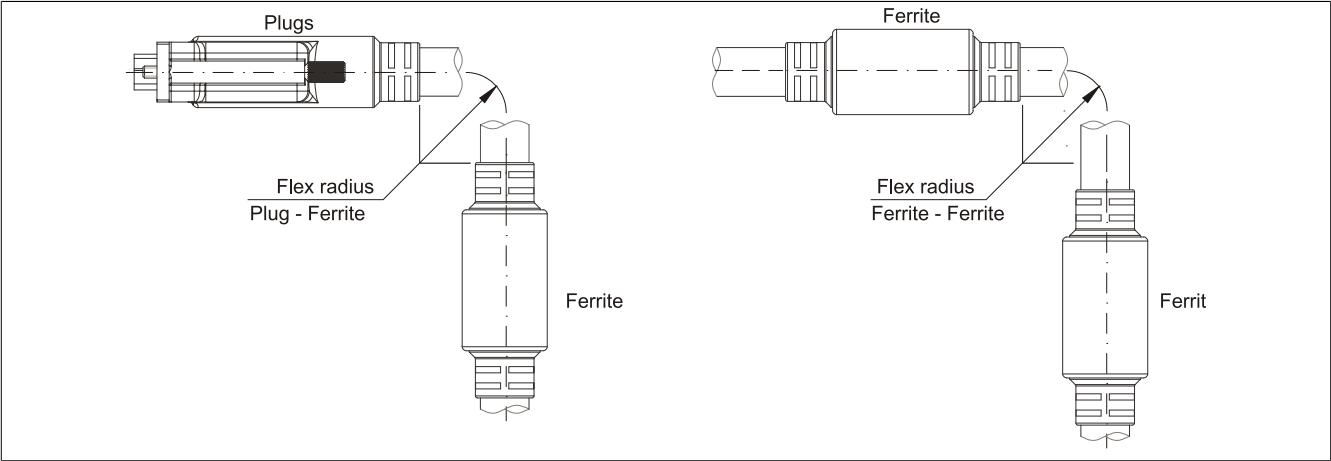


Image 87: Flex radius specification

Dimensions

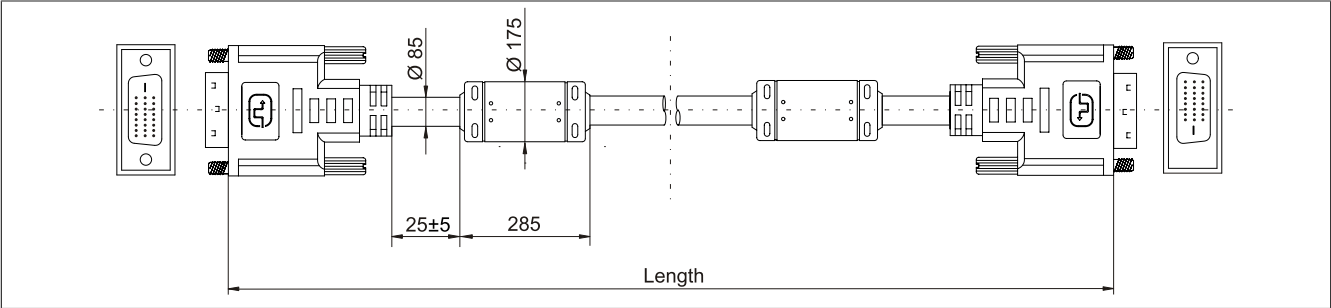


Image 88: 5CADVI.0xxx-00 - Dimensions

Cable specifications

Warning!

If you want to build a suitable cable yourself, it should be wired according to these specifications.

If a self-built cable is used, B&R cannot guarantee that it will function properly. B&R guarantees the performance of all cables that they provide.

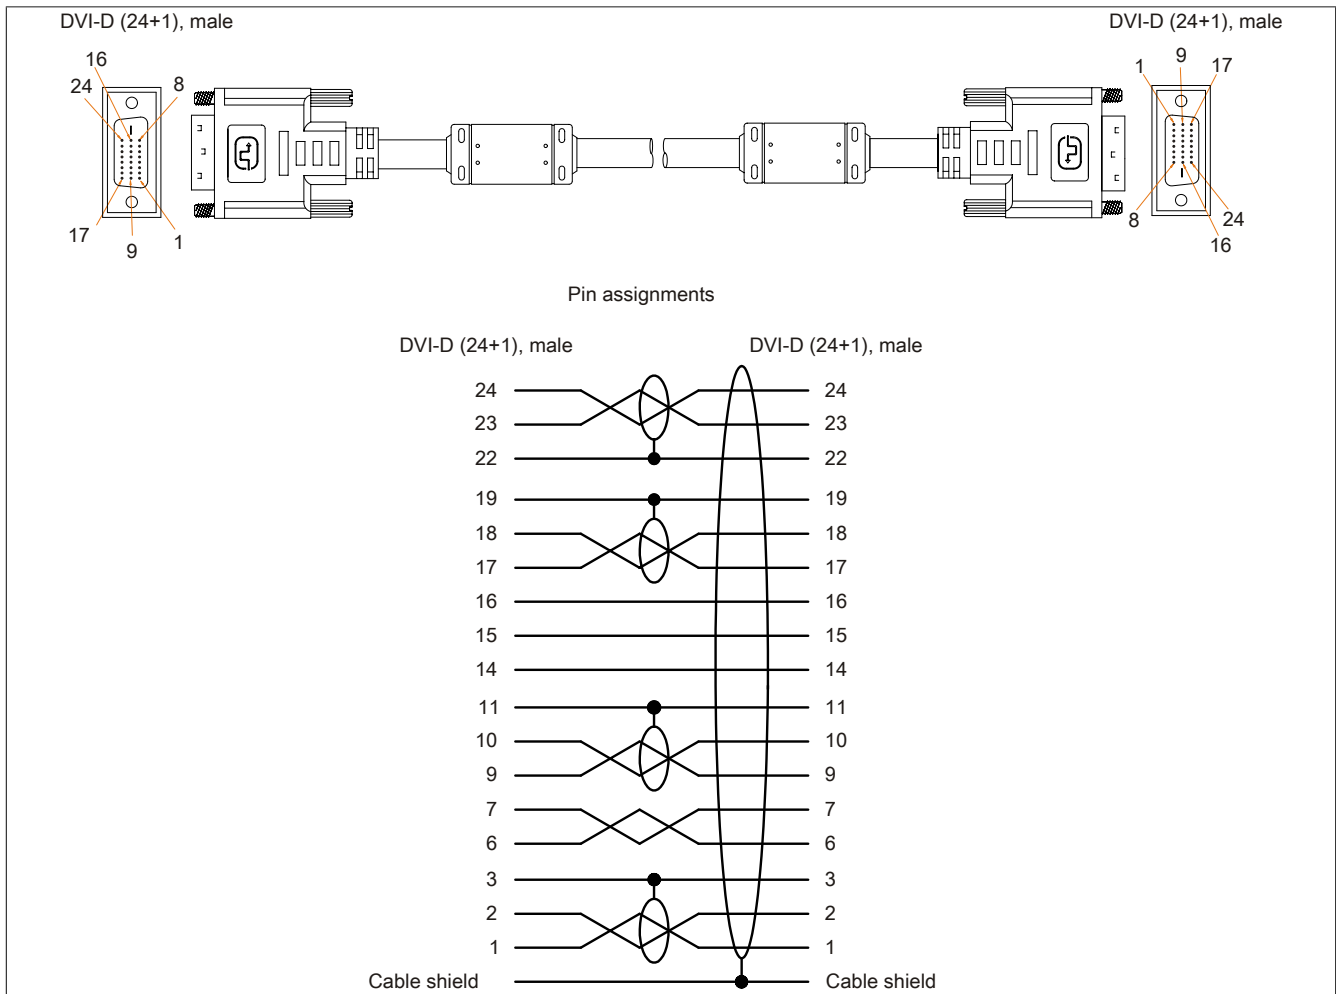


Image 89: 5CADVI.0xxx-00 - Pin assignments

6.2 SDL cables

6.2.1 5CASDL.0xxx-00

General information

The SDL cables 5CASDL.0xxx-00 are designed for fixed layout. Use of the SDL flex cable 5CASDL.0xxx-03 is required for a flexible installation (e.g. in swing arm systems).

Caution!

Cable can only be plugged in and unplugged when the device is turned off.

Order data

Image not found for 5CASDL.0018-00-5CASDL.0018-00-5CASDL.0018-00-5CASDL.0018-00-5CASDL.0018-00-5CASDL.0018-00-5CASDL.0018-00!	
Model number	Short description
	SDL cables
5CASDL.0018-00	SDL cable, 1.8 m.
5CASDL.0050-00	SDL cable, 5 m.
5CASDL.0100-00	SDL cable, 10 m.
5CASDL.0150-00	SDL cable, 15 m.
5CASDL.0200-00	SDL cable, 20 m.
5CASDL.0250-00	SDL cable, 25 m.
5CASDL.0300-00	SDL cable, 30 m.

Table 170: 5CASDL.0018-00, 5CASDL.0050-00, 5CASDL.0100-00, 5CASDL.0150-00, 5CASDL.0200-00, 5CASDL.0250-00, 5CASDL.0300-00 - Order data

Technical data

Product ID	5CASDL. 0018-00	5CASDL. 0050-00	5CASDL. 0100-00	5CASDL. 0300-00	5CASDL. 0250-00	5CASDL. 0200-00	5CASDL. 0150-00
General information							
Certification types	Yes						
CE							
c-UL-us	Yes						
Cable structure							
Wire cross section	AWG 28		AWG 24				
Shield	Individual cable pairs and entire cable						
Cable shielding	Tinned Cu mesh, optical coverage >85%						
Outer sheathing	PVC Black E74020-C (UL) AWM STYLE 20176 80°C 30V VW-1 DVI DIGITAL LINK						
Material							
Color							
Labeling							
Connector							
Type	2x DVI-D (24+1), male						
Connection cycles	100						
Contacts	Gold plated						
Mechanical protection	Metal cover with crimped stress relief						
Electrical properties							
Conductor resistance	- ≤93 Ω/km						
AWG 24							
AWG 28	≤237 Ω/km		-				
Insulation resistance	Min. 10 MΩ/km						
Mechanical characteristics							
Dimensions	1.8 m ±30 mm 5 m ± 30 mm 10 m ±50 mm 30 m ± 100 mm 25 m ± 100 mm 20 m ±100 mm 15 m ±100 mm Typ. 8.6 ± 0.2 mm Max. 9 mm Typ. 11 ± 0.2 mm Max. 11.5 mm						
Length							
Diameter							
Flex radius	≥ 5x cable diameter (plug - ferrite magnet and ferrite magnet - ferrite magnet)						
Flexibility	Limited flexibility; valid for ferrite magnet - ferrite magnet (tested 100 cycles with 5x cable diameter, 20 cycles / minute)						
Weight	Approx. 300 g	Approx. 580 g	Approx. 1500 g	Approx. 5520 g	Approx. 4800 g	Approx. 2880 g	Approx. 2250 g

Table 171: 5CASDL.0018-00, 5CASDL.0050-00, 5CASDL.0100-00, 5CASDL.0300-00, 5CASDL.0250-00, 5CASDL.0200-00, 5CASDL.0150-00 - Technical data

Flex radius specification

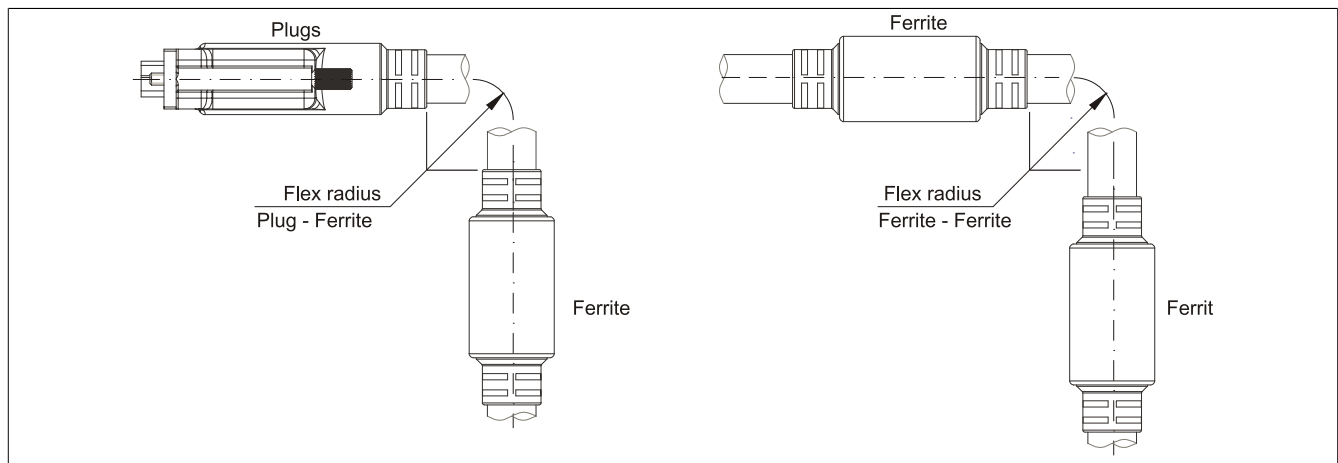


Image 90: Flex radius specification

Dimensions

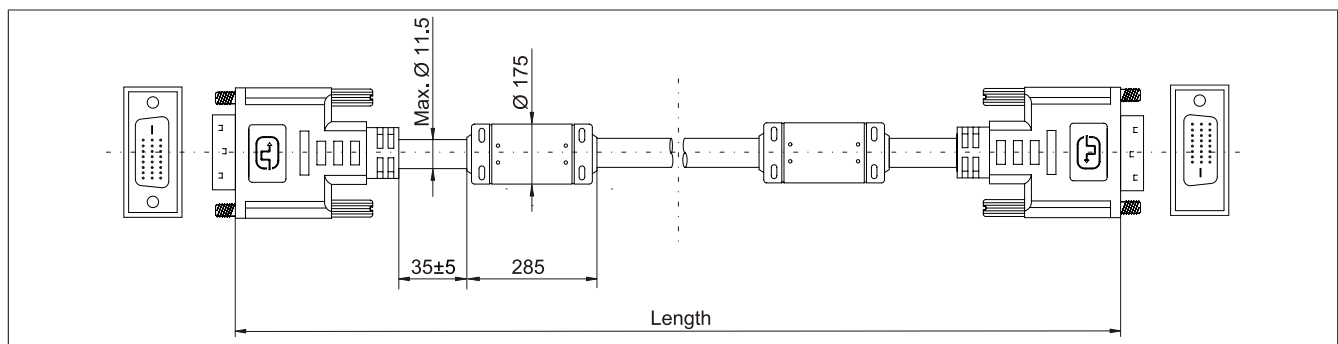


Image 91: 5CASDL.0xxx-00- Dimensions

Cable specifications

Warning!

If you want to build a suitable cable yourself, it should be wired according to these specifications.

If a self-built cable is used, B&R cannot guarantee that it will function properly. B&R guarantees the performance of all cables that they provide.

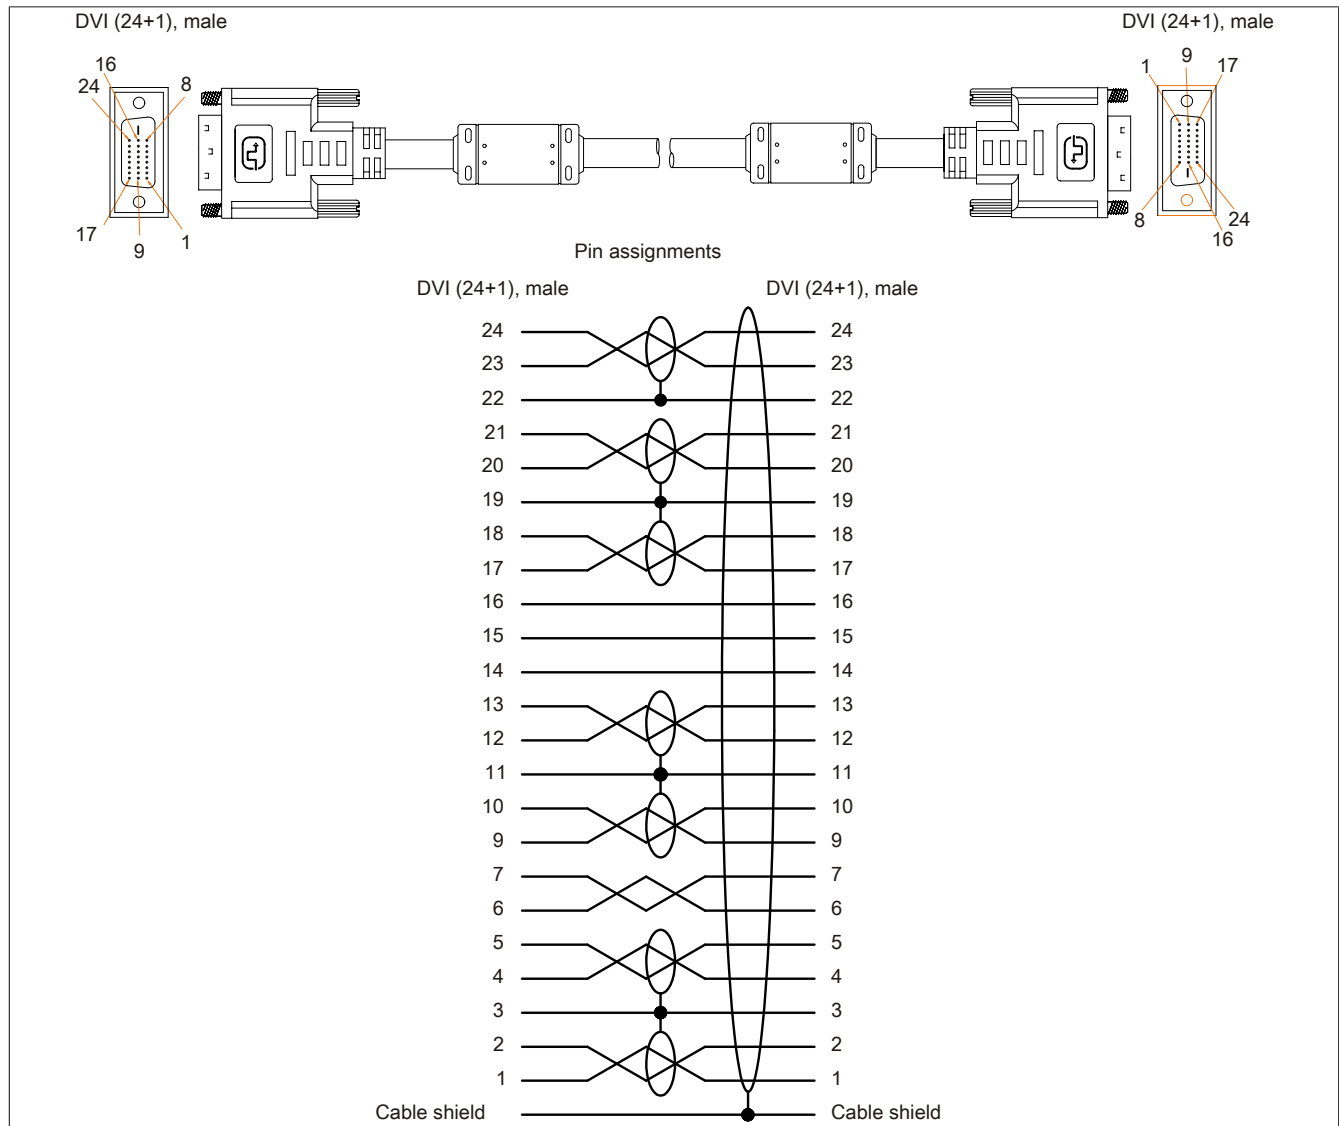


Image 92: 5CASDL.0xxx-00- Pin assignments

6.3 SDL cable with 45° plug

6.3.1 5CASDL.0xxx-01

General information

The 5CASDL.xxxx-01 SDL cables with 45° plug are designed for fixed layout.

Caution!

Cable can only be plugged in and unplugged when the device is turned off.

Order data

Image not found for 5CASDL.0018-01-5CASDL.0018-01-5CASDL.0018-01-5CASDL.0018-01!	
Model number	Short description
	SDL cables: 45° connectors
5CASDL.0018-01	SDL cable; 45° connector, 5 m.
5CASDL.0050-01	SDL cable; 45° connector, 5 m.
5CASDL.0100-01	SDL cable; 45° connector, 10 m.
5CASDL.0150-01	SDL cable; 45° connector, 15 m.

Table 172: 5CASDL.0018-01, 5CASDL.0050-01, 5CASDL.0100-01, 5CASDL.0150-01 - Order data

Technical data

Product ID	5CASDL.0018-01	5CASDL.0050-01	5CASDL.0100-01	5CASDL.0150-01
General information				
Certification types				
CE	Yes			
c-UL-us	Yes			
Cable structure				
Wire cross section	AWG 28		AWG 24	
Shield	Individual cable pairs and entire cable			
Cable shielding	Tinned Cu mesh, optical coverage >85%			
Outer sheathing				
Material	PVC			
Color	Black			
Connector				
Type	2x DVI-D (24+1), male			
Connection cycles	100			
Contacts	Gold plated			
Mechanical protection	Metal cover with crimped stress relief			
Electrical properties				
Conductor resistance				
AWG 24	-		≤93 Ω/km	
AWG 28	≤237 Ω/km		-	
Insulation resistance	Min. 10 MΩ/km			
Mechanical characteristics				
Dimensions				
Length	1.8 m ±30 mm	5 m ± 50 mm	10 m ±100 mm	15 m ±100 mm
Diameter	Max. 9 mm		Max. 11.5 mm	
Flex radius				
Fixed installation	≥ 5x cable diameter (plug - ferrite magnet and ferrite magnet - ferrite magnet)			
Flexibility	Limited flexibility; valid for ferrite magnet - ferrite magnet (tested 100 cycles with 5x cable diameter, 20 cycles / minute)			
Weight	Approx. 300 g	Approx. 590 g	Approx. 2800 g	Approx. 2860 g

Table 173: 5CASDL.0018-01, 5CASDL.0050-01, 5CASDL.0100-01, 5CASDL.0150-01 - Technical data

Flex radius specification

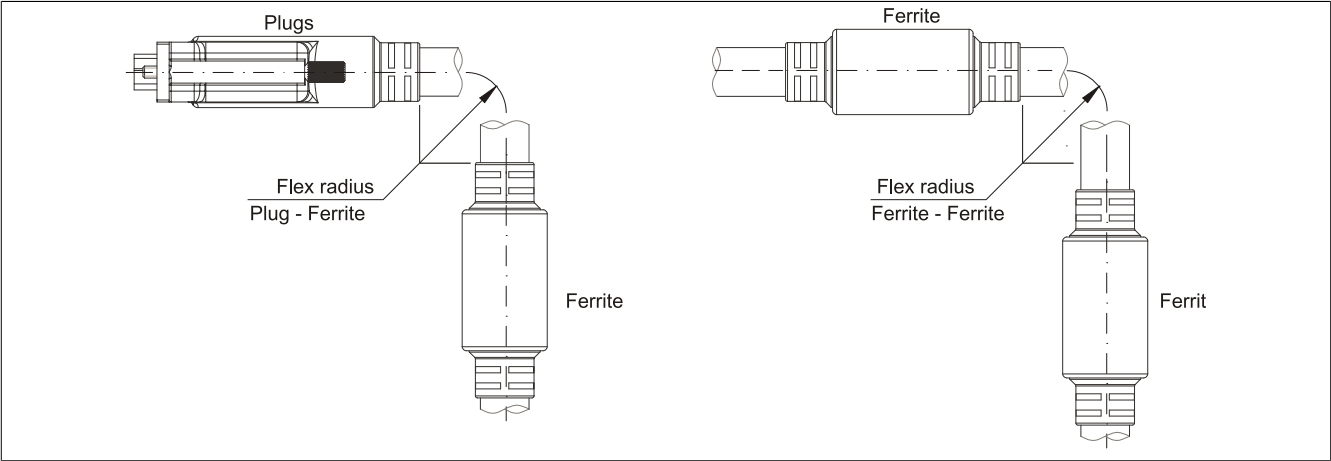


Image 93: Flex radius specification

Dimensions

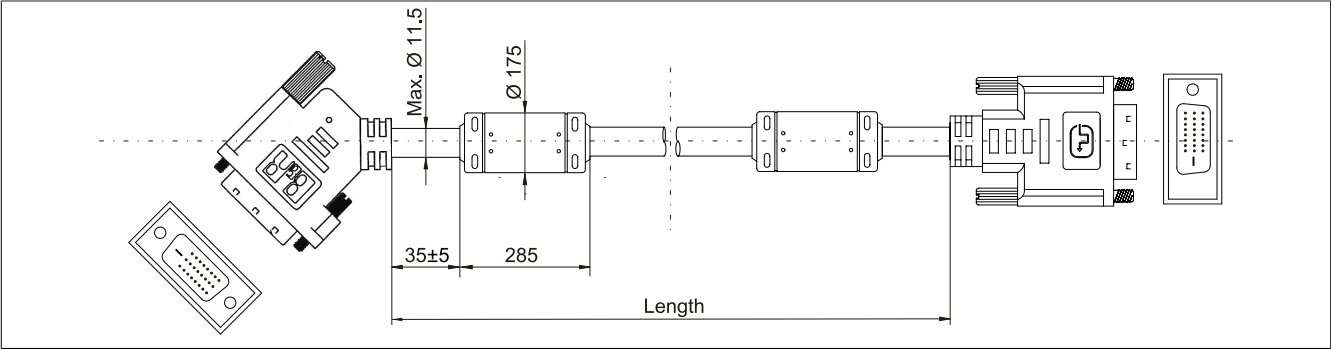


Image 94: 5CASDL.0xxx-01 - Dimensions

Cable specifications

Warning!

If you want to build a suitable cable yourself, it should be wired according to these specifications.

If a self-built cable is used, B&R cannot guarantee that it will function properly. B&R guarantees the performance of all cables that they provide.

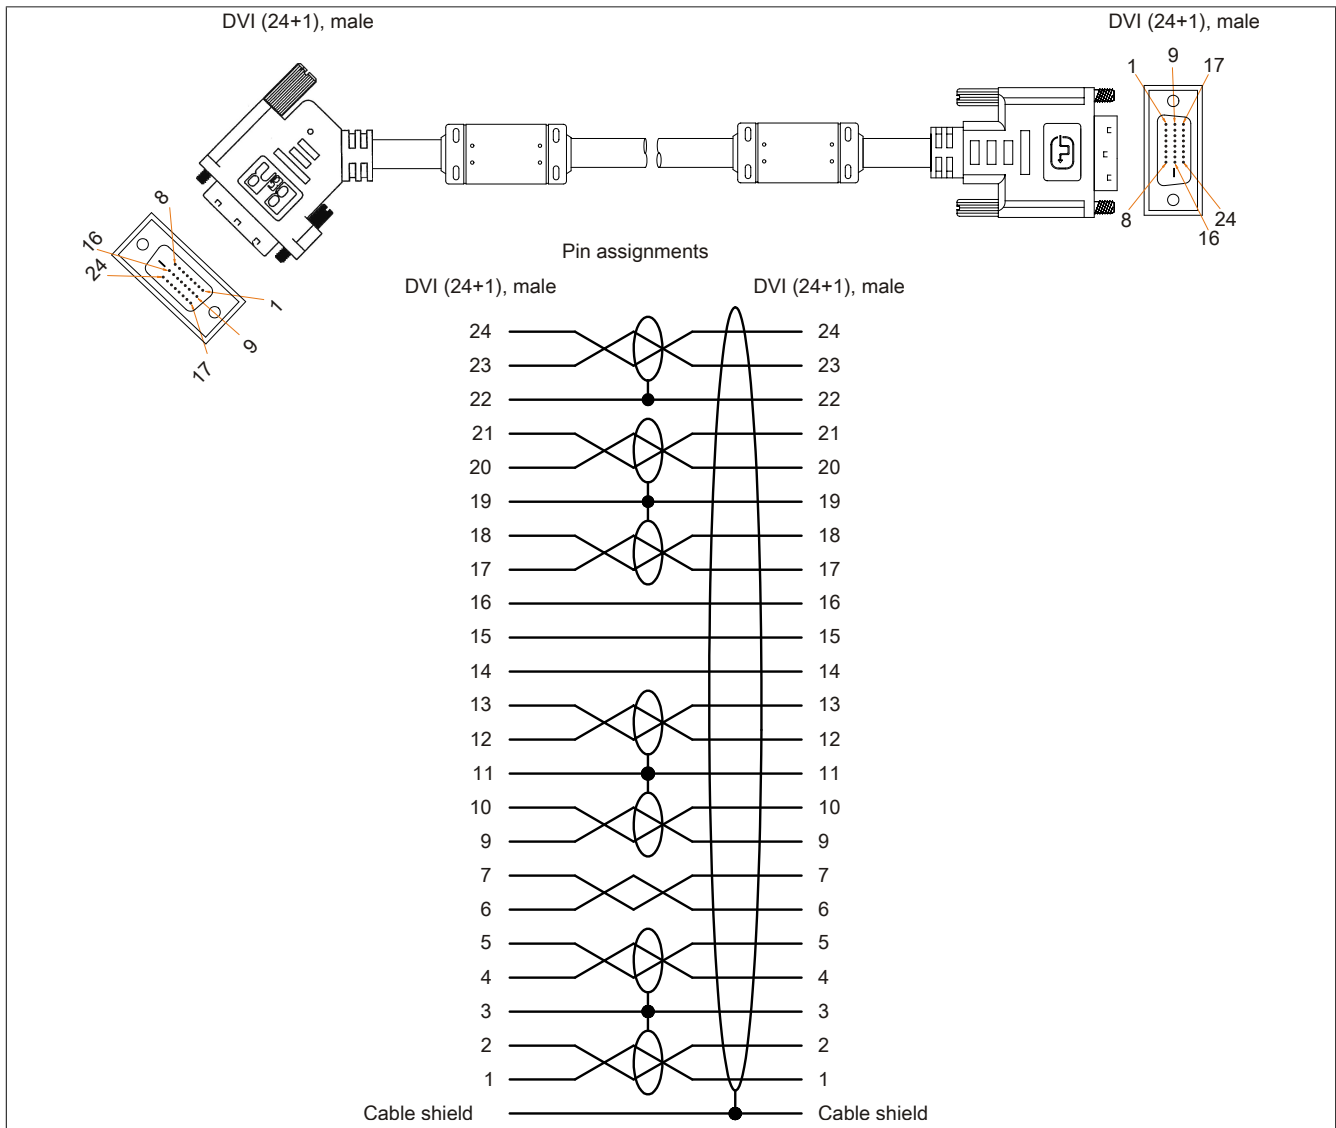


Image 95: 5CASDL.0xxx-01 - Pin assignments

6.4 SDL flex cable

6.4.1 5CASDL.0xxx-03

General information

The 5CASDL.0xxx-03 SDL flex cables are designed for use in both fixed and flexible installations (e.g. in swing arm systems).

Caution!

Cable can only be plugged in and unplugged when the device is turned off.

Order data

Image not found for 5CASDL.0018-03-5CASDL.0018-03-5CASDL.0018-03-5CASDL.0018-03-5CASDL.0018-03-5CASDL.0018-03-5CASDL.0018-03!	
Model number	Short description
SDL flex cables	
5CASDL.0018-03	SDL Cable flex, 1.8 m.
5CASDL.0050-03	SDL cable flex, 5 m.
5CASDL.0100-03	SDL cable flex, 10 m.
5CASDL.0150-03	SDL cable flex, 15 m.
5CASDL.0200-03	SDL cable flex, 20 m.
5CASDL.0250-03	SDL cable flex, 25 m.
5CASDL.0300-03	SDL cable flex, 30 m.

Table 174: 5CASDL.0018-03, 5CASDL.0050-03, 5CASDL.0100-03, 5CASDL.0150-03, 5CASDL.0200-03, 5CASDL.0250-03, 5CASDL.0300-03 - Order data

Technical data

Product ID	5CASDL. 0018-03	5CASDL. 0050-03	5CASDL. 0100-03	5CASDL. 0150-03	5CASDL. 0200-03	5CASDL. 0250-03	5CASDL. 0300-03
General information							
Certification types	Yes Yes						
CE							
c-UL-us							
Cable structure							
Wire cross section	26 AWG (control wires) 26 AWG (DVI, USB, data)						
Characteristics	Free of halogen and silicon						
Shield	Individual cable pairs and entire cable						
Cable shielding	Aluminum foil clad + tinned copper mesh						
Outer sheathing	Special TMPU - semi gloss Black (B&R) SDL cable (UL) AWM 20236 80°C 30V E 63216						
Material							
Color							
Labeling							
Connector							
Type	2x DVI-D (24+1), male						
Connection cycles	Min. 200						
Contacts	Gold plated						
Mechanical protection	Metal cover with crimped stress relief						
Electrical properties							
Operating voltage	≤30 V						
Test voltage	1 kV 0.5 kV						
Wire/wire							
Wire/shield							
Wave impedance	100 ±10 Ω						
Conductor resistance	≤95 Ω/km ≤145 Ω/km						
AWG 24							
AWG 26							
Insulation resistance	> 200 MΩ/km						
Operating conditions							
Approbation	UL AWM 20236 80°C 30V						
Flame resistant	In accordance with UL758 (cable vertical flame test)						
Oil and hydrolysis resistance	According to VDE 0282-10						
Environmental conditions							
Temperature	-20 to 80°C -5 to 60°C						
Storage							
Moving							

Table 175: 5CASDL.0018-03, 5CASDL.0050-03, 5CASDL.0100-03, 5CASDL.0150-03, 5CASDL.0200-03, 5CASDL.0250-03, 5CASDL.0300-03 - Technical data

Product ID	5CASDL. 0018-03	5CASDL. 0050-03	5CASDL. 0100-03	5CASDL. 0150-03	5CASDL. 0200-03	5CASDL. 0250-03	5CASDL. 0300-03
Fixed installation	-20 to 80°C						
Mechanical characteristics							
Dimensions							
Length	1.8 m ±20 mm	5 m ± 45 mm	10 m ±90 mm	15 m ±135 mm	20 m ± 180 mm	25 m ± 225 mm	30 m ± 270 mm
Diameter	Max. 12 mm						
Flex radius							
Fixed installation	≥ 6x cable diameter (from plug - ferrite magnet)						
	≥ 10x cable diameter (from ferrite magnet - ferrite magnet)						
Flexible installation	≥ 15x cable diameter (from ferrite magnet - ferrite magnet)						
Flexibility	Flexible; valid for ferrite magnet - ferrite magnet (tested 300,000 cycles with 15x cable diameter, 4800 cycles / hour)						
Drag chain data							
Flex cycles	300.000						
Speed	4800 cycles / hour						
Flex radius	180 mm;15x cable diameter						
Hub	460 mm						
Weight	Approx. 460 g	Approx. 1020 g	Approx. 1940 g	Approx. 2840 g	Approx. 3740 g	Approx. 4560 g	Approx. 5590 g
Tension							
In operation	≤50 N						
During installation	≤400 N						

Table 175: 5CASDL.0018-03, 5CASDL.0050-03, 5CASDL.0100-03, 5CASDL.0150-03, 5CASDL.0200-03, 5CASDL.0250-03, 5CASDL.0300-03 - Technical data

Flex radius specification

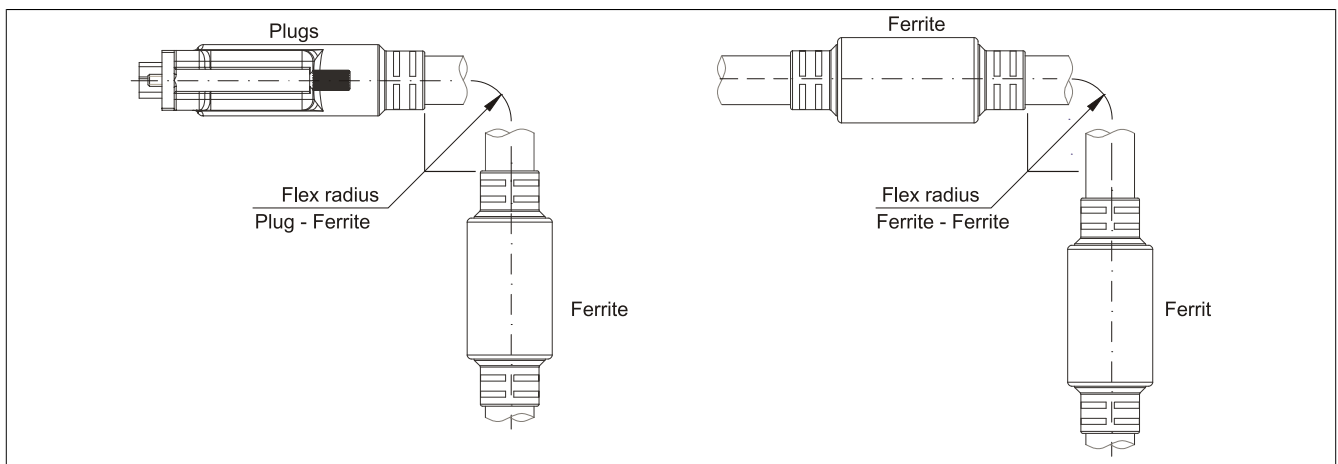


Image 96: Flex radius specification

Dimensions

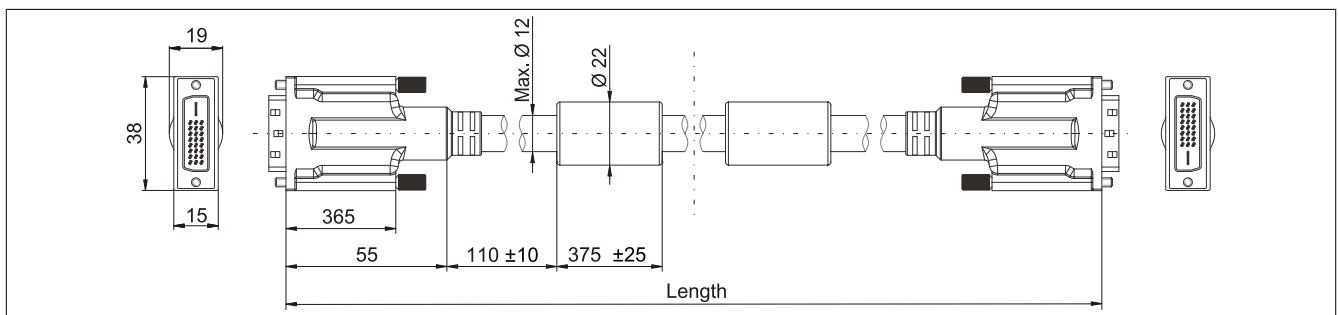


Image 97: 5CASDL.0xxx-03 - Dimensions

Structure

Element	Assignment	Cross section	
DVI	TMDS data 0	26 AWG	
	TMDS data 1	26 AWG	
	TMDS data 2	26 AWG	
	TMDS cycle	26 AWG	
USB	XUSB0	26 AWG	
	XUSB1	26 AWG	
Data	SDL	26 AWG	
Control wires	DDC cycle	24 AWG	
	DDC data	24 AWG	
	+5 V	24 AWG	
	mass	24 AWG	
	Hot Plug detect	24 AWG	

Table 176: Structure - SDL flex cable 5CASDL.0xxx-03

Cable specifications

Warning!

If you want to build a suitable cable yourself, it should be wired according to these specifications.

If a self-built cable is used, B&R cannot guarantee that it will function properly. B&R guarantees the performance of all cables that they provide.

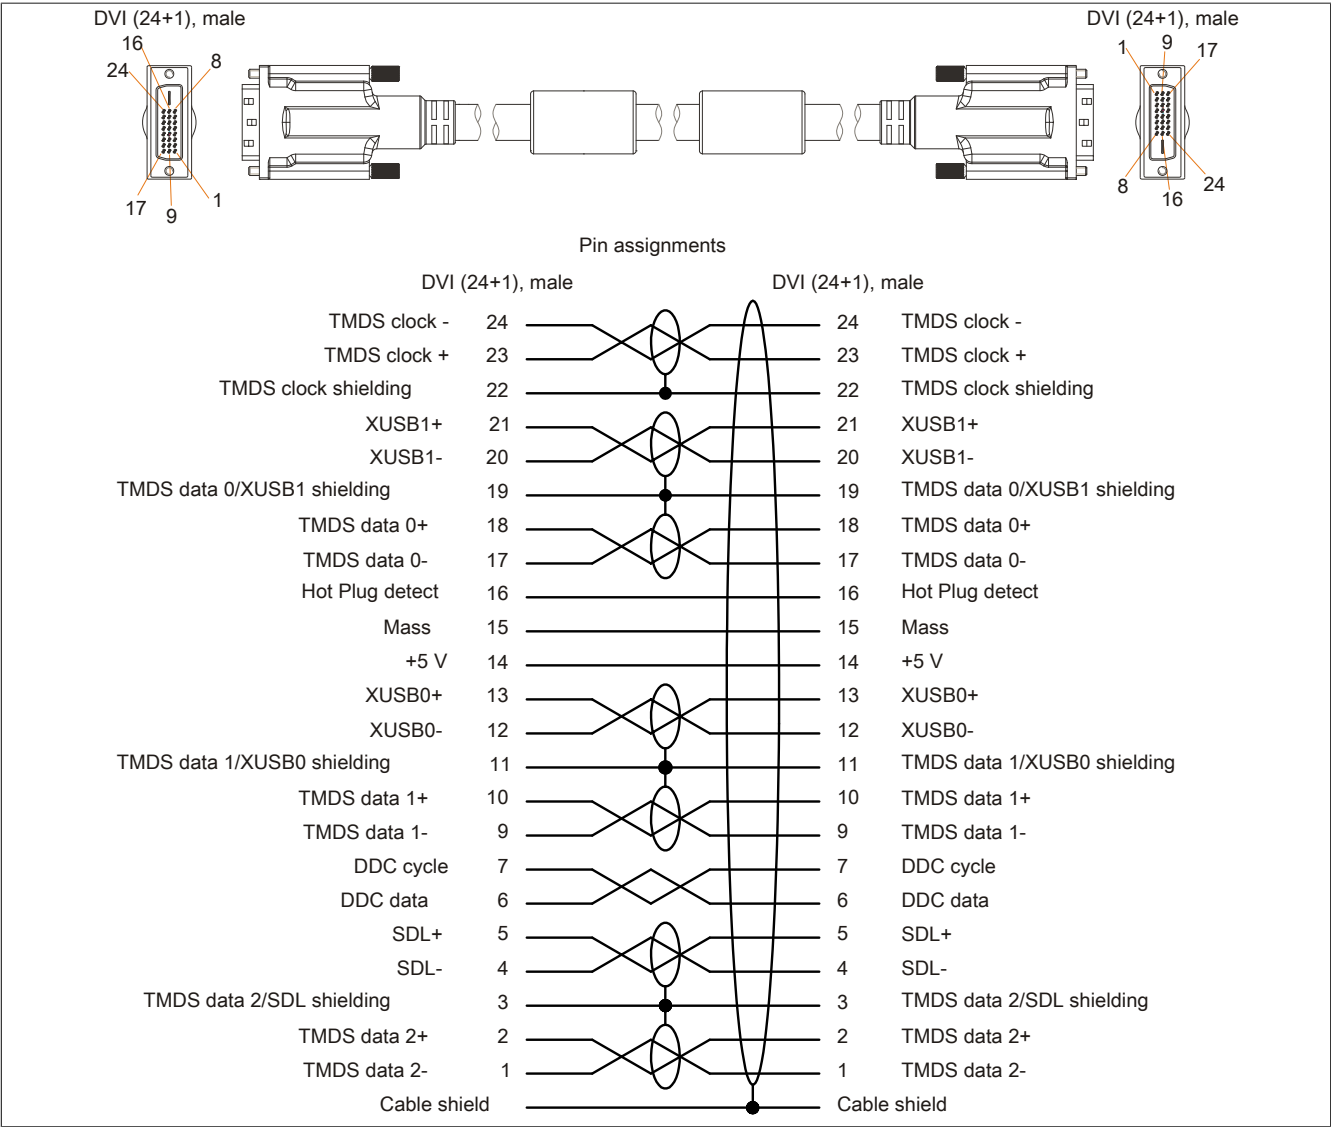


Image 98: 5CASDL.0xxx-03- Pin assignments

6.5 SDL flex cable with extender

6.5.1 5CASDL.0xx0-13

General information

The 5CASDL.xxxx-13 SDL flex cables with extender are designed for use in both fixed and flexible installations (e.g. in swing arm systems).

Caution!

Cable can only be plugged in and unplugged when the device is turned off.

Order data

Image not found for 5CASDL.0300-13-5CASDL.0300-13-5CASDL.0300-13!	
Model number	Short description
SDL flex cables	
5CASDL.0300-13	SDL cable with Extender, 30 m.
5CASDL.0400-13	SDL cable flex with Extender, 40 m.
5CASDL.0430-13	SDL Cable flex with Extender, 43 m.

Table 177: 5CASDL.0300-13, 5CASDL.0400-13, 5CASDL.0430-13 - Order data

Technical data

Product ID	5CASDL.0300-13	5CASDL.0400-13	5CASDL.0430-13
General information			
Certification types			
CE	Yes		
c-UL-us	Yes		
Cable structure			
Wire cross section	26 AWG (control wires) 26 AWG (DVI, USB, data)		
Characteristics	Free of halogen and silicon		
Shield	Individual cable pairs and entire cable		
Cable shielding	Aluminum foil clad + tinned copper mesh		
Outer sheathing			
Material	Special TMPU - semi gloss		
Color	Black		
Labeling	(B&R) SDL cable (UL) AWM 20236 80°C 30V E63216		
Connector			
Type	2x DVI-D (24+1), male		
Connection cycles	Min. 200		
Contacts	Gold plated		
Mechanical protection	Metal cover with crimped stress relief		
Electrical properties			
Operating voltage	≤30 V		
Test voltage			
Wire/wire	1 kV		
Wire/shield	0.5 kV		
Wave impedance	100 ±10 Ω		
Conductor resistance			
AWG 24	≤95 Ω/km		
AWG 26	≤145 Ω/km		
Insulation resistance	> 200 MΩ/km		
Operating conditions			
Approbation	UL AWM 20236 80°C 30V		
Flame resistant	In accordance with UL758 (cable vertical flame test)		
Oil and hydrolysis resistance	According to VDE 0282-10		
Environmental conditions			
Temperature			
Storage	-20 to 60°C		
Moving	-5 to 60°C		
Fixed installation	-20 to 60°C		
Mechanical characteristics			
Dimensions			
Length	30 m ± 280 mm	40 m ± 380 mm	43 m ± 410 mm
Diameter	Max. 12 mm		
Extender box			
Width	35 mm		

Table 178: 5CASDL.0300-13, 5CASDL.0400-13, 5CASDL.0430-13 - Technical data

Product ID	5CASDL.0300-13	5CASDL.0400-13	5CASDL.0430-13
Length	125 mm		
Height	18.5 mm		
Flex radius	$\geq 6 \times$ cable diameter (from plug - ferrite magnet) $\geq 10 \times$ cable diameter (from ferrite magnet - ferrite magnet) $\geq 15 \times$ cable diameter (from ferrite magnet - ferrite magnet)		
Fixed installation			
Flexible installation			
Flexibility	Flexible; valid for ferrite magnet - ferrite magnet (tested 300,000 cycles with 15x cable diameter, 4800 cycles / hour)		
Drag chain data	300.000 4800 cycles / hour 180 mm; 15x cable diameter 460 mm		
Flex cycles			
Speed			
Flex radius			
Hub			
Weight	Approx. 5430 g	Approx. 7200 g	Approx. 7790 g
Tension	≤ 50 N		
In operation			
During installation			

Table 178: 5CASDL.0300-13, 5CASDL.0400-13, 5CASDL.0430-13 - Technical data

Flex radius specification

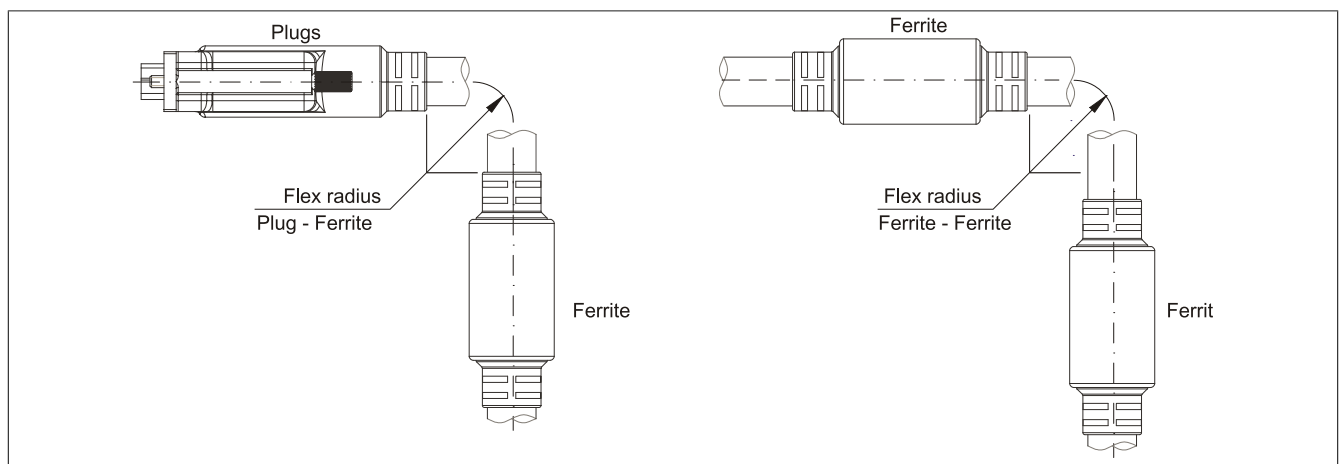


Image 99: Flex radius specification

Dimensions

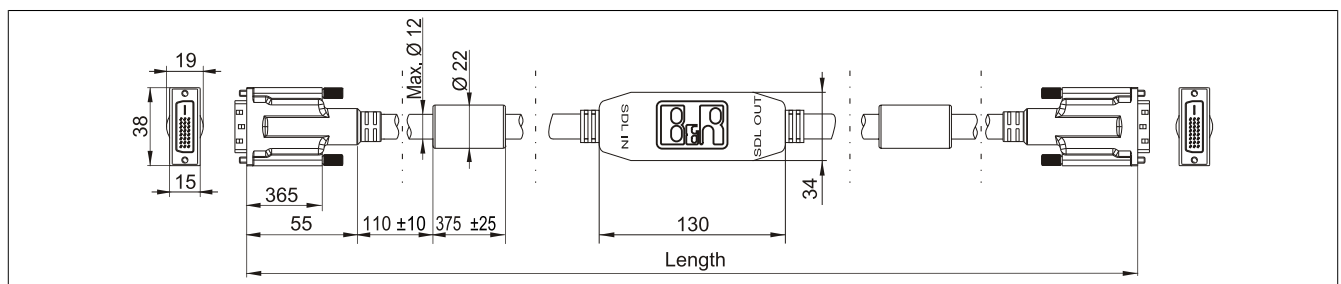


Image 100: 5CASDL.0xx0-13- Dimensions

Cable specifications

Warning!

If you want to build a suitable cable yourself, it should be wired according to these specifications.

If a self-built cable is used, B&R cannot guarantee that it will function properly. B&R guarantees the performance of all cables that they provide.

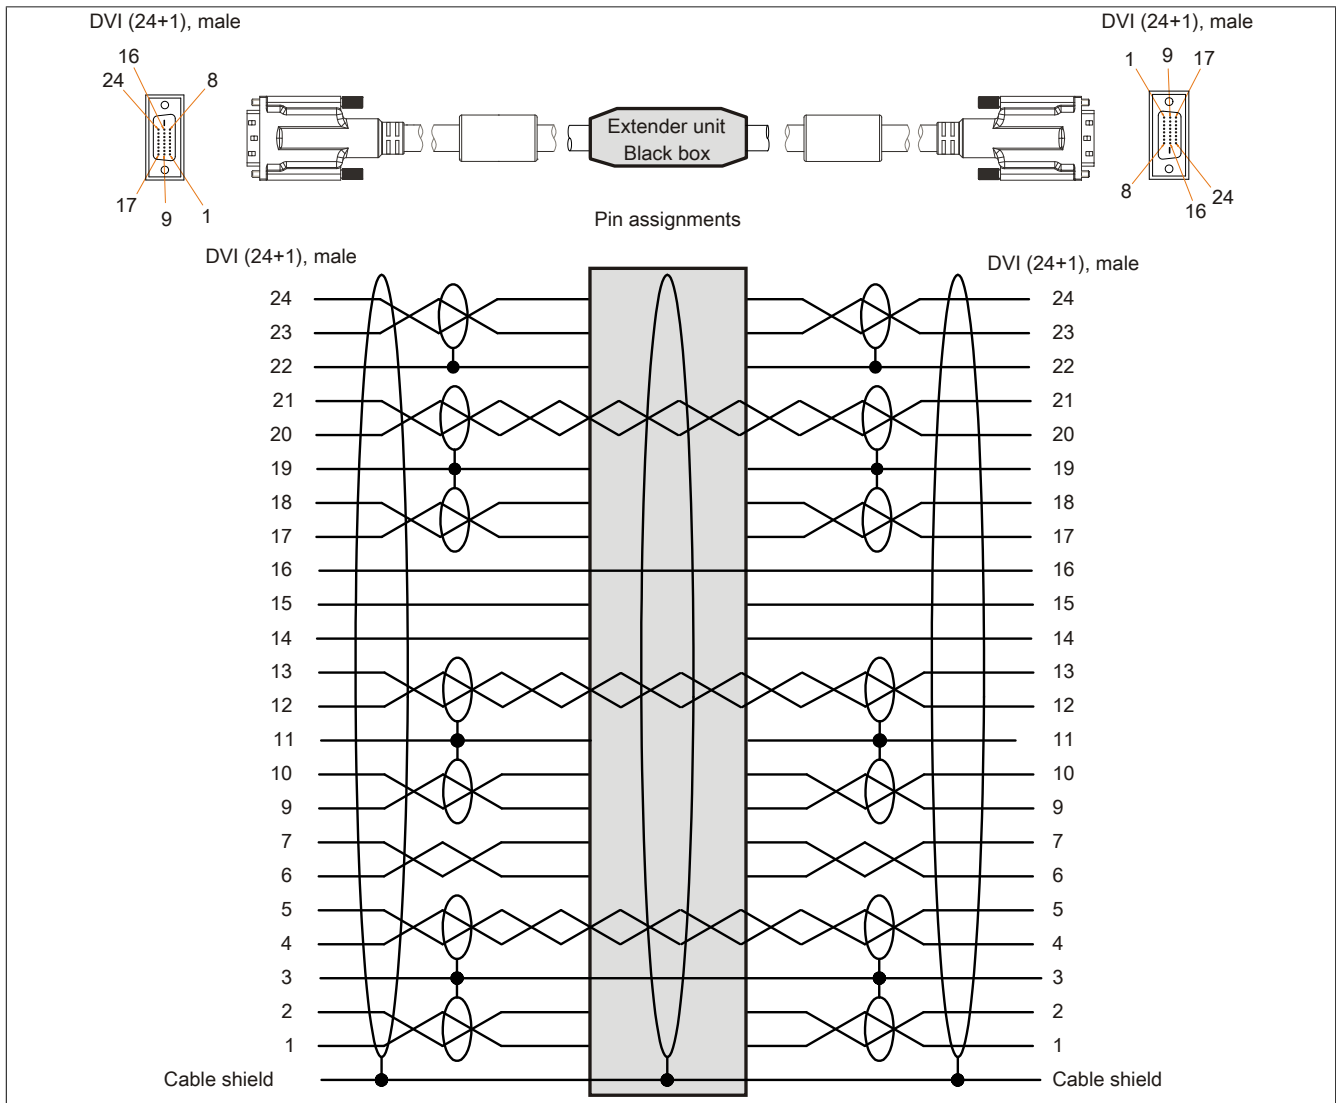


Image 101: 5CASDL.0xx0-13 - Pin assignments

Cable connection

The SDL flex cable with extender must be connected between the Industrial PC and Automation Panel 900 display unit in the correct direction. The signal direction is indicated on the extender unit for this purpose:

- Connect the end labeled "SDL IN" with the video output of e.g. the APC820 (monitor/panel output) or Panel OUT of an AP900 AP Link card.
- The "SDL OUT" end should be connected to the display unit (e.g. Automation Panel 900) via the Automation Panel Link insert card (Panel IN).

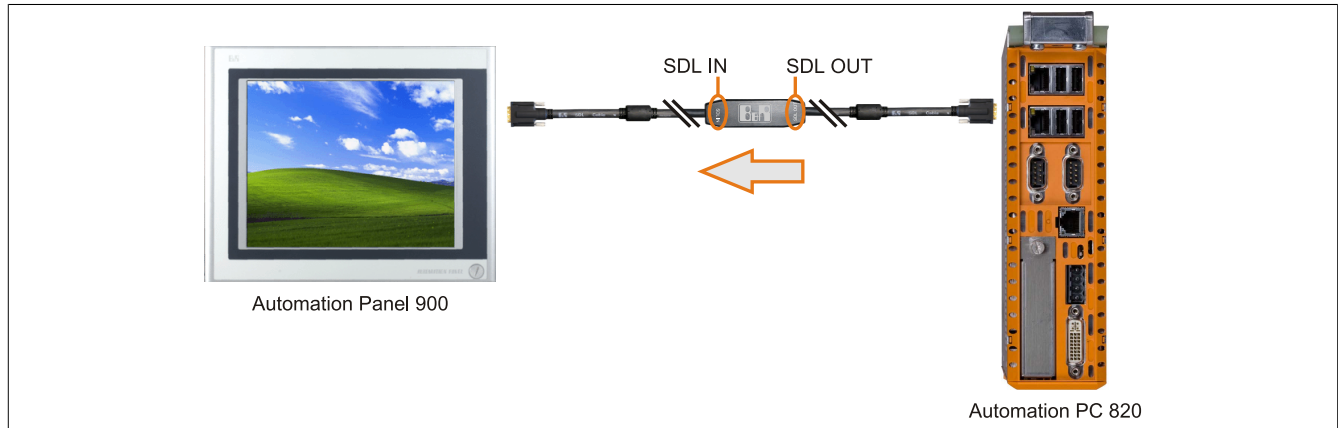


Image 102: Example of signal direction for the SDL flex cable with extender - APC820

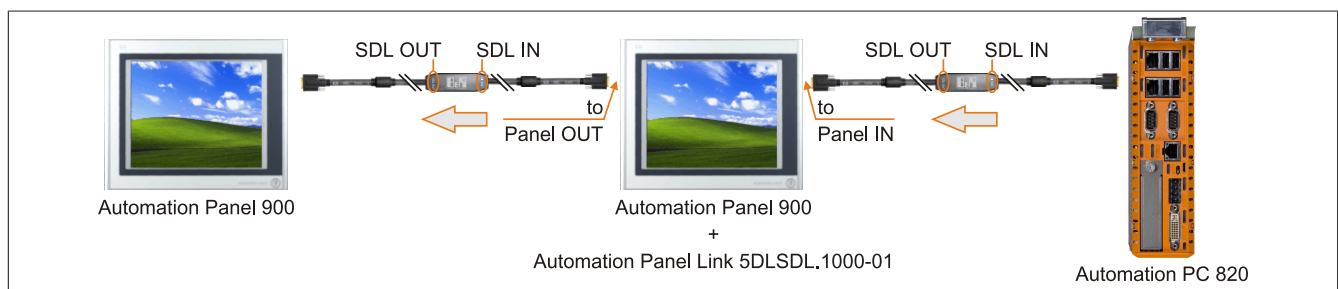


Image 103: Example of signal direction display - SDL flex cable with extender

6.6 USB cable

6.6.1 5CAUSB.00xx-00

General information

USB cables are designed for USB 2.0 transfer speed.

Order data

Image not found for 5CAUSB.0018-00-5CAUSB.0018-00!	
Model number	Short description
	USB cables
5CAUSB.0018-00	USB 2.0 connecting cable type A - type B, 1.8 m.
5CAUSB.0050-00	USB 2.0 connecting cable type A - type B, 5 m.

Table 179: 5CAUSB.0018-00, 5CAUSB.0050-00 - Order data

Technical data

Product ID	5CAUSB.0018-00	5CAUSB.0050-00
General information		
Certification types		
CE	Yes	
c-UL-us	Yes	
Cable structure		
Wire cross section	AWG 24, 28	
Shield	Entire cable	
Outer sheathing		
Color	Beige	
Connector		
Type	USB type A male and USB type B male	
Mechanical characteristics		
Dimensions		
Length	1.8 m ±30 mm	5 m ± 50 mm
Diameter	Max. 5 mm	
Flex radius	Min. 100 mm	

Table 180: 5CAUSB.0018-00, 5CAUSB.0050-00 - Technical data

Cable specifications

Warning!

If you want to build a suitable cable yourself, it should be wired according to these specifications.

If a self-built cable is used, B&R cannot guarantee that it will function properly. B&R guarantees the performance of all cables that they provide.

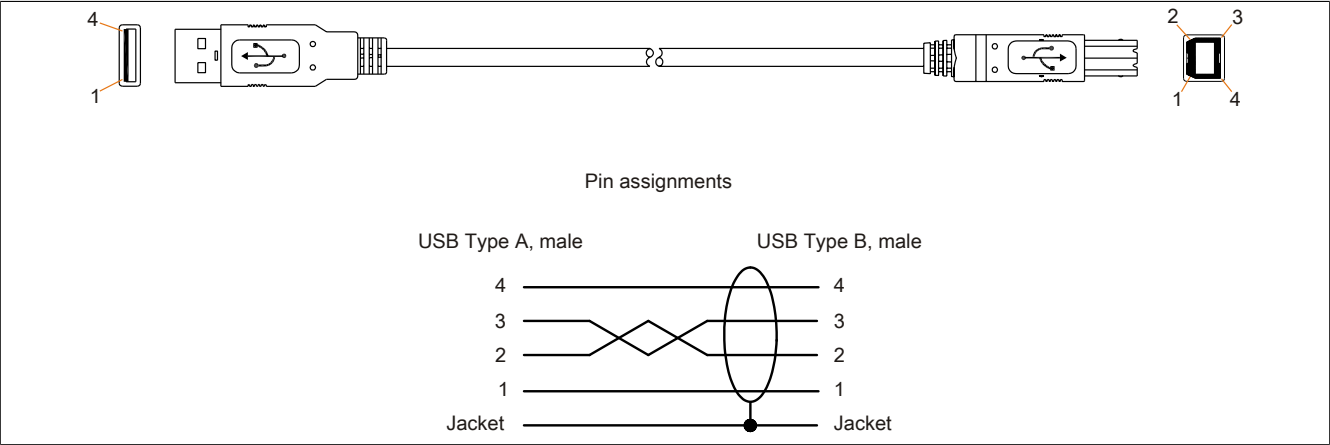


Image 104: 5CAUSB.00xx-00 - USB cable pin assignments

6.7 RS232 cable

6.7.1 9A0014.xx

Order data

Image not found for 9A0014.02-9A0014.02-9A0014.02!	
Model number	Short description
	RS232 cables
9A0014.02	RS232 extension cable for remote operating of a display unit with touch screen, 1.8 m.
9A0014.05	RS232 extension cable for remote operating of a display unit with touch screen, 5 m.
9A0014.10	RS232 extension cable for remote operating of a display unit with touch screen, 10 m.

Table 181: 9A0014.02, 9A0014.05, 9A0014.10 - Order data

Technical data

Product ID	9A0014.02	9A0014.05	9A0014.10
General information			
Certification types CE	Yes		
Cable structure			
Wire cross section	AWG 26		
Shield	Entire cable		
Outer sheathing Color	Beige		
Connector			
Type	9-pin DSUB socket, male / female		
Mechanical characteristics			
Dimensions Length Diameter	1.8 m ±50 mm	5 m ± 80 mm Max. 5 mm	10 m ±100 mm
Flex radius	Min. 70 mm		

Table 182: 9A0014.02, 9A0014.05, 9A0014.10 - Technical data

Cable specifications

Warning!

If you want to build a suitable cable yourself, it should be wired according to these specifications.
If a self-built cable is used, B&R cannot guarantee that it will function properly. B&R guarantees the performance of all cables that they provide.

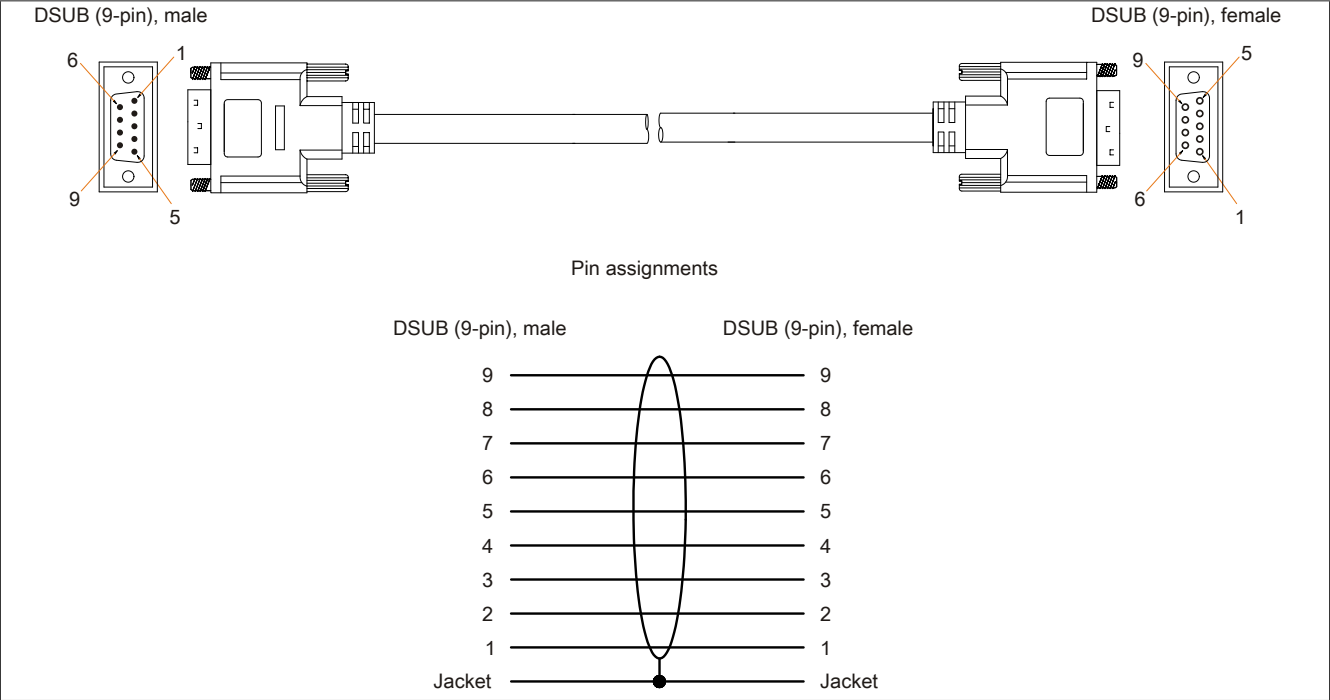


Image 105: 9A0014.xx - RS232 cable pin assignments

Chapter 6 • Maintenance / Servicing

The following chapter describes service/maintenance work which can be carried out by a trained, qualified user.

1 Changing the battery

The lithium battery buffers the internal real-time clock (RTC) and the CMOS data.

Information:

- The product design allows the battery to be changed with the B&R device switched either on or off. In some countries, safety regulations do not allow batteries to be changed while the module is switched on.
- Any BIOS settings that have been made will remain when the battery is changed with the power turned off (stored in non-volatile EEPROM). The date and time must be reset later because this data is lost when the battery is changed.
- The battery should only be changed by qualified personnel.

Warning!

Replace battery with Renata, type CR2477N only. Use of another battery may present a risk of fire or explosion.

Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.

The following replacement lithium batteries are available: 4A0006.00-000 (1 pc.) and 0AC201.91 (4 pcs.).

1.1 Battery status evaluation

The battery status is evaluated immediately following start-up of the device and is subsequently checked by the system every 24 hours. The battery is subjected to a brief load (1 second) during the measurement and then evaluated. The evaluated battery status is displayed in the BIOS Setup pages (under Advanced - Baseboard monitor) and in the B&R Control Center (ADI driver), but can also be read in a customer application via the ADI Library.

Battery status	Meaning
N/A	Hardware, i.e. firmware used is too old and does not support read.
GOOD	Data buffering is guaranteed.
BAD	Data buffering is guaranteed for approx. another 500 hours from the point in time that the battery capacity is determined to be BAD (insufficient).

Table 183: Meaning of battery status

From the point when battery capacity is recognized as insufficient, data buffering is guaranteed for approximately another 500 hours. When changing the battery, data is buffered for approximately another 10 minutes by a gold leaf capacitor.

1.2 Procedure

- Disconnect the B&R industrial PC.
- Touch the housing or ground connection (not the power supply!) in order to discharge any electrostatic charge from your body.
- Remove the cover from the battery compartment and carefully pull out the battery using the removal strips.

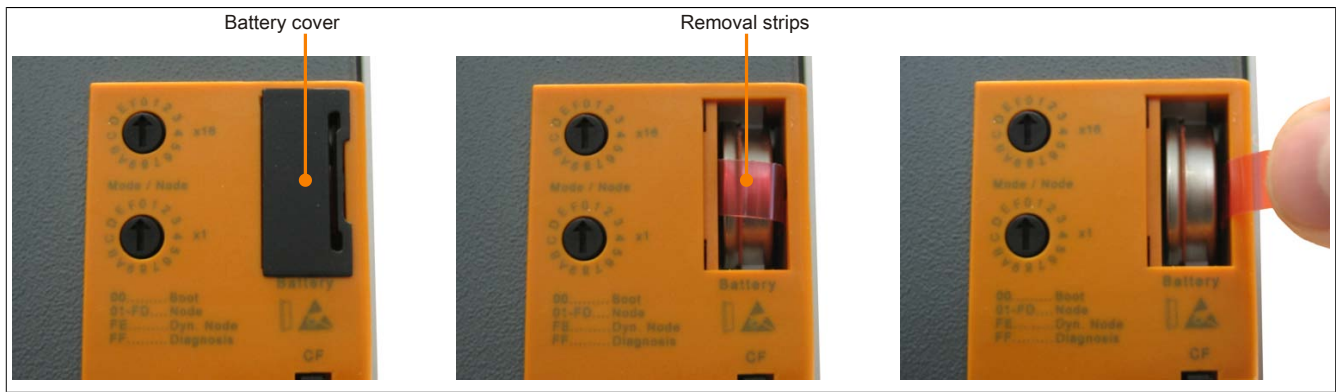


Image 106: Remove battery

- The battery should not be held by its edges. Insulated tweezers may also be used for inserting the battery.

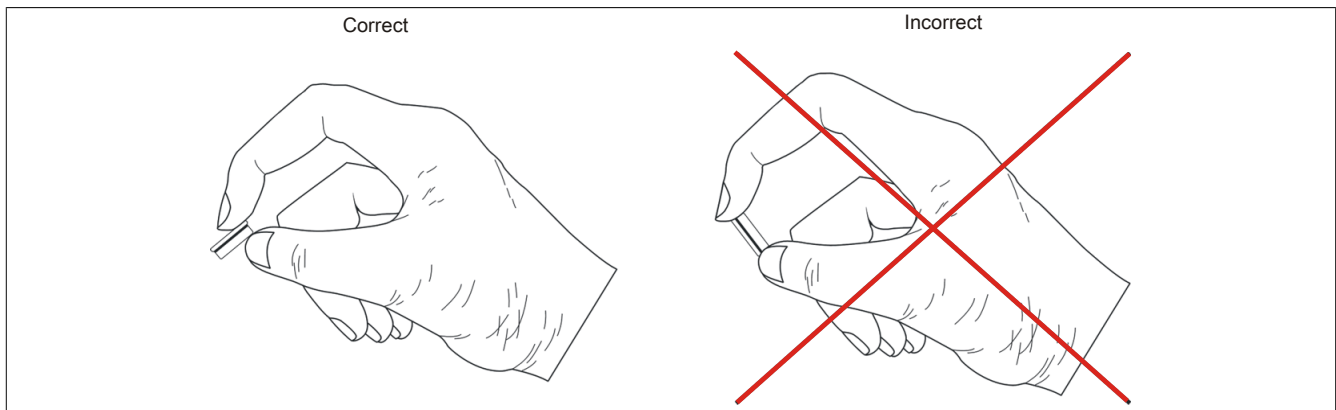


Image 107: Battery handling

- Insert the new battery with correct polarity.

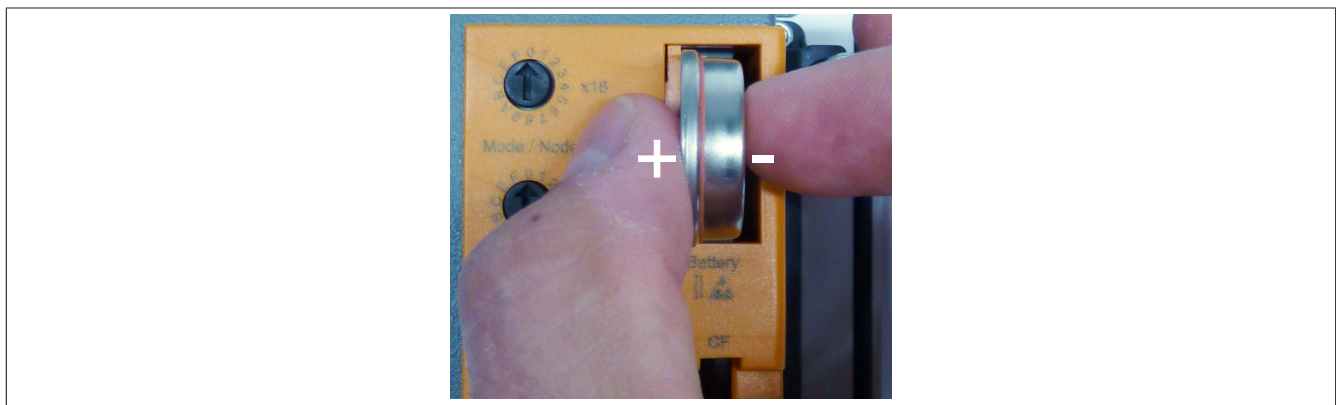


Image 108: Insert battery

- To make the next battery change easier, be sure the removal strip is in place when inserting battery.
- Reconnect power supply to the B&R industrial PC (plug in power cable and press power button).
- Date and time might need to be reset in BIOS.

Warning!

Lithium batteries are considered hazardous waste. Used batteries should be disposed of according to local requirements.

2 Exchanging the CompactFlash card

The CompactFlash card can be exchanged quickly and easily by sliding the ejector leftward (see image).

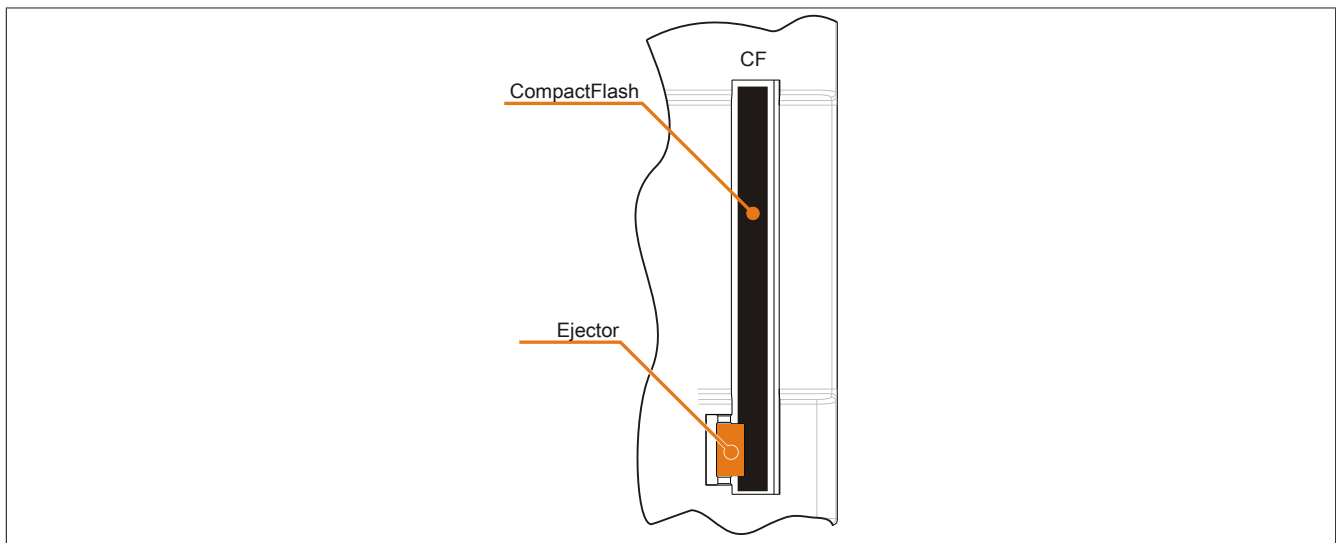


Image 109: CompactFlash + ejector (sample photo)

Caution!

Turn off the power before exchanging the CompactFlash card!

Appendix A

1 Maintenance Controller Extended (MTCX)

The MTCX controller (FPGA processor) is located on the CPU board in the PP500.

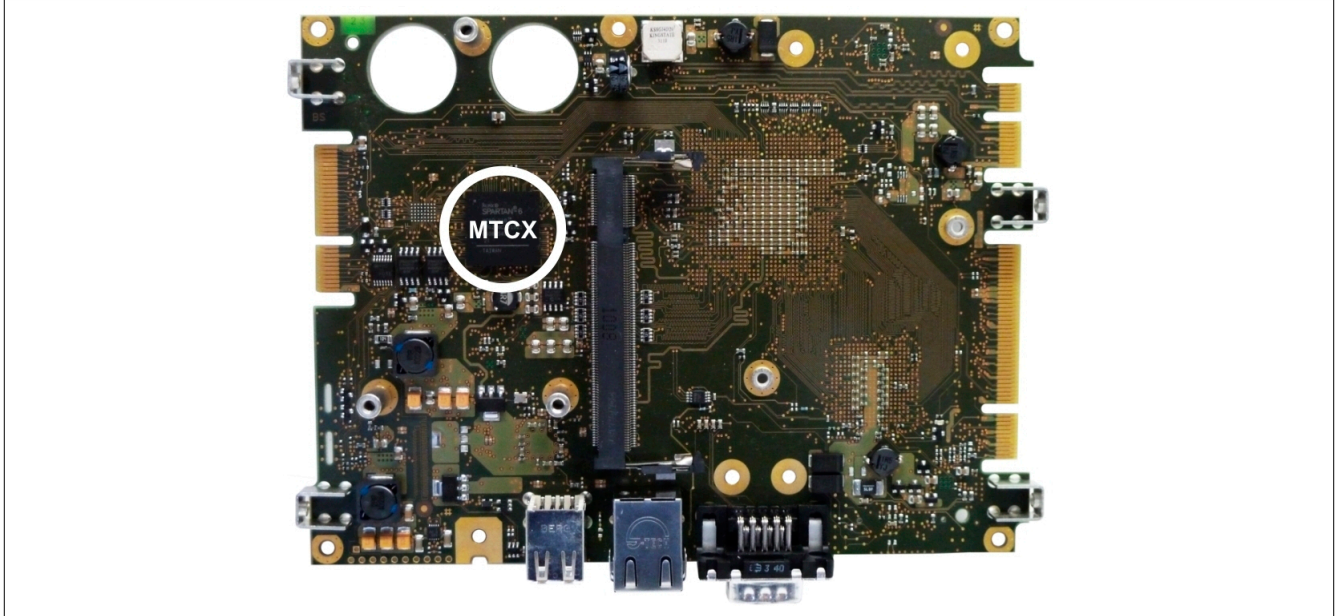


Image 110: MTCX controller location

The MTCX is responsible for the following monitoring and control functions:

- Power failure logic
- Watchdog handling (NMI and reset handling)
- Temperature monitoring (I/O area, power supply)
- Key and LED handling/coordination
- Advanced desktop operation (keys, USB forwarding)
- Backlight control for display
- Statistical data recording (power cycles - each power on, and power on are recorded - every full hour is counted e.g. 50 minutes no increase)
- Status LEDs (Power, CF, Link, Run)

The MTCX functions can be added with a firmware upgrade¹⁾⁾. The version can be read in BIOS (menu item "OEM Features" on page 70) or in an approved Microsoft Windows operating system, using B&R Control Center.

1)) Available for download from the B&R Website (www.br-automation.com).

2 Abbreviations

Abbreviation	Stands for	Description
NC	Normally closed	A normally closed (N.C.) relay contact.
	Not connected	Used in the description of pin assignments if a terminal or pin is not connected to a module.
ND	Not defined	In data tables, this stands for a value that has not been defined. Because a cable manufacturer does not provide certain technical data, for example.
NO	Normally open	A normally open (N.O.) relay contact.
TBD	To be defined	Used in technical data tables when certain information is not yet available. The value will be provided later.

Table 184: Abbreviations used in this User's Manual

Image 1:	Configuration - Basic system.....	16
Image 2:	Configuration - Software, accessories.....	17
Image 3:	Temperature sensor locations.....	18
Image 4:	Supply voltage for system units.....	20
Image 5:	Overview of interfaces with interface and I/O boards.....	21
Image 6:	Back cover.....	21
Image 7:	Ground connection.....	22
Image 8:	Status LEDs.....	29
Image 9:	5PC511.SX01-00 - Dimensions.....	34
Image 10:	5PC511.SX01-00 - Drilling template.....	35
Image 11:	CAN terminating switch.....	48
Image 12:	CAN terminating switch.....	52
Image 13:	RS232/422/485 interface - operated in RS485 mode.....	55
Image 14:	Serial interface (COM) terminating resistor.....	56
Image 15:	Mounting plates.....	58
Image 16:	Mounting orientation 0°.....	59
Image 17:	Mounting orientation -90° or +90°.....	59
Image 18:	Mounting orientation -90° or +90° vertical.....	60
Image 19:	Mounting orientation 180°.....	60
Image 20:	Air circulation spacing - Rear view.....	61
Image 21:	Air circulation spacing - Side view	61
Image 22:	Flex radius - Cable connection.....	62
Image 23:	Grounding concept.....	63
Image 24:	Boot screen.....	67
Image 25:	US15W Main - Menu.....	69
Image 26:	US15W OEM Features - Menu.....	70
Image 27:	US15W OEM Features - CPU Board Features.....	71
Image 28:	US15W OEM Features - CPU Board Features - LPC Devices.....	72
Image 29:	US15W OEM Features - CPU Board Features- Statistical Values.....	73
Image 30:	US15W OEM Features - CPU Board Features- Temperature Values.....	74
Image 31:	US15W OEM Features - CPU Board Features - CPU Board Monitor.....	75
Image 32:	US15W OEM Features - System Unit Features.....	76
Image 33:	US15W OEM Features - System Unit Features - LPC Devices.....	77
Image 34:	US15W OEM Features - System Unit Features- Statistical Values.....	78
Image 35:	US15W OEM Features - System Unit Features- Temperature Values.....	79
Image 36:	US15W OEM Features - I/O Board Features.....	80
Image 37:	US15W OEM Features - I/O Board Features - LPC Devices.....	81
Image 38:	US15W OEM Features - I/O Board Features - Statistical Values.....	82
Image 39:	US15W OEM Features - I/O Board Features - Temperature Values.....	83
Image 40:	US15W OEM Features - I/O Board Features - Panel Control.....	84
Image 41:	US15W OEM Features - IF Board Features.....	85
Image 42:	US15W OEM Features - IF Board Features - Statistical Values.....	86
Image 43:	US15W OEM Features - Memory Module Features.....	87
Image 44:	US15W Advanced - Menu.....	88
Image 45:	US15W Advanced - RAM Configuration.....	89
Image 46:	US15W Advanced - Boot Configuration.....	90
Image 47:	US15W Advanced - Peripheral Configuration.....	91
Image 48:	US15W Advanced - IDE Configuration.....	92
Image 49:	US15W Advanced - IDE Configuration - Channel 1 Master.....	93
Image 50:	US15W Advanced - IDE Configuration - Channel 1 Slave.....	94
Image 51:	US15W Advanced - Video Configuration.....	95
Image 52:	US15W Advanced - USB Configuration.....	96
Image 53:	US15W Advanced - SDIO Configuration.....	97
Image 54:	US15W Advanced - ACPI Table/Features Control.....	98
Image 55:	US15W Advanced - PCI Express Root Port 1.....	99
Image 56:	US15W Advanced - PCI Express Root Port 2.....	101
Image 57:	US15W Advanced - Console Redirection.....	103
Image 58:	US15W Security - Menu.....	105
Image 59:	US15W Security - Set Supervisor Password.....	106
Image 60:	US15W Security - Set User Password.....	107
Image 61:	US15W Power - Menu.....	108
Image 62:	US15W Power - Advanced - CPU Control.....	109

Image 63:	US15W Power - Advanced - CPU Control - Thermal Trip Points Settings.....	111
Image 64:	US15W Power - Platform Power Management.....	112
Image 65:	US15W Boot - Menu.....	113
Image 66:	US15W Boot - Legacy.....	114
Image 67:	US15W Boot - Legacy - Boot Type Order.....	115
Image 68:	US15W Boot - Legacy - Hard Disk Drive.....	116
Image 69:	US15W Boot - Legacy - USB.....	116
Image 70:	US15W Boot - Legacy - Others.....	117
Image 71:	US15W Exit - Menu.....	118
Image 72:	Interrupt routing with activated APIC -BIOS version N0.15 and higher.....	126
Image 73:	BIOS and MTCX software versions.....	127
Image 74:	BIOS and MTCX software versions - Control Center.....	128
Image 75:	ADI Control Center screenshots - Examples (symbol photo).....	139
Image 76:	5CFCRD.xxxx-06 - Temperature humidity diagram for CompactFlash cards.....	152
Image 77:	Dimensions - CompactFlash card Type I.....	152
Image 78:	ATTO Disk Benchmark v2.34 comparison when reading - 5CFCRD.xxxx-04 with 5CFCRD.xxxx-06.....	153
Image 79:	ATTO Disk Benchmark v2.34 comparison when writing - 5CFCRD.xxxx-04 with 5CFCRD.xxxx-06.....	153
Image 80:	5CFCRD.xxxx-04 - Temperature humidity diagram for CompactFlash cards.....	156
Image 81:	Dimensions - CompactFlash card Type I.....	156
Image 82:	ATTO disk benchmark v2.34 comparison (reading).....	157
Image 83:	ATTO disk benchmark v2.34 comparison (writing).....	157
Image 84:	5CFCRD.xxxx-03 - Temperature humidity diagram for CompactFlash cards.....	160
Image 85:	Dimensions - CompactFlash card Type I.....	160
Image 86:	5MMUSB.2048-01 - Temperature humidity diagram.....	163
Image 87:	Flex radius specification.....	165
Image 88:	5CADVI.0xxx-00 - Dimensions.....	165
Image 89:	5CADVI.0xxx-00 - Pin assignments.....	166
Image 90:	Flex radius specification.....	168
Image 91:	5CASDL.0xxx-00- Dimensions.....	168
Image 92:	5CASDL.0xxx-00- Pin assignments.....	169
Image 93:	Flex radius specification.....	171
Image 94:	5CASDL.0xxx-01 - Dimensions.....	171
Image 95:	5CASDL.0xxx-01 - Pin assignments.....	172
Image 96:	Flex radius specification.....	174
Image 97:	5CASDL.0xxx-03 - Dimensions.....	174
Image 98:	5CASDL.0xxx-03- Pin assignments.....	175
Image 99:	Flex radius specification.....	177
Image 100:	5CASDL.0xx0-13- Dimensions.....	177
Image 101:	5CASDL.0xx0-13 - Pin assignments.....	178
Image 102:	Example of signal direction for the SDL flex cable with extender - APC820.....	179
Image 103:	Example of signal direction display - SDL flex cable with extender.....	179
Image 104:	5CAUSB.00xx-00 - USB cable pin assignments.....	180
Image 105:	9A0014.xx - RS232 cable pin assignments	182
Image 106:	Remove battery.....	184
Image 107:	Battery handling.....	184
Image 108:	Insert battery.....	184
Image 109:	CompactFlash + ejector (sample photo).....	185
Image 110:	MTCX controller location.....	186

Table 1:	Manual history.....	8
Table 2:	Environmentally-friendly separation of materials.....	11
Table 3:	Organization of safety notices.....	12
Table 4:	Nominal measurement areas.....	12
Table 5:	Temperature sensor locations.....	18
Table 6:	Overview of humidity specifications for individual components.....	19
Table 7:	Supply voltage connection + 24VDC.....	22
Table 8:	Pin assignments - Serial interface (COM).....	23
Table 9:	Ethernet connection (ETH).....	24
Table 10:	USB1, USB2 port.....	25
Table 11:	Battery.....	26
Table 12:	Meaning of battery status.....	26
Table 13:	CompactFlash slot.....	27
Table 14:	SD Memory Card Slot.....	27
Table 15:	Power button.....	28
Table 16:	Reset button.....	28
Table 17:	Mode / Node switch.....	28
Table 18:	Data - status LEDs.....	29
Table 19:	Interface board insert.....	30
Table 20:	I/O board insert.....	30
Table 21:	5PC511.SX01-00 - Order data.....	31
Table 22:	5PC511.SX01-00 - Technical data.....	32
Table 23:	5PP5CP.US15-00, 5PP5CP.US15-01, 5PP5CP.US15-02 - Order data.....	36
Table 24:	5PP5CP.US15-00, 5PP5CP.US15-01, 5PP5CP.US15-02 - Technical data.....	36
Table 25:	5MMDDR.0512-01, 5MMDDR.1024-01, 5MMDDR.2048-01 - Order data.....	37
Table 26:	5MMDDR.0512-01, 5MMDDR.1024-01, 5MMDDR.2048-01 - Technical data.....	37
Table 27:	5PP5IF.CETH-00 - Order data.....	38
Table 28:	5PP5IF.CETH-00 - Technical data.....	38
Table 29:	5PP5IF.CETH-00 - Ethernet connection.....	39
Table 30:	5PP5IF.CHDA-00 - Order data.....	40
Table 31:	5PP5IF.CHDA-00 - Technical data.....	40
Table 32:	MIC, Line IN, Line OUT.....	40
Table 33:	5PP5IF.FETH-00 - Order data.....	42
Table 34:	5PP5IF.FETH-00 - Technical data.....	42
Table 35:	5PP5IF.FETH-00 - Ethernet connection.....	43
Table 36:	5PP5IF.FPLM-00 - Order data.....	44
Table 37:	5PP5IF.FPLM-00 - Technical data.....	44
Table 38:	POWERLINK Interface Board 2port connection.....	45
Table 39:	Status/Error LED - Ethernet TCP/IP operating mode.....	45
Table 40:	Status/error LED - POWERLINK V1 operating mode.....	45
Table 41:	Status / Error LED as error LED - POWERLINK operating mode.....	45
Table 42:	Status/Error LED as status LED - POWERLINK operating mode.....	46
Table 43:	Status/error LED as error LED - system failure error codes.....	46
Table 44:	5PP5IF.FCAN-00 - Order data.....	47
Table 45:	5PP5IF.FCAN-00 - Technical data.....	47
Table 46:	5PP5IF.FCAN-00 - CAN interface.....	47
Table 47:	5PP5IF.FCAN-00 - Status LEDs.....	48
Table 48:	5PP5IF.FX2X-00 - Order data.....	49
Table 49:	5PP5IF.FX2X-00 - Technical data.....	49
Table 50:	5PP5IF.FX2X-00 - X2X interface.....	50
Table 51:	5PP5IF.FX2X-00 - Status LEDs.....	50
Table 52:	5PP5IF.FXCM-00 - Order data.....	51
Table 53:	5PP5IF.FXCM-00 - Technical data.....	51
Table 54:	5PP5IF.FCAN-00 - CAN interface.....	52
Table 55:	5PP5IF.FX2X-00 - X2X interface.....	52
Table 56:	5PP5IF.FXCM-00 - Status LEDs.....	52
Table 57:	5PP5IO.GNAC-00 - Order data.....	53
Table 58:	5PP5IO.GNAC-00 - Technical data.....	53
Table 59:	Panel connection - DVI, SDL.....	54
Table 60:	Pin assignments - COM.....	54
Table 61:	RS232/422/485 - I/O address and IRQ.....	54
Table 62:	RS232 - Bus length and transfer rate.....	54

Table 63:	RS232 - Cable requirements.....	54
Table 64:	RS422 - Bus length and transfer rate.....	55
Table 65:	RS422 - Cable requirements.....	55
Table 66:	RS485 - Bus length and transfer rate.....	56
Table 67:	RS485 - Cable requirements.....	56
Table 68:	USB4 connection.....	57
Table 69:	MIC, Line IN, Line OUT.....	57
Table 70:	BIOS-relevant keys for POST.....	68
Table 71:	BIOS-relevant keys in the BIOS menu.....	68
Table 72:	US15W Main - Menu setting options.....	69
Table 73:	US15W OEM Features - Menu setting options.....	70
Table 74:	US15W OEM Features - Baseboard Features setting options.....	71
Table 75:	US15W OEM Features - Baseboard Features - LPC Devices setting options.....	72
Table 76:	US15W OEM Features - Baseboard Features - Statistical Values setting options.....	73
Table 77:	US15W OEM Features - Baseboard Features - Temperature Values setting options.....	74
Table 78:	US15W OEM Features - Baseboard Features - Baseboard Monitor setting options.....	75
Table 79:	US15W OEM Features - Display Features setting options.....	76
Table 80:	US15W OEM Features - Display Features - LPC Devices setting options.....	77
Table 81:	US15W OEM Features - Display Features - Statistical Values setting options.....	78
Table 82:	US15W OEM Features - Display Features - Temperature Values setting options.....	79
Table 83:	US15W OEM Features - IO Module Features setting options.....	80
Table 84:	US15W OEM Features - I/O Board Features - LPC Devices setting options.....	81
Table 85:	US15W OEM Features - IO Module Features - Statistical Values setting options.....	82
Table 86:	US15W OEM Features - I/O Board Features - Temperature Values setting options.....	83
Table 87:	US15W OEM Features - I/O Board Features - Panel Control setting options.....	84
Table 88:	US15W OEM Features - IF Module Features setting options.....	85
Table 89:	US15W OEM Features - IF Module Features - Statistical Values setting options.....	86
Table 90:	US15W OEM Features - RAM Features setting options.....	87
Table 91:	US15W Advanced - Menu setting options.....	88
Table 92:	US15W Advanced - RAM Configuration setting options.....	89
Table 93:	US15W Advanced - Boot Configuration setting options.....	90
Table 94:	US15W Advanced - Peripheral Configuration setting options.....	91
Table 95:	US15W Advanced - IDE Configuration setting options.....	92
Table 96:	US15W Advanced - IDE Configuration - Channel 1 Master setting options.....	93
Table 97:	US15W Advanced - IDE Configuration - Channel 1 Slave setting options.....	94
Table 98:	US15W Advanced - Video Configuration setting options.....	95
Table 99:	US15W Advanced - USB Configuration setting options.....	96
Table 100:	US15W Advanced - SDIO Configuration setting options.....	97
Table 101:	US15W Advanced - ACPI Table/Features Control setting options.....	98
Table 102:	US15W Advanced - PCI Express Root Port 1 setting options.....	99
Table 103:	US15W Advanced - PCI Express Root Port 2 setting options.....	101
Table 104:	US15W Advanced - Console Redirection setting options.....	103
Table 105:	US15W Security - Menu setting options.....	105
Table 106:	US15W Security - Set Supervisor Password setting options.....	106
Table 107:	US15W Security - Set User Password - Setting options.....	107
Table 108:	US15W Power - Menu setting options.....	108
Table 109:	US15W Power - Advanced CPU Control setting options.....	109
Table 110:	US15W Power - Advanced CPU Control - Thermal Trip Points Settings options.....	111
Table 111:	US15W Power - Platform Power Management setting options.....	112
Table 112:	US15W Boot - Menu setting options.....	113
Table 113:	US15W Boot - Legacy setting options.....	114
Table 114:	US15W Boot - Legacy - Boot Type Order setting options.....	115
Table 115:	US15W Boot - Legacy - Hard Disk Drive setting options.....	116
Table 116:	US15W Boot - Legacy - USB setting options.....	117
Table 117:	US15W Boot - Legacy - Others setting options.....	117
Table 118:	US15W Exit - Menu setting options.....	118
Table 119:	US15W - Main profile setting overview.....	119
Table 120:	US15W - OEM Features profile setting overview.....	119
Table 121:	US15W - CPU Board Features profile setting overview.....	119
Table 122:	US15W - System Unit Features profile setting overview.....	120
Table 123:	US15W - I/O Board Features profile setting overview.....	120
Table 124:	US15W - IF Board Features profile setting overview.....	120

Table 125:	US15W - Memory Module Features profile setting overview.....	121
Table 126:	US15W - RAM Configuration profile setting overview.....	121
Table 127:	US15W - Boot Configuration profile setting overview.....	121
Table 128:	US15W - Peripheral Configuration profile setting overview.....	121
Table 129:	US15W - IDE Configuration profile setting overview.....	121
Table 130:	US15W - Video Configuration profile setting overview.....	122
Table 131:	US15W - USB Configuration profile setting overview.....	122
Table 132:	US15W - SDIO Configuration profile setting overview.....	122
Table 133:	US15W - ACPI Table/Features Control profile setting overview.....	122
Table 134:	US15W - PCI Express Root Port 1 profile setting overview.....	122
Table 135:	US15W - PCI Express Root Port 2 profile setting overview.....	123
Table 136:	US15W - Console Redirection - profile setting overview.....	123
Table 137:	US15W - Power profile setting overview.....	123
Table 138:	US15W - Advanced CPU Control profile setting overview.....	123
Table 139:	US15W - Platform Power Management profile setting overview.....	124
Table 140:	US15W - Boot profile setting overview.....	124
Table 141:	RAM address assignment.....	125
Table 142:	I/O address assignment.....	125
Table 143:	IRQ interrupt assignments PIC Mode.....	125
Table 144:	IRQ interrupt assignments in APIC mode.....	126
Table 145:	5SWWXP.0600-ENG, 5SWWXP.0600-GER, 5SWWXP.0600-MUL - Order data.....	130
Table 146:	5SWWI7.0100-ENG, 5SWWI7.0100-GER, 5SWWI7.0300-MUL - Order data.....	131
Table 147:	5SWWXP.0738-ENG - Order data.....	132
Table 148:	Device functions in Windows Embedded Standard 2009.....	132
Table 149:	5SWWI7.0538-ENG, 5SWWI7.0738-MUL - Order data.....	134
Table 150:	Device functions in Windows Embedded Standard 7.....	134
Table 151:	5SWWCE.0838-ENG - Order data.....	136
Table 152:	Windows CE 6.0 features.....	136
Table 153:	1A4600.10-5, 1A4601.06-5, 1A4601.06-T - Order data.....	138
Table 154:	0AC201.91, 4A0006.00-000 - Order data.....	145
Table 155:	0AC201.91, 4A0006.00-000 - Technical data.....	145
Table 156:	0TB103.9, 0TB103.91 - Order data.....	146
Table 157:	0TB103.9, 0TB103.91 - Technical data.....	146
Table 158:	0TB1208.3100 - Order data.....	147
Table 159:	0TB1208.3100 - Technical data.....	147
Table 160:	5CFCRD.0512-06, 5CFCRD.1024-06, 5CFCRD.2048-06, 5CFCRD.4096-06, 5CFCRD.8192-06, 5CFCRD.016G-06 - Order data.....	150
Table 161:	5CFCRD.0512-06, 5CFCRD.1024-06, 5CFCRD.2048-06, 5CFCRD.4096-06, 5CFCRD.8192-06, 5CFCRD.016G-06 - Technical data.....	150
Table 162:	5CFCRD.0512-04, 5CFCRD.1024-04, 5CFCRD.2048-04, 5CFCRD.4096-04, 5CFCRD.8192-04, 5CFCRD.016G-04 - Order data.....	154
Table 163:	5CFCRD.0512-04, 5CFCRD.1024-04, 5CFCRD.2048-04, 5CFCRD.4096-04, 5CFCRD.8192-04, 5CFCRD.016G-04 - Technical data.....	154
Table 164:	5CFCRD.0064-03, 5CFCRD.0128-03, 5CFCRD.0256-03, 5CFCRD.0512-03, 5CFCRD.1024-03, 5CFCRD.2048-03, 5CFCRD.4096-03, 5CFCRD.8192-03 - Order data.....	158
Table 165:	5CFCRD.0064-03, 5CFCRD.0128-03, 5CFCRD.0256-03, 5CFCRD.0512-03, 5CFCRD.1024-03, 5CFCRD.2048-03, 5CFCRD.4096-03, 5CFCRD.8192-03 - Technical data.....	158
Table 166:	5MMUSB.2048-01 - Order data.....	162
Table 167:	5MMUSB.2048-01 - Technical data.....	162
Table 168:	5CADVI.0018-00, 5CADVI.0050-00, 5CADVI.0100-00 - Order data.....	164
Table 169:	5CADVI.0018-00, 5CADVI.0050-00, 5CADVI.0100-00 - Technical data.....	164
Table 170:	5CASDL.0018-00, 5CASDL.0050-00, 5CASDL.0100-00, 5CASDL.0150-00, 5CASDL.0200-00, 5CASDL.0250-00, 5CASDL.0300-00 - Order data.....	167
Table 171:	5CASDL.0018-00, 5CASDL.0050-00, 5CASDL.0100-00, 5CASDL.0300-00, 5CASDL.0250-00, 5CASDL.0200-00, 5CASDL.0150-00 - Technical data.....	167
Table 172:	5CASDL.0018-01, 5CASDL.0050-01, 5CASDL.0100-01, 5CASDL.0150-01 - Order data.....	170
Table 173:	5CASDL.0018-01, 5CASDL.0050-01, 5CASDL.0100-01, 5CASDL.0150-01 - Technical data...	170
Table 174:	5CASDL.0018-03, 5CASDL.0050-03, 5CASDL.0100-03, 5CASDL.0150-03, 5CASDL.0200-03, 5CASDL.0250-03, 5CASDL.0300-03 - Order data.....	173
Table 175:	5CASDL.0018-03, 5CASDL.0050-03, 5CASDL.0100-03, 5CASDL.0150-03, 5CASDL.0200-03, 5CASDL.0250-03, 5CASDL.0300-03 - Technical data.....	173
Table 176:	Structure - SDL flex cable 5CASDL.0xxx-03.....	175

Table 177:	5CASDL.0300-13, 5CASDL.0400-13, 5CASDL.0430-13 - Order data.....	176
Table 178:	5CASDL.0300-13, 5CASDL.0400-13, 5CASDL.0430-13 - Technical data.....	176
Table 179:	5CAUSB.0018-00, 5CAUSB.0050-00 - Order data.....	180
Table 180:	5CAUSB.0018-00, 5CAUSB.0050-00 - Technical data.....	180
Table 181:	9A0014.02, 9A0014.05, 9A0014.10 - Order data.....	181
Table 182:	9A0014.02, 9A0014.05, 9A0014.10 - Technical data.....	181
Table 183:	Meaning of battery status.....	183
Table 184:	Abbreviations used in this User's Manual.....	187

0AC201.91.....	145
0TB103.9.....	146
0TB103.91.....	146
0TB1208.3100.....	147
1A4600.10-5.....	138
1A4601.06-5.....	138
1A4601.06-T.....	138
4A0006.00-000.....	145
5CADVI.0018-00.....	164
5CADVI.0050-00.....	164
5CADVI.0100-00.....	164
5CASDL.0018-00.....	167
5CASDL.0018-01.....	170
5CASDL.0018-03.....	173
5CASDL.0050-00.....	167
5CASDL.0050-01.....	170
5CASDL.0050-03.....	173
5CASDL.0100-00.....	167
5CASDL.0100-01.....	170
5CASDL.0100-03.....	173
5CASDL.0150-00.....	167
5CASDL.0150-01.....	170
5CASDL.0150-03.....	173
5CASDL.0200-00.....	167
5CASDL.0200-03.....	173
5CASDL.0250-00.....	167
5CASDL.0250-03.....	173
5CASDL.0300-00.....	167
5CASDL.0300-03.....	173
5CASDL.0300-13.....	176
5CASDL.0400-13.....	176
5CASDL.0430-13.....	176
5CAUSB.0018-00.....	180
5CAUSB.0050-00.....	180
5CFCRD.0064-03.....	158
5CFCRD.0128-03.....	158
5CFCRD.016G-04.....	154
5CFCRD.016G-06.....	150
5CFCRD.0256-03.....	158
5CFCRD.0512-03.....	158
5CFCRD.0512-04.....	154
5CFCRD.0512-06.....	150
5CFCRD.1024-03.....	158
5CFCRD.1024-04.....	154
5CFCRD.1024-06.....	150
5CFCRD.2048-03.....	158
5CFCRD.2048-04.....	154
5CFCRD.2048-06.....	150
5CFCRD.4096-03.....	158
5CFCRD.4096-04.....	154
5CFCRD.4096-06.....	150
5CFCRD.8192-03.....	158
5CFCRD.8192-04.....	154
5CFCRD.8192-06.....	150
5MMDDR.0512-01.....	37
5MMDDR.1024-01.....	37
5MMDDR.2048-01.....	37
5MMUSB.2048-01.....	162
5PC511.SX01-00.....	31
5PP5CP.US15-00.....	36
5PP5CP.US15-01.....	36
5PP5CP.US15-02.....	36

5PP5IF.CETH-00.....	38
5PP5IF.CHDA-00.....	40
5PP5IF.FCAN-00.....	47
5PP5IF.FETH-00.....	42
5PP5IF.FPLM-00.....	44
5PP5IF.FX2X-00.....	49
5PP5IF.FXCM-00.....	51
5PP5IO.GNAC-00.....	53
5SWWCE.0838-ENG.....	136
5SWWI7.0100-ENG.....	131
5SWWI7.0100-GER.....	131
5SWWI7.0300-MUL.....	131
5SWWI7.0538-ENG.....	134
5SWWI7.0738-MUL.....	134
5SWWXP.0600-ENG.....	130
5SWWXP.0600-GER.....	130
5SWWXP.0600-MUL.....	130
5SWWXP.0738-ENG.....	132
9A0014.02.....	181
9A0014.05.....	181
9A0014.10.....	181

Accessories.....	145
ACPI.....	126
ACPI.....	125

A

ADI.....	139
Development Kit.....	141
air circulation.....	61
ambient temperature.....	59
ARemb.....	138
ARwin.....	138
ARwin.....	109
Automation Runtime.....	138
Automation Runtime Embedded.....	138
Automation Runtime Windows.....	138
B&R Automation Device Interface.....	139

B

B&R CompactFlash.....	154
B&R Control Center.....	139
B&R Embedded OS Installer.....	137
B&R Key Editor.....	143
Backup BIOS.....	70
Battery.....	26
Battery status evaluation.....	26
Battery status evaluation.....	183
BIOS	
ACPI Table/Features Control.....	98
Advanced.....	88
Advanced CPU Control.....	109
Boot.....	113
Boot Configuration.....	90
Boot Type Order.....	115
Channel 1 Master.....	93
Channel 1 slave.....	94
Console Redirection.....	102
CPU Board Features.....	71
CPU Board Monitor.....	75
Exit.....	118
Hard Disk Drive.....	116
I/O Board Features.....	80
IDE Configuration.....	92
IF Board Features.....	85
Legacy.....	114
LPC Devices.....	72, 77
LPC Devices.....	81
Main.....	69
Memory Module Features.....	87
OEM Features.....	70
Others.....	117
Panel control.....	84
PCI Express Root Port 1.....	98
PCI Express Root Port 2.....	101
Peripheral Configuration.....	91
Platform Power Management.....	112
Power.....	108
RAM configuration.....	89
SDIO Configuration.....	97
Security.....	105

Set Supervisor Password.....	106
Set User Password.....	107
Statistical Values.....	73, 78, 82, 86
System Unit Features.....	76
Temperature Values.....	74, 79
Temperature values.....	83
Thermal Trip Points Settings.....	111
USB.....	116
USB Configuration.....	96
Video Configuration.....	95
BIOS default settings.....	119
BIOS setup.....	66
BIOS setup keys.....	68
BIOS upgrade.....	127
Blank screen.....	65
Blink code.....	29
Boot sequence.....	113

C

Cable	
DVI cable.....	164
SDL cables.....	167
SDL cable with 45° plug.....	170
SDL flex cable.....	173
SDL flex cable with extender.....	176
USB cable.....	180
Cable.....	164
Cable connections.....	62
CAN interface.....	47, 52
CAN master interface.....	47, 51
CAN terminating switch.....	48, 52
Changing the battery.....	183
COM.....	23, 54
CompactFlash	
Benchmark.....	157
CompactFlash.....	27
CompactFlash cards.....	148
Control Center.....	139
Creating reports.....	139
Device interfaces.....	21
Dimensions.....	34
Dimension standards.....	12
Disposal.....	11
Disposal.....	11

D

Distribution of resources	
I/O address assignment.....	125
disturbance dissipation.....	63
Drilling template.....	35
DVI.....	54
DVI cable.....	164
Dynamic Wear Leveling.....	148
Entire device.....	18

E

ESD.....	9
Electrical components with housing.....	9
Electrical components without housing.....	9

Individual components.....	9
Packaging.....	9
Proper handling.....	9
ETH.....	24
Ethernet.....	24
Ethernet interface.....	39
Ethernet interface.....	43
Exchanging the CompactFlash card.....	185
Firmware upgrade.....	129

F

Flex radius.....	62
functional ground.....	63
General tolerance.....	12
Ground.....	22
Ground connection.....	63
Guidelines.....	12

H

HDA.....	40
HDA sound.....	53
hex selection switches.....	28
Humidity specifications.....	19
I/O address assignment.....	125
I/O board.....	30

I

immunity to disturbances.....	63
Installation	
Mounting orientation.....	59
Installation.....	58
Interface board	
CAN interface.....	47, 50, 52, 52
Ethernet interface.....	39, 43
Interface Board	
MIC, Line IN, Line OUT.....	40
POWERLINK interface.....	45
Interface board	
Status LEDs.....	48, 50, 52
Interface board.....	30
Interface Board.....	38
Interfaces.....	21
Interrupt assignments.....	125
Key Editor.....	143

L

LED.....	29
LED indicator.....	29
Main memory.....	37
MIC, Line IN, Line OUT.....	40, 57

M

Mode / Node switch.....	28
Mounting orientation	
0°.....	59
180°.....	60

90°.....	59
90° vertical.....	60
mounting plate.....	58

O

Operation with I/O board.....	64, 65
Panel connection.....	54
Power button.....	28
Power failure logic.....	186

P

Power LED.....	29
POWERLINK.....	44
LED STATUS.....	45
Link LED.....	45
Speed LED.....	45
System failure error codes.....	46
POWERLINK interface.....	45
RAM address assignment.....	125

R

Relative humidity.....	19
Reset button.....	28
RS232.....	
bus length.....	54
cable type.....	54
RS232 cable.....	181
RS422.....	
bus length.....	55
cable type.....	55
RS485.....	
- Bus length.....	56
- Cable type.....	56
RS485 Interface.....	55

S

Safety notices.....	
Environmental conditions.....	10
Environmentally-friendly disposal.....	11
Installation.....	10
Intended use.....	9
Operation.....	10
Organization.....	12
Policy and procedures.....	9
Protection against electrostatic discharge.....	9
Seperation of materials.....	11
Transport and storage.....	10
Safety notices.....	9
SDL.....	54
SDL cables.....	167
SDL cable with 45° plug.....	170
SDL flex cable.....	173
SDL flex cable with extender.....	176
SD Memory Card Slot.....	27
Serial interface.....	23, 54
Smart Display Link.....	54
Smart Display Link/DVI socket.....	53
Software versions.....	139

Static wear leveling.....	148
Status LEDs.....	29
Status LEDs.....	48, 50, 52
Supply voltage.....	22
Supply voltage.....	63
Supply voltage connectors.....	146
Temperature monitoring.....	18, 186
Temperature sensor locations.....	18
Temperature specifications.....	18

T

terminating resistor.....	48, 52
---------------------------	--------

U

Upgrade	
BIOS.....	127
Firmware.....	129
Upgrade information.....	127
Upgrade problems.....	129
USB.....	25
USB.....	56
USB cable.....	180
USB flash drive.....	162
User serial ID.....	139

W

WES2009.....	132
WES7.....	134
Windows 7.....	131
Windows CE.....	136
Windows CE 6.0 features.....	136
Windows Embedded Standard 2009.....	132
Windows Embedded Standard 7.....	134
Windows XP Professional.....	130
X2X interface.....	50, 52

X

X2X Link master interface.....	49, 51
--------------------------------	--------