

X20(c)DC1196

1 General information

The module is equipped with 1 input for an ABR incremental encoder with 5 V encoder signal.

- 1 ABR incremental encoder 5 V
- 2 additional inputs e.g. for home enable switch
- 5 VDC, 24 VDC and GND for encoder supply

2 Coated modules

Coated modules are X20 modules with a protective coating for the electronics component. This coating protects X20c modules from condensation and corrosive gases.

The modules' electronics are fully compatible with the corresponding X20 modules.

For simplification purposes, only images and module IDs of uncoated modules are used in this data sheet.

The coating has been certified according to the following standards:

- Condensation: BMW GS 95011-4, 2x 1 cycle
- Corrosive gas: EN 60068-2-60, method 4, exposure 21 days



2.1 Starting temperature

The starting temperature describes the minimum permissible ambient temperature when the power is switched off at the time the coated module is switched on. This is permitted to be as low as -40°C. During operation, the conditions as specified in the technical data continue to apply.

Information:

It is important to absolutely ensure that there is no forced cooling by air currents in a closed control cabinet, for example using a fan or ventilation slots.

3 Order data


Model number	Short description	Figure
	Counter functions	
X20DC1196	X20 digital counter module, 1 ABR incremental encoders, 5 V, 600 kHz input frequency, 4x resolution	
X20cDC1196	X20 digital counter module, coated, 1 ABR incremental encoder, 5 V, 600 kHz input frequency, 4x resolution	
	Required accessories	
	Bus modules	
X20BM11	X20 bus module, 24 VDC keyed, internal I/O supply continuous	
X20BM15	X20 bus module, with node number switch, 24 VDC keyed, internal I/O supply continuous	
X20cBM11	X20 bus module, coated, 24 VDC keyed, internal I/O supply continuous	
	Terminal blocks	
X20TB12	X20 terminal block, 12-pin, 24 VDC keyed	

Table 1: X20DC1196, X20cDC1196 - Order data

4 Technical data

Model number	X20DC1196	X20cDC1196
Short description		
I/O module	1 ABR incremental encoder 5 V	
General information		
B&R ID code	0x1BAF	0xEB54
Status indicators	I/O function per channel, operating state, module status	
Diagnostics		
Module run/error	Yes, using status LED and software	
Power consumption		
Bus	0.01 W	
Internal I/O	1.5 W	
Additional power dissipation caused by actuators (resistive) [W]	-	
Type of signal lines	Shielded cables must be used for all signal lines	
Certifications		
CE	Yes	
ATEX	Zone 2, II 3G Ex nA nC IIA T5 Gc IP20, Ta (see X20 user's manual) FTZÜ 09 ATEX 0083X	
UL	cULus E115267 Industrial control equipment	
HazLoc	cCSAus 244665 Process control equipment for hazardous locations Class I, Division 2, Groups ABCD, T5	-
DNV GL	Temperature: B (0 - 55°C) Humidity: B (up to 100%) Vibration: B (4 g) EMC: B (bridge and open deck)	
LR	ENV1	-
KR	Yes	
EAC	Yes	
KC	Yes	-
Digital inputs		
Quantity	2	
Nominal voltage	24 VDC	
Input characteristics per EN 61131-2	Type 1	
Input voltage	24 VDC -15% / +20%	
Input current at 24 VDC	Approx. 3.3 mA	
Input circuit	Sink	
Input filter		
Hardware	≤2 µs	
Software	-	
Connection type	3-wire connections	
Input resistance	7.19 kΩ	
Additional functions	Home enable switch	
Switching threshold		
Low	<5 VDC	
High	>15 VDC	
Isolation voltage between channel and bus	500 V _{Eff}	
ABR incremental encoder		
Encoder inputs	5 V, symmetrical	
Counter size	16/32-bit	
Input frequency	Max. 600 kHz	
Evaluation	4x	
Encoder power supply		
5 VDC	±5%, module-internal, max. 300 mA	
24 VDC	Module-internal, max. 300 mA	
Input filter		
Hardware	≤200 ns	
Software	-	
Common-mode range	-7 V ≤ V _{CM} ≤ +12 V	
Overload characteristics of encoder power supply	Short circuit protection, overload protection	
Isolation voltage between encoder and bus	500 V _{Eff}	
Electrical properties		
Electrical isolation	Bus isolated from encoder and channel Channel not isolated from channel and encoder	
Operating conditions		
Mounting orientation		
Horizontal	Yes	
Vertical	Yes	


Table 2: X20DC1196, X20cDC1196 - Technical data

Model number	X20DC1196	X20cDC1196
Installation elevation above sea level		
0 to 2000 m	No limitations	
>2000 m	Reduction of ambient temperature by 0.5°C per 100 m	
Degree of protection per EN 60529	IP20	
Ambient conditions		
Temperature		
Operation		
Horizontal mounting orientation	-25 to 60°C	
Vertical mounting orientation	-25 to 50°C	
Derating	-	
Starting temperature	-	Yes, -40°C
Storage	-40 to 85°C	
Transport	-40 to 85°C	
Relative humidity		
Operation	5 to 95%, non-condensing	Up to 100%, condensing
Storage	5 to 95%, non-condensing	
Transport	5 to 95%, non-condensing	
Mechanical properties		
Note	Order 1x X20TB12 terminal block separately Order 1x X20BM11 bus module separately	Order 1x X20TB12 terminal block separately Order 1x X20cBM11 bus module separately
Pitch	12.5 ^{+0.2} mm	

Table 2: X20DC1196, X20cDC1196 - Technical data

5 LED status indicators


For a description of the various operating modes, see section "Additional information - Diagnostic LEDs" of the X20 system user's manual.

Figure	LED	Color	Status	Description
	r	Green	Off	No power to module
			Single flash	RESET mode
			Double flash	BOOT mode (during firmware update) ¹⁾
			Blinking	PREOPERATIONAL mode
			On	RUN mode
	e	Red	Off	No power to module or everything OK
			On	Error or reset status
	A1	Green		Input state of counter input A
	B1	Green		Input state of counter input B
	R1	Green		Input state of reference pulse R
	1 - 2	Green		Input state of the corresponding digital input

1) Depending on the configuration, a firmware update can take up to several minutes.

6 Pinout

Shielded cables must be used for all signal lines.

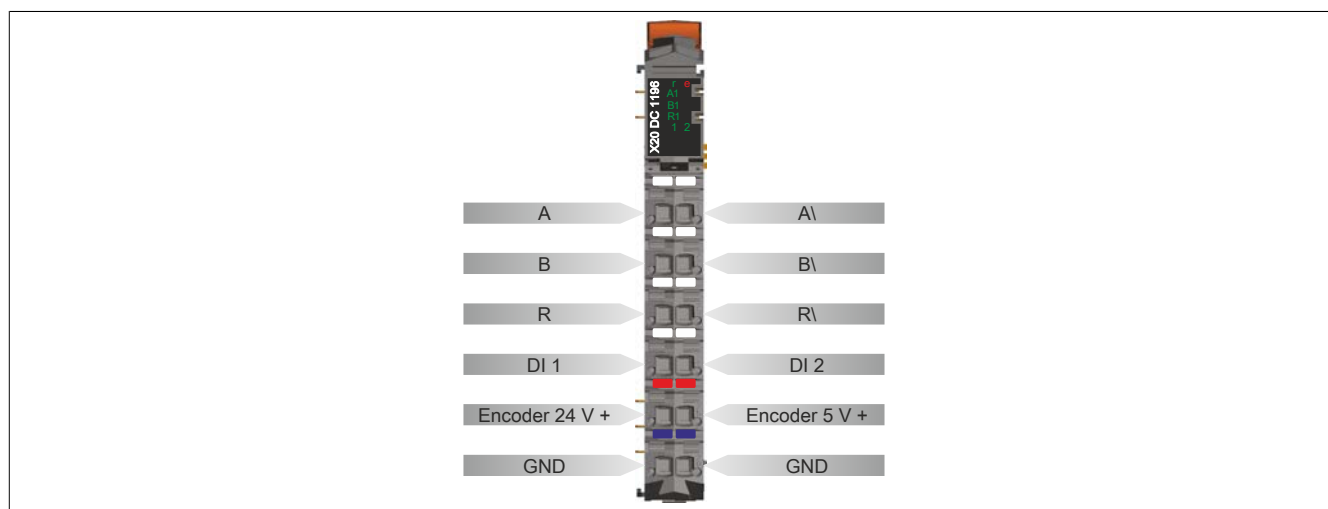

9 Register description

9.1 General data points

In addition to the registers described in the register description, the module has additional general data points. These are not module-specific but contain general information such as serial number and hardware variant.

General data points are described in section "Additional information - General data points" of the X20 system user's manual.

9.2 Function model 0 - Standard and Function model 1 - Standard with 32-bit encoder counter value

The difference between function model 0 and function model 1 is the size of the data type for some registers.

- Function model 0 uses data type INT
- Function model 1 uses data type DINT (specified in parentheses)

Register	Name	Data type	Read		Write	
			Cyclic	Acyclic	Cyclic	Acyclic
Configuration						
4104	CfO_EdgeDetectFalling	USINT				•
4106	CfO_EdgeDetectRising	USINT				•
2064	CfO_PresetABR01_1(32Bit)	(D)INT				•
2068	CfO_PresetABR01_2(32Bit)	(D)INT				•
512	ConfigOutput24	UINT				•
522	ConfigOutput26	USINT				•
520	ConfigOutput27	USINT				•
Communication						
2116	ReferenceModeEncoder01	USINT			•	
2080	Encoder01	(D)INT	•			
264	Input state of digital inputs 1 to 2	USINT	•			
	DigitalInput01	Bit 4				
	DigitalInput02	Bit 5				
2118	StatusInput01	USINT	•			
40	Status of encoder supplies	USINT	•			
	PowerSupply01	Bit 0				
	PowerSupply02	Bit 1				

9.3 Function model 254 - Bus controller

Register	Offset ¹⁾	Name	Data type	Read		Write	
				Cyclic	Acyclic	Cyclic	Acyclic
Configuration							
4104	-	CfO_EdgeDetectFalling	USINT				•
4106	-	CfO_EdgeDetectRising	USINT				•
2064	-	CfO_PresetABR01_1	INT				•
2068	-	CfO_PresetABR01_2	INT				•
512	-	ConfigOutput24	UINT				•
522	-	ConfigOutput26	USINT				•
520	-	ConfigOutput27	USINT				•
Communication							
2116	0	ReferenceModeEncoder01	USINT			•	
2080	0	Encoder01	INT	•			
264	2	Input state of digital inputs 1 to 2	USINT	•			
		DigitalInput01	Bit 4				
		DigitalInput02	Bit 5				
2118	4	StatusInput01	USINT	•			
40	3	Status of encoder supplies	USINT	•			
		PowerSupply01	Bit 0				
		PowerSupply02	Bit 1				

1) The offset specifies the position of the register within the CAN object.

9.3.1 Using the module on the bus controller

Function model 254 "Bus controller" is used by default only by non-configurable bus controllers. All other bus controllers can use other registers and functions depending on the fieldbus used.

For detailed information, see section "Additional information - Using I/O modules on the bus controller" of the X20 user's manual (version 3.50 or later).

9.3.2 CAN I/O bus controller

The module occupies 1 analog logical slot on CAN I/O.

9.4 ABR encoder - Configuration registers

9.4.1 Reference pulse

The following registers must be configured by a single acyclic write with the listed values so that the homing procedure is completed on the edge of the reference pulse.

The homing procedure can take place on:

- Rising edge
- Falling edge (default configuration)

9.4.1.1 Constant register "CfO_EdgeDetectFalling"

Name:

CfO_EdgeDetectFalling

Data type	Value	Information
USINT	0x00	Configuration value for rising edge
	0x04	Configuration value for falling edge (bus controller default setting)

9.4.1.2 Constant register "CfO_EdgeDetectRising"

Name:

CfO_EdgeDetectRising

Data type	Value	Information
USINT	0x04	Configuration value for rising edge
	0x00	Configuration value for falling edge (bus controller default setting)

9.4.1.3 Constant register "ConfigOutput24"

Name:

ConfigOutput24

This register contains the value for ABR encoder 1.

Data type	Value	Information
UINT	0x1012	Configuration value for rising edge
	0x1002	Configuration value for falling edge (bus controller default setting)

9.4.2 Setting the home position

Name:

Cfo_PresetABR01_1 to Cfo_PresetABR01_2

CfO_PresetABR01_1_32Bit to CfO_PresetABR01_2_32Bit (only in function model 1)

It is possible to specify 2 home positions with these registers through a one-off acyclic write, for example. The configured values are applied to the counter values after a completed homing procedure.

Data type	Value	Information
INT	-32,768 to 32,767	Bus controller default setting: 0
DINT ¹⁾	-2,147,483,648 to 2,147,483,647	

1) Only in function model 1

9.4.3 Homing with reference enable input

Regardless of the referencing mode, it is possible using this register to prevent the home position from being applied when the corresponding reference input voltage level occurs (see ["Input state of digital inputs 1 to 2" on page 8](#): bit 4). The desired setting can be configured by a one-off acyclic write.

9.4.3.1 Voltage level for reference enable activation

Name:

ConfigOutput26

The voltage level of the digital inputs to activate reference enable is configured with this register.

Data type	Value	Information
USINT	0x00	Reference enable is active at 0 VDC (bus controller default setting).
	0x10	Reference enable for digital input 1 is active at 24 VDC
	0x20	Reference enable for digital input 2 is active at 24 VDC
	0x30	Reference enable for both digital inputs is active at 24 VDC

9.4.3.2 Reference enable of the input

Name:

ConfigOutput27

This register can be used to define whether the reference enable is activated.

Data type	Value	Information
USINT	0x00	Reference enable input disabled (bus controller default setting)
	0x10	Reference enable input 1 enabled
	0x20	Reference enable input 2 enabled
	0x30	Reference enable input 1 and 2 enabled

9.5 ABR encoder - Configuration registers

9.5.1 Counter state of the encoder

Name:

Encoder01

The encoder values are represented as 16-bit or 32-bit counter values in this register.

Data type	Value
INT	-32,768 to 32,767
DINT ¹⁾	-2,147,483,648 to 2,147,483,647

1) Only in function model 1

9.5.2 Input state of digital inputs 1 to 2

Name:

DigitalInput01 to DigitalInput02.

This register displays the input status of the encoders and the digital inputs.

Data type	Value
USINT	See bit structure.

Bit	Name	Value	Information
0	Encoder A	0 or 1	Input state
1	Encoder B	0 or 1	Input state
2	Encoder A + B	0 or 1	Input state of reference pulse
4	DigitalInput01	0 or 1	Input state - Digital input 1
5	DigitalInput02	0 or 1	Input state - Digital input 2

9.5.3 Reading the referencing mode

Name:

ReferenceModeEncoder01

This register determines the referencing mode.

Data type	Value
USINT	See bit structure.

Bit structure:

Bit	Name	Value	Information
0 - 1		00	Referencing OFF
		01	Single shot referencing
		11	Continuous referencing
2 - 5		0	Bits permanently set = 0
6 - 7		00	Referencing OFF
		11	Bits permanently set = 1

This results in the following values:

Binary	Hex	Function
00000000	0x00	Referencing OFF
11000001	0xC1	Single shot referencing
		For a new start after the completed homing procedure:
		<ul style="list-style-type: none"> Write value 0x00 Wait until bit 0 to bit 3 of the StatusInput01 register takes on the value 0. Counter bits 4 to 7 are not erased Switch homing procedure on again
11000011	0xC3	Continuous referencing
		Referencing occurs at every reference pulse.

It is important to know how the optional reference enable is configured. See ["Homing with reference enable input" on page 7](#)

9.5.4 Status of the homing procedure

Name:
StatusInput01

This register contains information regarding whether the referencing process is off, active or complete.

Data type	Value
USINT	See bit structure.

Bit structure:

Bit	Name	Value	Information
0	Reference pulse without homing ¹⁾	0	No reference impulse without homing has occurred yet
		1	At least a reference impulse without homing has occurred
1	State change	0 or 1	Changes with each reference pulse without homing
2	Reference pulse with homing ¹⁾	0	No homing has occurred yet
		1	At least one homing procedure has occurred
3	State change	0 or 1	Changes with each homing procedure that has taken place
4	Reference pulse	0	The last reference pulse didn't bring about a homing procedure
		1	The last reference pulse brought about a homing procedure
5 - 7	Counter	x	Free-running counter, increased with each reference pulse

1) Always 1 after the first reference pulse that has occurred

Examples of possible values:

Binary	Hex	Function
0x00000000	0x00	Referencing OFF or homing procedure already active
0x00111100	0x3CE	First homing procedure complete Reference value applied in the Encoder01 register
0xxxx11100	0xxB	Bits 5 to 7 are changed with each reference pulse
0xxxx1x100	0xxx	Continuously changing the bits with the "Continuous referencing" setting. The reference value is applied to the Encoder01 register on each reference pulse.

It is important to know how the optional reference enable (see ["Homing with reference enable input" on page 7](#)) is configured.

9.5.5 Status of encoder supplies

Name:
PowerSupply01 to PowerSupply02

This register shows the status of the integrated encoder supplies. A faulty encoder power supply is displayed as a warning.

Data type	Value
USINT	See bit structure.

Bit structure:

Bit	Name	Value	Information
0	PowerSupply01	0	24 VDC encoder power supply OK
		1	24 VDC encoder power supply faulty
1	PowerSupply02	0	5 VDC encoder power supply OK
		1	5 VDC encoder power supply faulty
2 - 7	Reserved	-	

9.6 Minimum cycle time

The minimum cycle time specifies the time up to which the bus cycle can be reduced without communication errors occurring. It is important to note that very fast cycles reduce the idle time available for handling monitoring, diagnostics and acyclic commands.

Minimum cycle time
128 μ s

9.7 Maximum cycle time

The maximum cycle time specifies the time up to which the bus cycle can be increased without internal counter overflows causing module malfunctions.

Minimum cycle time
16 ms

9.8 Minimum I/O update time

The minimum I/O update time specifies how far the bus cycle can be reduced so that an I/O update is performed in each cycle.

Minimum I/O update time
128 μ s